Form No. 3323–425

Z–Master 250 Series

Z255 with 62” Side Discharge Mower

Model No. 74203—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 1999
All Rights Reserved

Contents

Description	Page
Front Frame Assembly	3
Caster and Wheel Assembly	4
Rear Frame and Wheel Assembly	5
Brake and Wheel Hub Assembly	6
Control Panel Assembly	7
Hydraulic System Assembly	8
Hydraulic System Assembly (Continued)	9
Tank and Fuel Lines Assembly	10
Shields and Clutch Assembly	11
Idler Assembly	12
Electrical System Assembly	13
Frame and Deck Assembly	14
Deck, Deflector and Roller Assembly	15
Spindle and Pulley Assembly	16
Belts and Idler Arm Assembly	17
Group 1 – Crankshaft	18
Group 2 – Crankcase	19
Group 3 – Oil Pan/Lubrication	20
Group 4 – Head/Valve/Breather	21
Group 5 – Ignition/Electrical	22
Group 6 – Blower Housing & Baffles	23
Group 7 – Starting System	24
Group 8 – Fuel System	25
Group 9 – Engine Controls	26
Group 10 – Air Intake/Filtration	27
Group 11 – Exhaust	28

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

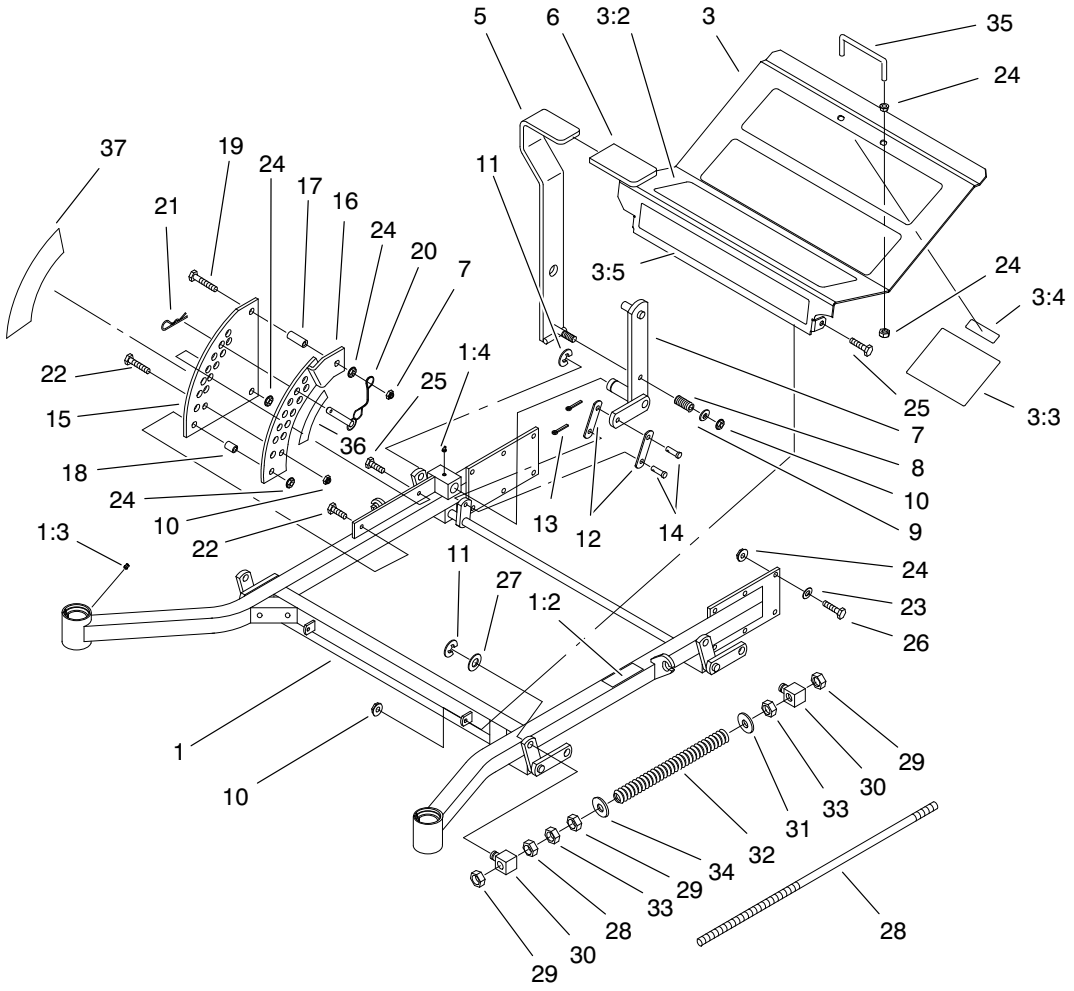

Sheet No.: 2

Front Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	100–4260	1	Frame ASM 62”
1:2	E633818	1	Decal
1:3	E811010	2	Plug–Caster Swivel
1:4	320–19	5	Fitting – Grease
3	99–4622	1	Floorpan ASM
3:2	E633553	3	Pad – Antiskid
3:3	E633766	1	Decal–Check
3:4	98–5954	1	Decal–Cover Missing
3:5	E633737	1	Decal– Z–Master
5	E632324	1	Lift Lever ASM
6	E633295	1	Grip–Lift Lever
7	E632219	1	Arm–Deck Lift
8	E633325	1	Spring–Compression
9	3256–24	1	Washer–Flat
10	3296–39	5	Nut–Lock, Ni
11	E808505	5	Ring–Snap
12	E633068	2	Arm–Deck Lift
13	3272–10	2	Pin–Cotter
14	E808284	2	Pin–Clevis
15	E633889	1	Plate – Deck Lift
16	E632899	1	Plate–Deck Lift
17	E633082	1	Bushing–Lift Lever
18	E633080	1	Bushing–Lift Lever
19	323–13	1	Screw–HH
20	E633097	1	Pin–Hitch w/Lanyard
21	E806005	1	Hairpin

Ref. No.	Part No.	Qty.	Description
22	323–9	2	Screw–HH
23	98–5975	12	Washer
24	3290–357	19	Nut–Lock Flange
25	323–6	3	Screw–HH
26	323–7	12	Screw–HH
27	3256–29	4	Washer–Flat
28	E633096	2	Rod–Deck Lift
29	3217–11	8	Nut–Hex
30	E633441	4	Swivel–Deck Mount
31	3256–7	2	Washer–Flat
32	E633064	2	Spring–Deck Support
33	3218–6	4	Nut–Jam
34	3256–7	2	Washer–Flat
35	E633587	1	Handle
36	E633706	1	Decal–Deck Height
37	E633345	1	Decal–Deck Height

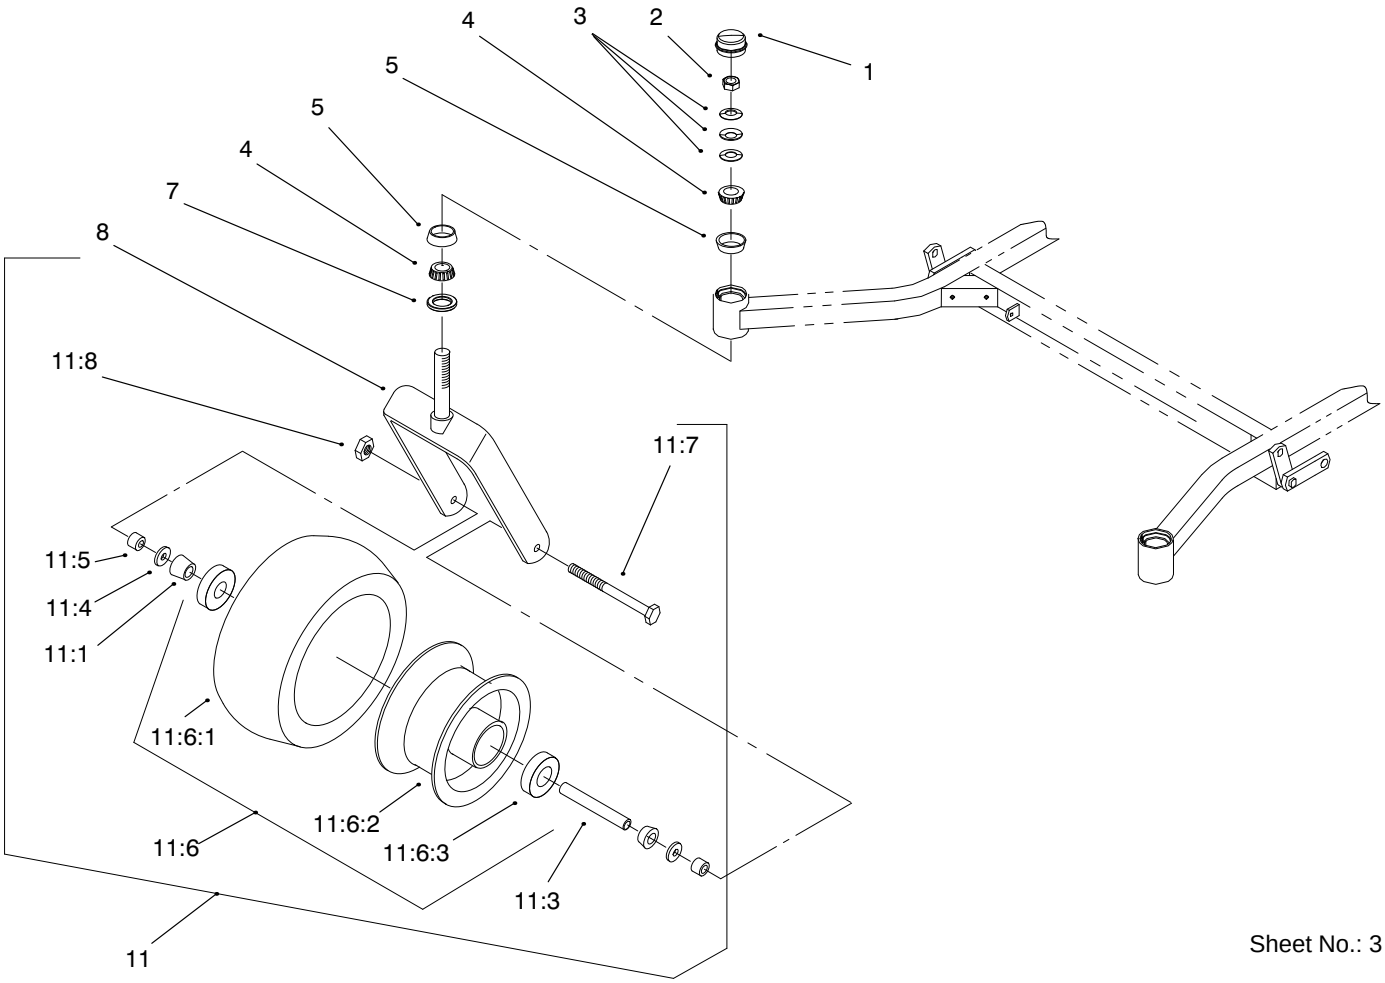

Sheet No.: 3

Caster and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	E543513	2	Cap–Grease
2	32146–14	2	Locknut
3	E633508	6	Washer–Belleview
4	254–94	4	Bearing–Taper/Cone
5	254–72	4	Bearing–Taper/Cup
7	E543511	2	Seal–Grease
8	E642111	2	Caster
11	E644251	2	Caster Wheel ASM
11:1	254–78	2	Bearing–Roller, Cone
11:3	E633959	1	Spacer–Front Caster
11:4	E633580	2	Seal–Bearing
11:5	E633581	2	Spacer–Bearing
11:6	E633971	1	Wheel & Tire ASM
11:6:1	E523009	1	Tire
11:6:2	E633987	1	Wheel
11:6:3	254–79	2	Bearing–Roller, Cup
11:7	325–24	1	Screw–HH
11:8	3296–45	1	Nut–Lock Ni

Ref. No.	Part No.	Qty.	Description

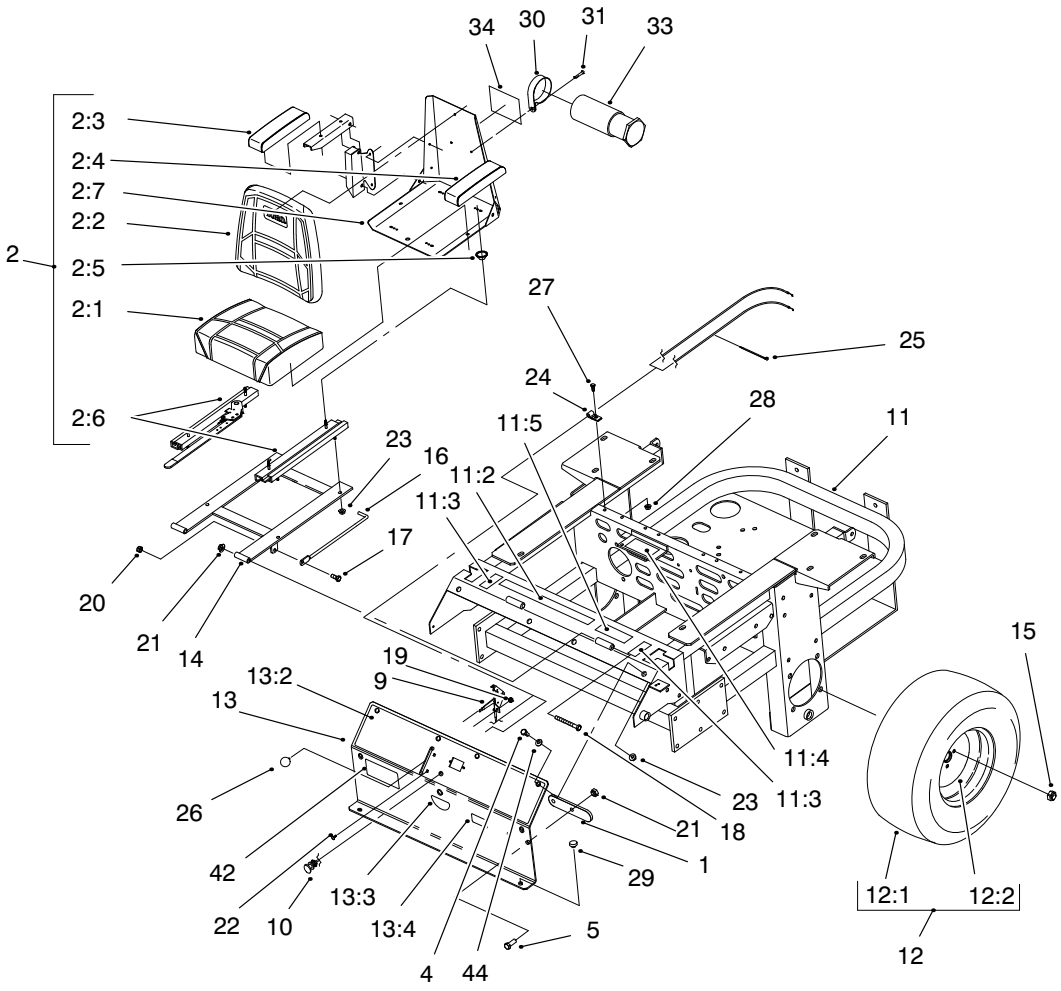

Sheet No.: 4

Rear Frame and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	E633964	1	Stop – Park Brake
2	E633705	1	Seat ASM w/Armrest
2:1	E543407	1	Cushion–Seat
2:2	E633709	1	Cushion–Backrest
2:3	E633710	1	Armrest – RH
2:4	E633711	1	Armrest – LH
2:5	E543401	4	Spacer–Track
2:6	E643255	1	Track–Locking, 4”
2:7	E633859	1	Frame–Seat
4	322–3	8	Screw–HH
5	323–6	2	Screw–HH
9	E633696	1	Cable–Throttle
10	E603336	1	Control–Choke, Push–Pull
11	100–4261	1	Frame ASM–Rear
11:2	E513747	1	Decal–Battery
11:3	E633354	2	Decal–Motion Control
11:4	E513929	1	Decal–Drive Release
11:5	E643372	1	Decal Hazardous Mat.
12	E633970	2	Wheel & Tire ASM
12:1	E633993	1	Tire
12:2	E633992	1	Wheel
13	99–4623	1	Console ASM
13:2	99–4611	1	Decal–Control Panel
13:3	E633346	1	Decal–Fuel Valve
13:4	98–4387	1	Decal – Ear Protection

Ref. No.	Part No.	Qty.	Description
14	E632187	1	Frame–Seat
15	E513011	1	Nut–Wheel
16	E633293	1	Rod–Seat Holdup
17	322–5	1	Screw–HH
18	323–21	2	Screw–HH
19	3296–2	2	Nut–Lock
20	3296–41	1	Nut–Lock Ni
21	3296–39	4	Nut–Lock, Ni
22	E807513	2	Bolt–CARR
23	32128–20	12	Nut–HF
24	E513762	1	Clip
25	E303335	1	Tie–Plastic
26	E513592	1	Knob–Ball, Red
27	321–4	1	Screw–HH
28	32128–33	1	Nut–HF
29	E513658	2	Bumper–Catcher, Grass
30	2412–120	2	R Clamp
31	32104–76	2	Screw–Acorn Slot
33	74–0720	1	Tube–Manual
34	93–7340	1	Decal–Toro
42	E633736	1	Decal –Z255
44	3256–23	6	Washer–Flat

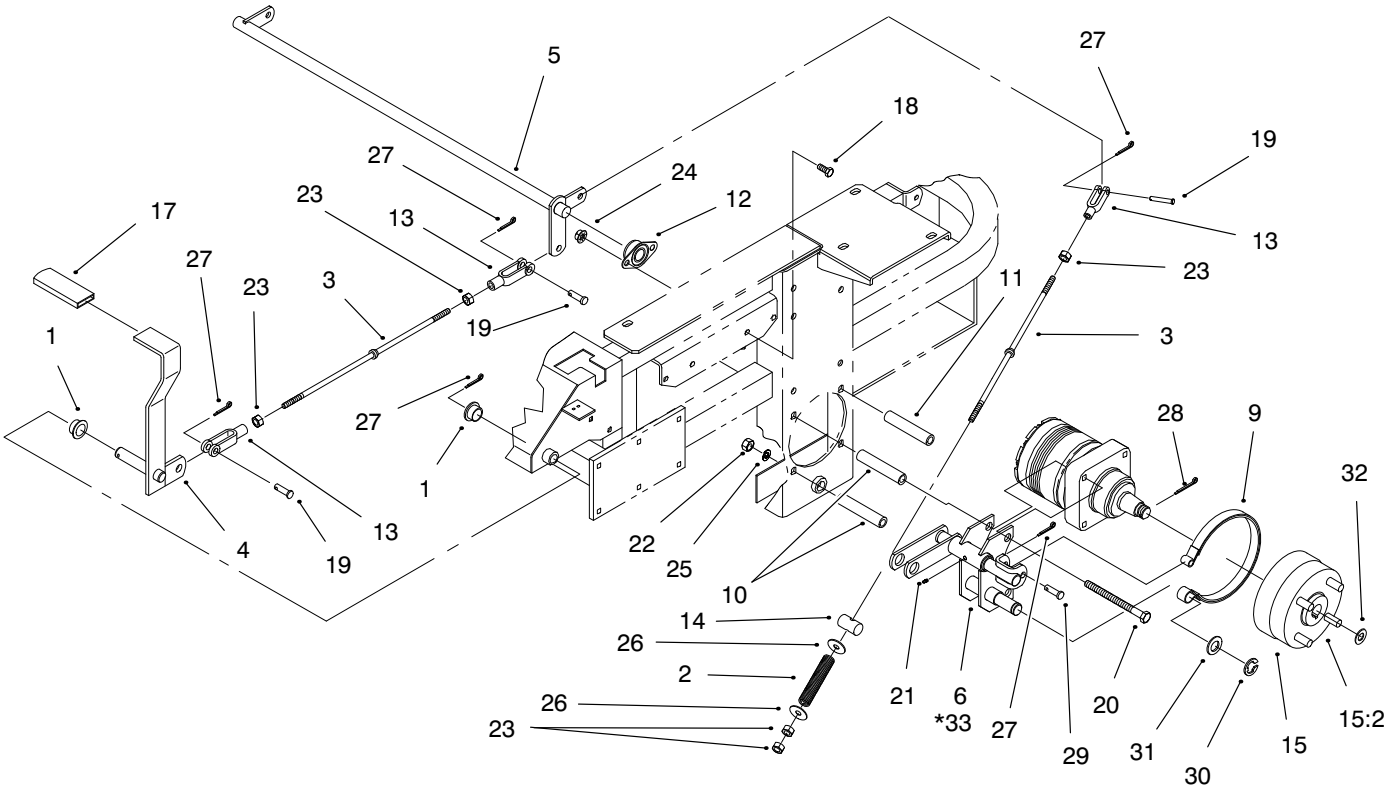

Sheet No.: 5

Brake and Wheel Hub Assembly

Ref. No.	Part No.	Qty.	Description
1	E513140	2	Bearing, Control
2	E633454	2	Spring–Brake
3	E633477	3	Rod–Brake
4	E632489	1	Lever–Brakepoint
5	E632217	1	Shaft–Brake
6	E632714	1	Bracket–Brake,LH
9	E633693	2	Brake Band
10	E633380	4	Spacer–Short, Wheel
11	E633382	4	Spacer–Long, Wheel
12	E633102	2	Bearing–Side Flange
13	E633131	4	Yoke–Brake Linkage
14	E633144	2	Pin–Trunion
15	E634927	2	Hub And Drum ASM
15:2	E633926	4	Stud–Wheel
17	E633268	1	Grip–Brake Lever
18	323–4	4	Screw–HH
19	E808285	4	Pin–Clevis
20	325–17	8	Screw–HH
21	E811007	2	Fitting–Grease
22	3217–9	8	Nut–Hex
23	3219–3	8	Nut–Hex
24	3290–357	4	Nut–Lock Flange
25	3253–7	8	Washer–Lock/Sp
26	3256–4	4	Washer–Flat
27	3272–10	7	Pin–Cotter
28	E806800	2	Pin–Cotter

Ref. No.	Part No.	Qty.	Description
29	E808283	2	Pin–Clevis
30	E808514	2	Ring–Retaining
31	3256–28	2	Washer–Flat
32	E523157	2	Spacer
*33	E632715	1	Bracket–Brake, RH

* Not illustrated

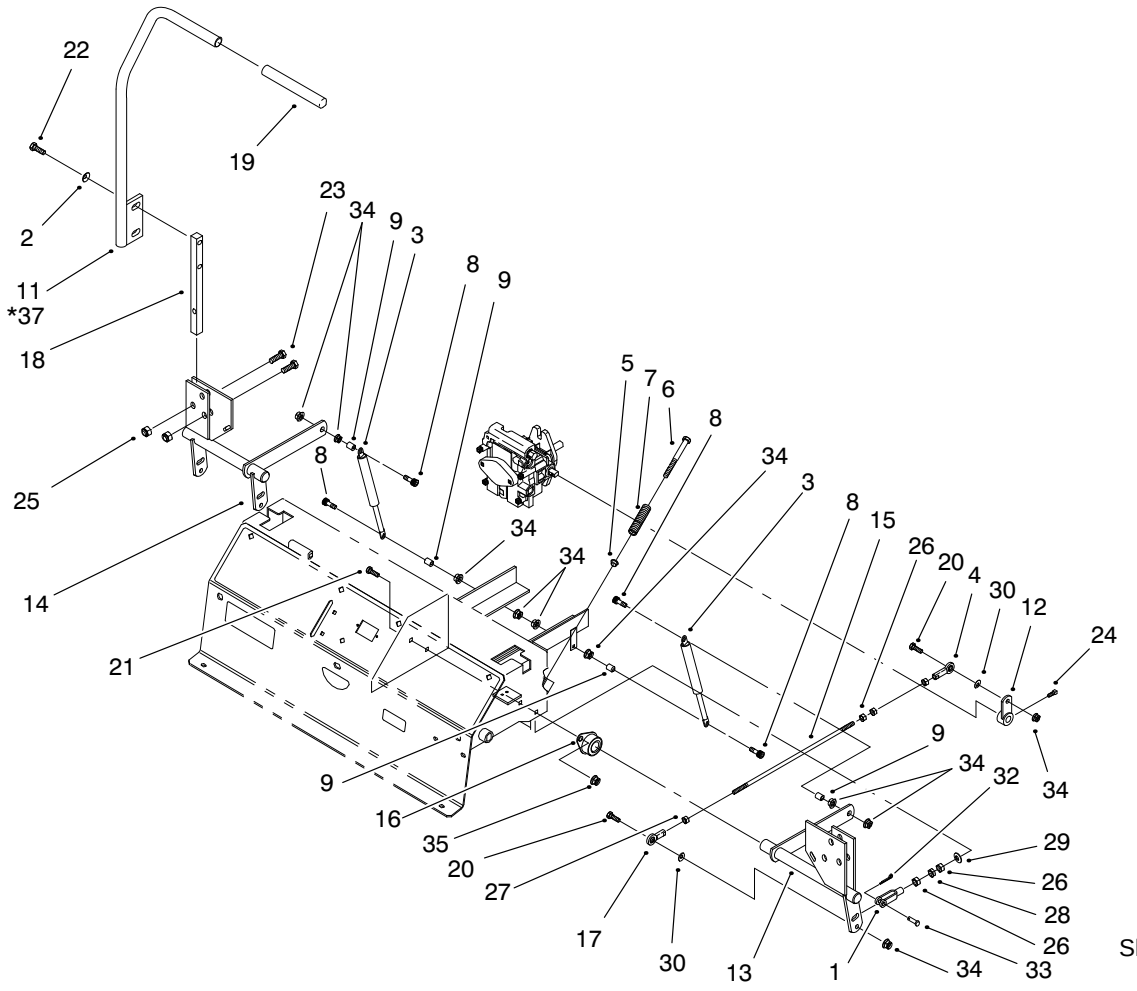

Sheet No.: 6
C–2888

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	E303105	2	Yoke–Adjustable
2	98–5975	4	Washer
3	E523027	2	Damper–Control
4	E543017	2	Ball Joint
5	E603735	2	Bushing–Nylon Flanged
6	E603737	2	Bolt–Neutral Return
7	E603807	2	Spring–Neutral Return
8	E403180	4	Screw–HH
9	E653299	4	Spacer–Damper
11	E632193	1	Lever–RH
12	E632208	2	Arm–Pump Control
13	E642319	1	Motion Control, LH
14	E642320	1	Motion Control RH
15	E633153	2	Linkage
16	E633102	4	Bearing–Side Flange
17	E633152	2	Ball Joint–LH Thread
18	E633177	2	Arm
19	E633257	2	Grip–Motion Control
20	322–6	4	Screw–HH
21	323–4	8	Screw–HH
22	323–6	4	Screw–HH
23	323–9	6	Screw–HH
24	E803022	2	Screw
25	3296–39	6	Nut–Lock, Ni
26	3219–2	10	Nut–Hex

Ref. No.	Part No.	Qty.	Description
27	3220–20	2	Nut–Jam LH
28	3220–2	2	Nut–Jam
29	3256–2	2	Washer–Flat
30	3256–3	4	Washer–Flat
32	3272–5	2	Pin–Cotter
33	E808280	2	Pin–Clevis
34	32128–20	12	Nut–HF
35	3290–357	8	Nut–Lock Flange
*37	E632191	1	Lever–LH

* Not illustrated

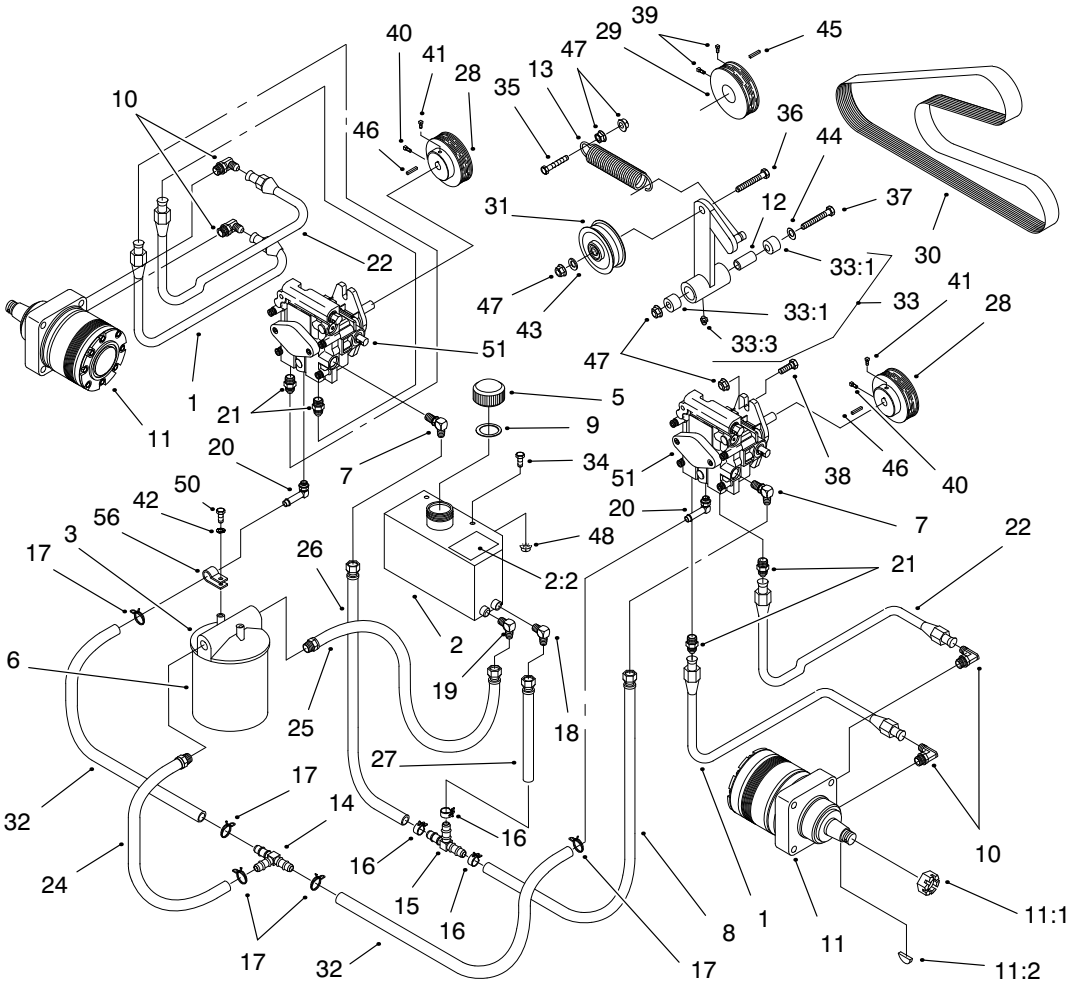

Sheet No.: 7

Hydraulic System Assembly

Ref. No.	Part No.	Qty.	Description
1	E633774	2	Hose–High Pressure
2	99–4625	1	Hydraulic Tank ASM
2:2	E523552	1	Decal – Hydraulic Tank, Hot Surface
3	E513006	1	Filter–Head
5	E513167	1	Cap–Hydraulic Reservior
6	E633750	1	Filter–Hydro
6	E633752	1	Filter–Hydro, Winter
7	E513840	2	Elbow–90
8	E522217	1	Low Pressure Hose ASM
9	E523103	1	Gasket–Tank/Cap
10	E633786	4	Elbow 90°
11	E523328	2	Motor–Wheel
11:1	E809036	1	Nut–Castle
11:2	E807020	1	Woodruff–Key
12	E603384	1	Bushing–Idler Pivot
13	E603413	1	Spring–Extension
14	E603721	1	Fitting
15	E603722	1	Fitting
16	E603826	3	Clamp–Hose
17	E603827	5	Clamp–Hose
18	E603987	1	Elbow
19	E603988	1	Elbow
20	E603989	2	Elbow

Ref. No.	Part No.	Qty.	Description
21	E603990	4	Adapter
22	E633775	2	Hose–High Pressure
24	E632281	1	12” Low Pressure Hose ASM
25	E632282	1	13” Low Pressure Hose ASM
26	E632285	1	Hose–Low Pressure
27	E632286	1	Hose–Low Pressure
28	E633568	2	Sheave
29	E633567	1	Sheave
30	E633749	1	Belt
31	E633167	1	Pulley–Idler
32	E633335	2	Hose–Low Pressure
33	E634277	1	Arm ASM
33:1	E513034	2	Bearing–Pivot
33:3	E811008	1	Fitting–Grease
34	321–4	2	Screw–HH
35	323–8	1	Screw–HH
36	323–9	1	Screw–HH
37	E800805	1	Screw–HH
38	323–7	4	Screw–HH
39	E803022	2	Screw
40	3242–6	2	Screw–SQH Set
41	3242–4	2	Screw–SQH Set
42	3253–3	2	Washer–Lock/Sp
43	3256–3	1	Washer–Flat

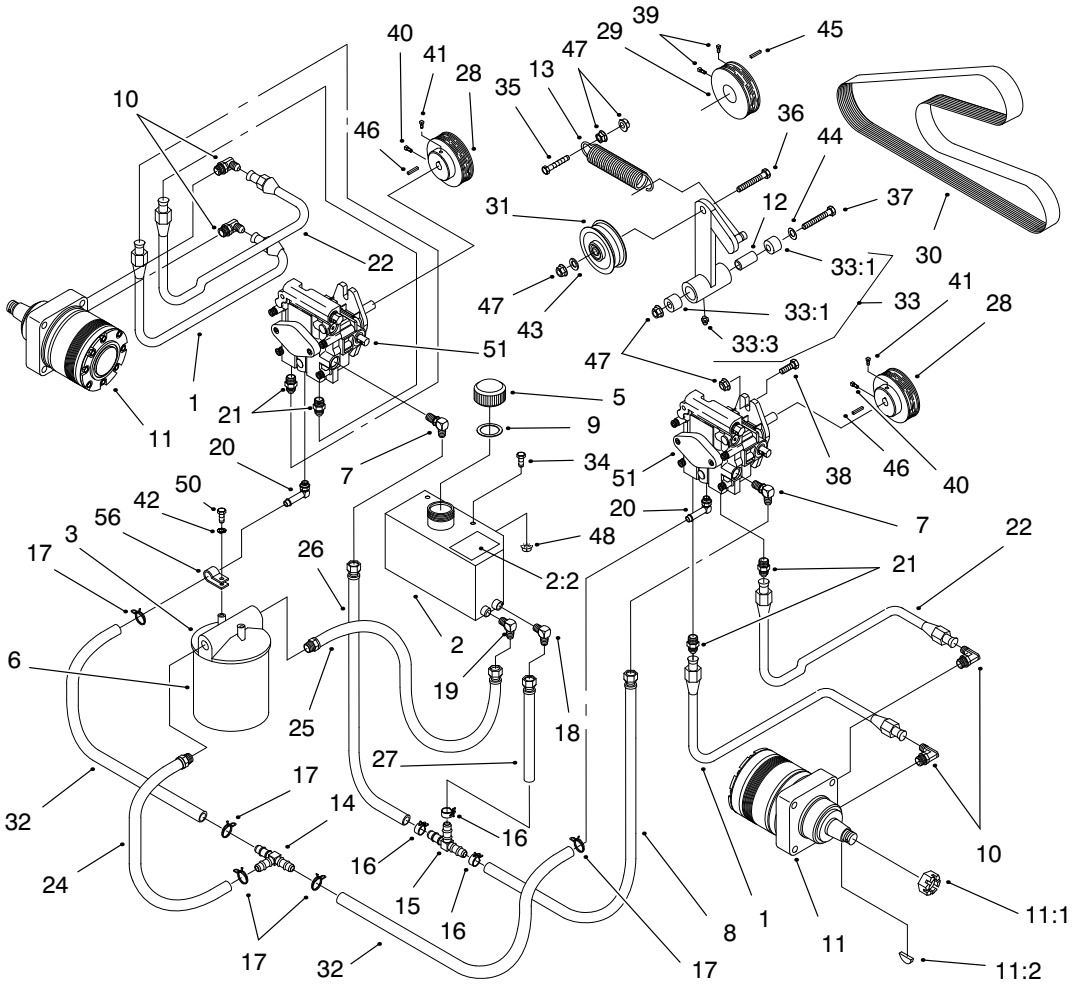

Sheet No.: 7

Hydraulic System Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
44	3256–4	1	Washer–Flat
45	13–2840	1	Square Key
46	E807272	2	Key
47	3290–357	8	Nut–Lock Flange
48	32128–33	2	Nut–HF
50	321–3	2	Screw–HH
*51	80–6130	1	Overhaul Seal Kit
51	E603841	2	Pump–Hydro
56	E513762	1	Clip

Ref. No.	Part No.	Qty.	Description

* Not illustrated

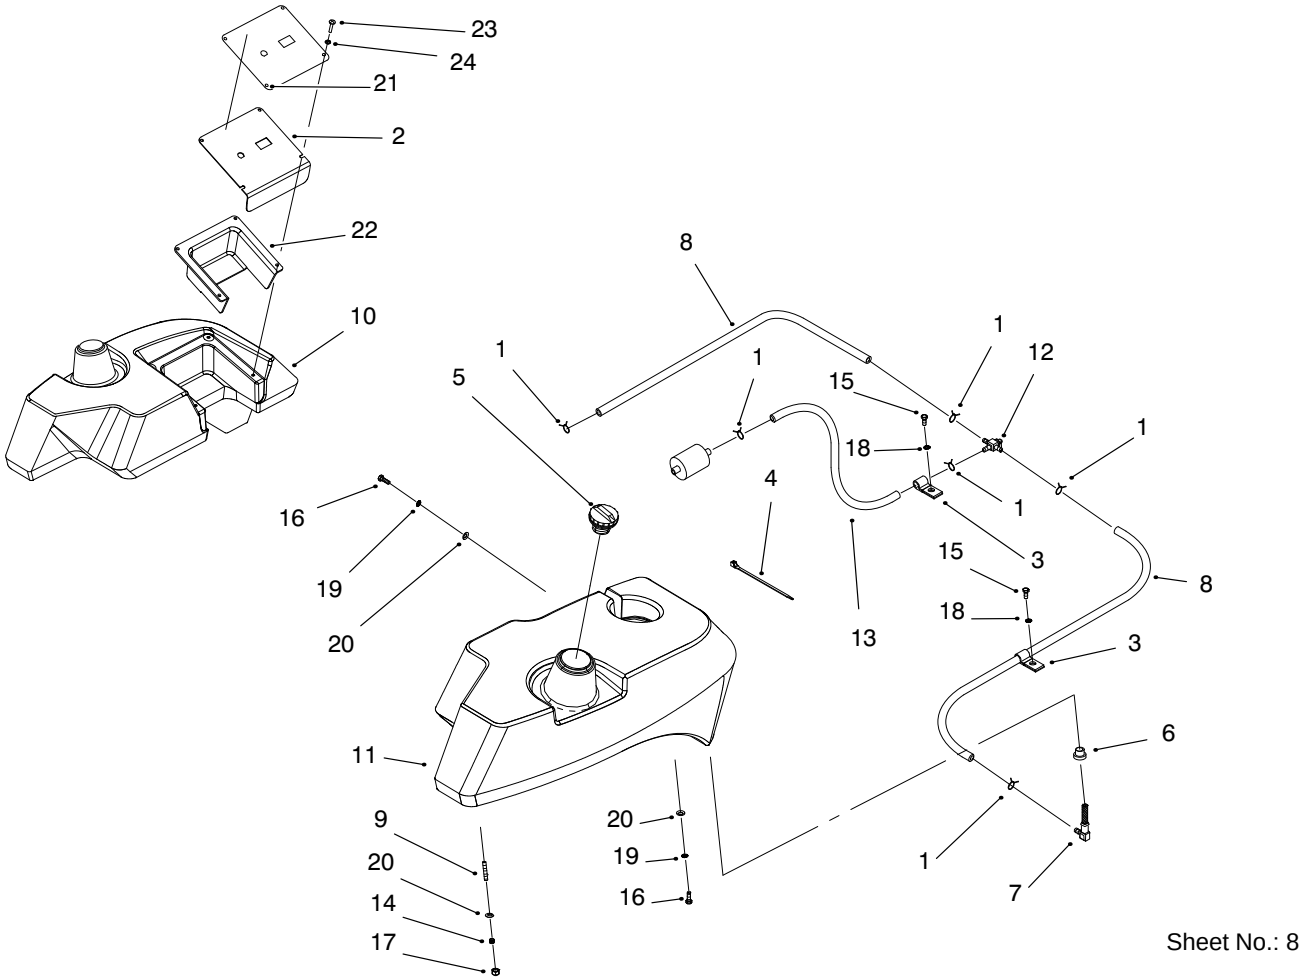

Sheet No.: 8

Tank and Fuel Lines Assembly

Ref. No.	Part No.	Qty.	Description
1	E303077	6	Clamp – Gas Line
2	99–4656	1	Panel–Control
3	E513762	2	Clip
4	E303335	1	Tie–Plastic
5	93–3101	2	Cap–Fuel
6	E513645	2	Bushing–Valve, Fuel
7	E543277	2	Elbow–Fuel Tank
8	E543456	2	Fuel Line – 21.5
9	E633023	6	Stud
10	99–4608	1	Tank – LH Fuel
11	99–4607	1	Tank – RH Fuel
12	E633347	1	Valve–Fuel Line
13	E633348	1	Fuel Line
14	E633349	6	Spring–Fuel Tank
15	321–3	2	Screw–HH
16	322–3	4	Screw–HH
17	3296–47	6	Nut–Lock Ni
18	3253–3	2	Washer–Lock/Sp
19	3253–4	4	Washer–Lock/Sp
20	3256–23	10	Washer–Flat
21	99–4632	1	Decal–Control Panel
22	99–4940	1	Shield–Control Panel
23	E803071	4	Screw
24	E303435	4	Washer–Belleview

Ref. No.	Part No.	Qty.	Description

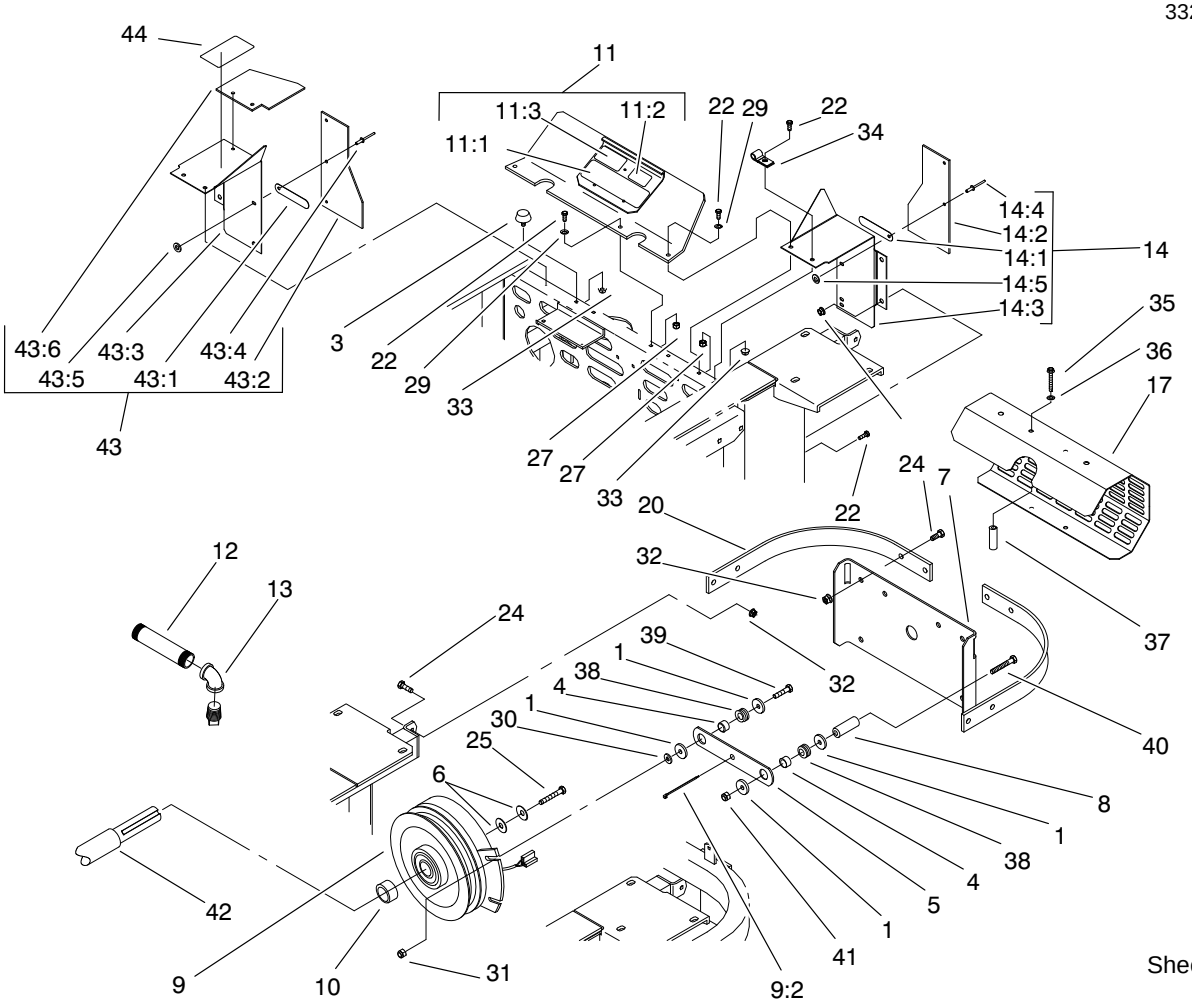

Shields and Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	E613235	4	Washer
3	E523420	2	Bumper
4	E633545	2	Spacer–Grommet
5	E633543	1	Strap–Clutch/Brake
6	E603610	2	Washer – Spring, Disc
7	E633615	1	Guard–Clutch
8	E633988	1	Spacer–Clutch, Anchor
9	E631732	1	Clutch
9:2	E303335	1	Tie–Plastic
10	E633179	1	Spacer–Clutch
11	E644276	1	Shield ASM
11:1	E643252	1	Decal – Drive, Belt
11:2	E513748	1	Decal–Guard
11:3	E633462	1	Decal–Important
12	E543232	1	Nipple
13	E303428	1	Elbow
14	E634796	1	Shield–LH
14:1	E523285	1	Clip,Rear Baffle
14:2	E633301	1	Shield – Engine
14:3	E633795	1	Baffle–Engine Shield, LH
14:4	E803035	3	Pop Rivet
14:5	3256–23	3	Washer–Flat
17	E643313	1	Guard–Muffler
20	E643264	2	Bracket–Guard, Top

Ref. No.	Part No.	Qty.	Description
22	321–4	10	Screw–HH
24	323–6	6	Screw–HH
25	3212–10	1	Screw–HH
27	32146–17	4	Nut–Lock
29	3256–2	4	Washer–Flat
30	3256–3	1	Washer–Flat
31	32128–20	1	Nut–HF
32	3290–357	4	Nut–Lock Flange
33	32128–33	7	Nut–HF
34	E633396	1	Clip – Loom
35	E809076	2	Screw–HH
36	E323235	2	Washer Spring, Disc
37	E323236	2	Spacer
38	E633630	2	Grommet
39	322–6	1	Screw–HH
40	322–19	1	Screw–HH
41	3296–41	1	Nut–Lock Ni
42	E633830	1	Kohler Command Ch25
43	E644316	1	Shield ASM, RH
43:1	E523285	1	Clip,Rear Baffle
43:2	E633301	1	Shield – Engine
43:3	E633794	1	Shield – RH
43:4	E803035	5	Pop Rivet
43:5	3256–23	5	Washer–Flat
43:6	E643315	1	Baffle, Engine Cooler
44	E643339	1	Decal–Belt Routing

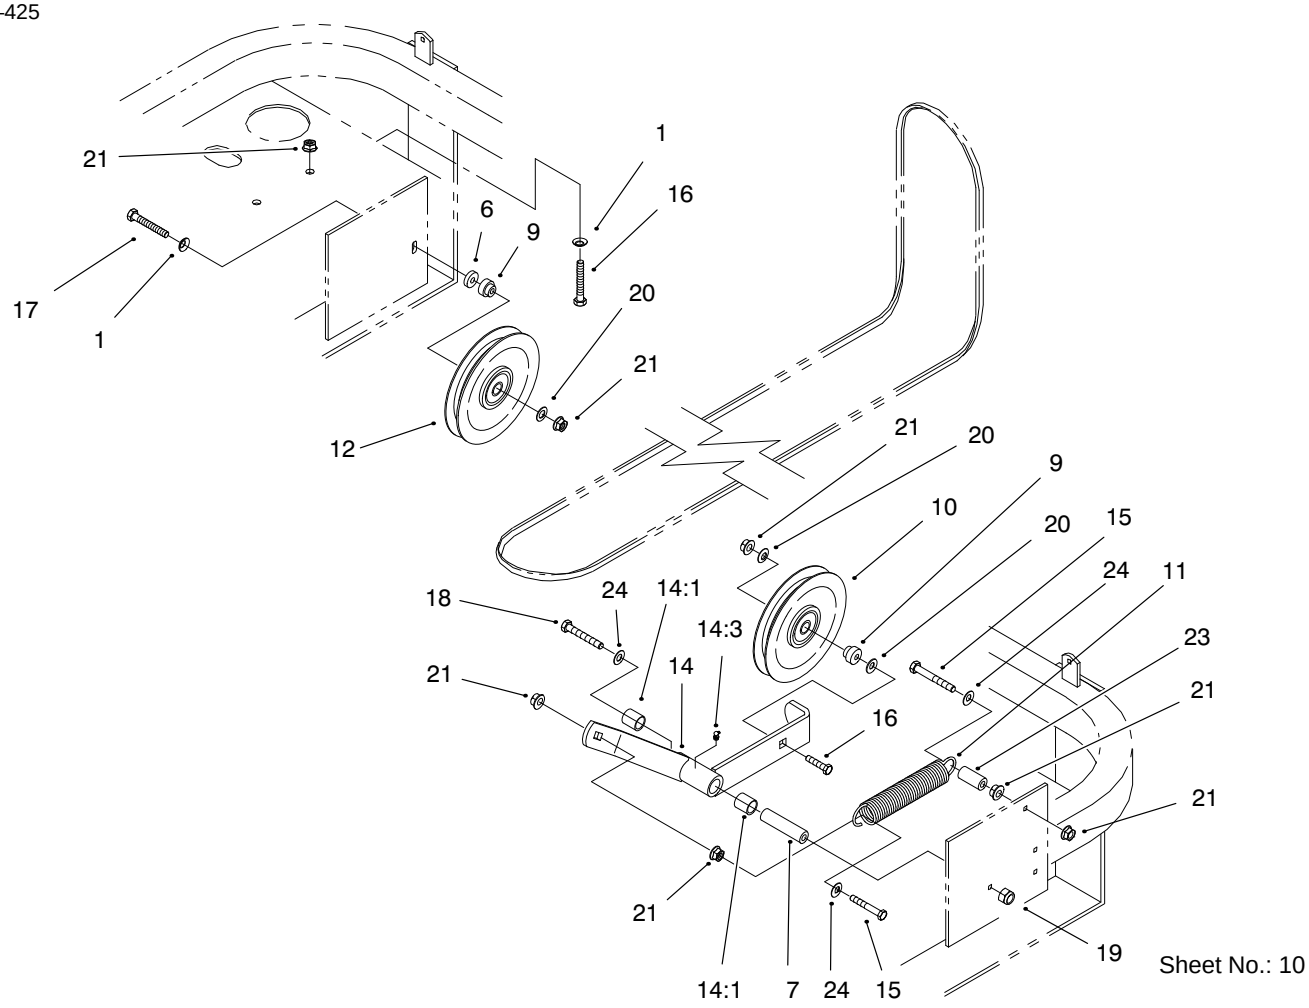

Sheet No.: 10

Idler Assembly

Ref. No.	Part No.	Qty.	Description
1	98–5975	5	Washer
6	E603050	1	Bushing Spacer
7	E603384	1	Bushing–Idler Pivot
9	E603496	2	Bushing–Idler
10	E603805	1	Idler
11	E603402	1	Spring–Extension
12	E633166	1	Idler–Pulley
14	99–4677	1	Arm–Idler ASM (w/Bushing)
14:1	E513034	2	Bearing–Pivot
14:3	E811008	1	Fitting–Grease
15	323–11	2	Screw–HH
16	323–9	5	Screw–HH
17	323–13	1	Screw–HH
18	E800805	1	Screw–HH
19	3296–39	1	Nut–Lock, Ni
20	3256–24	4	Washer–Flat
21	3290–357	10	Nut–Lock Flange
23	E603401	1	Spacer–Fender
24	3256–4	3	Washer–Flat

Ref. No.	Part No.	Qty.	Description

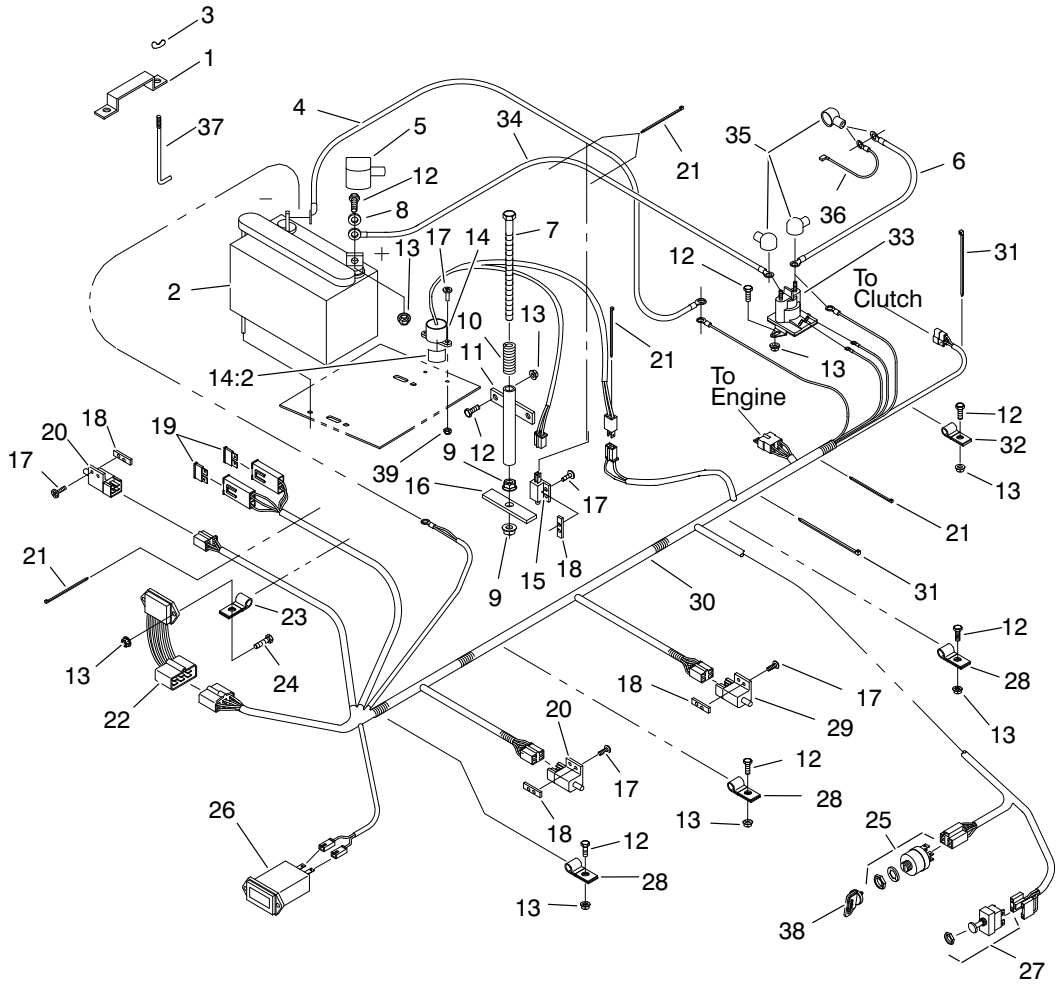

Sheet No.: 11

Electrical System Assembly

Ref. No.	Part No.	Qty.	Description
1	E633652	1	Strap–Battery Hold Down
2	E603479	1	Battery–12v
3	E543792	2	Wingnut–Nyloc
4	E633307	1	Wire–Ground
5	E543391	1	Insulator–Battery
6	E633306	1	Wire–Starter
7	E800282	1	Screw–HH
8	3256–2	2	Washer–Flat
9	32128–20	2	Nut–HF
10	E523415	1	Spring–Switch, Seat
11	E522424	1	Spring Mount
12	321–4	8	Screw–HH
13	32128–33	11	Nut–HF
14	E644427	1	Switch–Tilt
14:2	E643401	1	Decal–Mercury Switch
15	E513152	1	Switch–Seat
16	E513180	1	Actuator – Switch, Seat
17	E803028	10	Screw
18	E633181	4	Plate–Tapped
19	E816001	2	Fuse–Blade Type 20 Amp
20	E633111	2	Switch–Drive Lever
21	E303287	5	Tie–Plastic
22	E543316	1	Module–Safety

Ref. No.	Part No.	Qty.	Description
23	E513762	1	Clip
24	321–6	1	Screw–HH
25	E543070	1	Switch–Ignition
26	E513374	1	Meter–Engine Hours
27	E633673	1	Switch–PTO
28	E633396	3	Clip – Loom
29	E633110	1	Switch–Brake
30	E643119	1	Harness–Wiring
31	E303335	4	Tie–Plastic
32	E323229	1	Clip–Loom
33	E513075	1	Switch–12v Solenoid
34	E523281	1	Cable–Battery
35	E543393	3	Insulator–Solenoid
36	E543084	1	Wire–Starter Solonoid
37	E633651	2	Bolt–Battery Hold Down
38	63–8360	2	Key–Ignition w/Shield
39	3296–2	2	Nut–Lock

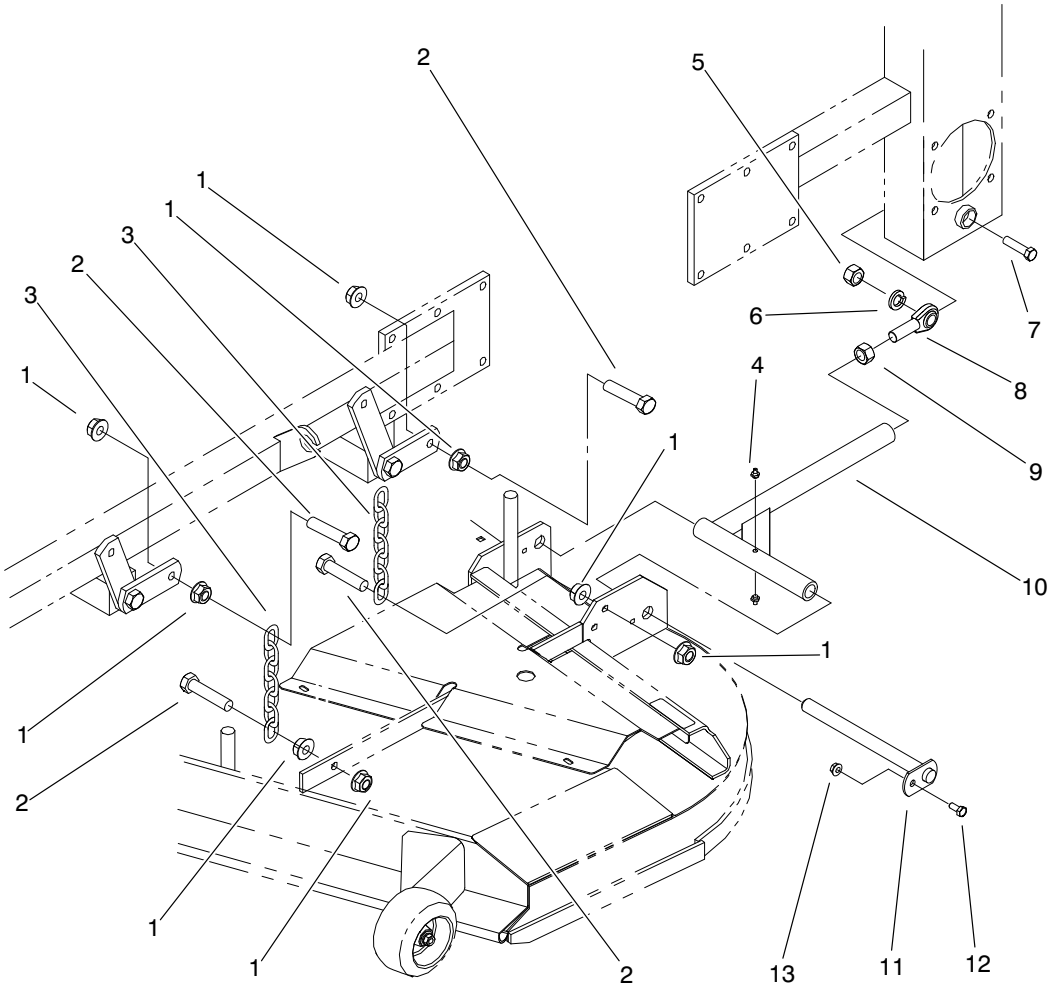

Sheet No.: 12
C–2889

Frame and Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	32128–37	16	Nut–Hex Flange
2	324–6	8	Screw–HH
3	E633447	4	Chain – Deck Lift
4	302–19	4	Fitting – Grease
5	3217–11	2	Nut–Hex
6	3253–8	2	Washer–Lock/Sp
7	327–11	2	Screw–HH
8	E633029	2	End–Rod, Spherical
9	3219–6	2	Nut–Hex
10	E632690	2	Strut
11	E632199	2	Pin–Deck Strut
12	322–3	2	Screw–HH
13	3296–41	2	Nut–Lock Ni

Ref. No.	Part No.	Qty.	Description

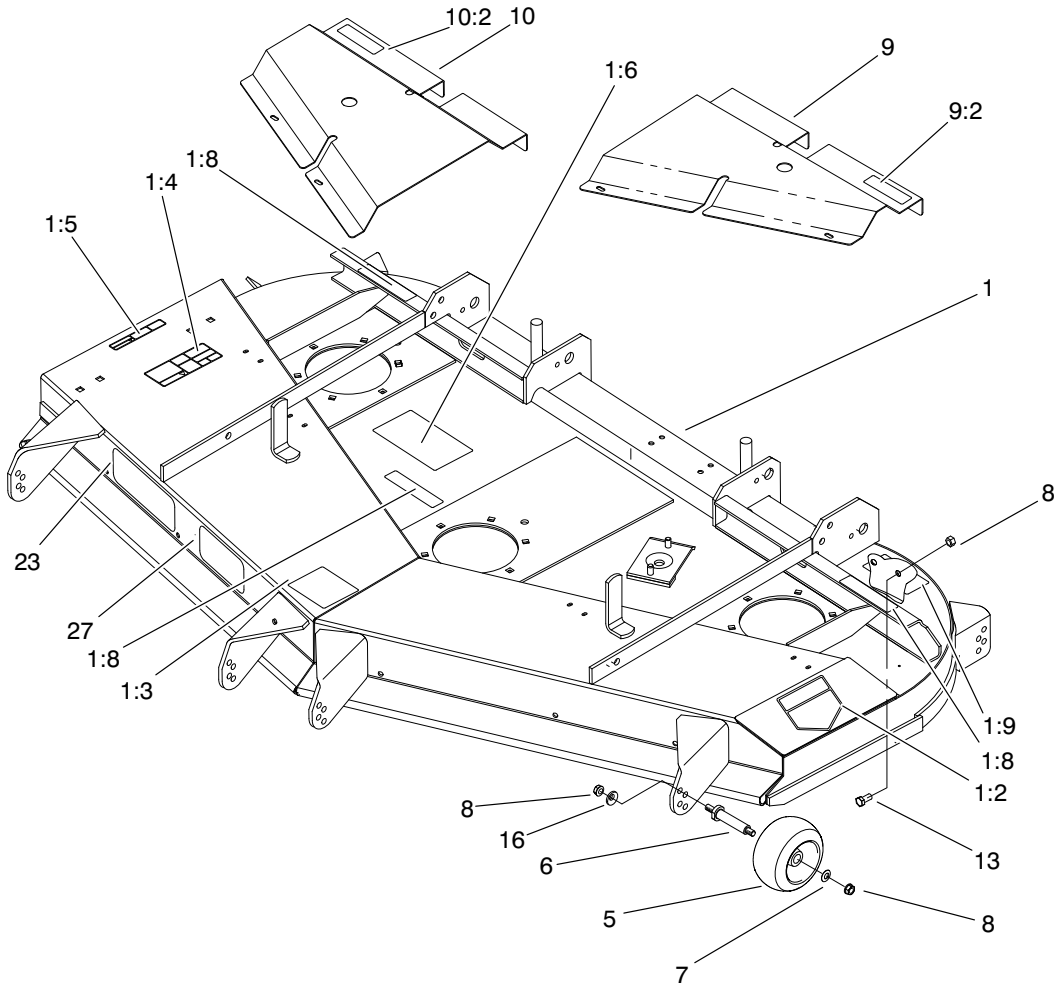

Sheet No.: 32

Deck, Deflector and Roller Assembly

Ref. No.	Part No.	Qty.	Description
1	100–4272	1	62” Deck ASM
1:2	43–8480	1	Decal–Danger
1:3	98–3798	1	Decal–Gage Wheel
1:4	66–1340	1	Decal–Danger
1:5	66–6380	1	Decal–Danger
1:6	99–4686	1	Decal–Belt Routing
1:8	98–5954	3	Decal–Cover Missing
1:9	93–7818	1	Decal–Blade Bolt Torque
5	68–2730	6	Wheel–Gage
6	99–2842	6	Spacer–Wheel
7	E373034	6	Washer–Swivel
8	3290–357	14	Nut–Lock Flange
9	98–5955	1	LH Cover ASM
9:2	67–5360	1	Decal–Danger
10	98–5956	1	RH Cover ASM
10:2	67–5360	1	Decal–Danger
13	323–2	2	Screw–HH
16	98–5975	6	Washer
23	99–4619	1	Decal–Sfs
27	99–4620	1	Decal – 62”

Ref. No.	Part No.	Qty.	Description

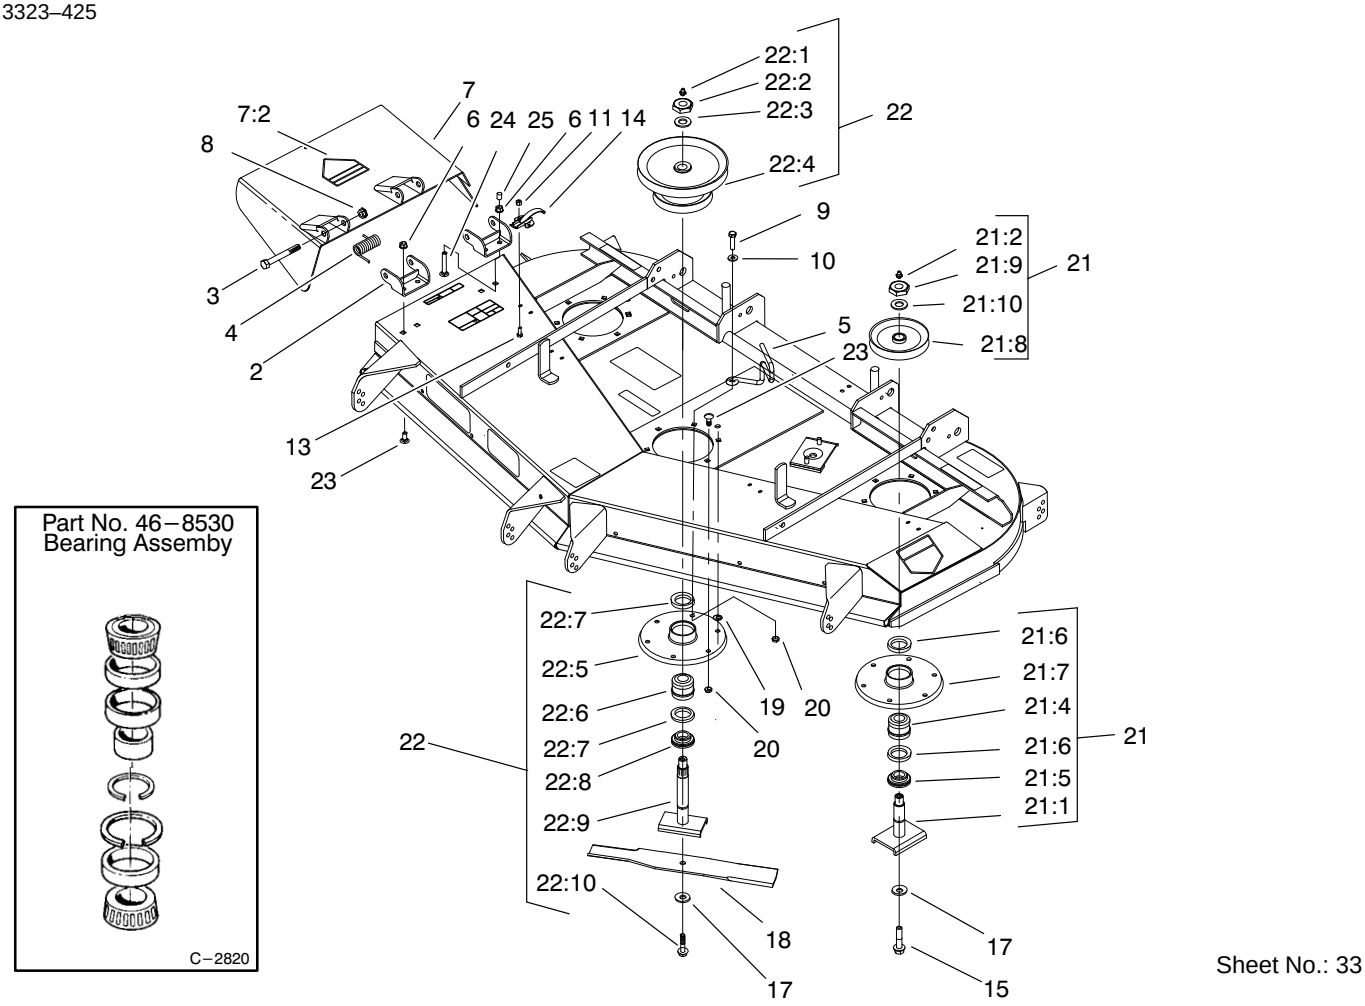

Spindle and Pulley Assembly

Ref. No.	Part No.	Qty.	Description
2	51–1530–01	2	Bracket–Hinge
3	325–17	2	Screw–HH
4	51–1550	2	Spring
5	99–8933	1	Belt–Guide
6	3290–357	4	Nut–Lock Flange
7	14–0909	1	Deflector Assembly
7:2	54–9220	1	Decal–Danger
8	32153–5	2	Nut–Lock
9	323–8	1	Screw–HH
10	3256–3	1	Washer–Flat
11	32128–17	8	Nut–Flange Lock
13	3290–321	8	Screw–HWH
14	249–21	4	Clamp–Slotted
15	92–5816	2	Flangebolt–Blade
17	E513435	3	Washer–Spring
18	44–6250	3	Blade 21.5
19	3256–24	1	Washer–Flat
20	32128–21	18	Nut–Hex Flange
21	99–4640	2	Spindle Housing ASM
21:1	27–0920	1	Shaft–Spindle
21:2	302–2	1	Fitting–Grease
21:4	46–8530	1	Bearing ASM
21:5	27–0950	1	Spacer–Bearing, Spindle
21:6	253–139	2	Seal–Oil
21:7	61–4160	1	Spindle

Ref. No.	Part No.	Qty.	Description
21:8	99–4614	1	Pulley & Hub
21:9	32146–20	1	Nut–Jam
21:10	7–4150	1	Washer–Pinion
22	99–4944	1	Spindle Housing ASM
22:1	302–2	1	Fitting–Grease
22:2	32146–20	1	Nut–Jam
22:3	92–5836	1	Washer – Axle
22:4	99–4939–03	1	Pulley & Hub ASM
22:5	61–4160	1	Spindle
22:6	46–8530	1	Bearing ASM
22:7	253–139	2	Seal–Oil
22:8	27–0950	1	Spacer–Bearing, Spindle
22:9	51–3551	1	Shaft–Spindle
22:10	92–5816	1	Flangebolt–Blade
23	3231–22	20	Screw–CARR
24	3231–33	1	Screw–CARR
25	105316	1	Cap–Plunger Rod

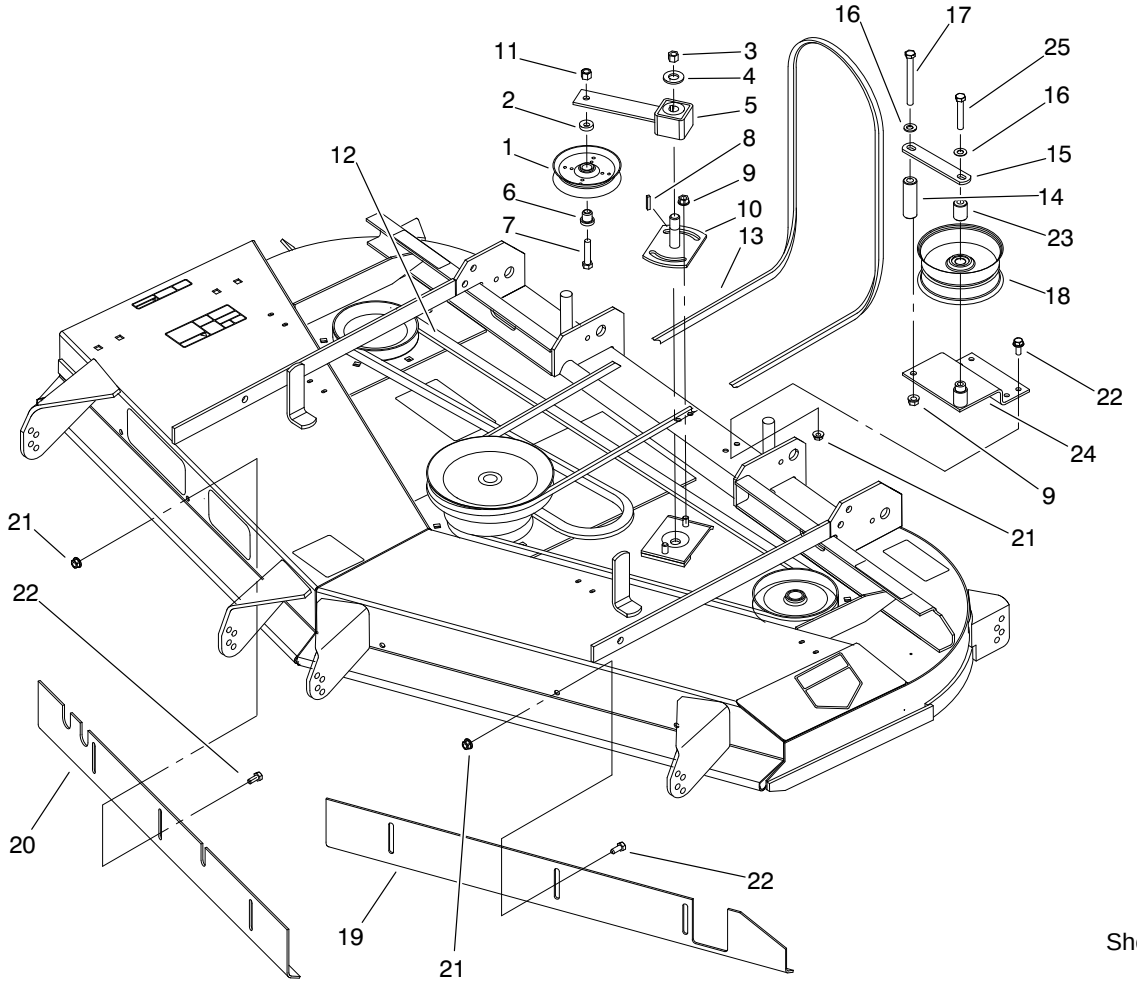

Sheet No.: 34

Belts and Idler Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	65–5940	1	Pulley–Idler
2	7–0081	1	Washer – Flat
3	3296–71	1	Nut–Lock Ni
4	3256–27	1	Washer–Flat
5	27–8580	1	Idler Socket & Bushing ASM
6	65–5950	1	Bushing–Pulley
7	3211–8	1	Screw–HH
8	5–1077	1	Key–Square
9	3290–357	3	Nut–Lock Flange
10	44–6301	1	Plate–Idler, LH
11	3296–5	1	Nut–Lock, Ni
12	44–6260	1	V Belt
13	99–4647	1	V Belt–Deck Drive
14	99–4659	1	Spacer–Bracket
15	E653189	1	Plate–Guide, Belt
16	98–5975	2	Washer
17	323–42	1	Screw–HH
18	E413099	1	Pulley–Idler
19	99–2833–03	1	Front Baffle–LH
20	99–2834–03	1	Front Baffle–RH
21	32128–20	10	Nut–HF
22	3234–5	10	Screw–HHF
23	E653190	1	Spacer
24	99–4684	1	Bracket–Pulley
25	323–11	1	Screw–HH

Ref. No.	Part No.	Qty.	Description

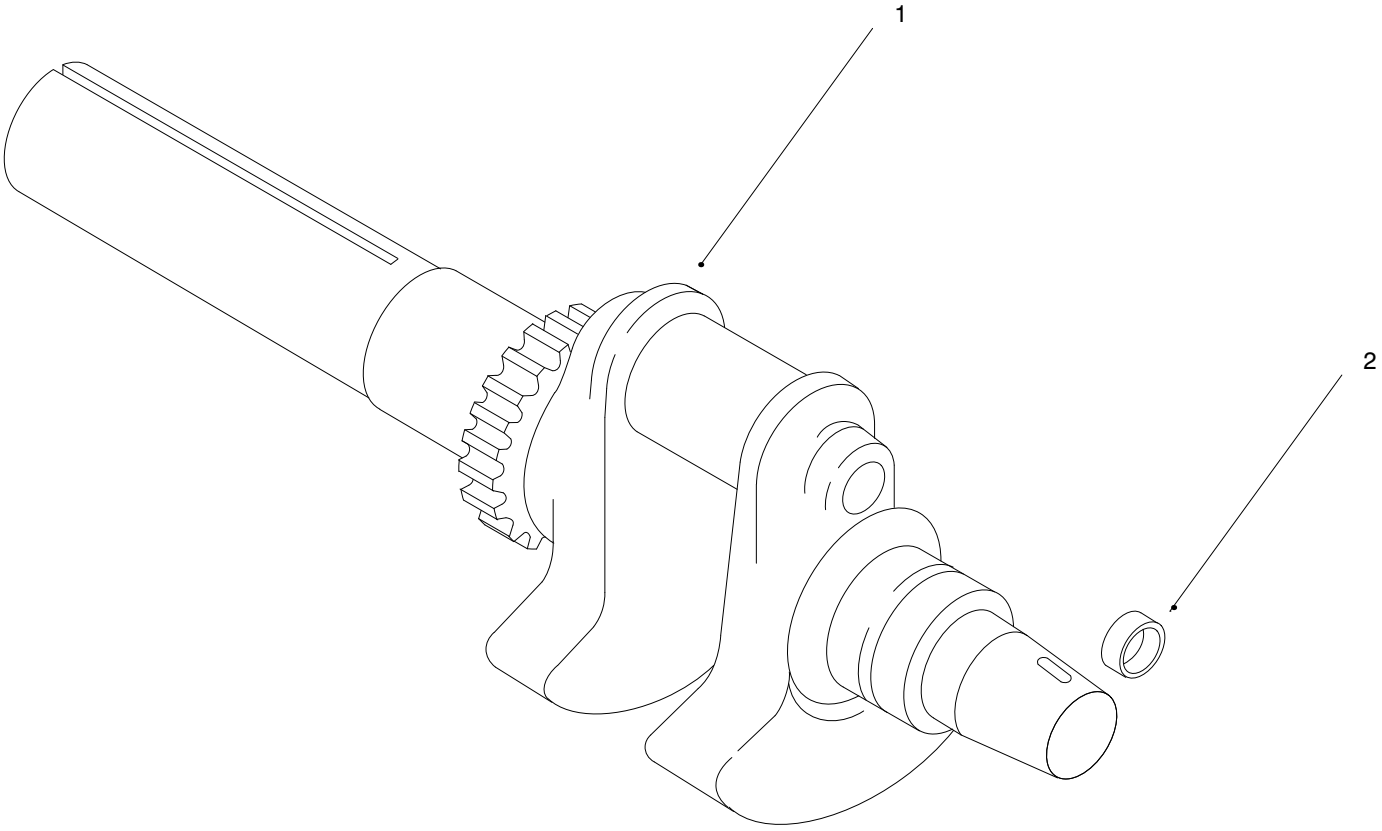

Group 1 – Crankshaft (CH25S 68606 Kohler)

Ref. No.	Part No.	Qty.	Description
1	24 014 06	1	Crankshaft (Includes 2)
2	52 139 09	1	Plug, cup

Ref. No.	Part No.	Qty.	Description

Obtain Parts From Kohler

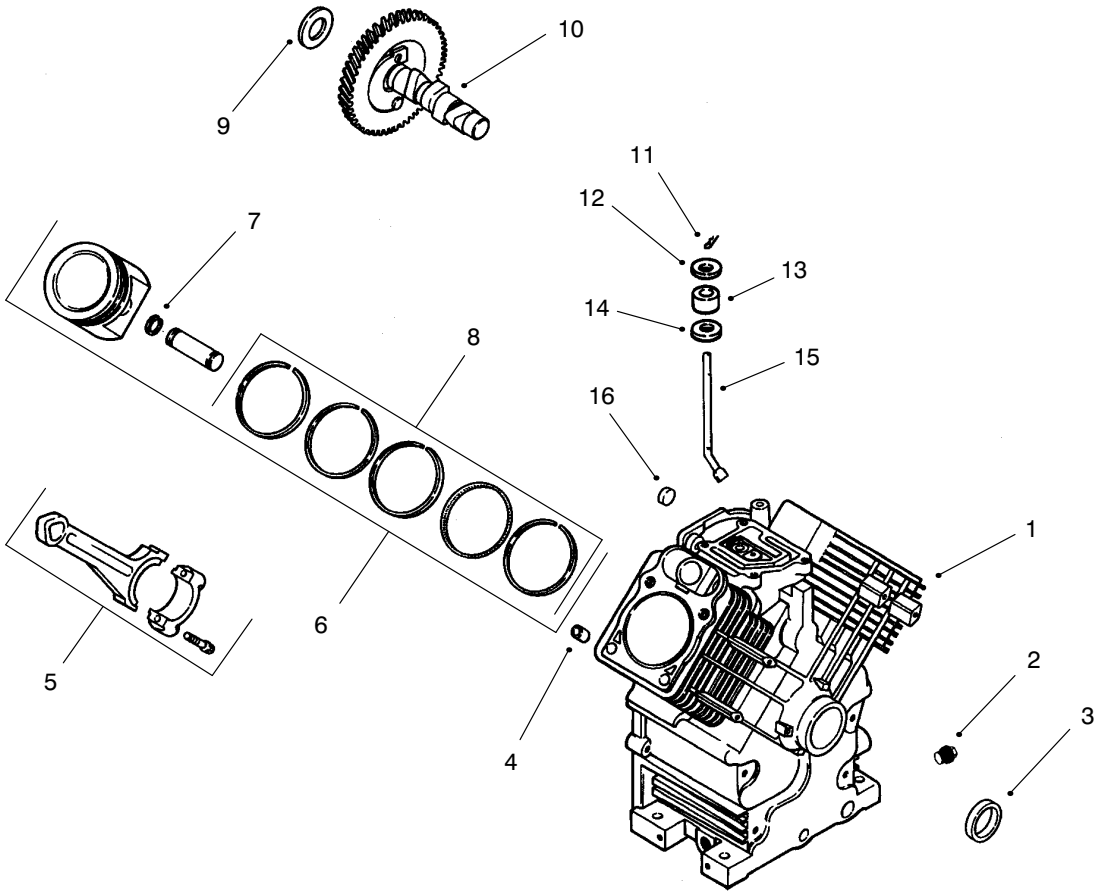

Group 2 – Crankcase (CH25S 68606 Kohler)

Ref. No.	Part No.	Qty.	Description
1	24 561 33	1	Cylinder Block
		1	(Includes 2,4,16,17)
2	X–75–10	2	Plug, drain
3	24 032 01	1	Seal, oil front
4	12 380 17	6	Pin, dowel locating
5	24 067 13	2	Connecting Rod (Std.)
	24 067 14	2	Connecting Rod (.25)
6	24 874 06	2	Piston w/Ring Set (Std.)
7	24 018 01	4	Retainer, piston pin
8	24 108 04	2	Ring Set (Std.)
9	12 422 09	A/R	Shim, camshaft – red
	12 422 13	A/R	Shim, camshaft – black
	12 422 07	A/R	Shim, camshaft – white
	12 422 08	A/R	Shim, camshaft – blue
	12 422 10	A/R	Shim, camshaft – yellow
	12 422 11	A/R	Shim, camshaft – green
	12 422 12	A/R	Shim, camshaft – gray
10	24 012 10	1	Camshaft
11	12 380 04	1	Pin, hitch
12	M–0631005	1	Washer, flat
13	12 032 01	1	Seal, governor cross shaft
14	X–25–102	1	Washer, plain
15	24 144 01	1	Shaft, governor cross
16	52 139 09	1	Plug, cup
*	24 113 56	1	Decal, Service

Ref. No.	Part No.	Qty.	Description

*Not Illustrated
Obtain Parts From Kohler

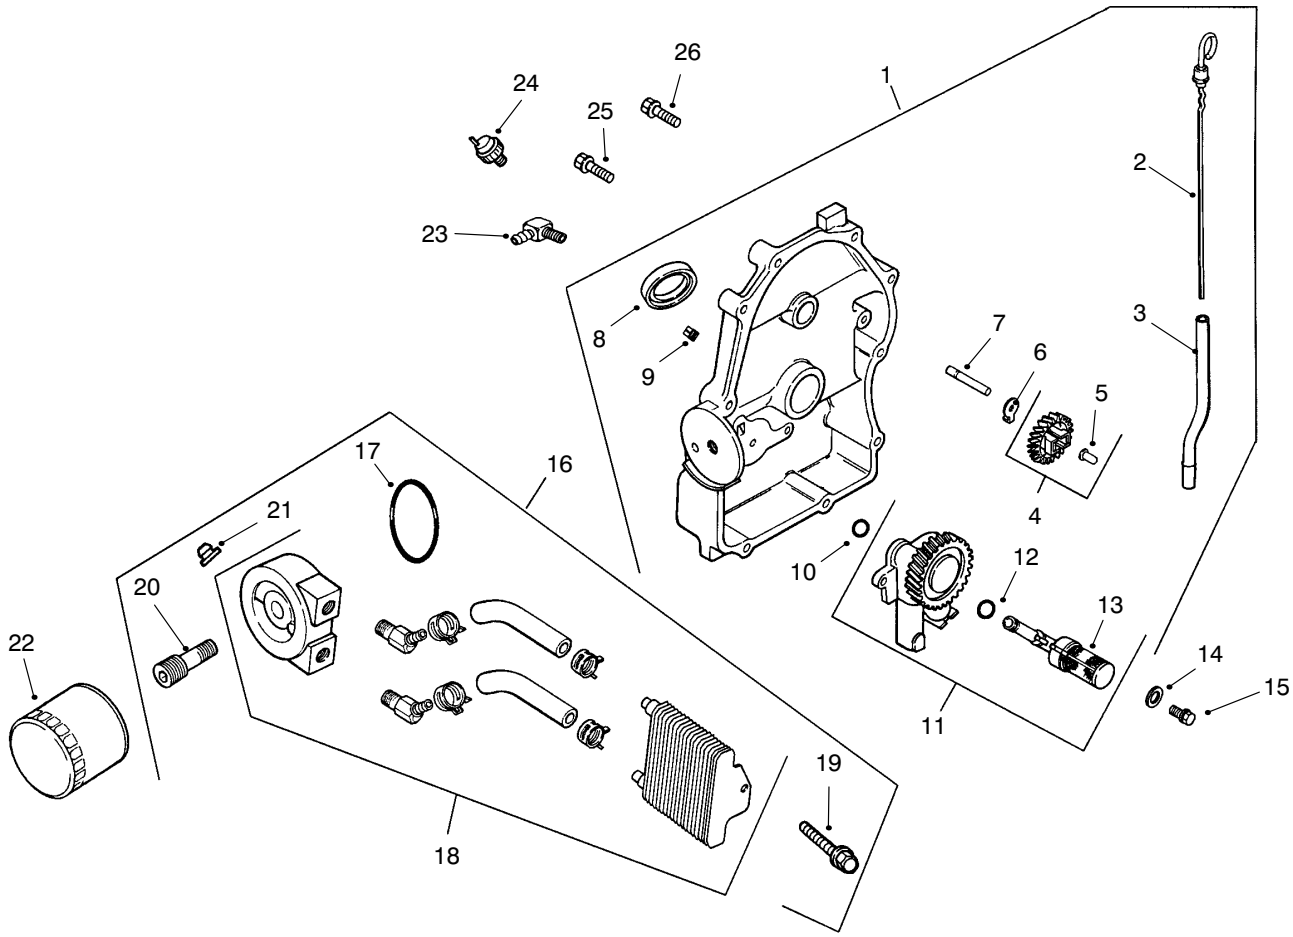

Group 3 – Oil Pan/Lubrication (CH25S 68606 Kohler)

Ref. No.	Part No.	Qty.	Description
1	24 009 83		Plate, closure assembly
		1	(Includes 2–12)
2	24 038 06	1	Dipstick
3	24 123 08	1	Tube, dipstick
4	24 043 12		Kit, governor gear
		1	(Includes 5)
5	12 380 01	1	Pin, governor regulating
6	52 448 02	1	Tab, locking
7	12 144 02	1	Shaft, governor gear
8	52 032 08	1	Seal, oil (PTO end)
9	X–75–23	2	Plug,pipe 1/8”
10	24 153 08	1	O–Ring
11	24 393 10		Oil pump assembly
		1	(Includes 12,13)
12	24 153 01	1	O–Ring, oil pick–up
13	24 381 04	1	Pick–up, oil
14	M–0631005	2	Washer, plain 6 mm
15	M–0645025	2	Screw, hex flange
16	54 755 14	1	Kit, oil cooler (Incl. 17–21)
17	24 253 17	1	O–Ring
18	24 594 15	1	Cooler, oil
19	24 086 12	2	Screw, hex
20	24 136 05	1	Nipple, oil filter
21	24 100 01	2	Nut, plastic
22	52 050 02	1	Filter, oil

Ref. No.	Part No.	Qty.	Description
23	25 155 02	1	Connector
24	24 099 03	1	Switch, pressure
25	24 086 16	9	Screw, hex flange
26	24 086 17	1	Screw, hex flange
*	24 113 25	1	Decal, oil cooler

*Not Illustrated
Obtain Parts From Kohler

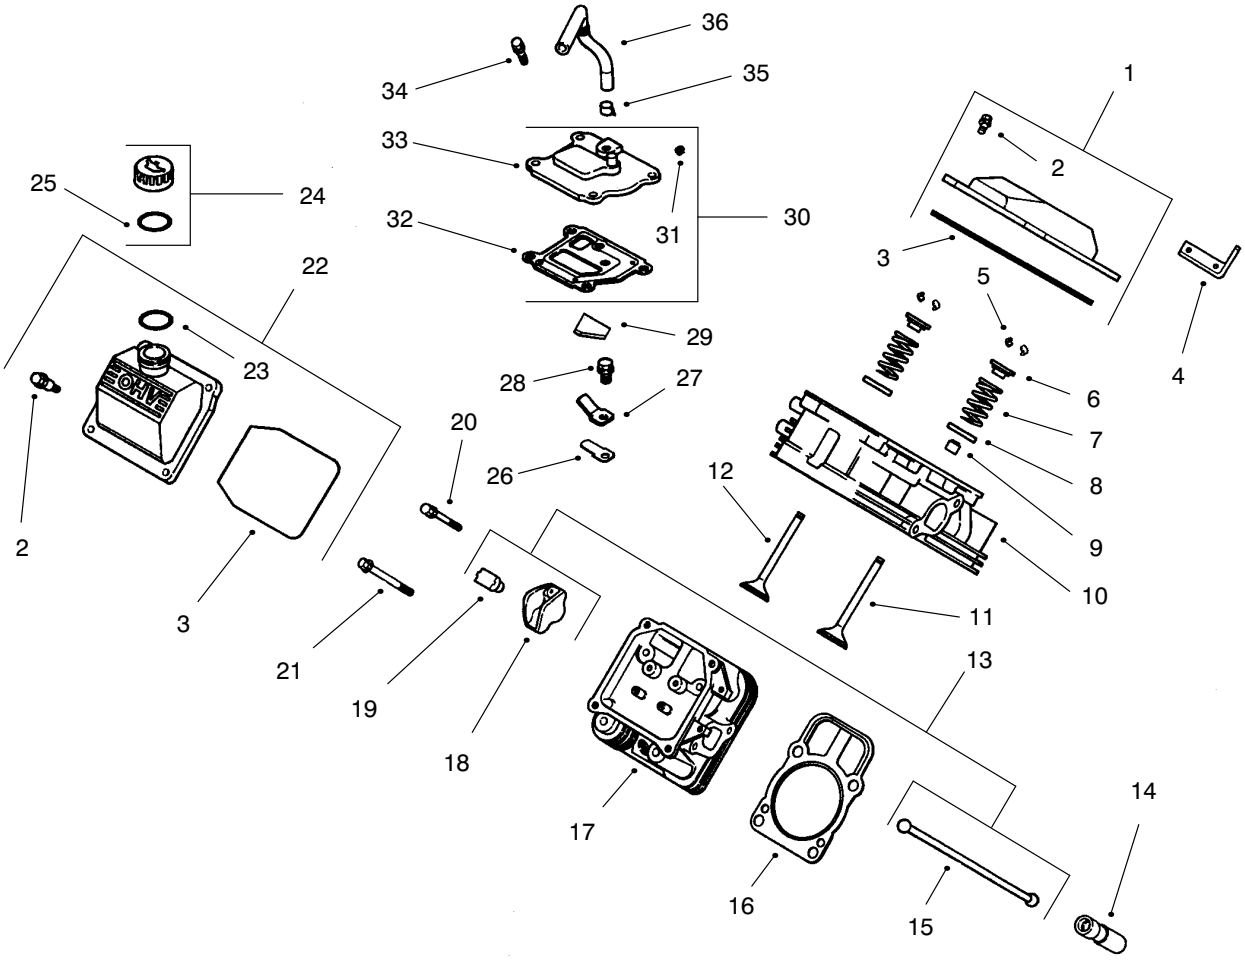

Group 4 – Head/Valve/Breather (CH25S 68606 Kohler)

Ref. No.	Part No.	Qty.	Description
1	24 755 74	1	Kit, valve cover – plain (Includes 2–3)
2	24 086 32	4	Screw, shoulder
3	24 153 16	1	O–Ring, valve cover
4	24 445 01	1	Strap, lifting
5	12 755 03	4	Kit, retainer
6	12 173 01	4	Cap, valve spring
7	24 089 02	4	Spring, valve
8	235011	4	Retainer, spring
9	24 032 05	2	Seal, valve stem
10	24 318 13	1	Head assembly, #1 cylinder
11	24 017 01	2	Valve, intake (Std.)
	24 017 02	2	Valve, intake (.25)
12	24 016 01	2	Valve, exhaust (Std.)
	24 016 02	2	Valve, exhaust (.25)
13	24 755 66	1	Kit, valve train (Includes 15,18,19)
14	12 351 02	4	Lifter, valve
15	24 411 05	4	Rod, push
16	24 041 37	2	Gasket, cylinder head
17	24 318 14	1	Head assembly, #2 cylinder
18	25 186 01	4	Arm, rocker
19	24 599 01	4	Pivot, rocker arm
20	M–0640034	4	Screw, hex. flange

Ref. No.	Part No.	Qty.	Description
21	24 086 44	8	Screw, hex. flange
22	24 755 75	1	Kit, valve cover – oil fill (Includes 2,3,23)
23	24 153 09	1	O–Ring
24	24 755 46	1	Kit, oil fill cap (Includes 25)
25	12 153 03	1	O–Ring, oil fill cap
26	24 402 03	1	Reed, breather
27	12 018 01	1	Retainer, breather reed
28	M–0545010	1	Screw, hex. flange
29	24 050 01	1	Filter, breather
30	24 033 01	1	Kit, breather (Includes 31–33)
31	X–75–23	1	Plug, allen head pipe
32	24 041 23	1	Gasket, breather
33	24 096 02	1	Cover, breather
34	M–0645020	4	Screw, hex. flange
35	X–426–9	1	Clamp, breather
36	24 326 06	1	Hose, breather

Obtain Parts From Kohler

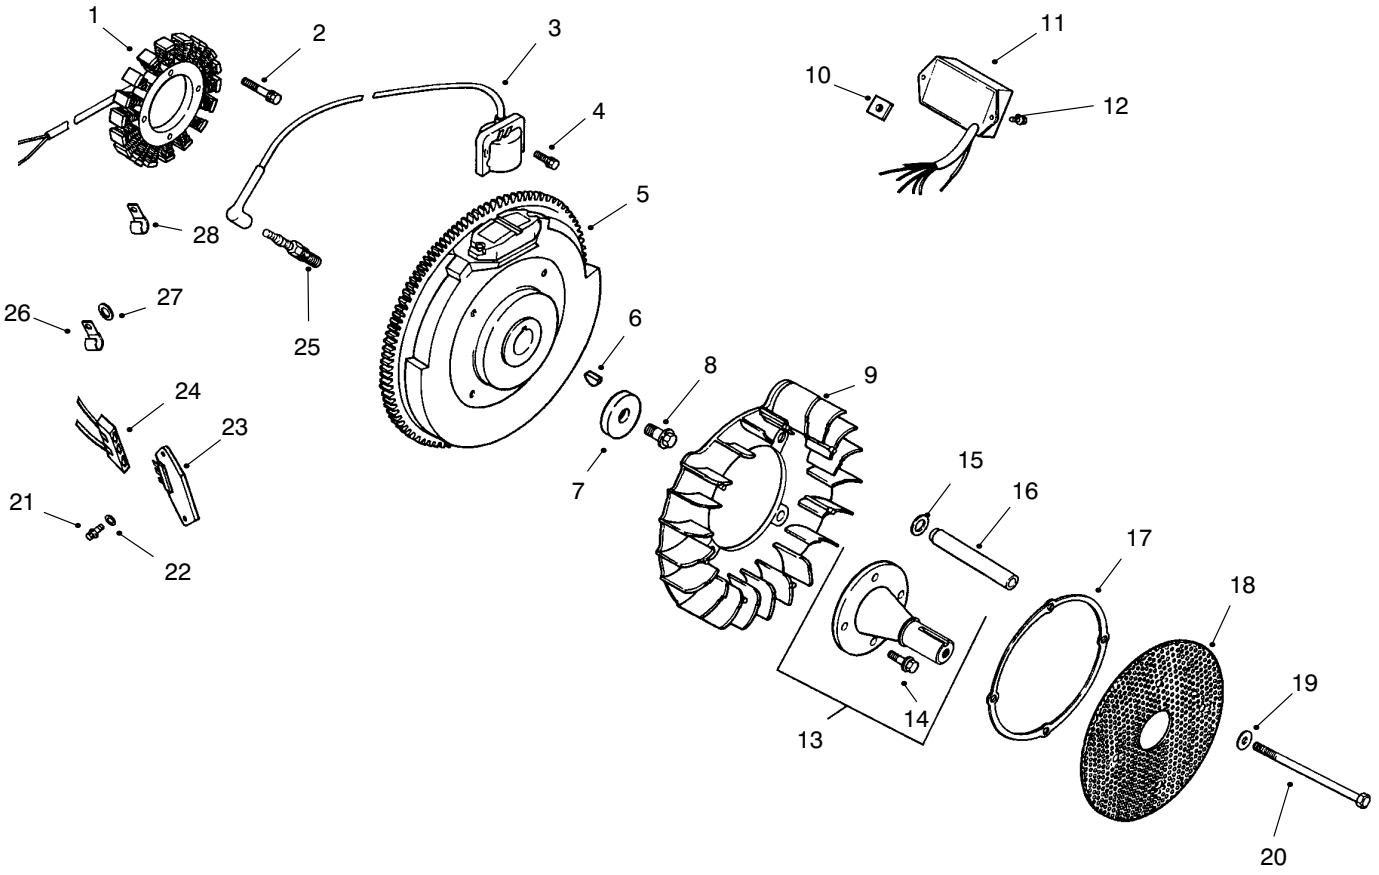

Group 5 – Ignition/Electrical (CH25S 68606 Kohler)

Ref. No.	Part No.	Qty.	Description
1	54 755 09	1	Kit, 15 amp stator (Incl. 24 126 71 bracket)
2	M–0548025	2	Screw, hex. cap
3	24 584 11	2	Module, ignition
4	M–0561025	4	Screw, hex. socket hd.
5	24 025 03	1	Flywheel
6	X–42–15	1	Key
7	12 468 03	1	Washer, plain 3/8”
8	12 086 14	1	Screw, hex flange
9	24 157 03	1	Fan
10	24 100 02	2	Nut, plastic
11	24 584 09	1	Module, spark advance
12	24 086 41	2	Screw, phillips hd.
13	24 755 08	1	Kit, front drive shaft (Includes 14)
14	M–0839025	4	Screw, hex flange
15	24 468 11	4	Washer, spring 10mm
16	24 112 14	4	Spacer
17	24 141 06	1	Ring, support
18	24 162 22	1	Screen, grass
19	X–25–53	4	Washer, plain 1/4”
20	M–0603100	4	Screw, hex
21	24 086 18	2	Screw, phillips hd.
22	X–25–92	2	Washer, plain 3/16
23	25 403 03	1	Rectifier–regulator 15 amp
24	236602	1	Connector
25	12 132 06	2	Spark Plug
26	47 154 01	1	Clip, cable
27	X–25–63	1	Washer, plain 1/4”
28	48 154 02	1	Clip, cable
*	25 518 28	1	Lead, black, (4” – 18 gauge – insulated grip barrel eyelet terminals)
*	24 176 38	1	Harness, wiring
*	24 755 56	1	Kit, wiring (Includes Terminal #25 542 17 & Tie X–468–1
*	24 126 71	1	Bracket, stator wire
*	X–22–11	1	Washer, lock

*Not Illustrated
Obtain Parts From Kohler

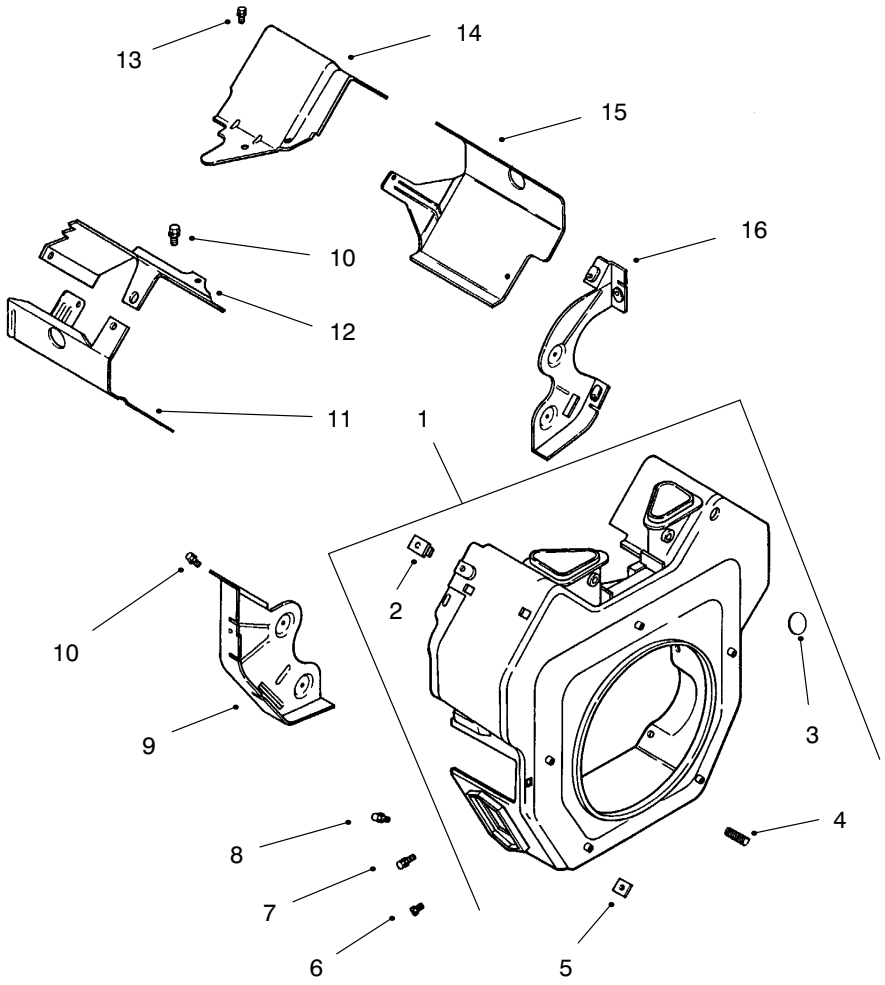

Group 6 – Blower Housing & Baffles (CH25S 68606 Kohler)

Ref. No.	Part No.	Qty.	Description
1	24 027 40	1	Housing, blower (Includes 2–5)
2	24 100 02	2	Nut, plastic
3	25 139 16	1	Button plug
4	25 086 43	1	Screw, set
5	24 100 01	2	Nut, plastic
6	M–0551016	1	Screw, hex. flange
7	M–0545016	5	Screw, hex. flange
8	M–0567020	2	Screw, hex. flange
9	24 146 11	1	Plate, backing – #2 side
10	M–0645016	6	Screw, hex. flange
11	24 063 39	1	Baffle, cyl. barrel–#2 side
12	24 063 17	1	Baffle, valley – #2 side
13	M–0545010	2	Screw, hex. flange
14	24 063 24	1	Baffle, valley – #1 side
15	24 063 30	1	Baffle, cyl. barrel–#1 side
16	24 146 08	1	Plate, backing – #1 side
*	24 113 69	1	Decal, HP

Ref. No.	Part No.	Qty.	Description

*Not Illustrated
Obtain Parts From Kohler

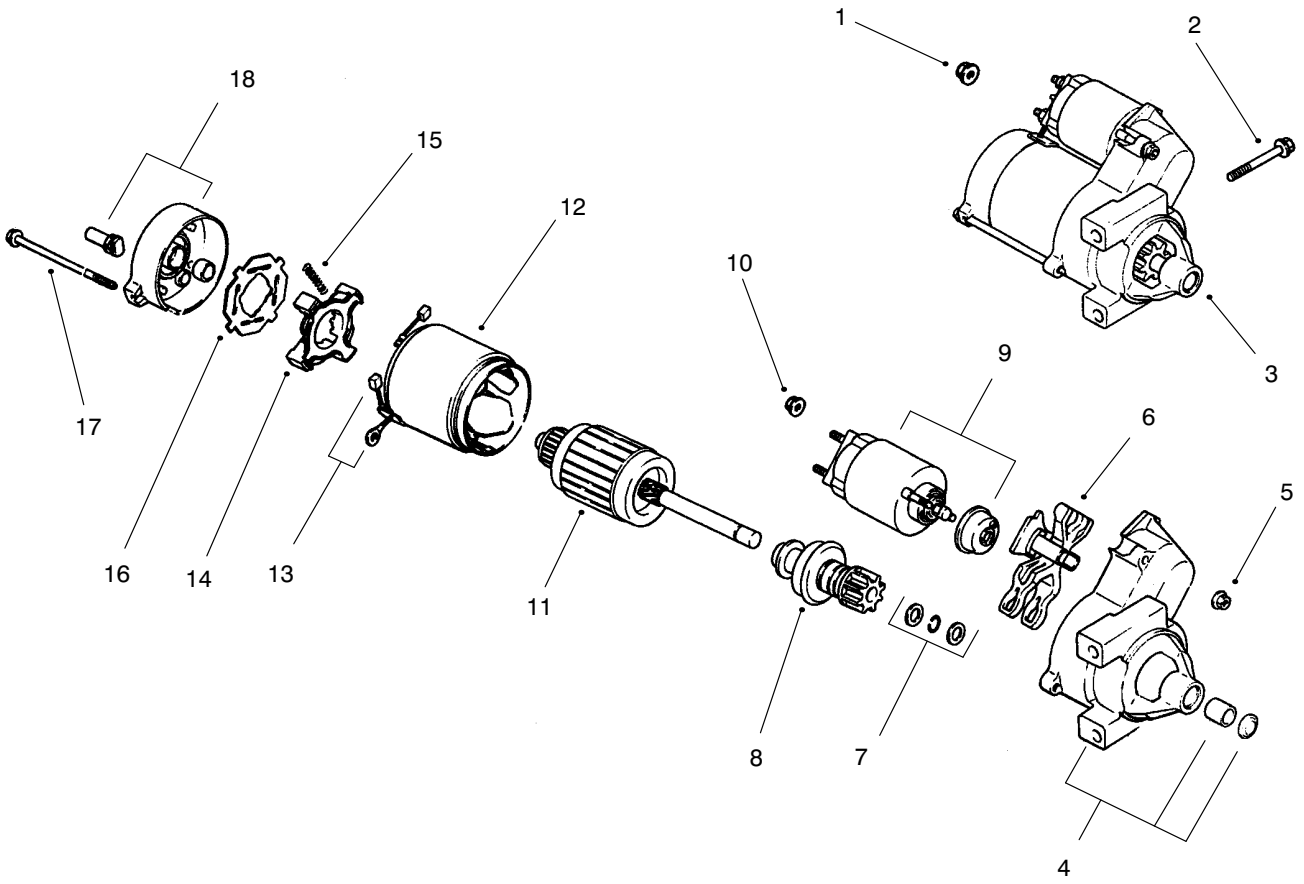

Group 7 – Starting System (CH25S 68606 Kohler)

Ref. No.	Part No.	Qty.	Description
1	M–0841080	1	Nut, hex flange
2	M–0839080	2	Screw, hex. flange
3	24 098 01	1	Starter, solenoid shift assembly (Incl. 4–18)
4	24 081 04	1	Drive, end cap
5	52 100 10	2	Nut, starter
6	12 090 10	1	Lever, starter drive
7	24 755 84	1	Kit, starter repair
8	12 239 01	1	Drive, pinion
9	52 435 02	1	Solenoid
10	52 100 09	1	Nut, starter
11	12 170 04	1	Armature, starter
12	12 471 01	1	Frame
13	52 221 01	1	Kit, brush & spring (Includes 15)
14	52 323 03	1	Holder, brush
15	52 089 09	4	Spring, brush
16	52 168 01	1	Insulator
17	52 211 05	2	Bolt, thru
18	24 301 01	1	Commutator, end cap

Ref. No.	Part No.	Qty.	Description

Obtain Parts From Kohler

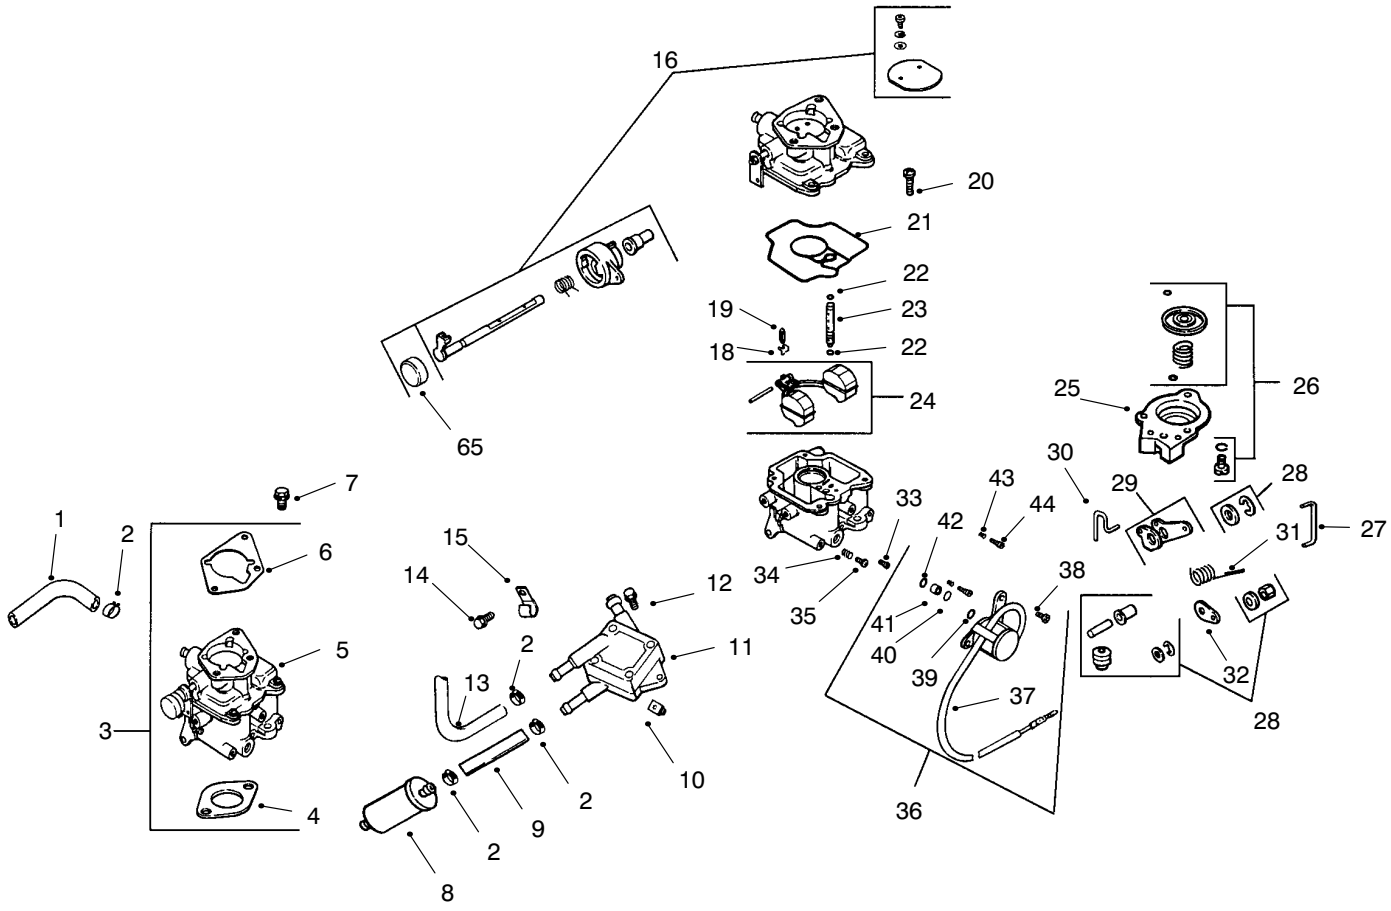

Group 8 – Fuel System (CH25S 68606 Kohler)

Ref. No.	Part No.	Qty.	Description
1	25 353 10	2	Line, fuel – 9”
2	X–426–9	6	Clamp, hose
3	24 853 34	1	Kit, carburetor w/gasket (Includes 4–6)
4	24 041 06	1	Gasket, air cleaner base
†5	24 053 34	1	Carburetor assembly
6	24 041 17	1	Gasket, carburetor
7	M–0651030	2	Screw, hex. flange
8	24 050 02	1	Filter, fuel
9	25 353 15	1	Line, fuel
10	24 100 01	2	Nut, plastic
11	24 393 04	1	Pump, fuel–pulse
12	24 086 12	2	Screw, hex
13	24 353 02	1	Line, fuel 15–1/2”
14	M–0650012	1	Screw, hex flange
15	47 154 01	1	Clip, cable
18	24 154 01	1	Clip, inlet needle valve
19	24 462 01	1	Valve, inlet needle
20	24 086 09	4	Screw, sems pan hd.
21	24 041 09	1	Gasket, carburetor body
22	24 153 02	1	O–Ring, slow jet
23	24 337 29	1	Jet, slow
24	24 757 02	1	Kit, float repair
25	24 081 05	1	Housing, pump
26	24 757 08	1	Kit repair–accelerator pump

Ref. No.	Part No.	Qty.	Description
27	24 079 07	1	Linkage, rod
28	24 757 09	1	Kit repair–accelerator pump diagram
29	24 090 16	1	Lever, rod
30	24 079 06	1	Linkage, rod
31	24 089 27	1	Spring, Linkage
32	24 090 15	1	Lever, Linkage
33	24 337 30	1	Jet, main
34	24 086 10	1	Screw, idle speed adj.
35	24 089 10	1	Spring, idle speed adj.
36	24 757 01	1	Kit, solenoid asm. (Includes 37–42)
37	24 153 06	1	O–Ring, solenoid
38	24 521 01	1	Seat, solenoid
39	24 153 05	1	O–Ring, solenoid
40	24 153 04	1	O–Ring, solenoid
41	24 435 01	1	Solenoid
42	24 086 07	2	Screw, sems pan hd.
43	24 089 11	1	Spring. idle adj.
44	24 368 01	1	Needle, idle adj.6
*	24 757 03	1	Kit, carburetor repair
*	24 757 07	1	Kit, choke repair (Includes 17)
	24 173 02	1	Cap, choke lever

*Not Illustrated
†For Information Only–Not Available Separately
Obtain Parts From Kohler

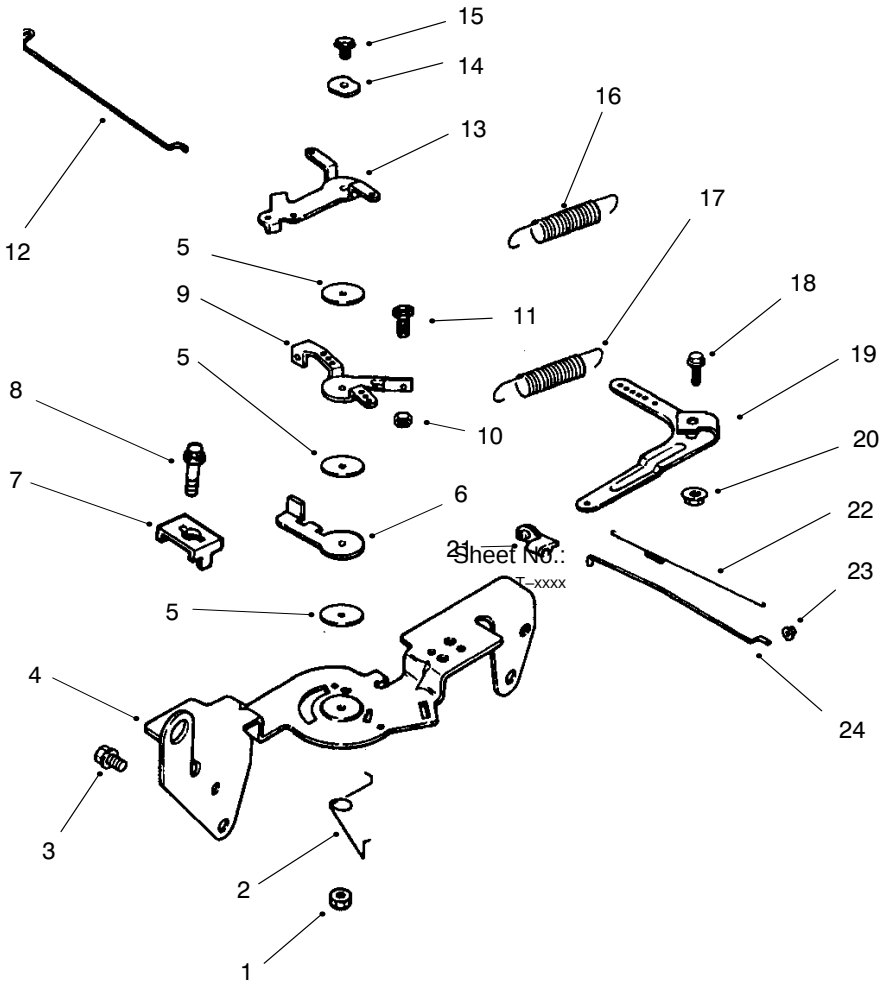

Group 9 – Engine Controls (CH25S 68606 Kohler)

Ref. No.	Part No.	Qty.	Description
1	M–0547050	1	Nut, hex. lock
2	24 089 03	1	Spring, choke return
3	M–0645016	4	Screw, hex. flange
4	24 126 56	1	Bracket, control
5	24 468 01	3	Washer, plain
6	24 090 07	1	Lever, throttle actuator
7	12 237 01	2	Clamp, cable
8	M–0545016	2	Screw, hex. flange
9	24 090 03	1	Lever, throttle control
10	M–0446030	1	Nut, hex
11	M–0401030	1	Screw, hex. cap
12	24 079 02	1	Linkage, choke
13	24 090 05	1	Lever, choke
14	41 468 03	1	Washer, spring
15	M–0545020	1	Screw, hex. flange
16	24 089 38	1	Spring, throttle limiter
17	24 089 15	1	Spring, governor
18	SM–0642025	1	Screw, hex. flange
19	24 090 14	1	Lever, governor
20	M–0641060	1	Nut, hex. flange
21	25 158 11	1	Bushing, linkage retaining
22	24 089 01	1	Spring, linkage
23	25 158 08	1	Bushing, linkage retaining

Ref. No.	Part No.	Qty.	Description
24	24 079 01	1	Linkage, throttle

Obtain Parts From Kohler

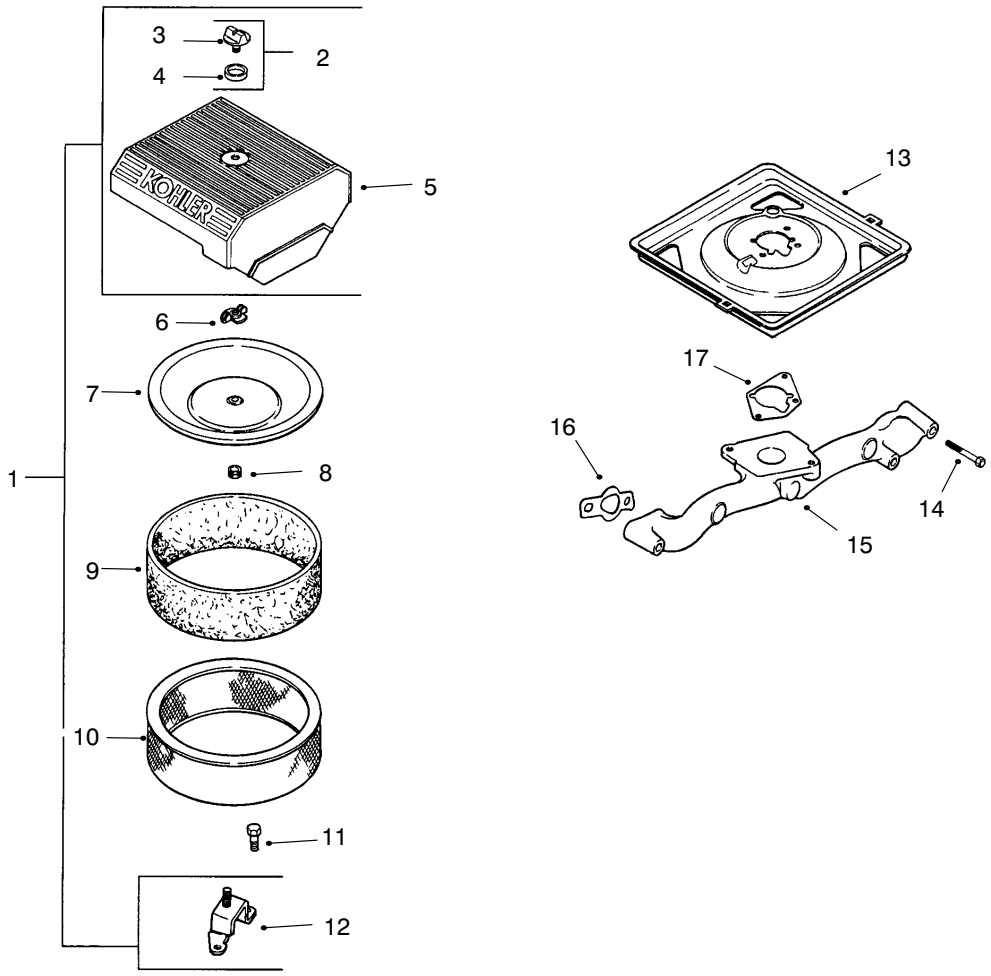

Group 10 – Air Intake/Filtration (CH25S 68606 Kohler)

Ref. No.	Part No.	Qty.	Description
1	24 753 05	1	Kit, air cleaner (Includes 2–5, 12)
2	54 755 01	1	Kit, air cleaner knob (Includes 3,4)
3	25 341 03	1	Knob, cover
4	24 153 15	1	O–Ring
5	24 096 24	1	Cover, air cleaner
6	12 100 01	2	Wing Nut
7	24 096 01	1	Cover, inner air cleaner
8	230046	1	Seal, inner air cleaner
9	24 083 05	1	Precleaner, element
10	24 083 03	1	Element, air cleaner
11	M–0645016	3	Screw, hex flange
12	24 126 43	1	Bracket, air cleaner base
13	24 094 11	1	Base, air cleaner
14	M–0651055	4	Screw, hex flange
15	24 164 14	1	Manifold, intake
16	24 041 01	2	Gasket, intake manifold
17	24 041 06	1	Gasket, air cleaner base

Ref. No.	Part No.	Qty.	Description

Obtain Parts From Kohler

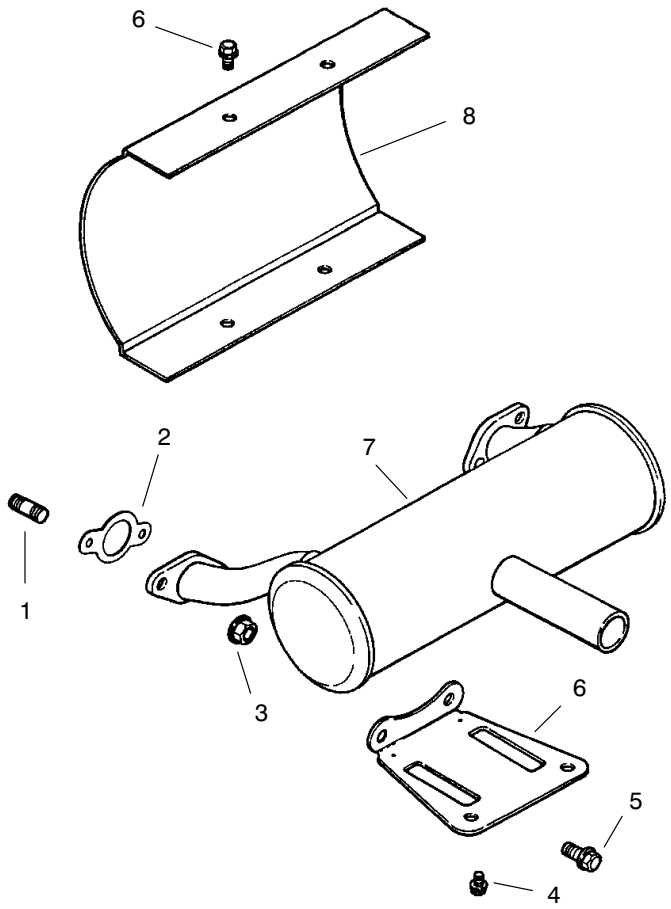

Group 11 – Exhaust (CH25S 68606 Kohler)

Ref. No.	Part No.	Qty.	Description
1	25 072 04	4	Stud
2	24 041 02	2	Gasket, exhaust
3	M–0841080	4	Nut, hex flange
4	M–0650012	4	Screw, hex. flange
5	M–0839020	2	
6	24 126 12	1	Bracket, muffler
7	24 068 17	1	Muffler Canister–Center Outlet
8	24 314 04	1	Shield, heat
*	24 522 85	1	Short Block
*	24 782 01	1	Miniblock
*	54 755 23	1	Gasket Set

Ref. No.	Part No.	Qty.	Description

*Not Illustrated
Obtain Parts From Kohler

Maintenance Record

Date								

Maintenance Record

Date								

Maintenance Record

Date								

TORO®