Form No. 3323–890

Proline 15HP

Midsize Traction Unit

Model No. 30177–200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 1999
All Rights Reserved

Contents

Description	Page
Fuel Tank & Idler Bracket Assembly	3
Transmission & Idler Pulley Assembly	4
Brake, Wheel Pulley & Wheel Assembly	5
Handle & Control Panel Assembly	6
Engine Assembly	7
Clutch Assembly	8
Schematic	9
Crankcase	10
Oil Pan / Lubrication	11
Cylinder Head, Valves And Breather	12
Ignition / Electrical	13
Blower Housing And Baffles	14
Starter System	15
Fuel System	16
Engine Controls	17
Air Cleaner	18
Exhaust	19
Peerless Transmission Model 700–082	20
Maintenance	21–23

Accessories

Description	Model / Part No.
36” Cutting Unit	Model No. 30135
37” Recycler Deck	Model No. 30137
44” Cutting Unit	Model No. 30144
44” Recycler Deck	Model No. 30146
52” Cutting Unit	Model No. 30153
52” Recycler Deck	Model No. 30154
BAGGING KITS	
For 37” Deck (Cloth Bag)	Model No. 30129
For 37” Deck (Steel Hopper)	Model No. 30130
For 44”/52” Decks	Model No. 30128
ADDITIONAL OPTIONS	
Front Weight Kit–37” Decks	Part No. 80–3350
Steerable Sulky	Model No. 30123
Electric Start Kit	Part No. 74–0980

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

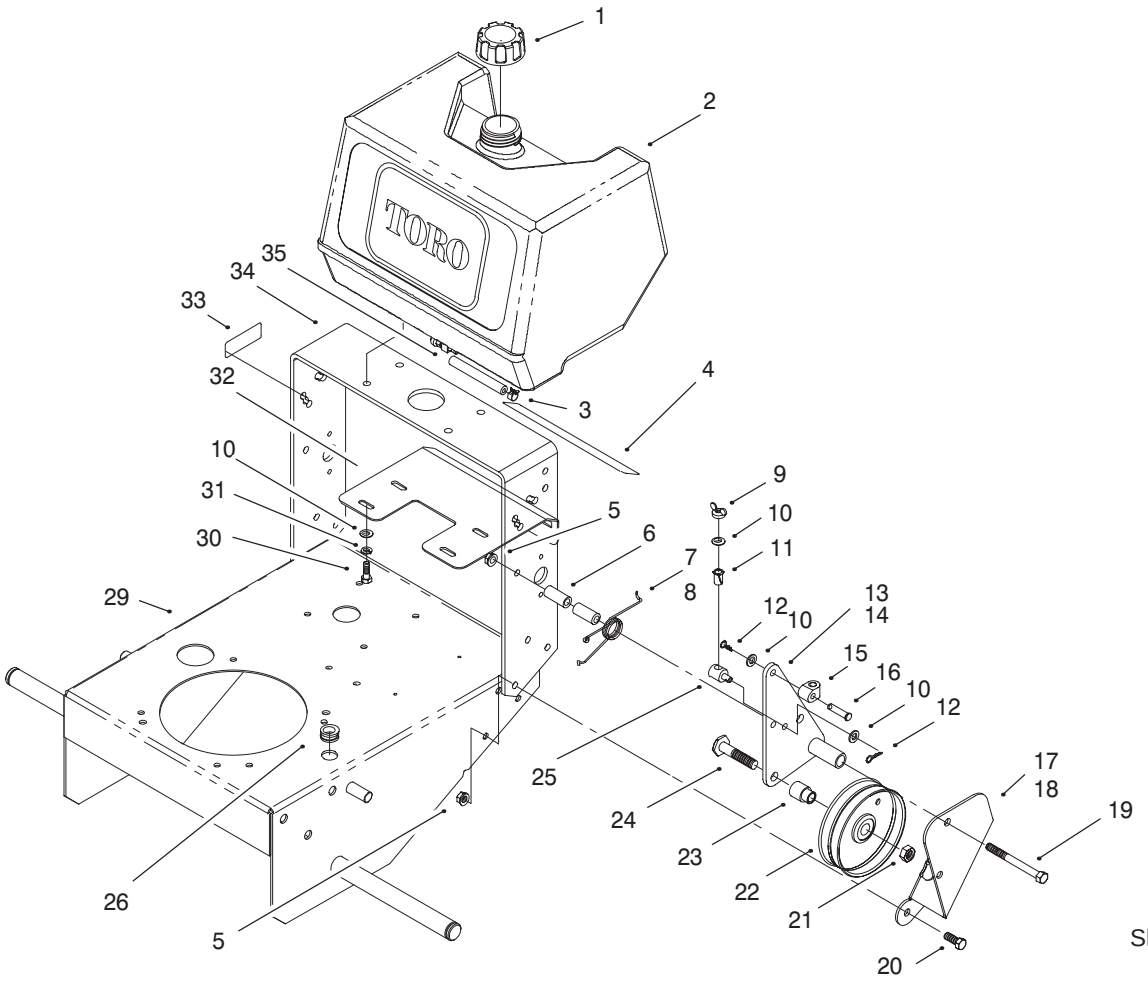

Sheet No.:2

Fuel Tank & Idler Bracket Assembly

Ref. No.	Part No.	Qty.	Description
1	55–3570	1	Gas Cap Assembly
2	95–2802	1	Tank – Fuel
3	2412–98	2	Clamp
4	82–7750	1	Decal–Ground Speed
5	3296–39	8	Nut–Lock, NI
6	74–0040	4	Spacer–Idler Pivot
7	51–4370	1	Spring–RH Torsion
8	51–4380	1	Spring–LH Torsion
9	32103–25	2	Nut–Wing
10	3256–23	10	Washer–Flat
11	52–2890	2	Bushing–Nylon
12	3290–307	4	Hairpin
13	74–0230–01	1	Bracket–RH Idler
14	74–0220–01	1	Bracket–LH Idler
15	74–0521	2	Fitting–Rod
16	283–6	2	Pin–Clevis
17	67–6370–01	1	Bracket–RH Support
18	67–6380–01	1	Bracket–LH Support
19	323–16	2	Screw–HH
20	323–6	6	Screw–HH
21	3296–23	2	Nut–Lock, NI
22	95–2800	2	Pulley – Idler
23	95–2801	2	Spacer – Pulley
24	51–4450	2	Screw–Leveler
25	68–9690	2	Fitting–Rod
26	237–124	1	Grommet

Ref. No.	Part No.	Qty.	Description
29	93–1156–01	1	Frame Wa
30	322–4	4	Screw–HH
31	3253–4	4	Washer–Lock/Sp
32	66–7400–01	1	Plate–Control
33	95–2814	1	Decal – Fuel Shut Off
34	74–0360–01	1	Frame–Rear
35	47–2964	1	Hose–Gas

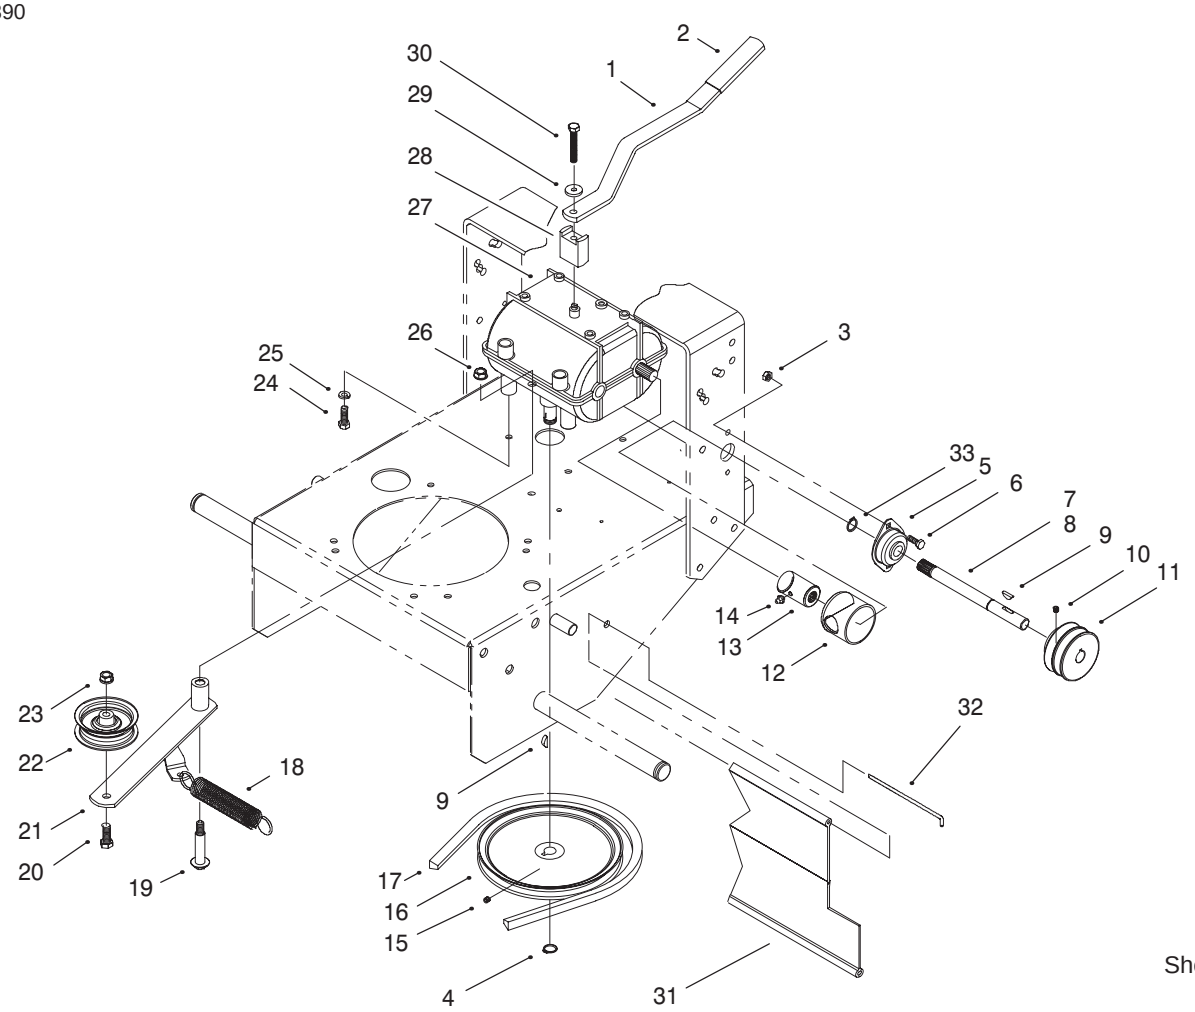

Sheet No.:3

Transmission & Idler Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	74–0320–01	1	Lever–Shift
2	47–1970	1	Grip–Engagement
3	3296–42	4	Nut–Lock
4	32120–64	1	Ring–External Snap
5	51–4270	2	Bearing–External Shaft
6	321–4	4	Screw–HH
7	98–0788	1	Shaft – Extension, RH
8	98–0787	1	Shaft – Extension, LH
9	3257–5	3	Key–Woodruff
10	3245–3	2	Screw–Hex Socket Set
11	74–0480	2	Drive Pulley Assembly
12	51–4220	2	Guard–Coupler
13	98–0789	2	Coupler
14	302–5	2	Fitting–Lube
15	3245–1	1	Screw–Set, HSH
16	51–4190	1	Pulley–Driven
17	26–9671	1	V–Belt
18	68–2190	1	Spring–Extension
19	27–6230	1	Bolt–Wheel
20	323–8	1	Screw–HH
21	16–7509	1	Lever–Idler w/Bushings
22	62–4540	1	Pulley
23	3296–39	1	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description
24	322–2	4	Screw–HH
25	3253–4	4	Washer–Lock/Sp
26	3296–6	1	Nut–Lock, NI
27	98–0791	1	Transmission
28	72–2190	1	Mount–Shift Lever
29	7–5461	1	Spacer
30	329–10	1	Screw–HH
31	95–1526	1	Shield – Trailing
32	95–1529	1	Rod – Shield
33	32151–62	2	Ring–Retaining H D

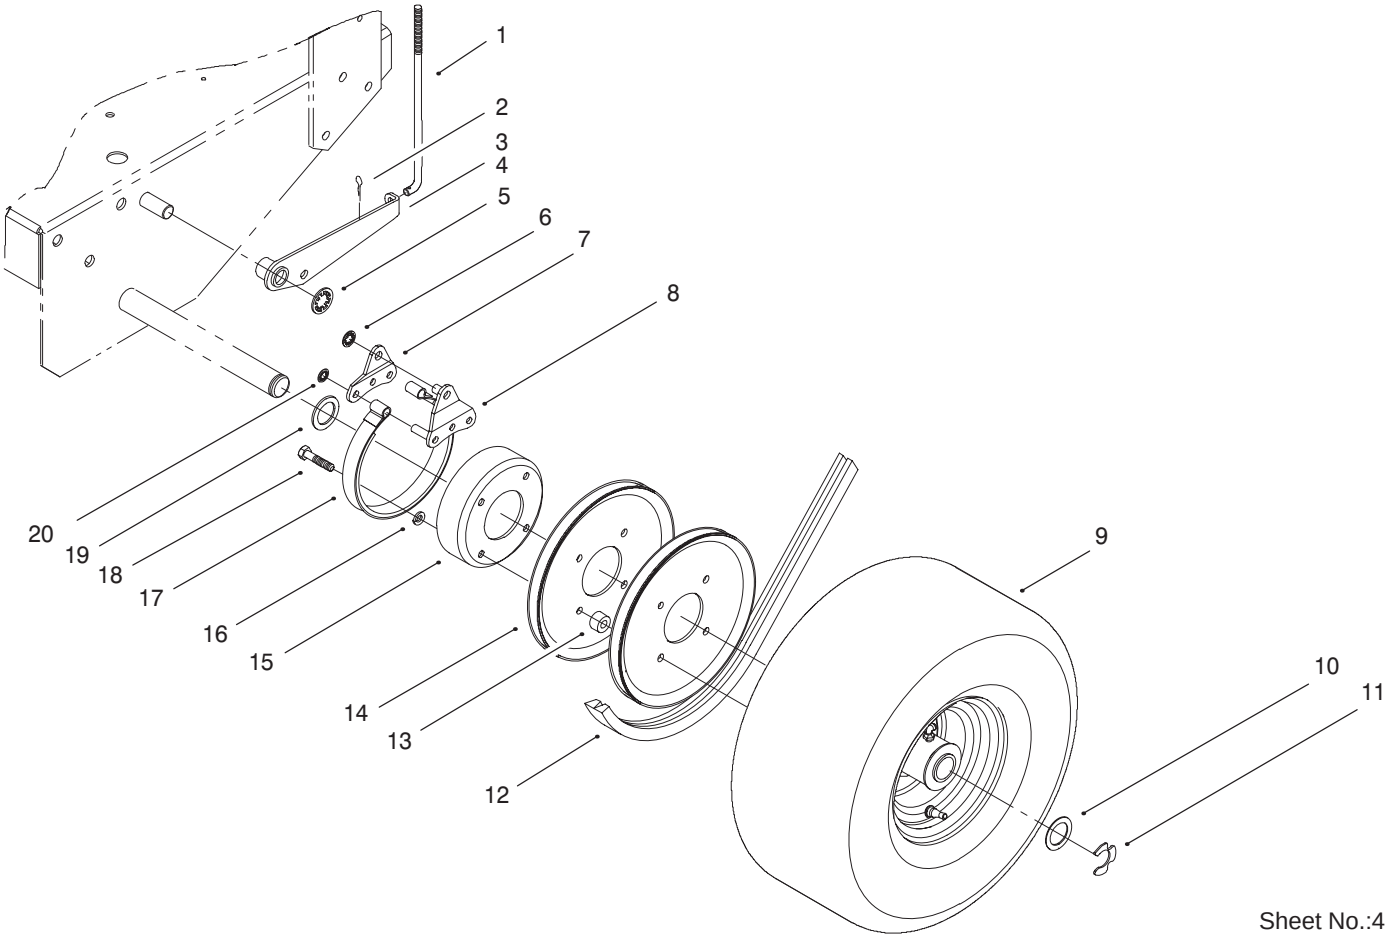

Sheet No.:4

Brake, Wheel Pulley & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	51–4580	2	Rod–Brake
2	3290–307	2	Hairpin
3	51–4600–01	1	Arm–RH Brake
4	51–4610–01	1	Arm–LH Brake
5	32151–40	2	Ring–Retaining
6	32151–56	2	Ring–Retaining, Ext
7	51–4660–01	2	Plate–Brake Link
8	51–4650–01	2	Link–Brake
9	94–9663	2	Assembly – Wheel/Tire
10	10–8110	8	Washer–Thrust
11	32151–91	2	Ring–Retaining
12	51–4290	2	Belt–Drive
13	51–4170	8	Spacer–Pulley
14	51–4160–03	4	Pulley–Wheel
15	51–4180–03	2	Drum–Brake
16	3253–4	8	Washer–Lock/Sp
17	51–4700	2	Band–Brake
18	322–7	8	Screw–HH
19	51–4230	2	Washer–Wheel
20	32151–72	4	Ring–Retaining

Ref. No.	Part No.	Qty.	Description

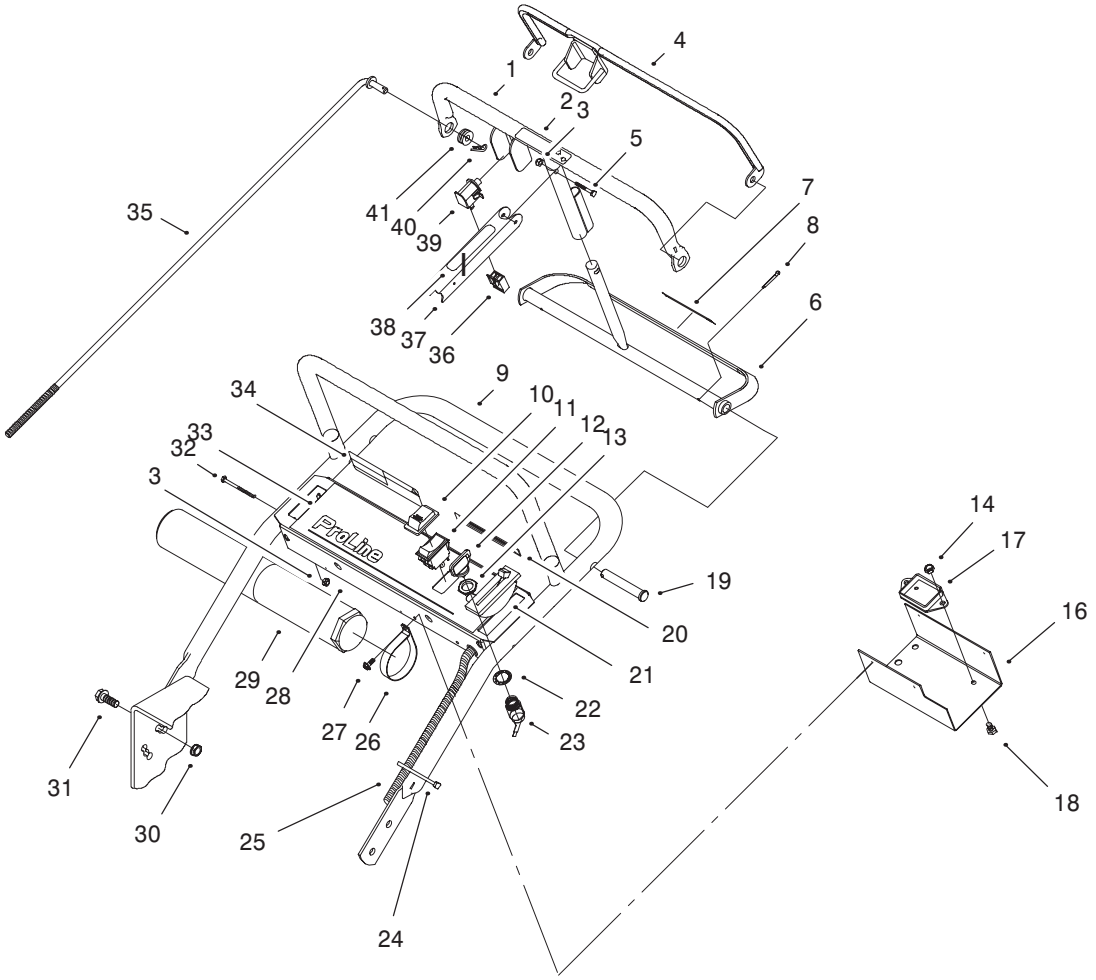

Sheet No.:5

Handle & Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	82–7690–03	1	Bar–Control
2	82–2290	1	Decal – Control Bar
3	3296–2	5	Nut–Lock
4	82–7680–03	1	Bail Wa
5	32105–1	1	Screw–Srh
6	99–8501–03	1	Control–Pivot
7	82–2280	1	Decal–Reverse Handle
8	3272–11	2	Pin–Cotter
9	67–6440–01	1	Handle–Upper
10	82–3820	1	Boot–Switch
11	82–2300	1	Switch
12	63–8360	2	Key–Ignition
13	218–461	1	Nut–HH
14	3296–42	1	Nut–Lock
16	93–1187–03	1	Panel – Bottom
17	100–6170	1	Module– Delay
18	321–2	1	Screw–HH
19	283–55	2	Pin–Clevis
20	65–3090	1	Decal – Instruction
21	74–0630	1	Throttle Control
22	3254–5	1	Washer–Lock/Int
23	29–5560	1	Switch–On Off
24	3290–378	2	Tie–Cable
25	100–3284	1	Harness– Wire,Recoil
26	2412–120	2	R–Clamp

Ref. No.	Part No.	Qty.	Description
27	32104–76	4	Screw–Acorn Slot
28	82–2180–03	1	Panel–Control
29	74–0720	1	Tube–Manual
30	32128–21	4	Nut–HF
31	3234–11	4	Screw–HHF
32	32105–14	4	Screw–Slotted Hd
33	82–7730	1	Decal – Control Panel
34	71–1280	1	Decal – Safety Instruct
35	82–7631	2	Rod–Control
36	218–595	1	Connector–Body
37	51–4850–03	1	Lever–Parking Brake
38	52–2010	1	Decal–Parking Lever
39	82–2190	1	Switch–Bail
40	3290–307	2	Hairpin
41	237–141	2	Grommet–Rubber

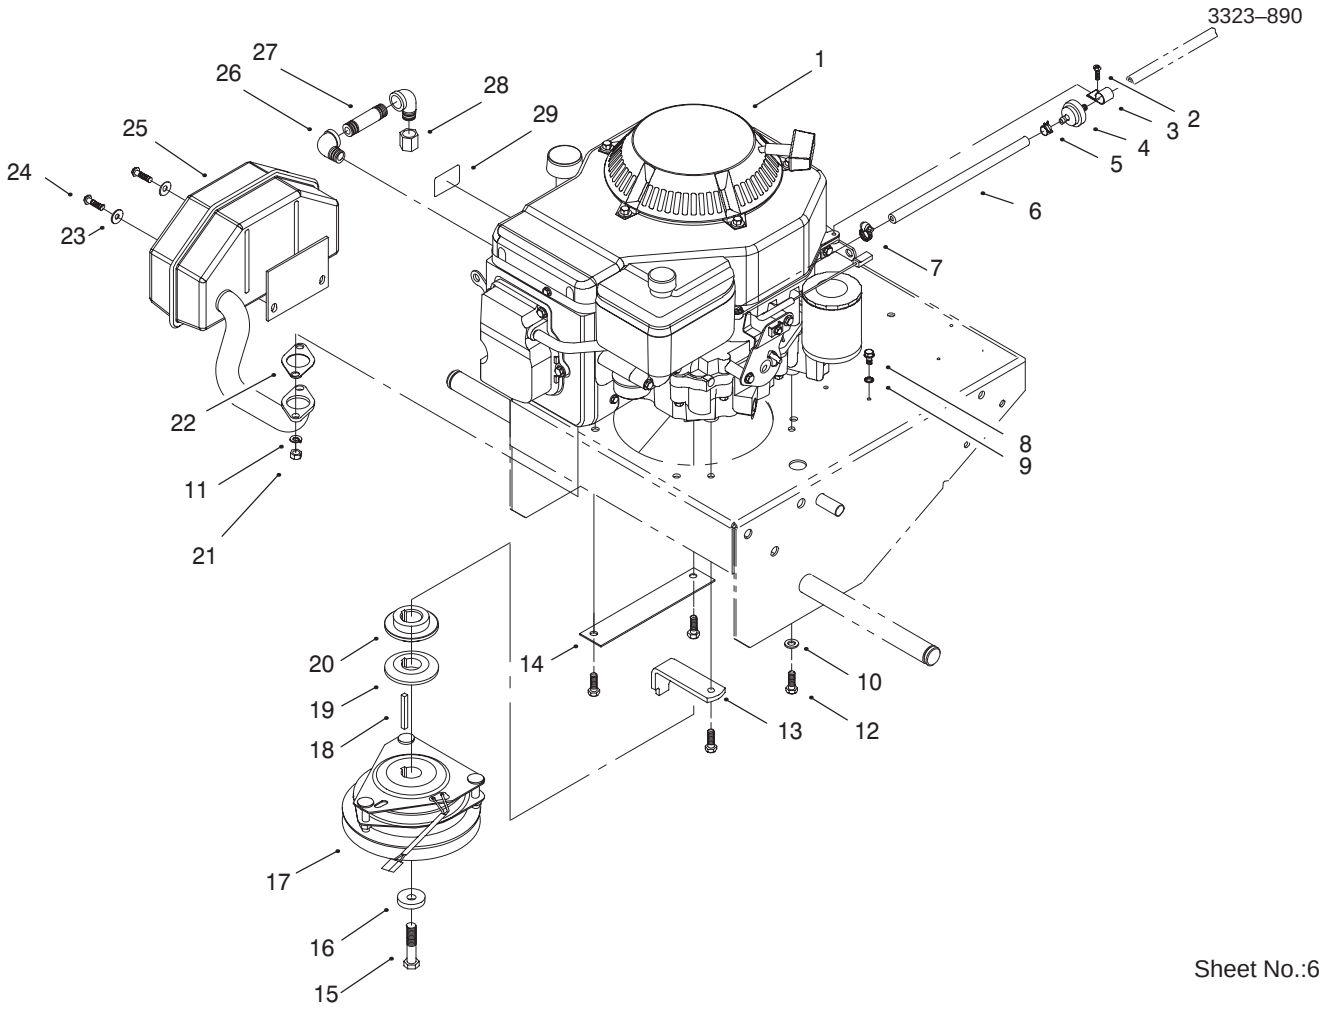

Sheet No.:6

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1		1	Engine – 15 Kohler
2	32144–19	1	Screw–Thread Form
3	2412–87	1	Clamp–Cable
4	56–6360	1	Filter–Fuel
5	2412–98	1	Clamp
6	47–2982	1	Gas Hose
7	2412–108	1	Clamp–Worm
8	12–3270	1	Screw
9	3255–7	1	Washer–Lock/Ext
10	3256–23	1	Washer–Flat
11	3253–4	2	Washer–Lock/Sp
12	33114–025	4	Screw–HH
13	51–4540–03	1	Retainer–Clutch
14	74–0930–01	1	Guard – Pulley
15	3212–9	1	Screw–HH
16	112843	1	Washer
17	54–3200	1	Clutch/Brake
18	608006	1	Key
19	74–0050	1	Sheave–Lower Half
20	74–0060	1	Sheave–Upper Half
21	93–7034	2	Nut–Muffler (w/Engine)
22	93–7032	1	Gasket–Exhaust (w/Engine)
23	3256–78	2	Washer–Flat

Ref. No.	Part No.	Qty.	Description
24	93–7033	2	Screw–Muffler (w/Engine)
25	95–5517	1	Muffler F/W
26	74–0950	2	90° Street Elbow
27	289–20	1	Nipple–Pipe
28	288–4	1	3/8–18 Pipe Cap
29	63–8440	1	Decal – Hot Surface

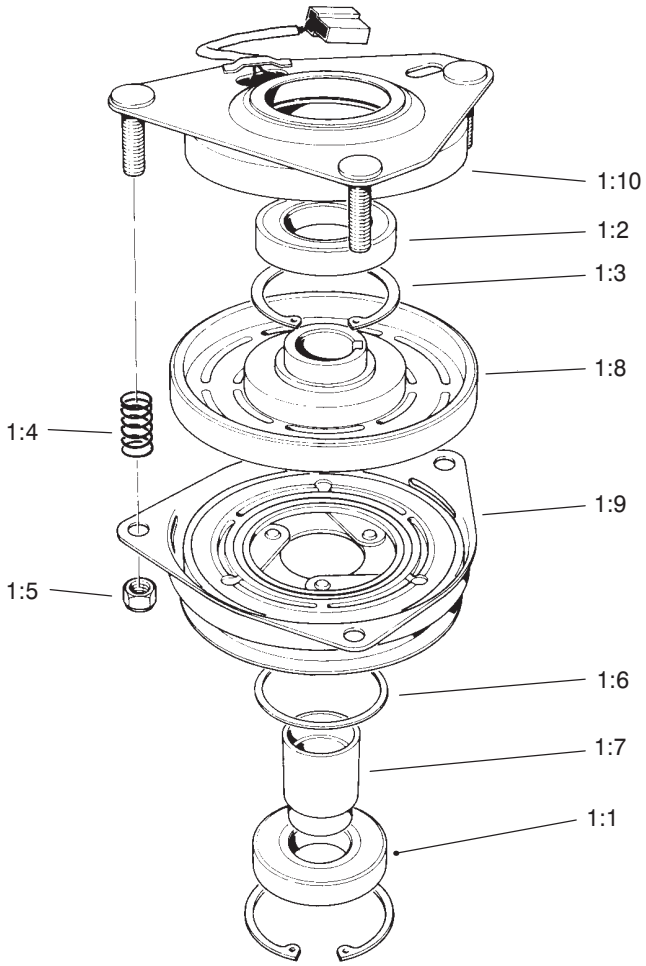

Sheet No.:A1

Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1		1	Deck Clutch
1:1	251–291	1	Pulley Brg
1:2	251–292	1	Field Brg
1:3	44–8310	2	Retaining Ring
1:4	44–8320	3	Spring
1:5	3296–6	3	Nut–Lock, NI
1:6	44–8330	1	Pulley Brg Spacer
1:7	44–8340	1	Bearing Collar
1:8	44–8360	1	Field Coil,Rotor/Brg ASM
1:9	44–8370	1	Armature/Pulley/Brg
1:10	54–0230	1	Field ASM/Brg

Ref. No.	Part No.	Qty.	Description

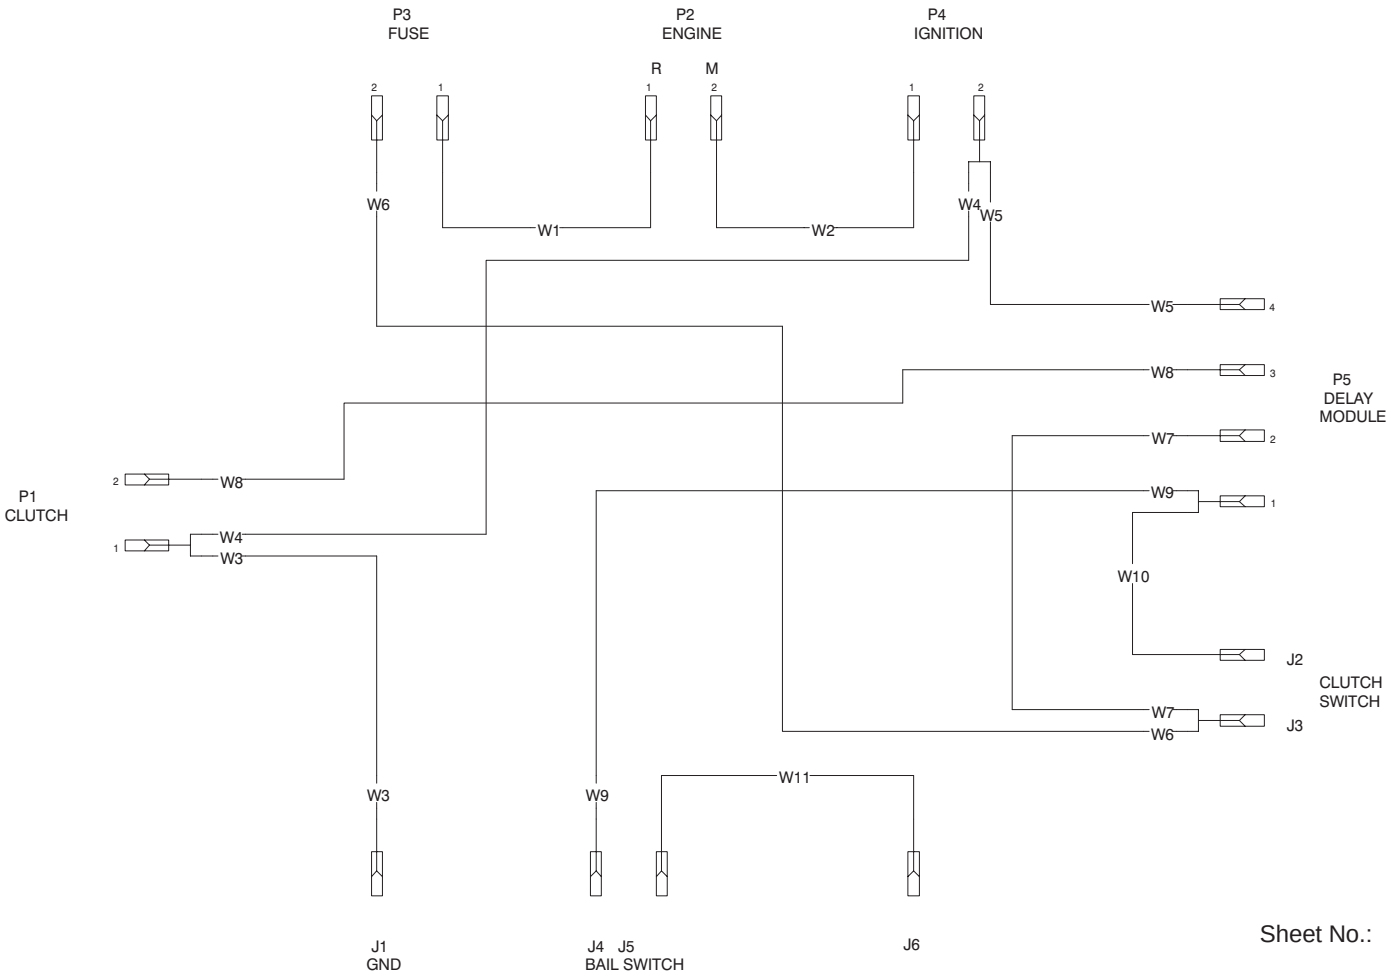

Sheet No.:

Schematic Assembly

Ref. No.	Part No.	Qty.	Description

Ref. No.	Part No.	Qty.	Description

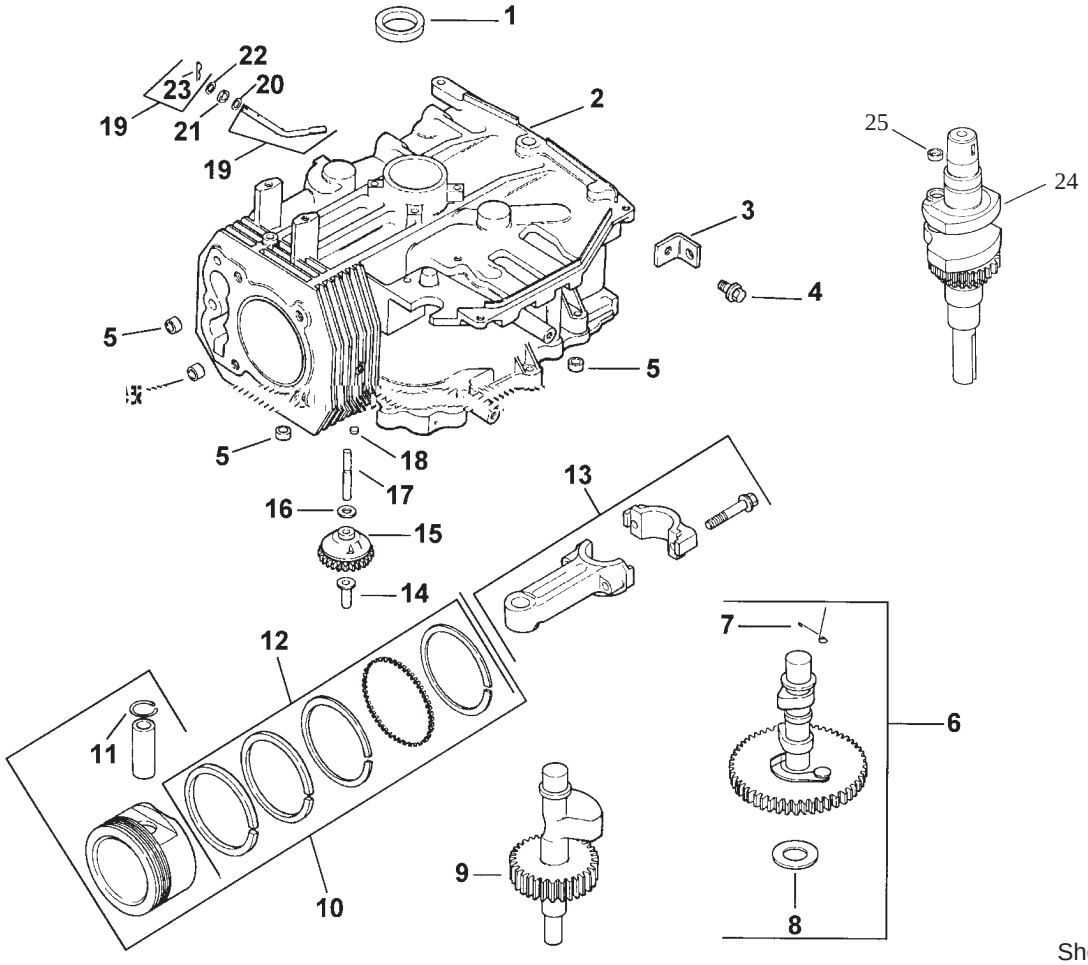

Sheet No.: 2 01

Crankcase

Ref. No.	Part No.	Qty.	Description
1	12 032 03	1	Seal–Crankshaft
2	12 522 18	1	Shortblock
3	12 445 02	1	Strap–Lifting
4	M–0839025	1	Screw M8x1.25x22
5	12 380 17	4	Dowel–Locating
6	12 755 49	1	Kit–Camshaft INC 7–8
7	12 089 31	1	Spring–Actuating
8	12 422 07	A/R	Shim–Camshaft A/R
8	12 422 08	1	Shim–Camshaft A/R
8	12 422 09	A/R	Shim–Camshaft A/R
8	12 422 10	A/R	Shim–Camshaft A/R
8	12 422 11	A/R	Shim–Camshaft A/R
8	12 422 12	A/R	Shim–Camshaft A/R
8	12 422 13	A/R	Shim–Camshaft A/R
9	12 144 27	1	Shaft–Balance
10	12 847 07	1	Set Piston w/Ring STD
10	12 847 08	1	Set–Piston w/Ring .25
10	12 847 09	1	Set–Piston w/Ring .50
11	12 018 02	2	Retainer–Piston Pin
12	12 108 07	1	Ring Set STD
12	12 108 08	1	Ring Set .25
12	12 108 09	1	Ring Set .50
13	12 067 05	1	Rod Connecting STD
13	12 067 06	1	Rod Connecting .25

Ref. No.	Part No.	Qty.	Description
14	12 380 01	1	Pin–Governor Regulating
15	12 043 05	1	Gear–Governor ASM
16	M–0631005	1	Washer–Governor
17	12 144 02	1	Shaft–Governor Gear
18	52 139 09	1	Plug–Cup
19	12 755 64	1	Kit – Shaft–Governor Cross (Incl. Ref.#23)
20	X–25–102	1	Washer–Flat
21	12 032 01	1	Seal–Governor Shaft
22	M–0631015	1	Washer–Governor Shaft
23	12 154 05	1	Clip – Hitch Pin
24	12 014 30	1	Crankshaft ASM
25	12 139 01	1	Plug–Cup
*	12 030 02	1	Bearing – Crankshaft 0.25
*	12 030 03	1	Bearing – Crankshaft 0.50
*	12 755 82	1	Set – Gasket

* Not illustrated

ENGINE KOHLER MODEL NO. CV15T Spec 41560

Obtain Parts From Kohler

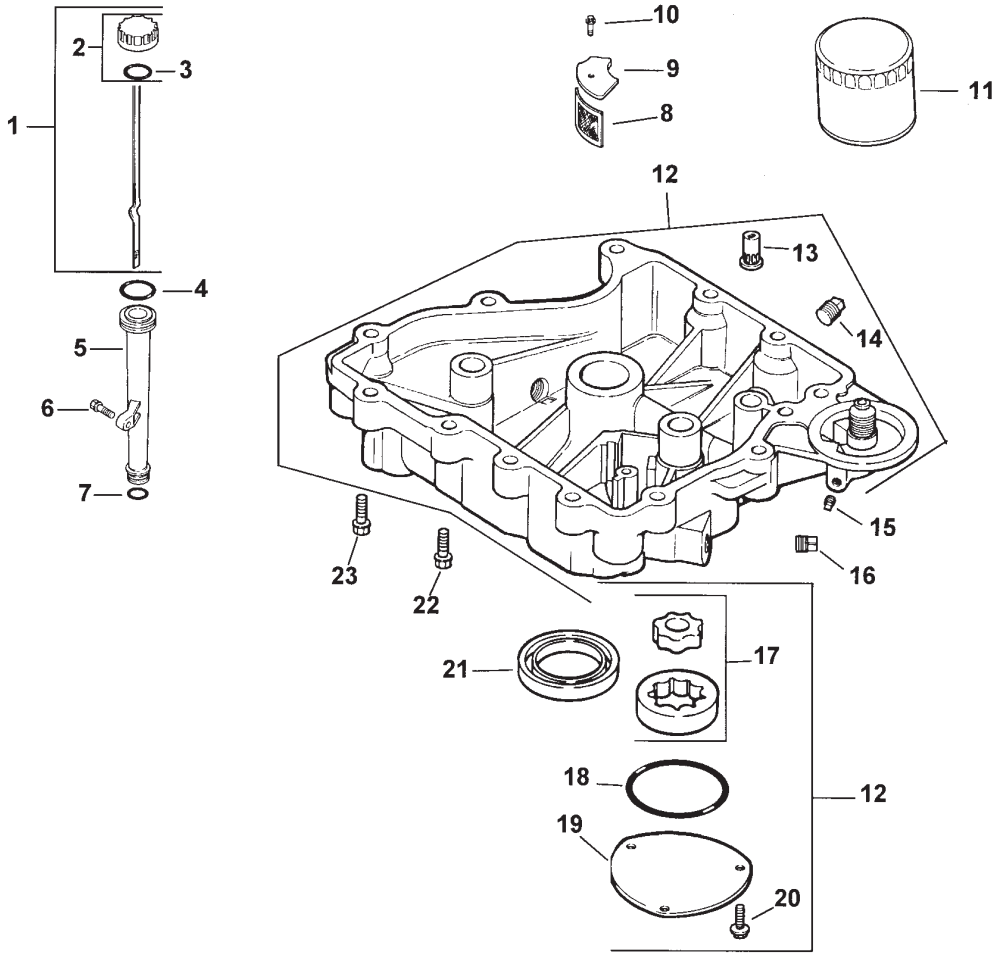

Sheet No.: 2 02

Oil Pan / Lubrication

Ref. No.	Part No.	Qty.	Description
1	12 038 01	1	Dipstick INC 2–3
2	25 755 13	1	Kit–Oil Cap INC 3
3	12 153 03	1	O Ring–Fill Cap
4	12 153 02	1	O Ring–Upper Fill Tube
5	12 123 04	1	Tube–Oil Fill
6	M–0545020	1	Screw M5x0.8x20
7	12 153 01	2	O Ring–Lower Fill Tube
8	25 162 07	1	Screen–Oil
9	12 096 03	1	Cover–Oil Pickup Screen
10	M–0545016	1	Screw M5x0.8x16
11	52 050 02	1	Filter–Oil
12	12 199 45	1	Pan – Oil (Incl. Ref. #13, 14, 17–20)
13	25 462 09	1	Valve – Oil Pressure
14	X–75–2	2	Plug–1/4nptf
15	X–75–1	2	Plug–1/8nptf
16	X–75–10	2	Plug–SH 3/8 NPTF
17	12 393 01	1	Pump–Oil
18	12 153 06	1	O Ring–Oil Pump Cover
19	12 096 34	1	Cover–Oil Pump
20	M–0545016	3	Screw M5x0.8x16
21	12 032 03	1	Seal–Crankshaft
22	24 086 16	11	Screw–M8X1.25X45
23	24 068 17	1	Screw–M5X1.25X45

ENGINE KOHLER MODEL NO. CV15T Spec 41560
Obtain Parts From Kohler

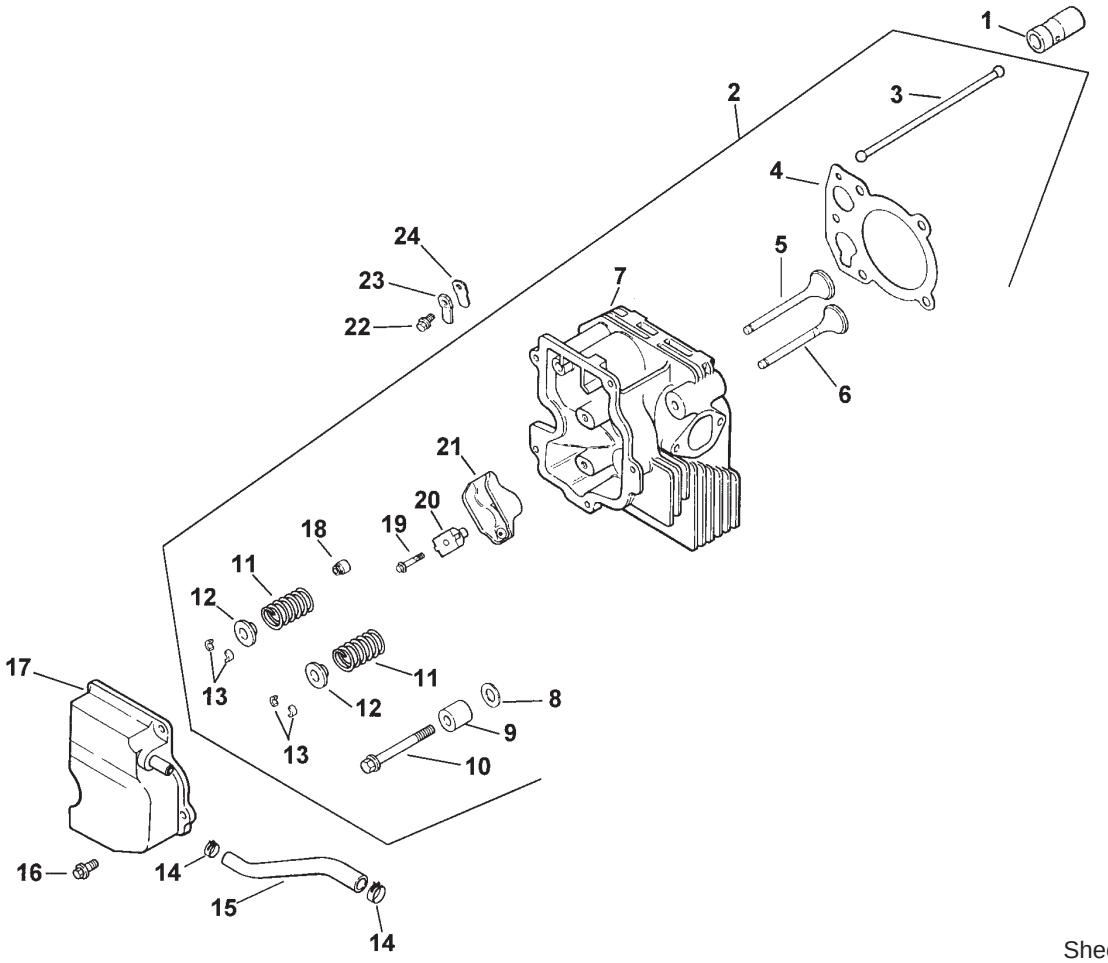

Sheet No.: 2 03

Cylinder Head, Valves And Breather

Ref. No.	Part No.	Qty.	Description
1	12 351 02	2	Lifter–Valve
2	12 755 81	1	Kit–Cylinder Head
3	12 411 01	2	Rod–Push
4	12 041 10	1	Gasket–Cylinder Head
5	12 017 01	1	Valve–Intake STD
5	12 017 02	1	Valve–Intake .25
6	12 016 01	1	Valve–Exhaust STD
6	12 016 02	1	Valve–Exhaust .25
7	12 318 19	1	Head – Cylinder
8	12 468 05	1	Washer–Flat
9	12 112 13	1	Spacer–Head Bolt Exhaust
10	12 086 15	5	Screw M10x1.5x80
11	12 089 01	1	Spring–Valve
12	12 173 01	2	Cap–Valve Spring
13	12 755 03	2	Kit–Retainer
14	X–426–9	2	Clamp–Hose
15	12 326 03	1	Hose–Breather
16	M–0645020	3	Screw–HH M6x1.0x20
17	12 096 07	1	Cover–Valve w/Nipple
18	24 023 05	1	Seal–Valve Spring
19	M–0640034	2	Screw M6x1.0x34
20	12 599 03	2	Pivot – Rocker Arm
21	25 186 01	2	Arm–Rocker
22	M–0545010	1	Screw M5x0.8x10
23	12 018 01	1	Retainer–Breather Reed
24	12 402 02	1	Reed–Breather

ENGINE KOHLER MODEL NO. CV15T Spec 41560
Obtain Parts From Kohler

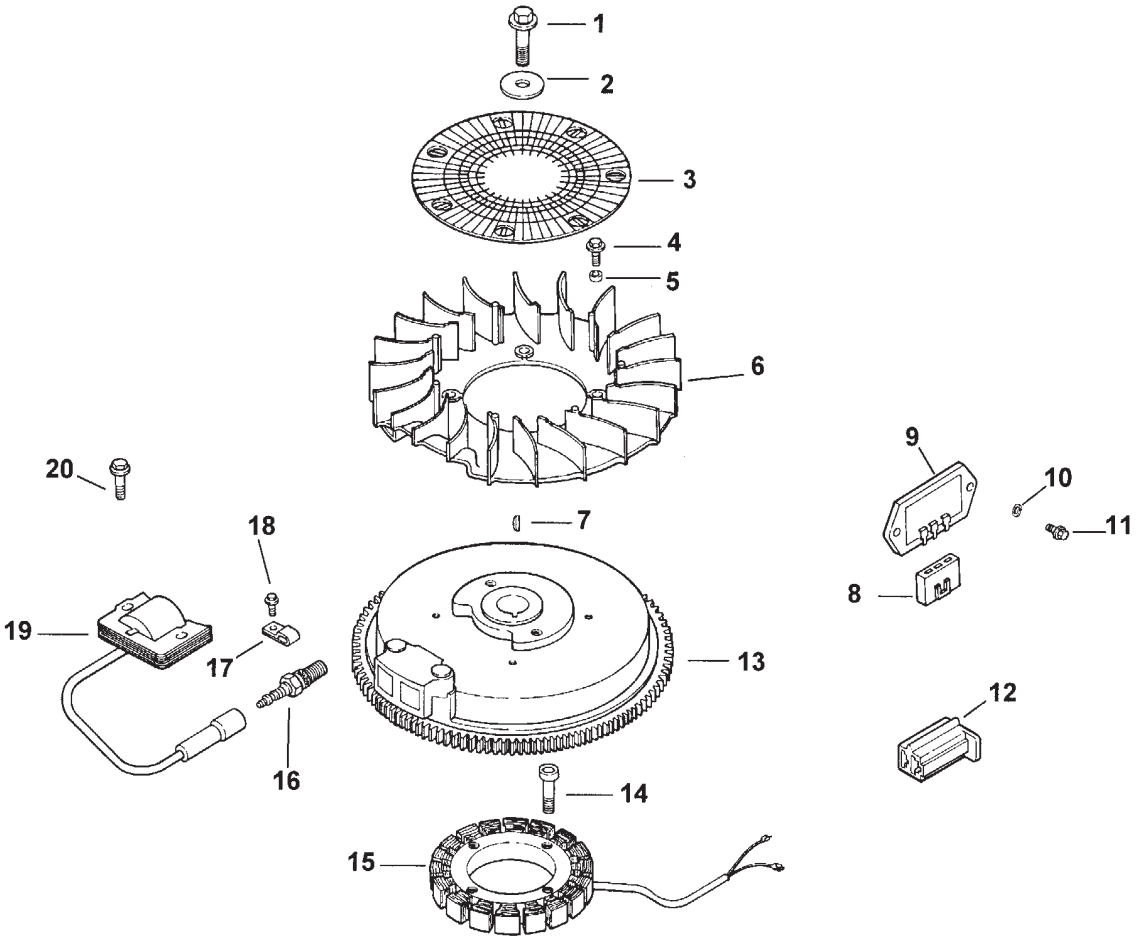

Sheet No.: 2 04

Ignition / Electrical

Ref. No.	Part No.	Qty.	Description
1	12 086 14	1	Screw–Flywheel Mounting
2	12 486 03	1	Washer–Flat
3	12 162 03	1	Screen–Grass
4	M–0639016	4	Screw M6x1.0x16
5	12 112 01	4	Spacer–Fan
6	12 157 02	1	Fan
7	X–42–15	1	Key
8	236602	1	Connector–Regulator
9	12 403 01	1	Rectifier–Unregulated
10	X–22–11	2	Washer – Lock
11	M–0639016	2	Screw M6x1.0x16
12	41 155 03	1	Connector
13	12 025 33	1	Flywheel ASM
14	M–0548025	4	Screw M5x0.8x25
15	54 755 09	1	Kit – Stator–15 Amp (Incl.Bracket P/N #24 126 71)
16	12 132 02	1	Spark Plug
17	X–728–1	2	Clip–Kill Lead
18	M–0545010	1	Screw M5x0.8x10
19	12 584 02	1	Module–Ignition
20	M–0545020	2	Screw M5x0.8x20
*	X–25–5	1	Washer
	12 518 01	1	Lead–White
*	25 518 05	1	Lead–Black
*	25 518 29	1	Lead–Black
*	24 126 71	1	Bracket – Stator Wire

* Not illustrated

ENGINE KOHLER MODEL NO. CV15T Spec 41560
Obtain Parts From Kohler

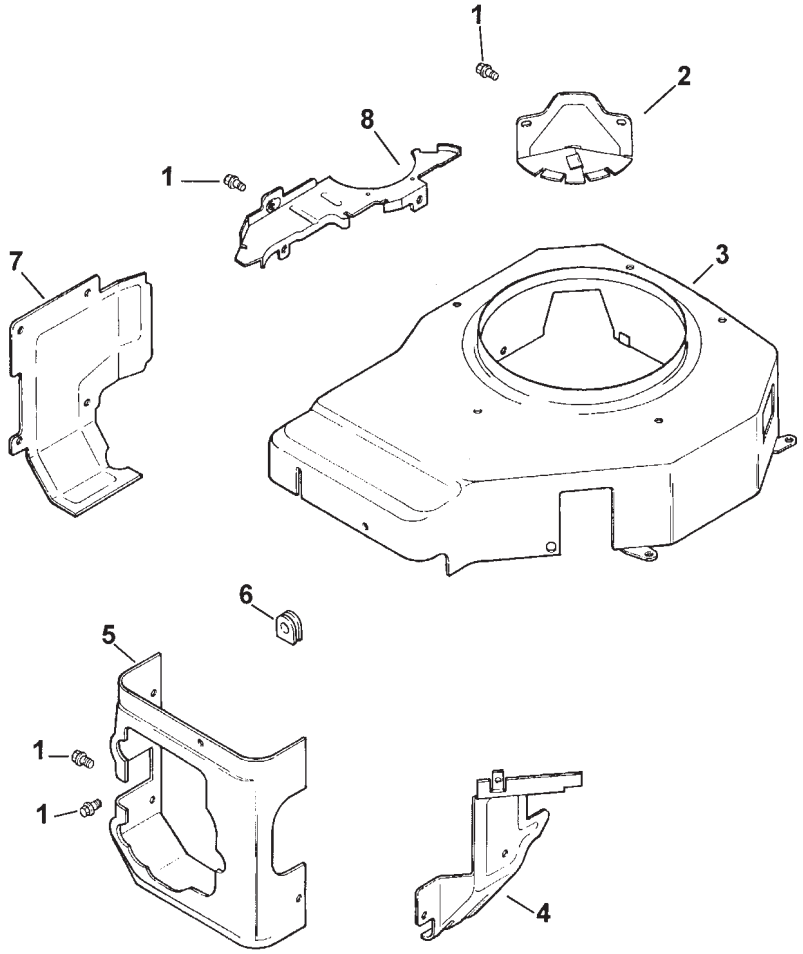

Sheet No.: 2 05

Blower Housing And Baffles

Ref. No.	Part No.	Qty.	Description
1	M–0545010	15	Screw M5x0.8x10
2	12 096 29	1	Cover–Starter
3	12 027 37	1	Housing–Blower
4	12 063 05	1	Baffle–Carburetor
5	12 063 08	1	Baffle–Cyl. Head
6	12 313 03	1	Grommet–Blower
7	12 063 01	1	Baffle–Cylinder
8	12 146 07	1	Plate–Blower Housing
*	12 133 67	1	Decal–Hoursepower

Ref. No.	Part No.	Qty.	Description

* Not illustrated
ENGINE KOHLER MODEL NO. CV15T Spec 41560
Obtain Parts From Kohler

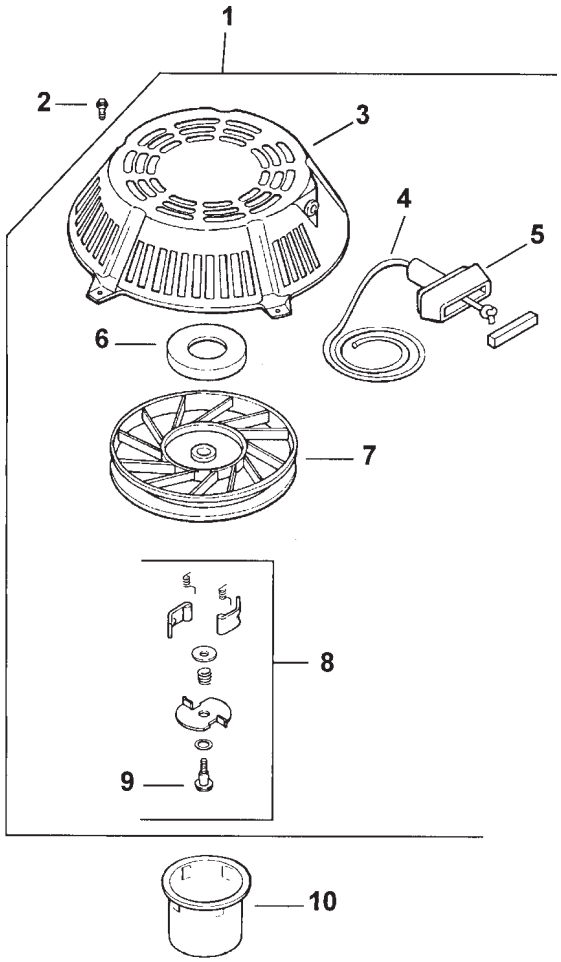

Sheet No.: 2 06

Starter System

Ref. No.	Part No.	Qty.	Description
1	12 165 01	1	Starter Incl 3–9
2	M–0545010	5	Screw M5x0.8x10
3	12 081 01	1	Housing–Starter
4	12 160 01	1	Rope–Starter
5	25 166 01	1	Handle–Recoil
6	12 089 06	1	Spring & Keeper
7	12 093 01	1	Pulley
8	12 757 06	1	Kit–Dog Replacement (incl. Ref.#9)
9	41 086 09	1	Screw–Posidrive
10	15 109 01	1	Cup–Driver
*	12 113 07	1	Decal–Starting

Ref. No.	Part No.	Qty.	Description

* Not illustrated

ENGINE KOHLER MODEL NO. CV15T Spec 41560

Obtain Parts From Kohler

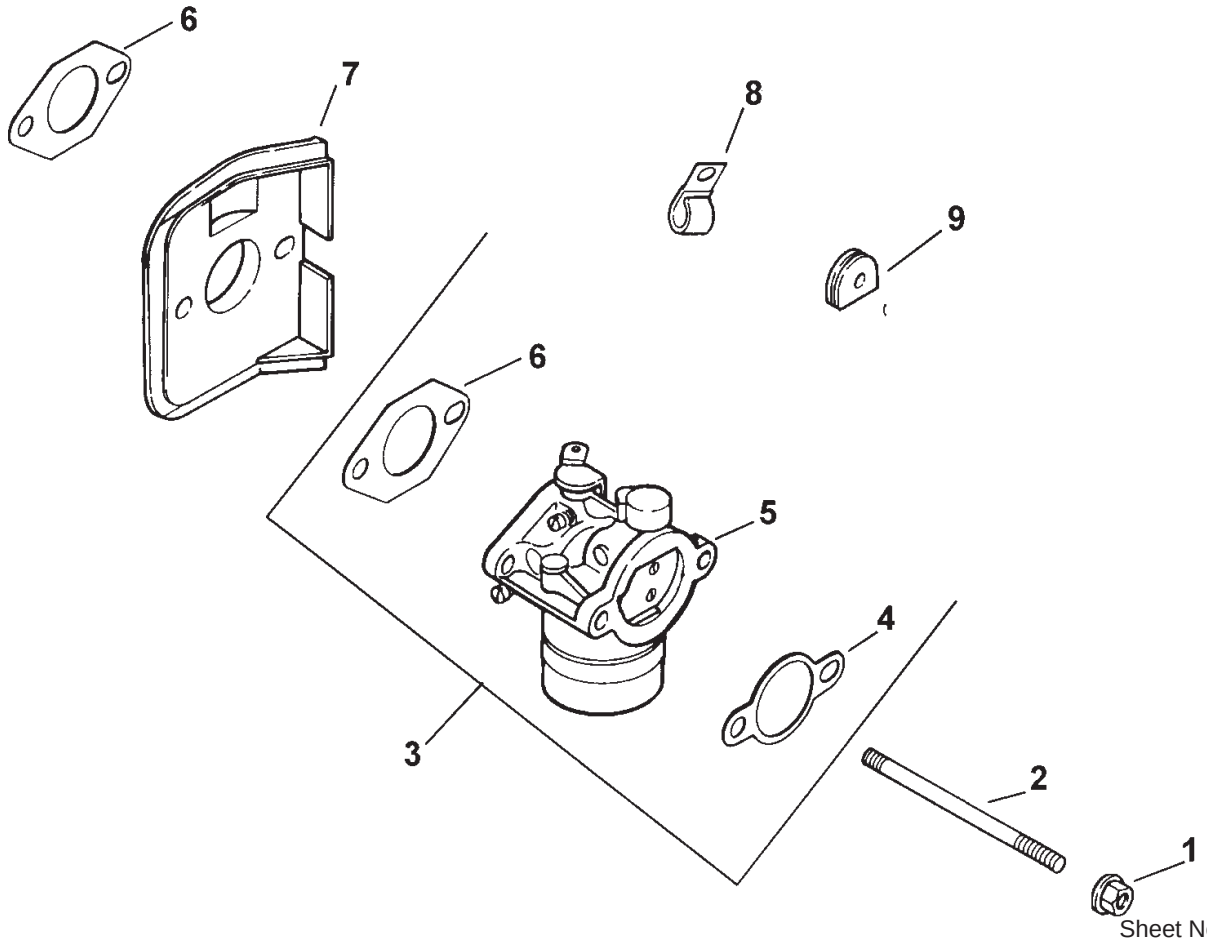

Sheet No.: 2 08

Fuel System

Ref. No.	Part No.	Qty.	Description
1	M–0641060	2	Nut M6x1.0
2	M–0629122	2	Stud M6x1.0x110
3	12 853 80	1	Kit–Carburetor w/Gaskets
4	12 041 02	1	Gasket–Air Cleaner
5	12 053 80	1	Carburetor ASM
6	12 041 01	2	Gasket–Carburetor
7	12 265 04	1	Deflector–Heat
8	47 154 01	1	Clip–Cable
9	12 313 01	1	Grommet
*	12 757 02	1	Kit–Float
*	12 757 08	1	Kit–Choke Repair
*	12 757 03	1	Kit–Carburetor Repair

Ref. No.	Part No.	Qty.	Description

* Not illustrated

ENGINE KOHLER MODEL NO. CV15T Spec 41560

Obtain Parts From Kohler

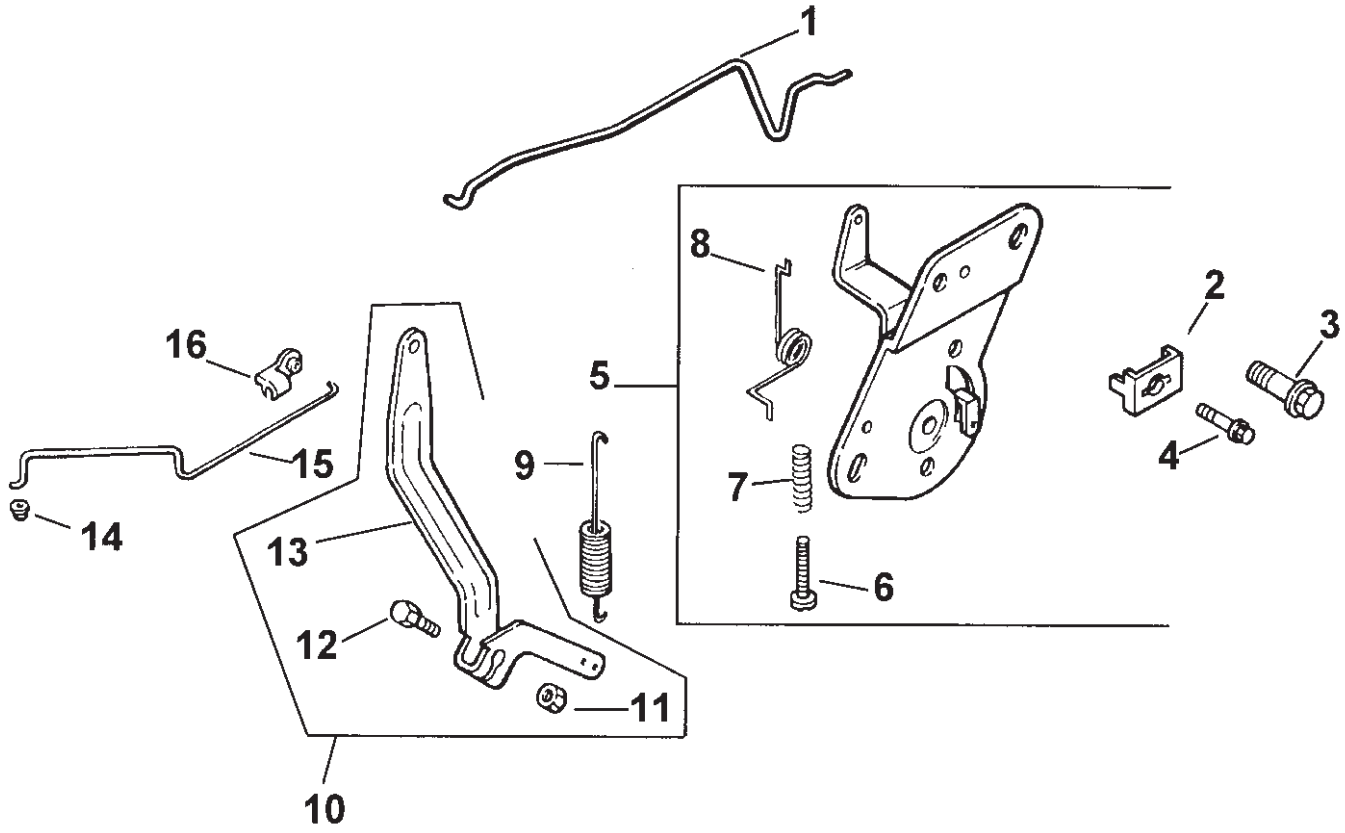

Sheet No.: 2 09

Engine Controls

Ref. No.	Part No.	Qty.	Description
1	12 079 07	1	Linkage–Choke
2	12 237 01	1	Clamp–Cable
3	M–0664020	2	Screw M6X1.0X20
4	M–0645016	1	Screw–HH M6x1.0x16
5	12 536 01	1	Control–Speed
6	SM–0443025	1	Screw
7	12 089 11	1	Spring
8	12 089 23	1	Spring–Choke Return
9	12 089 19	1	Spring–Governor
10	12 755 83	1	Kit – Governor Lever (Incl. Ref.#11–13)
11	12 100 07	1	Nut
12	52 211 04	1	Bolt – Round HD
13	12 090 26	1	Lever–Governor
14	25 158 08	1	Bushing–Linkage
15	12 079 01	1	Linkage–Throttle
16	25 158 11	1	Bushing–Linkage

Ref. No.	Part No.	Qty.	Description

ENGINE KOHLER MODEL NO. CV15T Spec 41560
Obtain Parts From Kohler

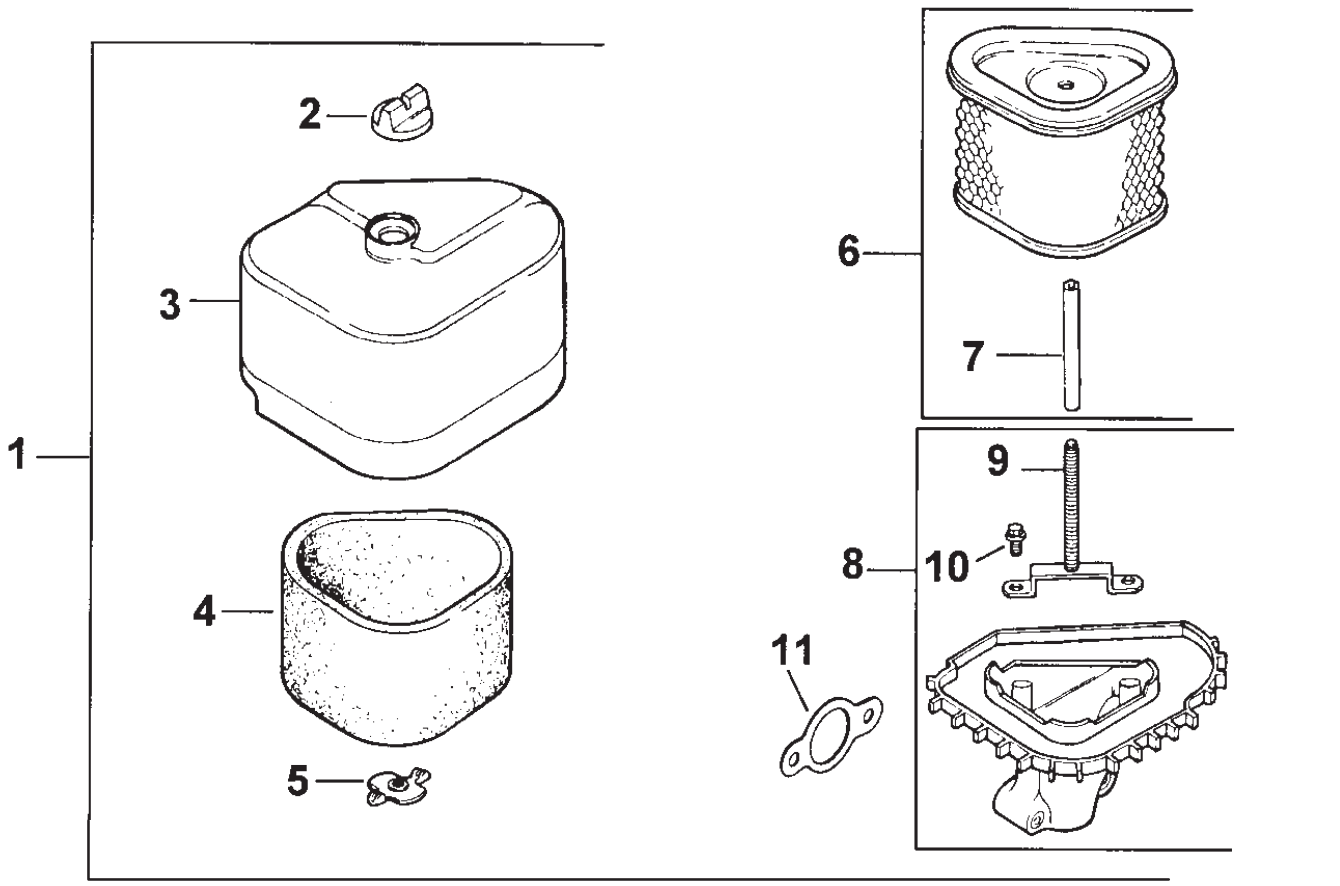

Sheet No.: 207

Air Cleaner

Ref. No.	Part No.	Qty.	Description
1	12 734 02	1	Kit–Air Cleaner (Incl. Ref.# 2–11)
2	25 341 03	1	Knob–Cover
3	12 096 16	1	Cover–Air Cleaner
4	12 083 12	1	Precleaner–Element
5	12 100 01	1	Nut–Wing
6	12 083 10	1	Element–Air Cleaner (Incl. Ref.#7)
7	12 032 11	1	Seal
8	12 094 07	1	Base–Air Cleaner (Incl. Ref.#9, 10)
9	12 072 04	1	Stud–Mounting Plate
10	12 086 01	1	Screw–Mounting Plate
11	12 041 02	1	Gasket–Air Cleaner
*	12 113 04	1	Decal–Air Cleaner

Ref. No.	Part No.	Qty.	Description

* Not illustrated

ENGINE KOHLER MODEL NO. CV15T Spec 41560

Obtain Parts From Kohler

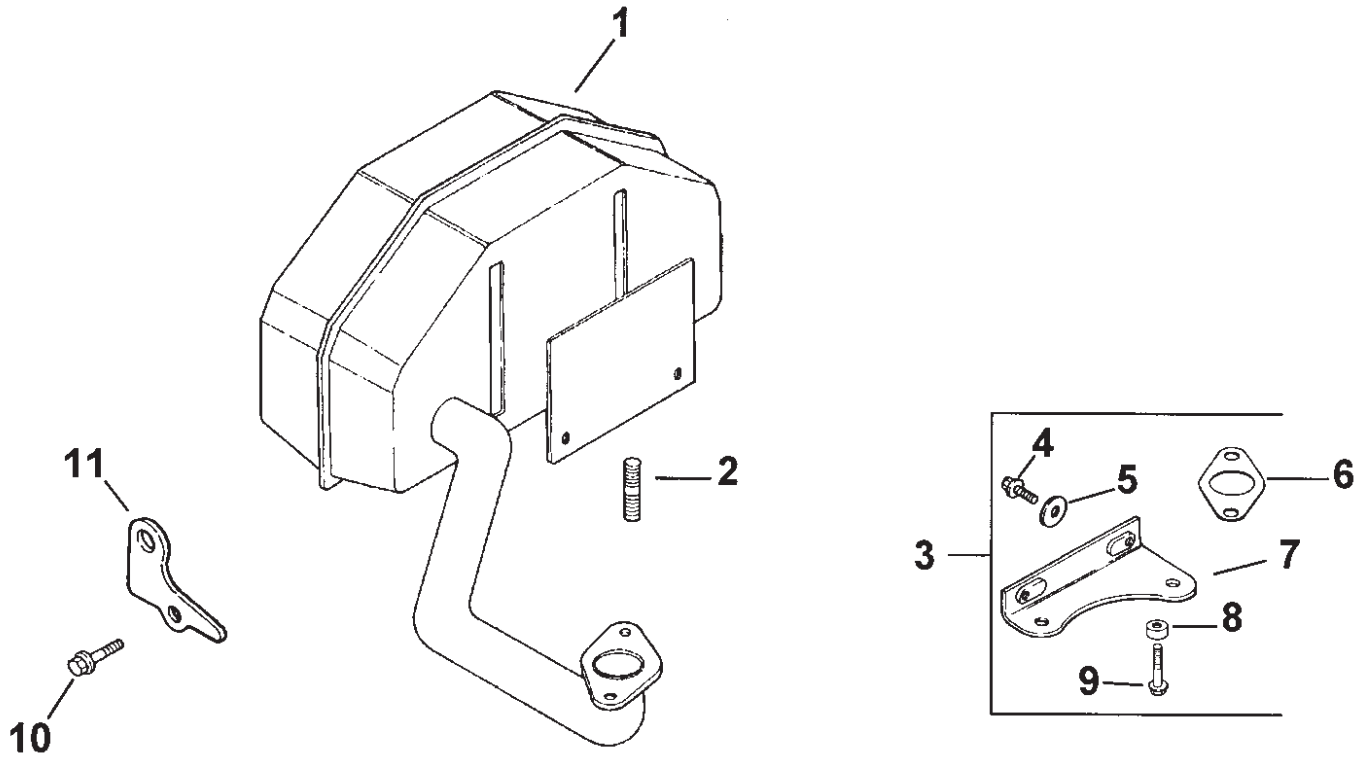

Sheet No.: 2 10

Exhaust

Ref. No.	Part No.	Qty.	Description
1	12 068 03	1	Muffler
2	M–0829033	2	Stud M8x1.25x20
3	12 755 30	1	Kit–Bracket (Incl. Ref.#4–9)
4	M–0650012	2	Screw
5	X–25–52	2	Washer
6	12 041 03	1	Gasket – Exhaust
7	12 126 55	1	Bracket–Muffler
8	12 468 01	1	Washer
9	12 086 13	1	Screw
10	M–0645025	1	Screw
11	12 445 06	1	Strap–Lifting

Ref. No.	Part No.	Qty.	Description

ENGINE KOHLER MODEL NO. CV15T Spec 41560
Obtain Parts From Kohler

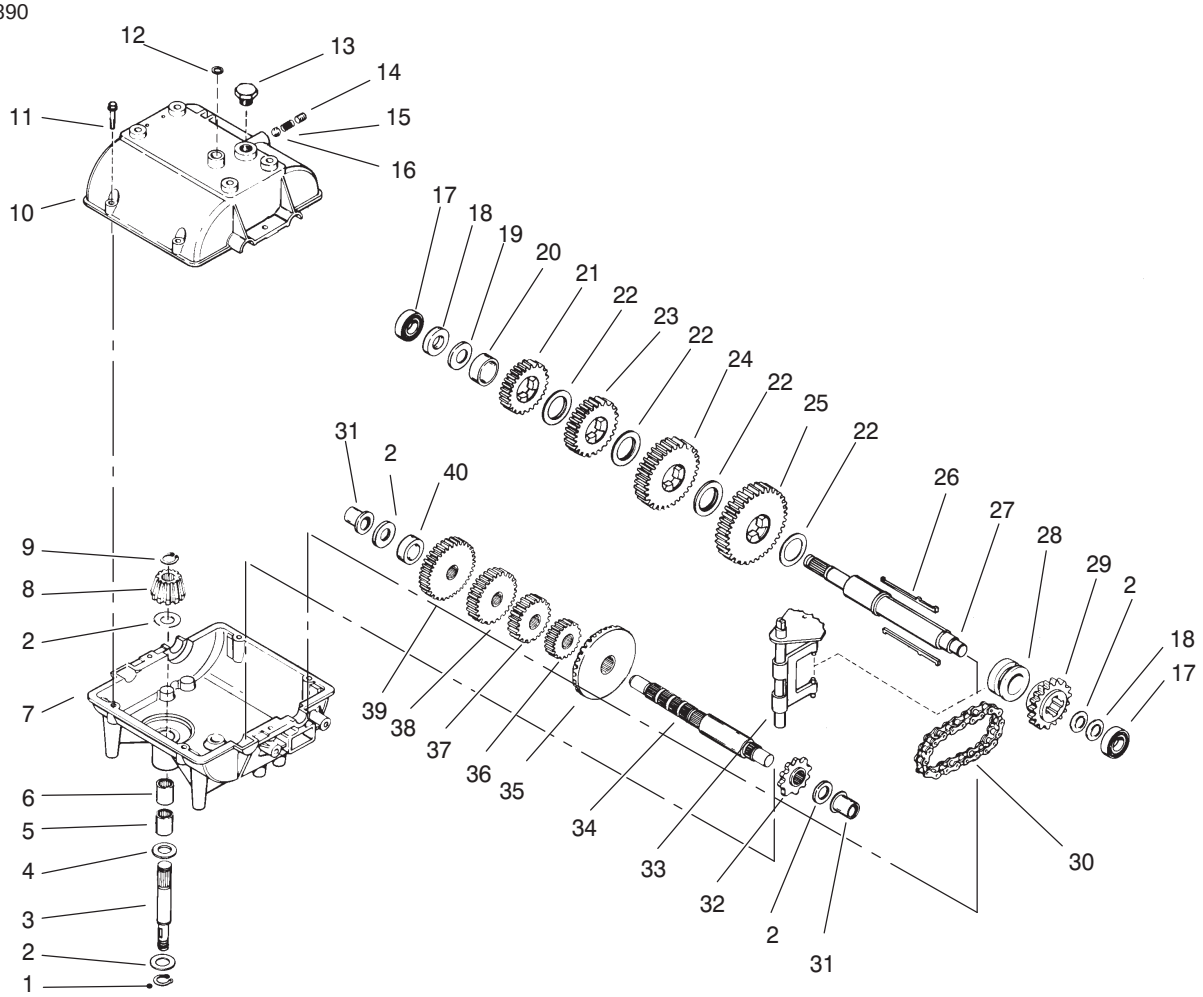

Peerless Transmission Model 700–082

Ref. No.	Part No.	Qty.	Description
1	792035	1	Ring – Retaining
2	780072	5	Washer – Thrust
3	776135	1	Shaft – Input
4	792001	2	”O”Ring
5	780142	1	Bearing – Needle
6	780086A	1	Bearing – Needle
7	770090A	1	Case – Transmission
8	778153	1	Bevel Pinion – Input
9	788040	1	Ring – Retaining
10	772099A	1	Cover – Transmission
11	792073A	6	Screw – Self Tapping
12	788069	1	Seal – Square Cut
13	792074	1	Plug – Threaded
14	792078	1	Screw – Set
15	792079	1	Spring
16	792077A	1	Ball – Steel
17	780092	2	Bearing – Ball
18	780065	2	Washer – Thrust
19	780139	1	Washer – Thrust
20	786072	1	Spacer
21	778123A	1	Gear – Spur (25 Teeth)
22	780108	4	Washer – Thrust
23	778250	1	Gear – Spur (27 Teeth)
24	778124A	1	Gear – Spur (30 Teeth)
25	778125	1	Gear – Spur (35 Teeth)
26	792089A	4	Key

Ref. No.	Part No.	Qty.	Description
27	776421	1	Shaft – Shifter & Brake
28	784266	1	Collar – Shift
29	786083	1	Sprocket (18 Teeth)
30	786081	1	Chain – Roller (No. 41 Chain 24 Links)
31	780105A	2	Bushing – Flanged
32	786082	1	Sprocket (9 Teeth)
33	784267	1	Rod & Fork Asm – Shift
34	776134	1	Shaft – Counter
35	778154	1	Gear – Bevel (42Teeth)
36	778136	1	Gear – Spur (15 Teeth)
37	778126A	1	Gear – Spur (20 Teeth)
38	778249	1	Gear – Spur (23 Teeth)
39	778127A	1	Gear – Spur (25 Teeth)
40	786071	1	Spacer
*	788067B	1	Grease 32oz Bottle
*	510334	1	Grease Eliminator

*Not Illustrated

Order Parts from Peerless

Maintenance Record

Date								

Maintenance Record

Date								

Maintenance Record

Date								

TORO®