Form No. 3323–986

Rotary Cutting Unit

Groundsmaster® 3500–D Attachment

Model No. 30822–200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2000
All Rights Reserved

Contents

Description	Page
Deck Frame Assembly	3
Roller Assembly No. 100–5755	4
Height–Of–Cut Bracket Assembly	5
Housing and Blade Assembly	6
Spindle Assembly No. 100–5700	7

Accessories

Description	Model / Part No.
Mulching Baffle Kit	30824

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

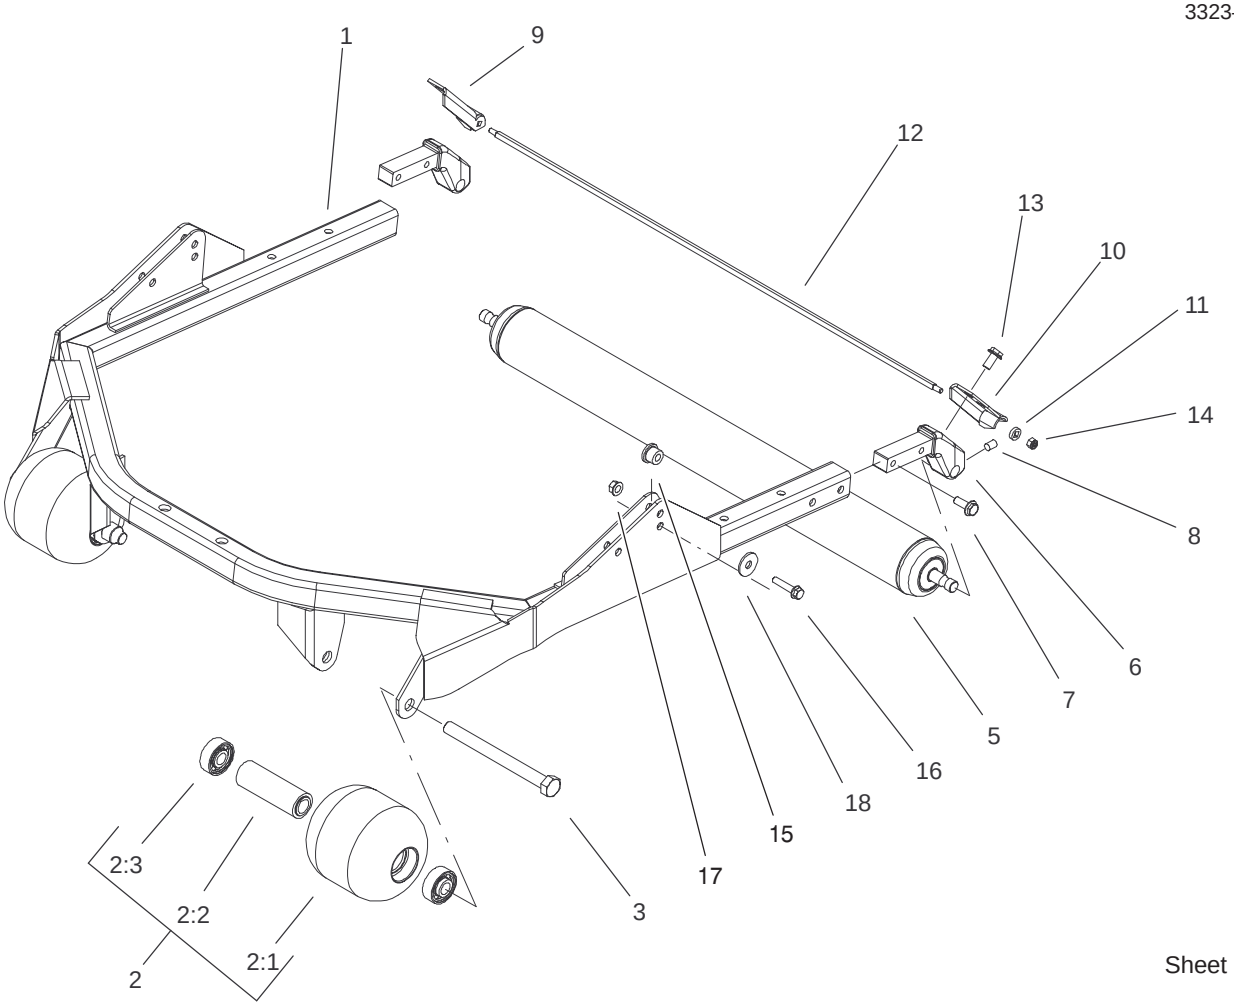

Sheet No.: 2

Deck Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	100–5780–01	1	Deck Frame ASM
2	104–1092	2	Roller ASM
2:1	104–1093	1	Roller
2:2	100–5762	1	Spacer – Bearing
2:3	93–4237	2	Bearing
3	327–15	2	Screw–HH
5	100–5755	1	3” Roller ASM
6	100–5768–01	2	Mount – Roller
7	3234–11	4	Screw–HHF
8	3247–3	2	Screw–Set
9	104–1088–01	1	RH Scraper Mount ASM
10	104–1089–01	1	LH Scraper Mount ASM
11	104–1059	2	Washer – Scraper
12	104–1064	1	Rod – Scraper
13	3234–1	4	Screw–HHF
14	3296–3	2	Nut–Lock NI
15	95–8803	2	Bushing – Flange
16	3234–18	2	Screw–HHF
17	32128–43	2	Nut – Flange
18	93–8806	2	Washer–Hardened

Ref. No.	Part No.	Qty.	Description

3323–986

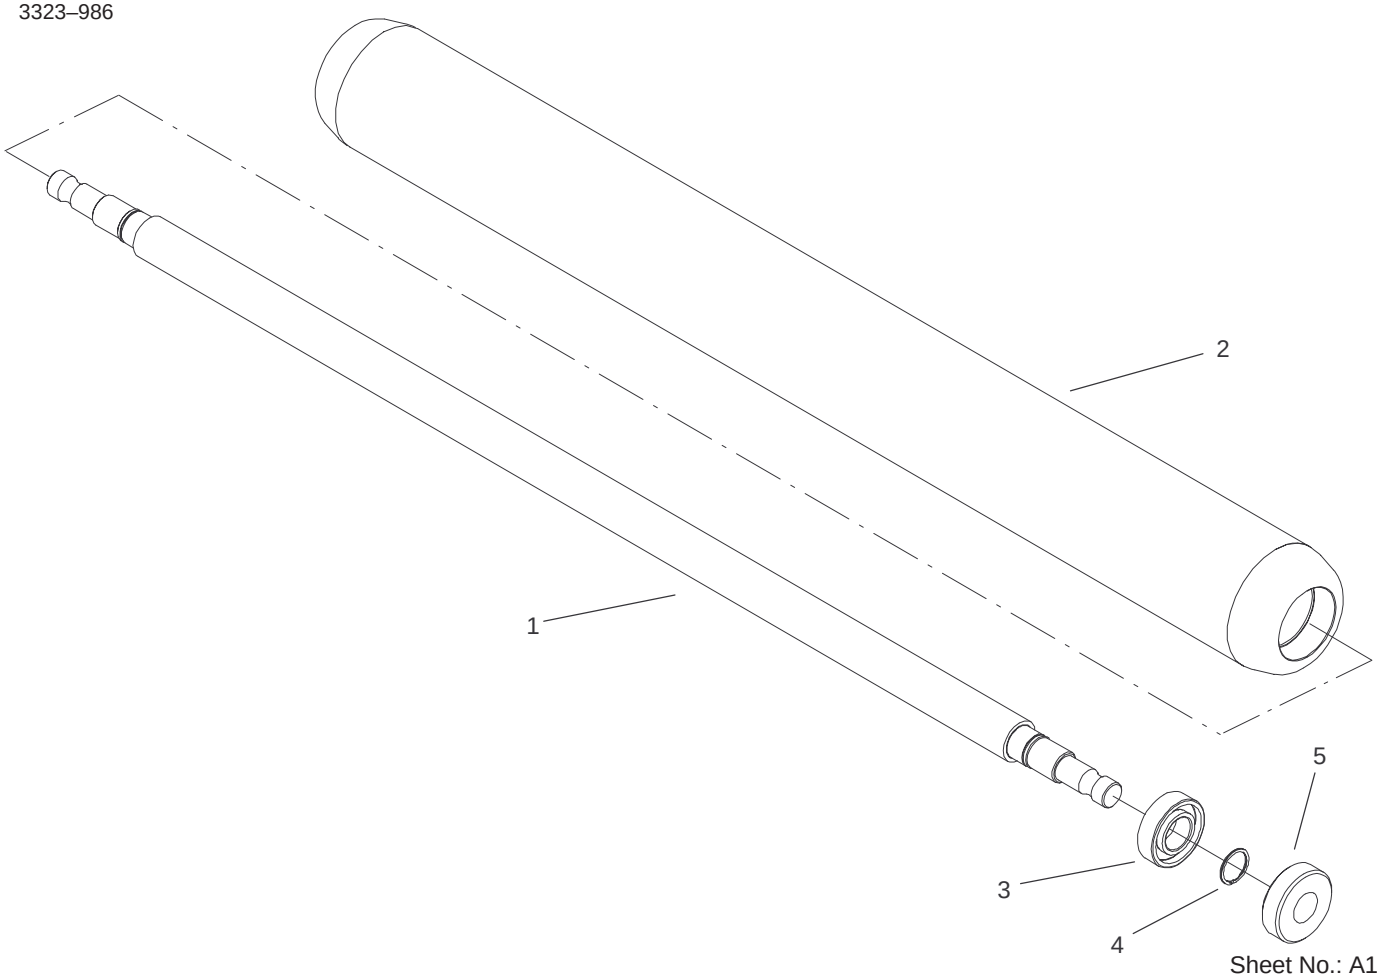

Sheet No.: A1

Roller Assembly No. 100–5755

Ref. No.	Part No.	Qty.	Description
1	100–5756	1	Shaft – Roller
2	100–5757–03	1	Tube ASM
3	251–347	2	Bearing–Ball
4	104–4212	2	Ring – Retaining, Spiral
5	99–3842	2	Seal–Oil

Ref. No.	Part No.	Qty.	Description

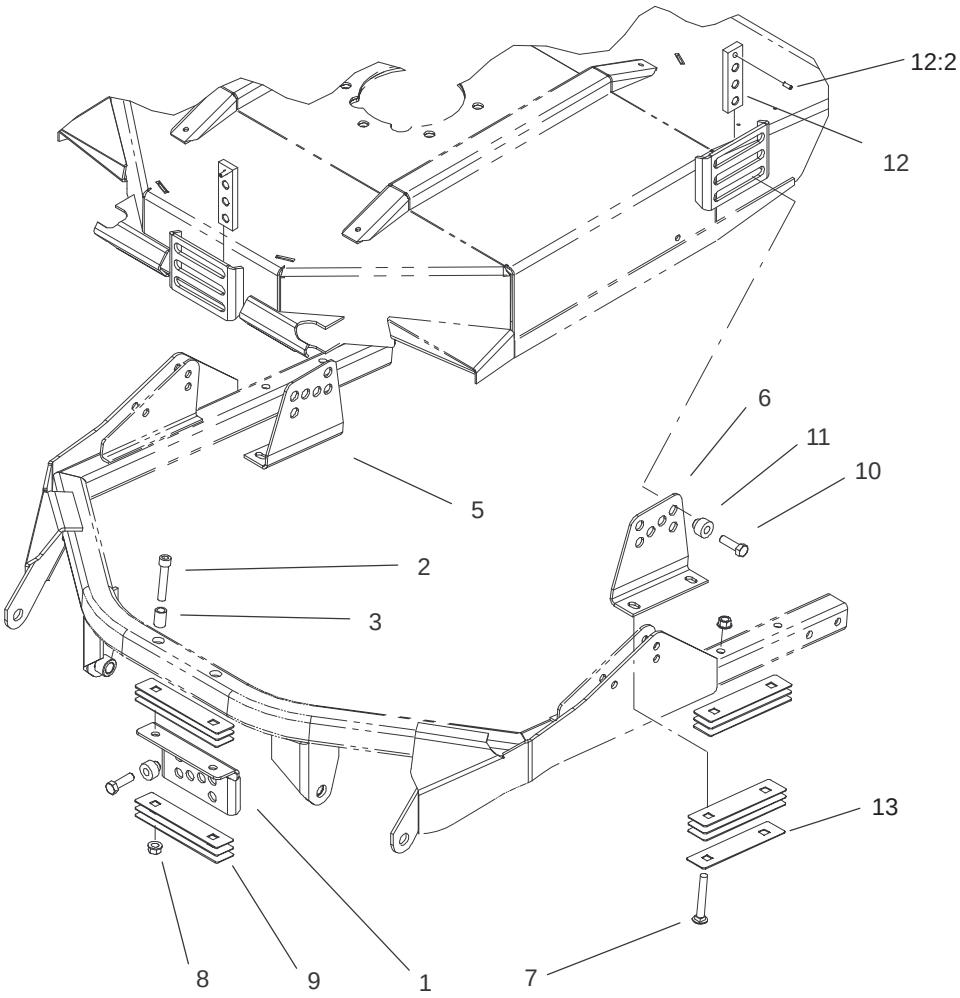

Sheet No.: 3

Height–Of–Cut Bracket Assembly

Ref. No.	Part No.	Qty.	Description
1	104–1052–01	1	Bracket – HOC, Front
2	3274–50	2	Screw–HSH
3	104–1050	2	Spacer – Mount
5	100–5797–01	1	Bracket – HOC, RH
6	104–4624–01	1	Bracket – HOC, LH
7	3231–31	4	Screw–CARR
8	32128–43	6	Nut – Flange
9	100–5799	18	Shim – HOC
10	3234–24	3	Screw–HHF
11	100–5728	3	Spacer – HOC
12	100–5795	3	HOC Plate ASM
12:2	32121–3	1	Pin–Spring
13	104–4641	3	Shim – HOC

Ref. No.	Part No.	Qty.	Description

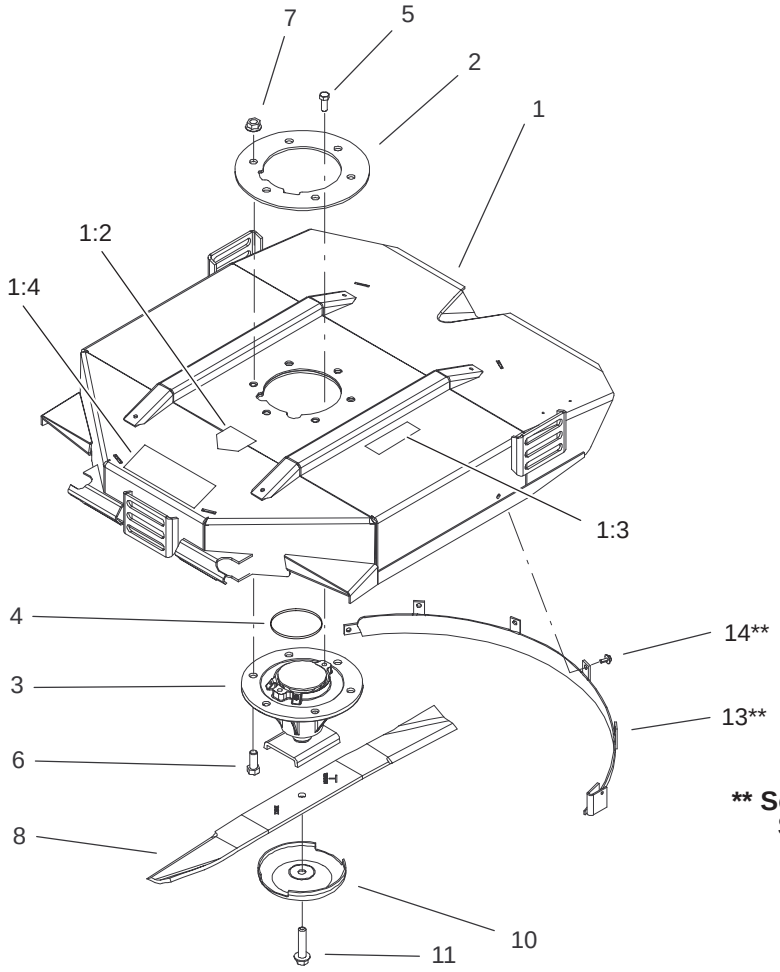

**** Sold As Separate Kit. See Accessories.**

Sheet No.: 4

Housing and Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	104–1087	1	Chamber ASM
1:2	43–8480	2	Decal–Danger
1:2	100–6583	1	Decal–Danger
1:3	93–7818	1	Decal–Torque, Blade Bolt
1:4	104–1086	1	Decal – HOC
2	104–1051–03	1	Plate – Spindle
3	100–5700	1	Spindle ASM
4	237–161	1	O–Ring
5	323–6	2	Screw–HH
6	325–5	6	Screw–HH
7	32128–49	6	Nut–HHF
8	100–5754	1	Blade
10	72–9361	1	Cup–Scalp, Anti
11	92–5816	1	Bolt–Blade
☆13		1	Mulching Baffle ASM
14	46–8560	5	Screw–HHF

Ref. No.	Part No.	Qty.	Description

☆ Not serviced

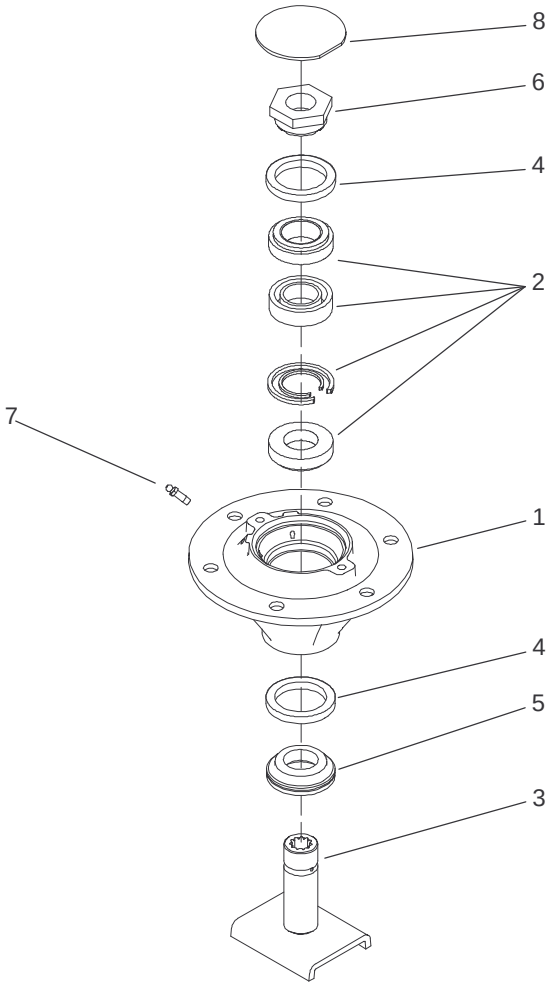

Sheet No.: A2

Spindle Assembly No. 100–5700

Ref. No.	Part No.	Qty.	Description
1	100–5701	1	Housing – Spindle
2	100–5703	1	Spacer & Bearing ASM
3	100–5705	1	Spindle Shaft ASM
4	253–154	2	Seal – Oil
5	69–6950	1	Spacer–Shaft, Spindle
6	100–5709	1	Nut – Spindle, Special
7	302–62	2	Fitting–Grease
8	94–2703	1	Plug

Ref. No.	Part No.	Qty.	Description

TORO®