Form No. 3434-332 Rev C

TORO®

Count on it.

Parts Catalog

Z Master® Professional 7500-D Series Riding Mower

With 72in TURBO FORCE® Side Discharge Mower

Model No. 72076—Serial No. 400000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3434-332 C

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Power Frame Assembly 6
Main Frame Assembly 8
Roll-Over Protection System Assembly No. 135-5786 10
Hydraulic Drive Assembly 12
Hydraulic Assembly 14
Hydraulic Reservoir Assembly No. 126-6764 16
Rear Wheel and Caster Assembly 18
Caster Wheel Assembly 20
Parking Brake Assembly 22
Fuel System Assembly 24
RH Fuel Tank Assembly No. 126-8651 26
LH Fuel Tank Assembly 126-8652 28
Weight Assembly 30
Seat Mount Assembly 32
Seat Assembly No. 140-8003 34
Motion Control Assembly 36
Rod Linkage Assembly No. 126-6131 38
Electrical Assembly 40
Wire Harness Assembly No. 126-7352 42
Deck Lift Assembly 44
Hydraulic Lift Fold Assembly 46
Valve Assembly No. 131-1934 48
Engine and Air Cleaner Assembly 50
Air Cleaner Assembly No. 126-7646 52
Hood and Cover Assembly 54
Hood Assembly 56
Transmission Assembly 58
Charge Pump Housing Assembly Transmission Assembly No. 131-5510 60
Transmission Assembly (cont.) Center Section Assembly 62
Transmission Assembly (cont.) Gear Case and Clutch Assembly 64
Hydraulic Gear Pump Assembly No. 112-9542 66
Cooling Assembly 68
Cooling Assembly No. 121-3330 70
Deck and Driveshaft Assembly 72
Deck Assembly 74
Deck Decal Assembly No. 140-0960 76
Rubber Deflector Assembly No. 108-2792 78
Spindle Assembly No. 137-9780 80
Gearbox and Mount Assembly 82
Gearbox Assembly No. 130-8659 84
Idler Arm Assembly No. 126-2585 86
Driveshaft Assembly No. 110-3575 88
Cylinder Block Assembly 90
Gear Housing Assembly 92
Flywheel Housing and Oil Sump Assembly 94
Cylinder Head and Cover Assembly 96
Suction Manifold Assembly 98
Exhaust Manifold Assembly 100
Diesel Particulate Filter Assembly 102
Camshaft and Driving Gear Assembly 104
Crankshaft and Piston Assembly 106
Oil Pump Assembly 108
Cooling Water System Assembly 110
Fuel Supply Pump Assembly 112


© 2020—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Contents (continued)

Fuel Injection Valve Assembly 114
Fuel Line Assembly 116
Starting Motor Assembly 118
Generator Assembly 120
Electronic Control Unit Assembly 122
Electric Parts Assembly 124
Fuel Pump Assembly 126
Gasket Set 128
Attachments and Accessories 130


Power Frame Assembly

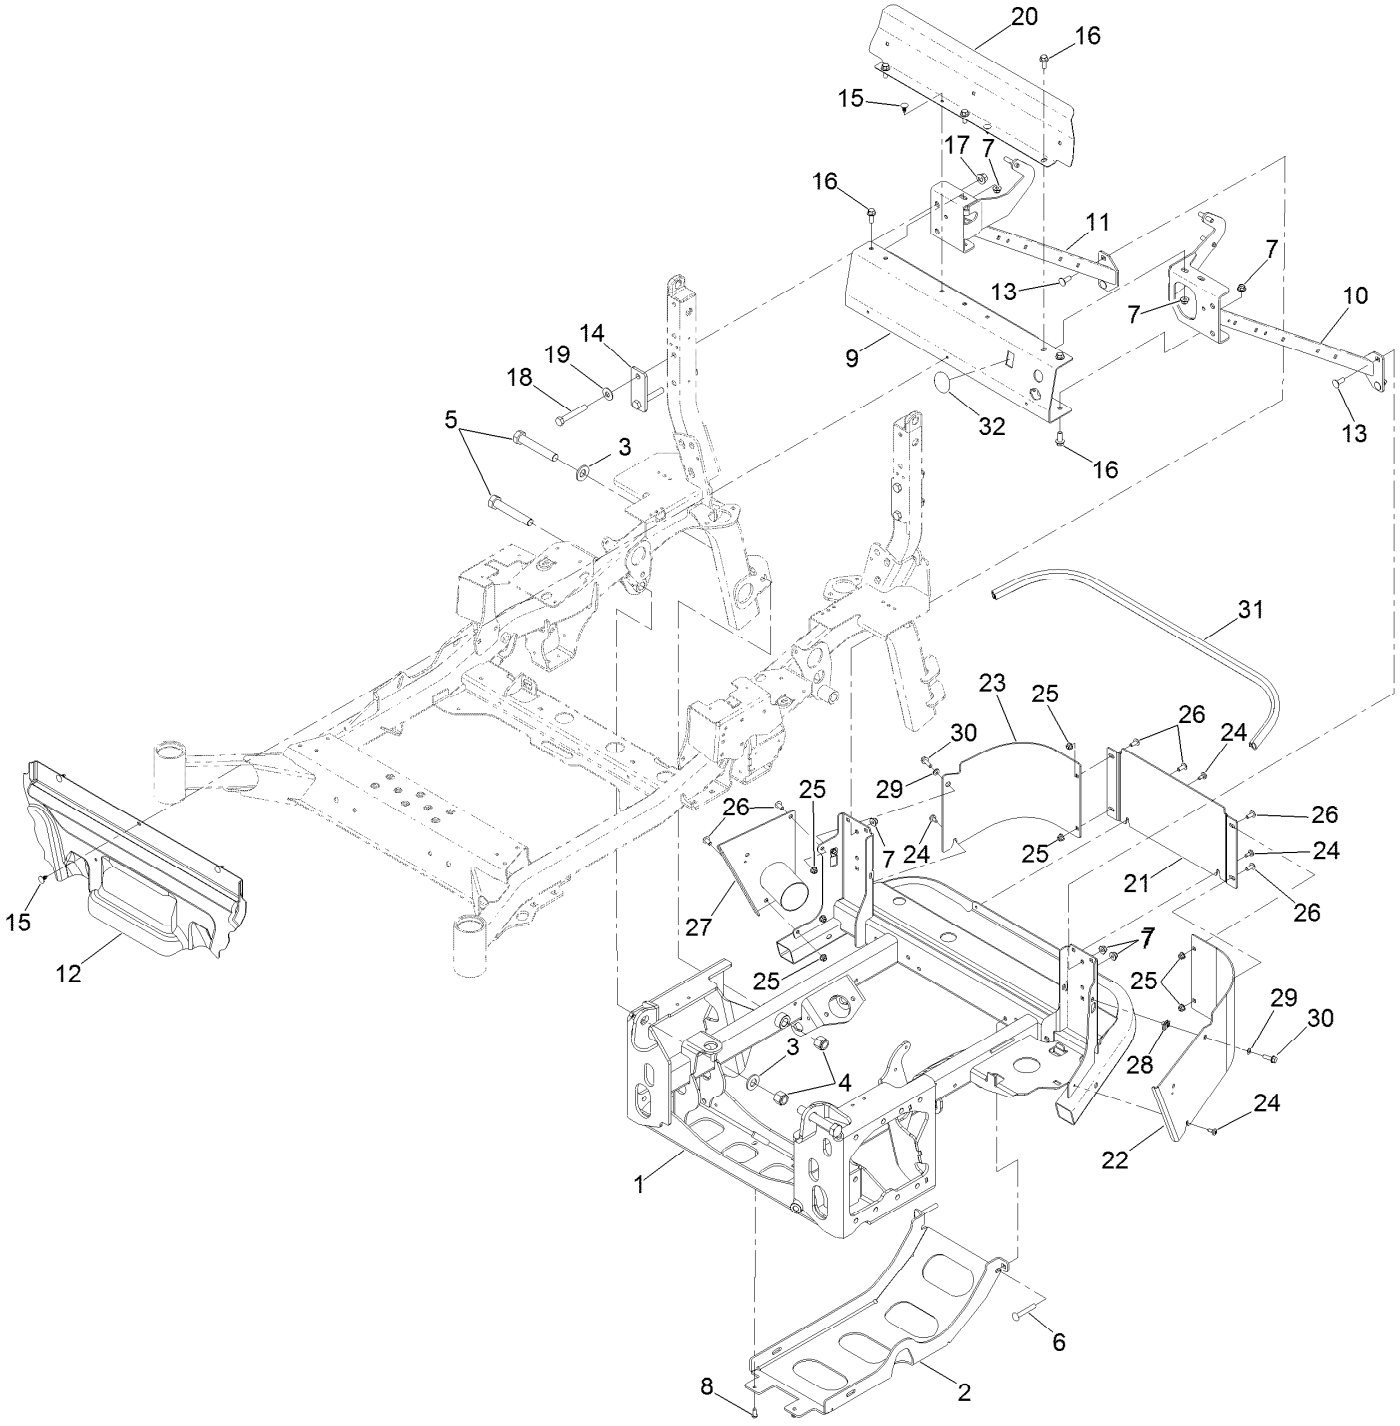

Power Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-5929-03	1	Frame-Power
2	126-5922-03	1	Plate-Skid
3	103-2802	4	Washer
4	3296-51	4	Nut-Lock, NI
5	328-8	4	Screw-HH
6	3231-44	2	Screw-CARR
7	104-8301	13	Nut-HF, NI
8	613381	2	Screw-BHTF
9	126-8567-03	1	Channel-Cross
10	126-8563-03	1	Brace-ROPS, LH
11	126-8565-03	1	Brace-ROPS, RH
12	126-7458	1	Panel-Deflector, Heat
13	3231-22	4	Screw-CARR
14	135-0412-03	2	Plate-Spacer
15	117-2382	5	Plug-Plastic
16	131-2220	7	Screw-HHF
17	99-5107	4	Nut-Lock
18	112-7264	4	Screw-HH
19	109-9505	4	Washer-Spring
20	126-6557-03	1	Shield-Air
21	126-8954-03	1	Plate-Bumper, Center
22	126-8952-03	1	Plate-Bumper, LH
23	126-8953-03	1	Plate-Bumper, RH
24	120-7950	4	Screw-Torx
25	104-8300	7	Nut-HF, NI
26	126-6268	7	Screw-Torx
27	135-0880	1	Plate-Exhaust
28	112-3306	2	Nut
29	3290-475	2	Washer-Belleville
30	3234-29	2	Screw-HHF
31	126-6845	1	Seal-Bulb
32	135-3728	1	Decal-Cover


Main Frame Assembly

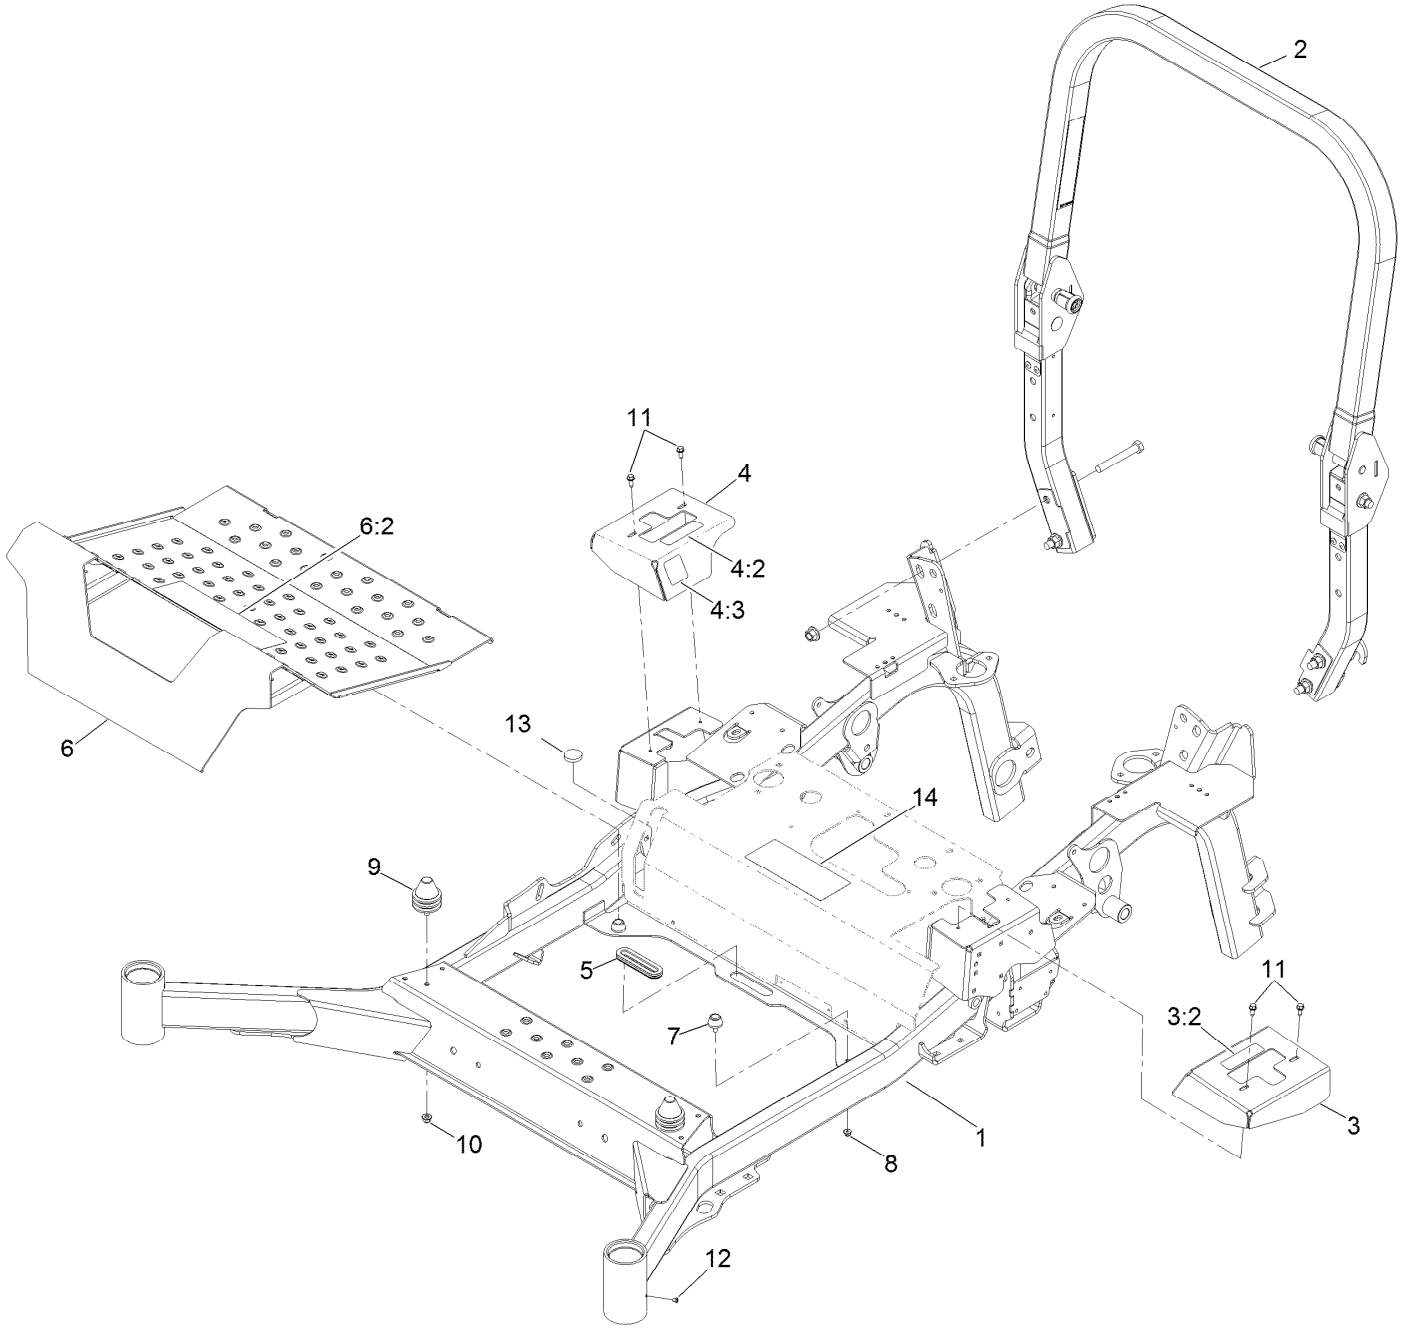

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-0571-01	1	Frame
2	135-5786	1	ROPS ASM
3	126-1821	1	Cover-Motion Control, LH
3:2	99-8936	1	Decal-Control, Motion
4	126-1831	1	Cover-Motion Control, RH
4:2	99-8936	1	Decal-Control, Motion
4:3	116-5988	1	Decal-Park Brake, CE
5	126-7065	1	Grommet-Rubber
6	126-9066	1	Pan-Floor
6:2	126-8383	1	Decal-Danger
7	109-2365	2	Bumper-Rubber
8	104-7201	2	Nut-HF
9	126-5491	2	Isolator
10	104-8300	2	Nut-HF, NI
11	32144-10	4	Screw-HWH
12	1-811010	2	Plug
13	109-9233	1	Bumper-Push-In, Rubber
14	126-9279	1	Decal-Service Aid

Roll-Over Protection System Assembly
No. 135-5786

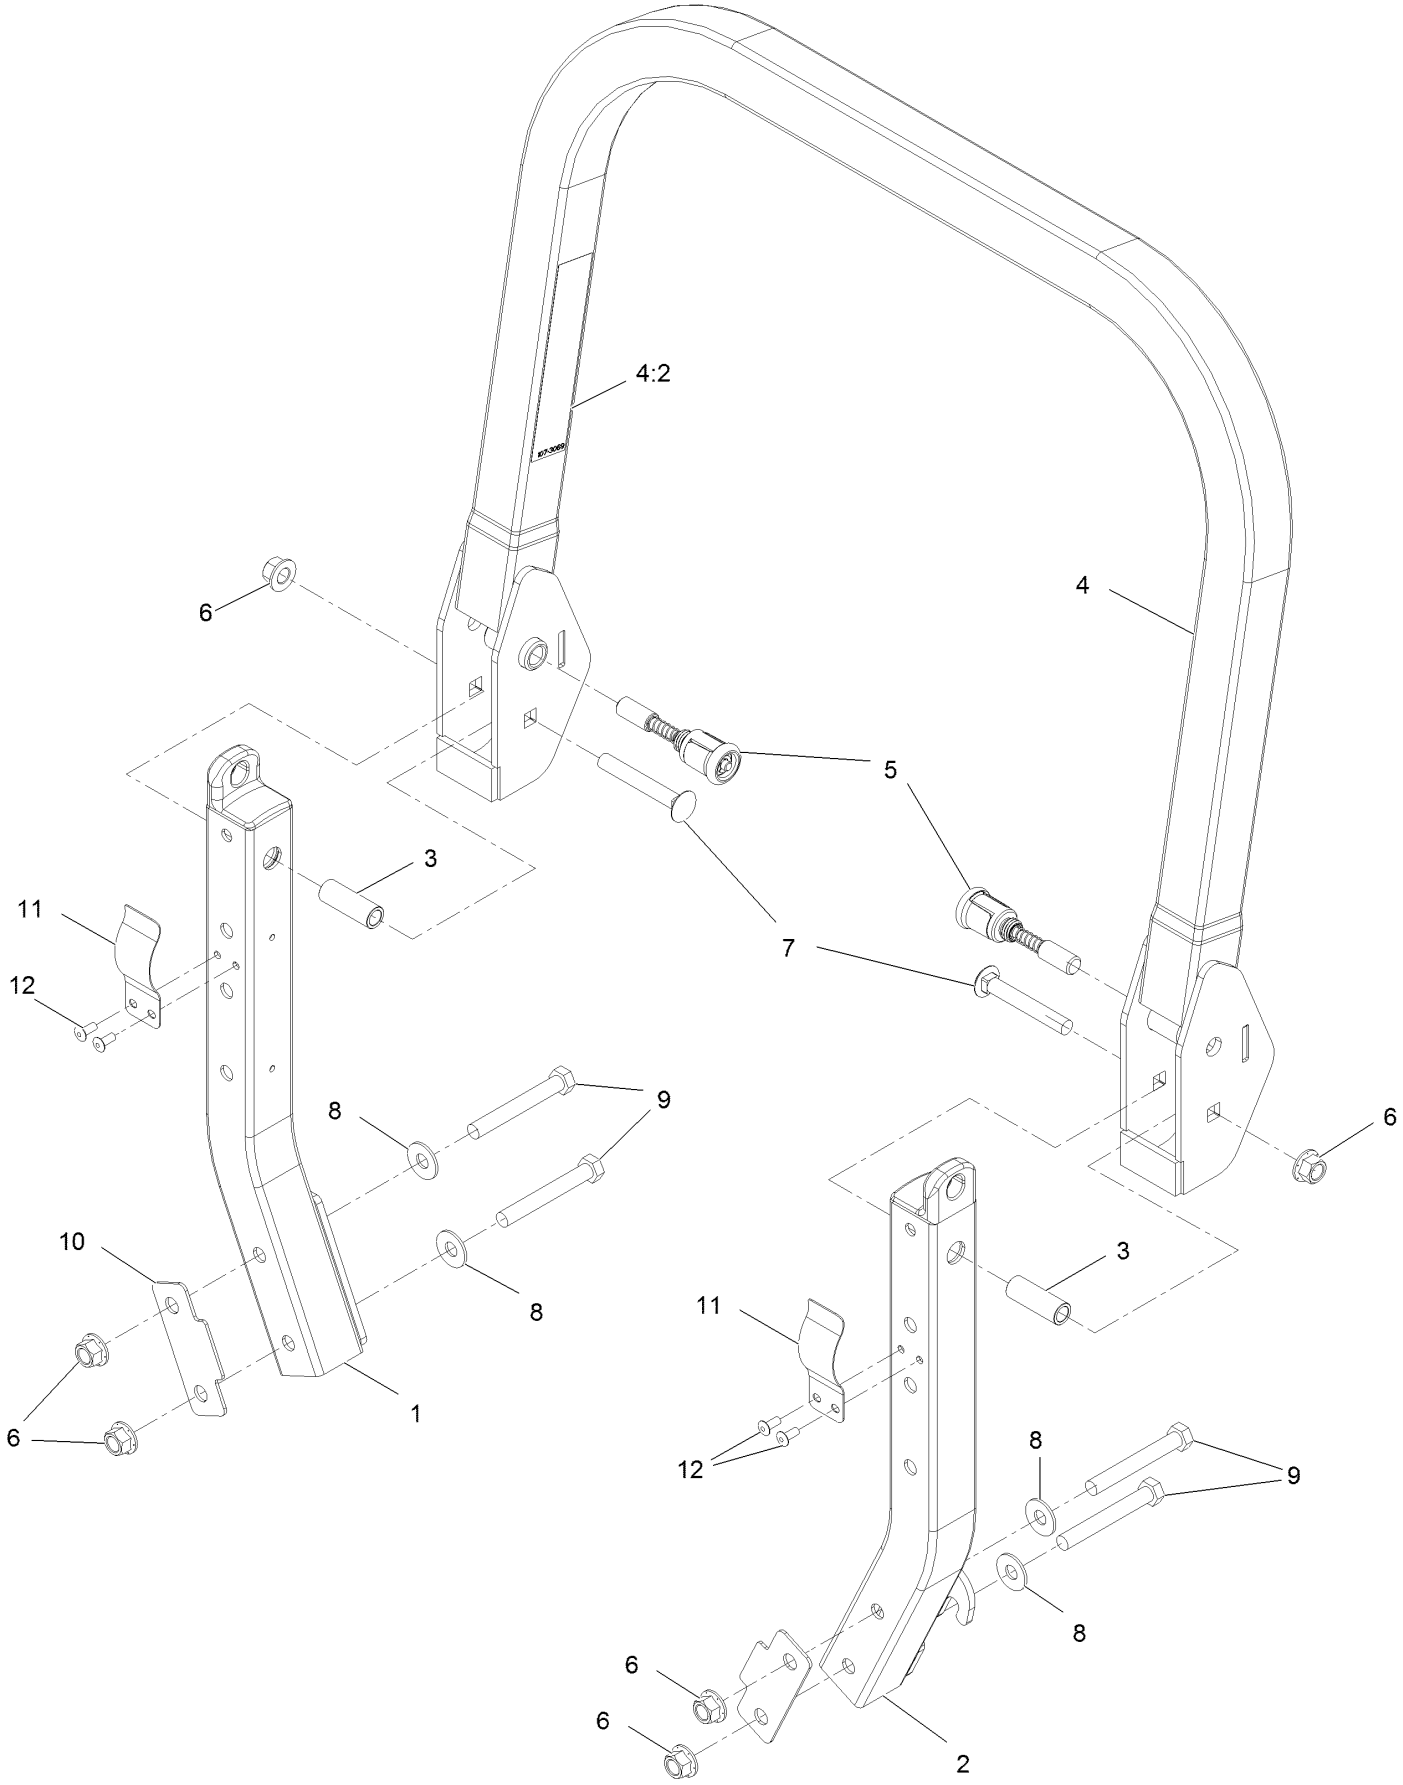


Roll-Over Protection System Assembly No. 135-5786 (continued)

Ref.	Part Number	Qty.	Description
1		1	Lower-ROPS, RH ●
2		1	Lower-ROPS, LH ●
3	109-6653	2	Spacer
4	126-7085	1	ROPS Upper ASM
4:2	107-3069	1	Decal-Warning
5	116-0104	2	Pin-Spring
6	99-5107	6	Nut-Lock
7	3233-10	2	Screw-CARR
8	109-9505	4	Washer-Spring
9	325-35	4	Screw-HH
10	116-0960	2	Spacer
11	110-5696	2	Spring-Leaf
12	3290-412	4	Rivet-Blind

● Not serviced separately


Hydraulic Drive Assembly

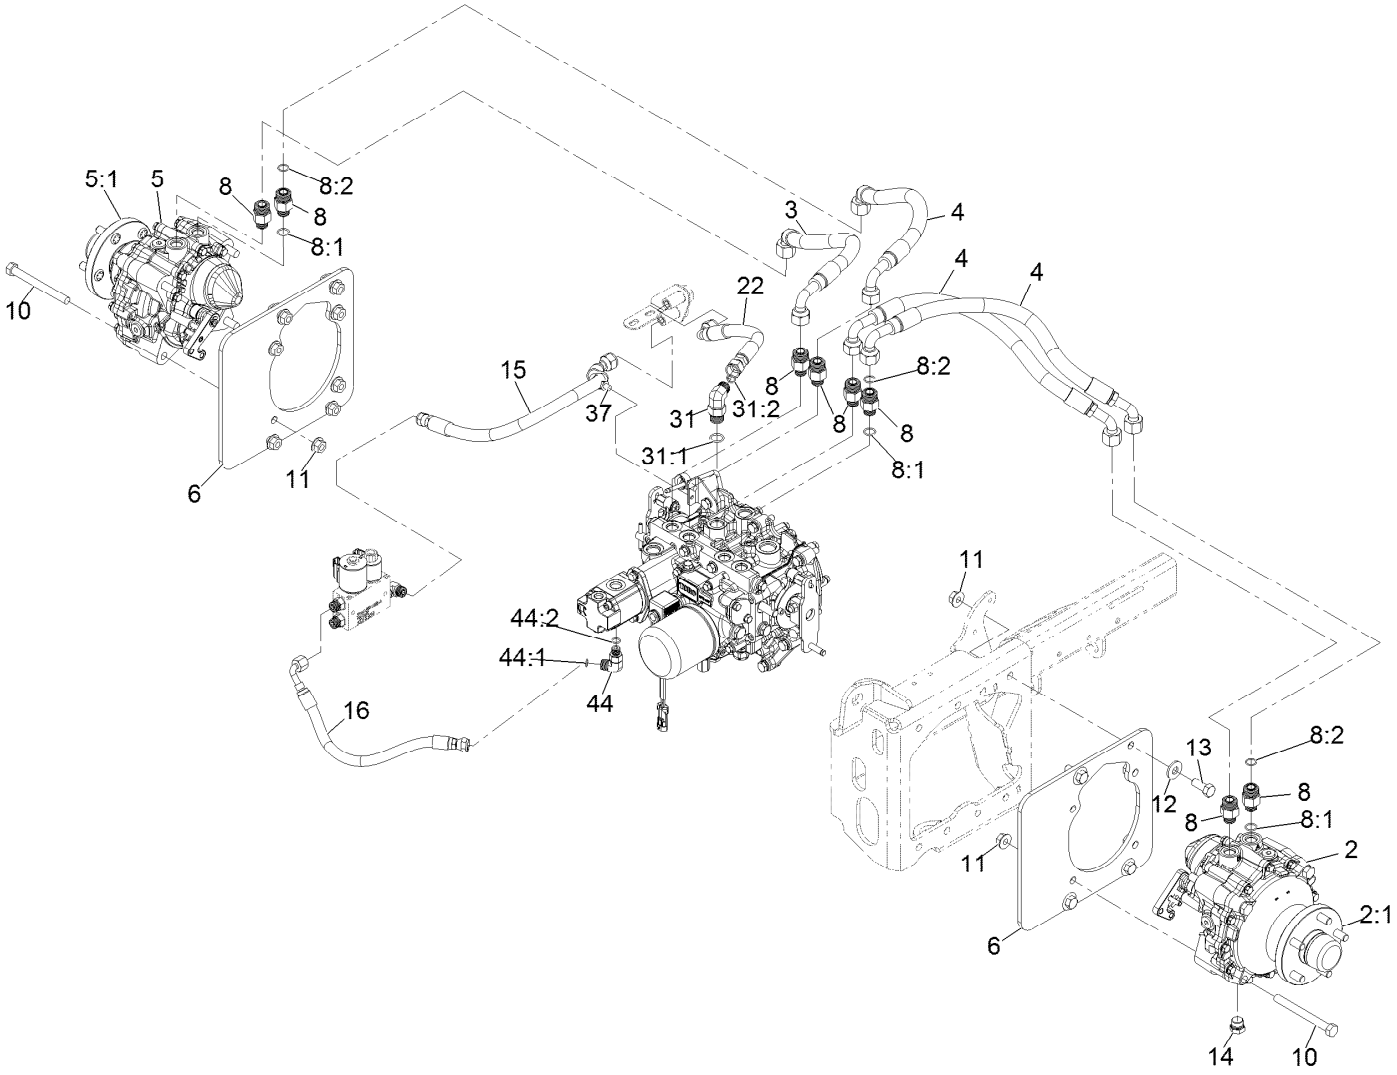

Hydraulic Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
2	126-8134	1	Motor-HYD, LH
2:1	135-5333	1	5 Stud Wheel Hub Kit
3	126-8686	1	Hose ASM
4	126-8687	3	Hose ASM
5	126-8133	1	Motor-HYD, RH
5:1	135-5333	1	5 Stud Wheel Hub Kit
6	126-7469-03	2	Plate-Motor
8	340-155	8	Fitting-Straight
8:1	237-79	1	O-Ring
8:2	237-151	1	O-Ring
10	325-19	8	Screw-HH
11	32128-49	16	Nut-HHF
12	1-513435	8	Washer-Spring
13	325-5	8	Screw-HH
14	142-2435	2	Plug-Magnetic
15	126-8685	1	Hose ASM
16	126-8684	1	Hose ASM
22	126-8682	1	Hose ASM
31	340-105	1	Fitting-Elbow, 90 DEG
31:1	237-80	1	O-Ring
31:2	237-30	1	O-Ring
37	32180-030	1	Clip-Tie
44	340-77	1	Fitting-Elbow, 90 DEG
44:1	237-22	1	O-Ring
44:2	237-42	1	O-Ring


Hydraulic Assembly

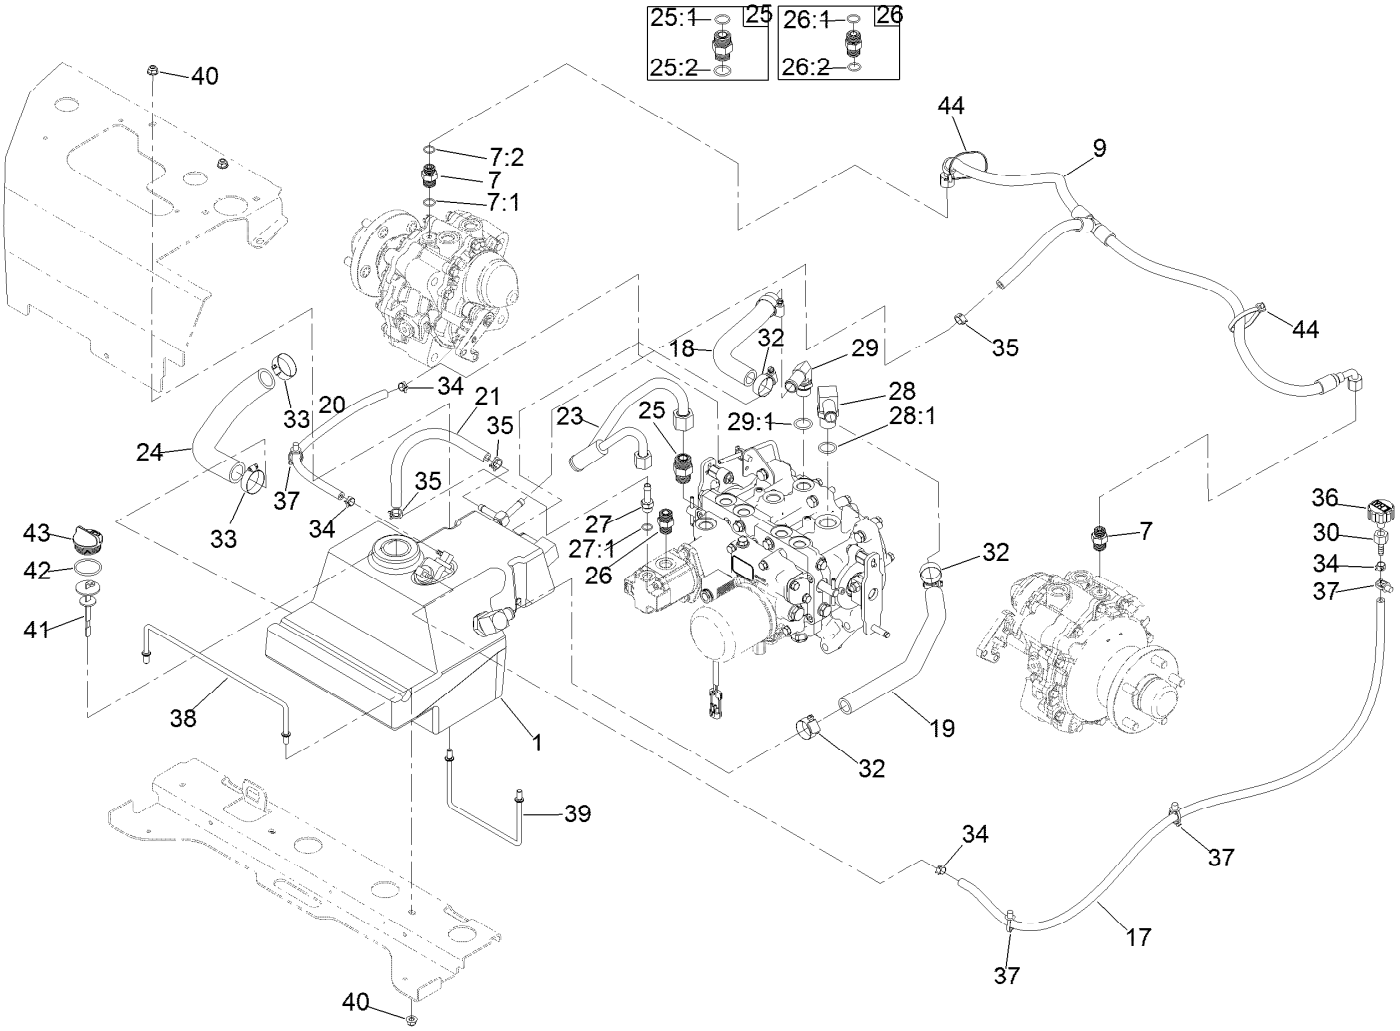

Hydraulic Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-6764	1	HYD Reservoir ASM
7	340-3	2	Fitting-Straight
7:1	237-22	1	O-Ring
7:2	237-79	1	O-Ring
9	135-3731	1	Tee Hose ASM
17	126-6776	1	Hose
18	126-6767	1	Hose-Return
19	126-6768	1	Hose-Return
20	126-6778	1	Hose
21	126-6766	1	Hose
23	126-8688	1	Tube ASM
24	126-6774	1	Hose-Suction
25	340-7	1	Fitting-Straight
25:1	237-65	1	O-Ring
25:2	237-80	1	O-Ring
26	340-4	1	Fitting-Straight
26:1	237-30	1	O-Ring
26:2	237-79	1	O-Ring
27	103-1912	1	Adapter-Straight
27:1	237-42	1	O-Ring
28	353-987	1	Fitting-Elbow, 90
28:1	237-81	1	O-Ring
29	87-8170	1	Fitting-90
29:1	237-80	1	O-Ring
30	354-95	1	Fitting-Straight
32	2412-129	4	Clamp-Hose
33	2412-34	2	Clamp-Hose
34	2412-98	4	Clamp-Hose
35	103-1988	3	Clamp-Hose 11/16
36	68-6150	1	Breather
37	32180-030	4	Clip-Tie
38	126-7547	1	Rod-Support, HYD Tank
39	126-7546	1	Rod-Support, HYD Tank
40	104-8300	4	Nut-Nyloc 5/16-18 Flg
41	112-6365	1	Dipstick
42	94-8166	1	O-Ring
43	93-7498	1	Plug-Plastic
44	1-303335	2	Tie-Cable 7 15/16 (Large)


Hydraulic Reservoir Assembly No. 126-6764

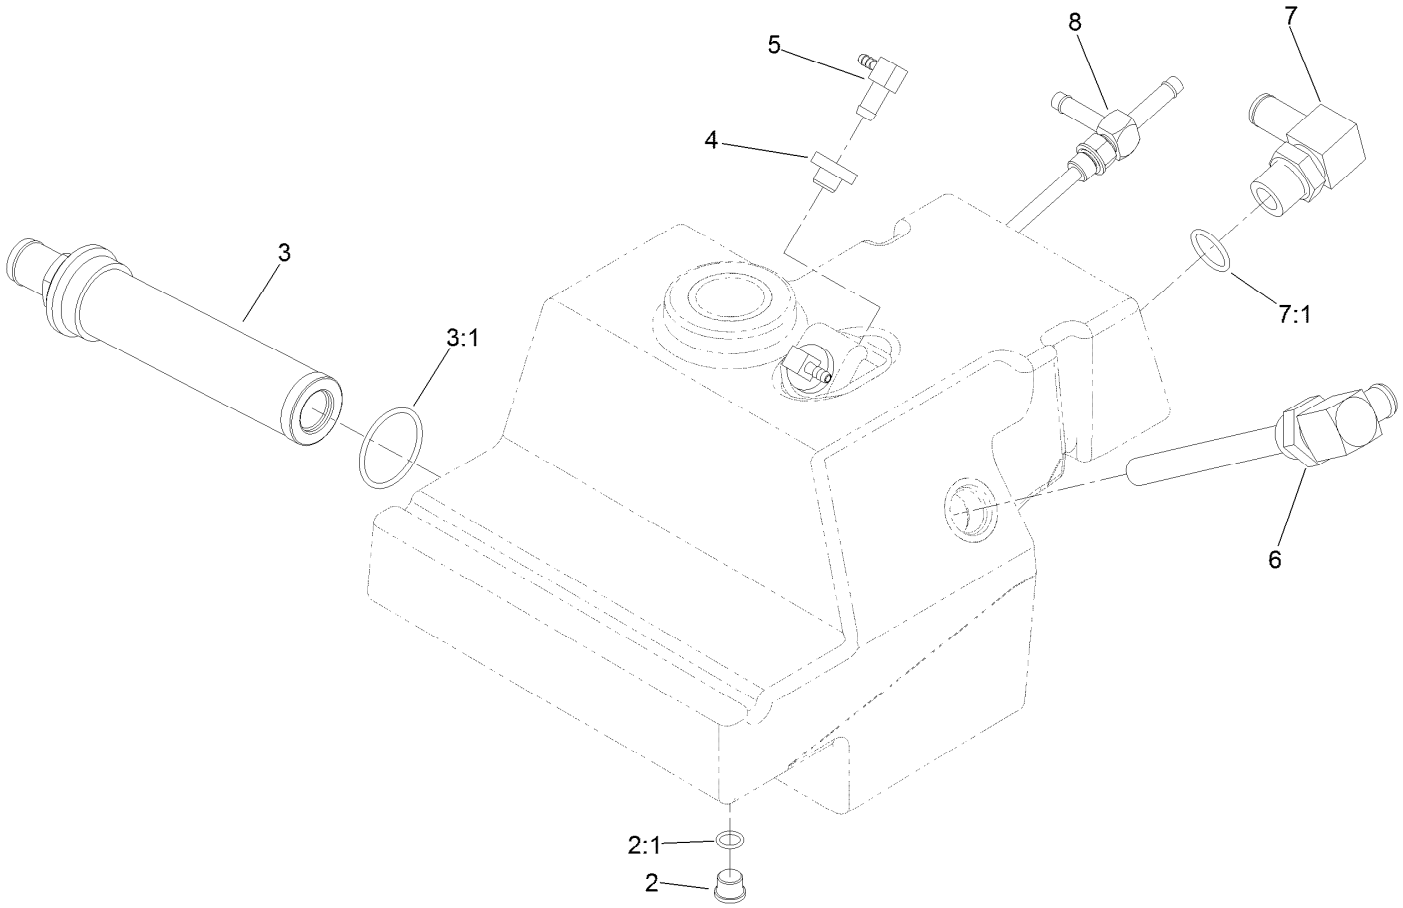

Hydraulic Reservoir Assembly No. 126-6764 (continued)

Ref.	Part Number	Qty.	Description
2	353-989	1	Plug-Hex, Hollow
2:1	237-42	1	O-Ring
3	104-7546	1	Tank Strainer ASM
3:1	340-136	1	O-Ring
4	46-6560	2	Bushing
5	104-5228	2	Fitting-Elbow, 90 DEG
6	126-6782	1	Fitting-Standpipe
7	353-987	1	Fitting-Elbow, 90
7:1	237-81	1	O-Ring
8	135-3740	1	Fitting-Tee, Drop Tube

Rear Wheel and Caster Assembly

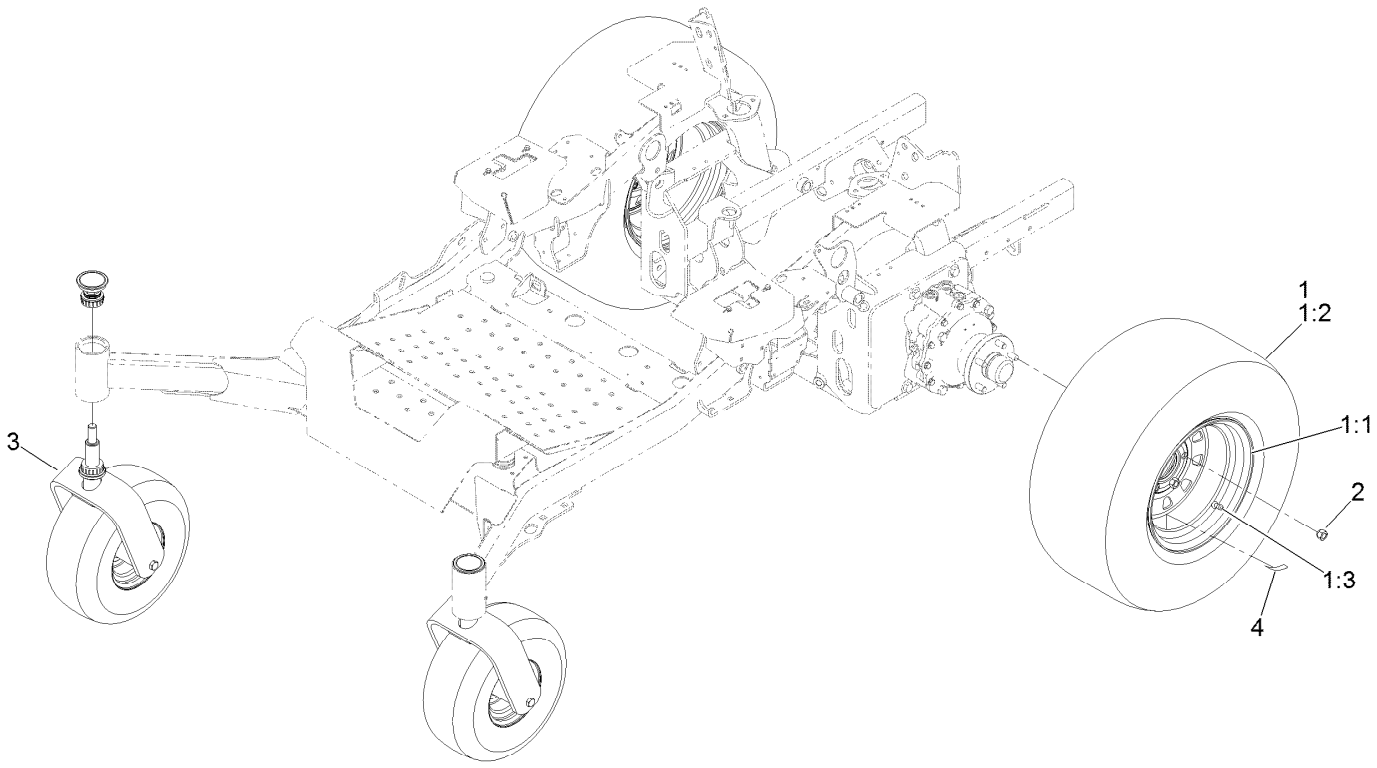


Rear Wheel and Caster Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-8104	2	Tire ASM
1:1	126-8106	1	Rim
1:2	126-8033	1	Tire
1:3	232-27	1	Stem-Valve
2	242-50	10	Nut-Lug
3		2	Caster Wheel ASM ●
4	135-0328	2	Decal-Torque, Wheel Nut

● Not serviced separately

Caster Wheel Assembly

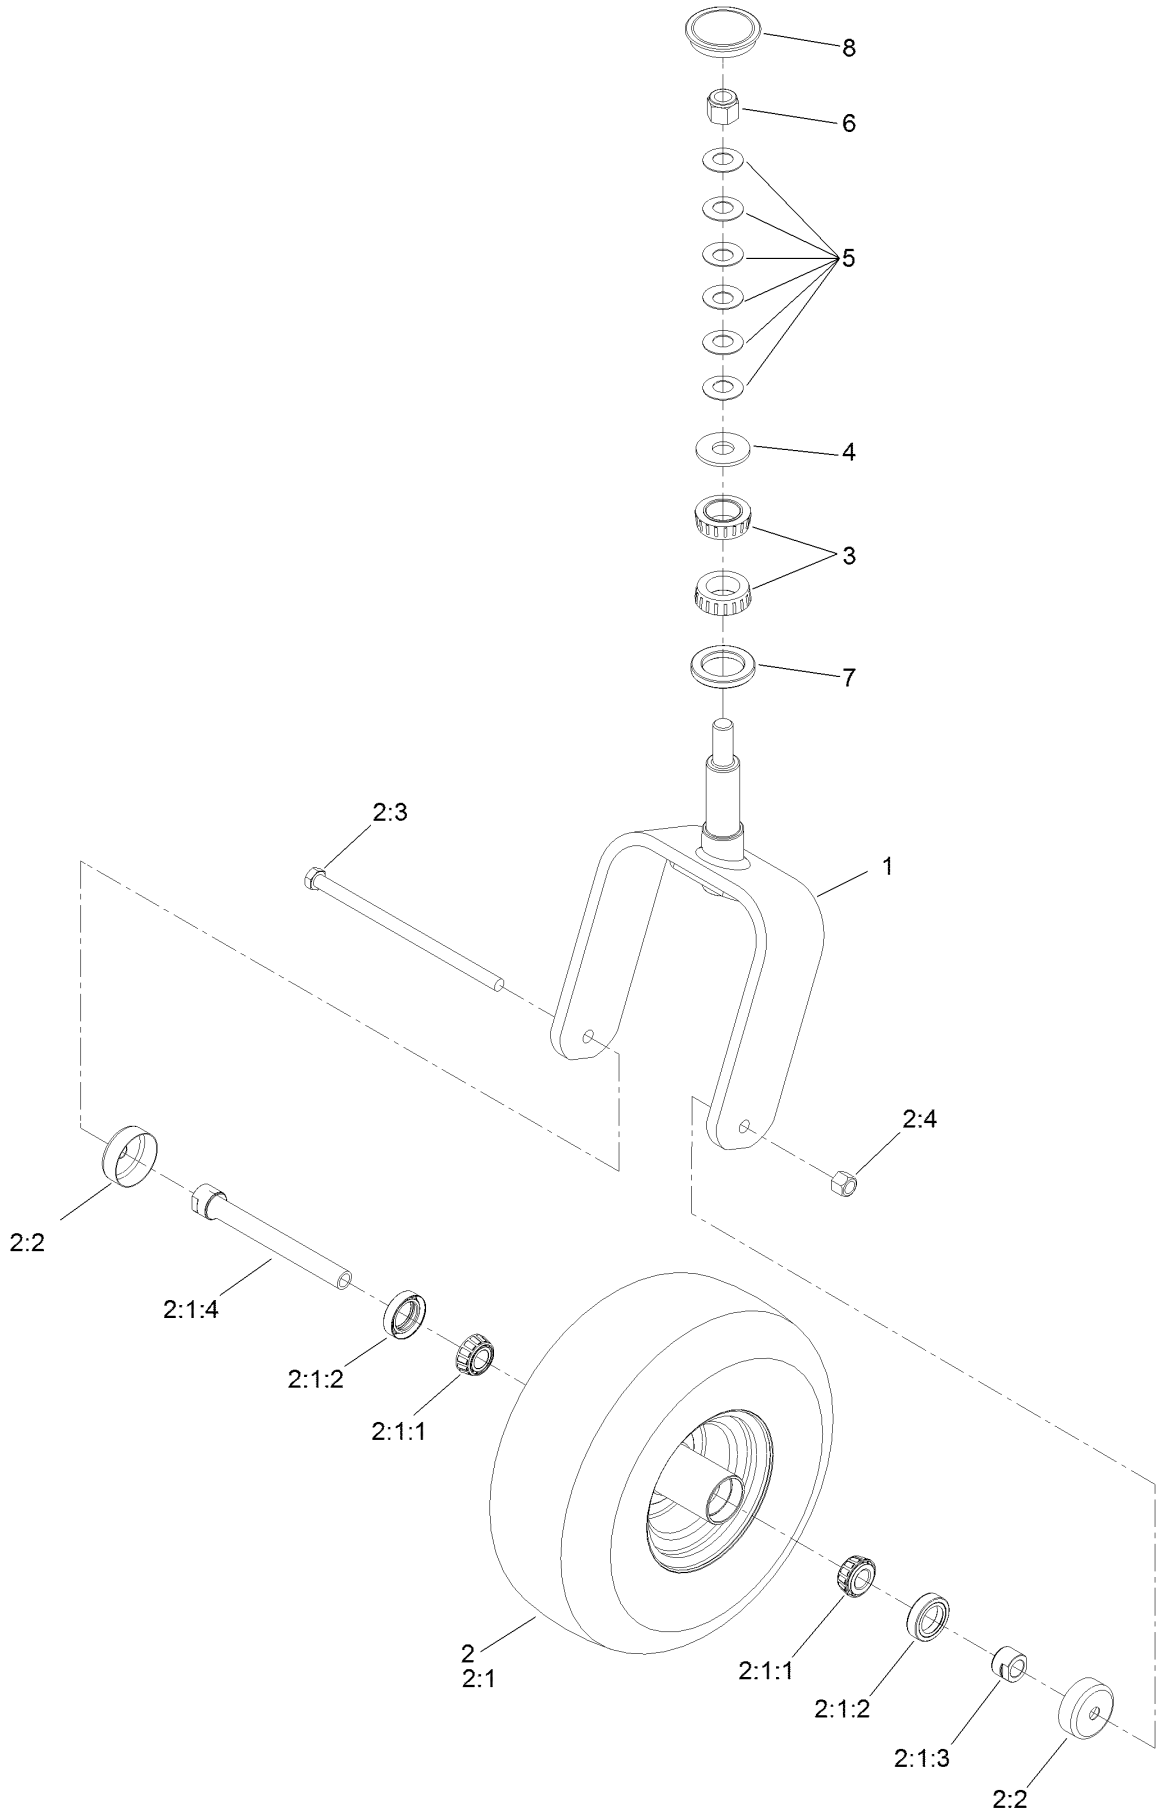


Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-8601-01	1	Fork-Caster
2	126-9344	1	Wheel And Tire ASM
2:1		1	Tire And Wheel ASM ●
2:1:1	1-633585	2	Bearing-Cone, Taper
2:1:2	103-0063	2	Seal-Caster
2:1:3	103-3051	1	Spacer-Nut
2:1:4	126-5361	1	Axle Caster ASM
2:2	103-2768	2	Guard-Seal
2:3	325-39	1	Screw-HH
2:4	3296-23	1	Nut-Lock, NI
3	103-9028	2	Bearing-Roller, Cone Taper
4	3256-8	1	Washer-Flat
5	1-633508	6	Washer-Bellville
6	3296-51	1	Nut-Lock, NI
7	135-0355	1	Seal-Grease
8	126-9369	1	Cap-Grease

● Not serviced separately


Parking Brake Assembly

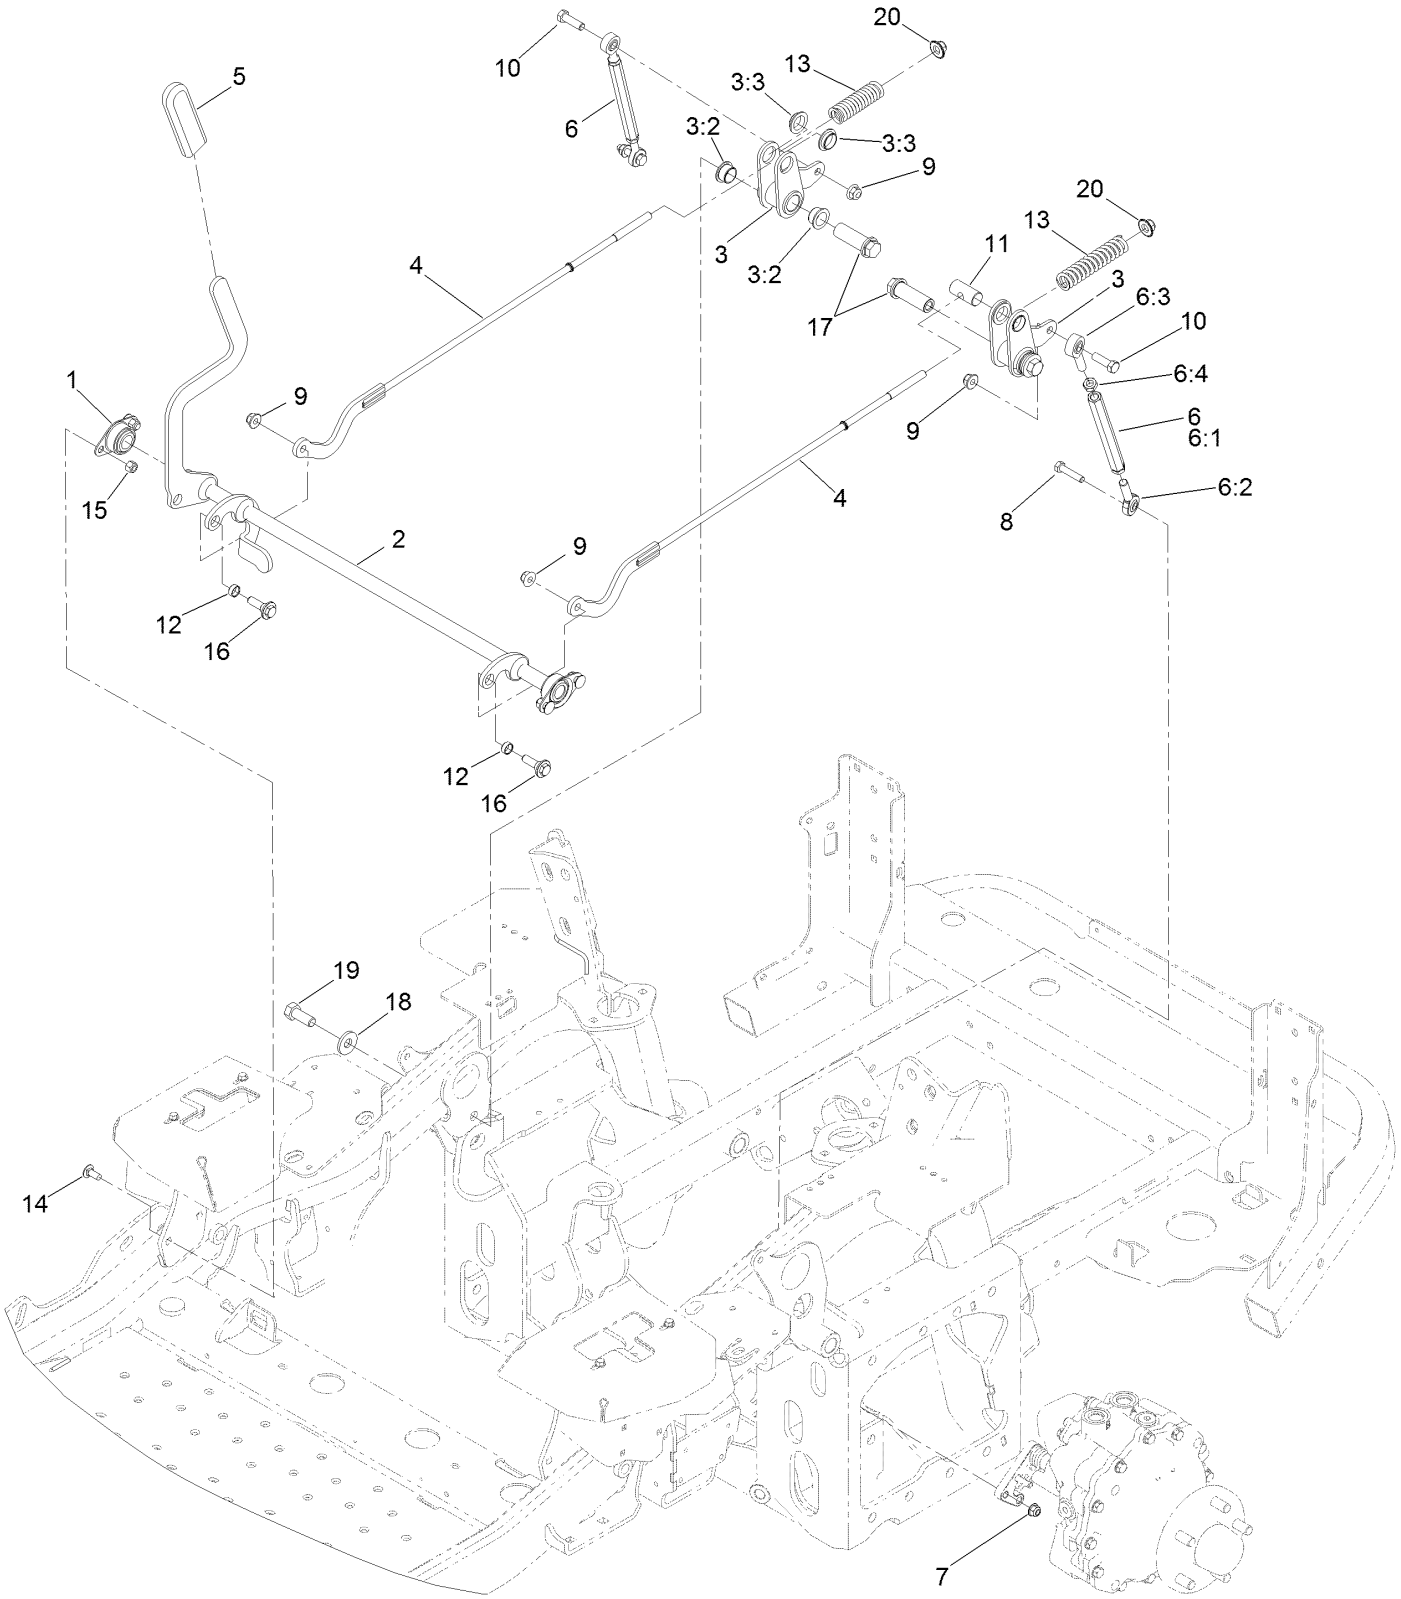

Parking Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-633102	2	Bearing-Flange, Side
2	126-2019	1	Shaft-Brake
3	126-3010	2	Brake Bellcrank ASM
3:2	109-8054	2	Bushing-Flange
3:3	135-2840	2	Bushing-Flange
4	126-3193	2	Link-Brake, Upper
5	1-633268	1	Grip-Lever
6	126-9171	2	Turnbuckle ASM
6:1	126-9172	1	Turnbuckle
6:2	126-9302	1	Bearing-End, LH Rod
6:3	1-613204	1	Balljoint
6:4	3220-3	1	Nut-HJ
7	104-8300	2	Nut-HF, NI
8	322-7	2	Screw-HH
9	104-8301	4	Nut-HF, NI
10	323-7	2	Screw-HH
11	1-633144	2	Pin-Trunion
12	133-5109	2	Bearing-Sleeve
13	109-2230	2	Spring-Compression
14	3230-23	4	Screw-CARR
15	3296-29	4	Nut-Lock, NI
16	614672	2	Screw-Shoulder, HWH
17	109-5891	2	Hub-Threaded
18	1-513435	2	Washer-Spring
19	325-5	2	Screw-HH
20	109-6658	2	Nut-Flange, NI


Fuel System Assembly

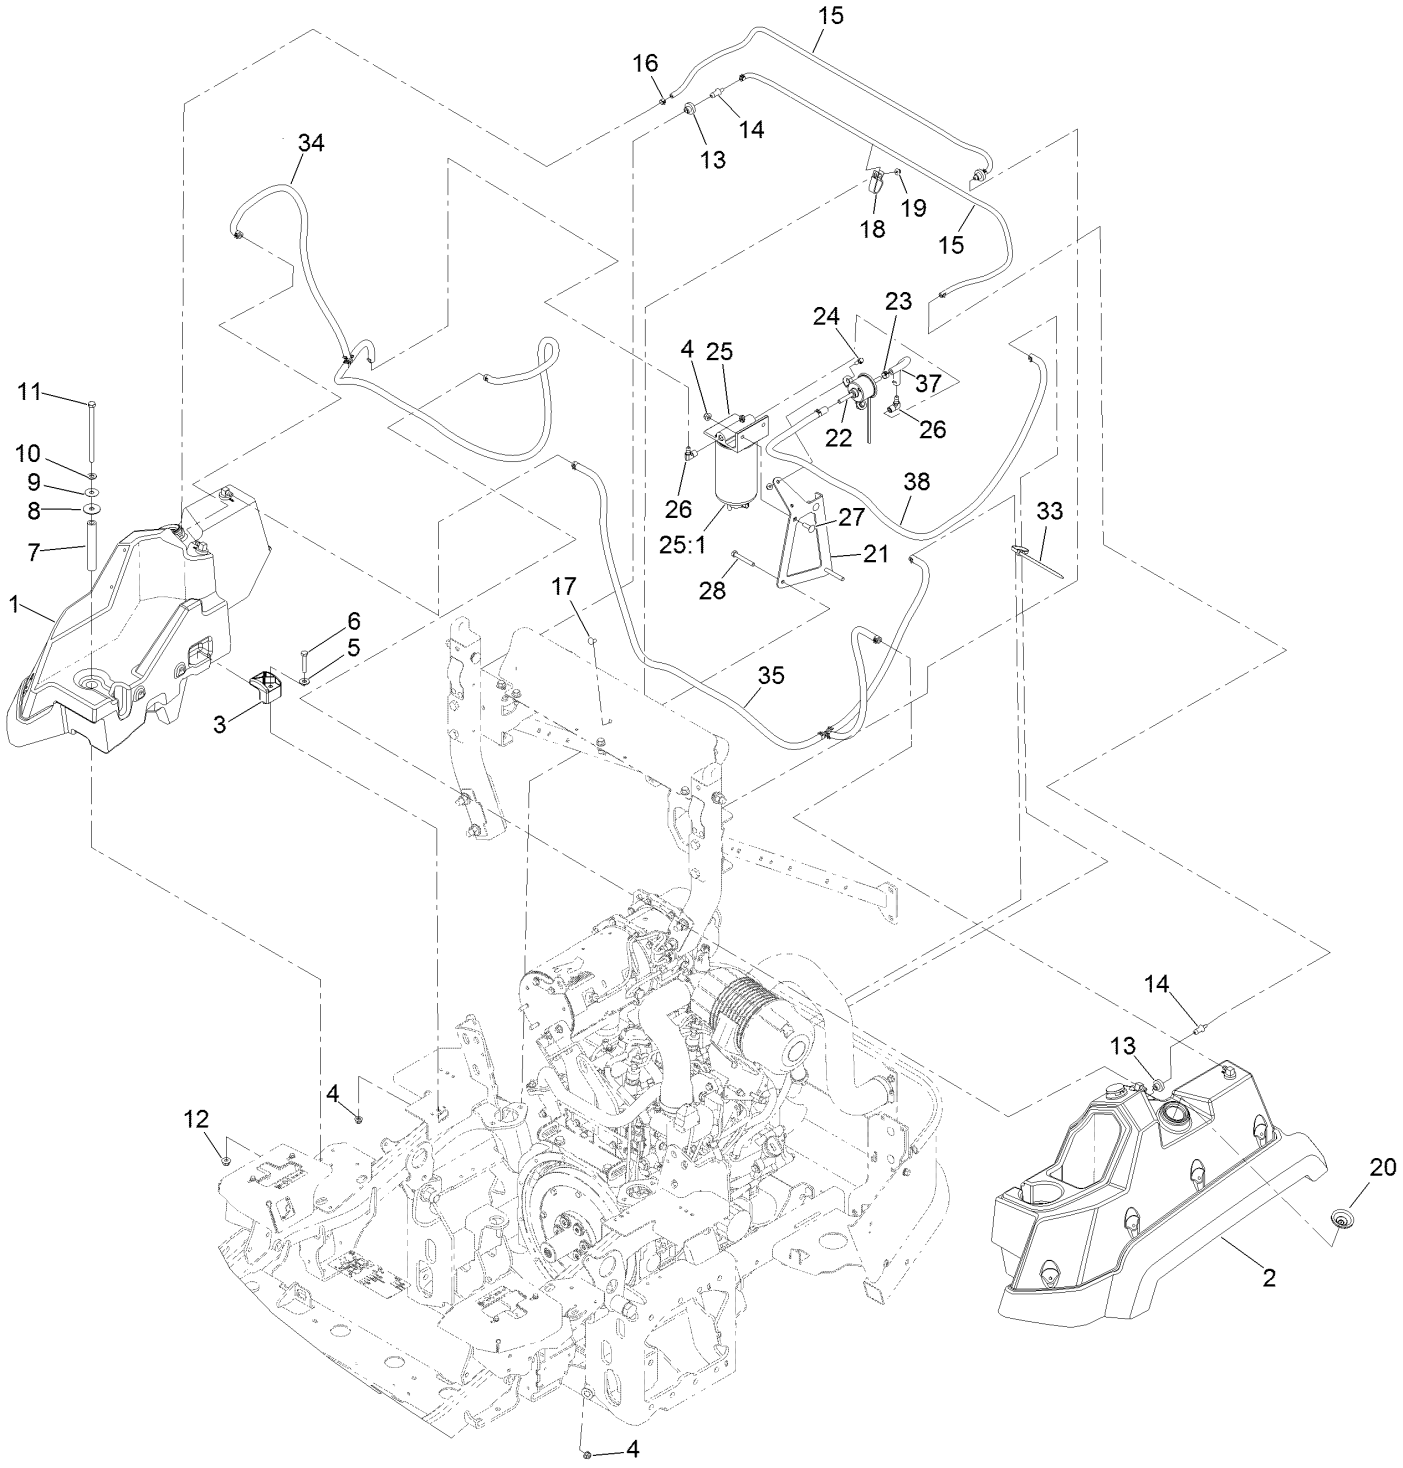

Fuel System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-8651	1	RH Fuel Tank ASM
2	126-8652	1	LH Fuel Tank ASM
3	107-4543	4	Clamp
4	104-8300	8	Nut-HF, NI
5	3256-3	4	Washer-Flat
6	322-21	4	Screw-HH
7	126-8335	2	Tube-Spacer
8	95-1905	2	Washer-Rubber
9	105-6814	2	Washer-Plain
10	3256-24	2	Washer-Flat
11	323-22	2	Screw-HH
12	104-8301	2	Nut-HF, NI
13	46-6560	2	Bushing
14	116-4630	2	Fitting-Orifice, Straight
15	117-6395	2	Hose-Vent, Tank
16	2412-80	4	Clamp-Hose
17	3229-11	3	Screw-CARR
18	92-5753	3	Clamp-Hose
19	104-7201	5	Nut-HF
20	135-2715	2	Cap-Fuel, Diesel
21	126-8795-03	1	Bracket-Filter, Fuel
22	121-5613	1	Pump-Fuel, Electric
23	92-2379	4	Clamp-Hose
24	32105-15	2	Screw-HWH
25	125-2914	1	Filter-Separator
25:1	125-2915	1	Filter-Fuel/Water Separator
26	353-781	2	Fitting-HYD, 90
27	3230-22	2	Screw-CARR
28	322-11	2	Screw-HH
33	1-303335	1	Tie-Plastic
34	135-0512	1	Fuel Suction Line ASM
35	135-0513	1	Fuel Return Line ASM
37	108-3280	1	Hose-Fuel
38	110-7503	1	Hose-Fuel


RH Fuel Tank Assembly No. 126-8651

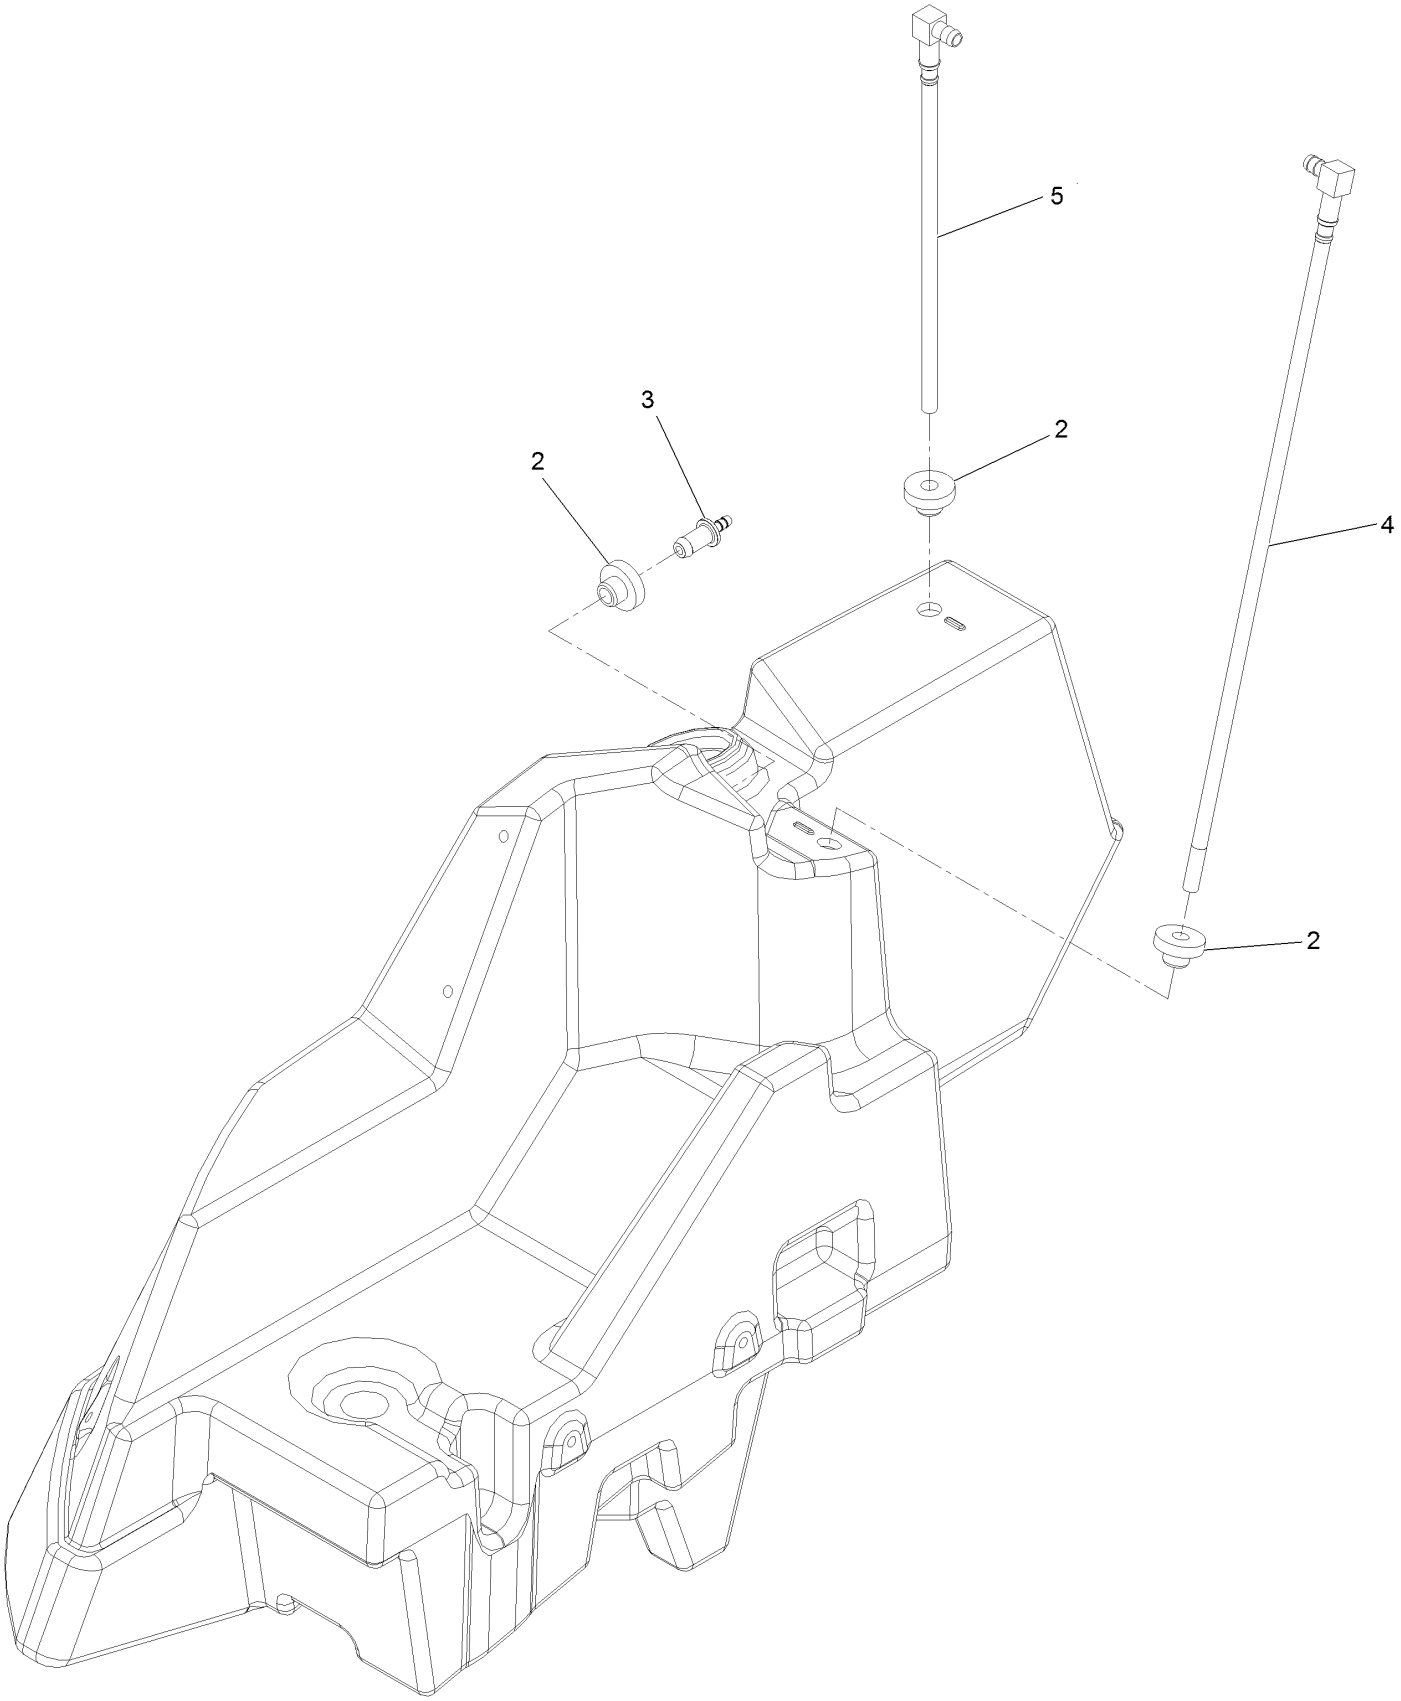

RH Fuel Tank Assembly No. 126-8651 (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	3	Bushing
3	116-4630	1	Fitting-Orifice, Straight
4	126-8647	1	Pick-Up-Fuel
5	126-8649	1	Return-Fuel


LH Fuel Tank Assembly 126-8652

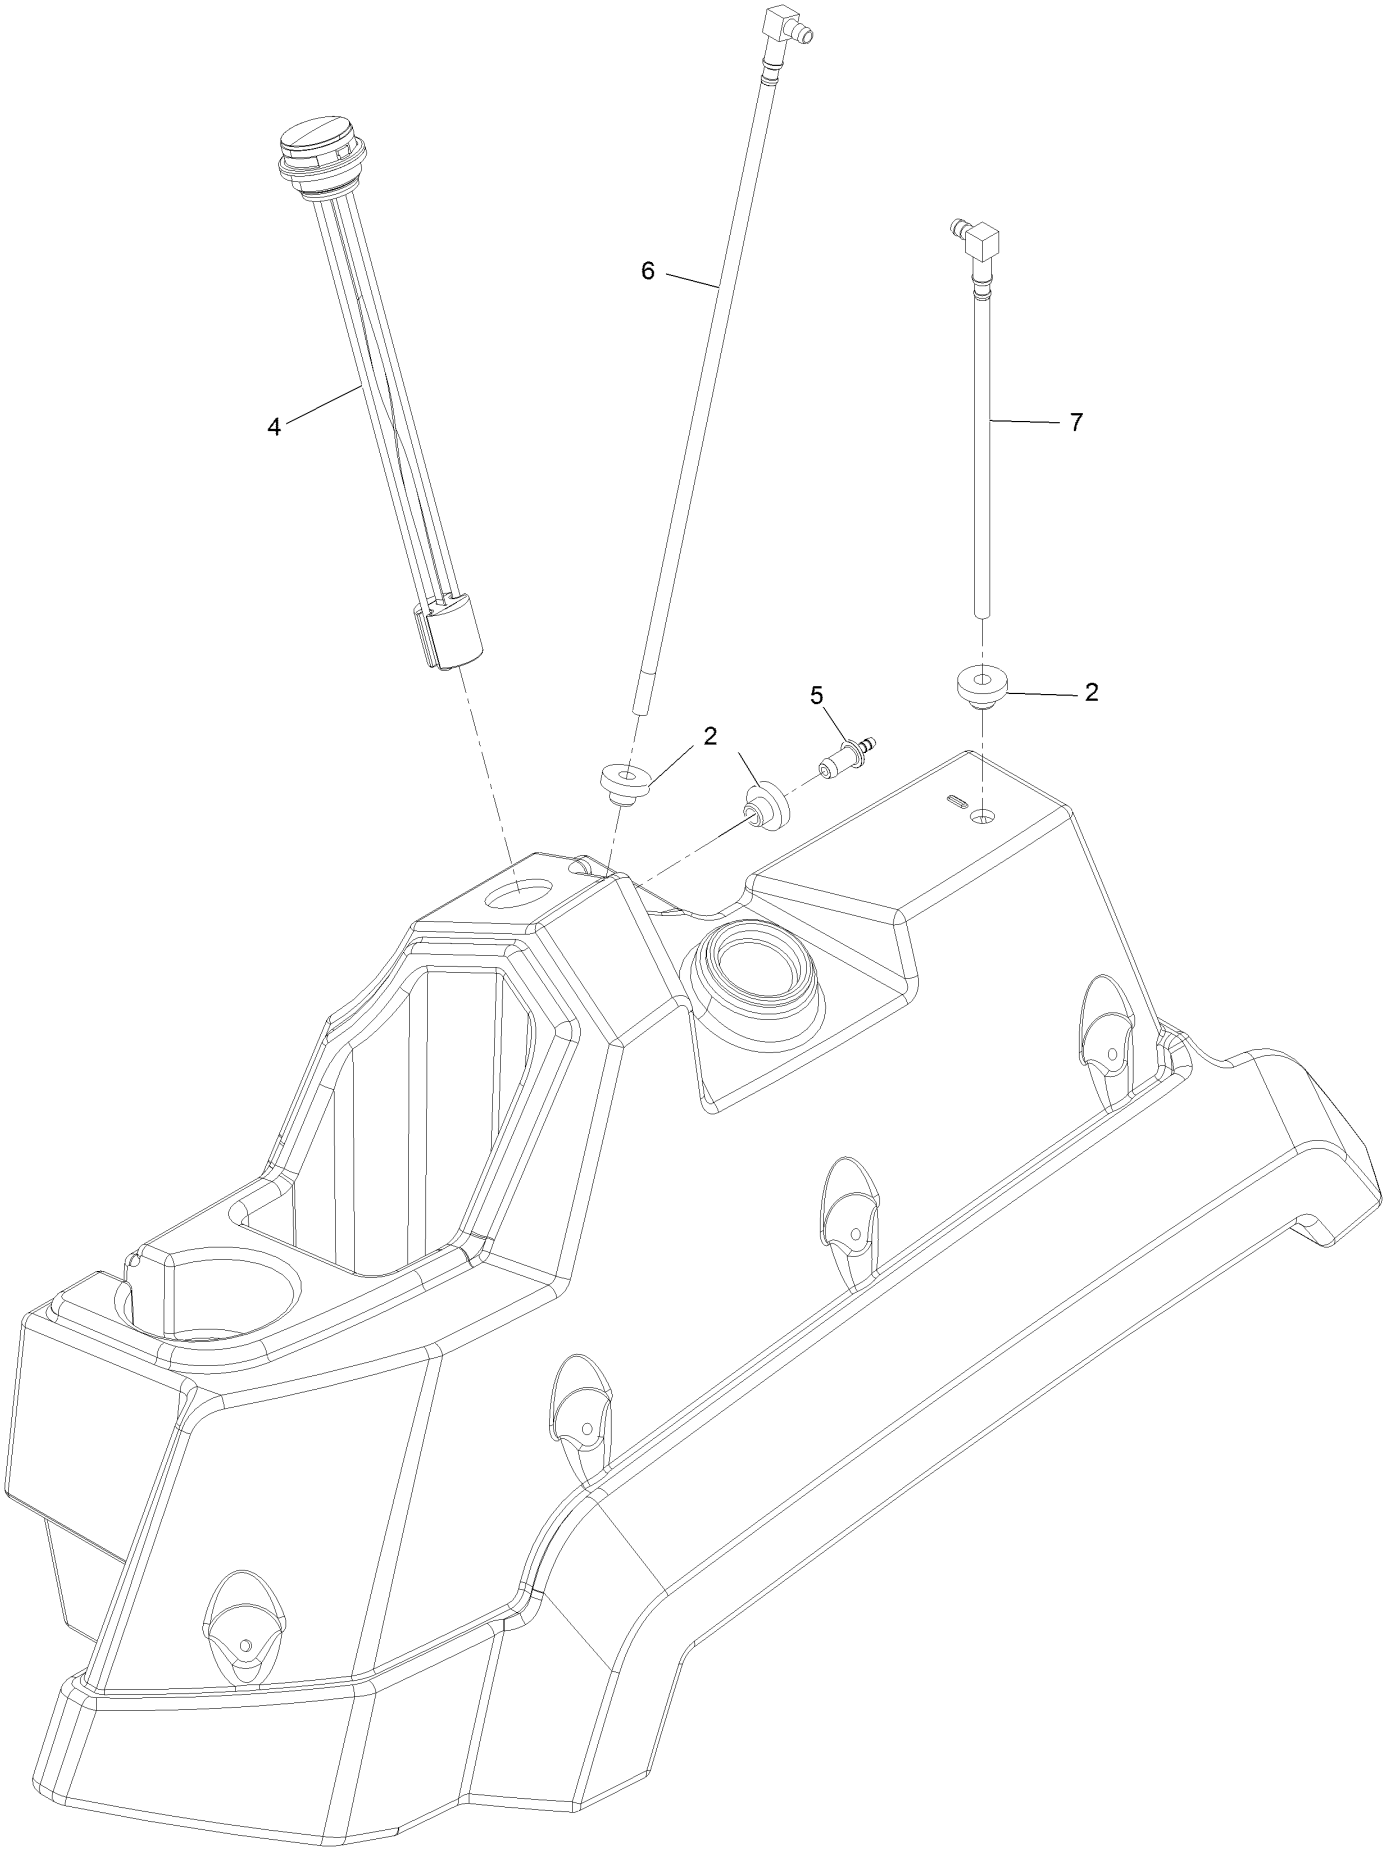

LH Fuel Tank Assembly 126-8652 (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	3	Bushing
4	126-8660	1	Gauge-Fuel
5	116-4630	1	Fitting-Orifice, Straight
6	126-8647	1	Pick-Up-Fuel
7	126-8649	1	Return-Fuel


Weight Assembly

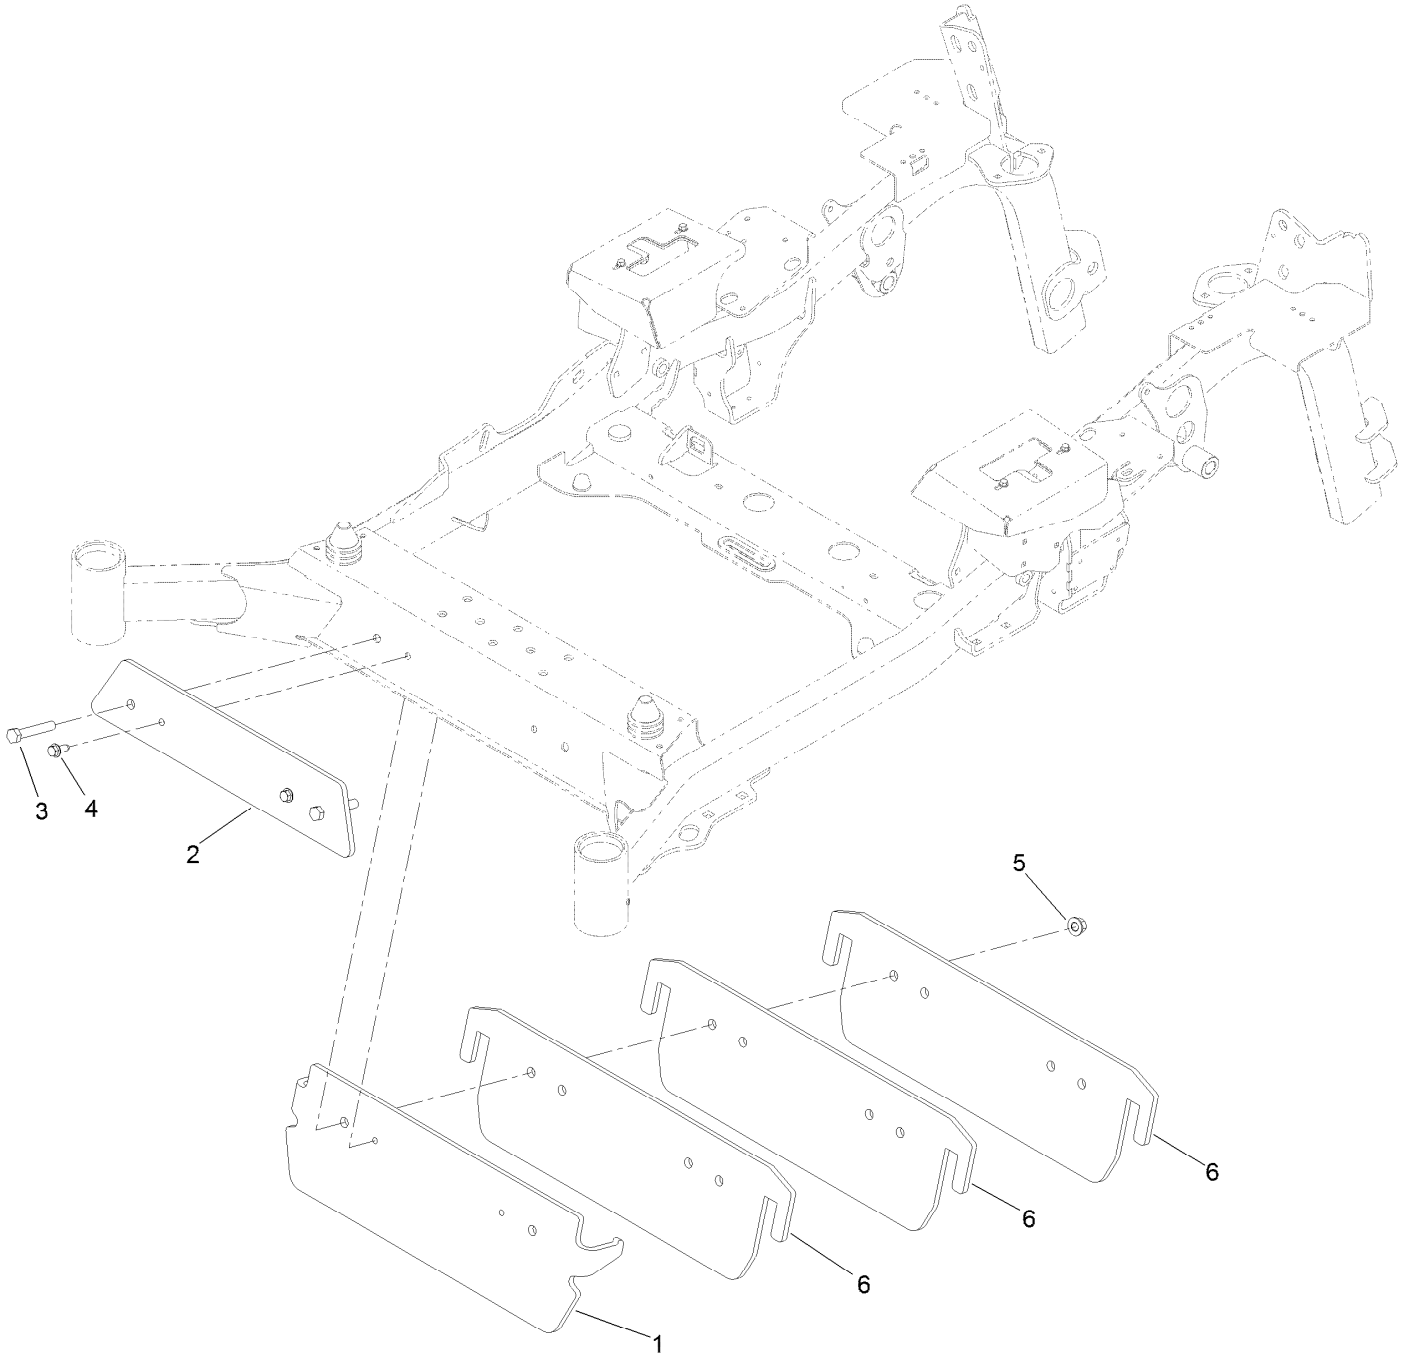

Weight Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-0968-01	1	Bracket-Weight
2	135-0960-01	1	Weight-Outer
3	115-4845	2	Screw-HH, TAP
4	126-1696	2	Screw-Forming, Thread
5	99-5107	2	Nut-Lock
6	135-0961-01	10	Weight-Inner


Seat Mount Assembly

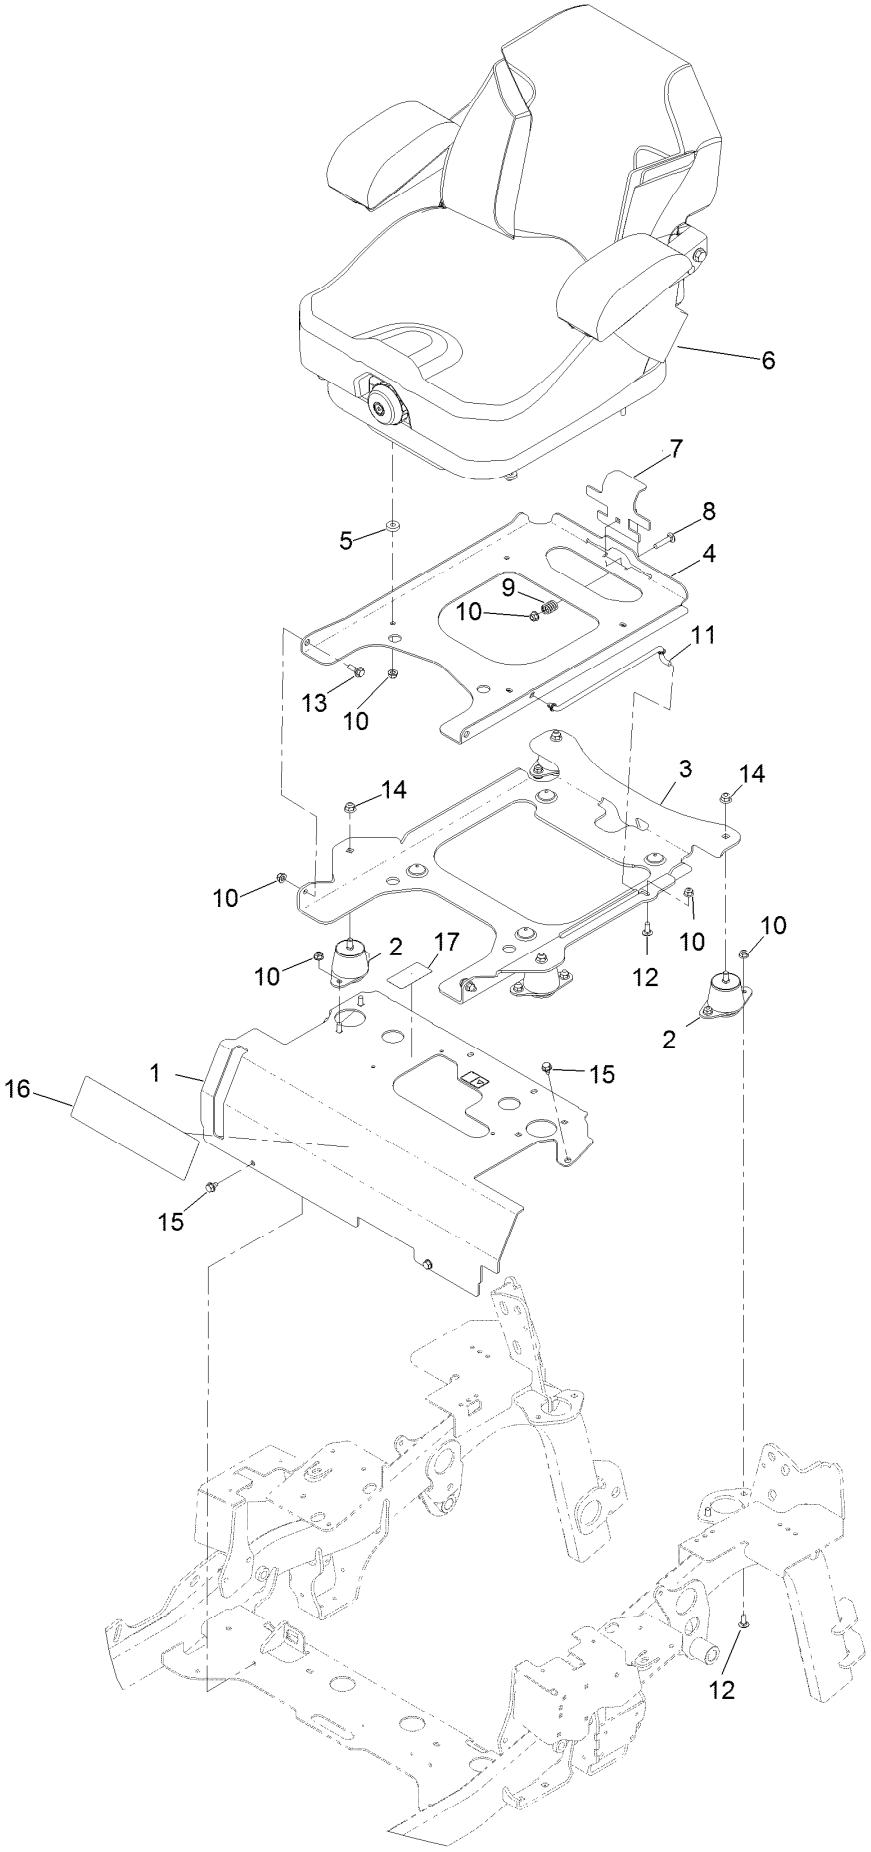

Seat Mount Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-7286	1	Seat Mount ASM
2	109-9034	4	Isolator-Seat
3	126-2701-03	1	Plate-Support, Tilt Seat
4	126-2700-03	1	Plate-Frame, Seat
5	26-4840	4	Spacer-Pin, Mounting
6	140-8003	1	Seat-Suspension
7	126-1855	1	Plate-Latch, Seat
8	3230-4	1	Bolt-CARR
9	107-3017	1	Spring-Compression
10	104-8300	16	Nut-HF, NI
11	116-0070	1	Rod-Prop
12	3230-23	9	Screw-CARR
13	116-1297	2	Screw-Shoulder
14	104-8301	4	Nut-HF, NI
15	9266934	4	Screw
16	136-9040	1	Decal
17	135-2837	1	Decal-Fluid, Transmission


Seat Assembly No. 140-8003

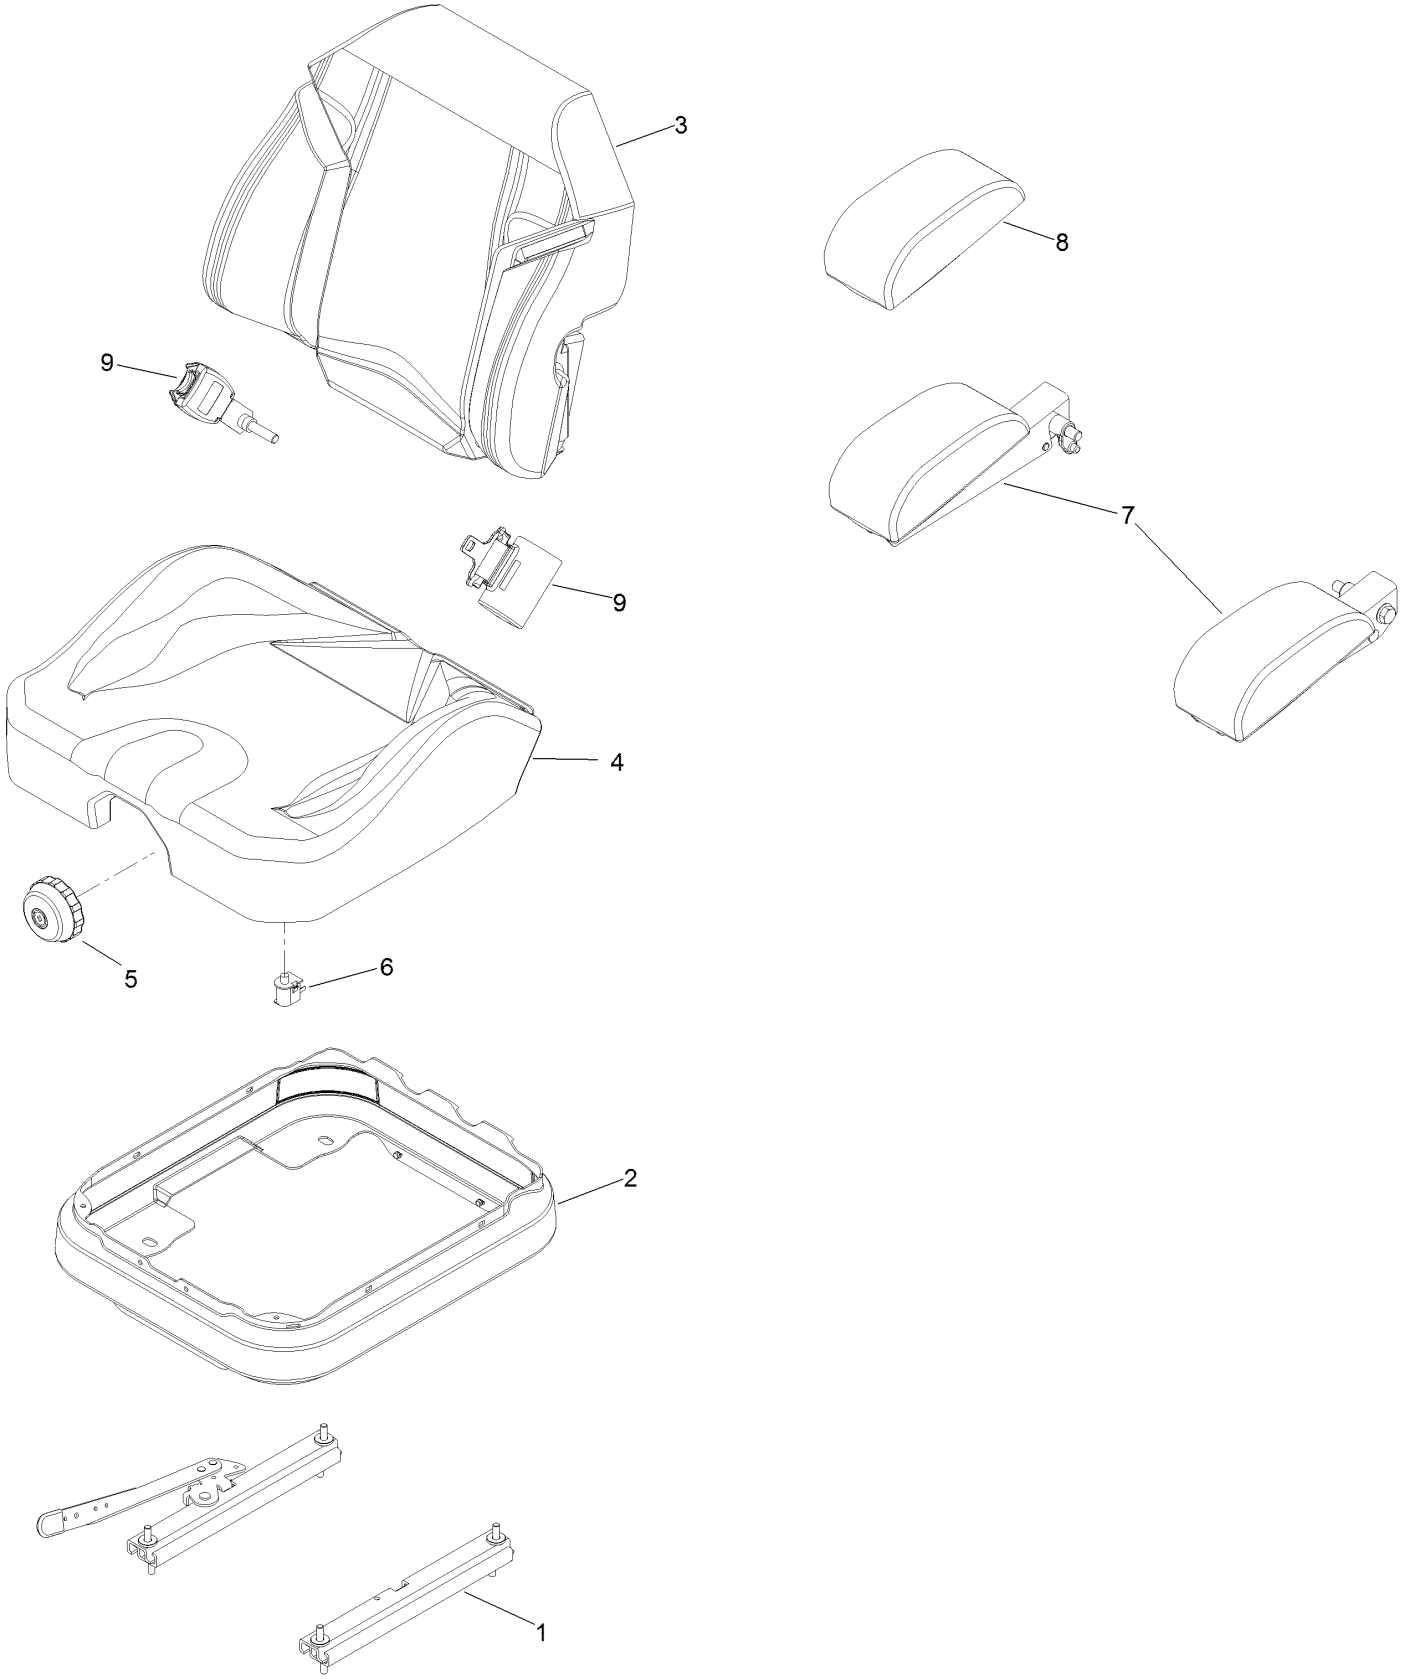

Seat Assembly No. 140-8003 (continued)

Ref.	Part Number	Qty.	Description
1	140-8012	1	Set, Seat Track
2	116-5659	1	Cover-Suspension Bellows
3	140-8004	1	Cover-Back
4	140-8005	1	Cover-Cushion
5	116-8911	1	Knob-Adjuster
6	82-2190	1	Switch-Bail
7	109-9803	1	Arm Rest Set
8	109-9802	1	Arm Rest Pad Set
9	126-2061	1	Seat Belt Service Kit


Motion Control Assembly

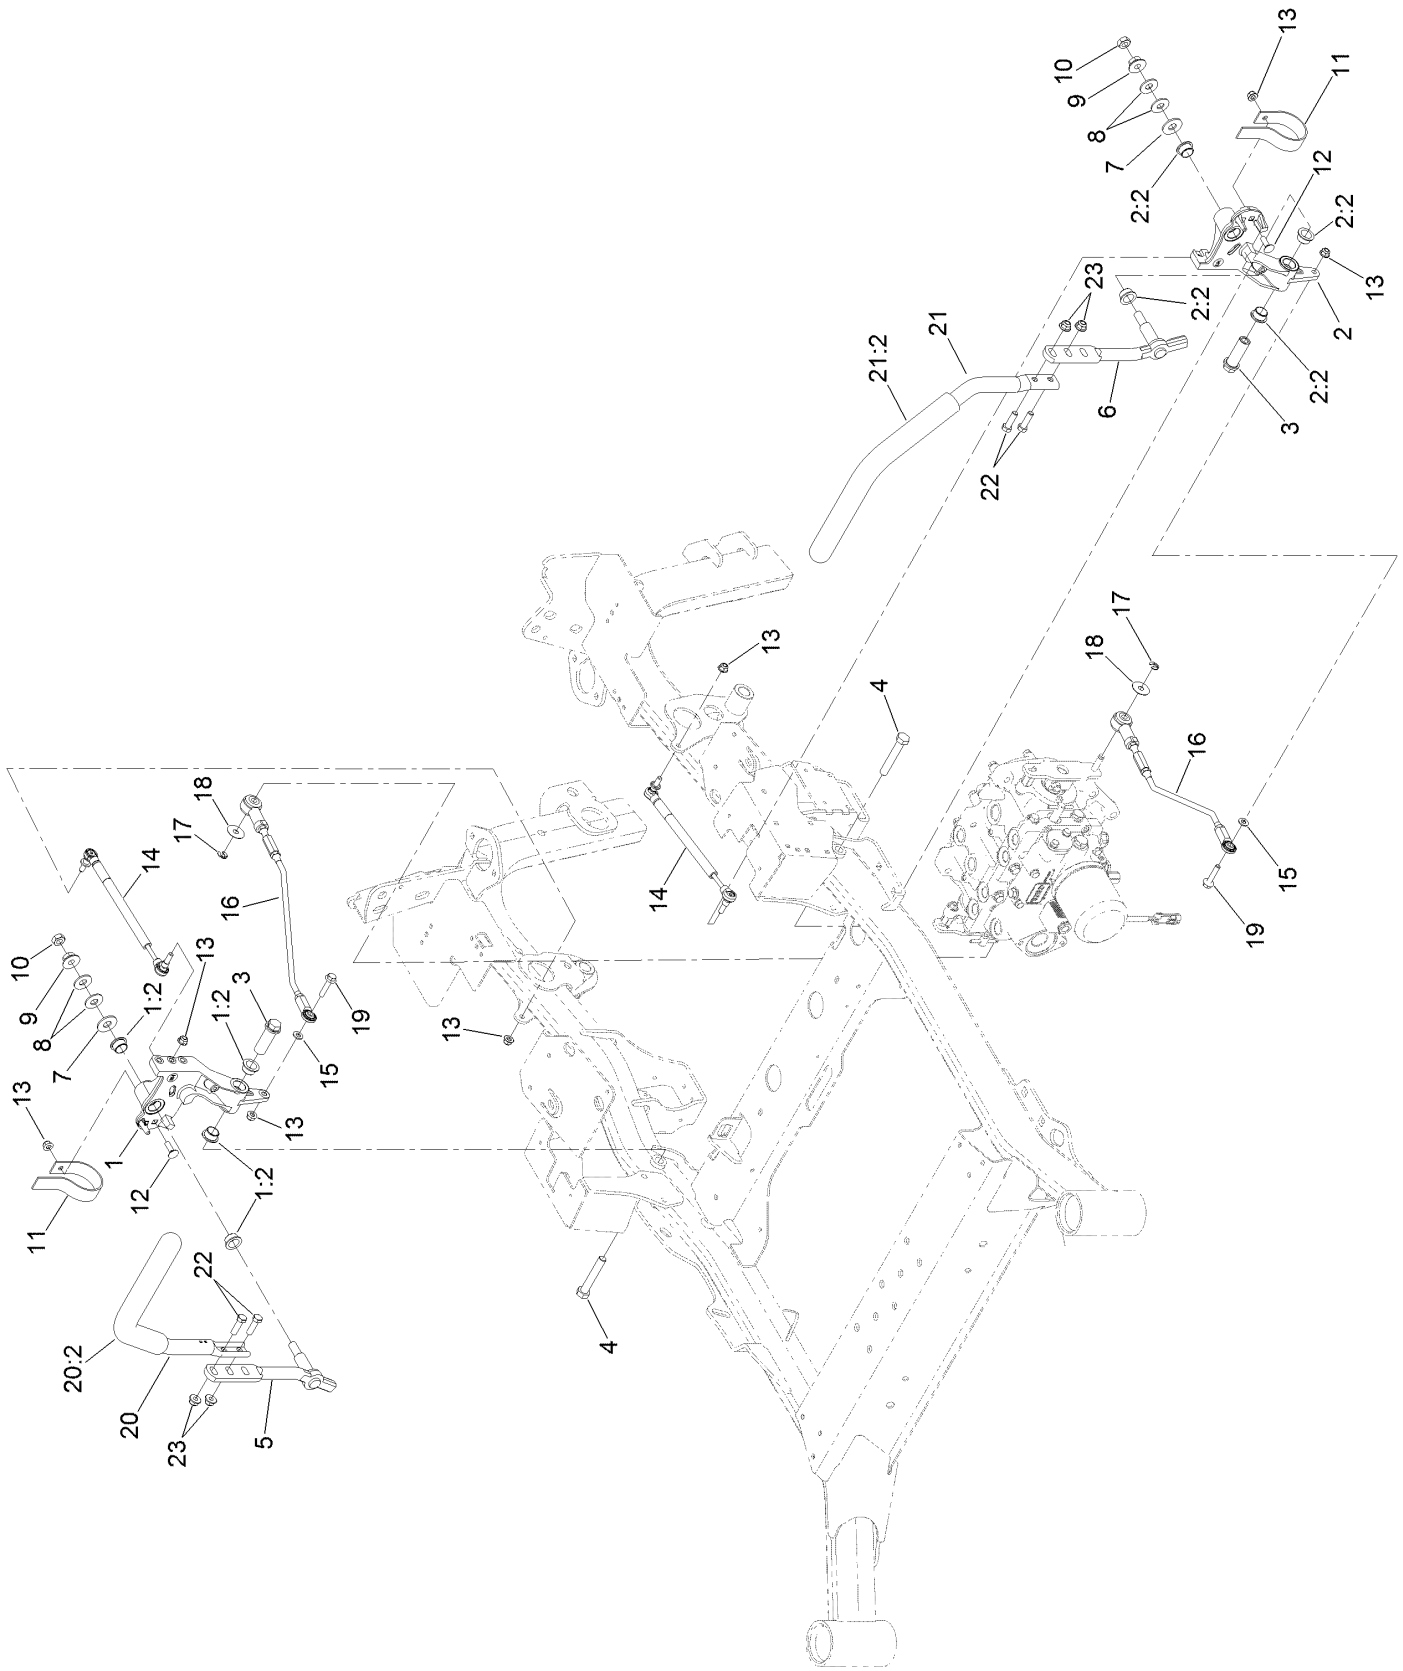

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-0880	1	RH Motion Control And Bushing ASM
1:2	109-8054	4	Bushing-Flange
2	116-0881	1	LH Motion Control And Bushing ASM
2:2	109-8054	4	Bushing-Flange
3	109-5891	2	Hub-Threaded
4	325-12	2	Screw-HH
5	116-0039	1	Lever-Control Motion, RH
6	116-0040	1	Lever-Control Motion, LH
7	3256-6	2	Washer-Flat
8	109-9505	4	Washer-Spring
9	32128-56	2	Nut-HF
10	3218-5	2	Nut-Jam
11	109-5575	2	Spring-Leaf
12	3230-2	2	Bolt-CARR
13	104-8300	8	Nut-HF, NI
14	116-0027	2	Damper-Control, Motion
15	3256-23	2	Washer-Plain
16	126-6131	2	Front Linkage Rod ASM
17	32151-47	2	Ring-Retaining
18	105-6814	2	Washer-Plain
19	115-1794	2	Screw-HHF
20	126-7700	1	RH Steering Handle ASM
20:2	109-5668	1	Grip-Lever, Control
21	126-7699	1	LH Steering Handle ASM
21:2	109-5668	1	Grip-Lever, Control
22	323-7	4	Screw-HH
23	104-8301	4	Nut-HF, NI


Rod Linkage Assembly No. 126-6131

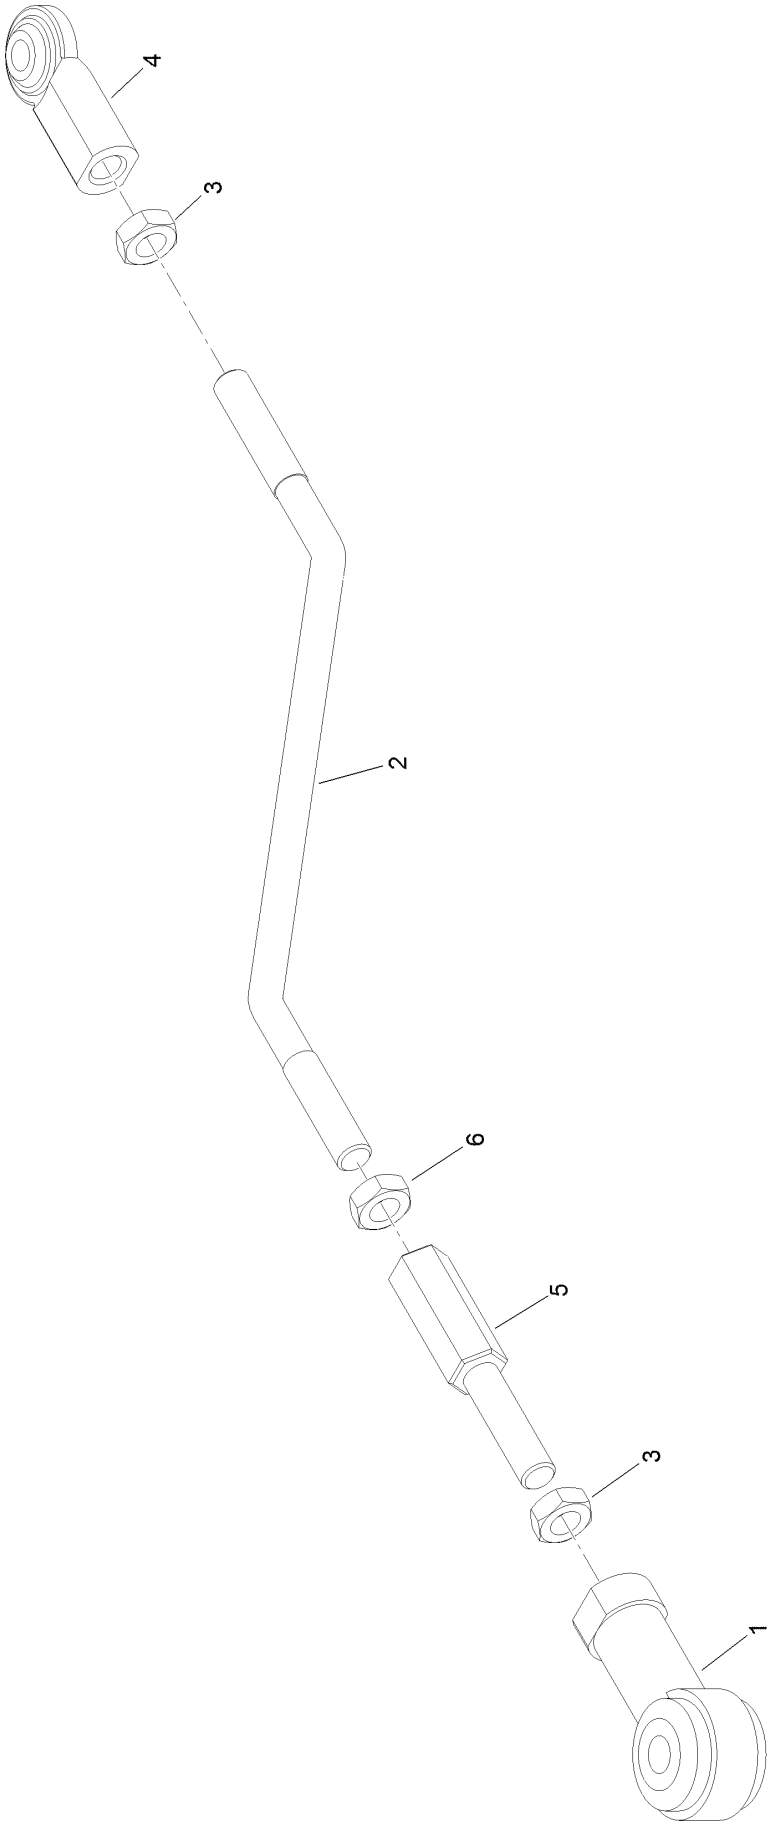

Rod Linkage Assembly No. 126-6131 (continued)

Ref.	Part Number	Qty.	Description
1	105-7199	1	End-Rod, Isolated
2	126-6469	1	Rod-Linkage, Rear
3	3220-3	2	Nut-HJ
4	103-2463	1	Joint-Ball, End
5	116-4755	1	Rod-Adjustment
6	3220-16	1	Nut-Hex Jam, LH

Electrical Assembly

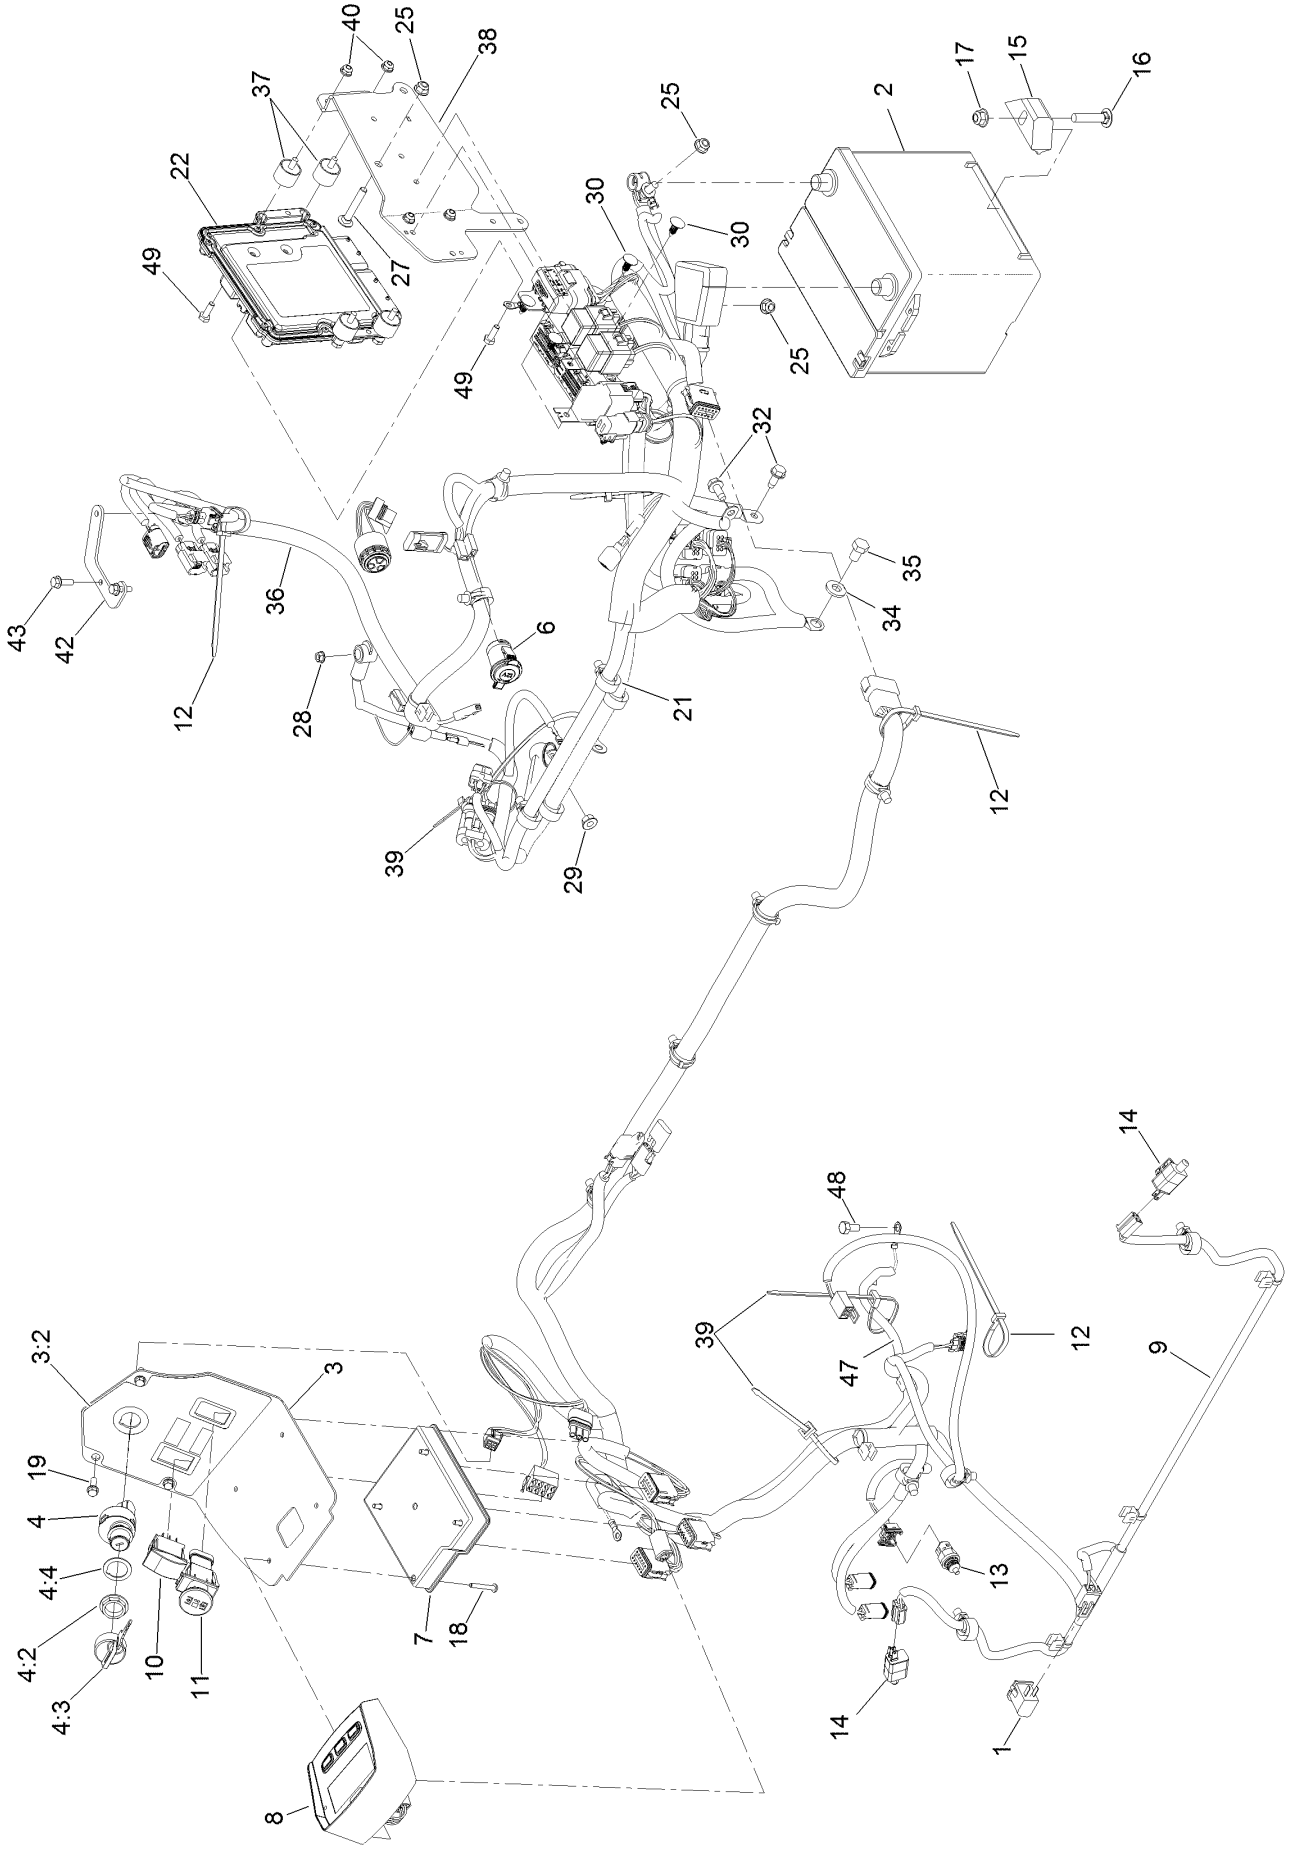


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	82-2190	1	Switch-Bail
2	106-5187	1	Battery-Dry
3	135-6122	1	Console ASM
3:2	126-9278	1	Decal-Control Panel
4	126-6285	1	Ignition Switch ASM
4:2	108-8660	1	Nut-Mounting
4:3	106-5270	1	Ignition Key Set
4:4	108-8659	1	Washer-Backup
6	126-6499	1	Port-Power, 12V
7	135-3427	1	Module-Mcu
8	126-9976	1	Module-Horizon
9	126-7262	1	Harness-Wire
10	100-1535	1	Switch-Rocker, (On)-Off-(On)
11	126-6187	1	Switch-PTO, Sealed
12	1-303335	3	Tie-Plastic
13	126-7698	1	Sensor-Temperature
14	110-6765	2	Switch
15	138-6335	1	Retainer-Battery
16	3231-5	1	Screw-CARR
17	104-8301	1	Nut-HF, NI
18	126-5092	4	Screw-PPH
19	32105-15	3	Screw-HWH
21	126-7406	1	Cable-Battery
22	127-3085	1	E C U ASM
25	104-8300	4	Nut-HF, NI
27	3230-6	2	Bolt-CARR
28	33003-00	1	Nut-HF
29	127-2371	1	Nut-HF
30	117-2382	4	Plug-Plastic
32	32144-70	2	Screw-HWHTF
34	98-5975	1	Washer-Belleville
35	33115-016	1	Screw-HH
36	126-7352	1	Harness-Wire ●
37	125-2674	4	Mount-Cylindrical
38	126-8706-03	1	Mount-Control Unit, Engine
39	3290-378	3	Tie-Cable
40	104-7201	4	Nut-HF
42	135-0071	1	Bracket-Wiring, Engine
43	33103-020	2	Screw-HHF
47	135-3998	1	Harness-Wire, Jumper ●
48	99-5132	1	Bolt
49	321-4	4	Screw-HH

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.


Wire Harness Assembly No. 126-7352

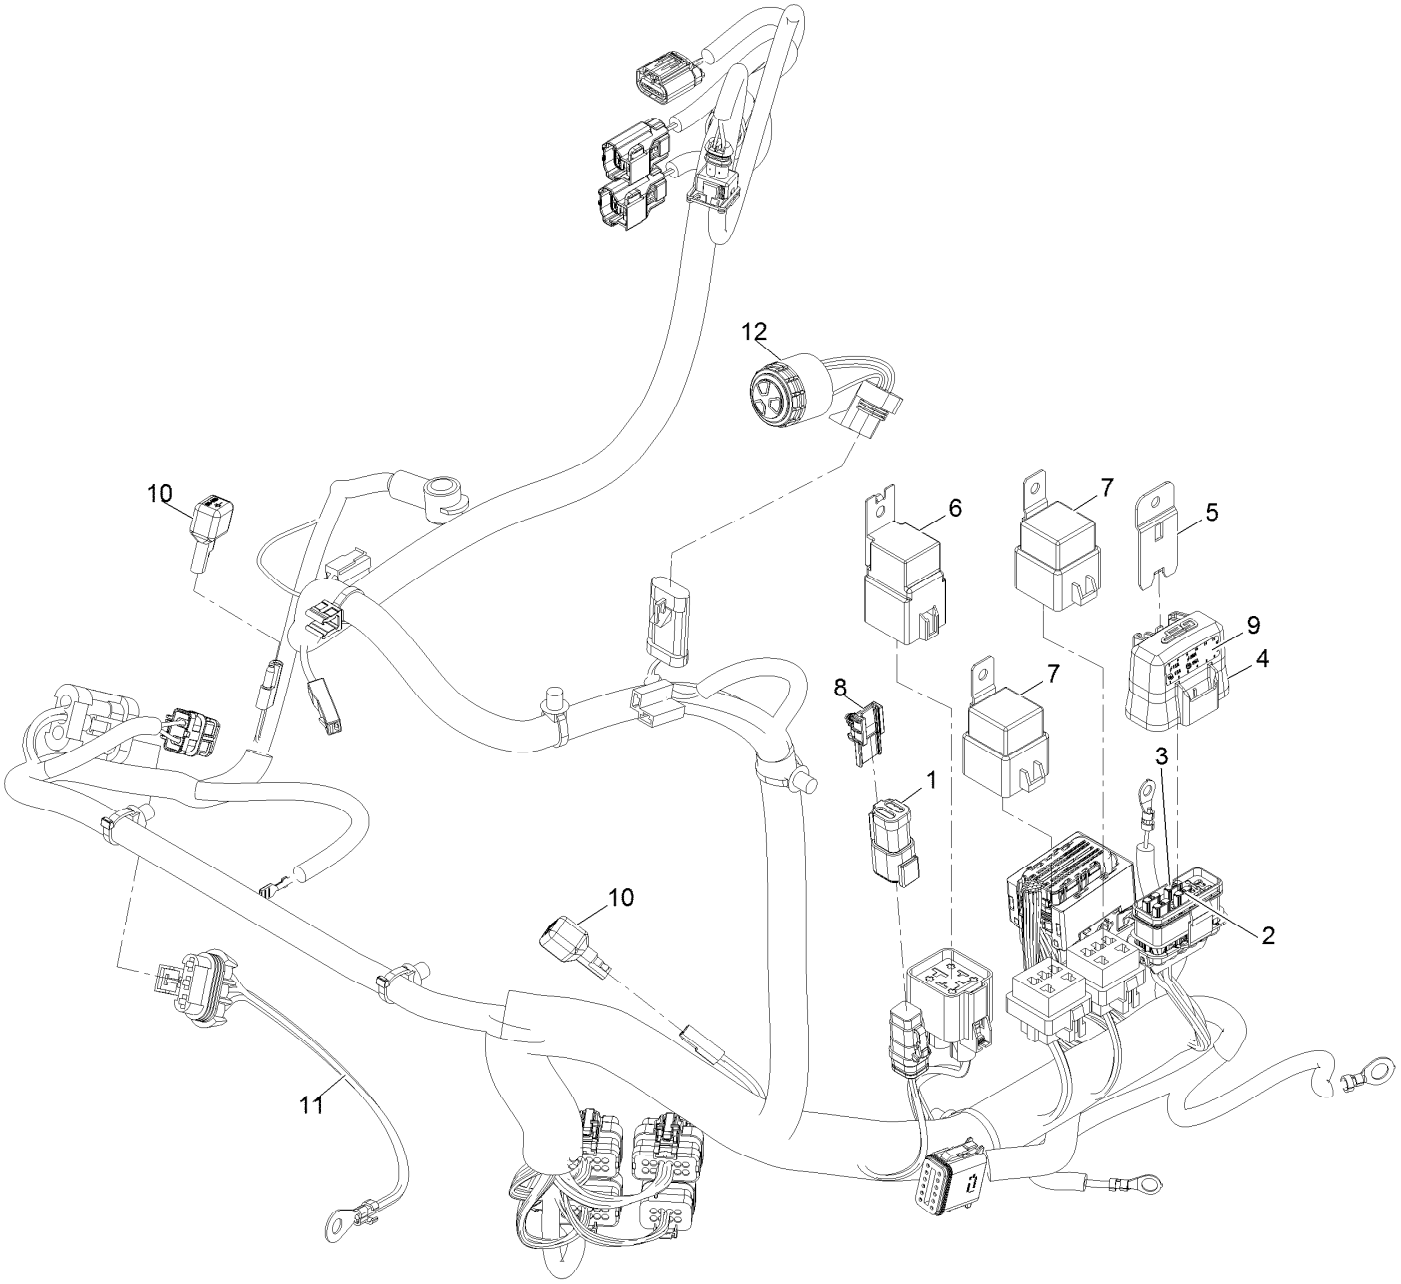

Wire Harness Assembly No. 126-7352 (continued)

Ref.	Part Number	Qty.	Description
1	32160-359	1	Connector (6M)
2	121-8867	3	Fuse-Mini Blade, 15 Amp
3	121-8869	1	Fuse-Mini Blade, 25 Amp
4	32180-176	1	Cover-Block, Fuse
5	32180-177	1	Clip-Mounting
6	127-7514	1	Relay-70A
7	99-7430	2	Relay-Mini
8	32180-103	1	Clip-Connector
9	126-9351	1	Decal-Fuse
10	100-4918	2	Diode
11	99-3441	1	Harness-Wire, Fusible Link
12	126-6286	1	Alarm-Dual Tone


Deck Lift Assembly

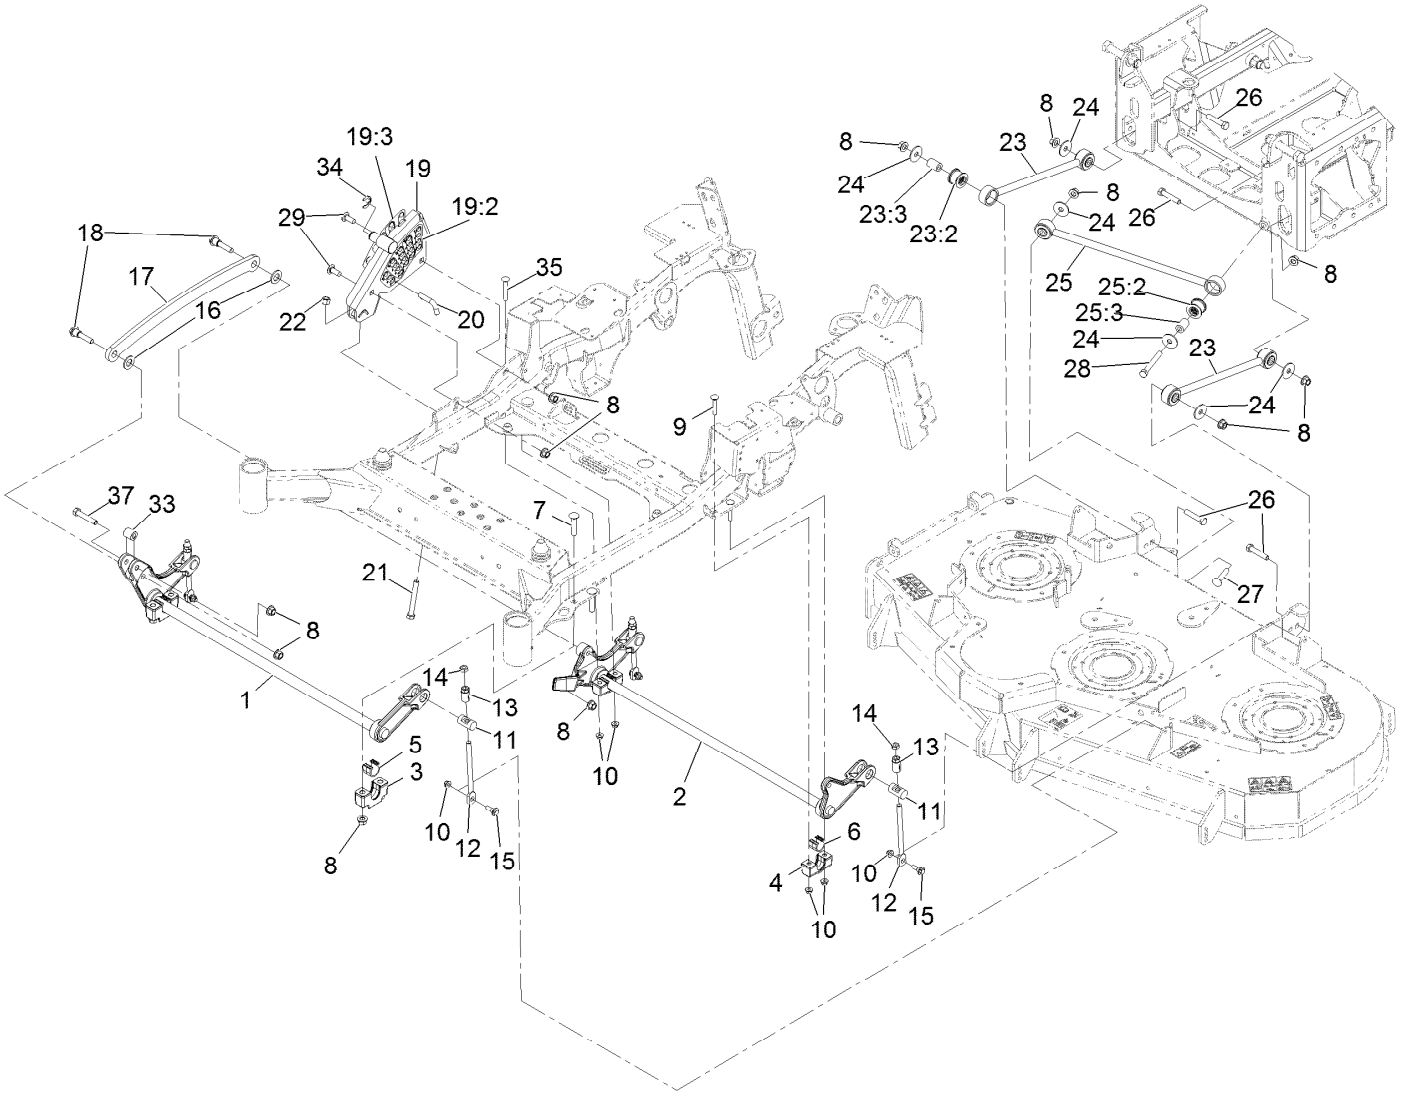

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-1216-03	1	Lift-Deck, Front
2	116-2645-03	1	Lift-Deck, Rear
3	109-9409	2	Support-Bearing, Cross Shaft (Front)
4	127-0553	2	Support-Bearing, Cross Shaft (Rear)
5	109-9410	2	Bearing-Cross Shaft, Front
6	109-7173	2	Bearing-Cross Shaft, Rear
7	116-1700	4	Bolt-Carriage 1/2-13 X 2 1/2 Spl Neck
8	99-5107	15	Nut-Lock 1/2-13
9	3231-7	3	Bolt-Carriage 3/8-16 X 2 1/4
10	104-8301	8	Nut-Nyloc 3/8-16 Flg
11	109-8353	4	Trunnion
12	109-8007	4	Link-Adjuster, Deck Lift
13	109-7840	4	Adjuster-Lift, Deck
14	3218-5	4	Nut-Jam 1/2-13
15	109-9840	4	Screw-Hex Flange 3/8-16 X .80
16	3256-28	2	Washer-3/4 SAE
17	116-0797-03	1	Link-Lift, Deck
18	116-2022	2	Screw-Hex Flange 1/2-13 X 1.90
19	126-7866	1	HOC ASM
19:2	126-9275	1	Decal-HOC
19:3	135-1432	1	Decal-HOC, Outer
20	116-5584	1	Pin-HOC
21	116-0559	1	Bolt-HH 1/2-13 X 4 Tap
22	3296-23	1	Nut-Nyloc 1/2-13
23	109-7952	2	Deck Strut ASM
23:2	109-5009	2	Bushing-Suspension, Rubber
23:3	109-5010	2	Spacer
24	86-1990	6	Washer
25	109-5013	1	Panhard Rod ASM
25:2	109-5009	2	Bushing-Suspension, Rubber
25:3	109-5010	2	Spacer
26	325-10	4	Screw-HH 1/2-13 X 2 1/2
27	3233-34	1	Bolt-Carriage 1/2-13 X 2 1/2
28	325-17	1	Screw-HH 1/2-13 X 4
29	3233-26	2	Screw-CARR, Short Neck
33	135-1215	1	Spacer-Pivot
34	32151-91	1	Ring-Retaining
35	3231-9	1	Bolt-Carriage 3/8-16 X 2 3/4
37	325-11	1	Screw-HH 1/2-13 X 2 3/4

Hydraulic Lift Fold Assembly

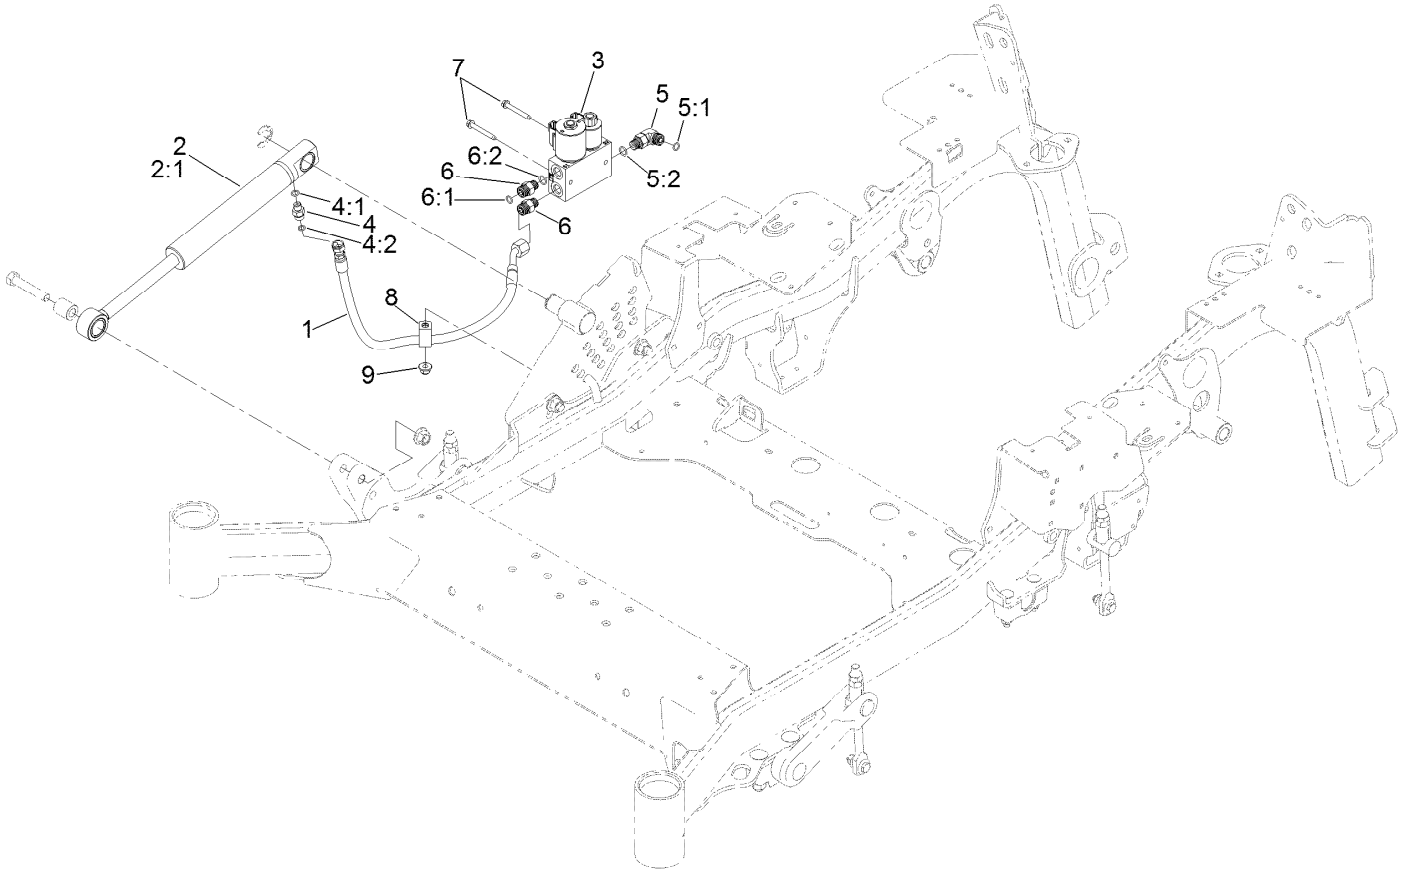


Hydraulic Lift Fold Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-8683	1	Hose ASM
2	126-7841	1	Lift Cylinder ASM ●
2:1	142-2767	1	Kit, CYL Repair
3	131-1934	1	Deck Lift Valve ASM
4	126-8692	1	Fitting-HYD, Straight
4:1	237-78	1	O-Ring
4:2	237-21	1	O-Ring
5	340-77	1	Fitting-Elbow, 90 DEG
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	340-2	2	Fitting-Straight
6:1	237-22	1	O-Ring
6:2	237-42	1	O-Ring
7	117-5248	2	Screw-HWHTF
8	1-633396	1	Clip-Loom 5/8
9	104-8301	1	Nut-Nyloc 3/8-16 Flg

● Not illustrated


Valve Assembly No. 131-1934

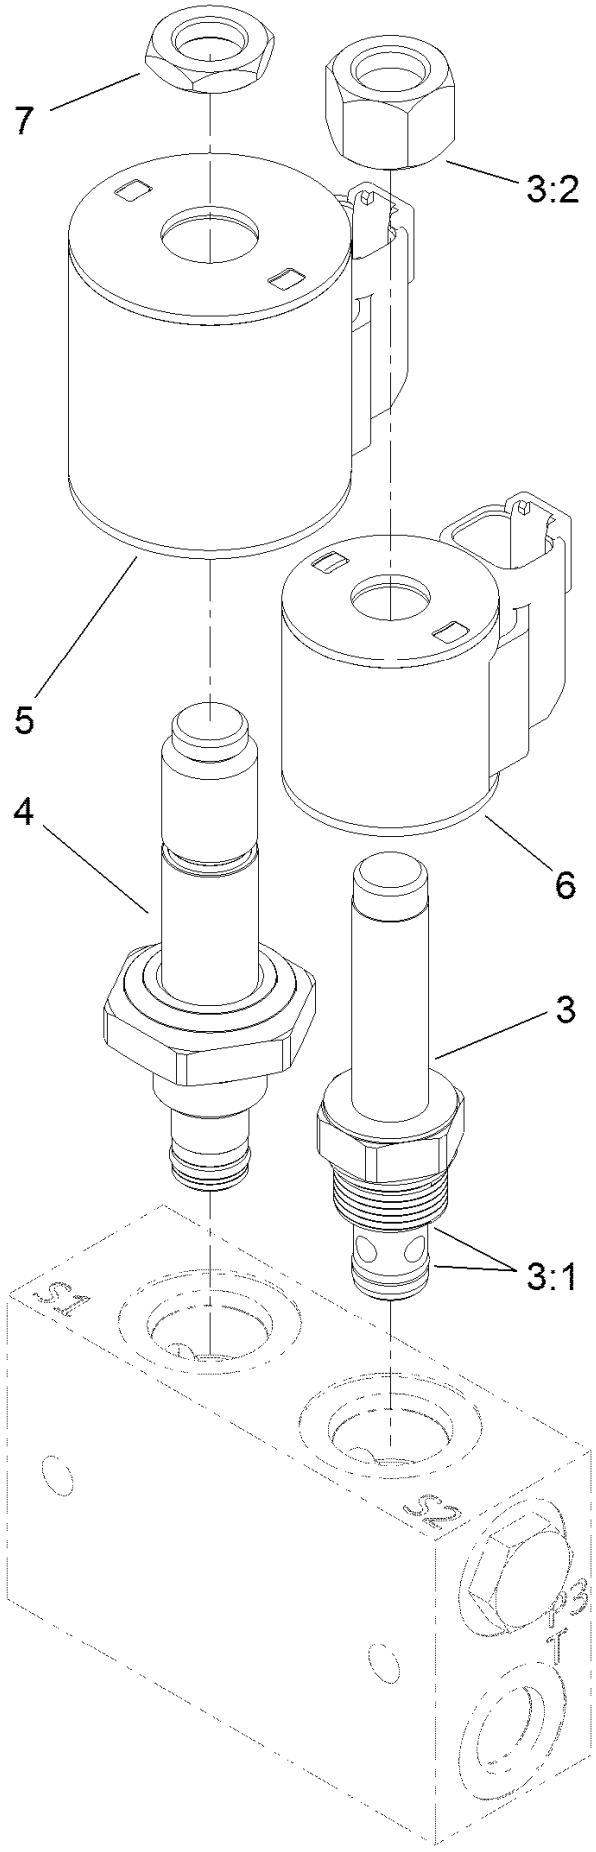

Valve Assembly No. 131-1934 (continued)

Ref.	Part Number	Qty.	Description
3	107-7517	1	Valve-Solenoid
3:1	105-9156	1	Seal Kit
3:2	107-7812	1	Nut-Solenoid
4	131-1935	1	Valve-Solenoid
5	115-3021	1	Coil-12V
6	119-8036	1	Coil
7	110-2634	1	Nut-Coil


Engine and Air Cleaner Assembly

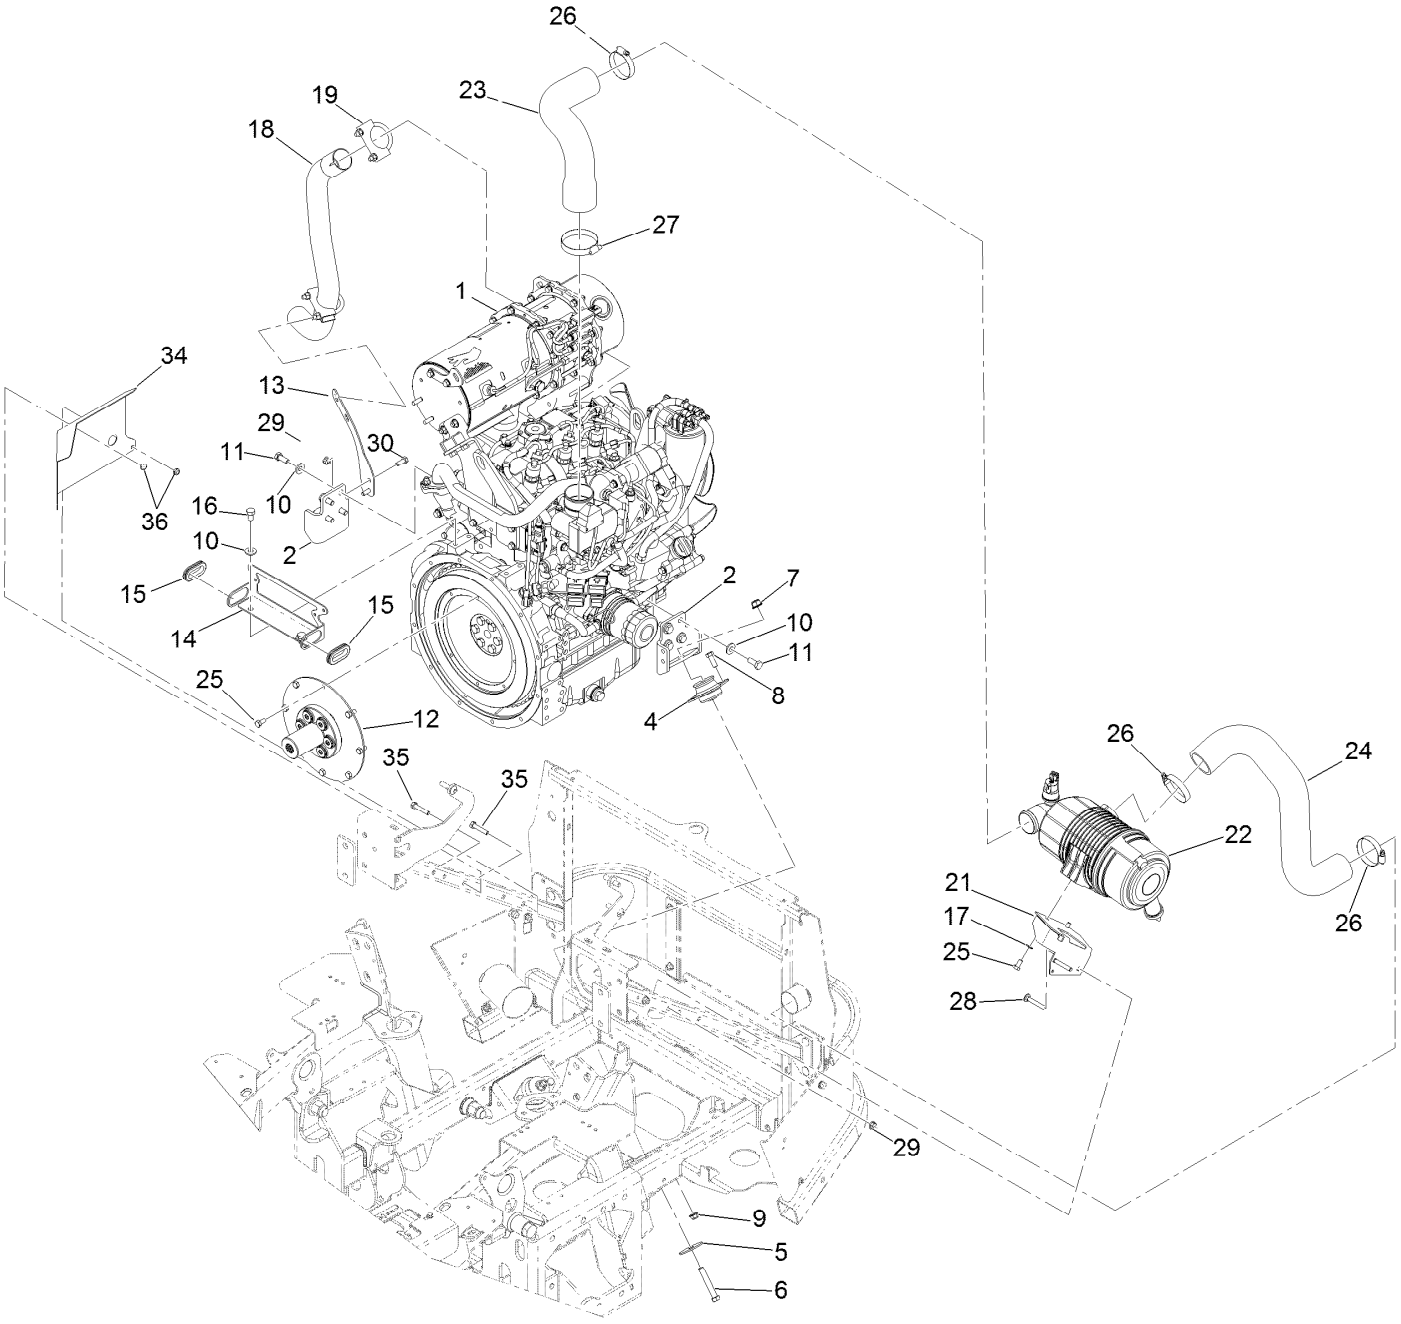

Engine and Air Cleaner Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-6927	1	Engine-Yanmar, 3Tnv88C-Dtr5
2	120-9180-03	2	Mount-Motor, Upper
4	130-2486	2	Mount
5	87-5100	2	Washer-Snubbing
6	324-11	2	Screw-HH
7	114-8417	2	Nut-HF, NI
8	323-6	4	Screw-HH
9	104-8301	4	Nut-HF, NI
10	98-5975	10	Washer-Belleville
11	33115-025	8	Screw-HH
12	120-9131	1	Coupling-Flywheel
13	126-8587-03	1	Bracket-Mount
14	126-7602-03	1	Bracket-Guide
15	240-7	2	Grommet-Rubber
16	33115-016	2	Screw-HH
17	3290-475	2	Washer-Belleville
18	126-7652	1	Tube-Exhaust
19	18-2130	2	Clamp
21	126-8730-03	1	Bracket-Cleaner, Air
22	126-7646	1	Air Cleaner ASM
23	120-9199	1	Hose-Air
24	120-9177	1	Hose-Air
25	99-5132	10	Bolt
26	2412-130	3	Clamp-Hose
27	2412-125	1	Clamp-Hose
28	3230-6	2	Bolt-CARR
29	104-8300	4	Nut-HF, NI
30	322-4	2	Screw-HH
34	135-3946-03	1	Deflector-Air
35	322-8	2	Screw-HH
36	3296-47	2	Nut-Lock, NI


Air Cleaner Assembly No. 126-7646

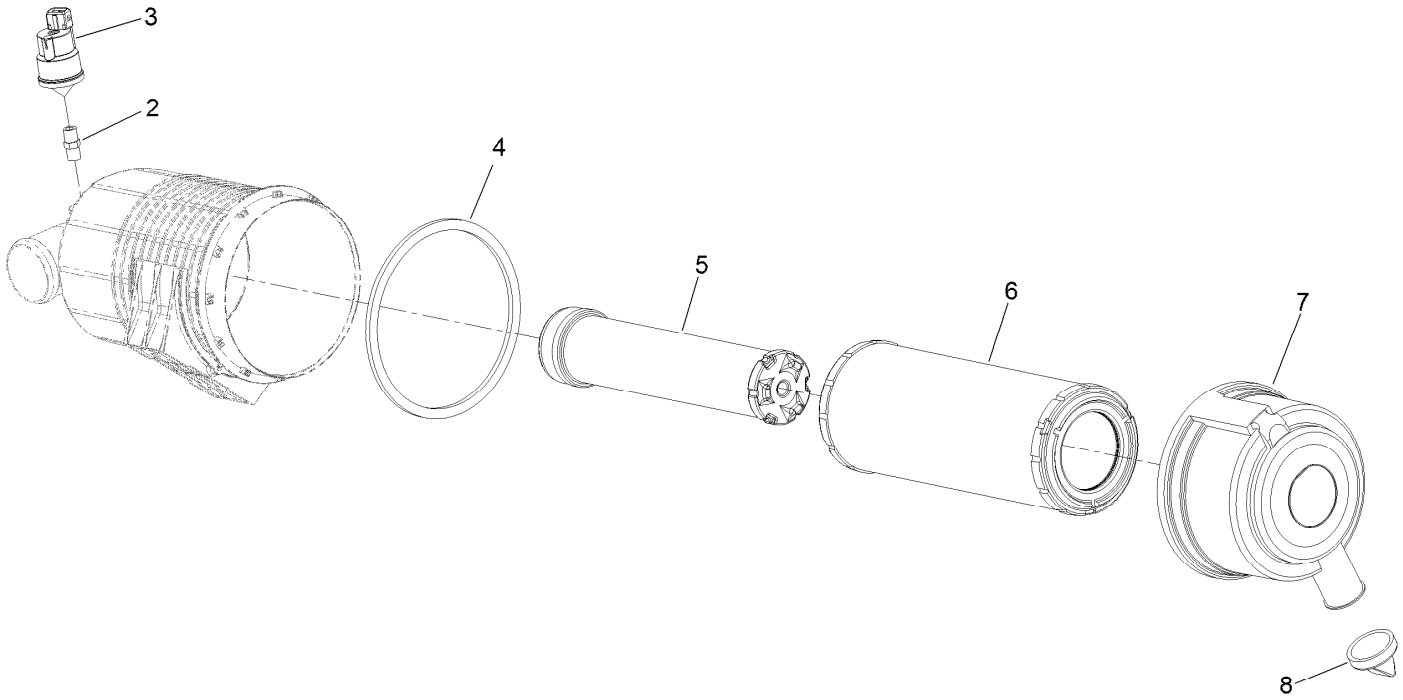

Air Cleaner Assembly No. 126-7646 (continued)

Ref.	Part Number	Qty.	Description
2	105-4292	1	Nipple-Pipe
3	126-7651	1	Indicator-Mini
4	104-4897	1	Gasket
5	114-4057	1	Element-Safety
6	108-3810	1	Filter-Air
7	104-0497	1	Cover
8	104-0498	1	Valve-Vacuator

Hood and Cover Assembly

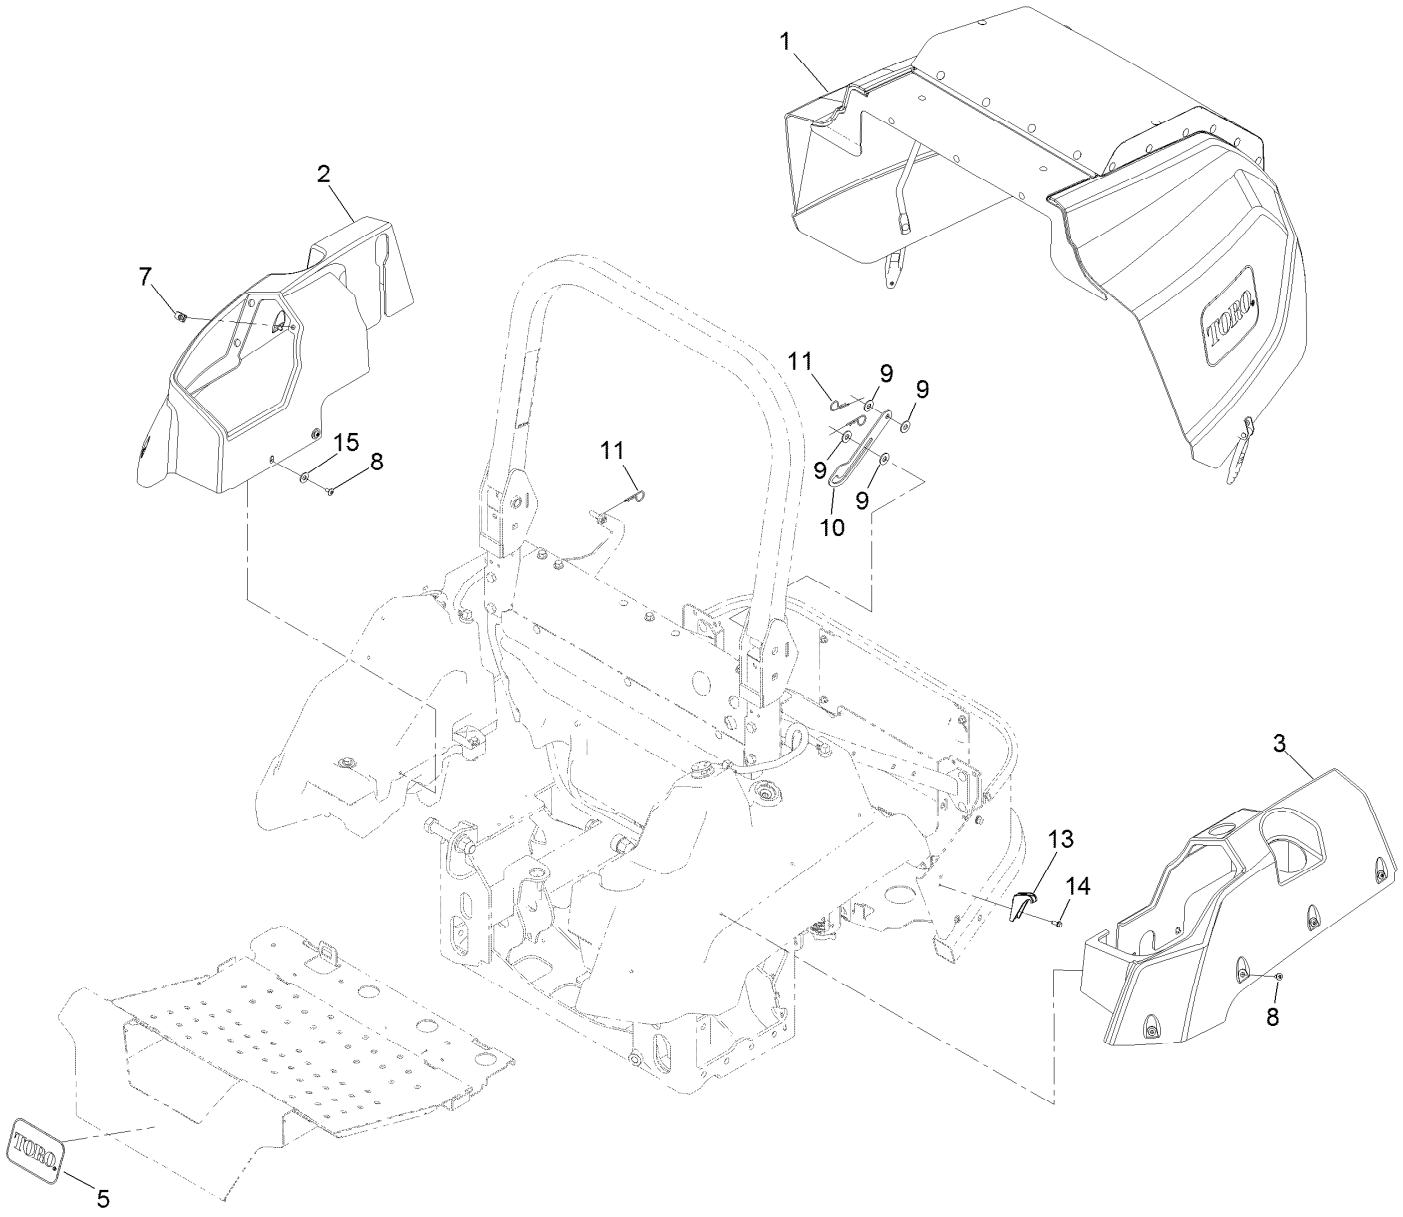


Hood and Cover Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Hood ASM ●
2	126-8655	1	Cover-Tank, RH
3	126-8656	1	Cover-Tank, LH
5	68-3640	1	Decal
7	107069	1	Clip
8	126-8216	12	Screw-Torx
9	3256-4	4	Washer-Flat
10	120-9129	1	Prop-Hood
11	3290-255	3	Pin-Cotter, Hair
13	126-8672	2	Latch-Catch
14	32144-10	2	Screw-HWH
15	3256-71	4	Washer-Flat

● Not serviced separately


Hood Assembly

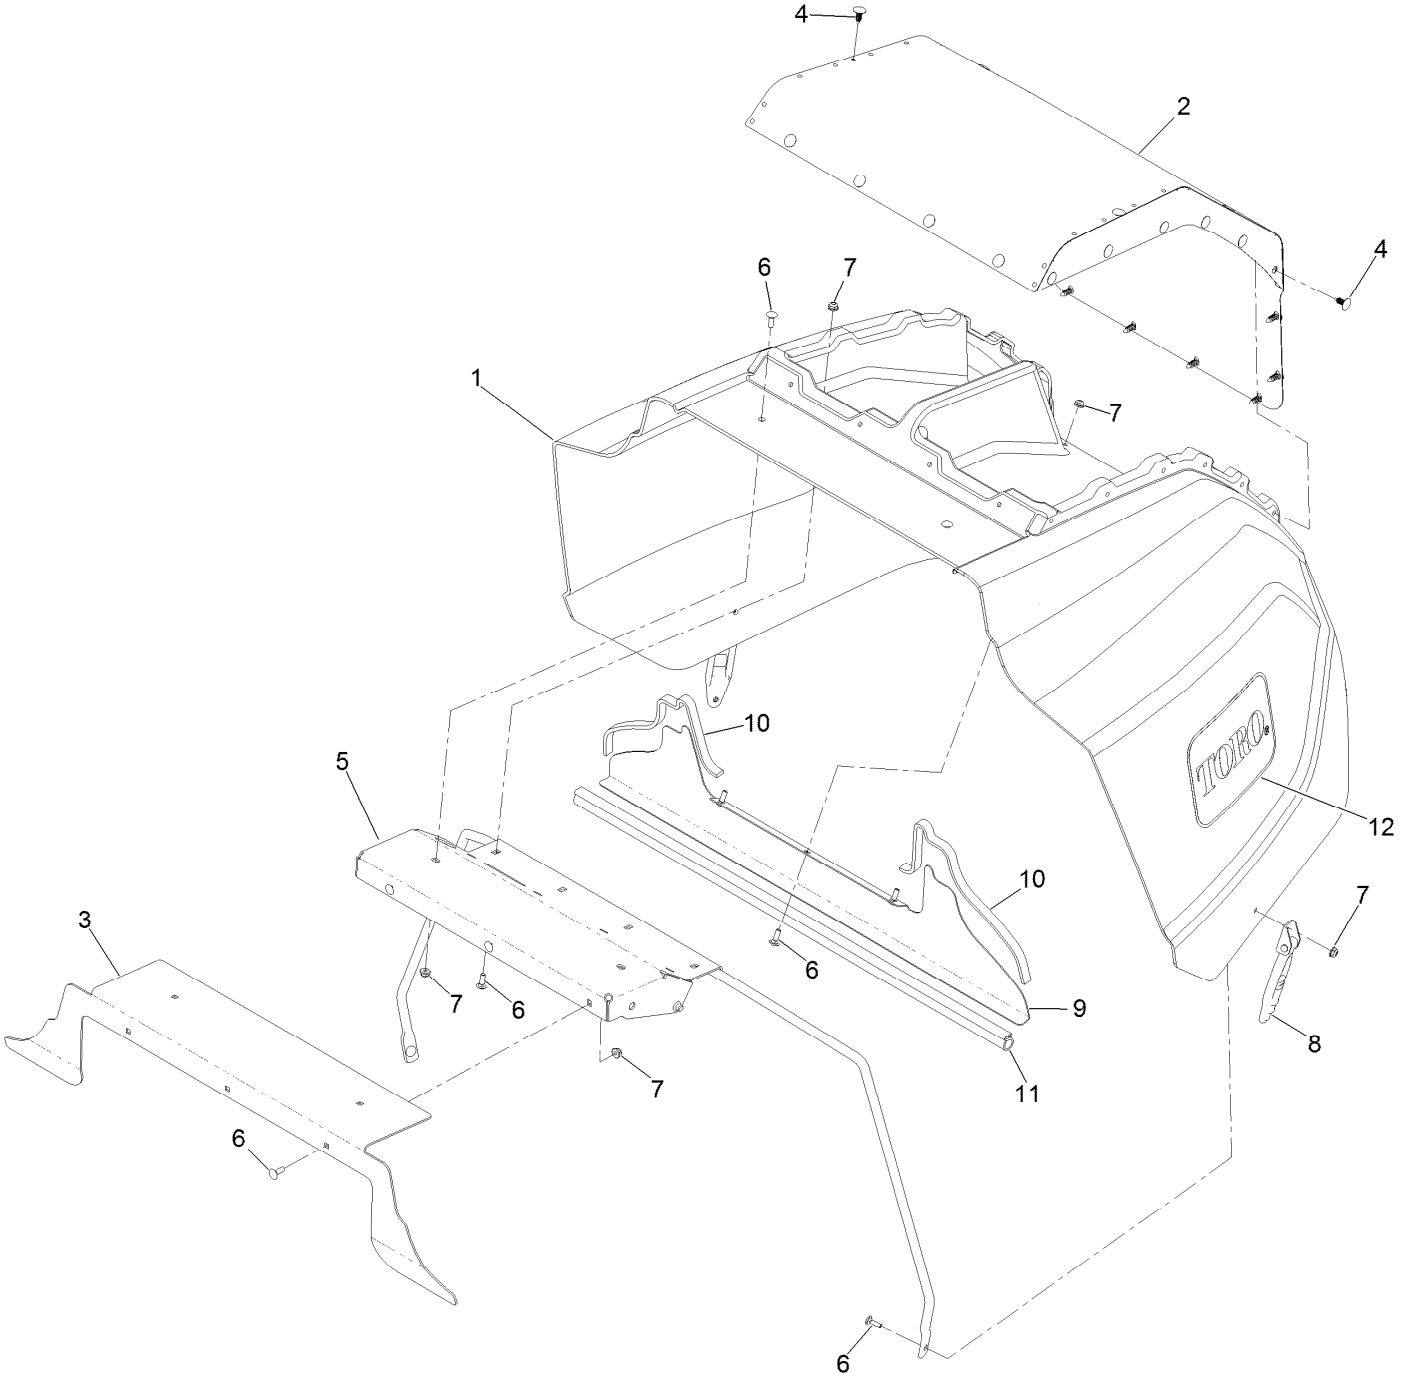

Hood Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-7929	1	Hood
2	135-6746-03	1	Screen-Intake
3	135-6750-03	1	Block Off-Hood
4	117-2382	24	Plug-Plastic
5	126-6524-03	1	Support-Hood
6	3229-1	14	Bolt-CARR
7	104-7201	14	Nut-HF
8	103-2898	2	Latch-Rubber
9	135-7572-03	1	Plate-Seal
10	135-7573	2	Seal-Foam
11	126-6846	1	Seal-Bulb
12	62-7400	2	Decal


Transmission Assembly

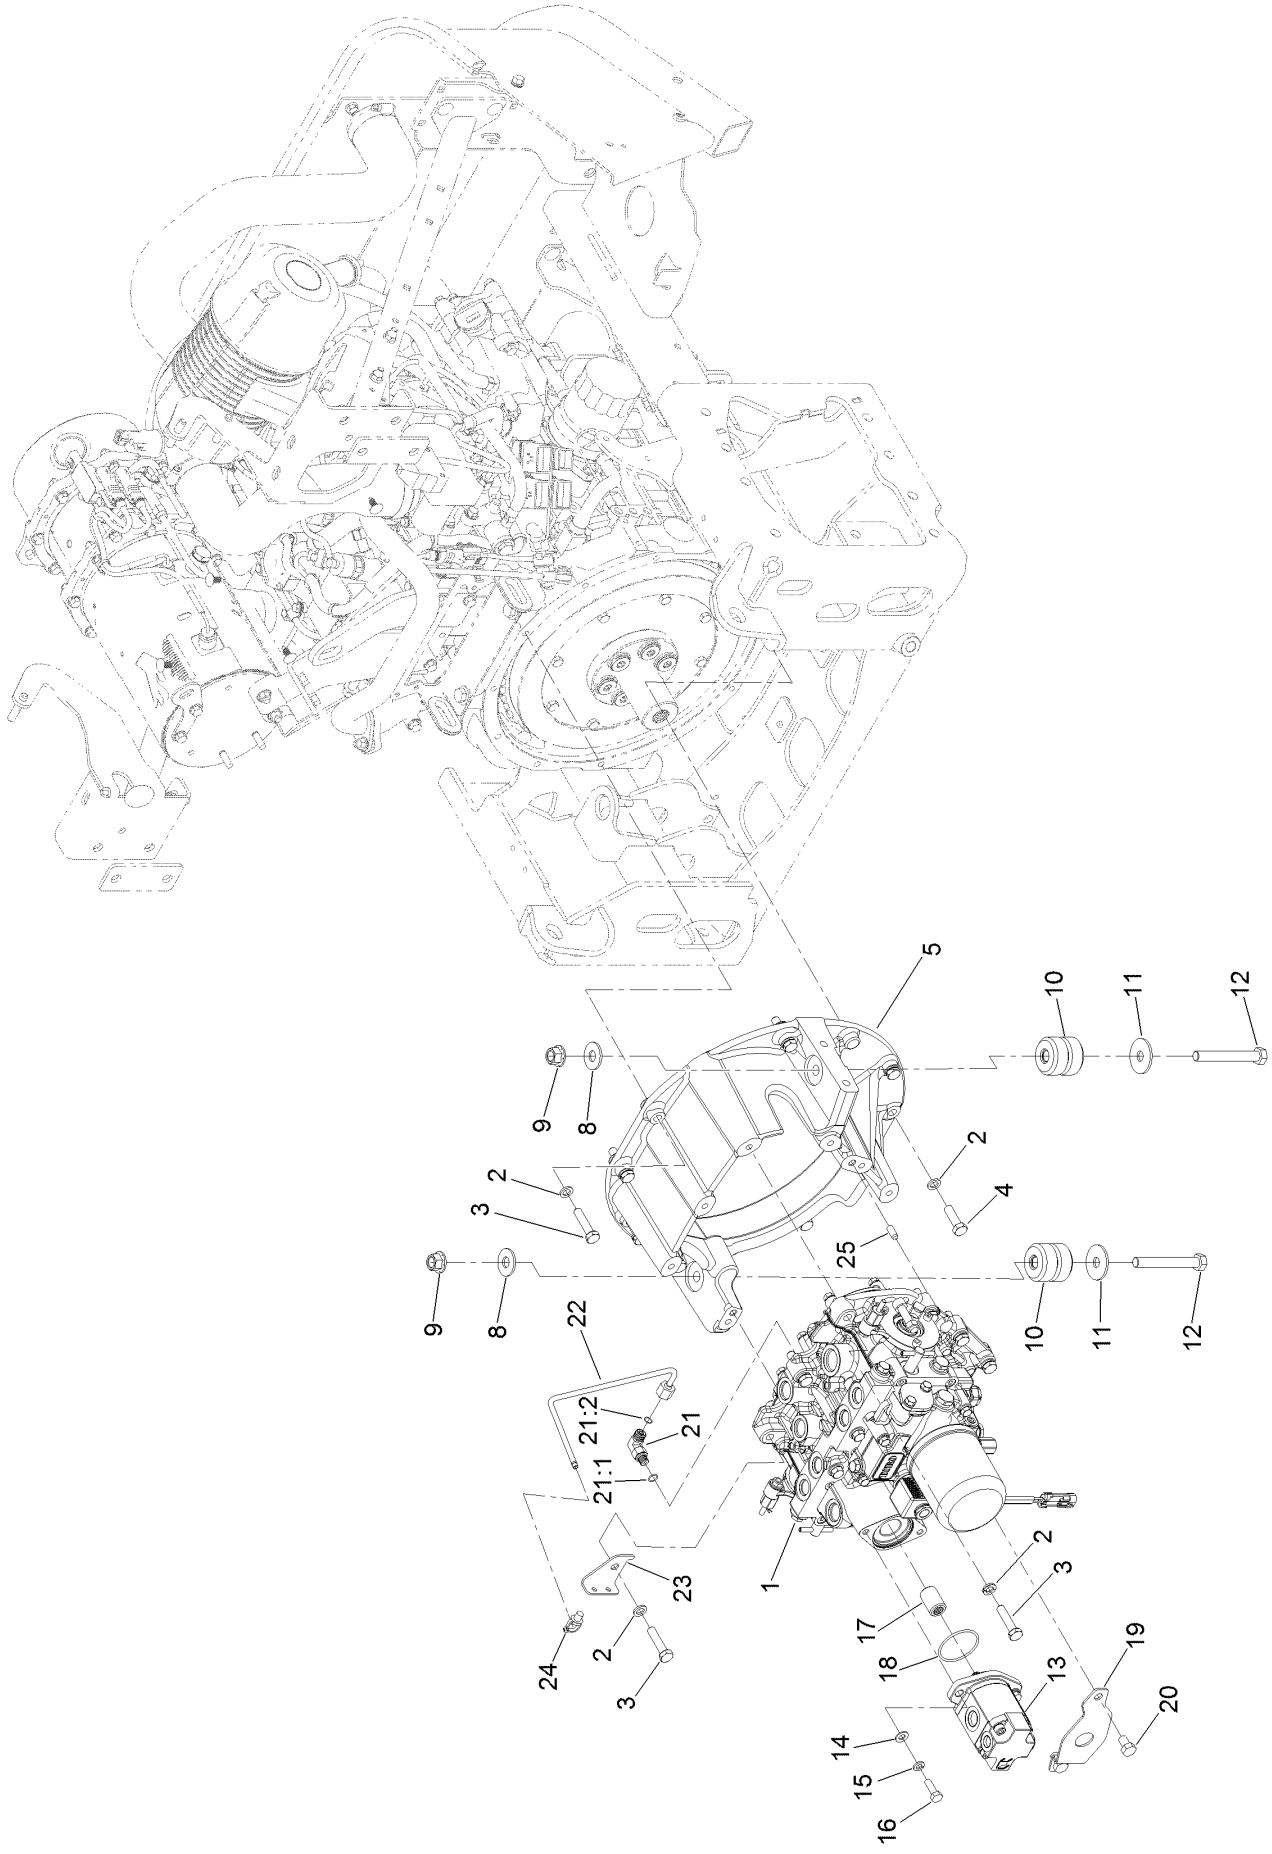

Transmission Assembly (continued)

Ref.	Part Number	Qty.	Description
1	131-5510	1	Transmisson ASM
2	48-9590	16	Washer-Lock
3	33115-045	13	Screw-HH
4	33115-035	3	Screw-HH
5	125-2836	1	Housing-Flywheel
8	3256-6	2	Washer-Flat
9	99-5107	2	Nut-Lock
10	126-6095	2	Mount-Isolator
11	86-1990	2	Washer-Thrust
12	325-15	2	Screw-HH
13	112-9542	1	HYD Gear Pump ASM
14	3256-23	2	Washer-Plain
15	3253-4	2	Washer-Lock
16	33114-025	2	Screw-HH
17	108-9920	1	Coupler-Spline
18	108-9919	1	O-Ring
19	114-4088	1	Shield-Seal
20	33115-016	2	Screw-HH
21	340-132	1	Fitting-Elbow, 90 DEG
21:1	237-78	1	O-Ring
21:2	237-21	1	O-Ring
22	126-8689	1	Tube ASM
23	126-6806	1	Support-Tube
24	32180-030	1	Clip-Tie
25	87-1910	2	Pin-Dowel


Charge Pump Housing Assembly
Transmission Assembly No. 131-5510

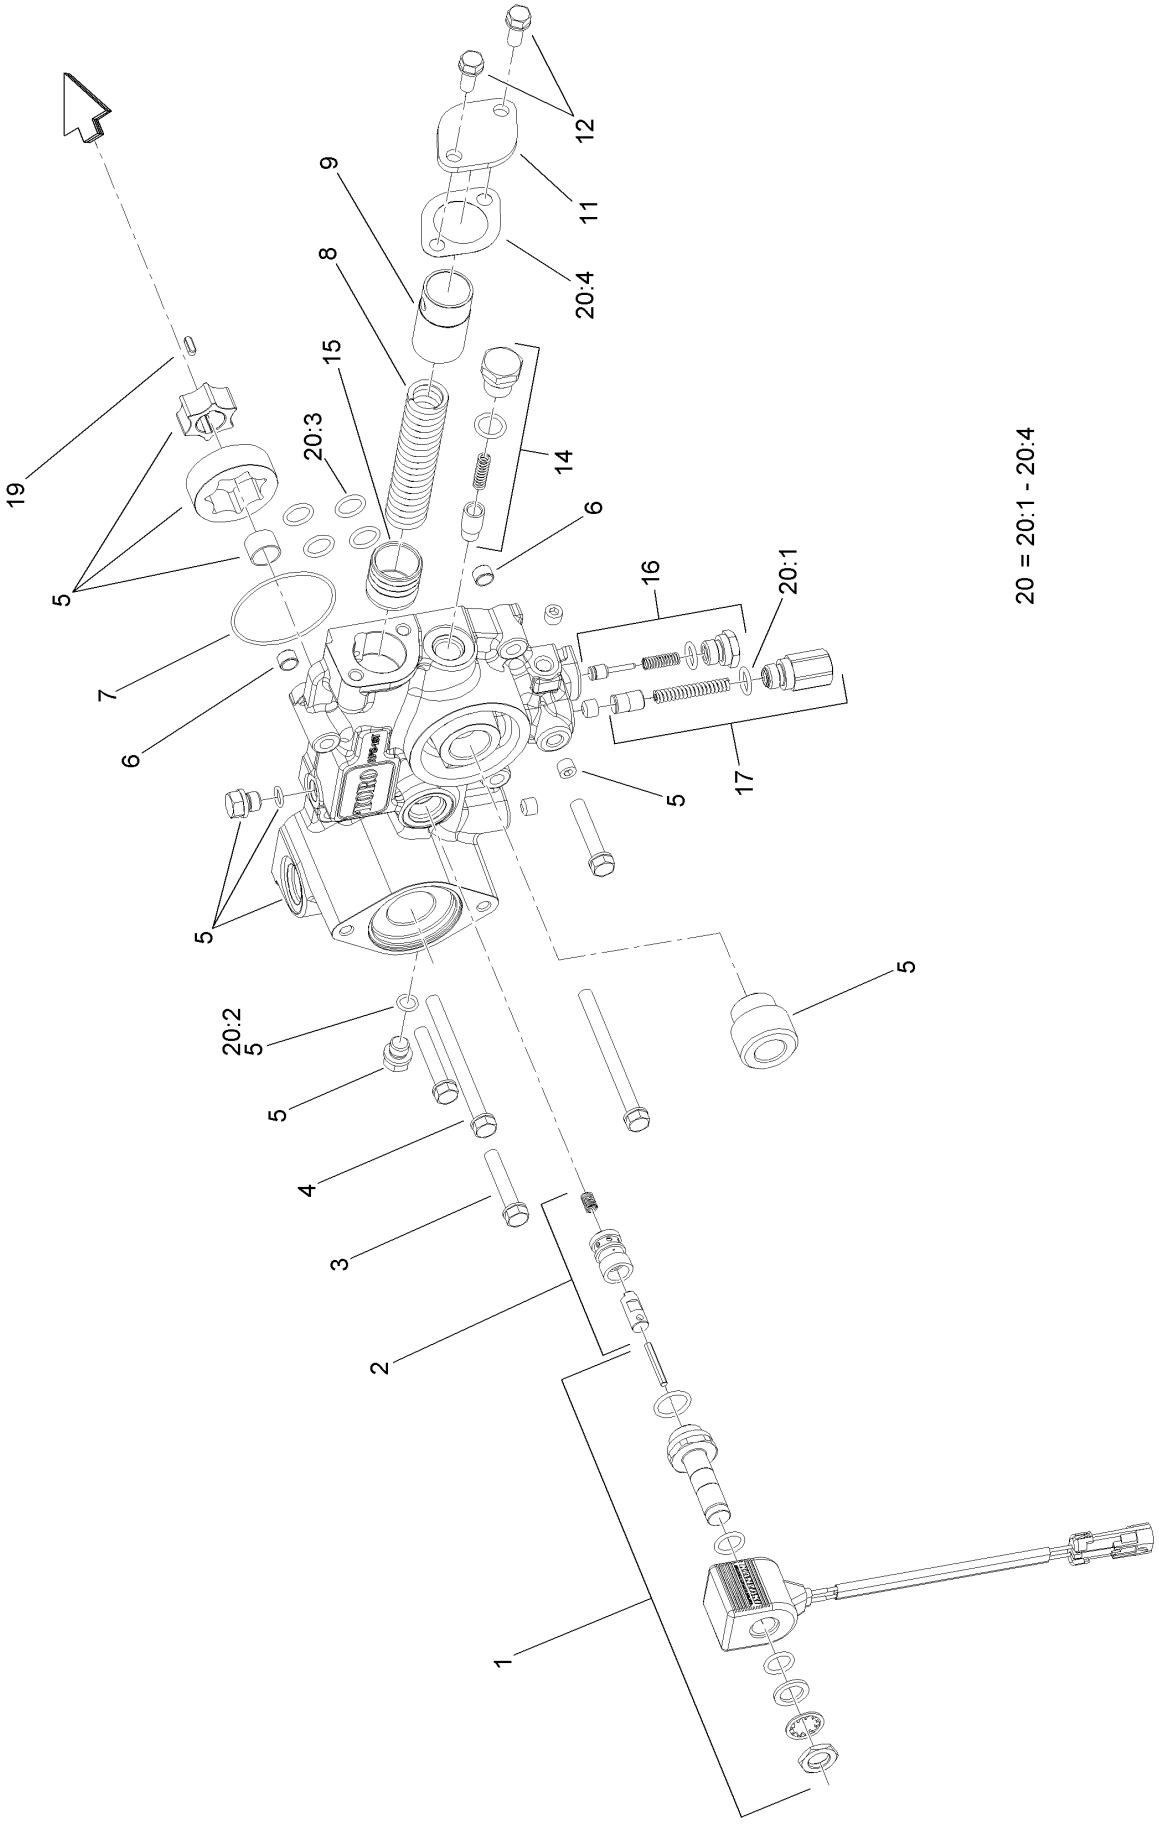

Charge Pump Housing Assembly
Transmission Assembly No. 131-5510 (continued)

Ref.	Part Number	Qty.	Description
1	107-0851	1	Solenoid ASM
2	107-0850	1	Solenoid Valve ASM
3	107-0863	3	Bolt
4	107-0864	2	Bolt
5	107-0840	1	Pump Body ASM
6	107-0848	2	Pin
7	107-0856	1	O-Ring
8	107-0845	1	Spring
9	107-0844	1	Collar
11	107-0846	1	Cover
12	93-0457	2	Bolt And Washer ASM
14	107-0843	1	Filter Bypass Valve ASM
15	107-0818	1	Piston
16	107-0842	1	Charge Relief Valve ASM
17	107-0841	1	Pressure Valve ASM
19	107-0865	1	Key
20	107-0855	1	Charge Pump Seal Kit
20:1	93-0418	2	O-Ring
20:2	107-0817	2	O Ring-Plug
20:3	104-3298	6	Packing
20:4	107-0847	1	Gasket


Transmission Assembly (cont.)
Center Section Assembly

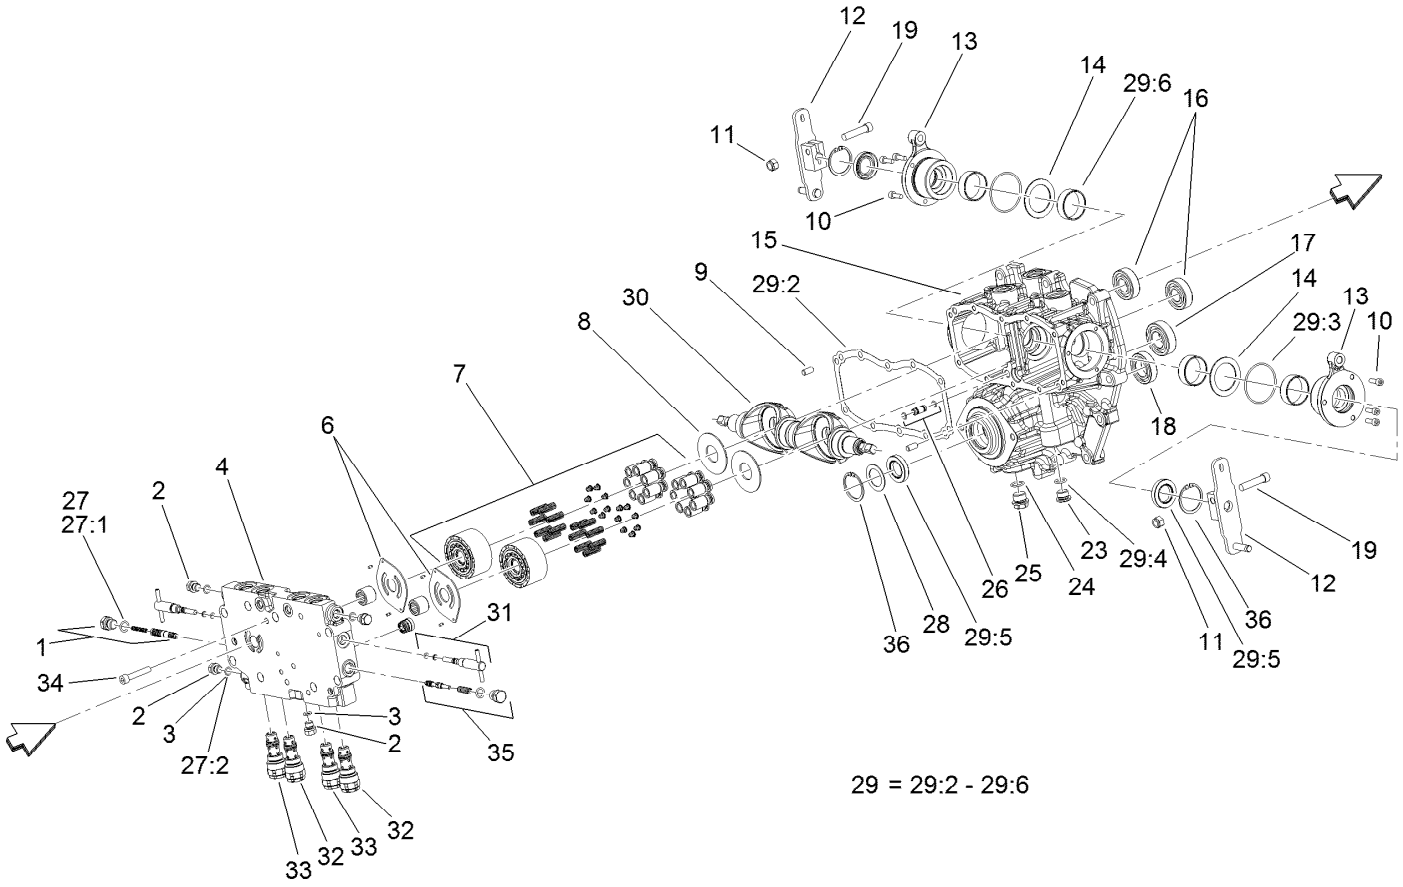

Transmission Assembly (cont.)
Center Section Assembly (continued)

Ref.	Part Number	Qty.	Description
1	107-0807	1	Valve-Flushing, RH
2	107-0857	6	Plug
3	107-0817	6	O Ring-Plug
4	121-3377	1	Center Case, Complete
6	107-0805	2	Plate-Valve
7	107-0824	2	Cylinder Block ASM
8	107-0830	2	Plate-Thrust
9	92-0765	4	Pin-Parallel
10	107-0859	6	Bolt
11	120-6681	2	U-Nut
12	120-6680	2	Arm-Control
13	107-0832	2	Side Cover ASM
14	107-0829	2	Washer
15	120-5151	1	Pump Housing ASM
16	107-0826	2	Bearing
17	107-0821	1	Bearing
18	107-0838	1	Bearing
19	120-6682	2	Bolt
23	107-0861	1	Plug-NPTF
24	237-79	1	O-Ring
25	107-0867	1	Plug
26	107-0812	1	Pipe
27	107-0852	1	Center Case Seal Kit
27:1	93-0418	2	O-Ring
27:2	107-0817	6	O Ring-Plug
28	107-0813	1	Spacer
29	107-0853	1	Pump Housing Seal Kit
29:2	107-0810	1	Gasket-Case, Center
29:3	107-0817	2	O Ring-Plug
29:4	104-3298	1	Packing
29:5	107-0814	3	Seal
29:6	107-0825	4	Ring-Seal
30	120-6679	2	Plate-Swash
31	107-0808	2	Valve-Bypass
32	107-0804	2	Valve-Rear
33	107-0803	2	Valve-Front
34	107-0863	8	Bolt
35	107-0806	1	Valve-Flushing, LH
36	92-0757	2	Ring-Snap

Transmission Assembly (cont.)
Gear Case and Clutch Assembly

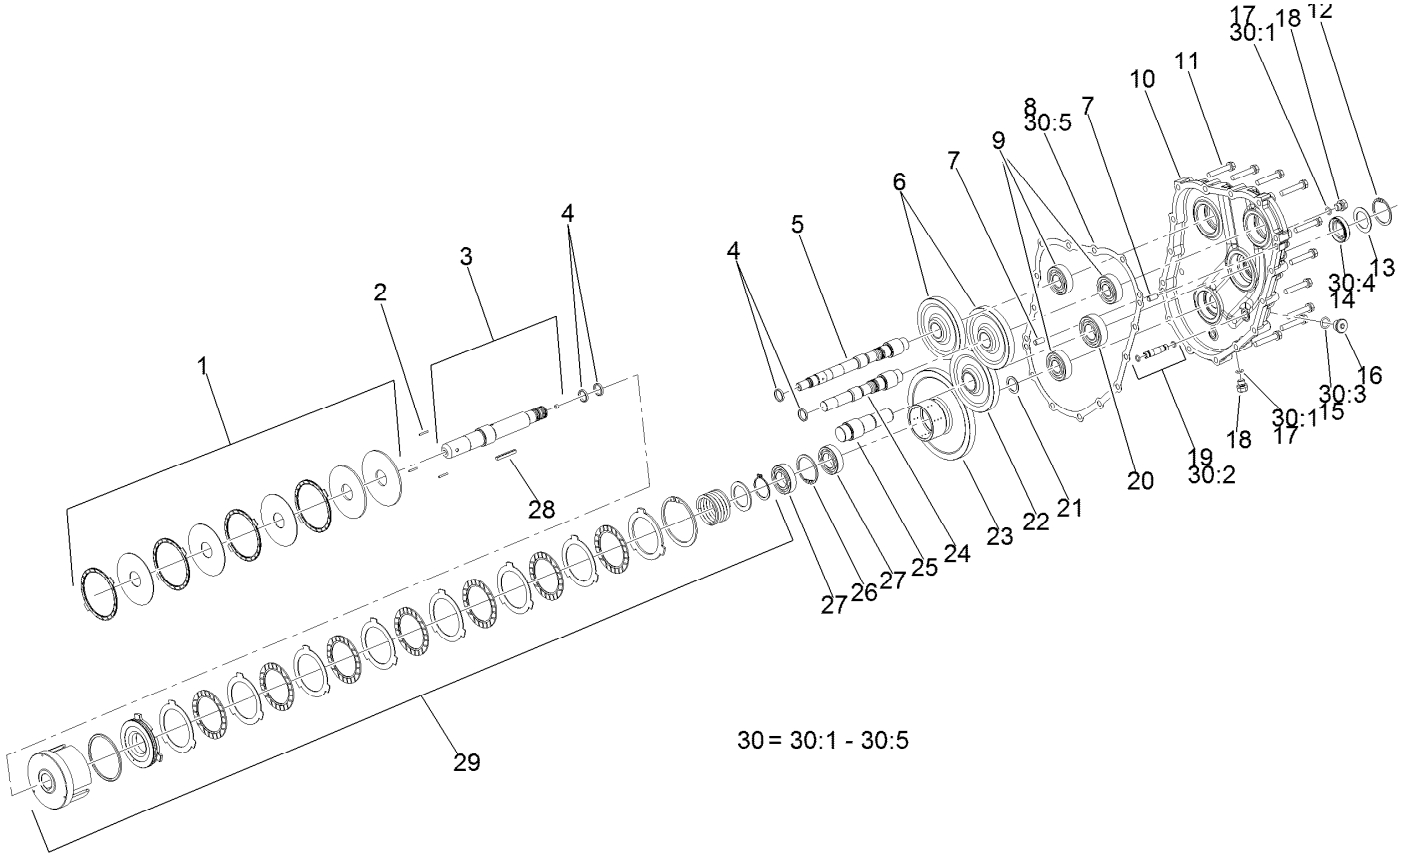


Transmission Assembly (cont.)
Gear Case and Clutch Assembly (continued)

Ref.	Part Number	Qty.	Description
1	107-0839	1	PTO Brake ASM
2	107-0837	3	Rod-Push
3	107-0833	1	PTO Shaft ASM
4	107-0825	2	Ring-Seal
5	107-0827	1	Shaft-Pump
6	107-0823	2	Gear-Pump
7	92-0765	4	Pin-Parallel
8	107-0816	1	Gasket-Housing, Gear
9	107-0826	4	Bearing
10	120-5152	1	Housing-Case, Gear
11	107-0863	13	Bolt
12	92-0757	1	Ring-Snap
13	107-0813	1	Spacer
14	107-0814	1	Seal
15	104-3298	1	Packing
16	107-0861	1	Plug-NPTF
17	107-0817	6	O Ring-Plug
18	107-0857	6	Plug
19	107-0811	1	Pipe
20	107-0821	2	Bearing
21	107-0836	1	Spacer
22	107-0820	1	Gear-Input
23	107-0834	1	Gear-PTO
24	107-0822	1	Shaft-Pump
25	107-0819	1	Shaft-Input
26	92-0758	1	Ring-Snap
27	107-0838	3	Bearing
28	107-0866	1	Key
29	107-0835	1	Clutch Cylinder ASM
30	107-0854	1	Gear Housing Seal Kit
30:1	107-0817	2	O Ring-Plug
30:2		2	O-Ring ●
30:3	104-3298	1	Packing
30:4	107-0814	1	Seal
30:5	107-0816	1	Gasket-Housing, Gear

● Not serviced separately


Hydraulic Gear Pump Assembly No. 112-9542

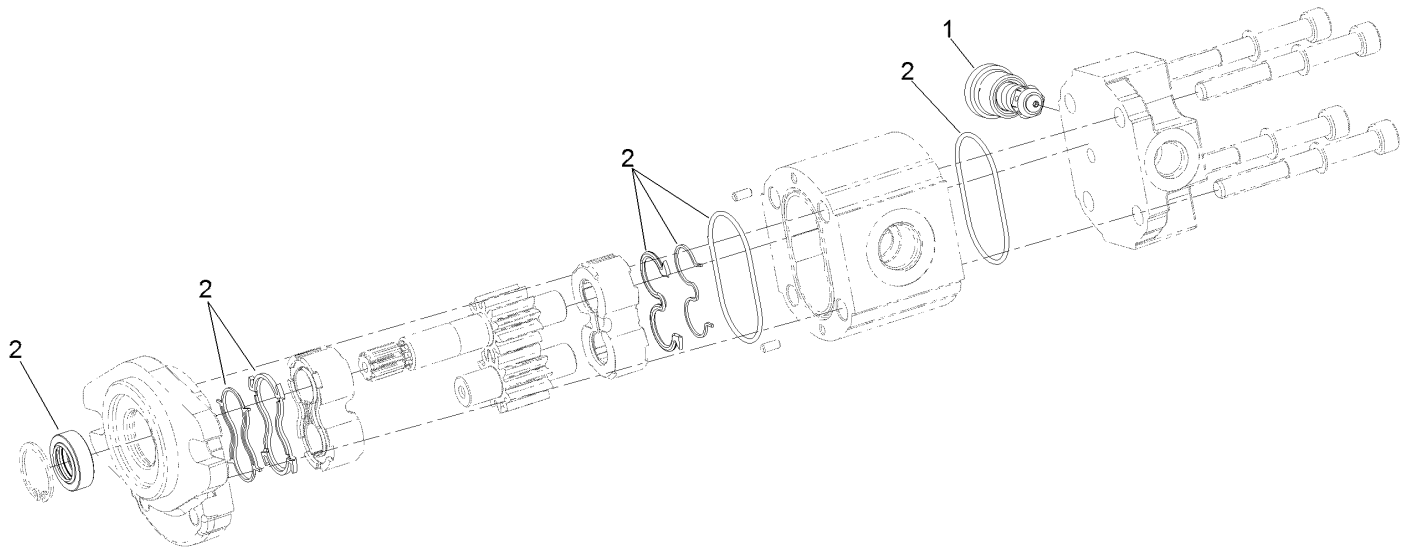

Hydraulic Gear Pump Assembly No. 112-9542 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	112-0198	1	Valve
2	112-0199	1	Seal Kit


Cooling Assembly

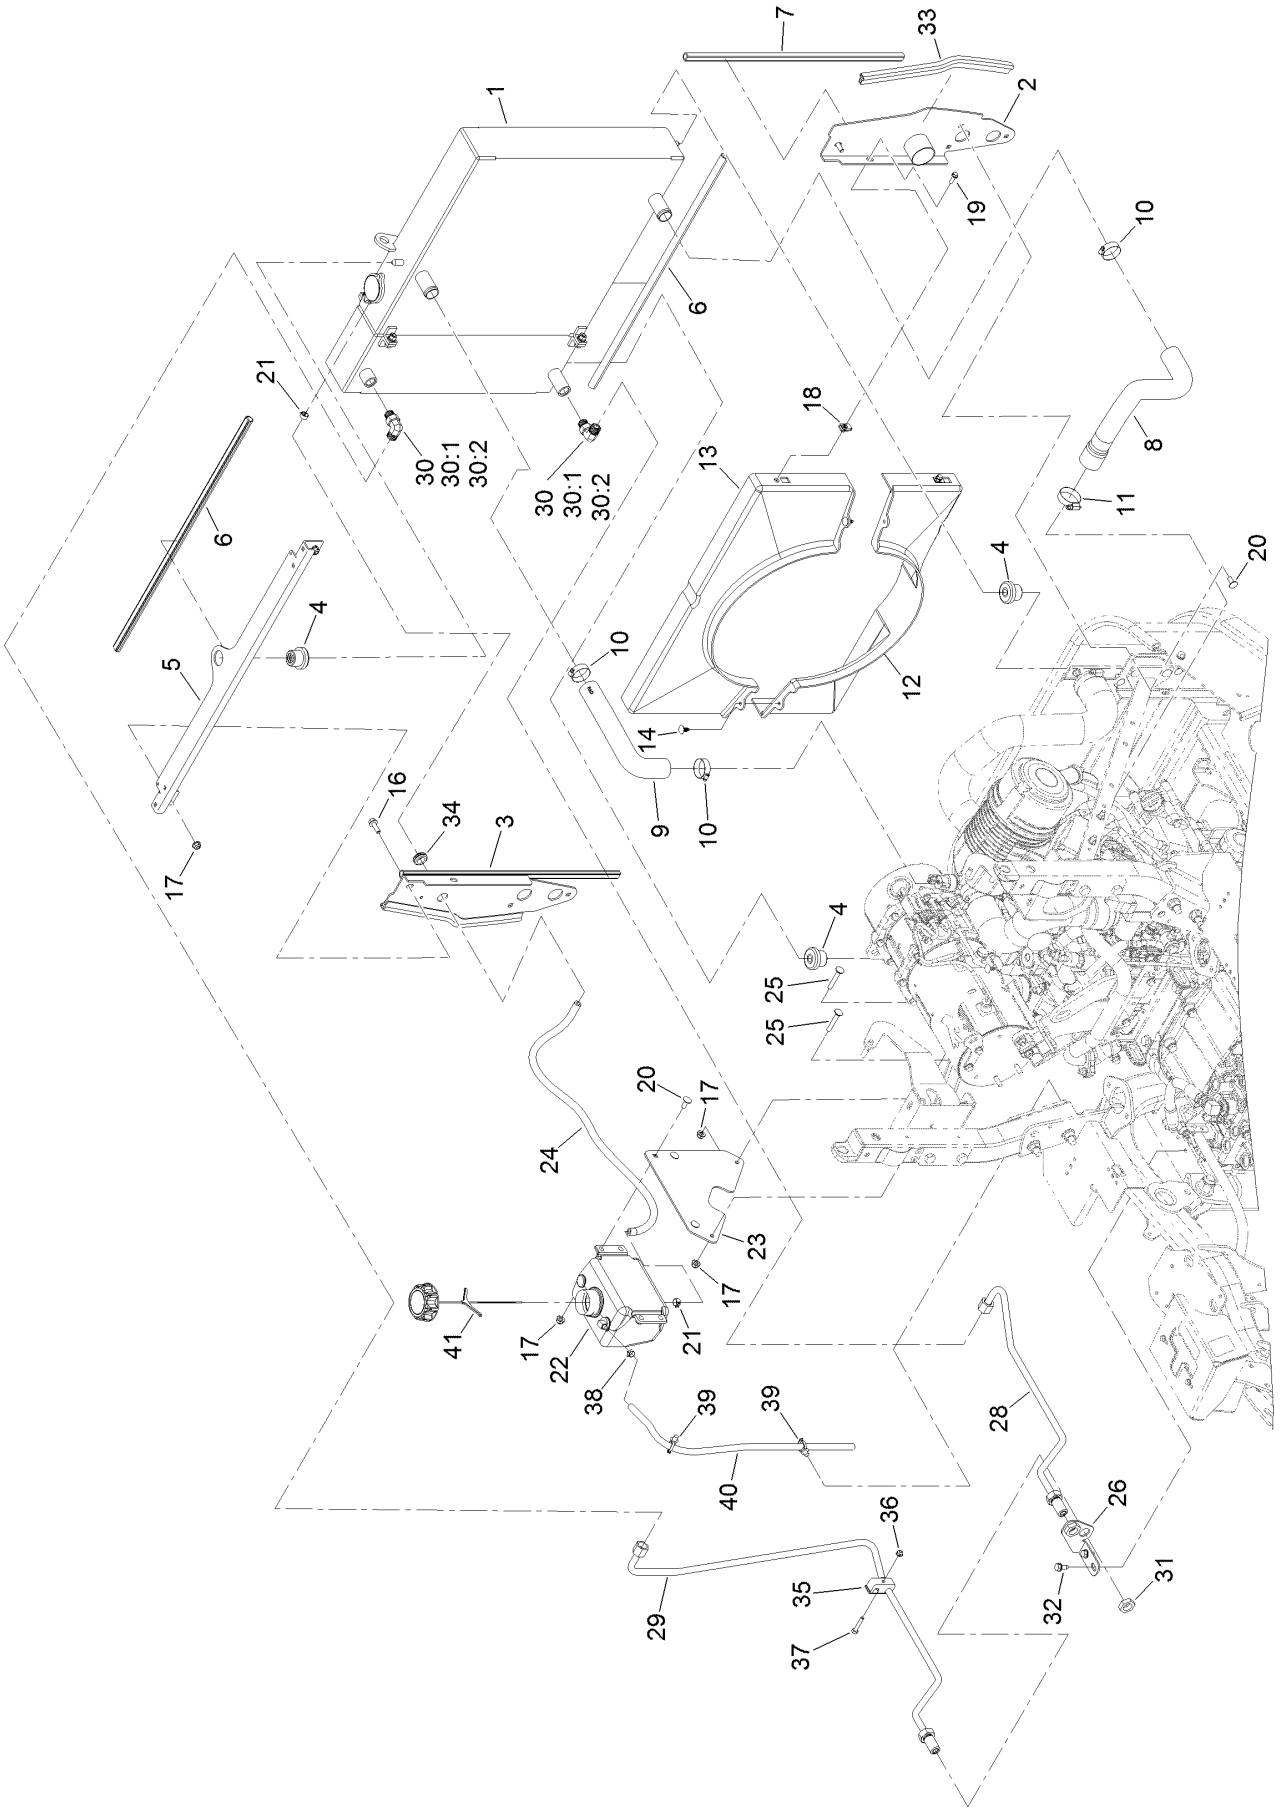

Cooling Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-3330	1	Cooling ASM
2	126-9026-03	1	Support-Radiator, LH
3	126-9028-03	1	Support-Radiator, RH
4	119-1422	3	Mount-Isolator
5	120-0068-03	1	Bracket-Cooling, Top
6	119-1427	2	Seal-Bulb
7	119-1426	2	Seal-Bulb
8	121-3322	1	Hose-Radiator, Lower
9	121-3321	1	Hose-Radiator, Upper
10	2412-34	3	Clamp-Hose
11	2412-130	1	Clamp-Hose
12	121-3311	1	Shroud-Bottom
13	121-3312	1	Shroud-Top
14	117-2382	2	Plug-Plastic
16	3234-29	2	Screw-HHF
17	104-8300	13	Nut-HF, NI
18	107069	4	Clip
19	32105-15	4	Screw-HWH
20	3230-23	9	Screw-CARR
21	92-2379	2	Clamp-Hose
22	135-4692	1	Tank-Overflow, W/Cap
23	126-9178-03	1	Bracket-Bottle
24	126-7648	1	Hose
25	3230-6	2	Bolt-CARR
26	126-6781-03	1	Bracket-Bulkhead
28	126-8691	1	Hydraulic Tube ASM
29	126-8690	1	Hydraulic Tube ASM
30	340-98	2	Fitting-Elbow, 90 DEG
30:1	237-79	1	O-Ring
30:2	237-30	1	O-Ring
31	340-127	2	Nut-Bulkhead
32	32144-70	2	Screw-HWHTF
33	126-6847	2	Seal-Bulb
34	237-124	1	Grommet
35	135-0641	1	Clamp-Twin
36	104-7201	1	Nut-HF
37	321-13	1	Screw-HH
38	2412-98	1	Clamp-Hose
39	32180-030	2	Clip-Tie
40	110-4103	1	Hose-Fuel
41	135-4693	1	Cap-W/Tether


Cooling Assembly No. 121-3330

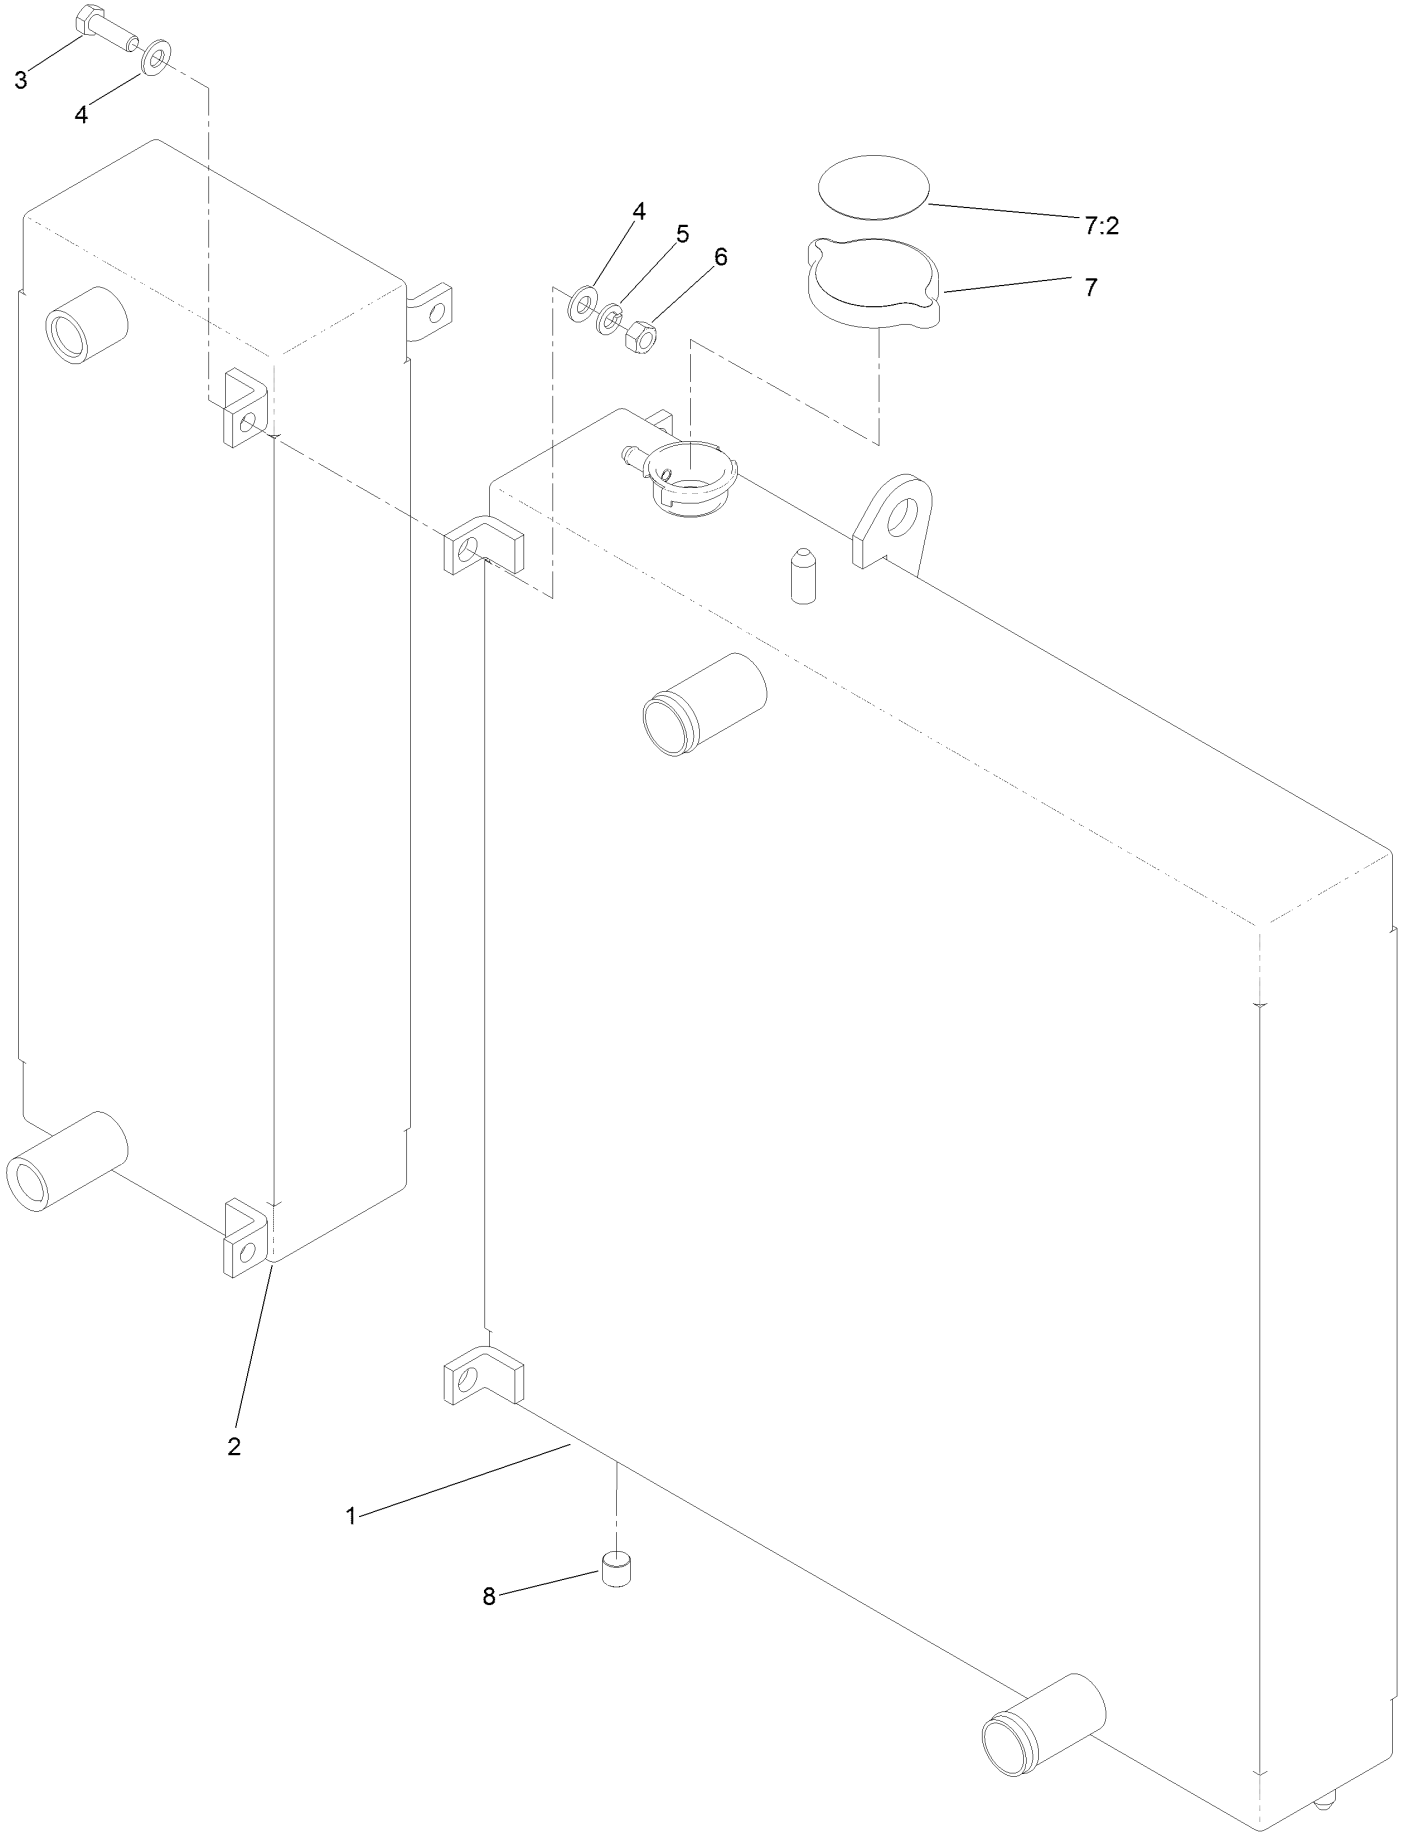

Cooling Assembly No. 121-3330 (continued)

Ref.	Part Number	Qty.	Description
1	121-3328	1	Radiator
2	121-3329	1	Oil Cooler
3	322-5	3	Screw-HH
4	3256-23	6	Washer-Plain
5	3253-4	3	Washer-Lock
6	3217-6	3	Nut-Hex
7	119-1430	1	Radiator Cap ASM
7:2	117-3276	1	Decal-Danger
8	99-8551	1	Plug-Pipe

Deck and Driveshaft Assembly

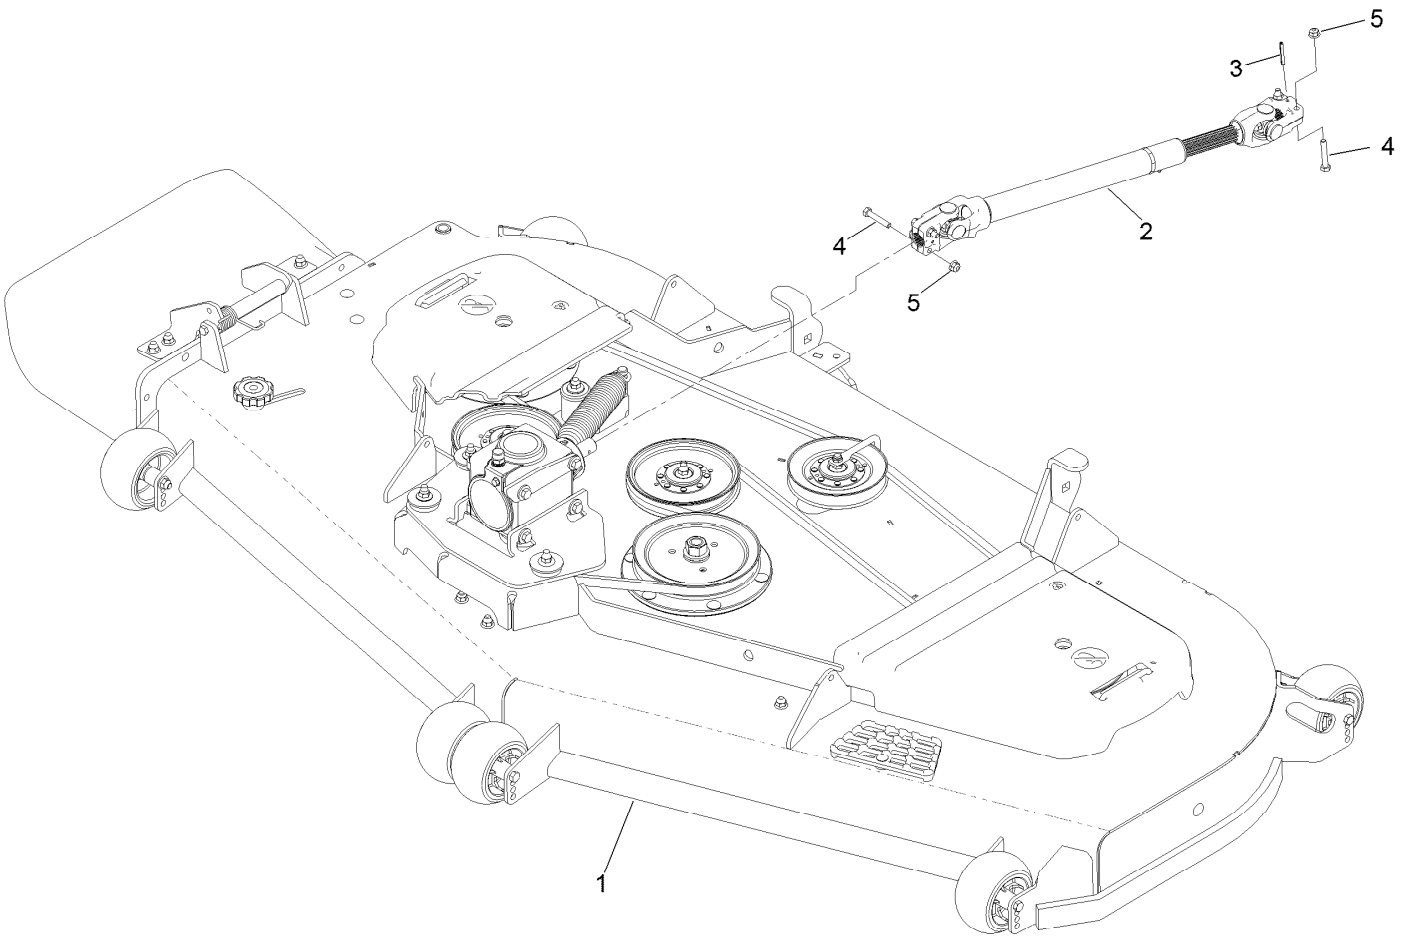


Deck and Driveshaft Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Deck ASM ●
2	110-3575	1	Driveshaft ASM
3	32121-34	2	Pin-Roll
4	322-9	4	Screw-HH
5	104-8300	4	Nut-HF, NI

● Not serviced separately

Deck Assembly

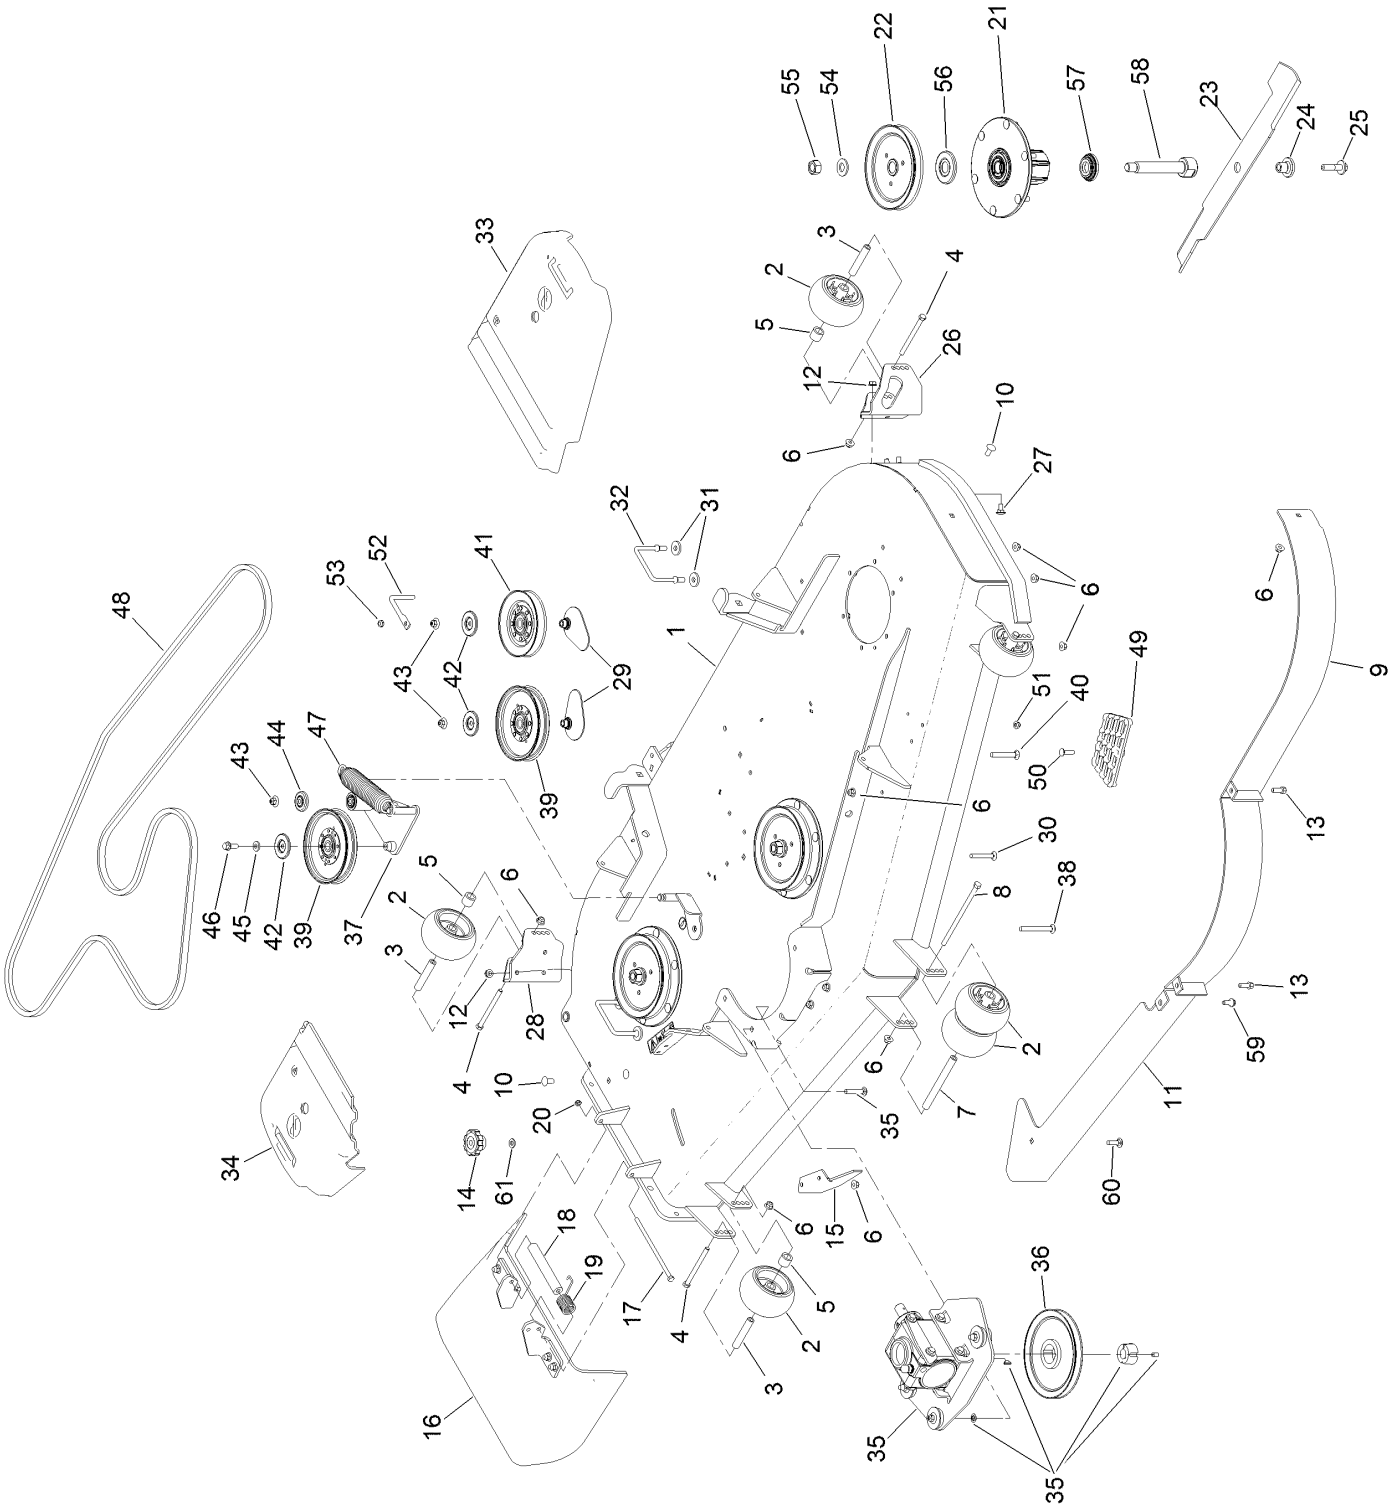


Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-0960	1	Deck Decal ASM
2	1-603299	6	Roller-Scalp, Anti
3	98-7912	4	Tube-Spanner
4	323-23	4	Screw-HH
5	98-7913	4	Tube-Spacer
6	104-8301	33	Nut-HF, NI
7	98-5967	1	Spacer-Wheel
8	108-5388	1	Screw-HH
9	114-5843-01	1	Baffle
10	3231-27	3	Screw-CARR
11	138-6051-01	1	Plate-Baffle
12	3290-357	6	Nut-HHF, Whiz
13	92-1624	2	Screw-HWH
14	109-1092	1	Knob
15	106-3216-01	1	Baffle-Discharge
16	108-2792	1	Rubber Deflector ASM
17	322-50	1	Screw-HH
18	105-4622	1	Spacer
19	108-4052	1	Spring-Torsion
20	3296-47	1	Nut-Lock, NI
21	137-9780	3	Spindle ASM
22	138-6059	3	Sheave-Drive, Blade
23	140-1238	3	Blade
24	137-9787	3	Bushing-Hex
25	109-9220	3	Screw-Sems
26	106-7354-01	1	Mount-Wheel, LH
27	3231-1	6	Screw-CARR
28	106-7355-01	1	Mount-Wheel, RH
29	109-2872	2	Spacer-Pulley
30	3231-44	1	Screw-CARR
31	1-373034	4	Washer
32	109-6982	2	Wireform-Cover
33	109-6938	1	Cover-Belt, LH
34	126-3527	1	Shield-Belt
35		1	Gearbox ASM ●
36	107-4767	1	Pulley
37	126-2585	1	Idler Arm ASM
38	116-1502	1	Bolt-Shoulder, Carriage
39	126-7685	2	Idler-Pulley
40	3231-9	1	Screw-CARR
41	126-8766	1	Idler V
42	126-8043	3	Shield-Dust
43	109-6658	3	Nut-Flange, NI
44	103-2916	1	Guard-Top
45	43-0940	1	Spacer
46	3234-11	1	Screw-HHF
47	116-6317	1	Spring-Extension
48	126-6855	1	Belt-V
49	126-4781-03	1	Step-Deck
50	3230-3	1	Screw-CARR
51	104-8300	1	Nut-HF, NI
52	135-0362	1	Guide-Belt
53	3296-59	1	Nut-Lock, NI
54	103-2802	3	Washer
55	116-7306	3	Nut-Hex
56	103-1330	3	Guard-Bearing, Top
57	137-9784	3	Guard-Bottom
58	138-6045	3	Shaft-Spindle
59	94-7582	1	Bolt-Shoulder
60	3231-25	1	Bolt-CARR
61	100-4852	1	Washer-Hardened

● Not serviced separately


Deck Decal Assembly No. 140-0960

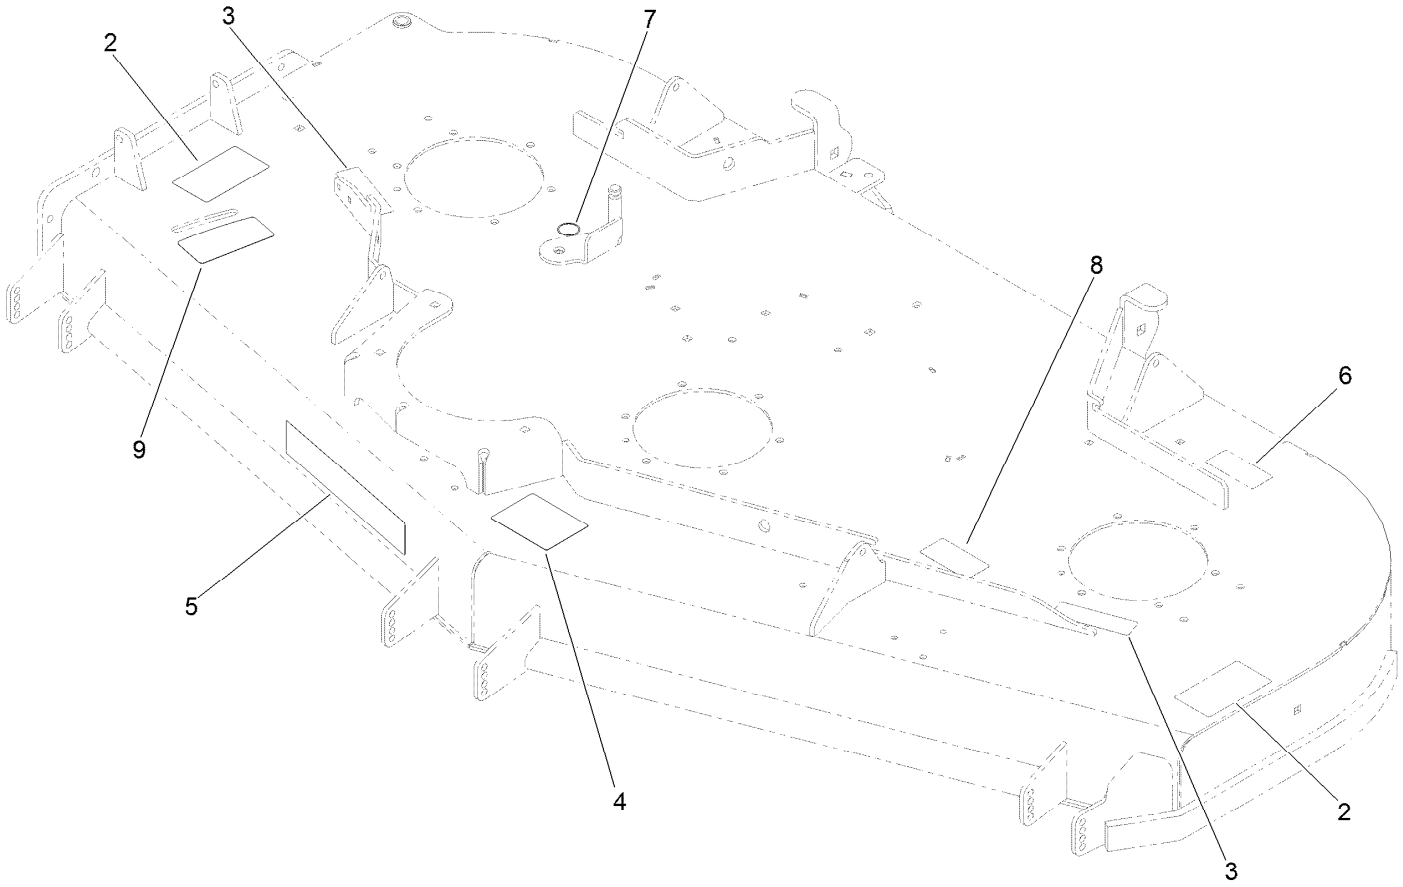

Deck Decal Assembly No. 140-0960 (continued)

Ref.	Part Number	Qty.	Description
2	126-6464	2	Decal-Danger Thrown Objects
3	112-9028	2	Decal-Cover, Missing
4	127-0326	1	Decal-Scalp, Anti
5	107-1620	1	Decal
6	116-8283	1	Decal-Torque, Bolt
7	58-6520	1	Decal-Grease
8	126-9276	1	Decal-Belt Routing
9	131-1180	1	Decal-Adjustment, Baffle


Rubber Deflector Assembly No. 108-2792

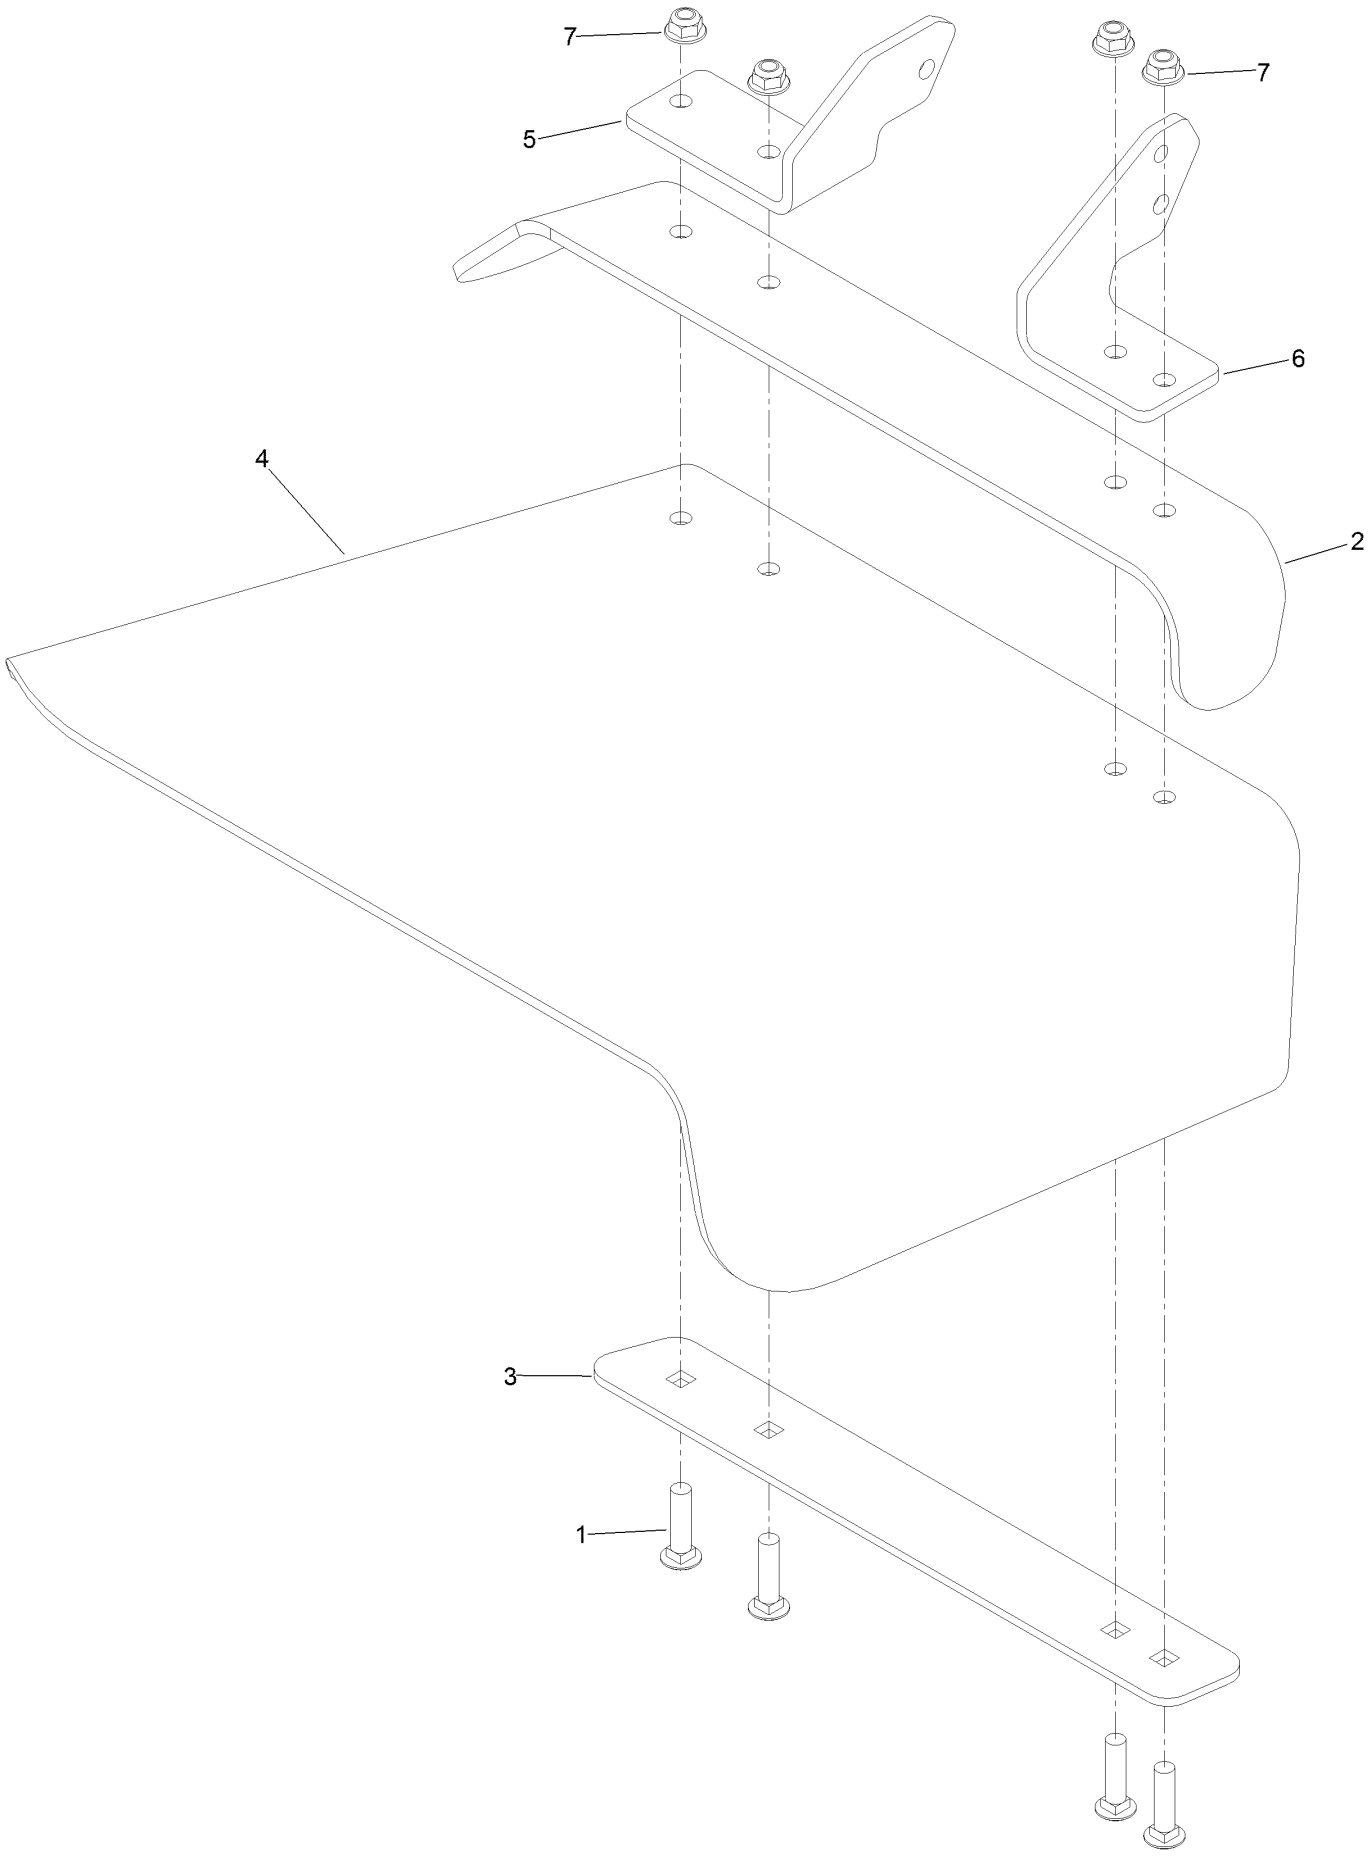

Rubber Deflector Assembly No. 108-2792 (continued)

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI


Spindle Assembly No. 137-9780

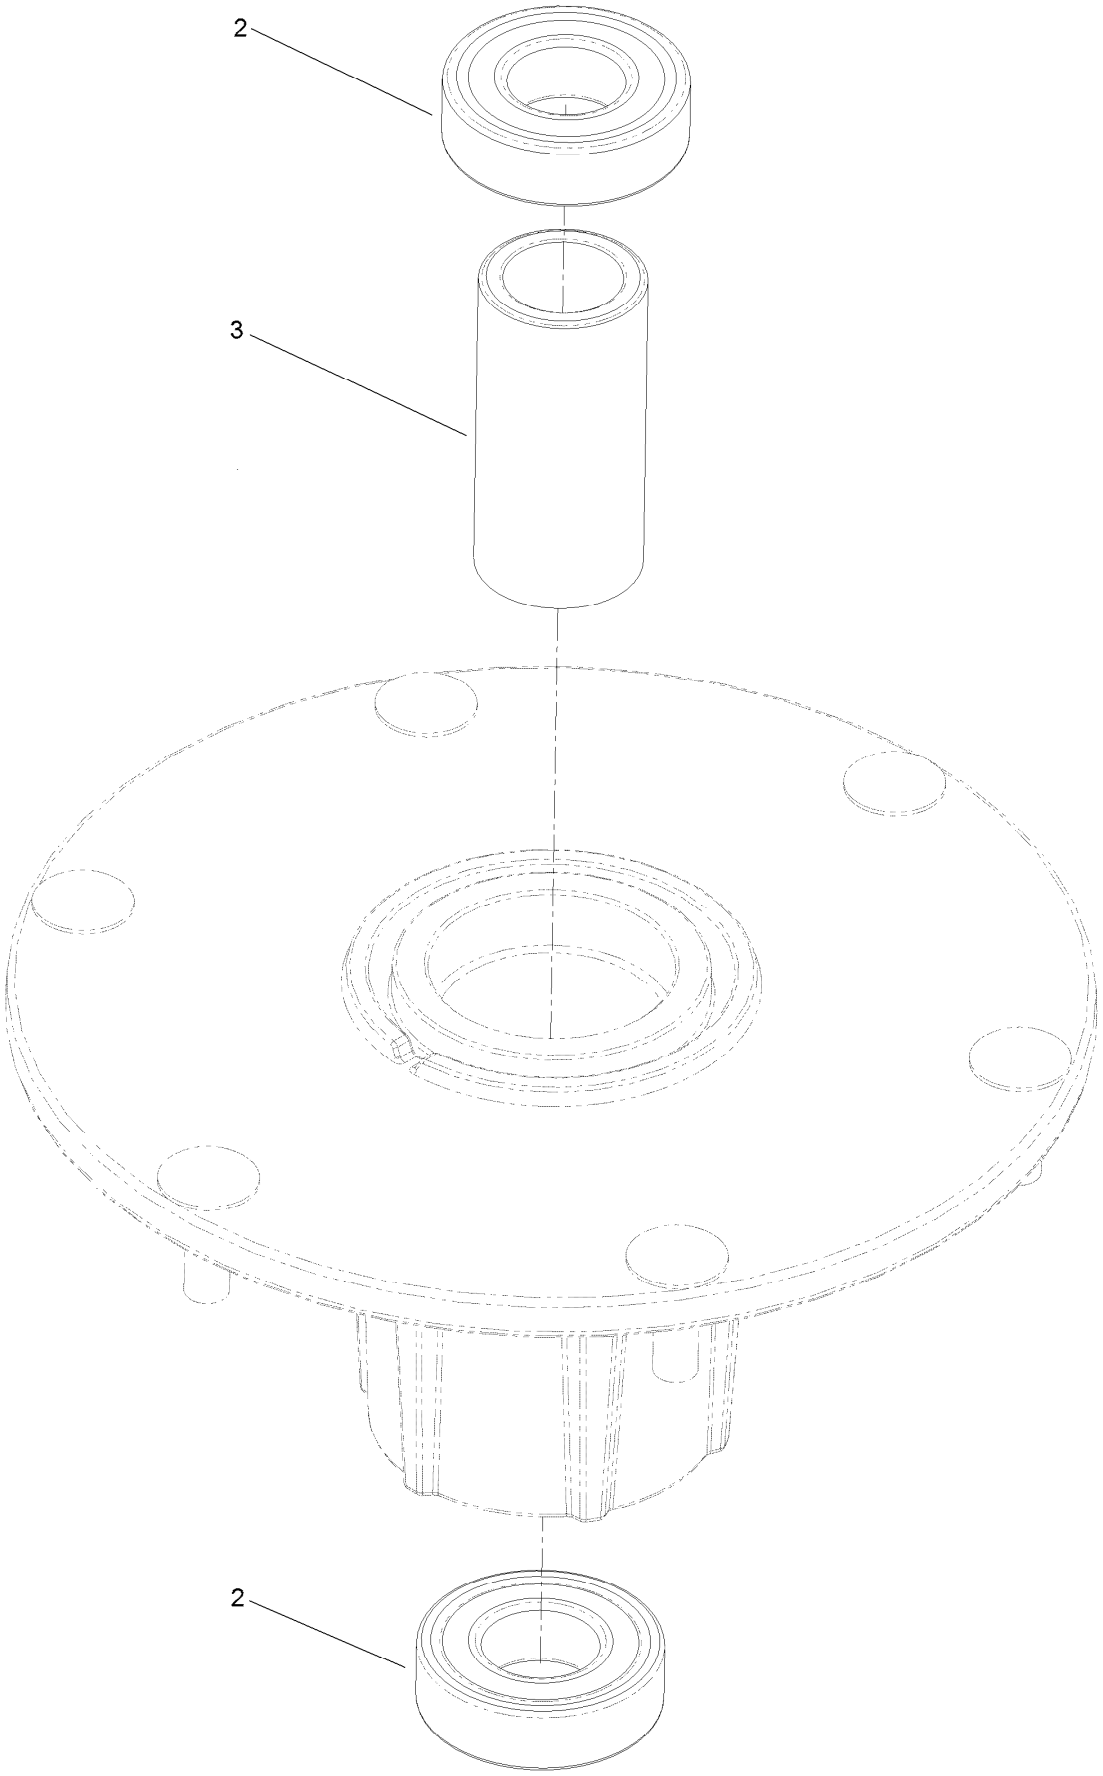

Spindle Assembly No. 137-9780 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
2	116-0720	2	Bearing-Ball
3	138-6042	1	Spacer-Bearing


Gearbox and Mount Assembly

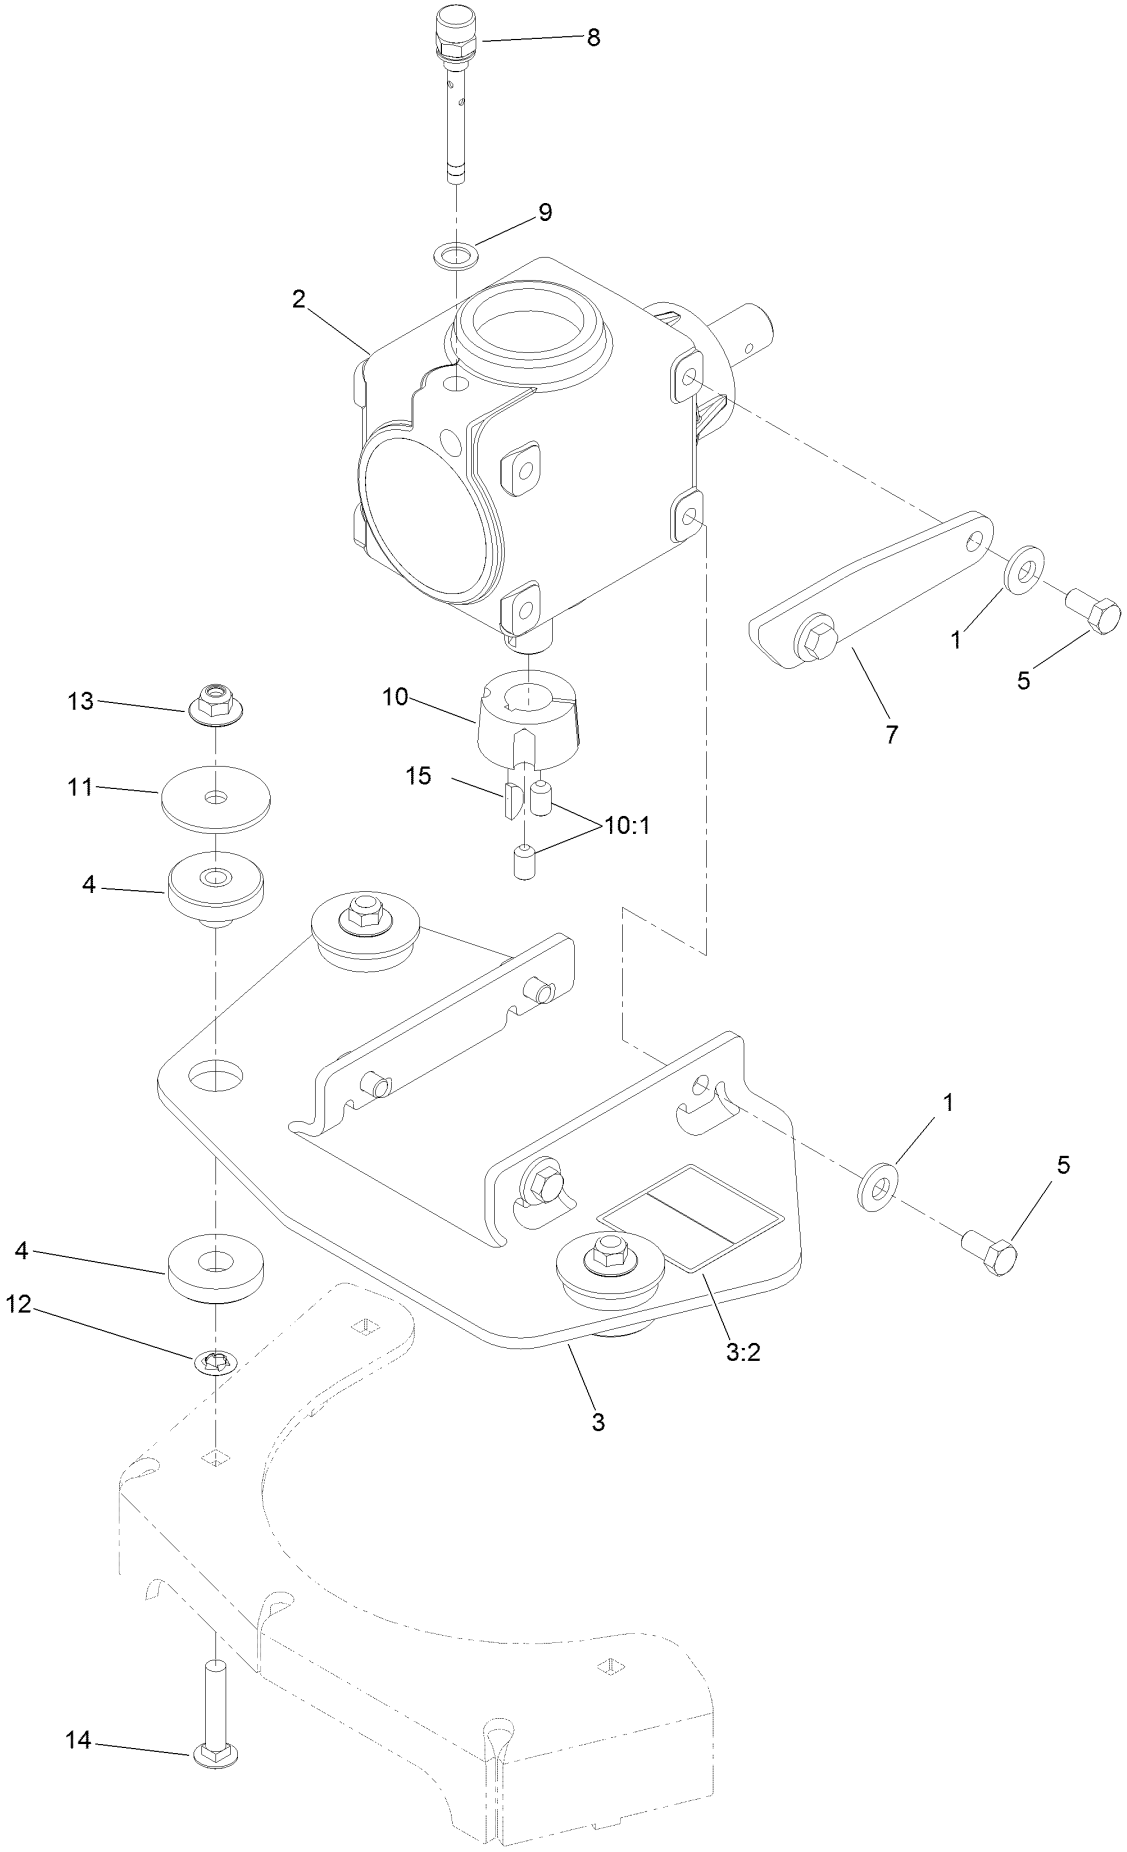

Gearbox and Mount Assembly (continued)

Ref.	Part Number	Qty.	Description
1	98-5975	6	Washer-Belleville
2	130-8659	1	Gearbox ASM
3	135-0874	1	Mount-Gearbox
3:2	135-0679	1	Decal-Hazard, Entanglement
4	126-3074	3	Mount-ISO
5	323-4	6	Screw-HH
7	126-3544	1	Stop-Gearbox
8	130-8661	1	Plug-Breather
9	130-4899	1	Washer
10	23-1640	1	Bushing-Taperlock
10:1	3247-4	2	Screw-Set
11	83-1040	3	Washer-Flat
12	107-3154	3	Nut-Push
13	109-6658	3	Nut-Flange, NI
14	3231-6	3	Screw-CARR
15	3257-5	1	Key-Woodruff

Gearbox Assembly No. 130-8659

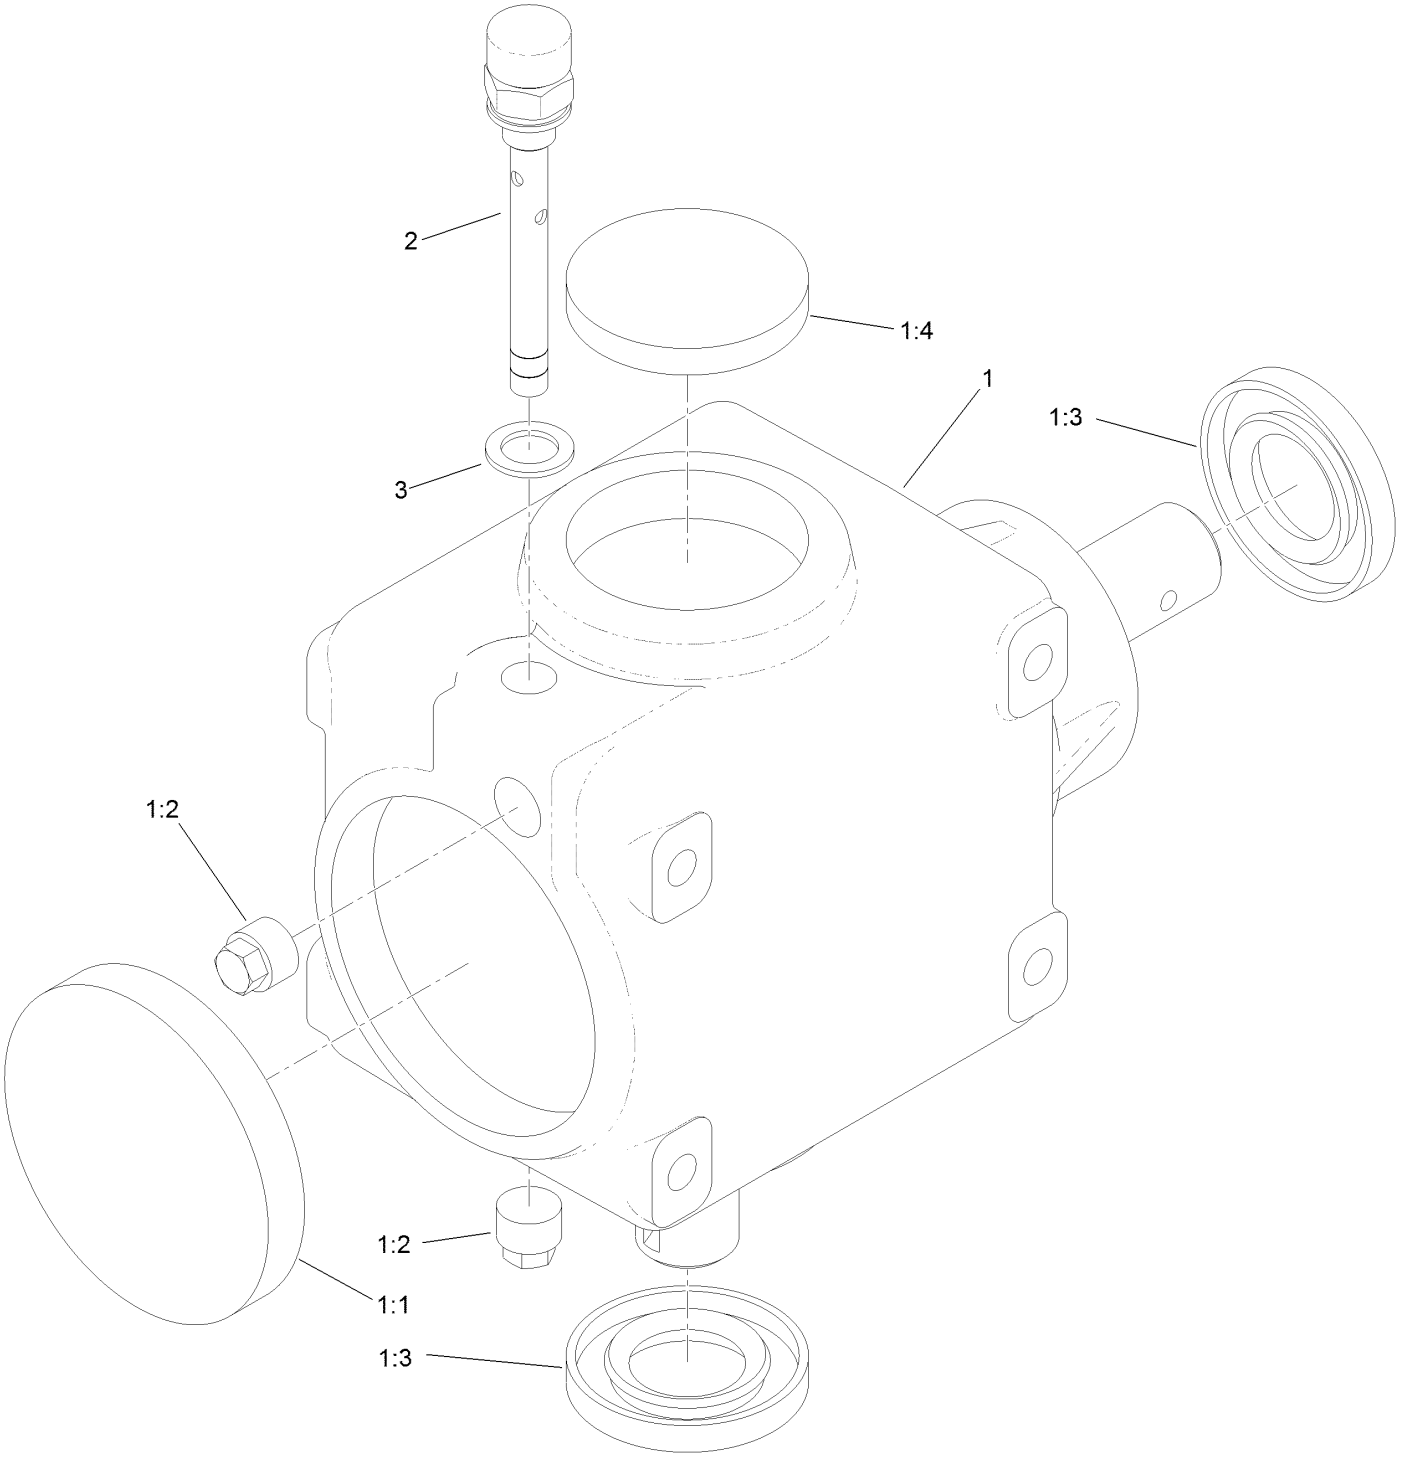


Gearbox Assembly No. 130-8659 (continued)

Ref.	Part Number	Qty.	Description
1		1	Gearbox ASM ●
1:1	107-2932	1	Cap-Oil
1:2	107-2933	2	Plug
1:3	117-9247	2	Seal
1:4	107-2935	1	Cap-Oil
2	130-8661	1	Plug-Breather
3	130-4899	1	Washer

● Not serviced separately


Idler Arm Assembly No. 126-2585

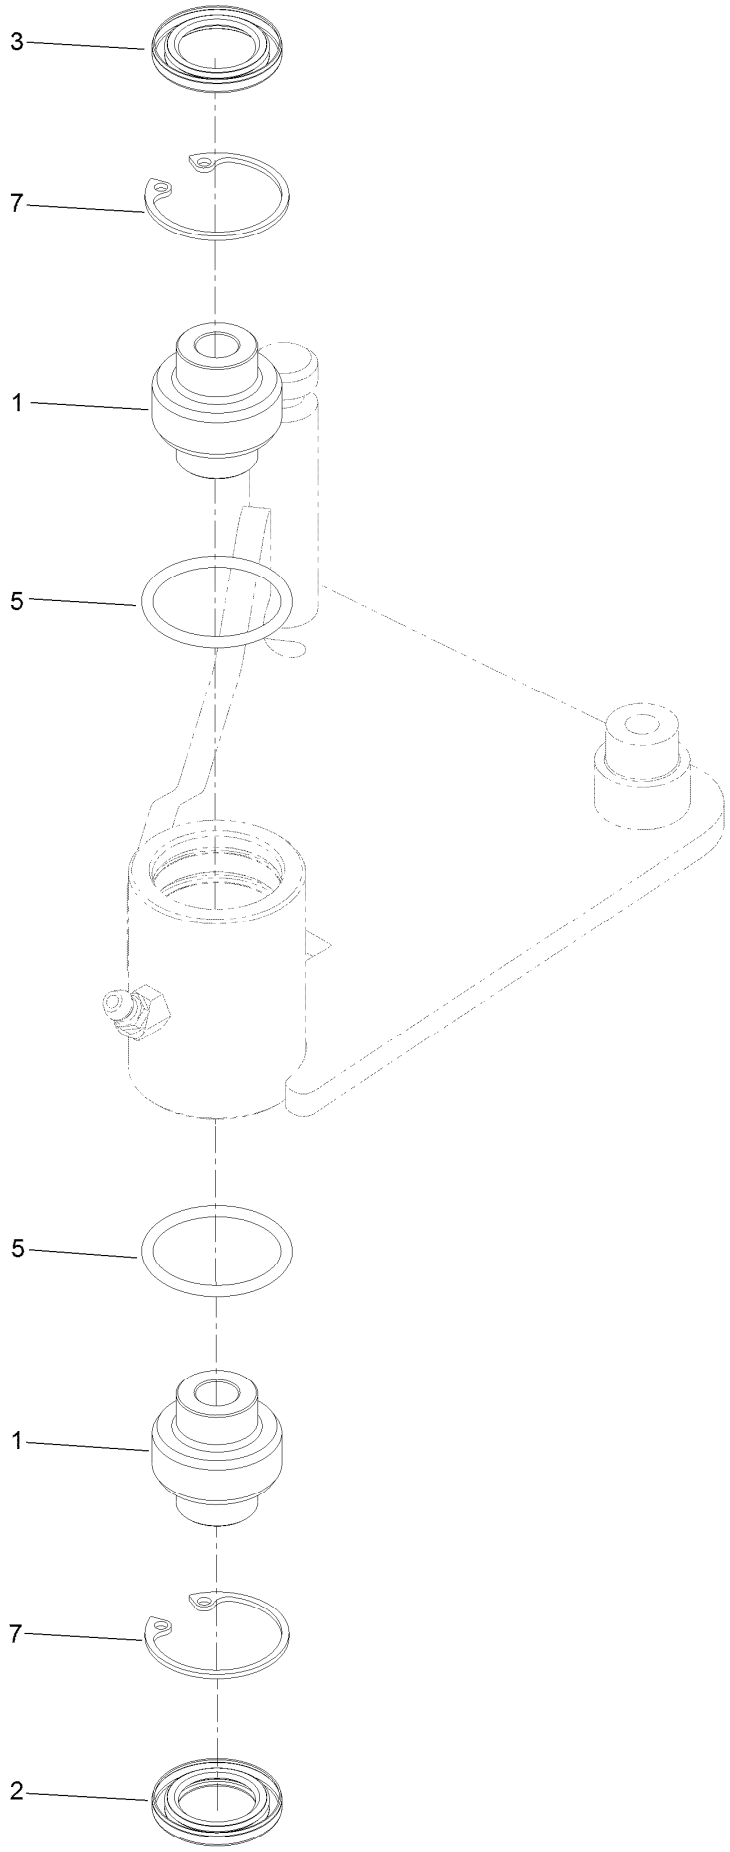

Idler Arm Assembly No. 126-2585 (continued)

Ref.	Part Number	Qty.	Description
1	103-3504	2	Bearing-Spherical
2	103-3505	1	Seal-Lip, Double
3	103-3506	1	Seal-Lip, Single
5	106-7159	2	O-Ring
7	32120-10	2	Ring-Snap

Driveshaft Assembly No. 110-3575

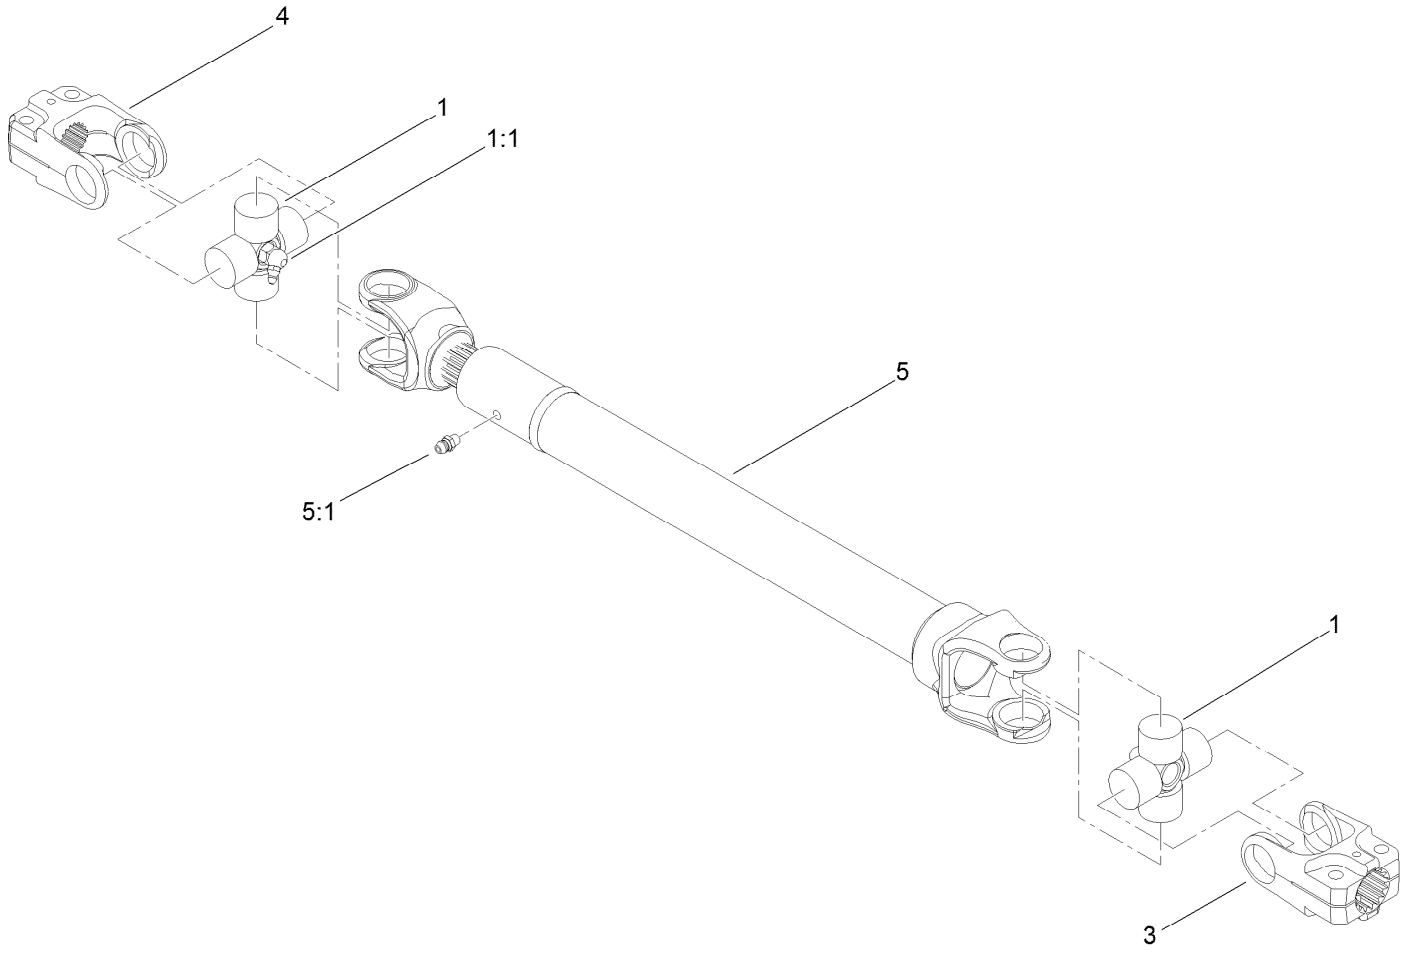


Driveshaft Assembly No. 110-3575 (continued)

Ref.	Part Number	Qty.	Description
1	112-1687	2	Cross And Bearing Kit
1:1	62-3820	1	Fitting-Grease
3	54-9040	1	Yoke-End
4	54-9090	1	Yoke-End
5		1	Tube-Yoke, Slip ●
5:1	302-22	1	Fitting-Grease

● Not serviced separately


Cylinder Block Assembly

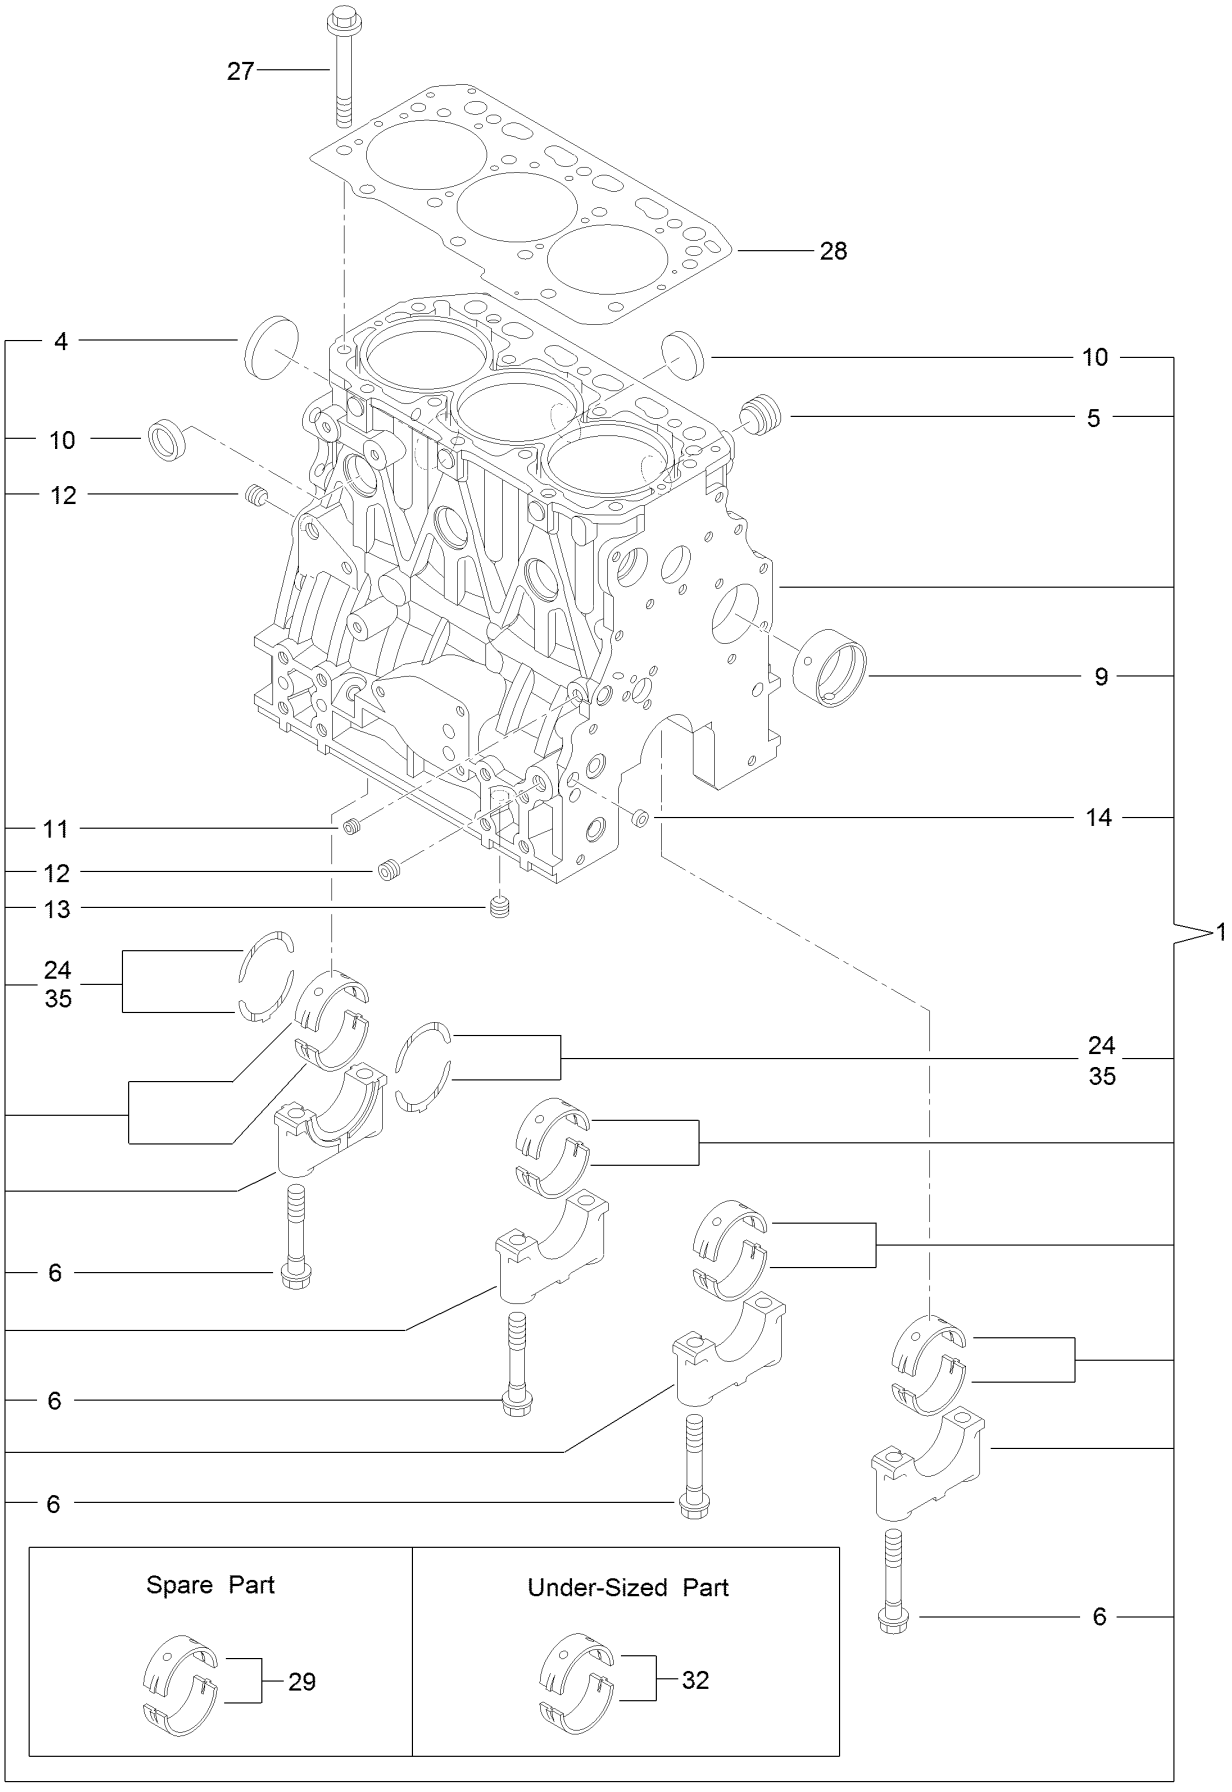

Cylinder Block Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-4717	1	Cylinder Block ASM
4	125-6980	1	Plug
5	125-7170	1	Plug
6	125-7007	8	Bolt
9	125-7108	1	Bushing
10	125-7239	6	Plug
11	125-6969	1	Plug
12	125-6973	2	Plug
13	125-6973	1	Plug
14	125-7237	1	Plug
24	125-7010	2	Metal-Thrust
27	125-7006	14	Bolt
28	127-4716	1	Head Gasket ASM
29	125-6981	4	Metal-Main
32	125-7009	4	Metal-Main (0.25)
35	125-7011	1	Metal-Thrust (0.25)


Gear Housing Assembly

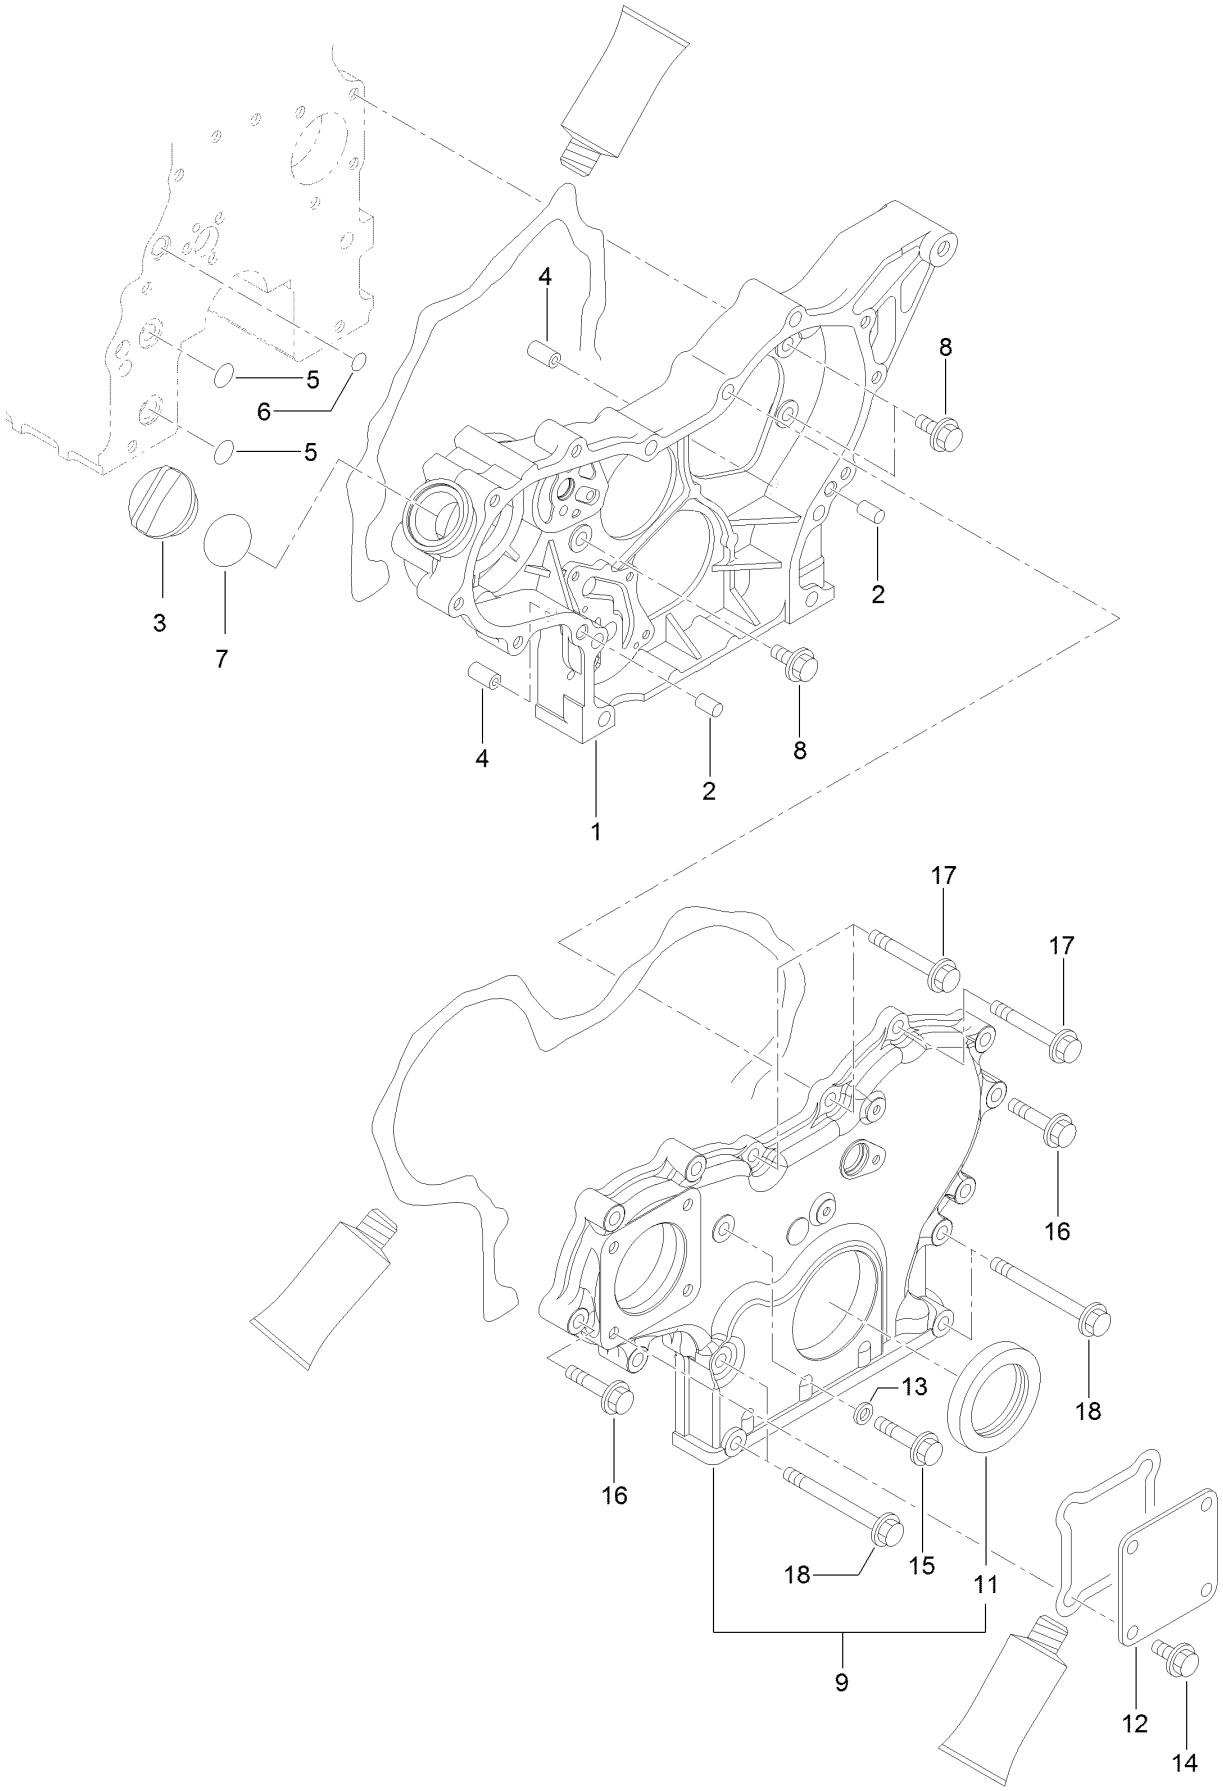

Gear Housing Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-3023	1	Case-Gear
2	125-6995	2	Pin
3	125-6972	1	Cover-Filler
4	125-7107	2	Pipe
5	125-6909	2	O-Ring
6	127-2973	1	O-Ring
7	125-7197	1	O-Ring
8	100-6928	3	Bolt
9	127-3024	1	Gearcase Cover ASM
11	125-6944	1	Seal-Oil
12	125-6977	1	Cover
13	125-7174	1	Washer-Seal
14	100-6928	4	Bolt
15	125-7217	1	Bolt
16	125-7218	7	Bolt
17	125-7222	3	Bolt
18	125-7224	4	Bolt


Flywheel Housing and Oil Sump Assembly

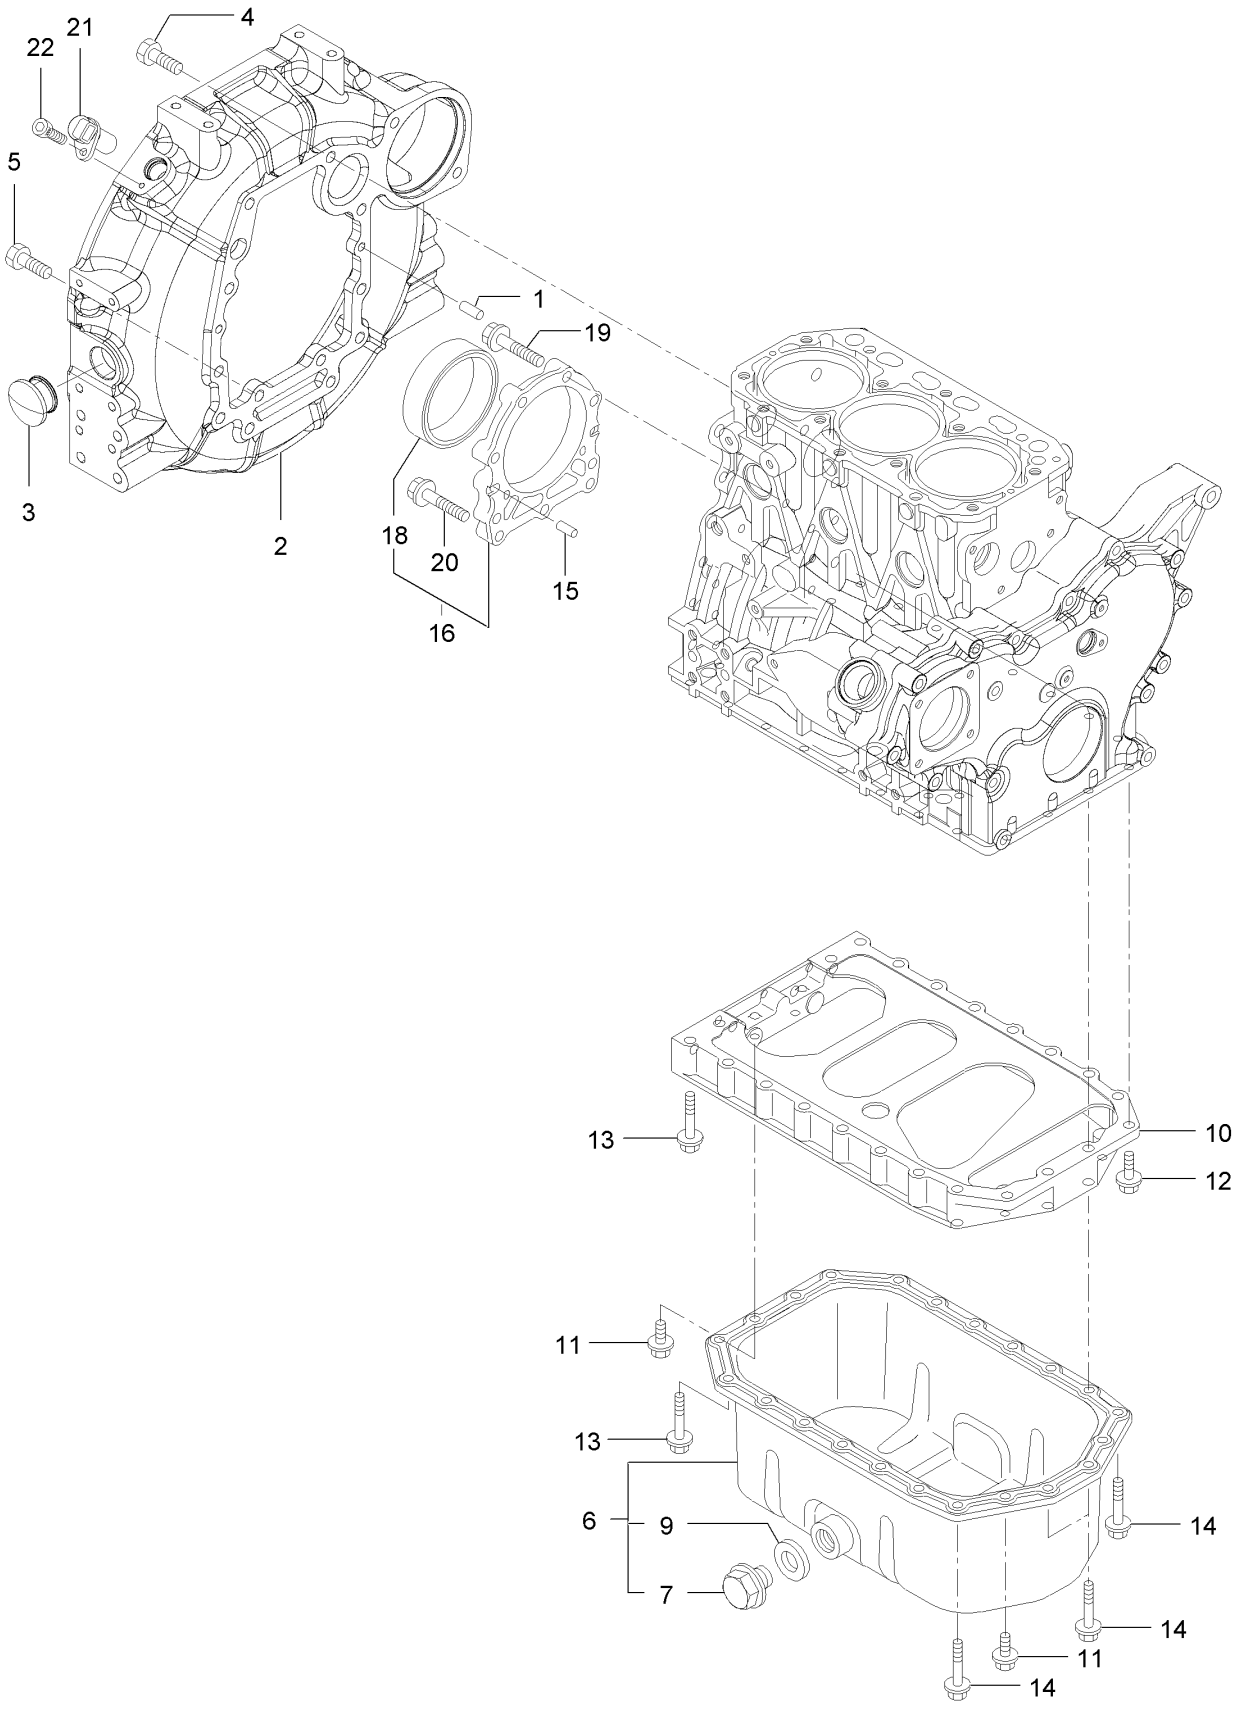

Flywheel Housing and Oil Sump Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-6995	2	Pin
2	127-4758	1	Housing-Flywheel
3	125-6910	1	Cap
4	125-7226	6	Bolt
5	125-7227	4	Bolt
6	135-4010	1	Oil Pan ASM
7	125-6912	1	Plug-Drain
9	125-7177	1	Washer-Seal
10	127-3756	1	Spacer
11	100-6928	4	Bolt
12	125-7215	2	Bolt
13	125-7219	16	Bolt
14	125-7220	4	Bolt
15	125-6995	2	Pin
16	135-4011	1	Case ASM
18	125-7106	1	Seal-Oil
19	125-7045	6	Bolt
20	125-7217	3	Bolt
21	127-3062	1	Sensor-Rev, Flywheel
22	127-3184	1	Bolt


Cylinder Head and Cover Assembly

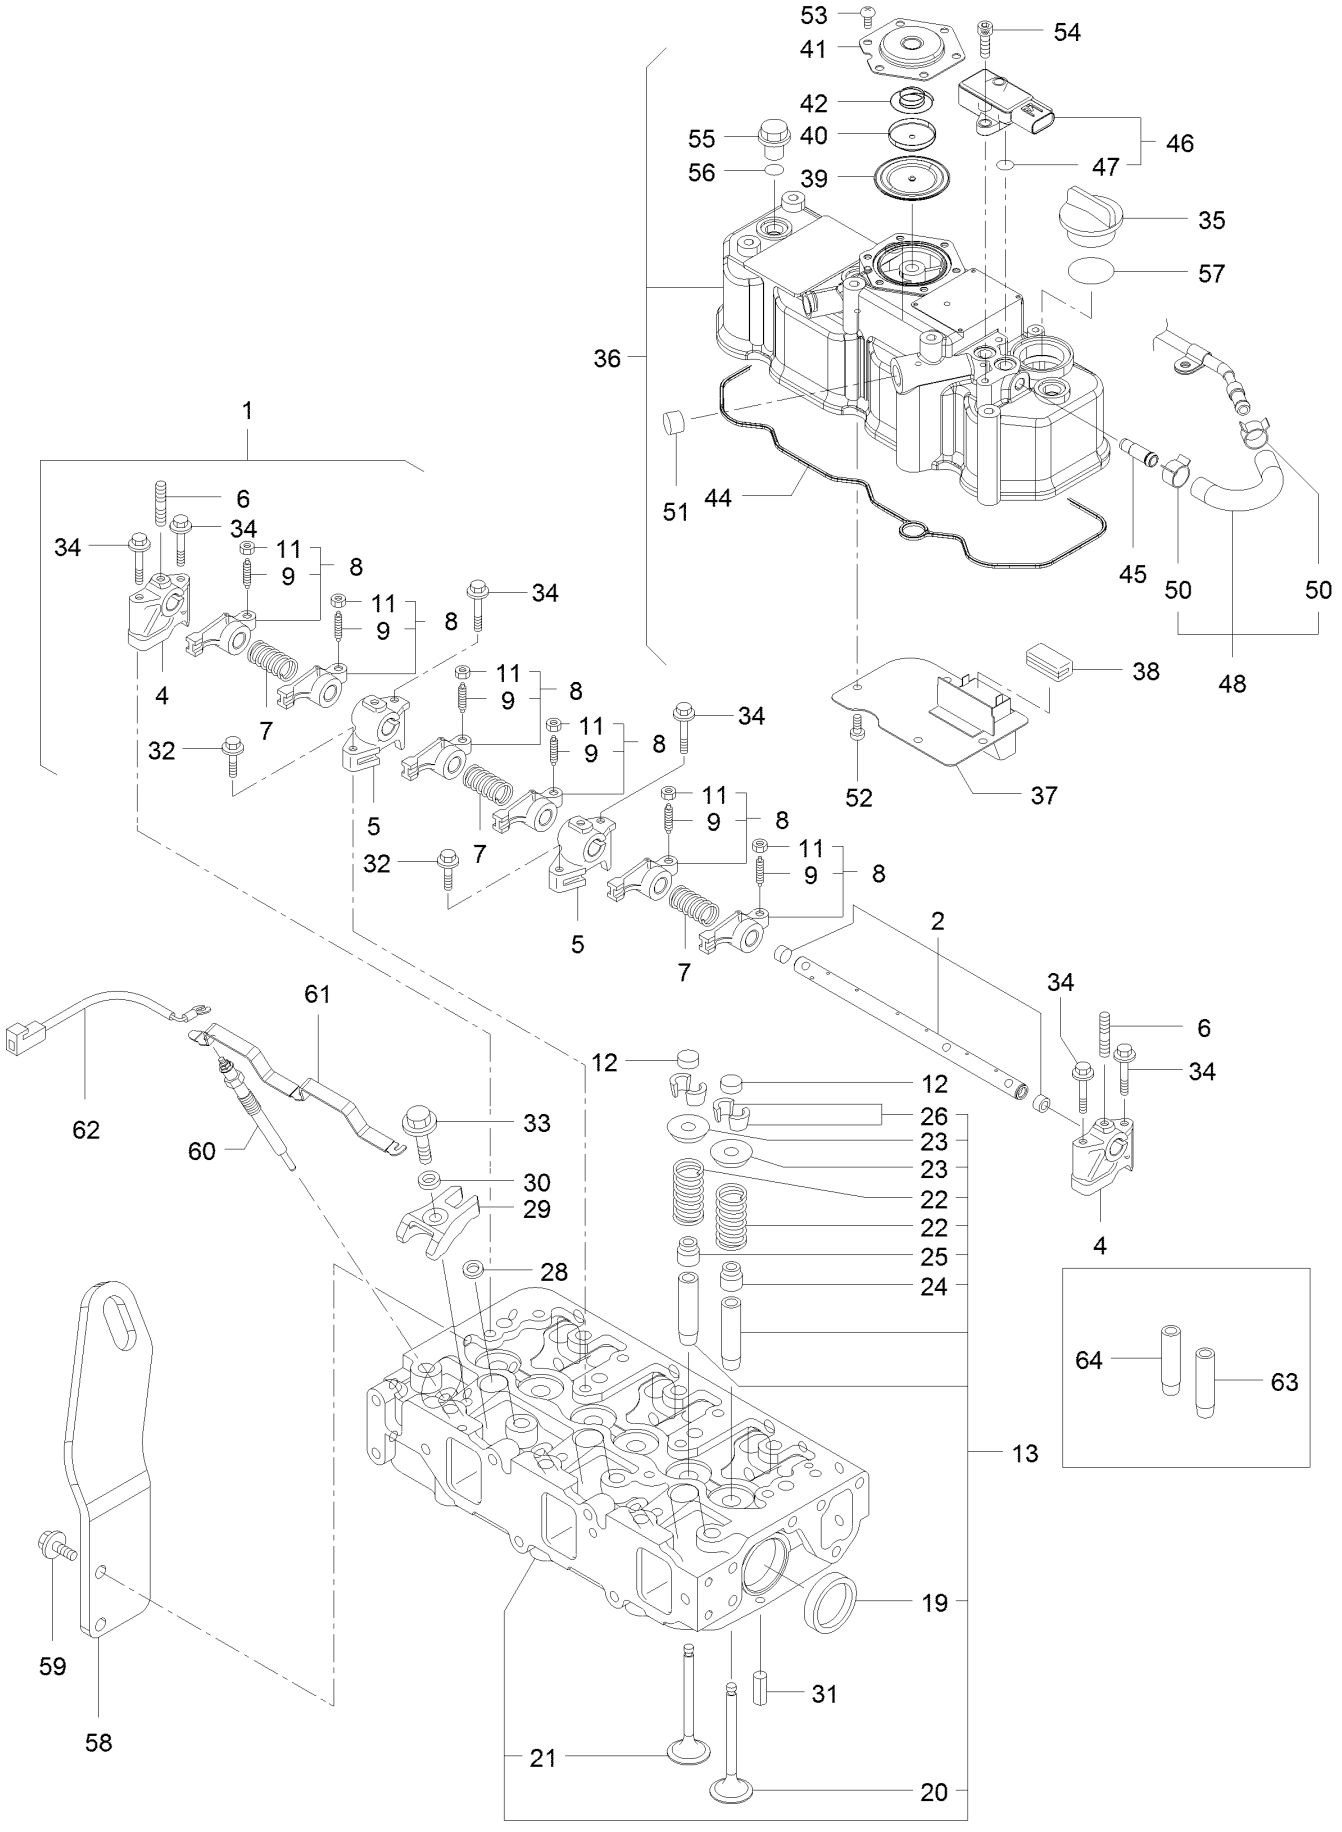

Cylinder Head and Cover Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-3757	1	Shaft ASM
2	127-3758	1	Shaft
4	127-2974	2	Support
5	127-2975	2	Support
6	135-4012	3	Bolt,Stud
7	127-2995	3	Spring
8	127-2989	6	Arm-Rocker
9	125-7013	6	Screw-Adjust, Valve
11	125-7014	6	Nut
12	127-2996	6	Cap-Valve
13	127-4720	1	Cylinder Head ASM
19	125-7240	2	Plug
20	127-2990	3	Valve
21	127-4710	3	Valve
22	127-3012	6	Spring
23	127-3013	6	Retainer-Spring
24	127-2986	3	Seal-Stem, Valve
25	127-3027	3	Seal-Stem, Valve
26	127-3186	6	Pin-Cotter
28	127-3021	3	Gasket-Injector
29	127-3028	3	Retainer-Injector
30	127-2980	3	Washer-Injector
31	125-7184	2	Pin-Spring
32	125-7215	2	Bolt
33	125-7217	3	Bolt
34	125-7220	6	Bolt
35	125-6972	1	Cover-Filler
36	127-4719	1	Cylinder Head Cover ASM
37	127-2988	1	Plate
38	125-7012	1	Baffle
39	125-6959	1	Diaphragm
40	125-6960	1	Plate
41	125-6961	1	Plate-Breather
42	125-6962	1	Spring-Diaphragm
44	127-3856	1	Gasket-Valve Cover
45	127-3026	1	Joint
46	127-3029	1	Sensor-Pressure
47	127-3032	2	O Ring-Sensor, Pressure
48	127-3040	1	Hose ASM
50	127-3041	2	Clip-Hose
51	125-6913	1	Plug
52	125-7186	4	Screw
53	125-7186	6	Screw
54	127-3184	2	Bolt
55	125-6974	3	Knob
56	93-0418	3	O-Ring
57	125-7197	1	O-Ring
58	127-4718	1	Lifter-Engine
59	100-6928	2	Bolt
60	127-2991	3	Plug-Glow
61	127-3768	1	Connector-Plug, Glow
62	131-2704	1	Harness-Wire
63	127-2979	3	Guide
64	127-2997	3	Guide-Valve


Suction Manifold Assembly

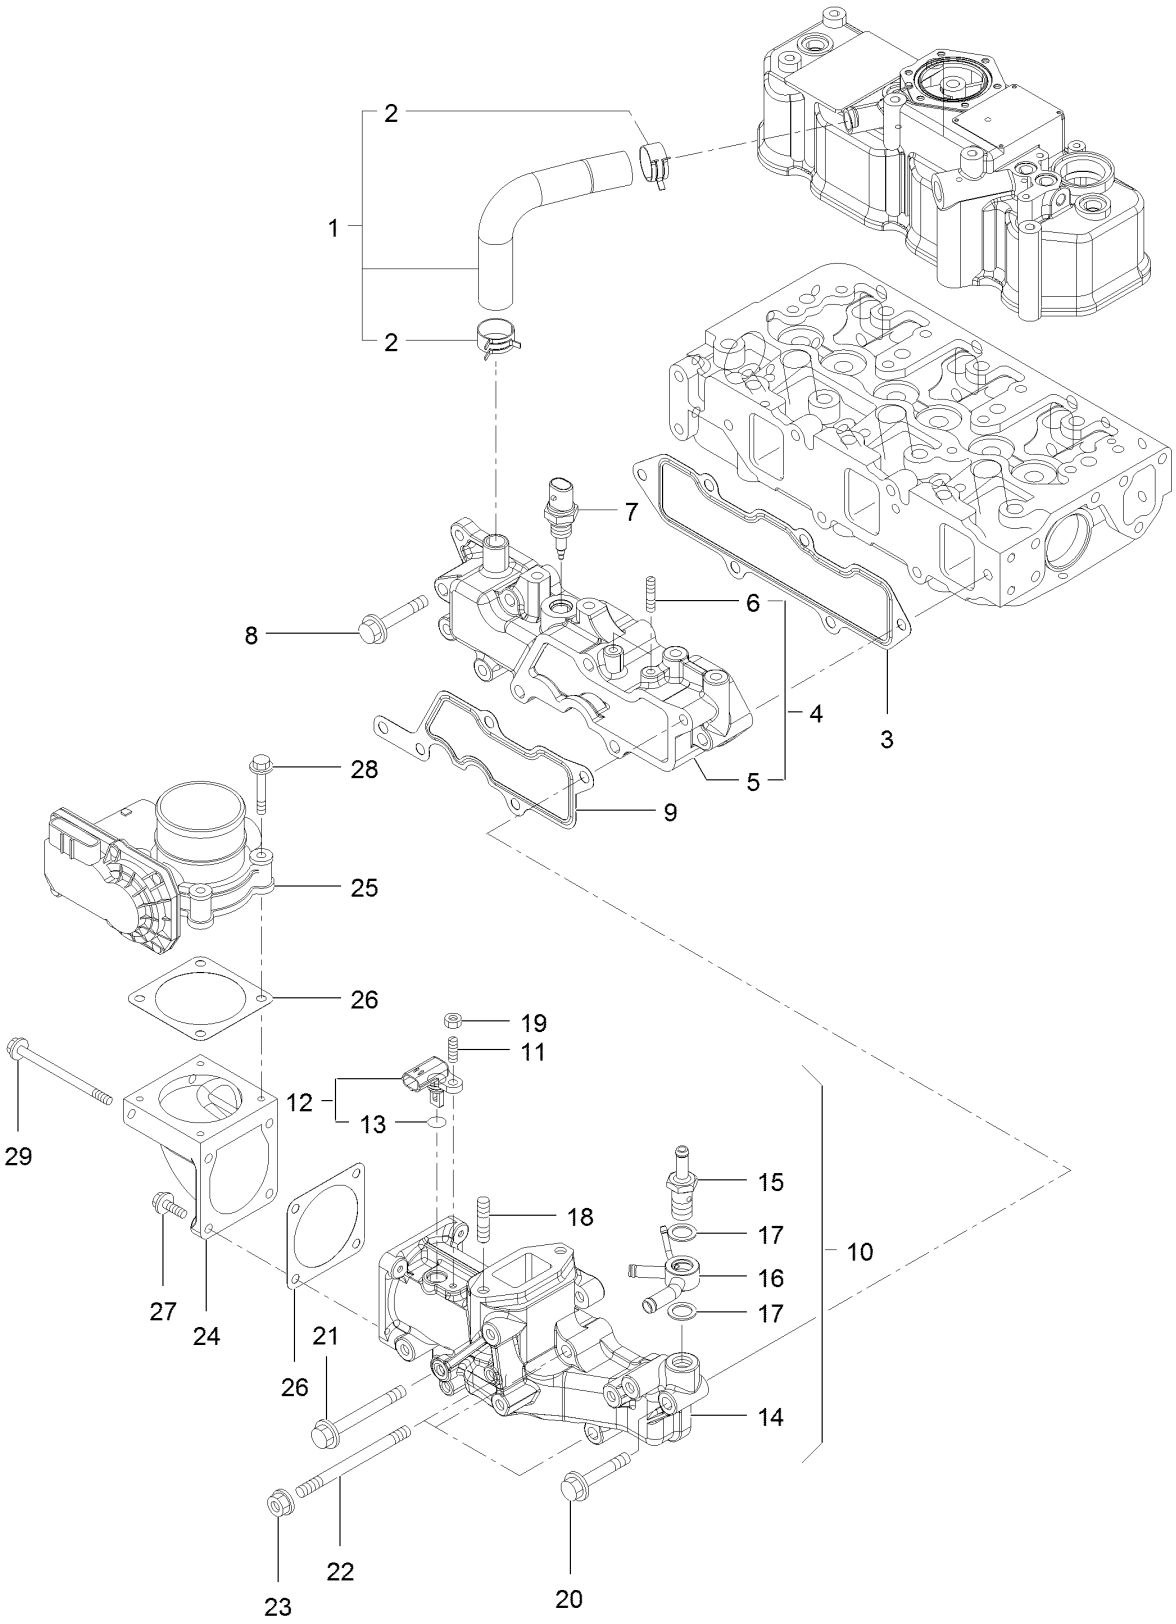

Suction Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-4704	1	Pipe
2	125-7040	2	Clip-Hose
3	127-3857	1	Gasket-Manifold, Intake
4	127-4722	1	Intake Manifold ASM
5	127-4721	1	Manifold-Intake
6	127-3180	2	Stud
7	127-3031	1	Sensor-Temp, Air
8	125-7220	3	Bolt
9	127-3034	1	Gasket-Collector
10	127-4725	1	Intake Collector ASM
11	127-4701	1	Stud
12	127-3030	1	Sensor-Temp, Air
13	127-3033	1	O-Ring
14	127-4724	1	Collector-Intake
15	127-3080	1	Joint-Hose
16	127-3081	1	Joint-Hose
17	127-3166	2	Washer-Seal
18	127-3181	2	Stud
19	127-4775	1	Nut
20	125-7220	1	Bolt
21	127-3178	1	Bolt
22	127-3182	3	Stud
23	125-7229	3	Nut
24	127-3035	1	Bend-Inlet
25	127-3036	1	Body-Throttle
26	127-3037	2	Gasket-Throttle
27	125-7209	2	Bolt
28	125-7211	4	Bolt
29	127-3177	2	Bolt


Exhaust Manifold Assembly

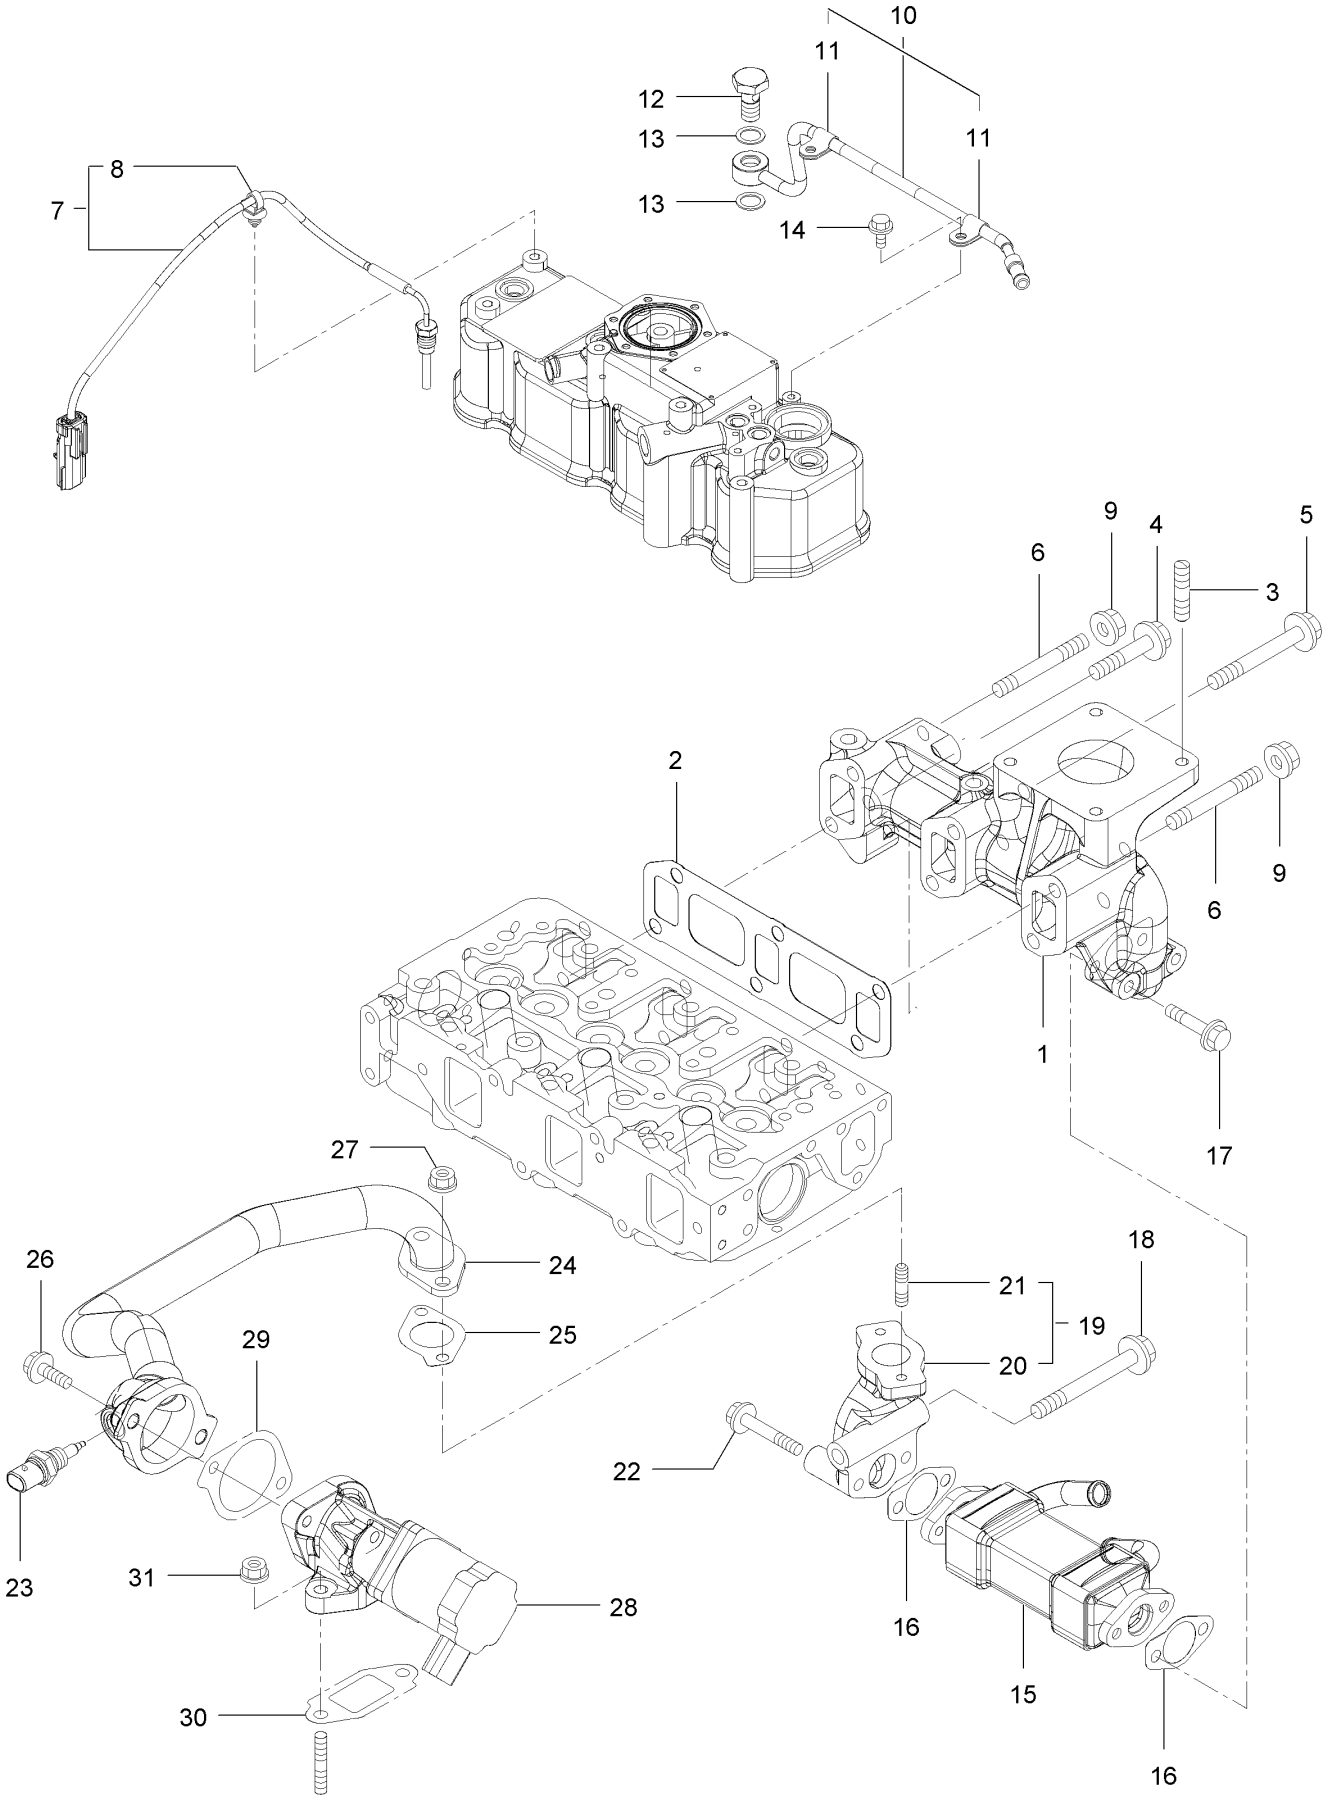

Exhaust Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-4726	1	Manifold-Exhaust
2	127-3775	1	Gasket-Manifold, Exhaust
3	127-2984	4	Stud
4	135-4013	1	Bolt
5	135-4014	3	Bolt
6	127-4756	2	Stud
7	127-4729	1	Sensor-Temp, Exhaust
8	127-3087	1	Band-Clip
9	125-7230	2	Nut
10	127-3038	1	Exhaust Pipe ASM
11	127-3173	2	Clamp
12	127-3039	1	Bolt-Joint, Pipe
13	127-3174	2	Gasket
14	125-7206	2	Bolt
15	127-3042	1	Cooler-E G R
16	127-3043	2	Gasket-Cooler, E G R
17	135-4015	2	Bolt
18	135-4016	1	Bolt
19	127-3048	1	E G R Pipe ASM
20	127-3049	1	Pipe-Out, E G R
21	125-7043	2	Stud
22	125-7220	2	Bolt
23	137-5168	1	Sensor-Gas Temp, E G R
24	127-3780	1	E G R Pipe ASM
25	127-3016	1	Gasket
26	125-7215	2	Bolt
27	125-7229	2	Nut
28	127-3781	1	Valve-E G R
29	127-3050	1	Gasket-Intake Valve, E G R
30	127-3051	1	Gasket-Out Valve, E G R
31	125-7229	2	Nut


Diesel Particulate Filter Assembly

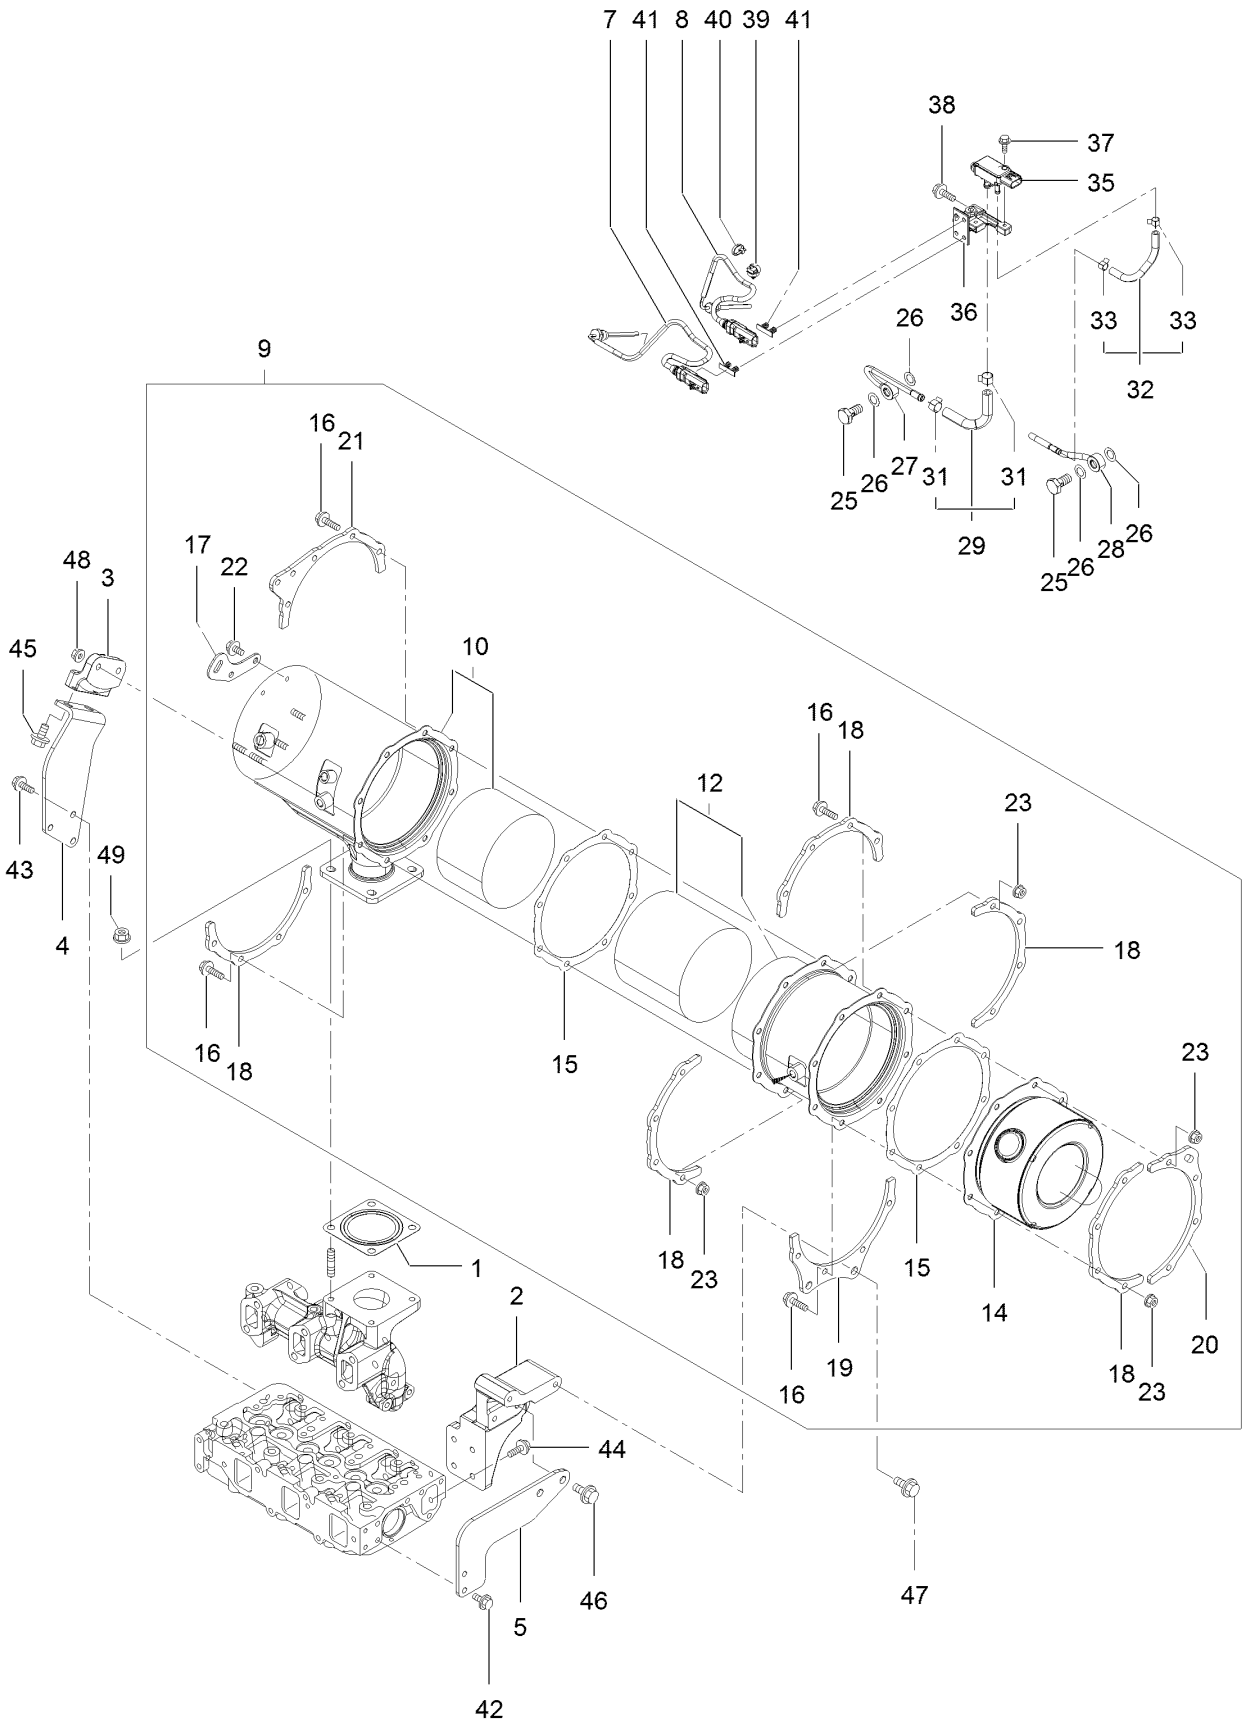

Diesel Particulate Filter Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-2987	1	Gasket-Silencer
2	127-4738	1	Stay-D P F
3	127-4739	1	Stay-D P F
4	127-4740	1	Stay-D P F
5	127-4741	1	Stay-D P F
7	127-4764	1	Sensor-Temp, Exhaust
8	127-4765	1	Sensor-Temp, Exhaust
9	127-4759	1	D P F ASM
10	127-4732	1	Case-D O C
12	127-4734	1	Case-Filter, Soot
14	127-3786	1	Silencer-D P F
15	127-3859	2	Gasket-D P F
16	127-3055	16	Bolt
17	127-3788	1	Lifter-D P F
18	127-3789	5	Stiffener-D P F, A
19	127-4735	1	Stiffener-D P F, B
20	127-3792	1	Stiffener-D P F, C
21	127-4736	1	Stiffener-D P F, C
22	125-7213	2	Bolt
23	125-7229	16	Nut
25	127-3039	2	Bolt-Joint, Pipe
26	127-3056	4	Gasket-Sensor
27	127-4744	1	Sensor Pipe ASM
28	127-4745	1	Sensor Pipe ASM
29	127-4747	1	Exhaust Hose ASM
31	127-3057	2	Clip-Hose
32	127-4748	1	Exhaust Hose ASM
33	127-3058	2	Clip-Hose
35	127-3060	1	Sensor-Pressure
36	127-4750	1	Bracket-Sensor
37	125-7208	2	Bolt
38	125-7595	2	Bolt
39	127-3087	1	Band-Clip
40	127-3124	1	Band
41	127-3088	2	Clip-Connnector
42	100-6928	2	Bolt
43	100-6928	3	Bolt
44	125-7594	4	Bolt
45	127-4773	2	Bolt
46	127-3179	2	Bolt
47	127-3179	2	Bolt
48	127-3179	2	Bolt
49	125-7230	4	Nut


Camshaft and Driving Gear Assembly

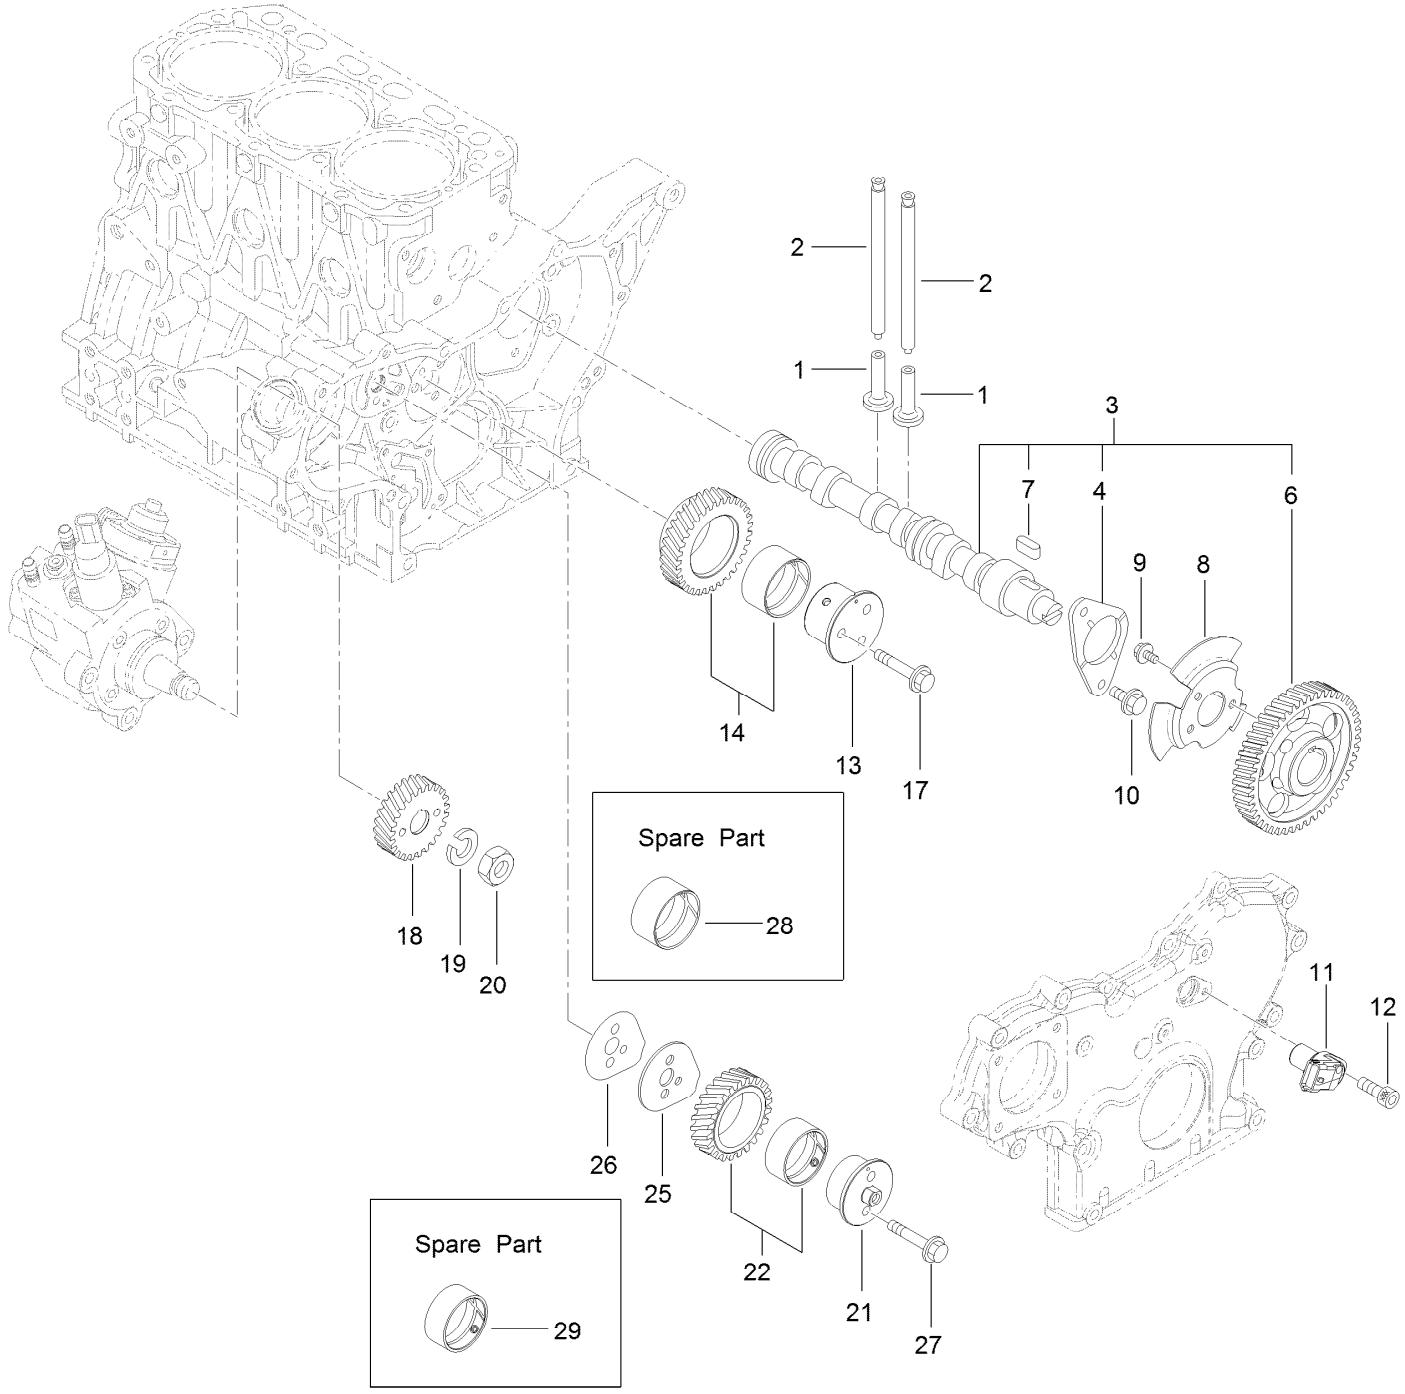

Camshaft and Driving Gear Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-7016	6	Tappet
2	125-7017	6	Rod-Push
3	127-3797	1	Camshaft ASM
4	125-7008	1	Metal-Thrust
6	127-3052	1	Gear-Camshaft
7	125-7185	1	Key
8	127-3053	1	Pulser-Camshaft
9	125-7205	3	Bolt
10	125-7213	2	Bolt
11	127-3054	1	Sensor-Rev, Gear
12	127-3184	1	Bolt
13	127-3063	1	Shaft-Idle, Gear A
14	127-3066	1	Idle Gear A ASM
17	125-7219	3	Bolt
18	127-3070	1	Gear-Pump, Supply
19	127-3167	1	Washer-Spring
20	127-3185	1	Nut-Lock
21	127-3064	1	Shaft-Idle, Gear B
22	127-3067	1	Idle Gear B ASM
25	127-3068	1	Plate-Idle, Shaft
26	127-3069	1	Gasket-Idle, Shaft B
27	125-7218	2	Bolt
28	125-6927	1	Bushing
29	127-3065	1	Bushing


Crankshaft and Piston Assembly

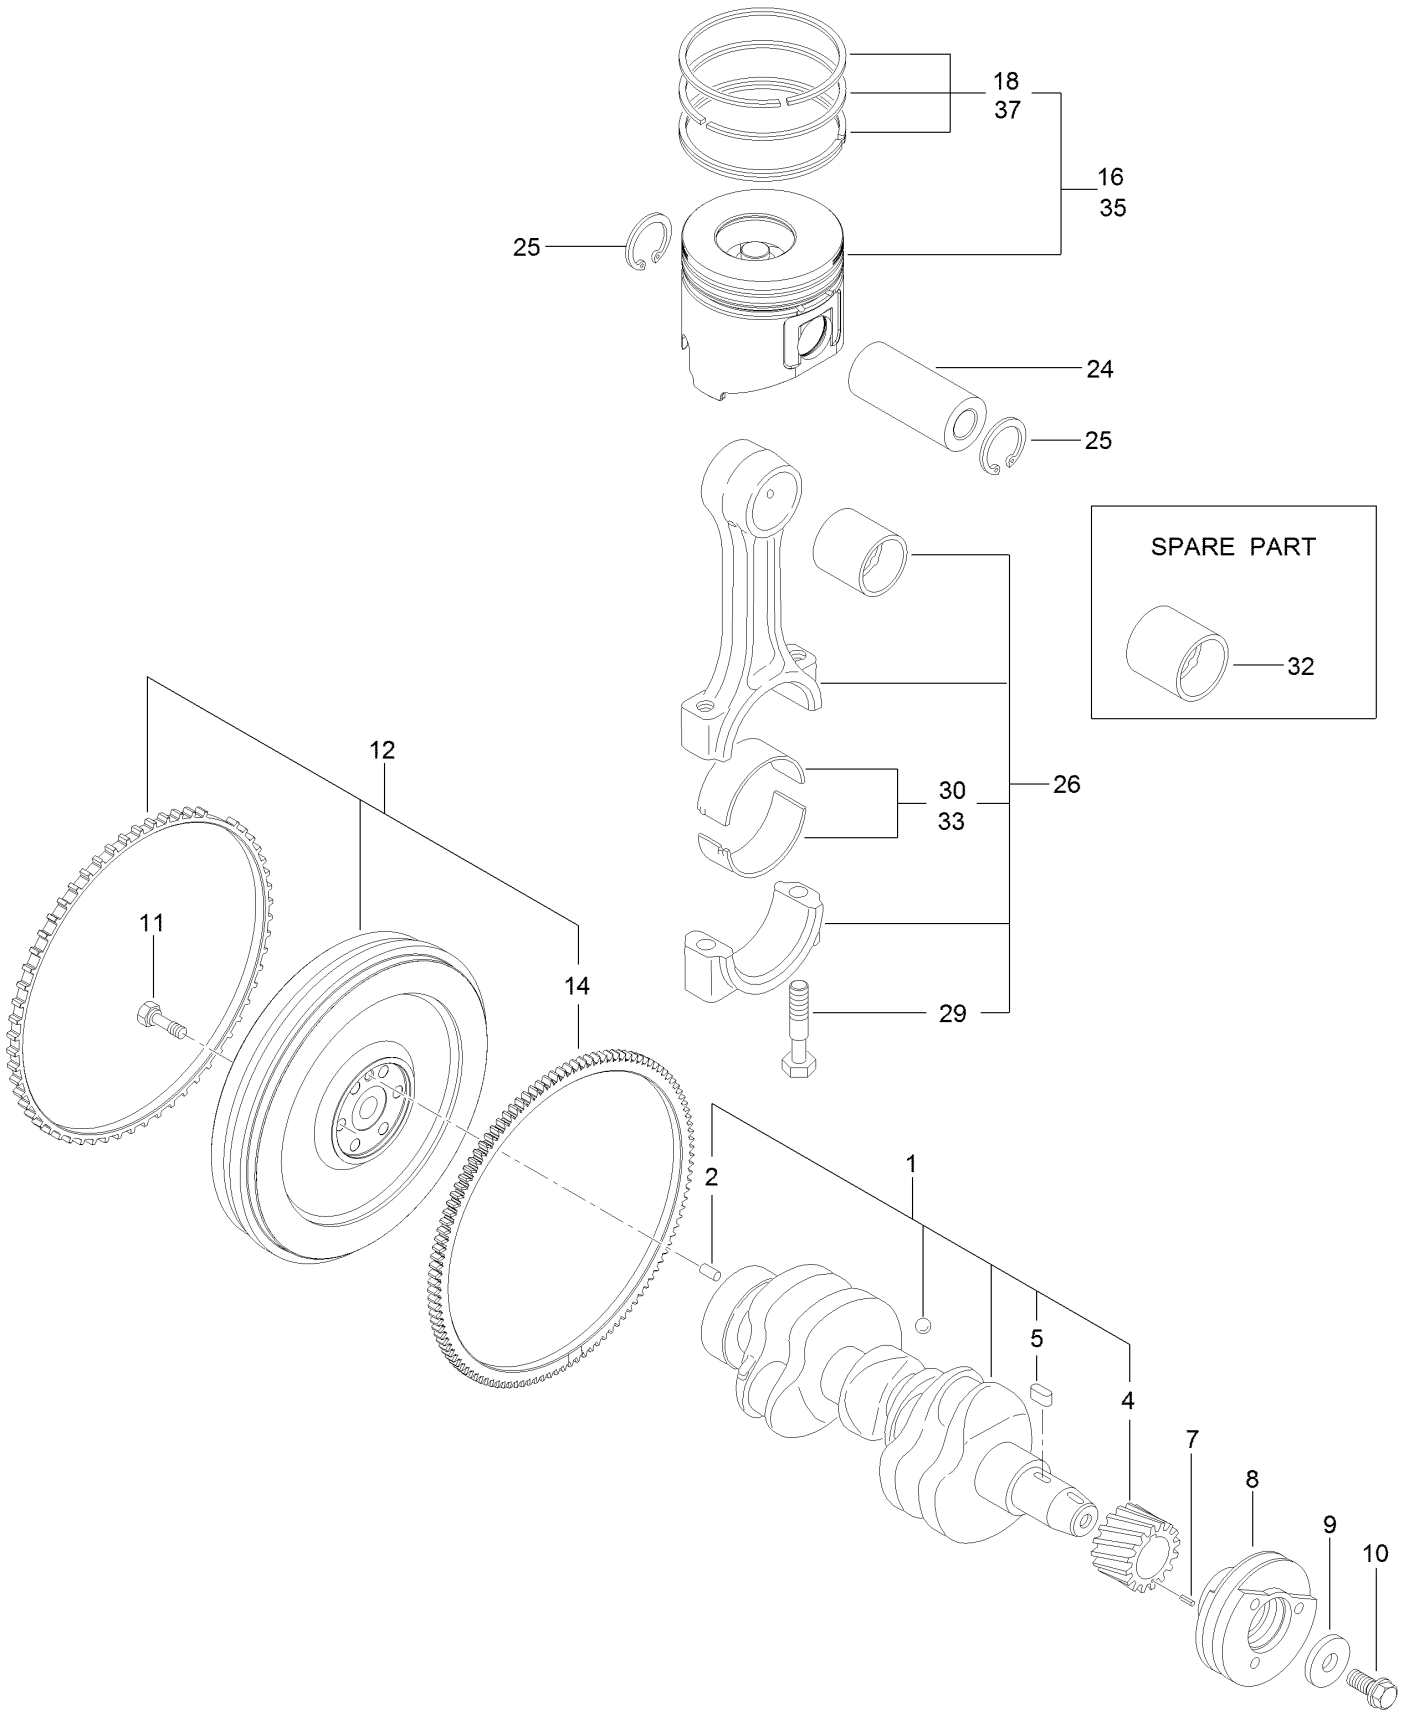

Crankshaft and Piston Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-3800	1	Crankshaft ASM
2	125-6995	1	Pin
4	125-6937	1	Gear
5	125-7185	1	Key
7	125-7182	1	Pin-Spring
8	127-3801	1	Pulley-V
9	125-7109	1	Washer
10	125-6956	1	Bolt
11	125-6951	6	Bolt
12	127-4761	1	Flywheel ASM
14	127-4703	1	Gear
16	127-4766	3	Piston ASM
18	127-4751	3	Piston Ring ASM
24	125-7030	3	Pin
25	125-7180	6	Ring
26	125-7242	3	Connecting Rod ASM
29	125-6955	6	Bolt
30	125-7018	3	Pin-Crank
32	125-6997	3	Pin-Piston
33	125-7019	3	Pin-Crank (.25)
35	127-4767	3	Piston ASM (0.25 O S)
37	127-4752	3	Ring Set (0.25 O S)


Oil Pump Assembly

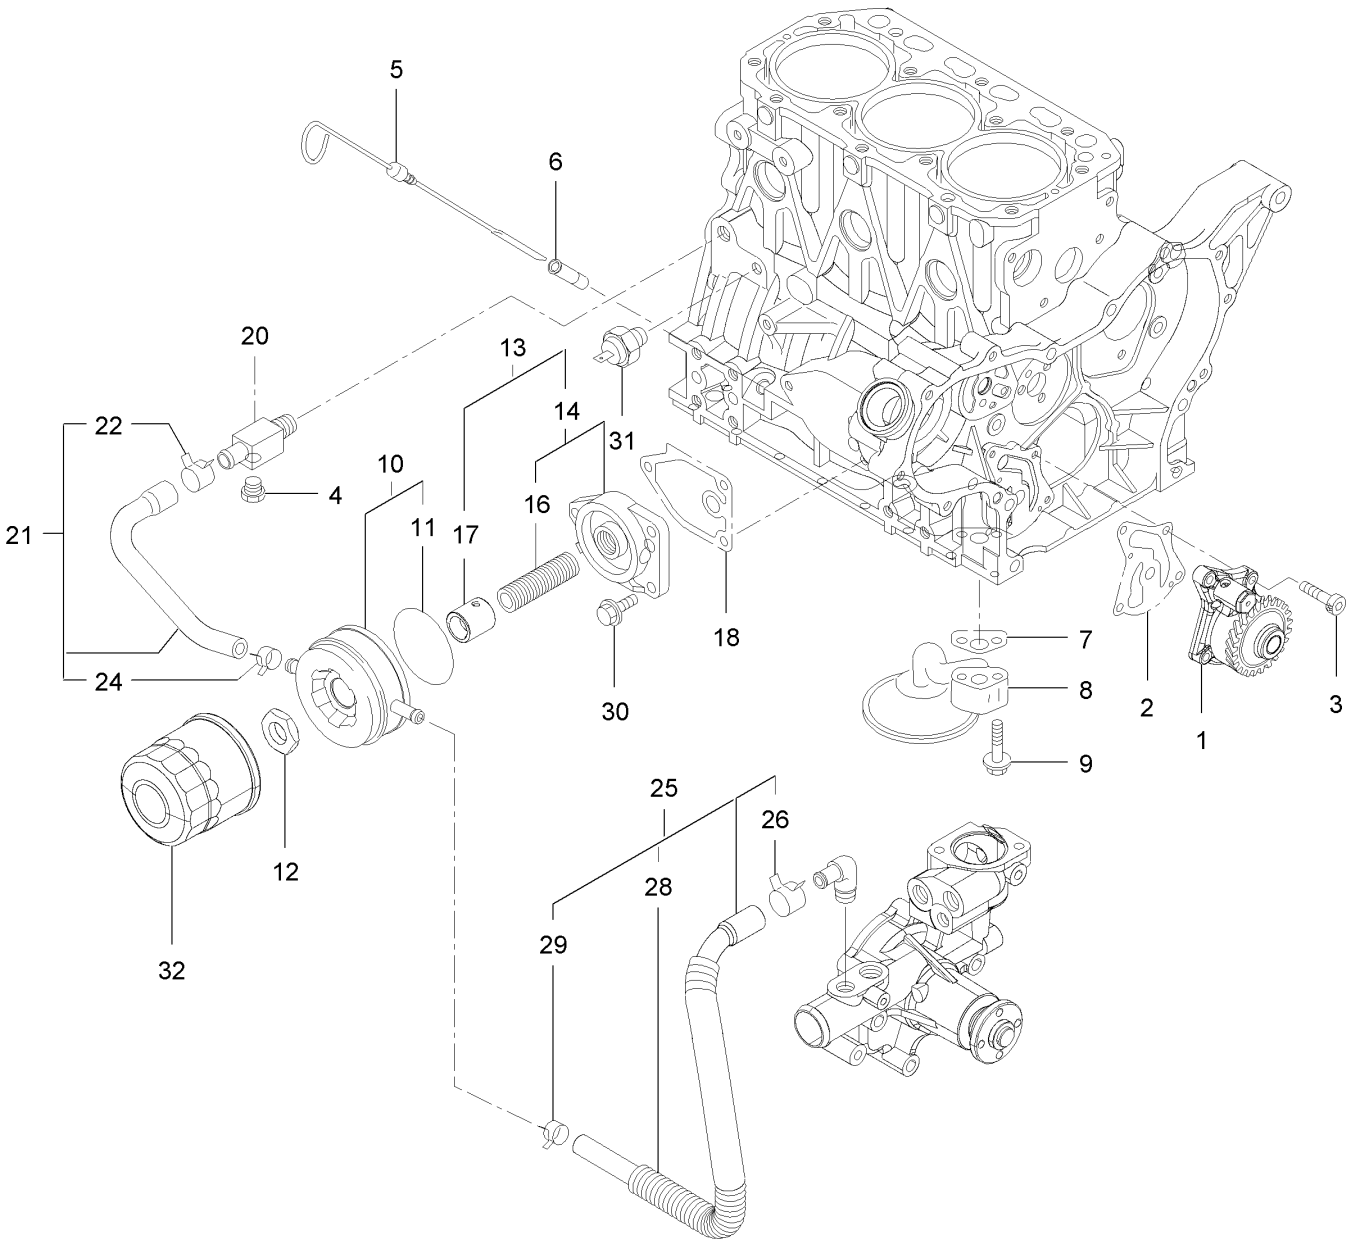

Oil Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-4753	1	Oil Pump ASM
2	127-3004	1	Gasket
3	125-7232	4	Bolt
4	125-7171	1	Plug-Drain
5	125-6987	1	Dipstick
6	125-6954	1	Guide-Dipstick
7	125-7022	1	Gasket
8	135-4017	1	Pipe ASM-Oil Inlet
9	125-7217	2	Bolt
10	135-4018	1	Cooler ASM-Oil
11	135-4019	1	Packing-Oil Cooler
12	135-4020	1	Nut
13	135-4021	1	Bracket ASM-Lo Filt
14	125-6989	1	Bracket ASM
16	125-7042	1	Stud
17	135-4022	1	Collar-Oil Cooler
18	125-7024	1	Gasket
20	125-6990	1	Joint
21	125-7078	1	Pipe ASM
22	125-7162	1	Clip
24	125-7191	1	Clamp-Hose
25	127-3804	1	Pipe ASM
26	125-7162	1	Clip
28	127-3805	1	Tube
29	125-7191	1	Clamp-Hose
30	125-7595	3	Bolt
31	125-6918	1	Switch-Oil
32	125-7025	1	Filter-Engine


Cooling Water System Assembly

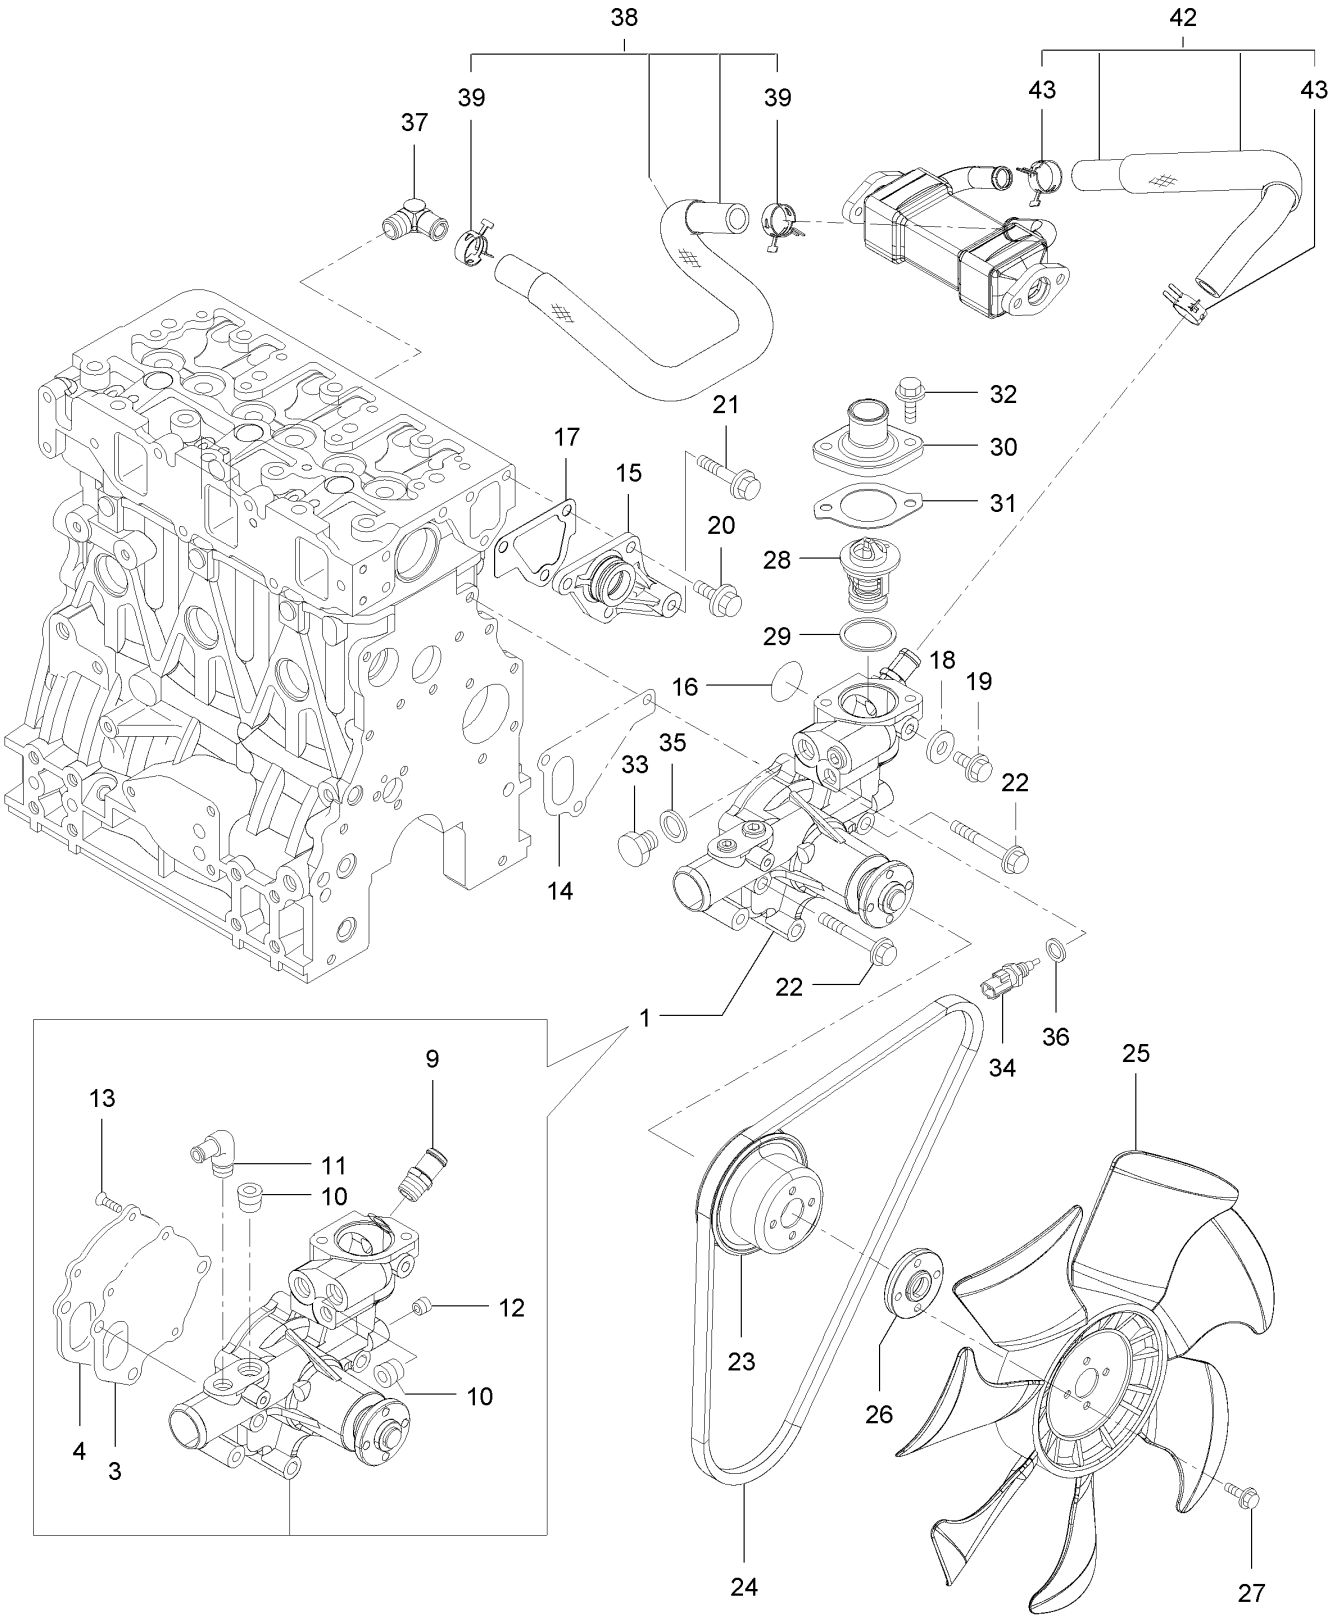

Cooling Water System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-3071	1	Water Pump ASM
3	125-6998	1	Gasket
4	125-6999	1	Plate
9	127-3017	1	Joint
10	125-7123	2	Plug
11	125-7001	1	Elbow
12	125-7195	1	Plug
13	125-7234	3	Screw
14	125-7047	1	Gasket
15	125-6986	1	Joint
16	125-7048	1	O-Ring
17	125-6978	1	Gasket
18	125-7192	1	Gasket
19	93-0362	1	Bolt
20	100-6928	3	Bolt
21	125-7219	1	Bolt
22	125-7222	3	Bolt
23	127-4712	1	V-Pulley
24	127-4771	1	V-Belt
25	127-4702	1	Fan
26	127-3810	1	Spacer
27	125-7209	4	Bolt
28	125-7029	1	Thermostat
29	125-7026	1	Gasket
30	125-7034	1	Cover
31	125-7110	1	Gasket
32	125-7594	2	Bolt
33	125-6953	1	Plug
34	125-7124	1	Sensor-Thermostat, CW
35	125-6979	1	Gasket
36	125-7176	1	Washer-Seal
37	127-4705	1	Elbow
38	127-4757	1	E G R-C Pipe ASM
39	127-3020	2	Clip-Hose
42	127-3811	1	CW Pipe ASM
43	127-3020	2	Clip-Hose


Fuel Supply Pump Assembly

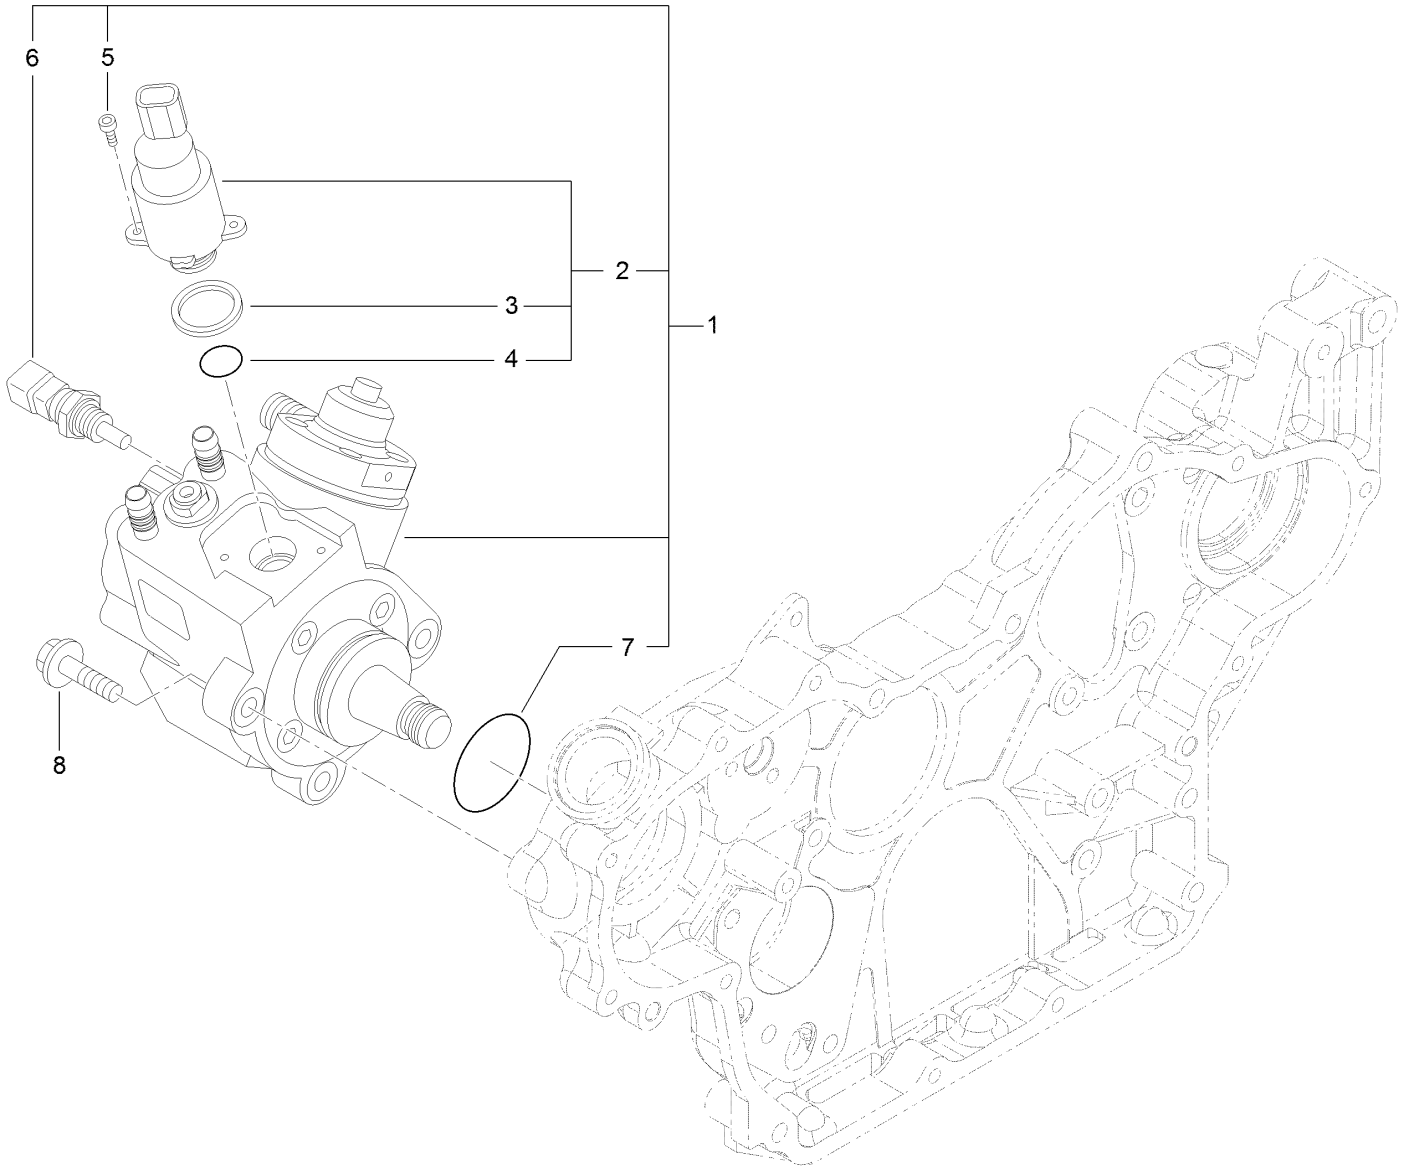

Fuel Supply Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-3073	1	Fuel Pump ASM
2	131-2103	1	Valve ASM
3	131-2105	1	Ring-Sealing
4	131-2106	1	O-Ring
5	131-2107	2	Bolt
6	131-2108	1	Sensor-Temperature
7	127-3074	1	O-Ring
8	125-7216	3	Bolt


Fuel Injection Valve Assembly

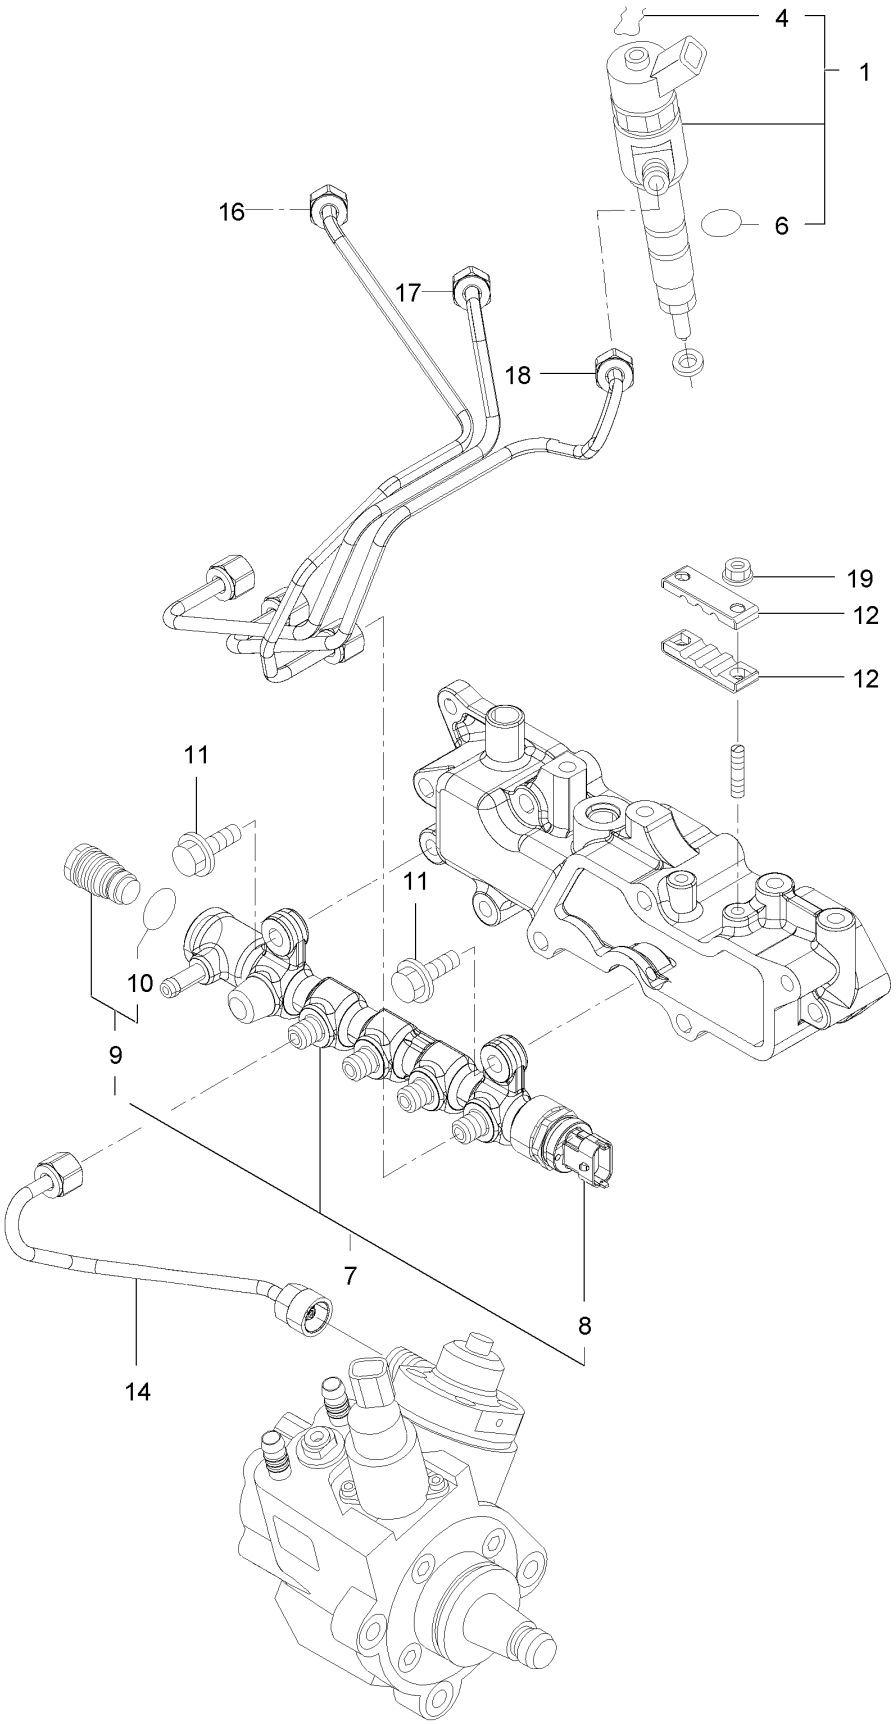

Fuel Injection Valve Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-4754	3	Injector ASM
4	130-7430	3	Ring-Retaining
6	137-5173	3	O-Ring
7	127-3812	1	Rail ASM
8	131-2709	1	Sensor-Pressure, Rail
9	131-2710	1	Valve ASM
10	130-7433	1	O-Ring
11	125-7215	2	Bolt
12	127-3813	2	Retainer
14	127-3082	1	Rail In Pipe ASM
16	127-3814	1	Injection Pipe ASM
17	127-3083	1	Injection Pipe ASM
18	127-3084	1	Injection Pipe ASM
19	125-7231	2	Nut


Fuel Line Assembly

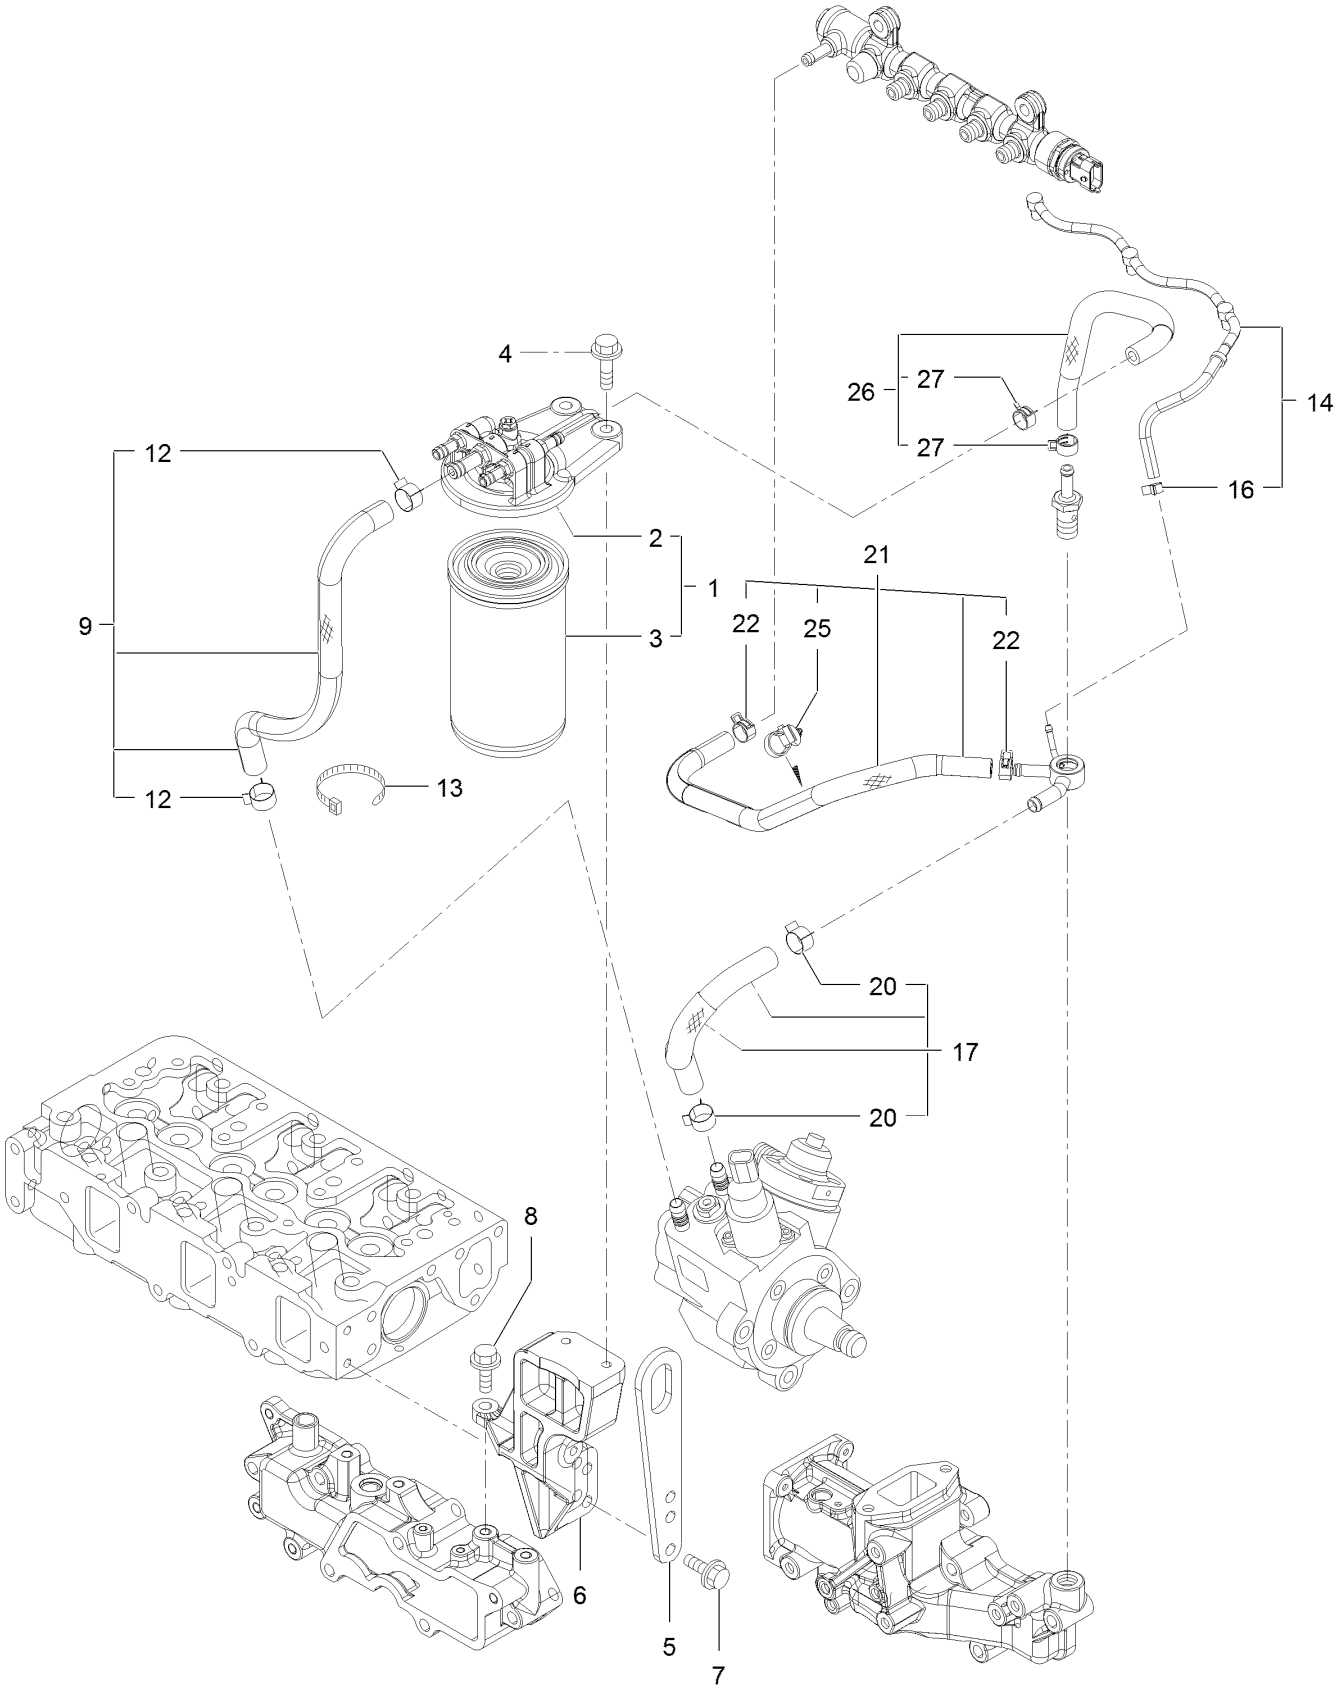

Fuel Line Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-3075	1	Fuel/Oil Filter ASM
2	127-3076	1	Fuel/Oil Filter Bracket ASM
3	125-8752	1	Filter-Fuel/Oil
4	125-7216	2	Bolt
5	125-7111	1	Lifter
6	127-3815	1	Filter Bracket ASM
7	125-7215	2	Bolt
8	125-7215	1	Bolt
9	127-3077	1	Fuel Pipe ASM
12	125-7191	2	Clamp-Hose
13	127-2981	1	Band
14	135-4023	1	Pipe ASM-Fo Return
16	127-3172	1	Clamp-Hose
17	127-3078	1	Fuel Pipe ASM
20	125-7191	2	Clamp-Hose
21	127-3817	1	Fuel Pipe ASM
22	127-2950	2	Clip-Hose
25	127-3087	1	Band-Clip
26	127-3079	1	Fuel Pipe ASM
27	127-2950	2	Clip-Hose


Starting Motor Assembly

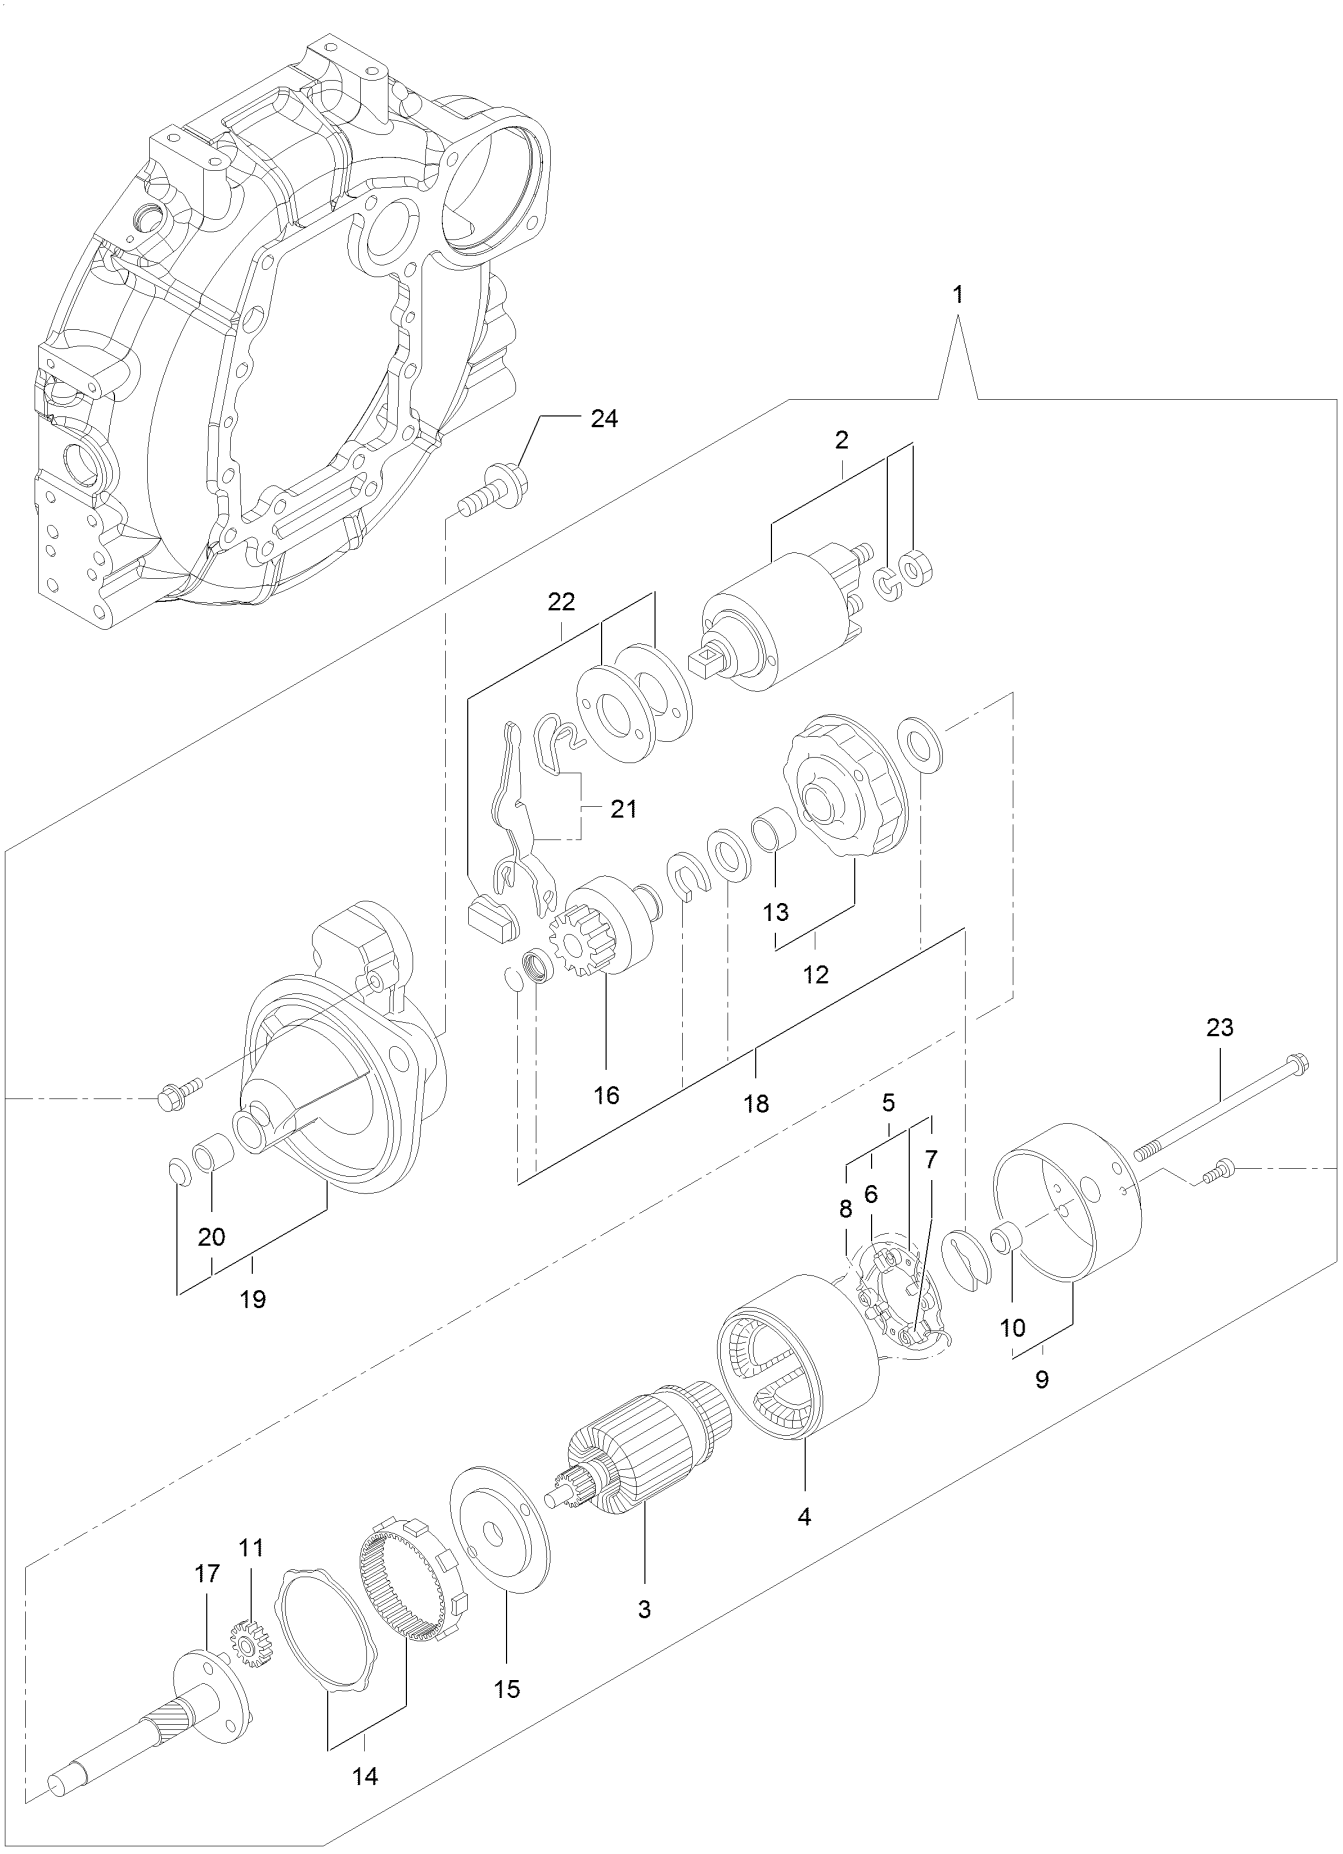

Starting Motor Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-3818	1	Starter ASM
2	127-3819	1	Switch ASM
3	127-3820	1	Armature ASM
4	127-3821	1	Yoke ASM
5	127-3822	1	Brush Holder ASM
6	127-3823	2	Brush
7	127-3824	1	Brush Set
8	127-3825	4	Spring
9	127-3826	1	Cover ASM
10	127-3827	1	Metal
11	127-3828	3	Gear
12	127-3829	1	Bracket
13	127-3830	1	Bracket
14	127-3831	1	Gear
15	127-3832	1	Bracket
16	127-3833	1	Pinion ASM
17	127-3834	1	Shaft
18	127-3835	1	Washer Set
19	127-3836	1	Case ASM
20	127-3837	1	Metal-Starter
21	127-3838	1	Lever Set
22	127-3839	1	Dust Cover ASM
23	135-4024	2	Bolt-Through
24	125-7225	2	Bolt


Generator Assembly

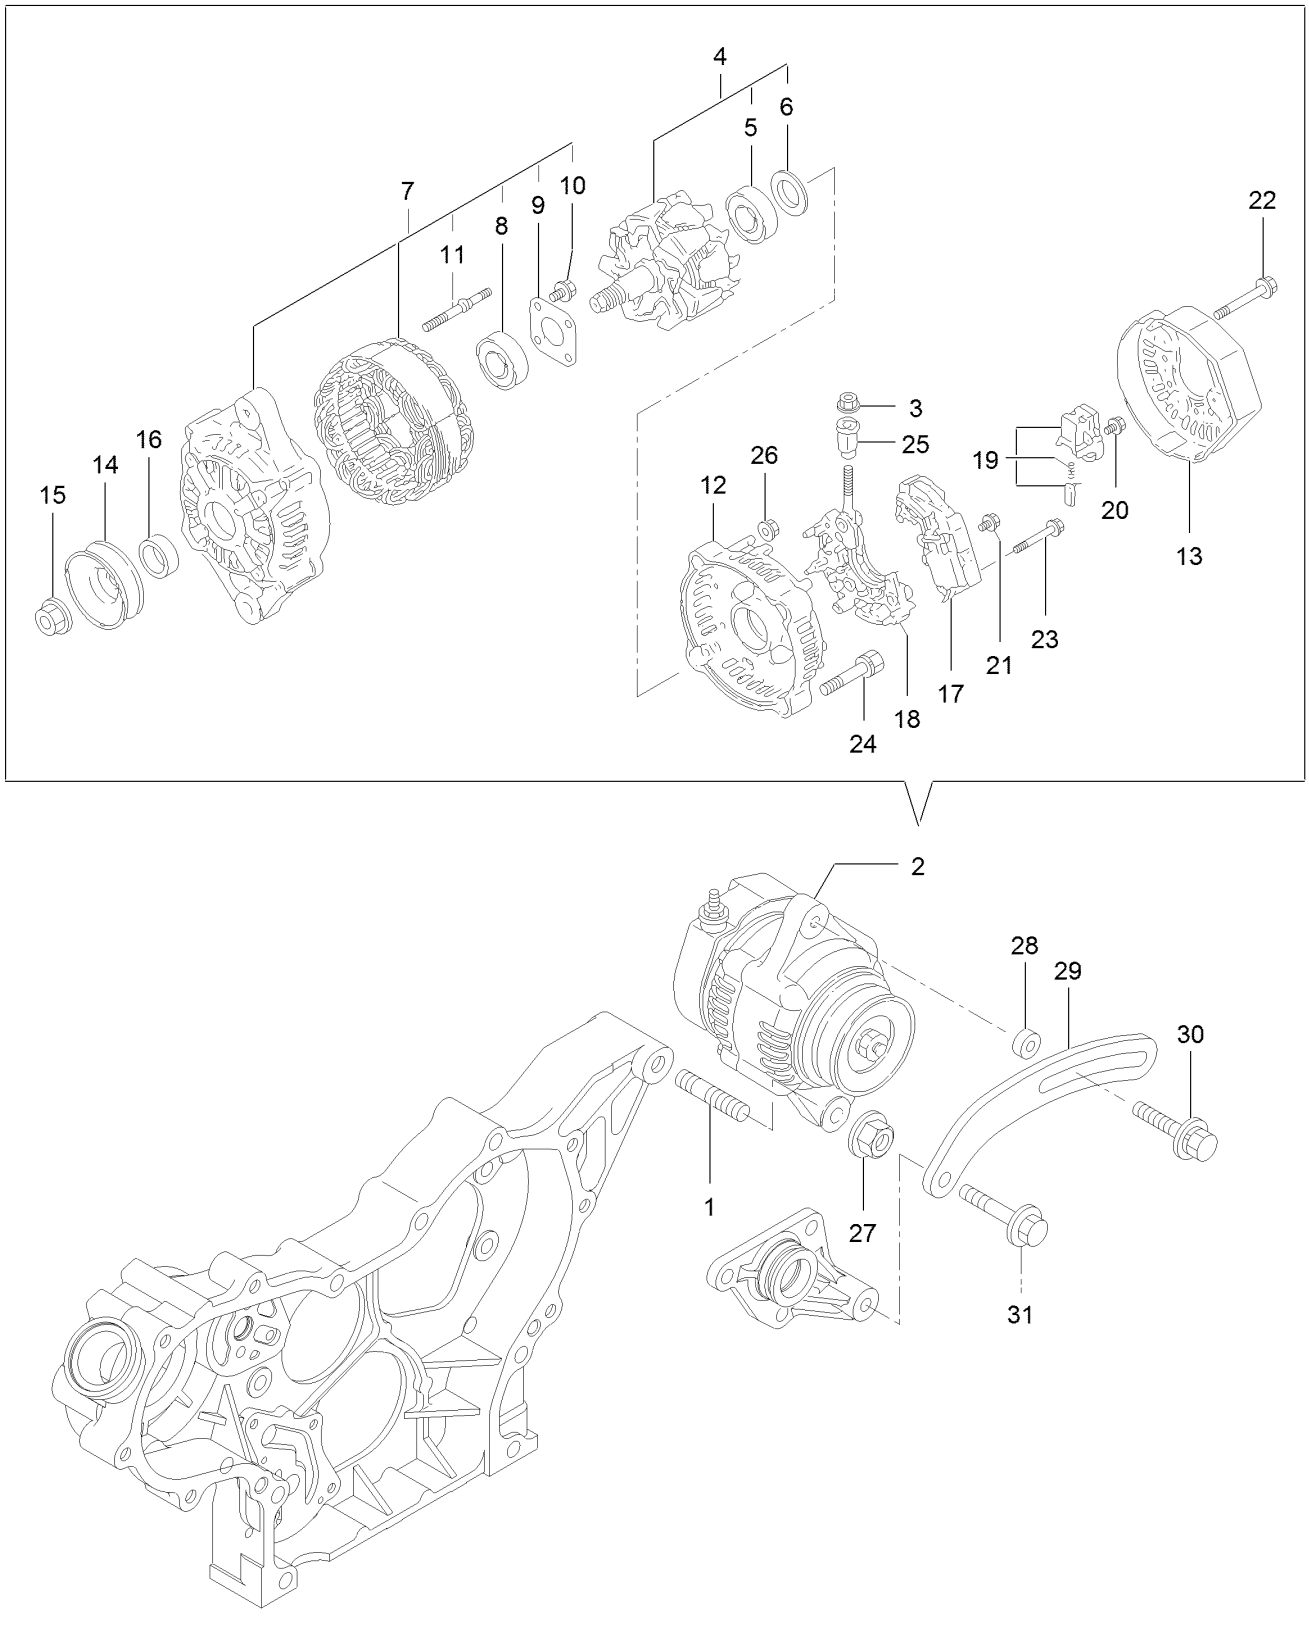

Generator Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-3011	1	Stud
2	135-4278	1	Alternator
3	127-3190	1	Nut
4	127-3843	1	Rotor ASM
5	127-2983	1	Bearing-Ball
6	127-2962	1	Cover
7	135-4025	1	Frame ASM
8	127-2958	1	Bearing-Ball
9	127-2959	1	Plate-Retainer
10	127-2960	4	Screw
11	127-2961	2	Stud
12	127-3845	1	Frame
13	127-3846	1	Cover
14	127-2954	1	Pulley
15	127-2955	1	Nut
16	127-2957	1	Collar
17	135-4026	1	Regulator ASM
18	127-3848	1	Holder
19	127-2993	1	Holder
20	127-2965	6	Screw
21	127-2966	1	Screw
22	127-2967	3	Bolt
23	127-2968	2	Screw
24	127-2969	2	Bolt
25	127-2970	1	Bushing-Insulation
26	127-2971	2	Nut
27	125-7230	1	Nut
28	125-6947	1	Spacer
29	127-2977	1	Adjuster
30	135-4027	1	Bolt-Adjust
31	125-7219	1	Bolt

Electronic Control Unit Assembly

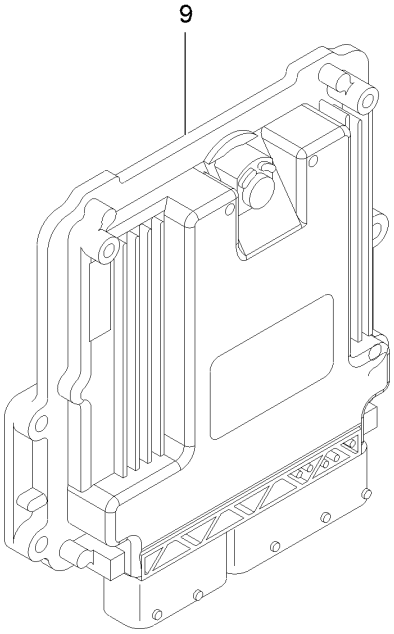


Electronic Control Unit Assembly (continued)

Ref.	Part Number	Qty.	Description
9	127-3085	1	E C U ASM ●

● Contact an Authorized Service Dealer


Electric Parts Assembly

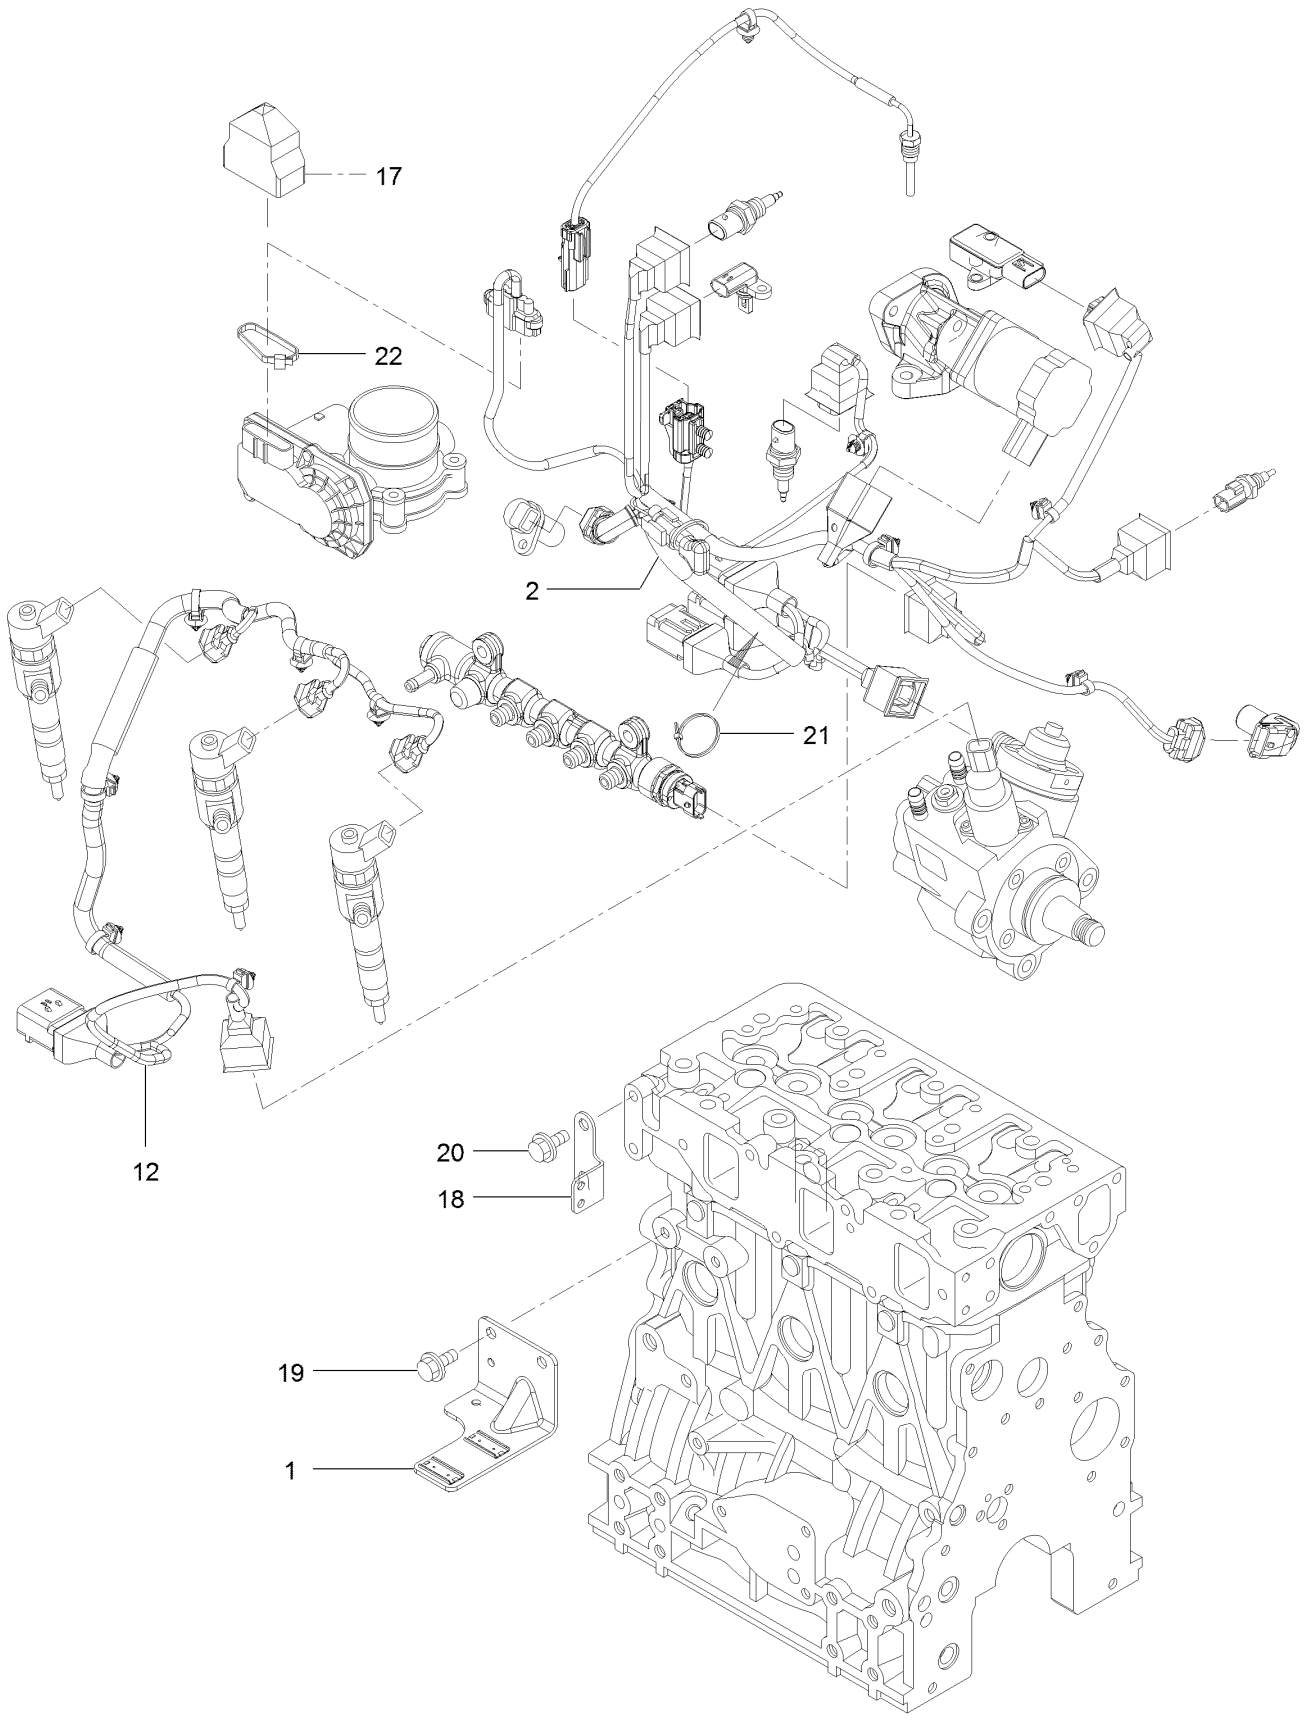

Electric Parts Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-7436	1	Bracket-Connector
2	135-4029	1	Harness
12	130-7438	1	Harness
17	131-2713	1	Boot-Cap
18	127-3090	1	Bracket-Harness
19	125-7213	2	Bolt
20	125-7212	2	Bolt
21	127-3187	1	Band
22	127-3188	1	Band


Fuel Pump Assembly

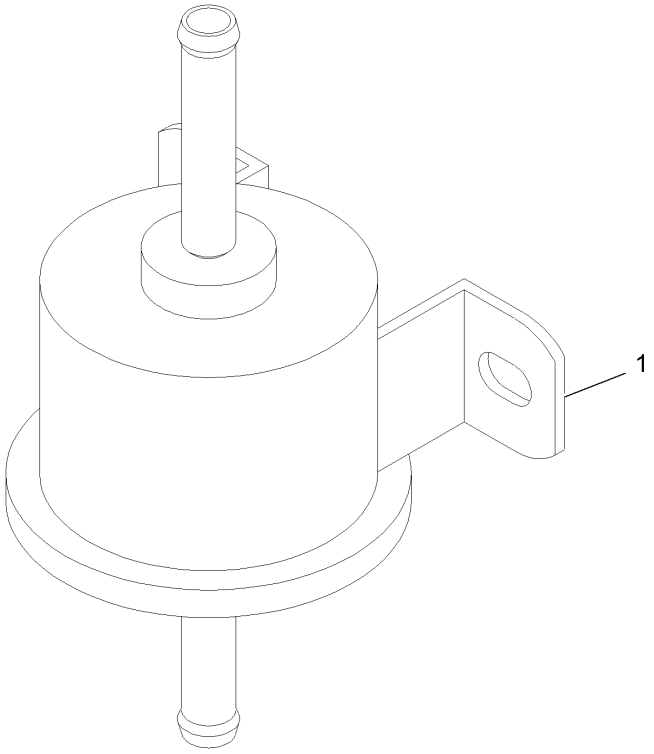

Fuel Pump Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	121-5613	1	Pump-Fuel, Electric

Gasket Set

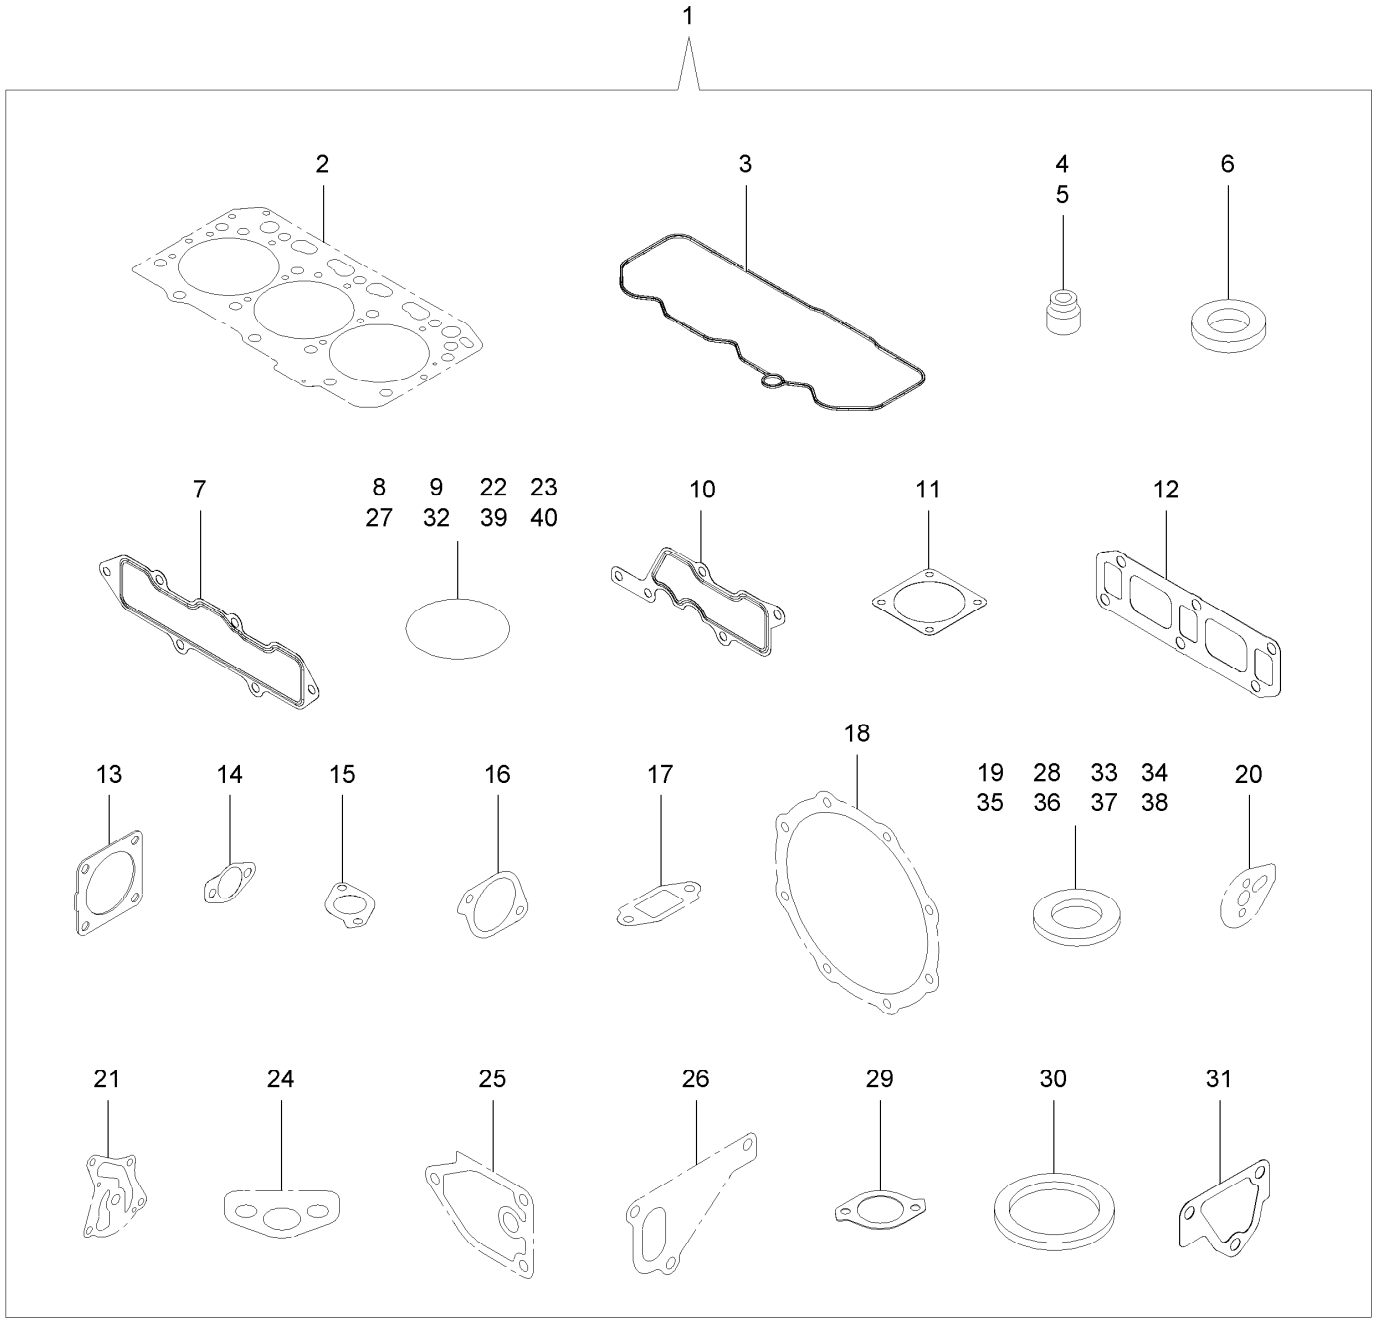
1
2
3
4
5
6
7
8
9
22
23
27
32
39
40
10
11
12
13
14
15
16
17
18
19
28
33
34
35
36
37
38
20
21
24
25
26
29
30
31

Gasket Set (continued)

Ref.	Part Number	Qty.	Description
1	130-7440	1	Packing (Gasket Set)
2	127-4716	1	Head Gasket ASM
3	127-3856	1	Gasket-Valve Cover
4	127-2986	3	Seal-Stem, Valve
5	127-3027	3	Seal-Stem, Valve
6	127-3021	3	Gasket-Injector
7	127-3857	1	Gasket-Manifold, Intake
8	127-3032	2	O Ring-Sensor, Pressure
9	127-3033	1	O-Ring
10	127-3034	1	Gasket-Collector
11	127-3037	2	Gasket-Throttle
12	127-3775	1	Gasket-Manifold, Exhaust
13	127-2987	1	Gasket-Silencer
14	127-3043	2	Gasket-Cooler, E G R
15	127-3016	1	Gasket
16	127-3050	1	Gasket-Intake Valve, E G R
17	127-3051	1	Gasket-Out Valve, E G R
18	127-3859	2	Gasket-D P F
19	127-3056	4	Gasket-Sensor
20	127-3069	1	Gasket-Idle, Shaft B
21	127-3004	1	Gasket
22	125-6909	2	O-Ring
23	127-2973	1	O-Ring
24	125-7022	1	Gasket
25	125-7024	1	Gasket
26	125-7047	1	Gasket
27	125-7048	1	O-Ring
28	125-6979	1	Gasket
29	125-7110	1	Gasket
30	125-7026	1	Gasket
31	125-6978	1	Gasket
32	127-3074	1	O-Ring
33	125-7174	1	Washer-Seal
34	125-7176	1	Washer-Seal
35	127-3166	2	Washer-Seal
36	125-7177	1	Washer-Seal
37	125-7192	1	Gasket
38	127-3174	2	Gasket
39	93-0418	3	O-Ring
40	125-7197	2	O-Ring

Attachments and Accessories

For 72076 Z Master Professional 7500-D Series Riding Mower With 72in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Trash Container Kit	135-2473
Striper Kit, Diesel Riding Mowers	126-9965
Triple Bag Assembly	78560
Slow Moving Vehicle Kit	135-2891
Jack Kit	127-6666
Jack Mount Kit	135-1768
Hitch Kit	135-3616
Rear Guard Kit	135-3445
Sunshade Kit	126-8077
Recycler Kit-g3/gm 3300 72"	139-6659
Turbo Baffle Kit	107-1634
Blade	140-1238
Blade-24.50 Medium Flow	140-4850
Blade-24.50 Low Flow	140-4851
Blade-24.50 Atomic	140-1239
Blade-24.50 Recycler	140-4852
6 Pack-blade, 24.5 High Flow	140-4872
6 Pack-blade, 24.5 Med Flow	140-4873
6 Pack-blade, 24.5 Low Flow	140-4874
6 Pack-blade, 24.5 Atomic	140-4875
6 Pack-blade, 24.5 Recycler	140-4876
Premium Transmission/Hydraulic Tractor Fluid (5 Gallon Pail)	108-1184
Premium Transmission/Hydraulic Tractor Fluid (55 Gallon Drum)	108-1183
Oil-30/10W-30 Synthetic (Quart)	138-6053
Oil-30/10W-30 Synthetic (Gallon)	138-6054
Worklight Kit	135-7076

Notes:



Count on it.