Form No. 3440-853 Rev A

Blower Carrier Kit

LT2240, LT3340 Triple Reel Mower, or LT-F3000 Triple Flail Mower

Model No. 02925—Serial No. 400000000 and Up

Installation Instructions

Preparing the Machine

1. Park the machine on a level surface.
2. Lower the cutting units.
3. Engage the parking brake.
4. Shut off the engine and remove the key.
5. Wait for all moving parts to stop.
6. Allow the engine to cool completely.


⚠ WARNING

If you leave the key in the switch, someone could accidently start the machine and seriously injure you or bystanders.

Remove the key from the switch before you do any maintenance.

Installing the Kit


1. Open the engine cover.
2. Align the 4 holes in the blower carrier with the 4 holes in the chassis of the machine (Figure 1).

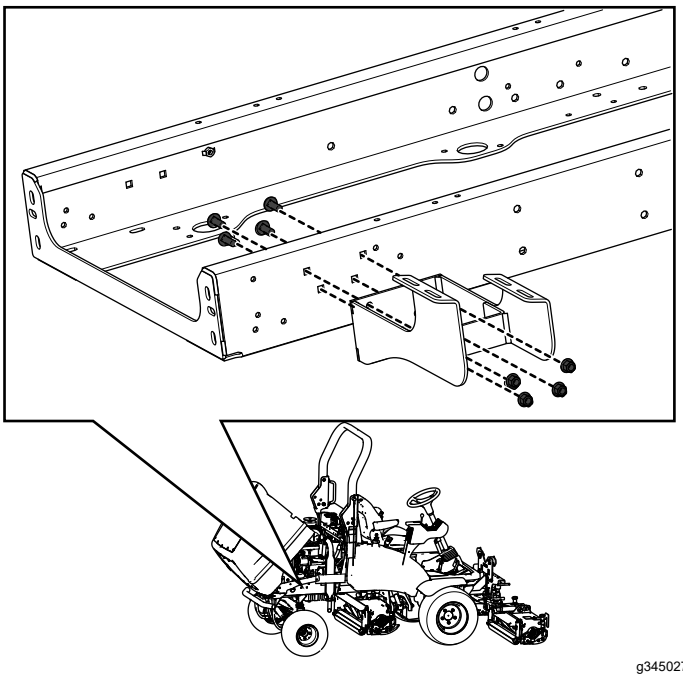

g345027

Figure 1

3. Secure the blower carrier to the machine with 4 bolts (M10 x 30 mm) and 4 nuts (M10) as shown in Figure 1.
4. Attach the blower bracket to the carrier bracket with 4 bolts (M8 x 25 mm) and 4 nuts (M8) as shown in Figure 2.

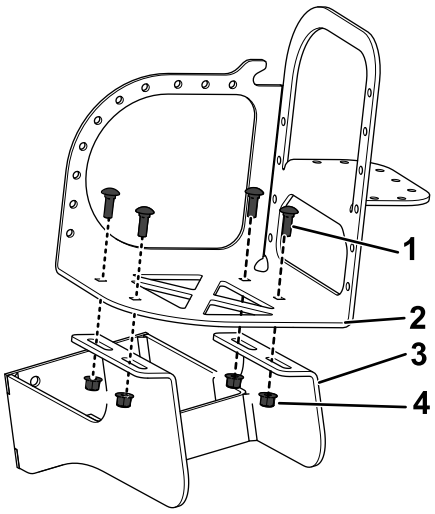


g344359

Figure 2

1. Bolt (M8 x 25)
2. Blower bracket
3. Carrier bracket
4. Nut (M8)

Important: **Orient the blower bracket on the carrier bracket as shown in Figure 3.**

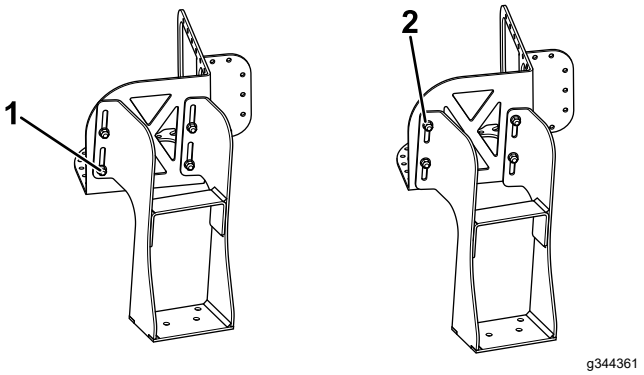

g344361

Figure 3

1. Orientation for LT3340 / LT-F3000
2. Orientation for LT2240

5. Close the engine cover.

© 2020—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Register at www.Toro.com.

CE

Original Instructions (EN)
Printed in the UK
All Rights Reserved

3440-853

Operation

Using the Blower Carrier

Carrying capacity: 5 kg (11 lb)

Use the 2 rubber straps provided to secure the blower in place.

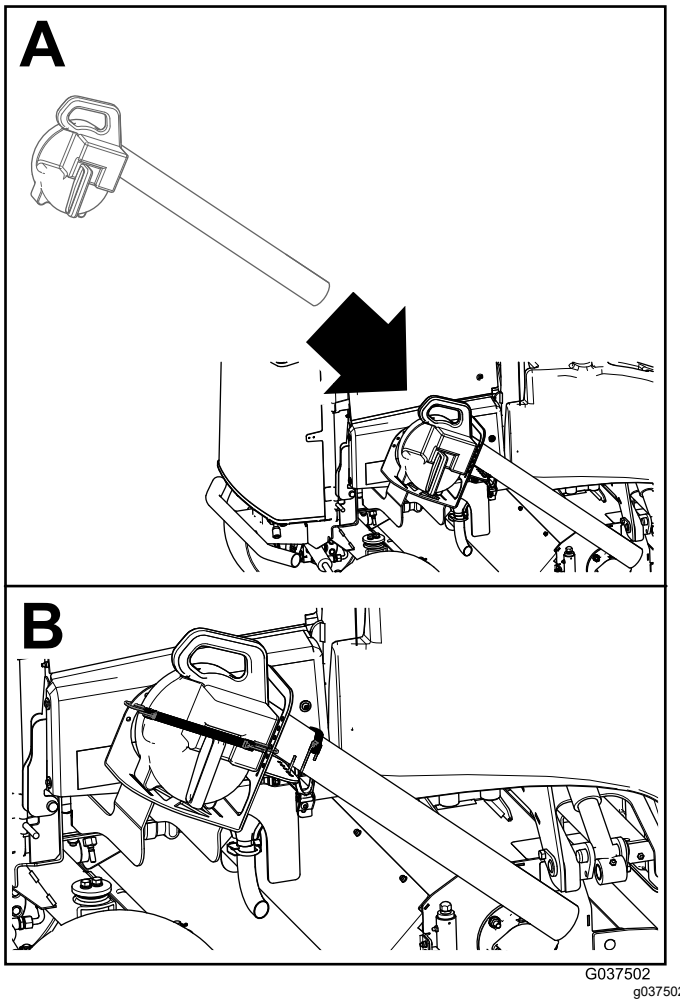


Figure 4