Form No. 3325–913

Hydrostatic Transaxle Replacement Kit

260 Series Yard and Garden Tractor

Part No. 105–1383

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved

Contents

Description	Page
Transaxle Fan and Pulley Assembly	3
Transaxle Case Assembly	4
Center Case Assembly	5
Cylinder Block Assembly	6
Motor Shaft Assembly	7
Charge Pump Assembly	8
Bypass Shaft and Block Assembly	9
Valve Arm Release Assembly	10
Shock Absorber Assembly	11
Fulcrum and Shaft Assembly	12
Brake Assembly	13
Differential Gear Assembly	14
Gear and Pinion Shaft Assembly	15
Axle Shaft Assembly	16
Brake Band and Drum Assembly	17
Maintenance	18–19

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

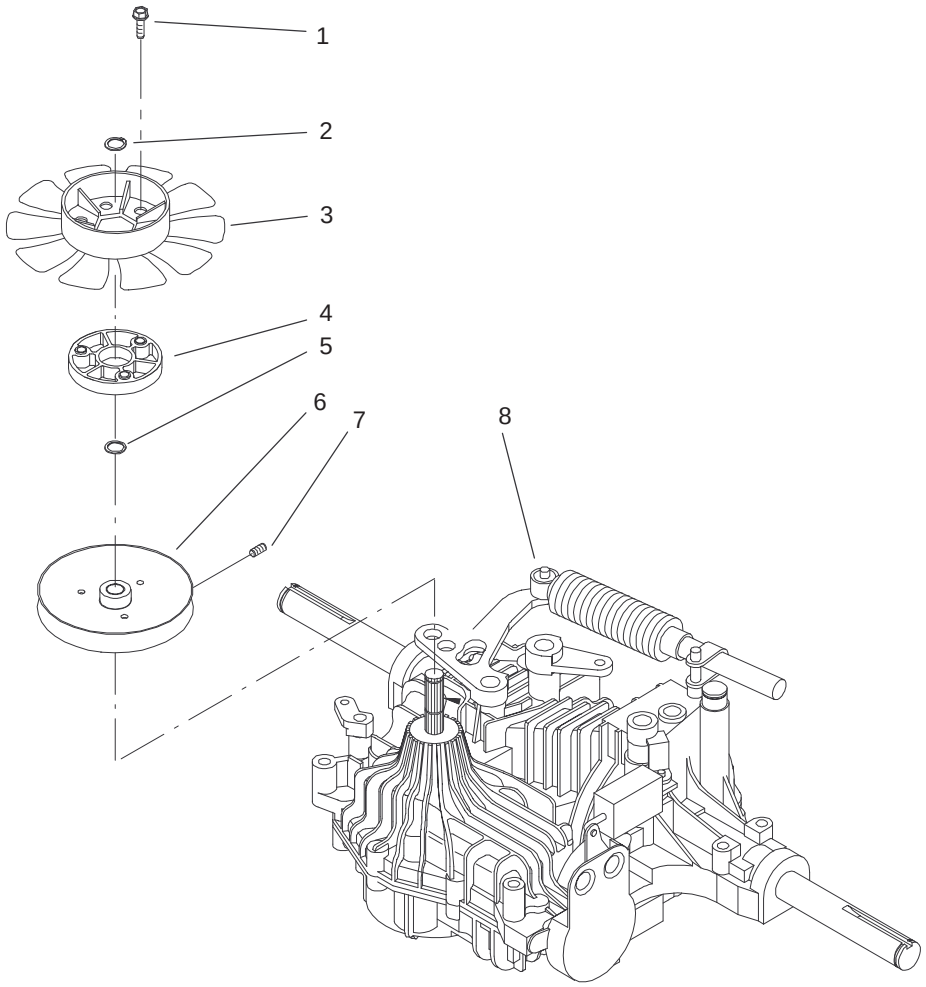

Sheet No.:0

Transaxle Fan and Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	49–2040	3	Screw–Tapping
2	32151–84	1	Ring–Shaft, Ext
3	92–6742	1	Fan – Hydro
4	92–6943	1	Spacer – Fan
5	920242	1	Washer
6	92–6686	1	Pulley–Hydro Trans
7	3245–32	1	Screw–HS
8	104–5099	1	Transaxle–Tufftorq

Ref. No.	Part No.	Qty.	Description

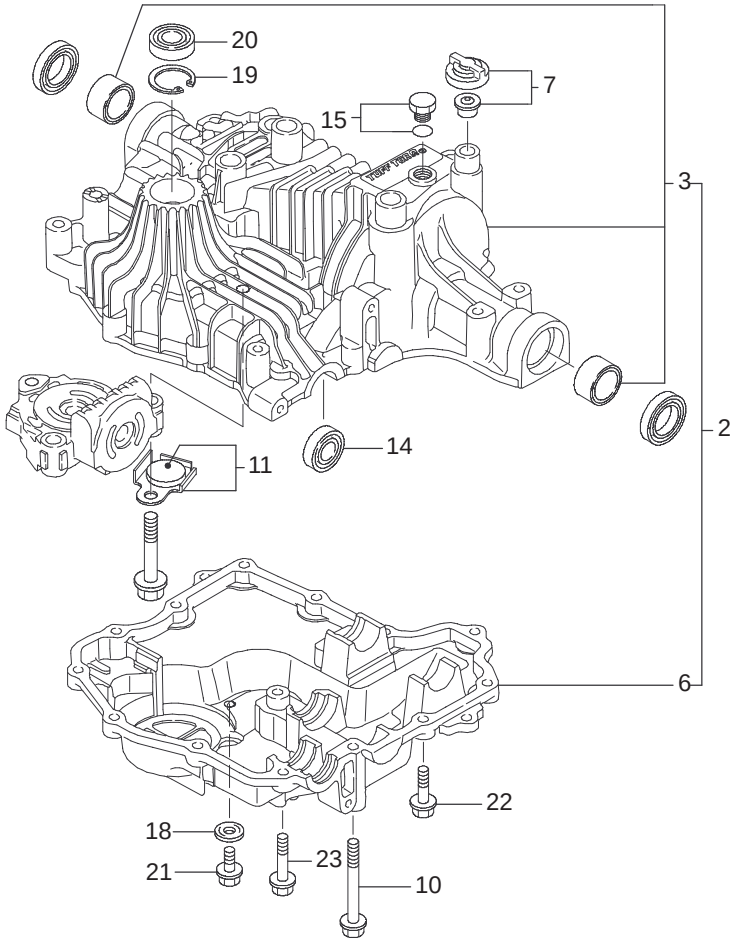

Sheet No.:2

Transaxle Case Assembly

Ref. No.	Part No.	Qty.	Description
2	105–1351	1	Transaxle Case ASM
3	105–1352	1	Case–Upper
6	105–1353	1	Case–Lower
7	104–3256	1	Valve–Vent, 15
10	93–0354	1	Bolt
11	93–0355	1	Magnet
14	105–1355	1	Seal
15	93–0356	1	Plug–Packing
18	93–0359	1	Washer–Seal
19	93–0360	1	Ring
20	93–0361	1	Seal
21	93–0362	1	Bolt
22	93–0363	11	Screw – Tapping
23	93–0364	2	Screw–TAP

Ref. No.	Part No.	Qty.	Description

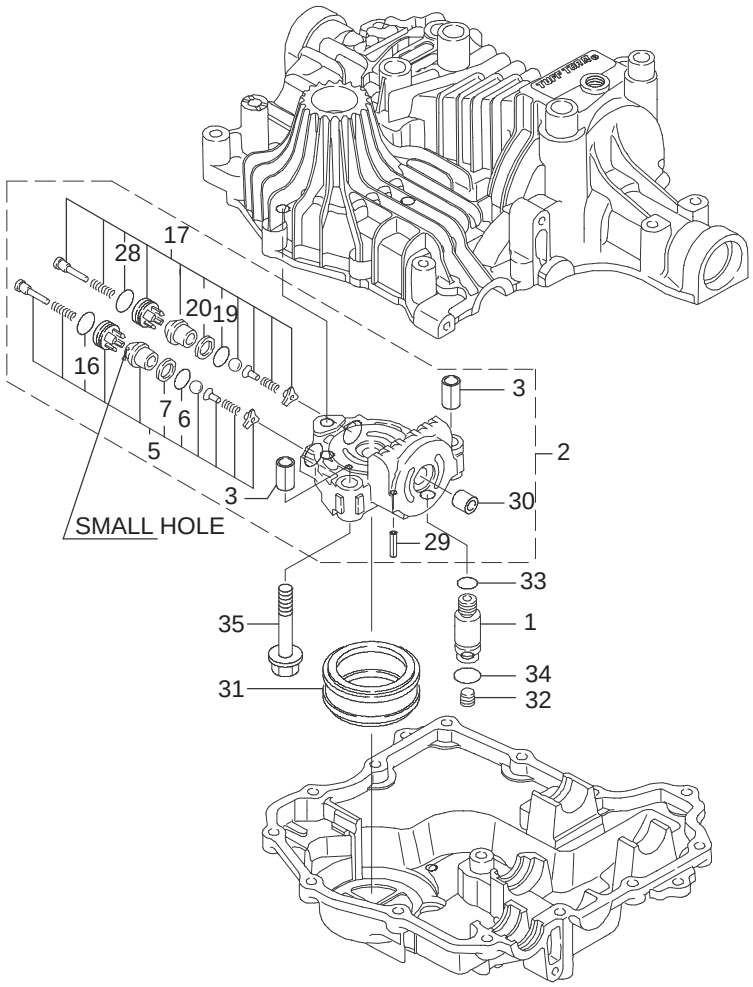

Sheet No.:3

Center Case Assembly

Ref. No.	Part No.	Qty.	Description
1	93–0476	1	Connector
2	105–1356	1	Case–Center
3	93–0471	2	Pin–Knock
5	105–1357	1	Valve
6	93–0465	1	Packing
7	93–0466	1	Ring–Back Up
16	105–1358	1	Packing
17	105–1359	1	Valve
19	93–0465	1	Packing
20	93–0466	1	Ring–Back Up
28	105–1358	1	Packing
29	105–1360	2	Pin
30	93–0472	1	Bushing
31	105–1361	1	Filter
32	93–0474	1	Plug
33	93–0481	1	Packing
34	104–3298	1	Packing
35	93–0479	3	Bolt

Ref. No.	Part No.	Qty.	Description

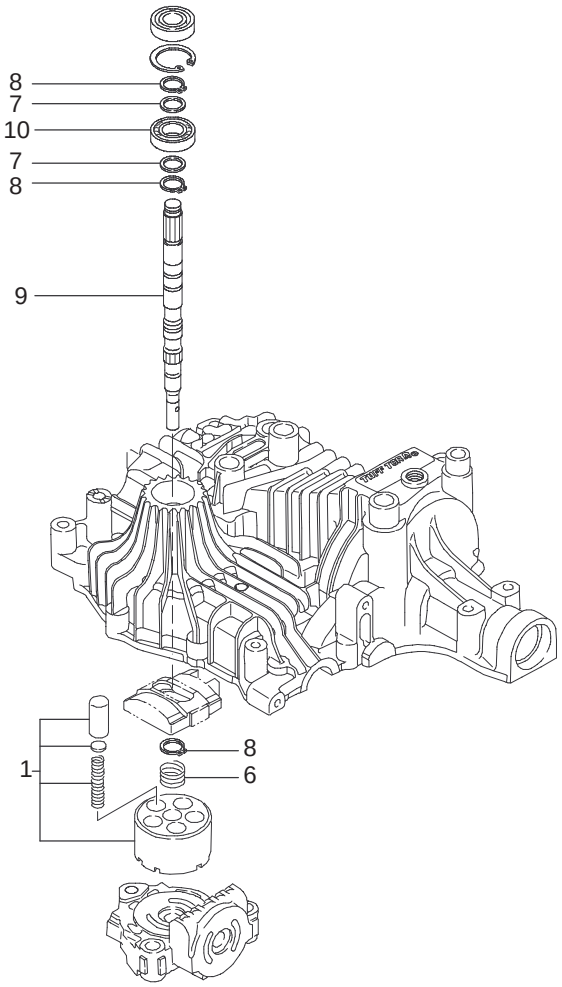

Sheet No.:4

Cylinder Block Assembly

Ref. No.	Part No.	Qty.	Description
1	104–3281	1	Block–Cylinder, Cmp
6	93–0370	1	Spring
7	93–0371	2	Washer
8	93–0373	3	Ring–Snap
9	105–1362	1	Shaft–Pump
10	93–0374	1	Bearing–Ball

Ref. No.	Part No.	Qty.	Description

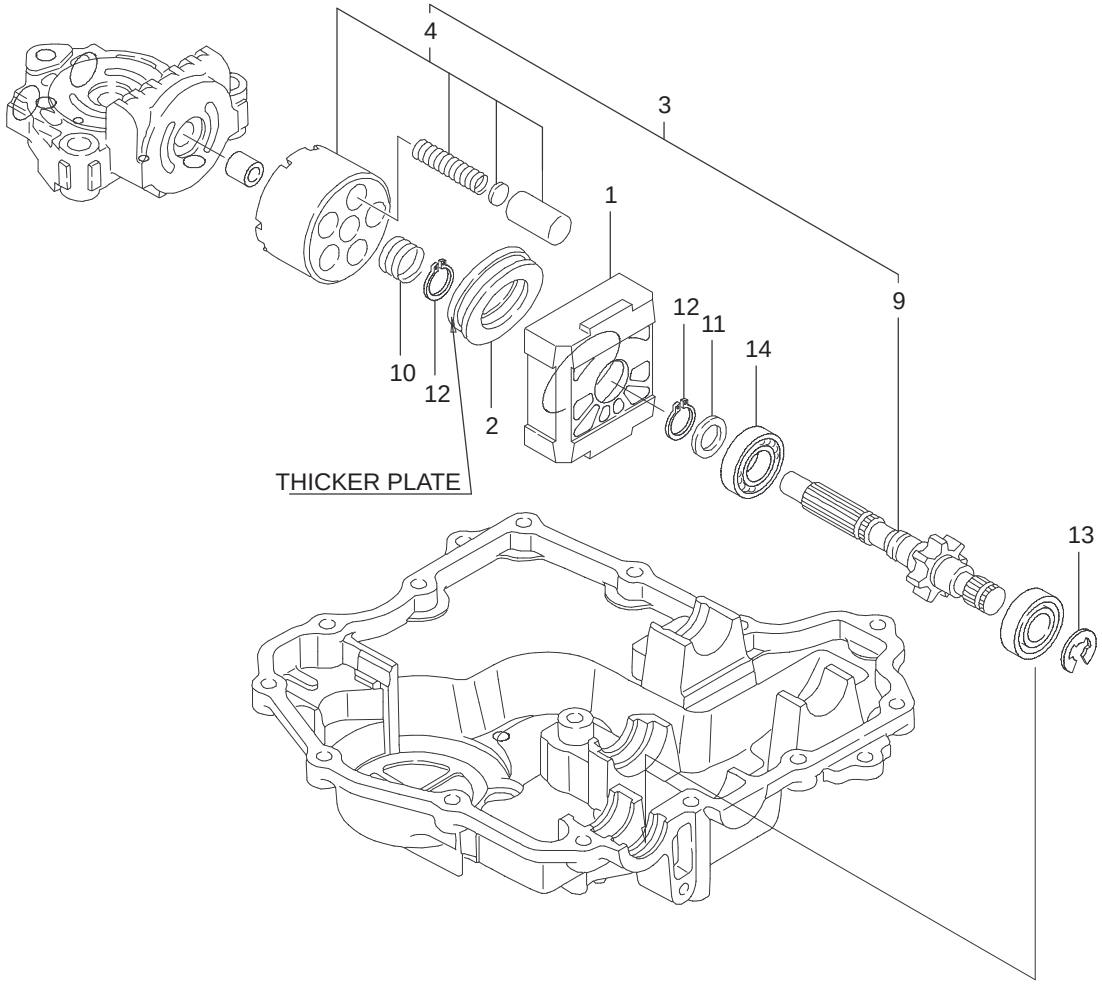

Sheet No.:5

Motor Shaft Assembly

Ref. No.	Part No.	Qty.	Description
1	105–1363	1	Housing
2	93–0376	1	Bearing–Thrust
3	105–1364	1	Motor Shaft ASM
4	104–3281	1	Block–Cylinder, Cmp
9	105–1365	1	Shaft–Motor
10	93–0370	1	Spring
11	93–0371	1	Washer
12	93–0373	2	Ring–Snap
13	93–0387	1	E–Ring
14	105–1366	1	Bearing

Ref. No.	Part No.	Qty.	Description

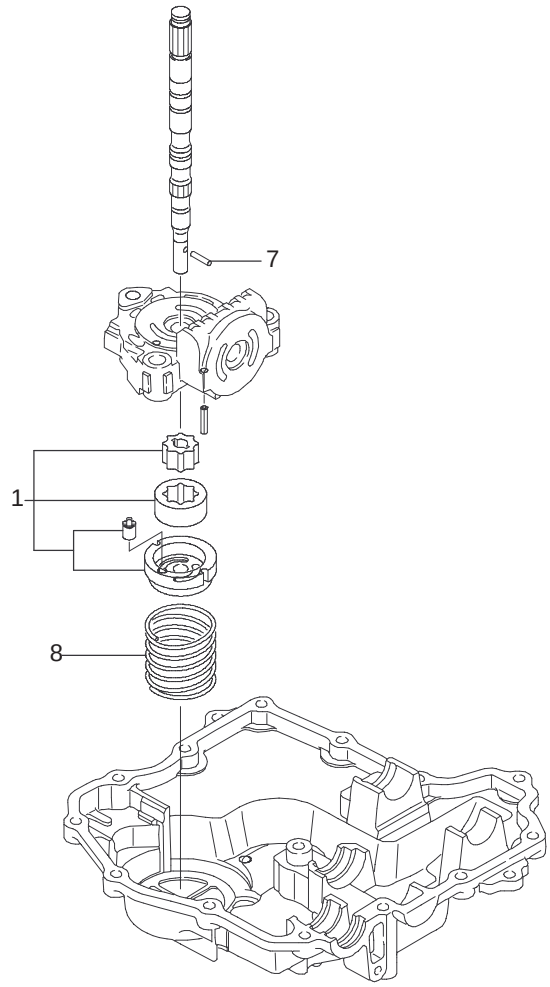

Sheet No.:6

Charge Pump Assembly

Ref. No.	Part No.	Qty.	Description
1	105–1367	1	Pump–Charge
7	105–1368	1	Pin
8	105–1369	1	Spring–Charge

Ref. No.	Part No.	Qty.	Description

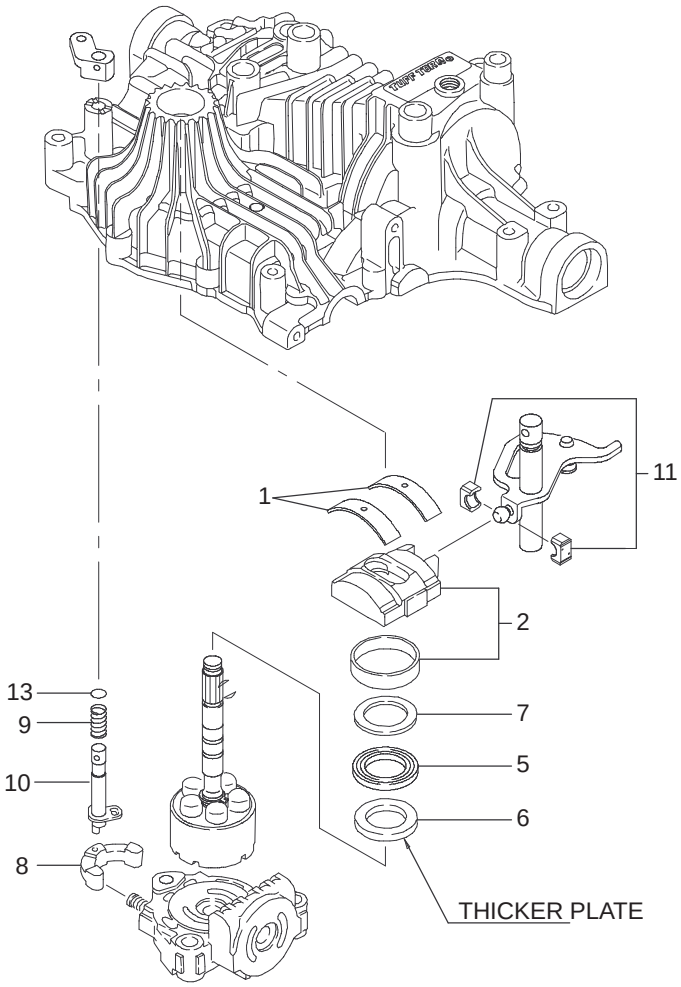

Sheet No.:7

Bypass Shaft and Block Assembly

Ref. No.	Part No.	Qty.	Description
1	93–0388	2	Thrust Metal
2	93–0389	1	Plate–Swash
5	93–0392	1	Bearing
6	105–1370	1	Plate–Thrust
7	93–0394	1	Plate–Thrust
8	93–0395	1	Arm
9	93–0396	1	Spring
10	93–0397	1	Shaft–Bypass
11	93–0398	1	Block ASM
13	93–0400	1	Packing

Ref. No.	Part No.	Qty.	Description

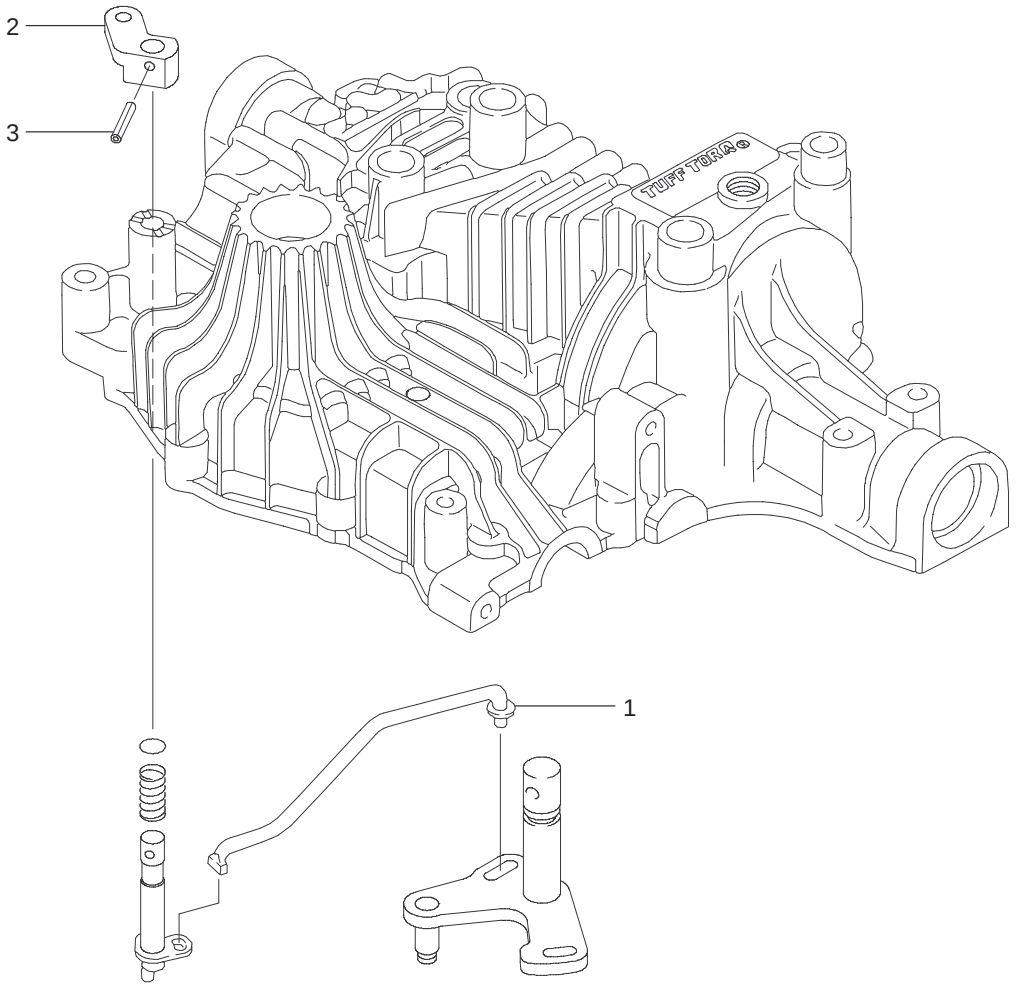

Sheet No.:8

Valve Arm Release Assembly

Ref. No.	Part No.	Qty.	Description
1	93–0401	1	Rod–Bypass
2	93–0402	1	Arm–Valve Release
3	93–0403	1	Pin–Roll

Ref. No.	Part No.	Qty.	Description

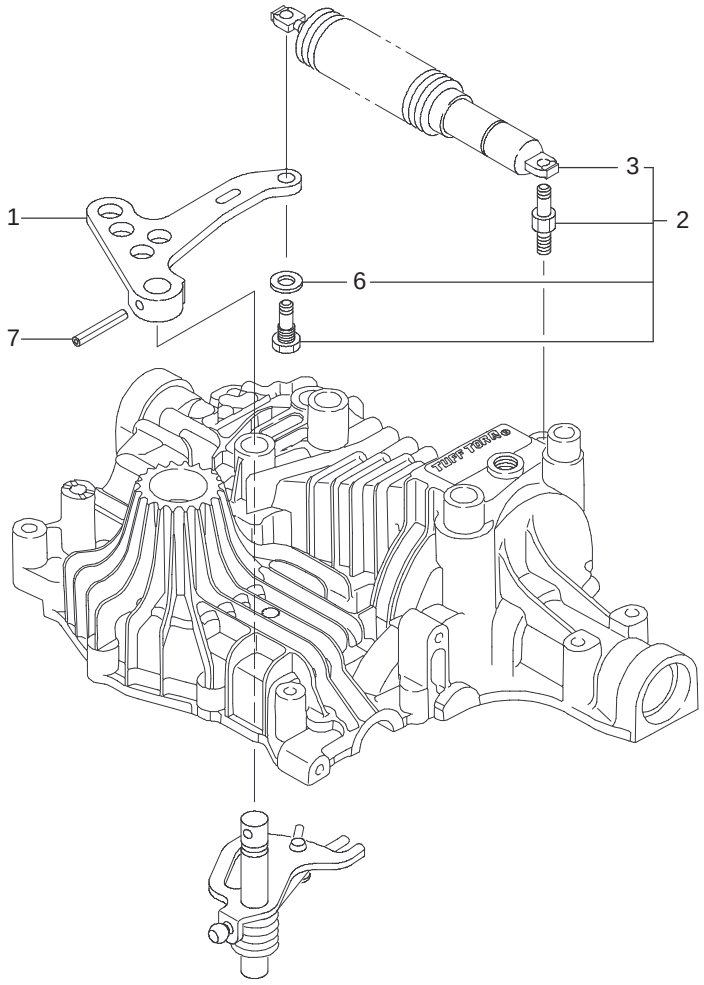

Sheet No.:9

Shock Absorber Assembly

Ref. No.	Part No.	Qty.	Description
1	105–1371	1	Arm
2	99–6761	1	Shock Absorber Kit
3	105–1372	1	Absorber–Shock
6	614601	1	Washer
7	93–0411	1	Pin–Roll

Ref. No.	Part No.	Qty.	Description

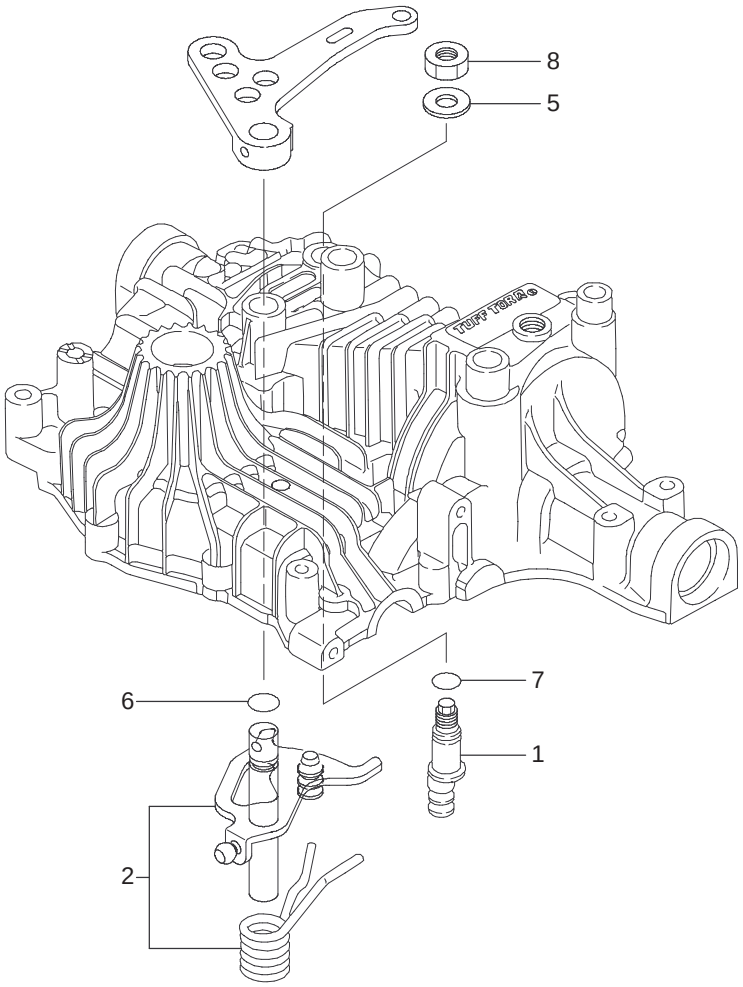

Sheet No.:10

Fulcrum and Shaft Assembly

Ref. No.	Part No.	Qty.	Description
1	93–0413	1	Fulcrum
2	93–0414	1	Shaft ASM
5	93–0417	1	Washer
6	93–0418	1	O–Ring
7	93–0419	1	Packing
8	93–0420	1	Nut

Ref. No.	Part No.	Qty.	Description

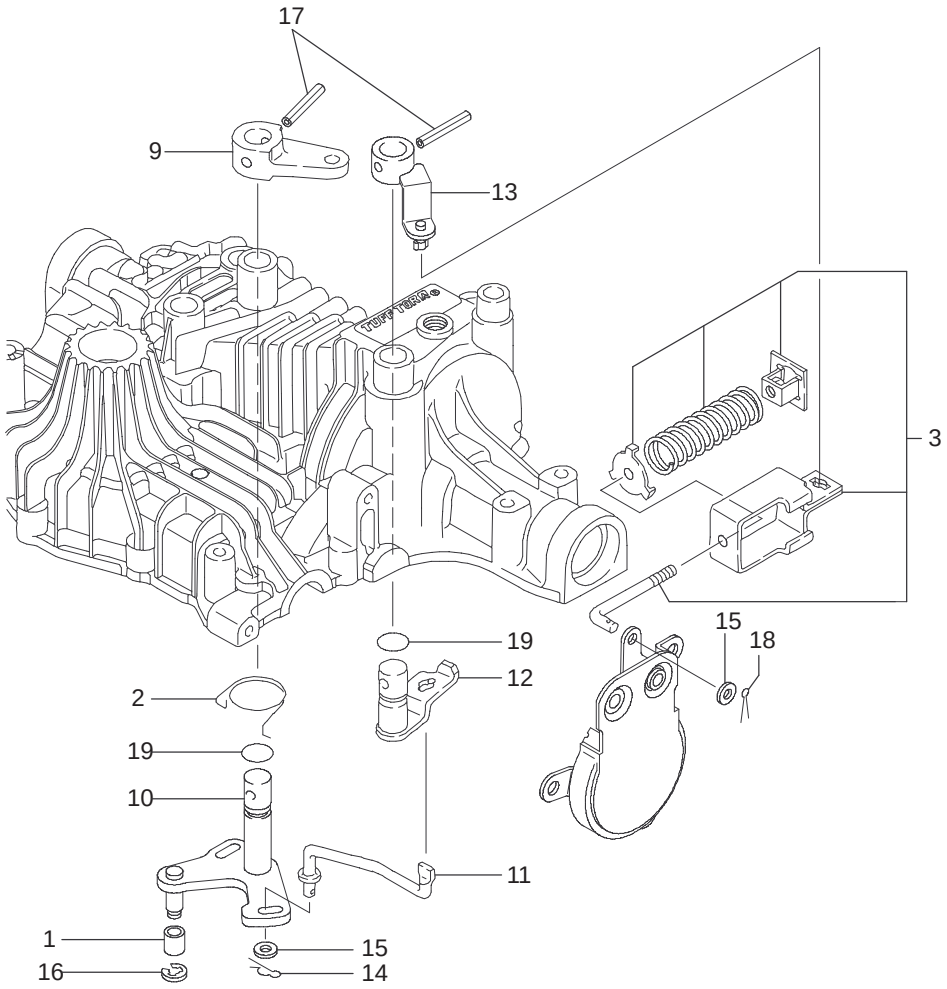

Sheet No.:11

Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	93–0421	1	Bushing
2	93–0422	1	Return–Brake
3	93–0423	1	Rod ASM
9	93–0429	1	Arm–Brake
10	93–0430	1	Shaft–Brake
11	93–0431	1	Rod–Brake
12	93–0432	1	Arm–Brake A
13	93–0433	1	Arm–Brake B
14	105–1373	1	Pin–Snap
15	93–0435	2	Washer
16	93–0410	1	Ring
17	93–0412	2	Pin–Cotter
18	105–1374	1	Pin
19	93–0418	2	O–Ring

Ref. No.	Part No.	Qty.	Description

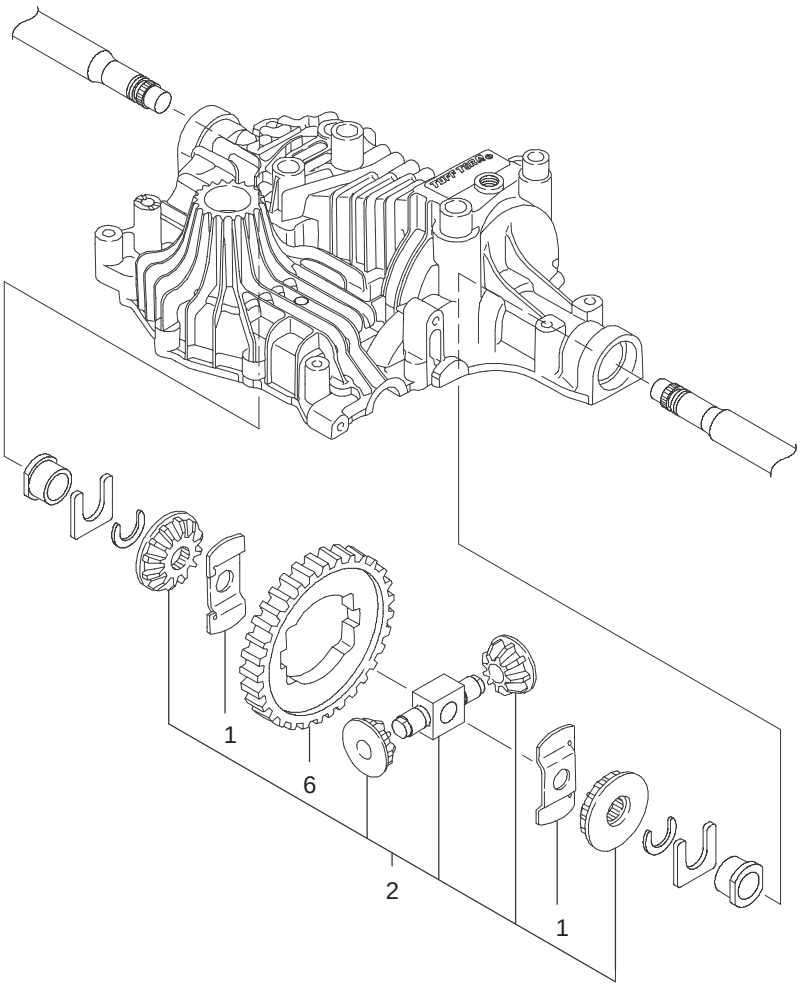

Sheet No.:12

Differential Gear Assembly

Ref. No.	Part No.	Qty.	Description
1	93–0444	2	Washer–Thrust
2	105–1375	1	Diffential Gear Kit
6	105–1376	1	Gear–Final

Ref. No.	Part No.	Qty.	Description

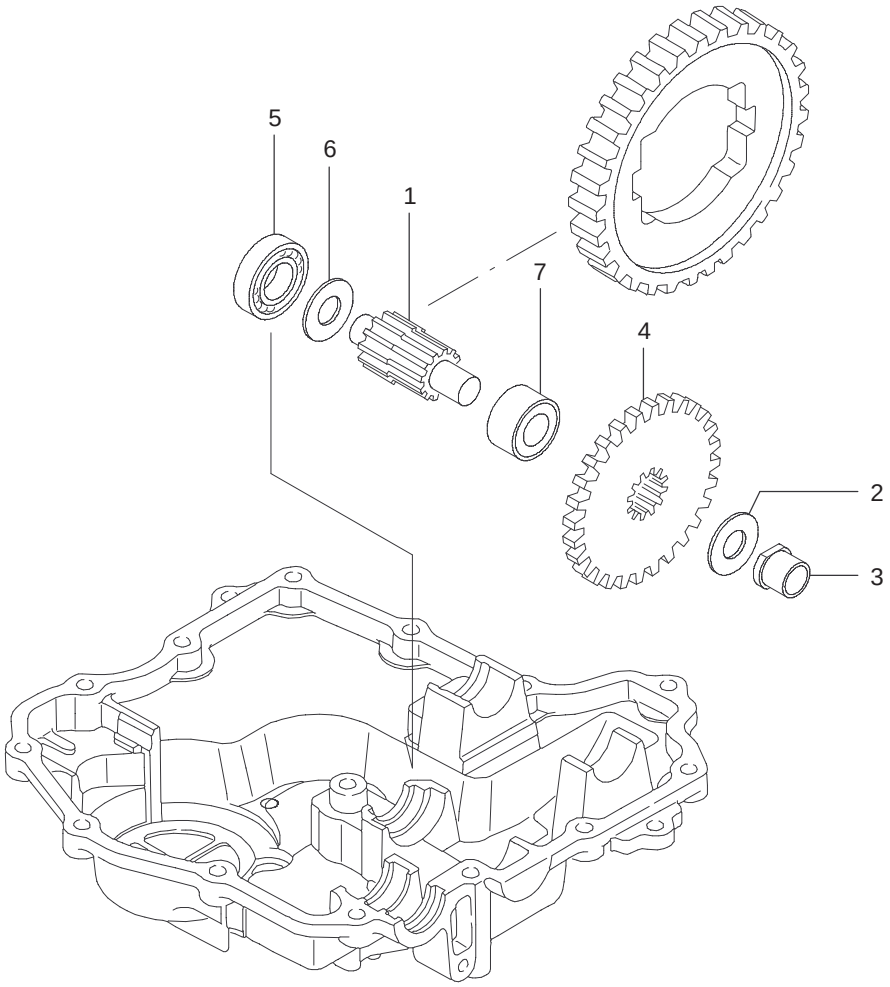

Sheet No.:13

Gear and Pinion Shaft Assembly

Ref. No.	Part No.	Qty.	Description
1	105–1377	1	Shaft–Pinion, Final
2	93–0449	1	Washer
3	93–0450	1	Bushing
4	93–0448	1	Gear–Final Shaft
5	105–1378	1	Bearing
6	105–1379	1	Washer
7	105–1380	1	Collar

Ref. No.	Part No.	Qty.	Description

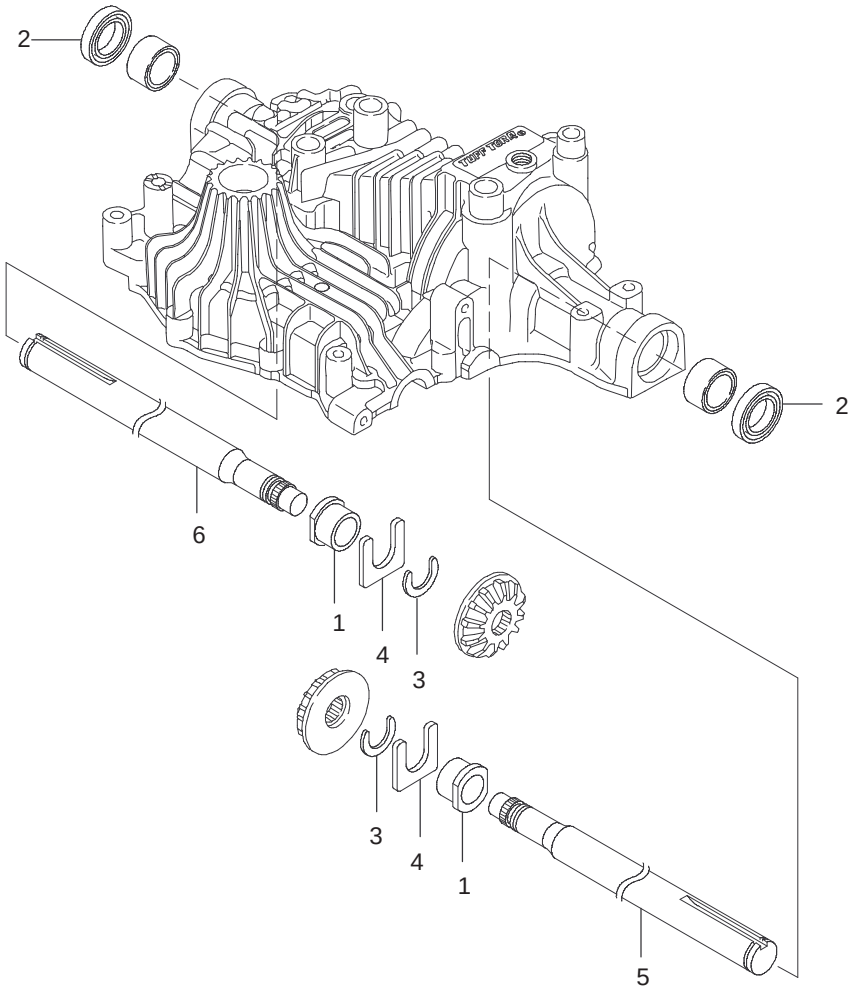

Sheet No.:14

Axle Shaft Assembly

Ref. No.	Part No.	Qty.	Description
1	93–0454	2	Bushing
2	93–0451	2	Seal
3	93–0456	2	Ring
4	105–1381	2	Washer–Thrust
5	99–3698	1	Shaft–Axle Left
6	99–3699	1	Shaft–Axle Right

Ref. No.	Part No.	Qty.	Description

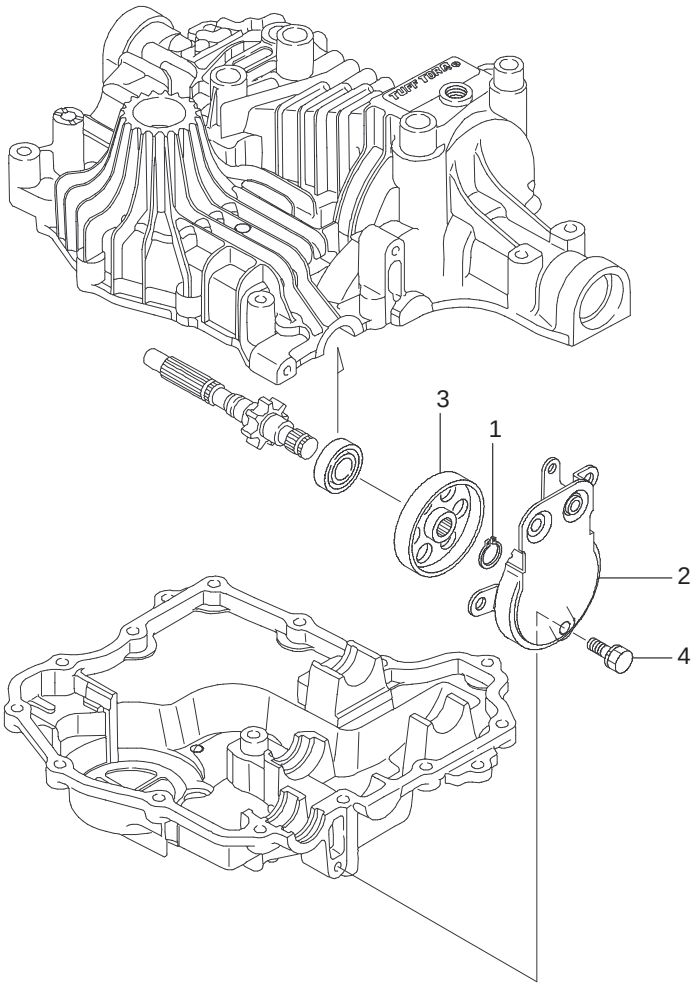

Sheet No.:15

Brake Band and Drum Assembly

Ref. No.	Part No.	Qty.	Description
1	93–0373	1	Ring–Snap
2	93–0458	1	Band–Brake Interlock
3	93–0460	1	Drum–Brake
4	93–0457	3	Bolt w/Washer

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								

Maintenance Record

Date								

TORO®