
FORM NO. 3310-763

TORO

MODEL NO. 21610-600001 & UP
MODEL NO. 21711-600001 & UP

PARTS CATALOG

21" SELF-PROPELLED GUARDIAN† (21610)
21" SELF-PROPELLED GUARDIAN† (21711)

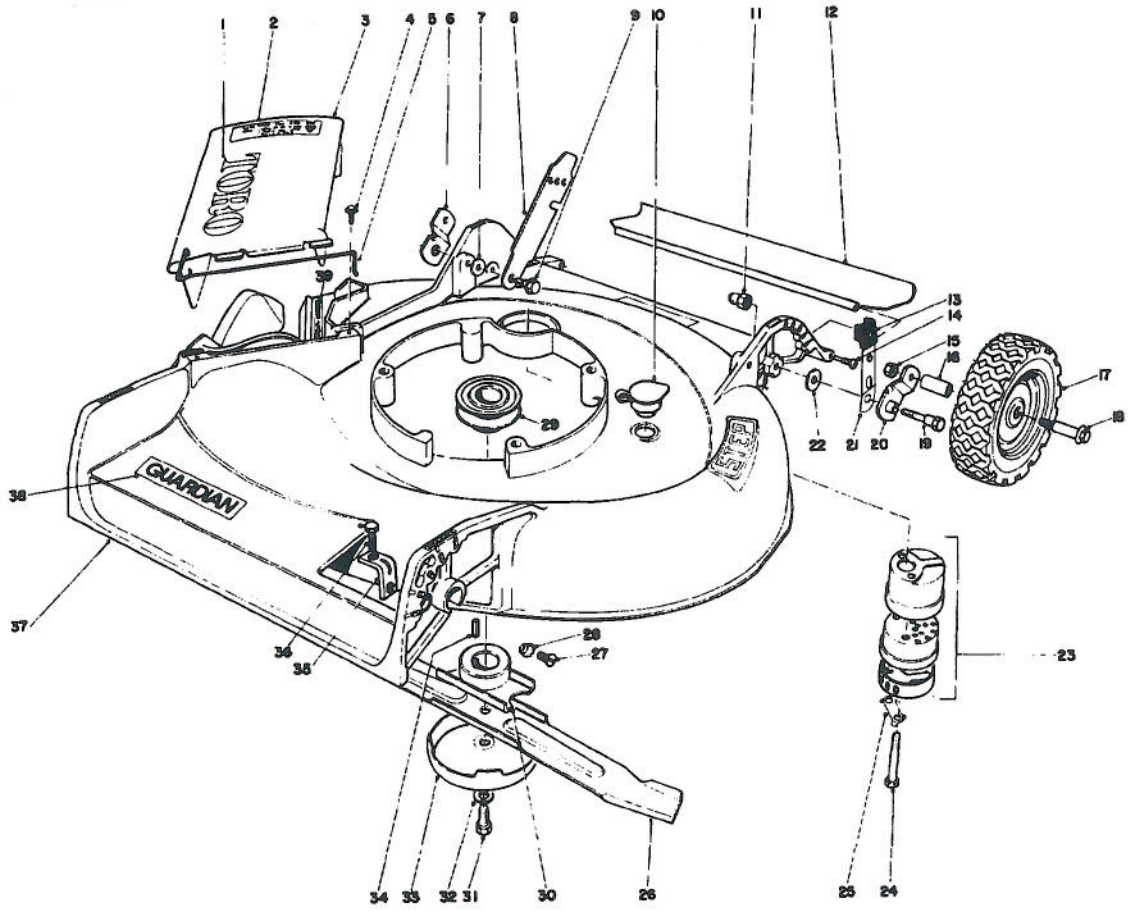


HOUSING ASSEMBLY MODEL NO. 21610 AND 21711

Ref. No.	Part No.	Description	No. Used
1	20-4690	Decal Toro	1
2	20-4330	Decal Caution	1
3	20-2800	Deflector Assembly (Incl. Ref. # 1, 2 & 5)	1
4	12-3270	Screw Special	2
5	20-2640	Hinge Spring	1
6	20-2130	Pivot Arm	1
7	3-3287	Spacer Handle Latch	2
8	5-2446	Handle Latch	2
9	5-2490	Shoulder Screw	2
10	6-4500	Plug Washout	1
11	12-2080	Nut Handle Pivot	2
12	22-4950	Rear Safety Shield	1
13	25-7740	Knob Arm	2
14	8-6160	Screw Pivot	2
15	32146-12	Lock Nut	2
16	17-4560	Bushing	2
17	12-2620	Wheel & Tire (Incl. Ref. #16)	2
18	3-2652	Wheel Bolt	2
19	3-0655	Pivot Screw	2
20	20-2140	Pivot Arm	1
21	25-8000	Spring Arm	2
22	5-4460	Pivot Washer	2
23	5-4769	Muffler Assy. (Incl. Ref. #24 & 25)	1
24	321-20	Capscrew	2

†Exclusive Trade Name of The Toro Company

Copyright 1975 by
The Toro Company


ONLY COPY
DO NOT REMOVE
Tech. Publications

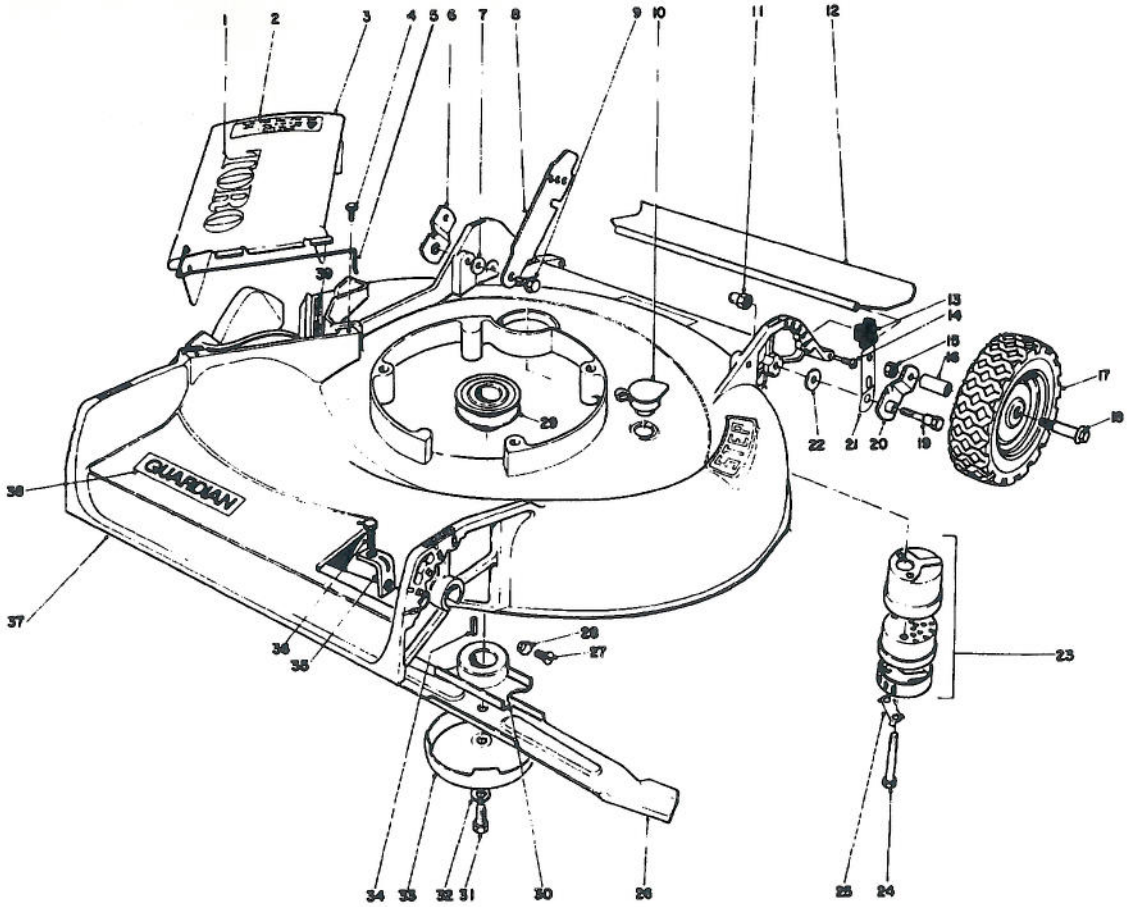

HOUSING ASSEMBLY MODEL NO. 21610 AND 21711 (Continued)

Ref. No.	Part No.	Description	No. Used
25	3-5094	Locking Clip	1
26	20-2720	Blade	1
27	32108-94	Flat Head Screw	1
28	3255-12	Conical Washer	1
29	21-5580	Pulley Driver	1
30	20-2750	Blade Retainer	1
31	3-5246	Screw Special	1
32	3253-22	Lockwasher	1


Ref. No.	Part No.	Description	No. Used
33	8-4240	Anti Scalp Cup	1
34	21-5060	Key Square	1
35	25-7560	Bracket Adjustment	1
36	321-3	Capscrew	1
37	6-0679	Housing	1
38	22-4770	Decal Deck	1
39	22-7350	Decal – Danger	1

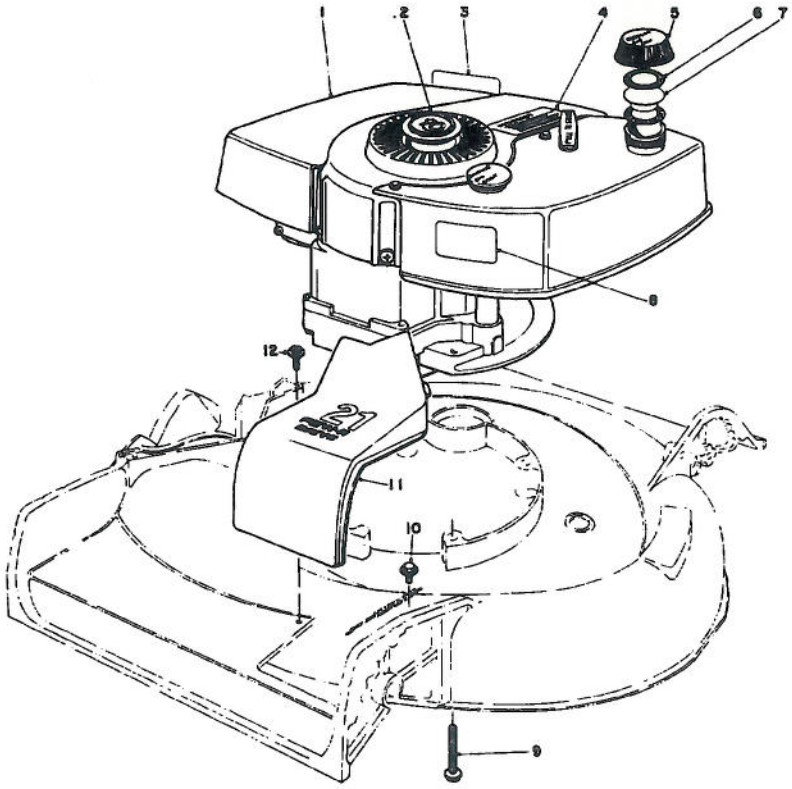

ENGINE ASSEMBLY MODEL NO. 21610

Ref. No.	Part No.	Description	No. Used
1	221-515	Engine	1
2	21-4870	Plug Button	1
3	20-2710	Decal Maintenance	1
4	25-1050	Decal Lockout	1
5	20-2860	Gas Cap (Incl. Ref. # 6 & 7)	1
6	2210-144	Gasket	2


Ref. No.	Part No.	Description	No. Used
7	2210-143	Baffle Gas Cap	1
8	22-4900	Decal Engine	1
9	11-0580	Screw	3
10	32144-11	Screw Hex Head	1
11	20-2540	Cover Belt Drive	1
12	12-5450	Special Screw	2

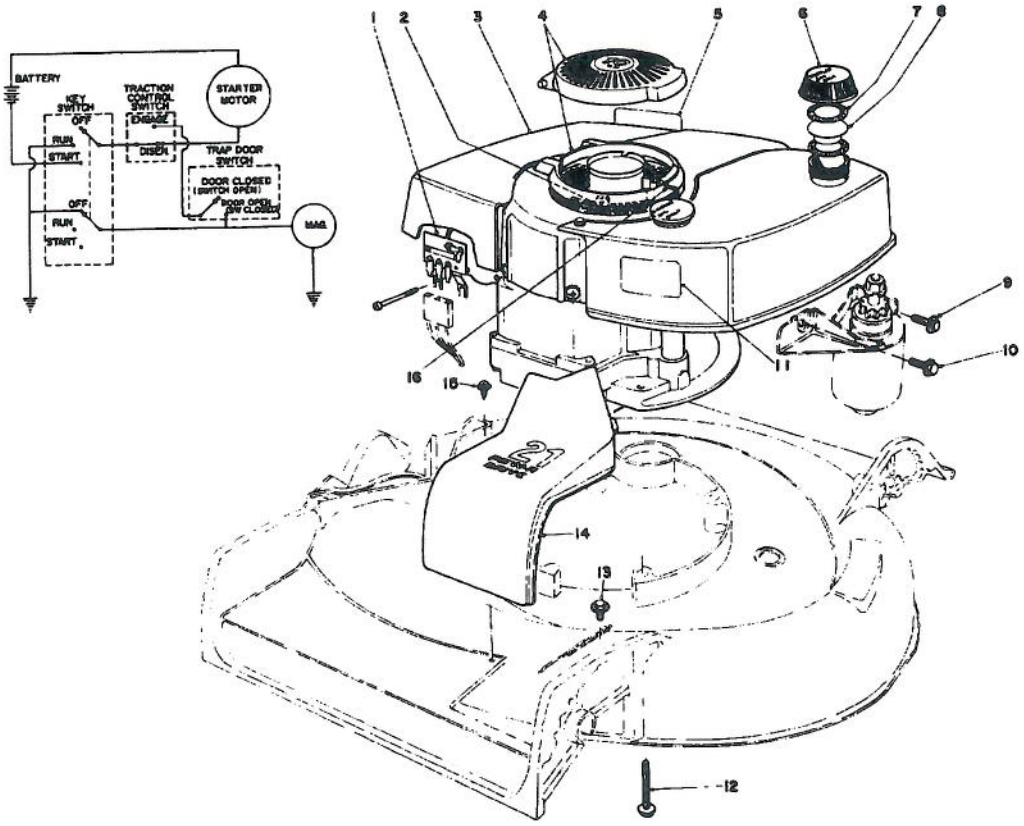

ENGINE ASSEMBLY MODEL NO. 21711

Ref. No.	Part No.	Description	No. Used
1	24-9770	Switch and Junction Box	1
2	25-1570	Clip Wire	2
3	221-517	Engine	1
4	25-2120	Cover Hinged Assembly	1
5	20-2710	Decal – Maintenance	1
6	20-2860	Gas Cap (Incl. Ref. # 7 & 8)	1
7	2210-144	Gasket	2
8	2210-143	Baffle Gas Cap	1

Ref. No.	Part No.	Description	No. Used
9	12-3270	Screw	1
10	11-9760	Screw Special	1
11	22-4900	Decal – Engine	1
12	11-0580	Screw	3
13	32144-11	Screw Hex Head	1
14	20-2540	Cover Belt Drive	1
15	12-5450	Special Screw	2
16	32121-90	Spring Pin	1

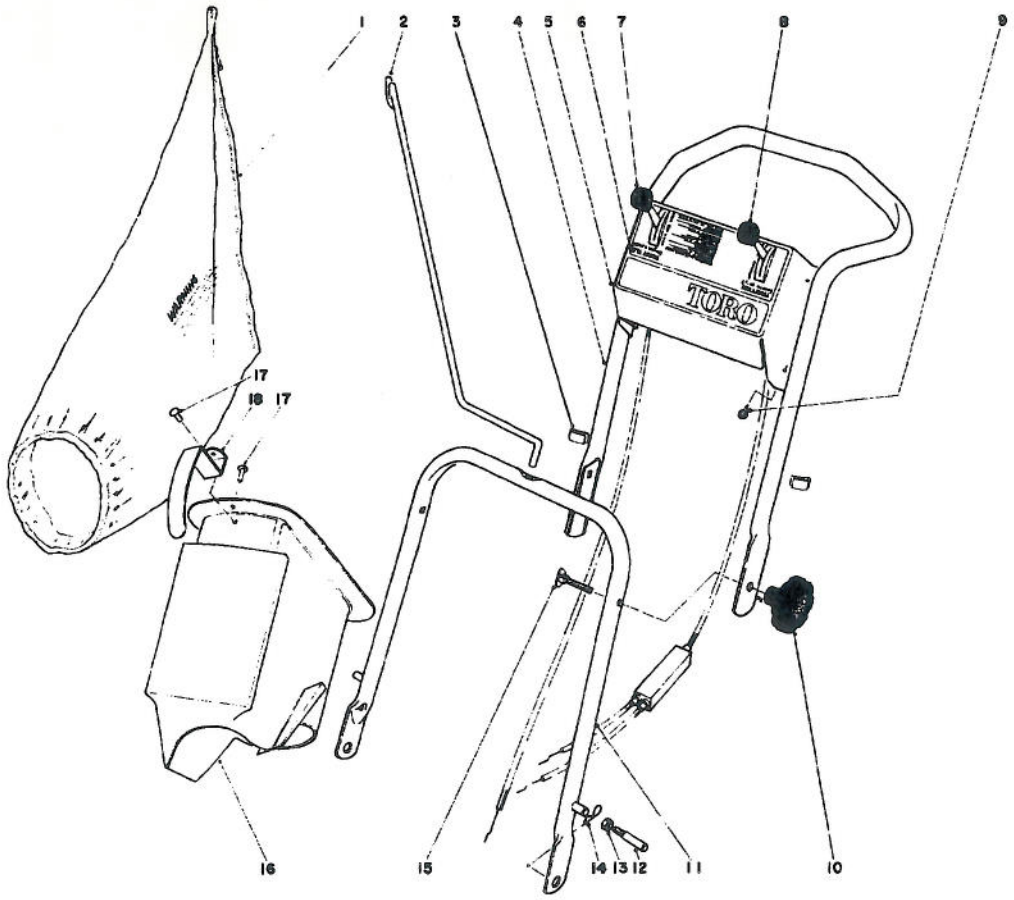


HANDLE ASSEMBLY MODEL NO. 21610

Ref. No.	Part No.	Description	No. Used
1	6-0929	Grass Bag	1
2	20-4590	Rod Bag	1
3	218-466	Clip	2
4	26-0540	Upper Handle	1
5	25-0410	Control Plate	1
6	26-2210	Decal Control Plate	1
7	20-4600	Throttle Control	1
8	25-1040	Traction Control	1
9	32104-76	Screw Self Tapping	4
10	19-4050	Handle Knob	2

Ref. No.	Part No.	Description	No. Used
11	26-0520	Lower Handle	1
12†	17-9380	Handle Pin	2
13†	32146-8	Locknut	2
14	3290-255	Hairpin Cotter	2
15	17-9420	Handle Screw	2
16	6-1089	Grass Chute (Incl. Ref. 17 & 18)	1
17	3295-26	Rivet	2
18	20-4650	Handle Grass Chute	1
*	20-2480	Loose Parts Bag	1
‡	22-4810	Giant Bagging Kit	1

*Not Illustrated
†Service Replacement Parts only
‡Optional Equipment

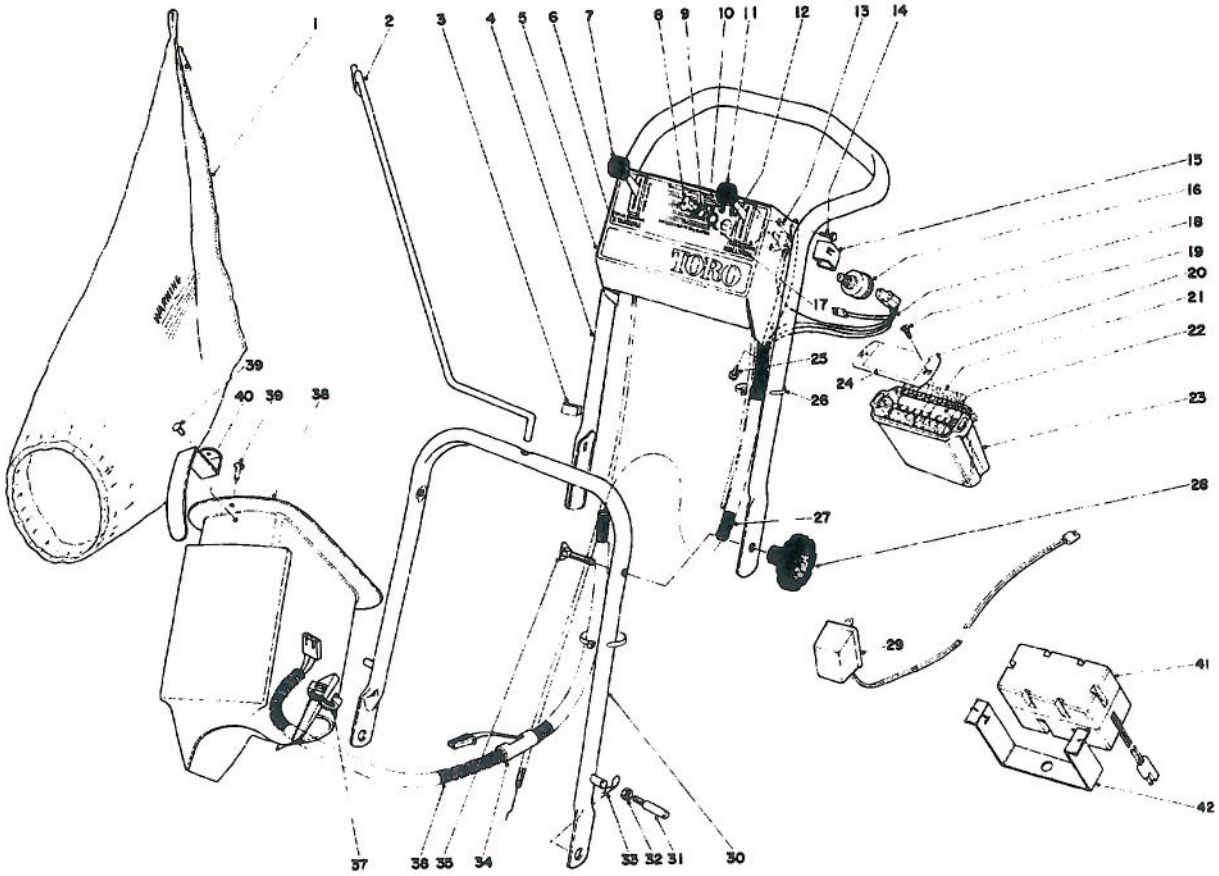

HANDLE ASSEMBLY MODEL NO. 21711

Ref. No.	Part No.	Description	No. Used
1	6-0929	Grass Bag	1
2	20-4590	Bag Rod	1
3	218-465	Clip	3
4	26-0540	Upper Handle	1
5	21-5160	Control Plate	1
6	26-2220	Decal Control Plate	1
7	20-4600	Throttle Control	1
8	218-412	Key (Set of 2)	1
9	218-461	Nut	1
10	3296-9	Hex Nut	2
11	25-1230	Traction Control	1
12	3256-21	Washer	2
13	24-9760	Safety Switch	1
14	3290-124	Screw	2
15	25-1590	Cover Switch	1
16	23-0660	Starter Switch	1
17	3254-5	Lockwasher	1
18	25-0090	Wiring Harness	1
19	32104-93	Screw Self Tapping	2
20	6-8230	Cover Battery Pack	1
21	6-8320	Spacer Battery	1
**22	24-7750	Battery Pack Assembly (Incl. Ref. 19-21, 23 and 24)	1
23	6-9750	Container – Battery Pack	1
24	25-4020	Decal – Battery 12 Cell	1


Ref. No.	Part No.	Description	No. Used
25	32104-76	Self Tapping Screw	4
26	3290-378	Cable Tie	4
27	25-5650	Cover Wiring Harness Upper	1
28	19-4050	Handle Knob	2
**29	6-9780	Battery Charger (Used w/item No. 22)	1
**29	23-7510	Battery Charger (Used w/item No. 41)	1
30	26-0520	Lower Handle	1
31†	17-9380	Handle Pin	2
32†	32146-8	Locknut	2
33	3290-255	Hairpin Cotter	2
34	2412-49	Breakout Fitting	1
35	17-9420	Handle Screw	2
36	25-5660	Cover Wiring Harness Lower	1
37	2412-48	Ring Fitting	1
38	6-1089	Grass Chute (Incl. Ref. 39 & 40)	1
39	3295-26	Rivet	2
40	20-4650	Handle Grass Chute	1
**41		Battery Gates	1
42	23-7630	Battery Adapter	1
*	5-3556	Starter Rope	1
*	20-6760	Loose Parts Bag	1
‡	22-4810	Giant Bagging Kit	1

*Not Illustrated

†Service Replacement parts only

‡Optional Equipment

**Note: Check as to which battery is used on your unit before ordering Battery Charger Ref. 29

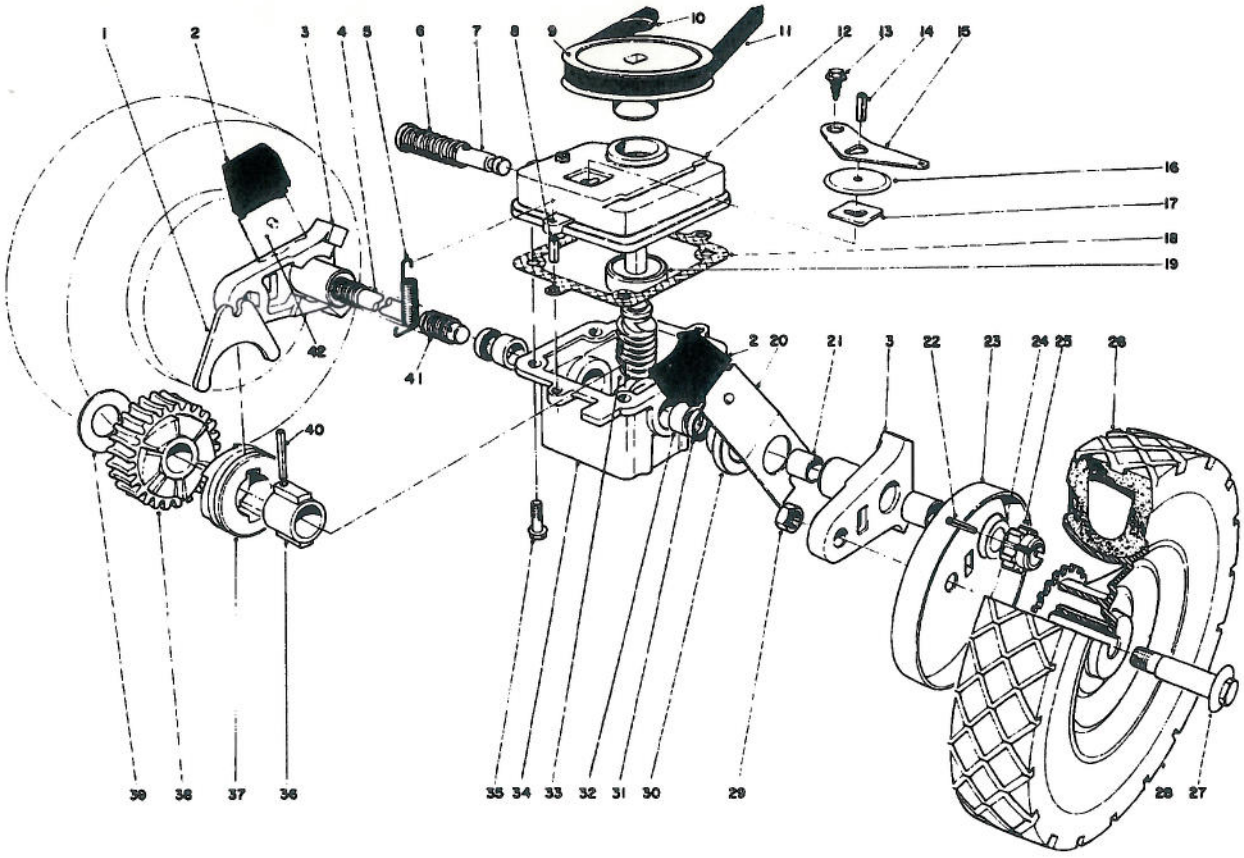


GEAR CASE ASSEMBLY MODEL NOS. 21610 AND 21711

Ref. No.	Part No.	Description	No. Used
1	5-3247	Shifter Fork	1
2	25-7740	Knob Arm	2
3	25-7580	Pivot Arm (Incl. Ref. No. 21)	2
4	25-6960	Drive Shaft	1
5	17-4490	Spring Belt Tension	1
6	3-0731	Spring	1
7	5-3248	Shifter Rod	1
8	32121-1	Roll Pin	2
9	20-2780	Pulley	1
10	3290-346	Push On Retainer	1
11	5-4505	V-Belt	1
12	5-3283	Cover – Gear Case	1
13	32140-64	Self Tapping Screw	1
14	32121-23	Roll Pin	1
15	5-3252	Shifter Arm	1
16	3-2615	Transmission Dust Cover	1
17	3-0681	Latch Plate	1
18	3-0734	Gasket	1
19	251-144	Ball Bearing	1
20	25-7930	Spring Arm L.H.	1
21	256-206	Bushing	4
22	3284-3	Coil Pin	2

Ref. No.	Part No.	Description	No. Used
23	18-9820	Wheel Cover	2
24	18-9810	Thrust Washer	2
25	18-9690	Pinion Gear	2
26	11-9530	Wheel Bushing	2
27	3-2652	Wheel Bolt	2
28	12-2610	Wheel & Tire (Incl. Ref. No. 26)	2
29	32146-12	Lock Nut	2
30	3-2646	End Cap	2
31	253-86	Oil Seal	2
32	256-110	Bushing	2
33	18-9700	Worm Shaft	1
34	5-4459	Gear Case (Incl. Ref. #31 & 32)	1
35	11-9760	Screw	4
36	3-0721	Sleeve	1
37	19-5660	Clutch Jaw	1
38	18-9740	Helical Gear	1
39	3-0724	Thrust Washer	1
40	32121-88	Coil Pin	1
41	24-7920	Drive Shaft Cover	1
42	25-7920	Spring Arm R.H.	1
*	25-6970	Gear Case Assembly Complete	1


*Not Illustrated

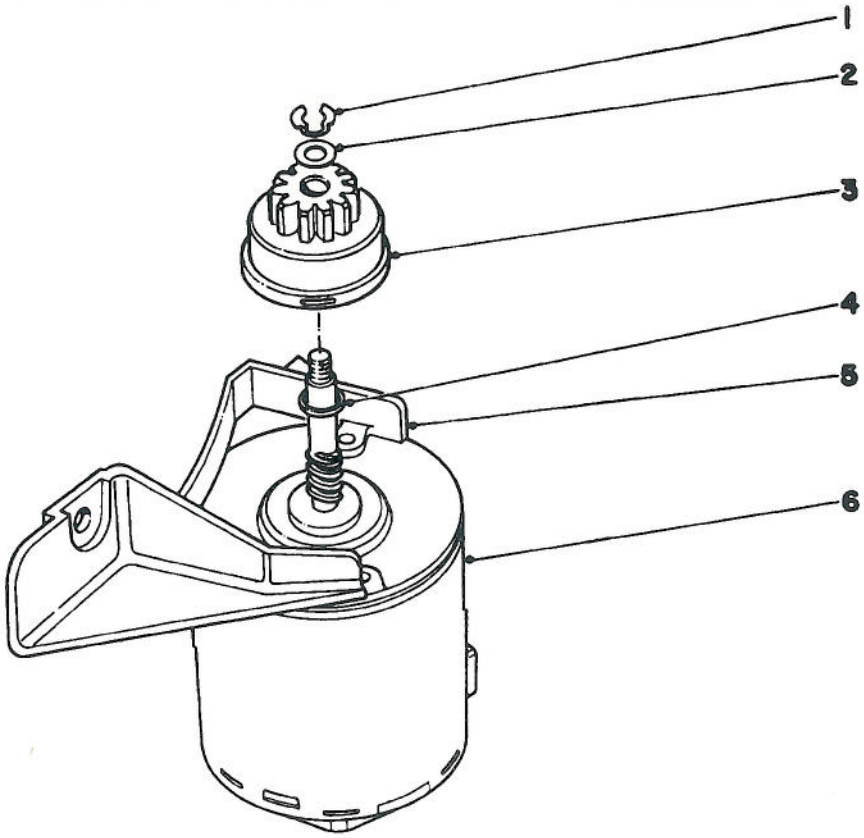

STARTER MOTOR MODEL NO. 21711

Ref. No.	Part No.	Description	No. Used
1	32151-47	Retaining Ring	1
2	25-3970	Washer	1
3	25-3960	Pinion Assembly	1
4	23-9590	Spacer	1

Ref. No.	Part No.	Description	No. Used
5	218-472	Mounting Bracket	1
6	25-3950	Starter Motor (Incl. Ref. # 1-3)	1

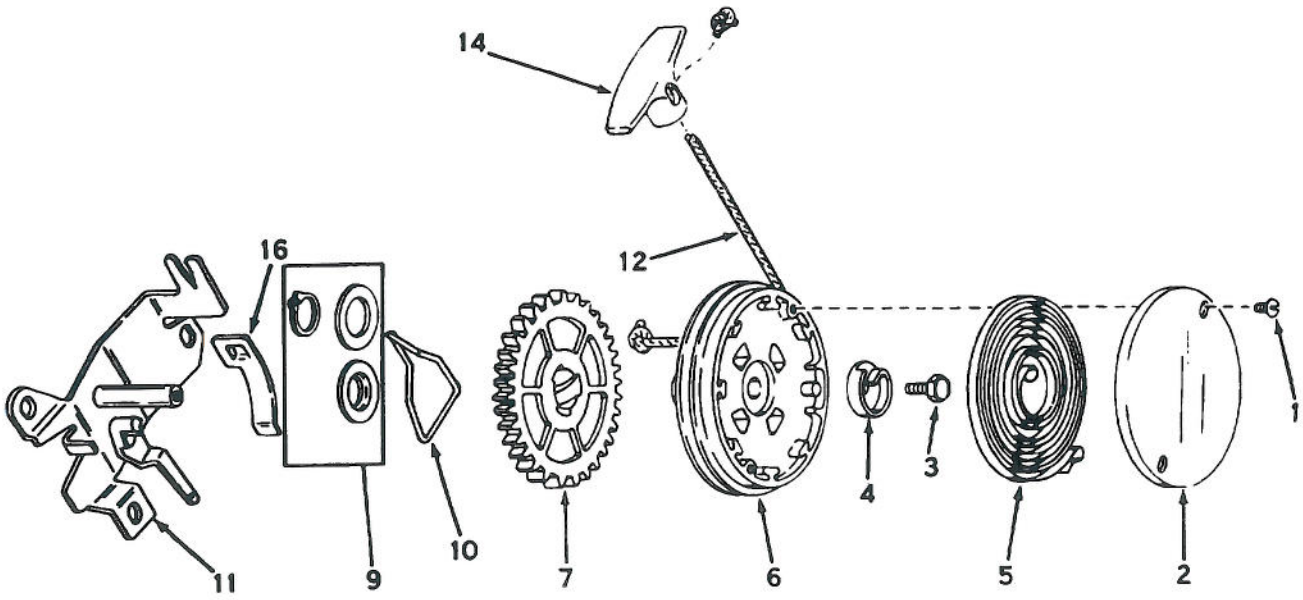


REWIND STARTER NO. 590519 (MOWER MODEL NO. 21610)

(ENGINE NO. TNT 100-10047)

Ref. No.	Part No.	Description	No. Used
1	590477	Screw, Cover	2
2	590431	Cover, Spring	1
3	590472	Screw, Hex Washer Hd. Taptite Left Hand Thread	1
4	590432	Hub, Spring	1
5	590433	Spring, Rewind	1
6	590434A	Pulley Assy. (Incl. No. 9)	1
7	590435B	Gear	1


Ref. No.	Part No.	Description	No. Used
9	590470	Kit, Thrust Washer & Snap Ring	1
10	590438	Brake	1
11	590520	Bracket Assy., Mounting	1
12	590451A	Rope, Starter (Length 69" and 5/32" Diameter)	1
14	590452	Handle, Starter	1
16	590446	Clip, Rope	1

ENGINE TECUMSEH MODEL NO. TNT 100-10047
(MOWER MODEL NO. 21610)

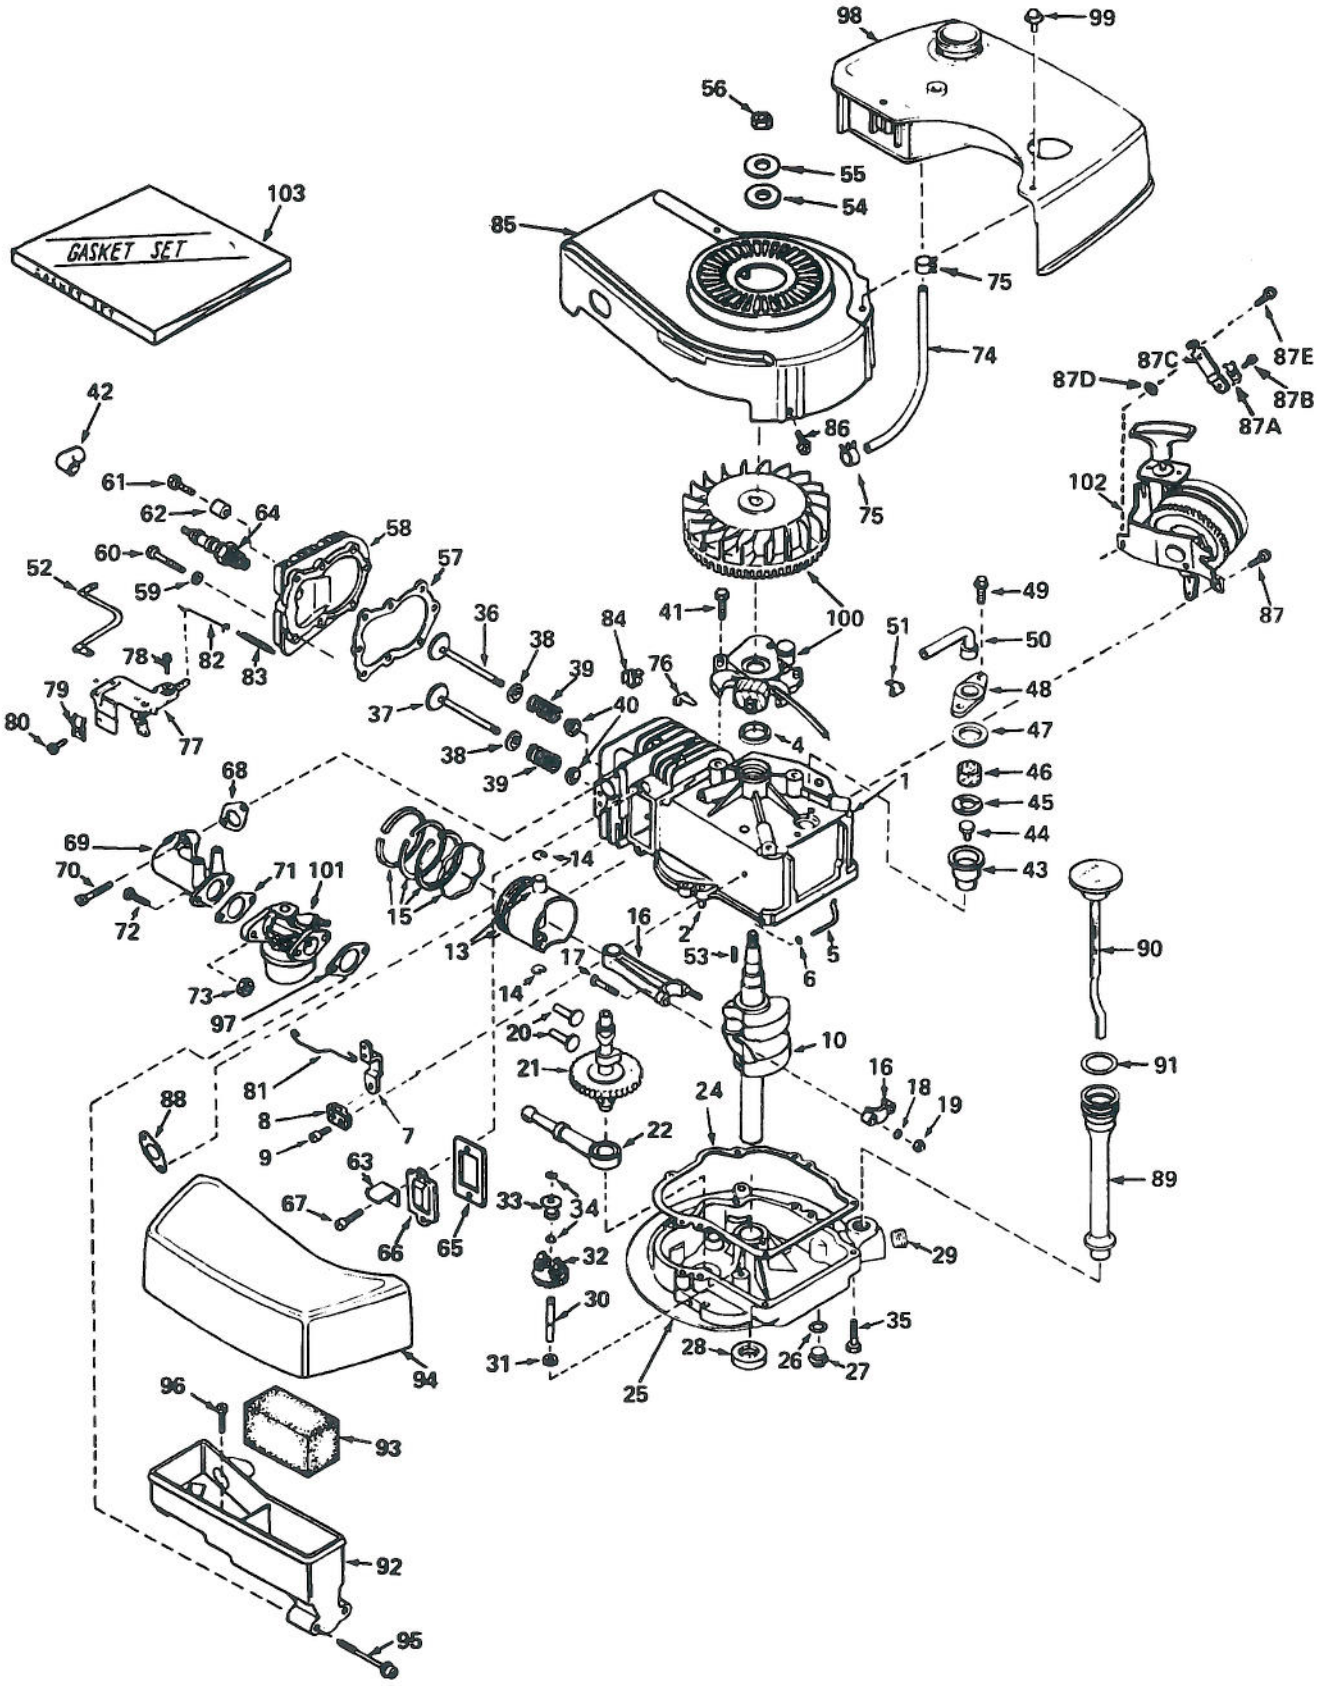

ENGINE TECUMSEH MODEL NO. TNT 100-10047
(MOWER MODEL NO. 21610)

Ref. No.	Part No.	Description	No. Used
1	33883	Cylinder Assembly (Incl. Nos. 2, 4 &87)	1
2	26727	Pin, Dowel	2
4	29183	Seal, Oil	1
5	30589	Rod, Governor (Incl. No. 6)	1
6	28277	Washer, Flat	1
7	32651	Lever, Governor	1
8	31335	Clamp, Governor Lever	1
9	650548	Screw, Hex Slotted Washer Hd.	1
10	33884	Crankshaft	1
13	32603	Piston & Pin Assembly (Incl. 2 of No. 14) (Standard)	1
13	32604	Piston & Pin Assembly (Incl. 2 of No. 14) (.010 Oversize)	1
13	32605	Piston & Pin Assembly (Incl. 2 of No. 14) (.020 Oversize)	1
14	20381	Ring, Piston Pin Retaining	2
15	32606	Ring Set, Piston (Standard)	1
15	32607	Ring Set, Piston (.010 Oversize)	1
15	32608	Ring Set, Piston (.020 Oversize)	1
16	30963B	Rod Assembly, Connecting (Incl. Nos. 17, 18 & 19)	1
17	26706	Bolt, Connecting Rod	2
18	20747	Washer, Connecting Rod Bolt	2
19	27573	Nut, Connecting Rod	2
20	27241	Lifter, Valve	2
21	33148A	Camshaft (Compression Release)	1
22	29914	Pump Assembly, Oil	1
24	*26750A	Gasket, Mounting Flange	1
25	33898	Flange Assy., Mounting (Incl. Nos. 27 thru 30)	1
26	*28833	Gasket, Oil Drain Plug	1
27	27244	Plug, Oil Drain	1
28	26208	Seal, Oil	1
29	33885	Plug, Oil Drain	1
30	30574	Shaft, Mechanical Governor	1
31	30590A	Washer, Flat	1
32	30591	Gear Assy., Governor (Incl. No. 31)	1
33	30588A	Spool, Governor	1
34	29193	Ring, Retaining	2
35	650488	Screw, Hex Hd. Sems	6
36	29314A	Valve, Intake (Standard) (Incl. Nos. 38, 39 & 40)	1
36	29315B	Valve, Intake (1/32" Oversize) (Incl. Nos. 38, 39 & 40)	1
37	29313B	Valve, Exhaust (Standard) (Incl. Nos. 38, 39 & 40)	1
37	29315B	Valve, Exhaust (1/32" Oversize) (Incl. Nos. 38, 39 & 40)	1
38	31671	Cap, Upper Valve Spring	2
39	31672	Spring, Valve	2
40	31673	Cap, Lower Valve Spring	2
41	650489	Screw, Hex Hd. Sems w/Flatwasher	2
42	610118	Cover, Spark Plug	1
43	33731	Body, Breather Tube	1
44	33732	Valve, Check	1
45	33733	Baffle, Breather	1
46	33734	Element, Breather	1
47	*33735	Gasket, Breather	1
48	33737	Cover, Breather	1
49	650768	Screw, Hex Hd. w/Conical Washer	2
50	33886	Tube, Breather	1
51	33887	Clip, Breather Tube	1
52	28468	Wire, Ground	1
53	27247	Key, Flywheel	1
54	650791	Washer, Flat	1
55	650763	Washer, Belleville	1
56	650607	Nut, Flywheel	1
57	*33015	Gasket, Cylinder Head	1
58	33016	Head, Cylinder	1
59	26073	Washer	5
60	6021	Screw, Hex Hd. Cap	5
61	650697	Screw, Hex Hd. Cap	3
62	33892	Spacer	3
63	30593	Clip, Magneto Wire	1
64	33636	Plug, Spark (Champion J-8 or Equivalent)	1
65	*27234	Gasket, Valve Spring Cover	1
66	32755	Cover, Valve Spring Box	1
67	650128	Screw, Fil. Slotted Hd. Sems	2
68	*30188	Gasket, Intake Pipe	1
69	33004	Pipe, Intake	1
70	650451	Screw, Fil. Flex Hd. Self-Locking	2
71	*31688	Gasket, Carburetor	1
72	6202	Screw, Hex Hd. Cap Sems	2
73	29752	Nut & Lockwasher	2
74	30705	Line, Fuel	1
75	26460	Clamp, Fuel Line	2
76	29443	Clip, Fuel Line	1
77	33889	Control Assy., Speed	1
78	650783	Screw, Hex Washer Hd. Thr'd Forming Sems	1
79	27793	Clip, Conduit	1
80	28942	Screw, Slotted Hex Hd. Sems	1
81	33133	Link, Governor	1
82	33295	Link, Governor Spring	1
83	33890	Spring, Governor	1
84	27275	Clip, Wire	1
85	33891	Housing, Blower	1
86	650497	Screw, Flex Pan Hd.	2
87	650737	Screw, Hex washer hd. taptite	2
87A	27793	Clip, Conduit	1
87B	28942	Screw, Slotted Hex Hd. Sems	1
87C	34099	Bracket	1
87D	27070	Washer	1
87E	650738	Screw Phil. Hex Hd. Self-Tapping	1
88	*30081	Gasket, Exhaust	1
89	33893	Tube, Oil Filler	1
90	33894	Dipstick, Oil (Incl. No. 91)	1
91	33590	"O" Ring	1
92	33895	Body, Air Cleaner	1
93	33896	Filter, Air	1
94	33897	Cover, Air Cleaner	1
95	650762	Screw, Fil. Hd. Mach. Sems	2
96	650784	Screw, Hex Hd. w/Flatwasher Thr'd Forming	1
97	*33051	Gasket, Air Cleaner	1
98	33904	Tank, Fuel	1
99	28763	Screw, Hex Washer Hd. Thr'd Forming	2
100	610793	Magneto (The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.)	1
101	631784A	Carburetor (Incl. No. 71)	1
102	590519	Starter, Side Mount	1
103	33906	Gasket Set (Incl. Items Marked*)	1

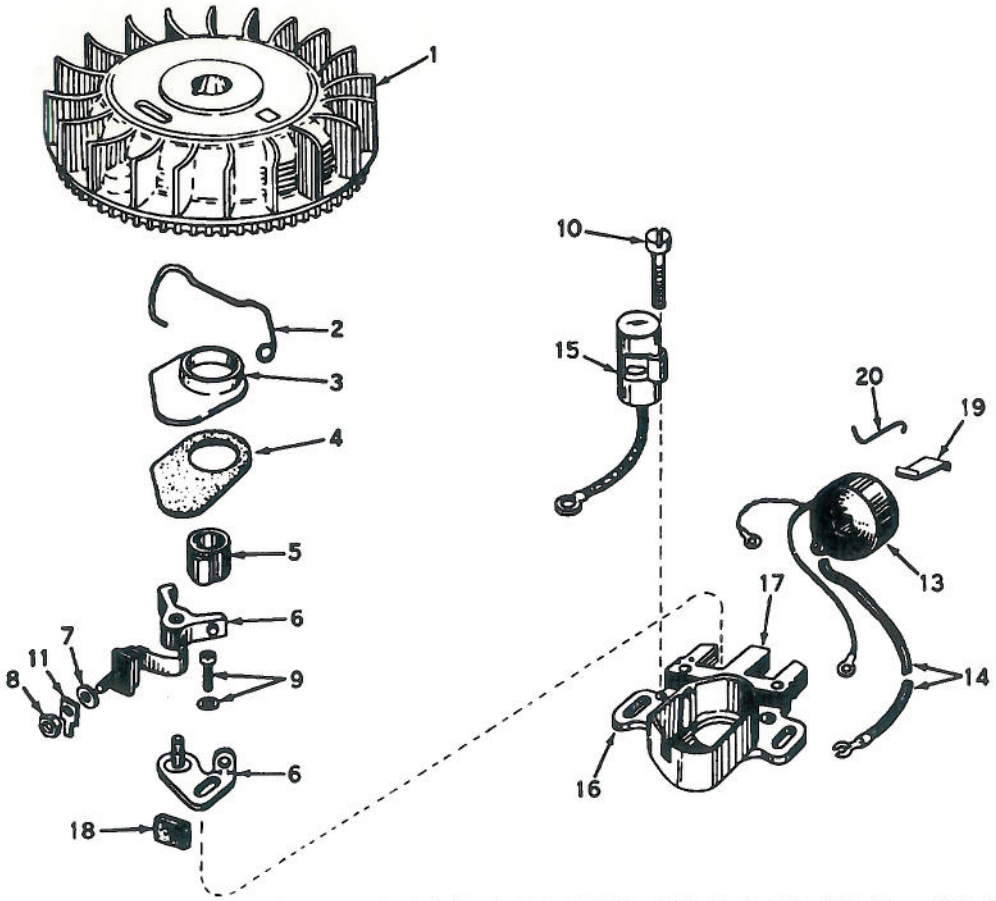


MAGNETO NO. 610793* (MOWER MODEL NO. 21610)

(ENGINE NOS. TNT 100-10047)

Ref. No.	Part No.	Description	No. Used
1	610782	Flywheel	1
2	30551	Spring, Breaker Box Dust Cover	1
3	30550	Cover, Breaker Box Dust	1
4	32052	Gasket, Dust Cover	1
5	30552	Cam, Breaker	1
6	30547A	Breaker Assembly	1
7	610385	Washer, Terminal	1
8	610408	Nut, Terminal	1
9	29181	Screw & Washer Assy., Breaker	1
10	610593	Screw, Condenser Fastening	1

Ref. No.	Part No.	Description	No. Used
11	33356	Tab, Ground Terminal	1
13	30560A	Coil Assembly (Incl. No. 14)	1
14	30554	Wire, Ignition Lead	1
15	30548A	Condenser	1
16	30545	Core & Plate Group	1
17	30561A	Stator Assembly (Incl. Nos. 2, 3, 4, 6 thru 16, 18, 19 & 20	1
18	30549	Felt, Cam Wiper	1
19	29629	Spring, Coil Wedge	1
20	31311	Clip, Coil Locking	1

*The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually as shown in the parts list.

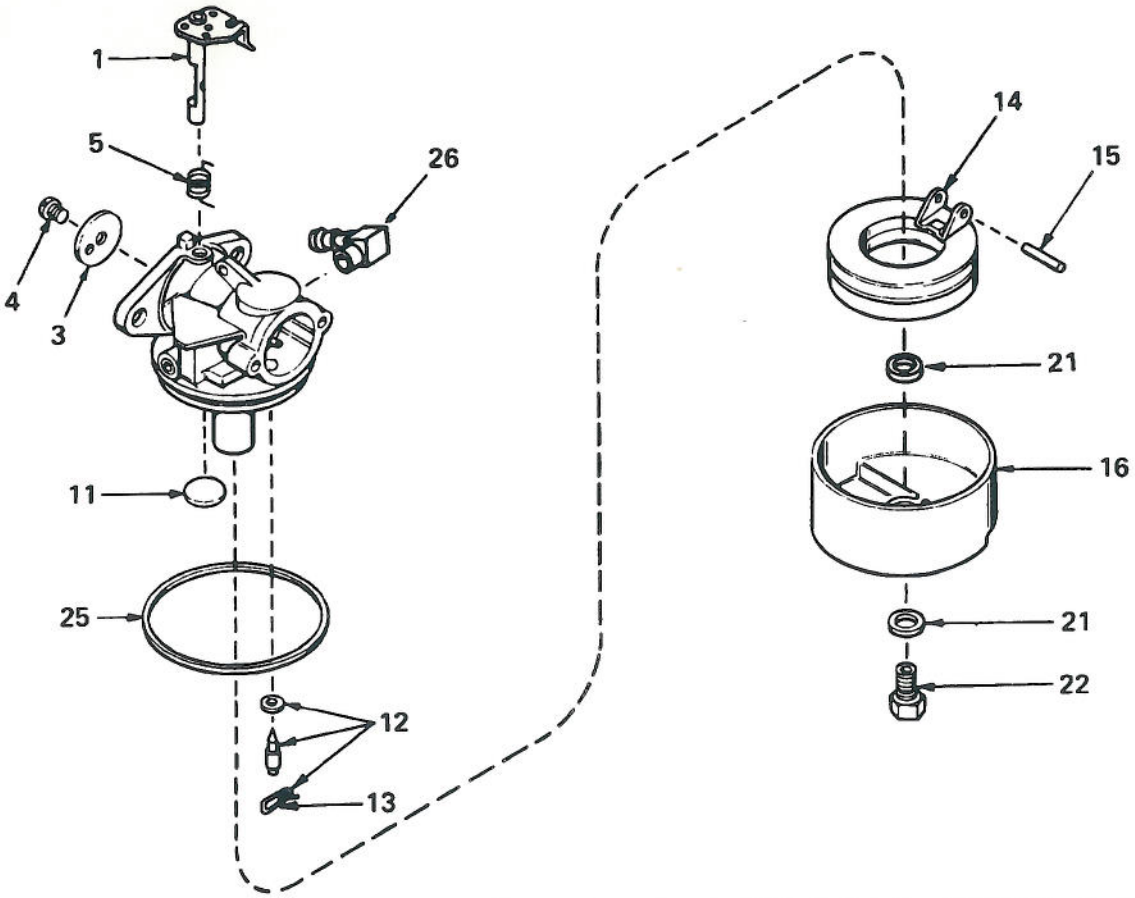


CARBURETOR NO. 631784A (MOWER MODEL NO. 21610 & 21711)

(ENGINE NOS. TNT 100-10047 AND TNT 100-10046)

Ref. No.	Part No.	Description	No. Used
1	631615	Shaft & Lever Assy., Throttle	1
3	631616	Shutter, Throttle	1
4	650506	Screw	1
5	630731	Spring, Return	1
11	631027	Plug, Welch	1
12	631021	Inlet Needle, Seat & Clip Assembly (Incl. No. 13)	1
13	631022	Clip, Inlet Needle	1


Ref. No.	Part No.	Description	No. Used
14	631023	Float, Carburetor	1
15	631024	Shaft, Float	1
16	631700	Bowl Float	1
21	631334	Gasket, Bowl-to-body	1
22	631935	Nut, Float Bowl	1
25	631028	Gasket, Bowl-to-body	1
26	631807	Fitting, Fuel Inlet	1

ENGINE TECUMSEH MODEL NO. TNT 100-10046
(MOWER MODEL NO. 21711)

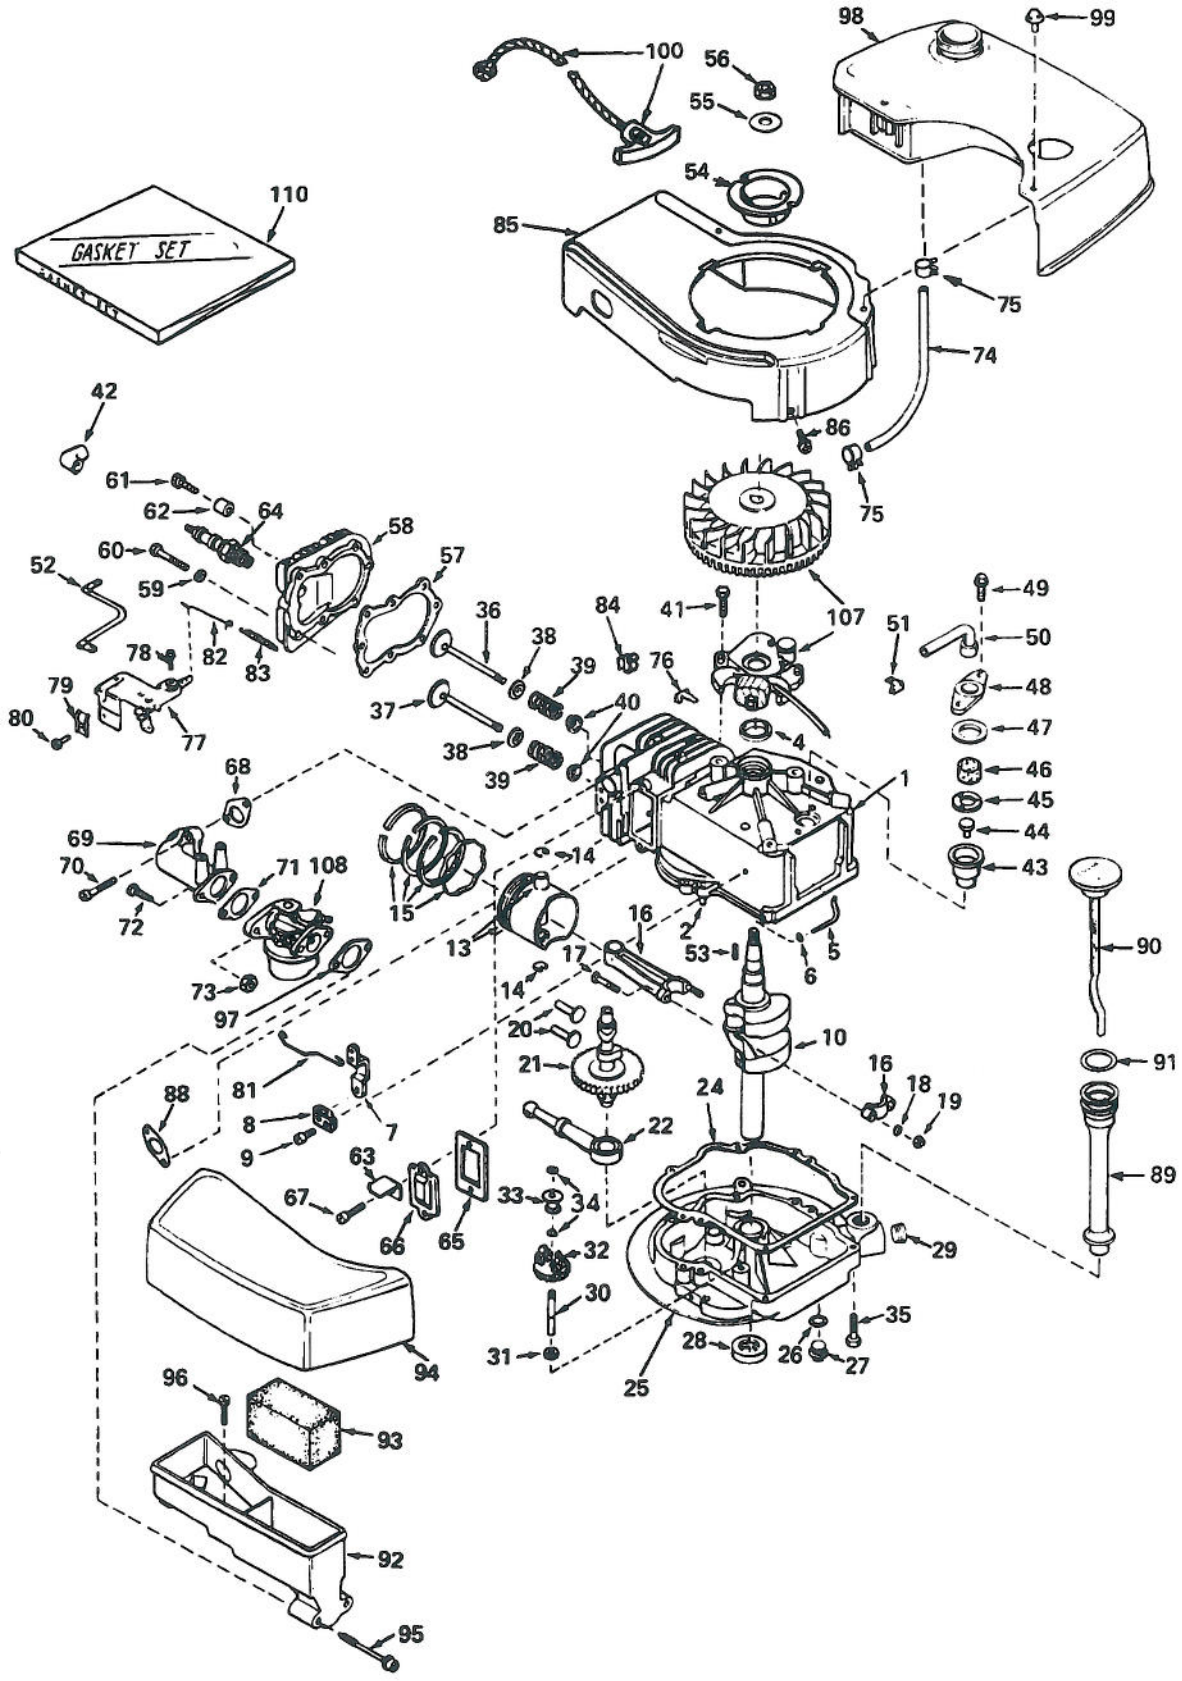

ENGINE TECUMSEH MODEL NO. TNT 100-10046 (MOWER MODEL NO. 21711)

Ref. No.	Part No.	Description	No. Used
1	33883	Cylinder Assembly (Incl. Nos. 2, 4 and 87)	1
2	26727	Pin, Dowel	2
4	29183	Seal, Oil	1
5	30589	Rod, Governor (Incl. No. 6)	1
6	28277	Washer, Flat	1
7	32651	Lever, Governor	1
8	31335	Clamp, Governor Lever	1
9	650548	Screw, Hex Slotted Washer Hd.	1
10	33884	Crankshaft	1
13	32603	Piston & Pin Assembly (Incl. 2 of No. 14) (Standard)	1
13	32604	Piston & Pin Assembly (Incl. 2 of No. 14) (.010 Oversize)	1
13	32605	Piston & Pin Assembly (Incl. 2 of No. 14) (.020 Oversize)	1
14	20381	Ring, Piston Pin Retaining	2
15	32606	Ring Set, Piston (Standard)	1
15	32607	Ring Set, Piston (.010 Oversize)	1
15	32608	Ring Set, Piston (.020 Oversize)	1
16	30963B	Rod Assembly, Connecting (Incl. Nos. 17, 18 and 19)	1
17	26706	Bolt, Connecting Rod	2
18	20747	Washer, Connecting Rod Bolt	2
19	27573	Nut, Connecting Rod	2
20	27241	Lifter, Valve	2
21	34014	Camshaft,(Mech. Compression Release)	1
22	29914	Pump Assembly, Oil	1
24	*26750A	Gasket, Mounting Flange	1
25	33898	Flange Assembly, Mounting (Incl. Nos. 27 thru 30)	1
26	*28833	Gasket, Oil Drain Plug	1
27	27244	Plug, Oil Drain	1
28	26208	Seal, Oil	1
29	33885	Plug, Oil Drain	1
30	30574	Shaft, Mech. Governor	1
31	30590A	Washer, Flat	1
32	30591	Gear Assembly, Governor (Incl. No. 31)	1
33	30588A	Spool, Governor	1
34	29193	Ring, Retaining	2
35	650488	Screw, Hex Hd. Sems	6
36	29314A	Valve, Intake (Incl. Nos. 38 thru 40) (Standard)	1
36	29315B	Valve, Intake (Incl. Nos. 38 thru 40) (1/32" Oversize)	1
37	29313B	Valve, Exhaust (Incl. Nos. 38 thru 40) (Standard)	1
37	29315B	Valve, Exhaust (Incl. Nos. 38 thru 40) (1/32" Oversize)	1
38	31671	Cap, Upper Valve Spring	2
39	31672	Spring, Valve	2
40	31673	Cap, Lower Valve Spring	2
41	650489	Screw, Hex Hd. Sems w/Flatwasher	2
42	610118	Cover, Spark Plug	1
43	33731	Body, Breather Tube	1
44	33732	Valve, Check	1
45	33733	Baffle, Breather	1
46	33734	Element, Breather	1
47	*33735	Gasket, Breather	1
48	33737	Cover, Breather	1
49	650768	Screw, Hex Hd. w/Conical Washer	2
50	33886	Tube, Breather	1
51	33887	Clip, Breather Tube	1
52	33888	Wire, Ground	1
53	27247	Key, Flywheel	1
54	32723	Pulley, Starter	1
55	650763	Washer, Belleville	1
56	650607	Nut, Flywheel	1
57	*33015	Gasket, Cylinder Head	1
58	33016	Head, Cylinder	1
59	26073	Washer	5
60	6021	Screw, Hex Hd. Cap	5
61	650697	Screw, Hex Hd. Cap	3
62	33892	Spacer	3
63	30593	Clip, Magneto Wire	1
64	33636	Plug, Spark (Champion J-8 or Equivalent)	1
65	*27234	Gasket, Valve Spring Cover	1
66	32755	Cover, Valve Spring Box	1
67	650128	Screw, Fil. Slotted Hd. Sems	2
68	*30188	Gasket, Intake Pipe	1
69	33004	Pipe, Intake	1
70	650451	Screw, Fil. Flex Hd. Self-Locking	2
71	*31688	Gasket, Carburetor	1
72	6202	Screw, Hex Hd. Cap Sems	2
73	29752	Nut and Lockwasher	2
74	30705	Line, Fuel	1
75	26460	Clamp, Fuel Line	2
76	29443	Clip, Fuel Line	1
77	33889	Control Assembly, Speed	1
78	650783	Screw, Hex Washer Hd. Thread Forming Sems	1
79	27793	Clip, Conduit	1
80	28942	Screw, Slotted Hex Hd. Sems	1
81	33133	Link, Governor	1
82	33295	Link, Governor Spring	1
83	33890	Spring, Governor	1
84	27275	Clip Wing	1
85	33907	Housing, Blower	1
86	650497	Screw, Flex Pan Hd.	2
88	*30081	Gasket, Exhaust	1
89	33893	Tube, Oil Filler	1
90	33894	Dipstick, Oil (Incl. No. 91)	1
91	33590	"O" Ring	1
92	33895	Body, Air Cleaner	1
93	33896	Filter, Air	1
94	33897	Cover, Air Cleaner	1
95	650762	Screw, Fil. Hd. Mach. Sems	2
96	650784	Screw, Hex Hd. w/Flatwasher Thread Forming	1
97	*33051	Gasket, Air Cleaner	1
98	33904	Tank, Fuel	1
99	28763	Screw, Hex Washer Hd. Thread Forming	2
100	590343	Rope Assembly, Starter	1
107	610772	Magneto (The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually as shown in parts list.)	
108	631784A	Carburetor (Incl. No. 71)	1
110	33906	Gasket Set (Incl. Items Marked *)	1

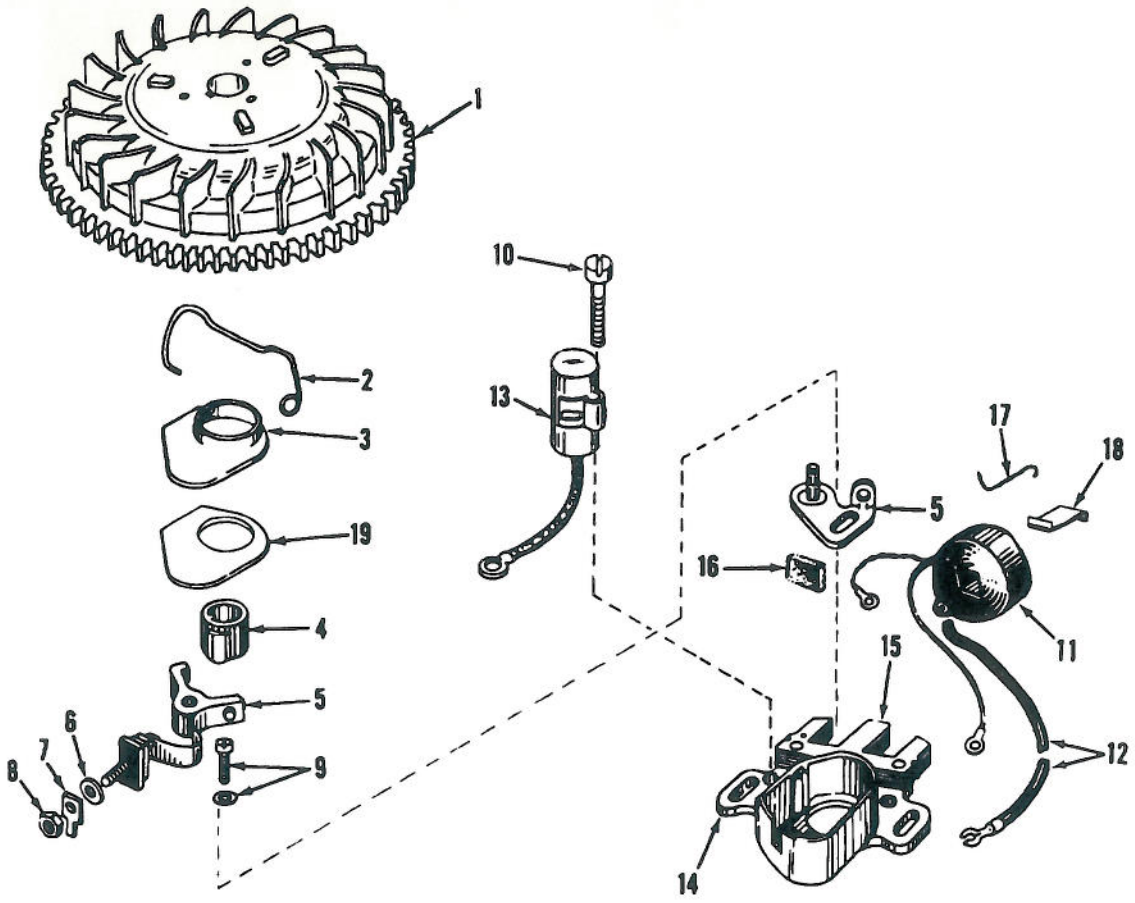

MAGNETO NO. 610772* (MOWER MODEL NO. 21711)

(ENGINE NO. TNT 100-10046)

Ref. No.	Part No.	Description	No. Used
1	610757	Flywheel	1
2	30551	Spring, Breaker Box	1
3	30550	Cover, Breaker Box Dust	1
4	30552	Cam, Breaker	1
5	30547A	Contact Assembly, Breaker	1
6	610385	Washer, Terminal	1
7	33356	Tab, Ground Terminal	1
8	610408	Nut, Terminal	1
9	29181	Screw and Washer, Breaker	1
10	610593	Screw, Condenser Fastening	1
11	30560A	Coil Assembly (Incl. No. 12)	1
12	30554	Wire, Lead	1
13	30548A	Condenser	1
14	30545	Core and Plate	1

Ref. No.	Part No.	Description	No. Used
15	30561A	Stator Assembly (Incl. Nos. 2, 3, 5 thru 14 and 16 thru 19)	1
16	30549	Felt, Cam Wiper	1
17	31311	Clip, Coil Locking	1
18	29629	Spring, Coil Wedge	1
19	32052	Gasket, Dust Cover	1

*The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.