Form No. 3447-596 Rev A

TORO®

Count on it.

Parts Catalog

CM-958H-SED

Concrete Mixer

Model No. 68007—Serial No. 322000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3447-596 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly 4
Axle Assembly 6
Hub Assembly No. 139-1328 8
Engine and Belt Assembly 10
Drum Assembly 12
Cowl Assembly 14
Attachments and Accessories 16

© 2021—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Main Frame Assembly

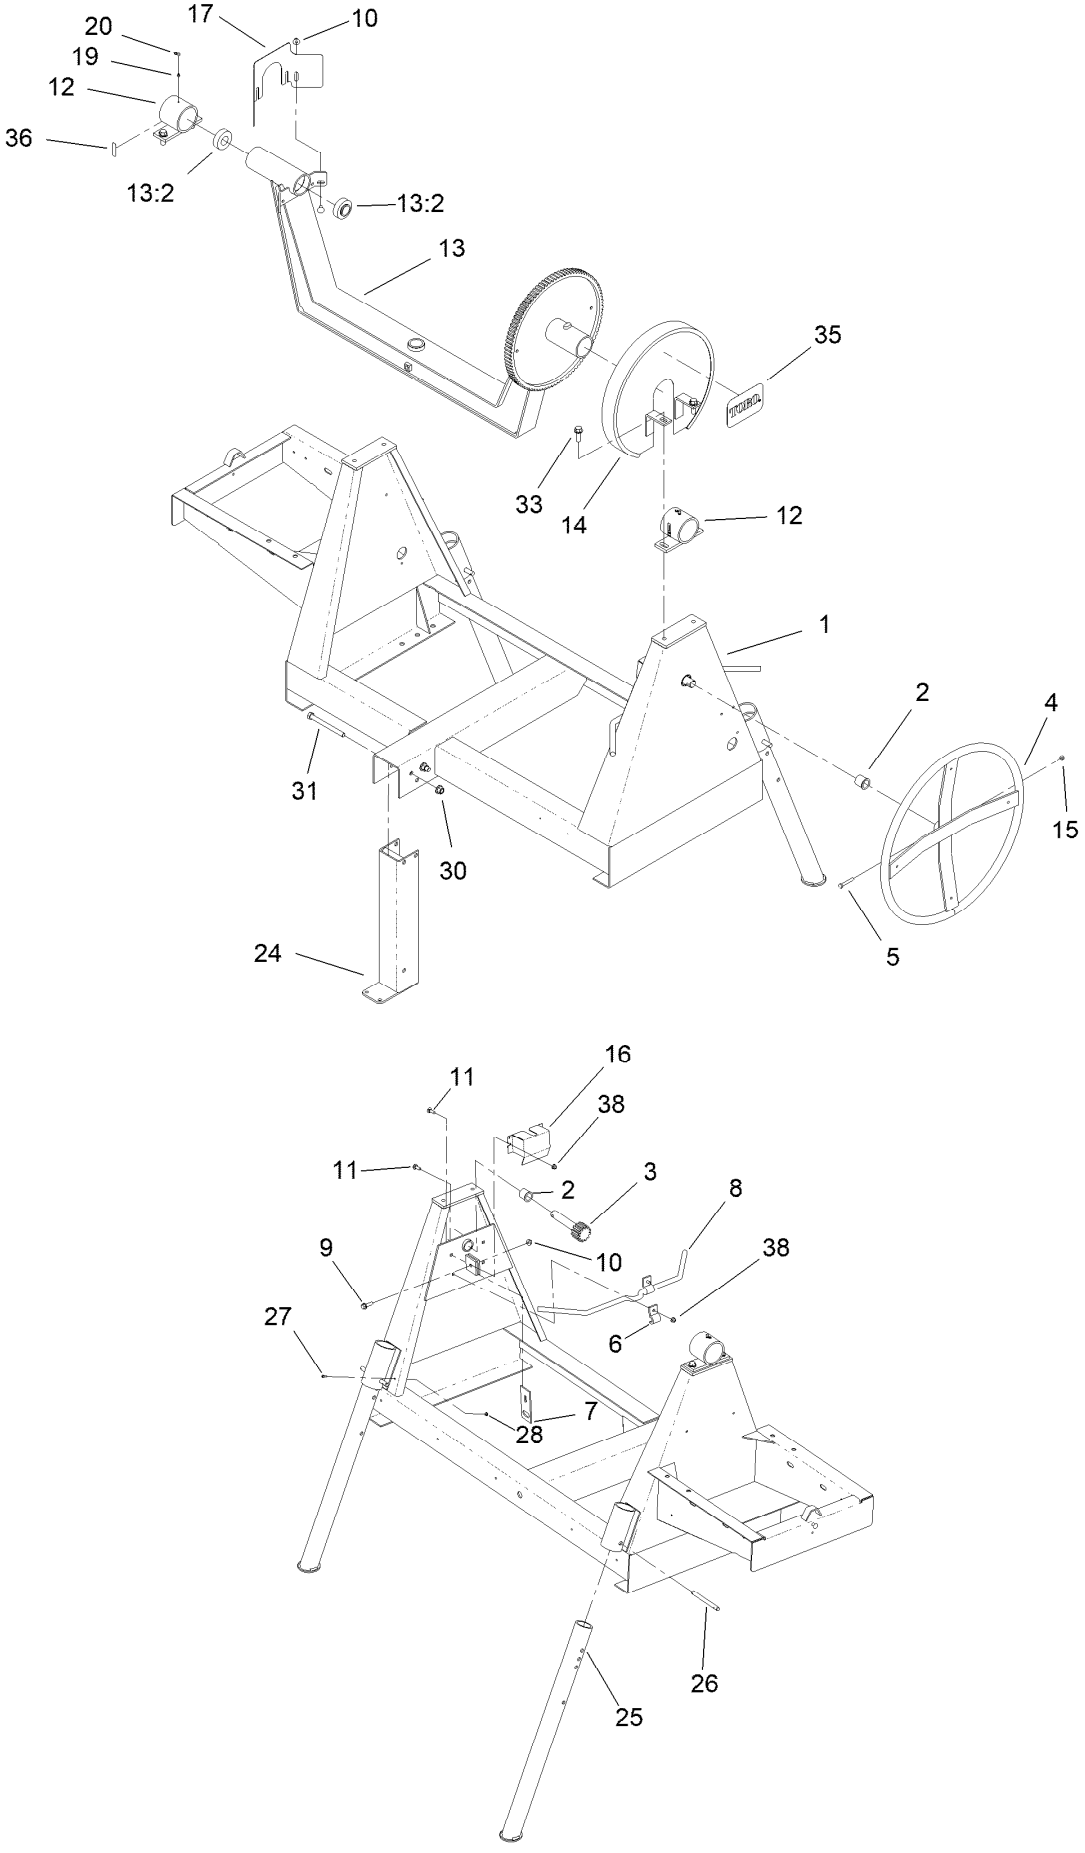

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-8685-03	1	Frame
2	ST32032	2	Bushing-Nylon
3	140-5722	1	Shaft-Tilt
4	ST22096-03	1	Handwheel
5	322-10	1	Screw-HH
6	ST27559-03	2	Bracket-Handle
7	ST27619-03	1	Dog-Brake
8	127-5593	1	Handle-Brake
9	3234-24	1	Screw-HHF
10	104-8301	3	Nut-HF, NI
11	3230-2	4	Bolt-CARR
12	ST24349-03	2	Trunnion
13	125-6308	1	Yoke ASM
13:2	ST32039	2	Bearing
14	ST27617-03	1	Guard-Brake, Upper
15	3296-29	1	Nut-Lock, NI
16	ST27618-03	1	Guard-Brake, Lower
17	130-2208-03	1	Guard-Pinion
19	ST46042	2	Fitting-Grease
20	ST47001	2	Cap-Plug
24	ST21875-03	1	Post-Foot
25	ST21874-03	2	Leg-Stabilizer
26	ST80039	2	Pin-Clevis, Lanyard
27	3290-500	2	Screw-PPH
28	3296-2	2	Nut-Lock, NI
30	99-5107	2	Nut-Lock
31	325-22	2	Screw-HH
33	ST80031	4	Screw-HWH
35	99-4693	1	Decal
36	125-8175	2	Decal-Grease
38	104-8300	4	Nut-HF, NI

Axle Assembly

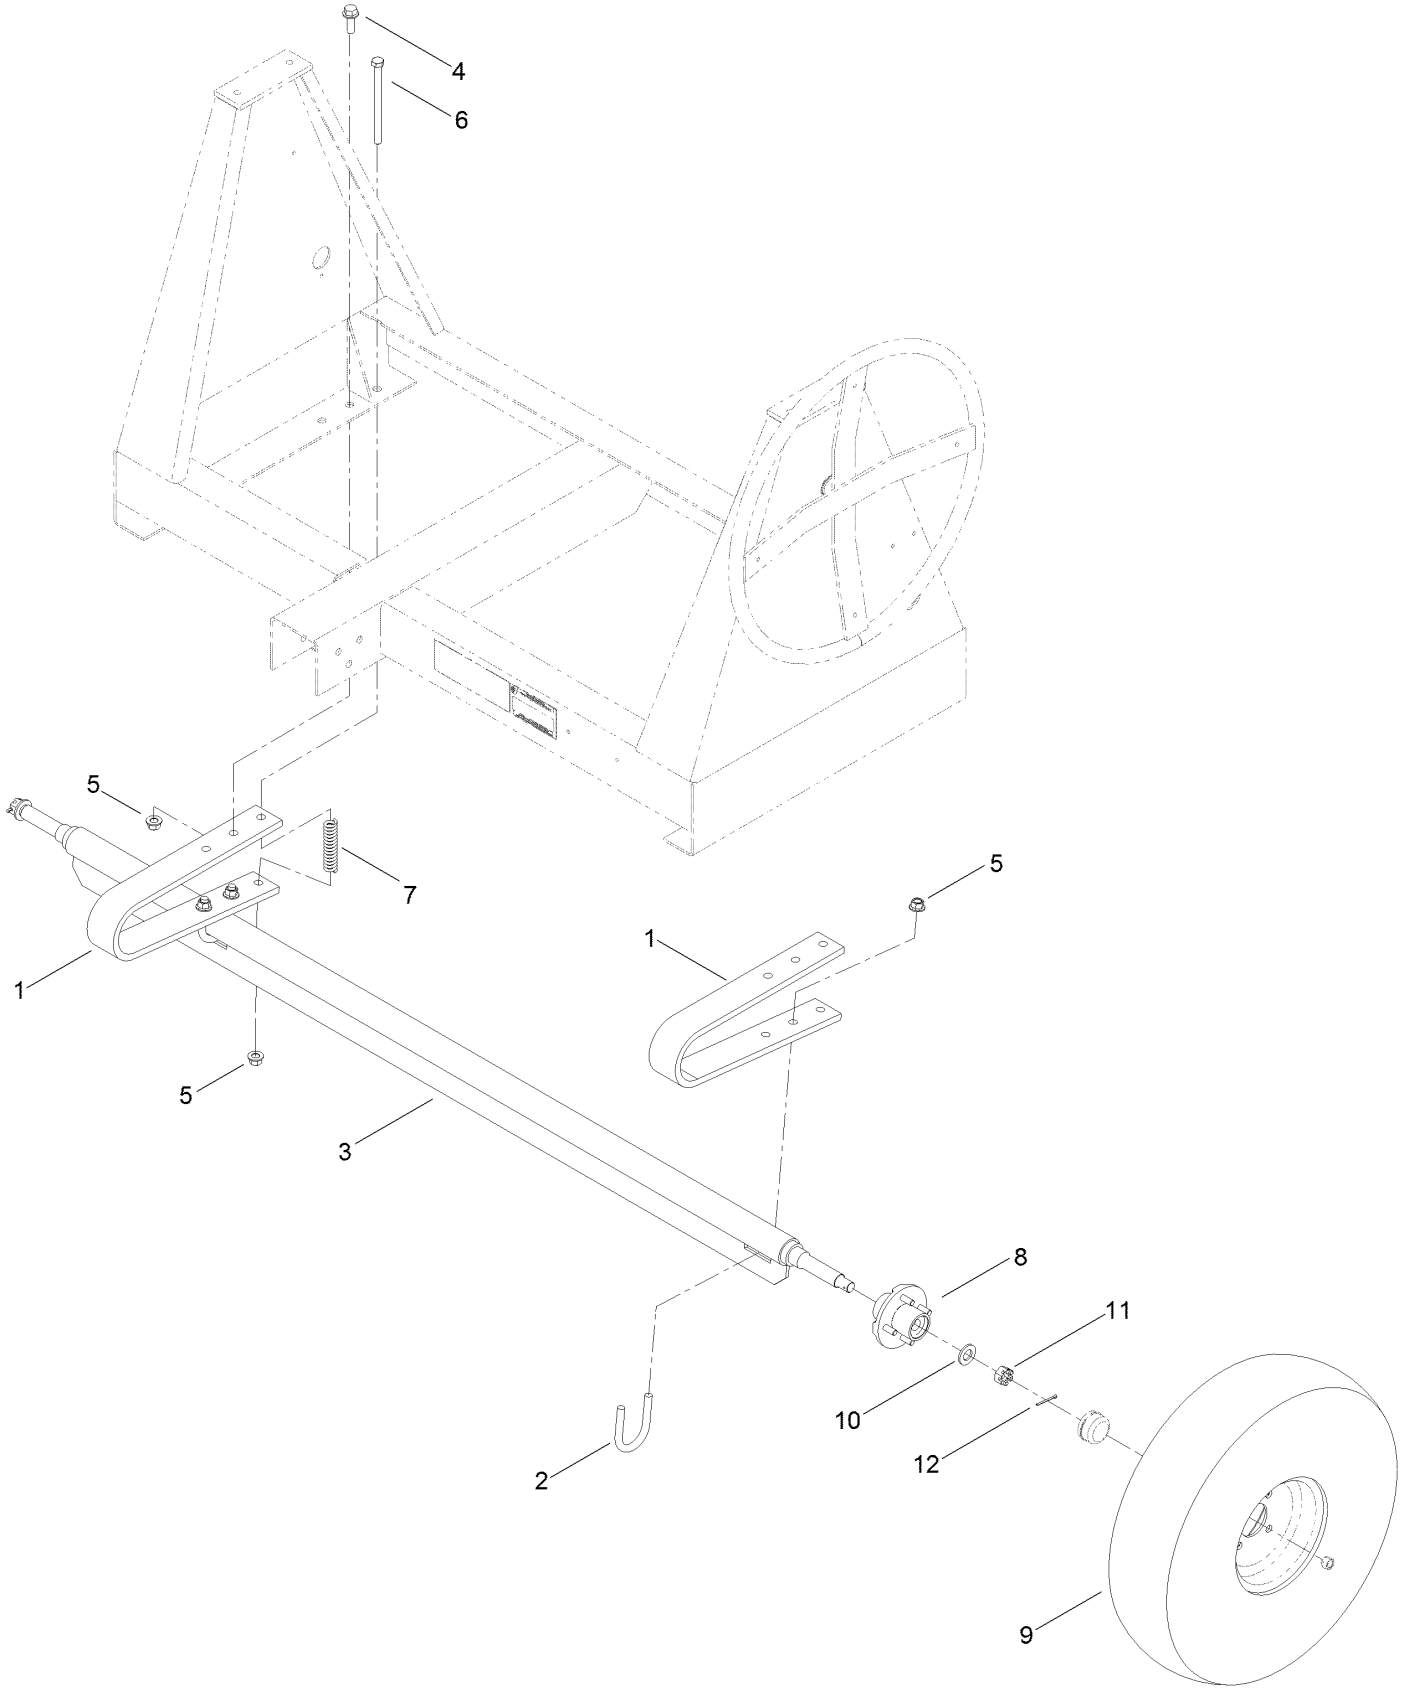

Axle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	ST26971	2	Spring-Leaf
2	ST26195	2	Bolt-U
3	ST21873-03	1	Axle-Spring
4	100-6116	4	Screw-HHF
5	99-5107	10	Nut-Lock
6	325-33	2	Screw-HH
7	ST34972	2	Spring-Coil
8	139-1328	2	Hub ASM
9	ST32307	2	Tire And Rim ASM
10	3256-28	2	Washer-Flat
11	ST80054	2	Nut
12	3272-13	2	Pin-Cotter

Hub Assembly No. 139-1328

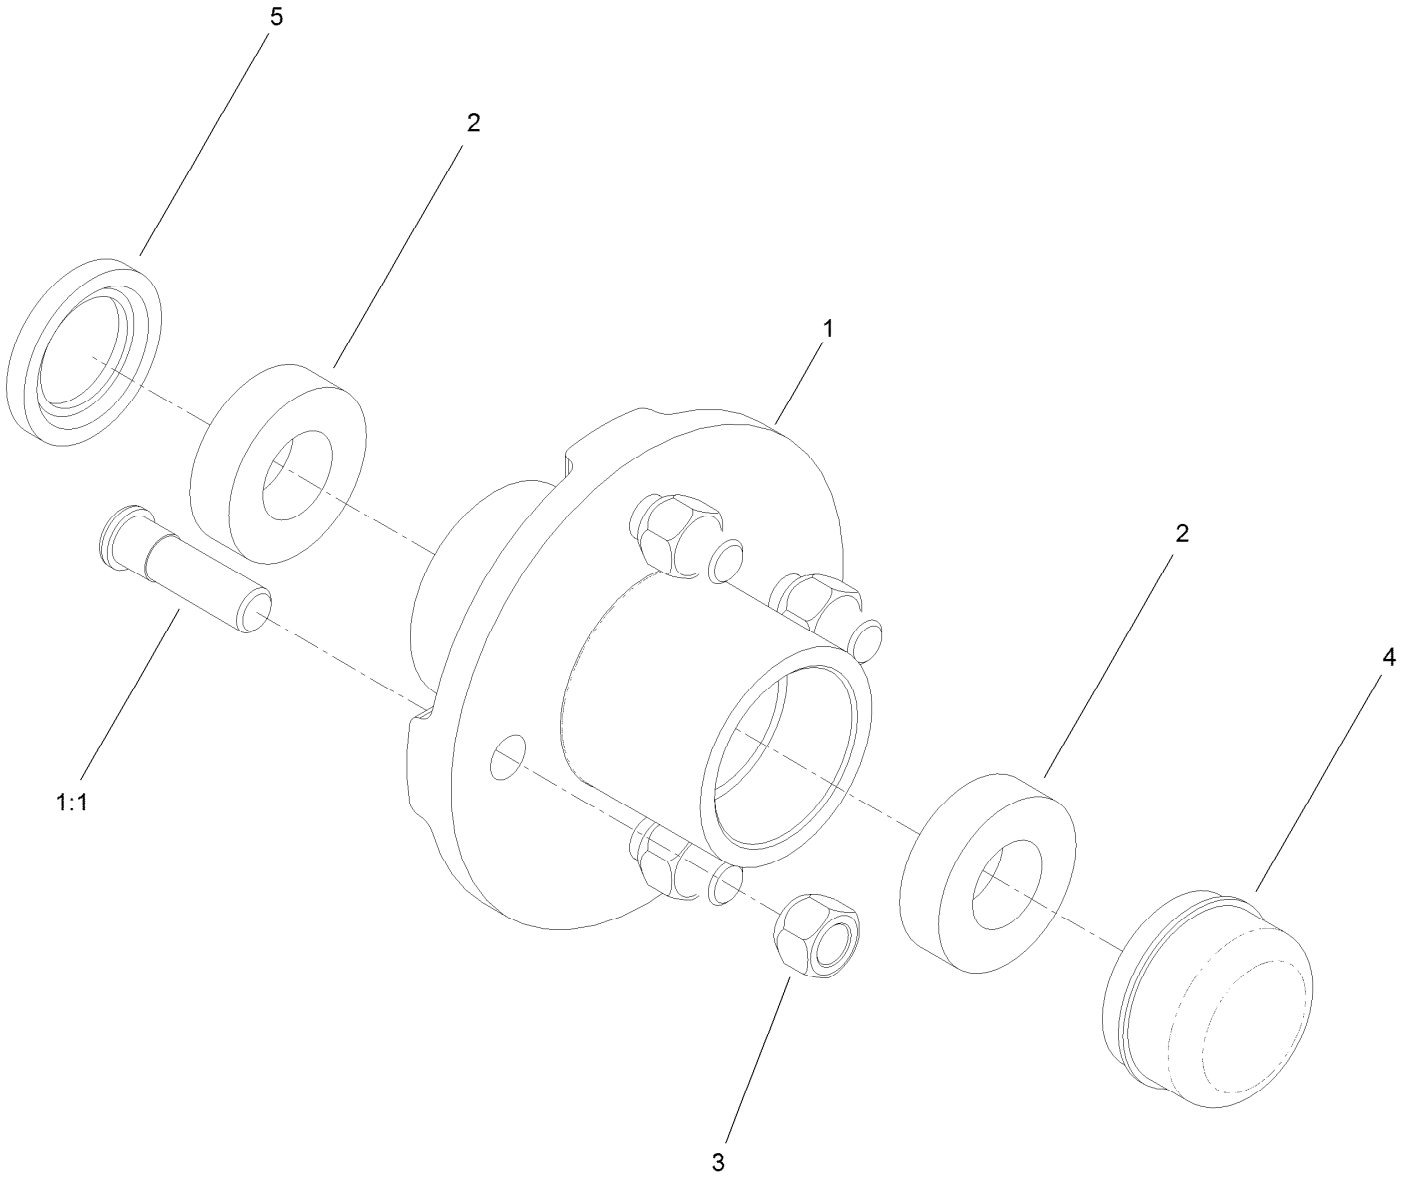

Hub Assembly No. 139-1328 (continued)

Ref.	Part Number	Qty.	Description
1	139-1327	1	Hub-4In
1:1	ST39190	4	Stud-Wheel
2	ST32233	2	Bearing-Roller
3	ST80045	4	Nut-Lug
4	ST34573	1	Cap-Dust
5	ST32052	1	Seal-Hub, Wheel

Engine and Belt Assembly

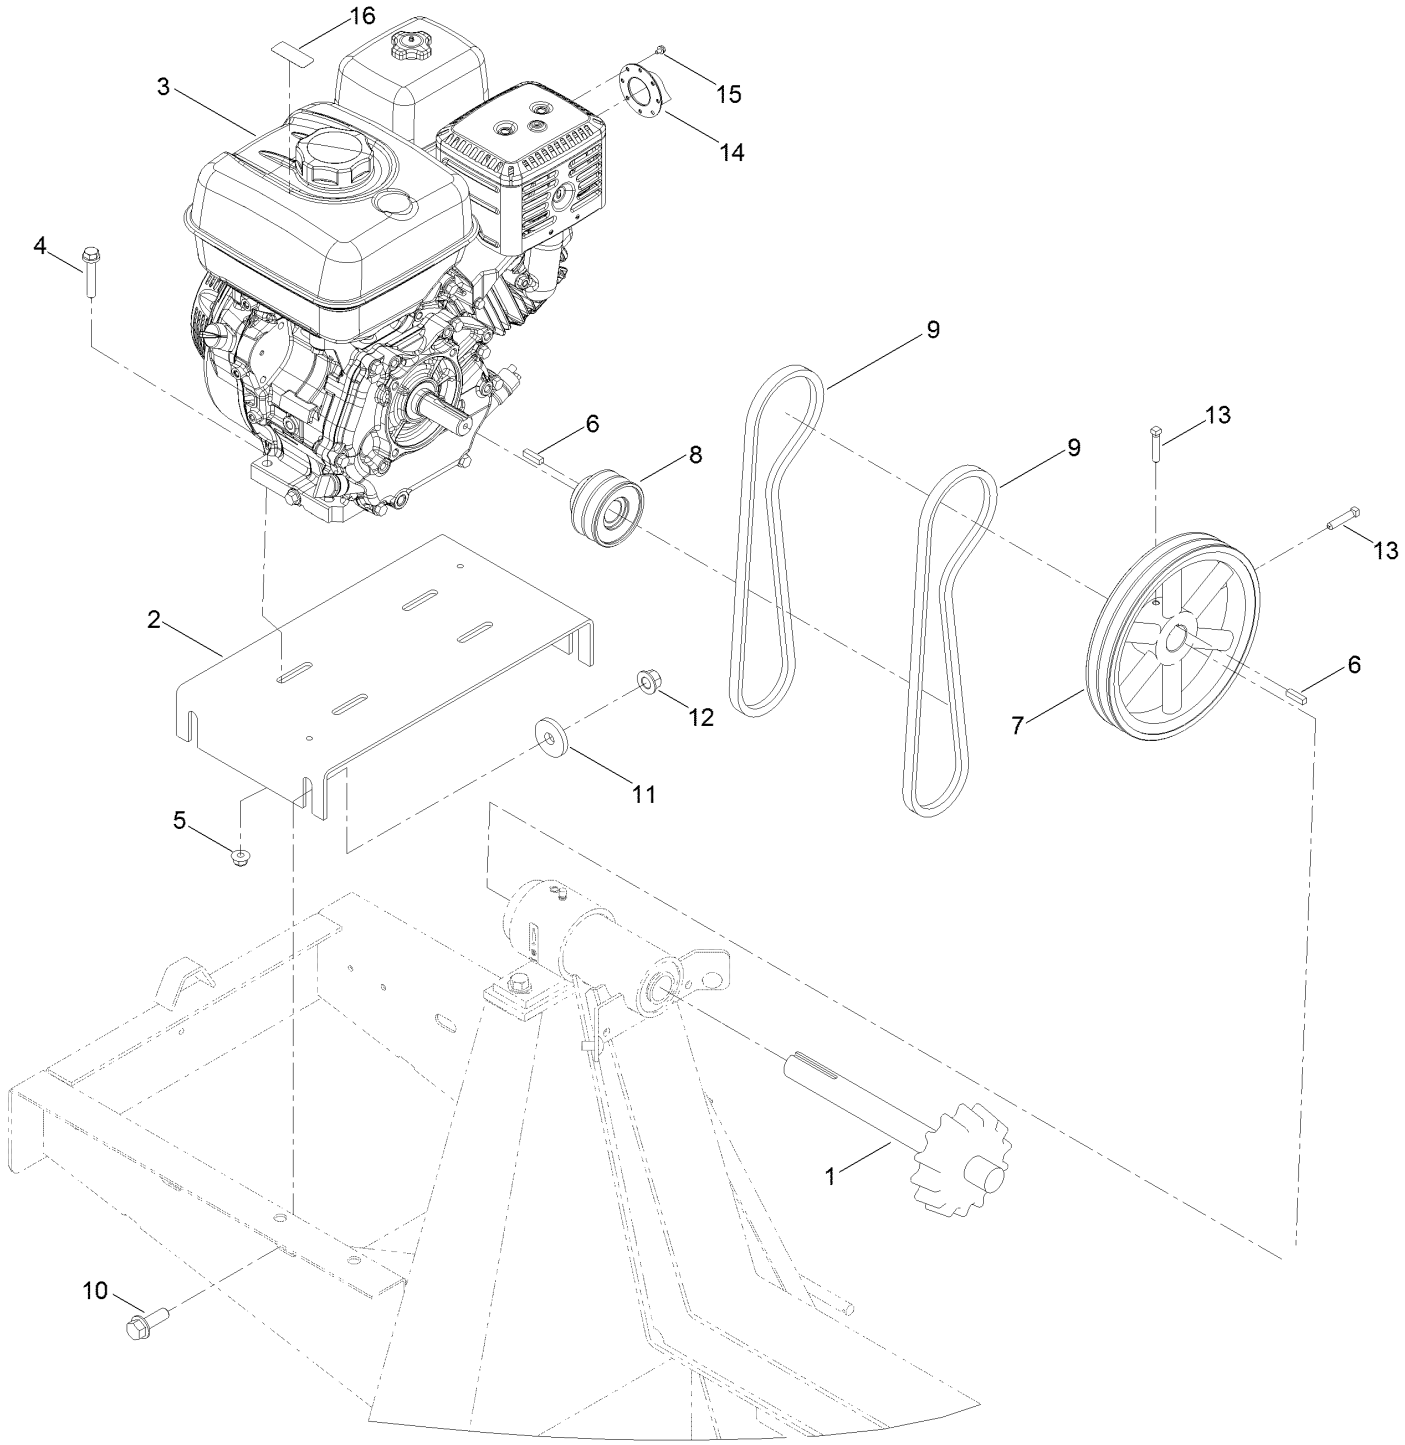

Engine and Belt Assembly (continued)

Ref.	Part Number	Qty.	Description
1	ST21487	1	Shaft-Drive
2	127-7579-03	1	Base-Engine, 95Cm
3	125-4812	1	Engine-Honda, Gx240 ●
4	108-3742	4	Screw-HHF
5	104-8301	4	Nut-HF, NI
6	5-7280	2	Key
7	ST34986-03	1	Sheave
8	ST34984	1	Sheave
9	127-0075	2	Belt-V
10	100-6116	4	Screw-HHF
11	ST26326	4	Washer-Flat
12	99-5107	4	Nut-Lock
13	909546	2	Screw-Set
14	120-1886	1	Deflector-Exhaust, Honda
15	127-7578	3	Screw-HWH
16	130-8322	1	Decal-Warning, Ethanol

● Obtain parts from www.honda-engines.com

Drum Assembly

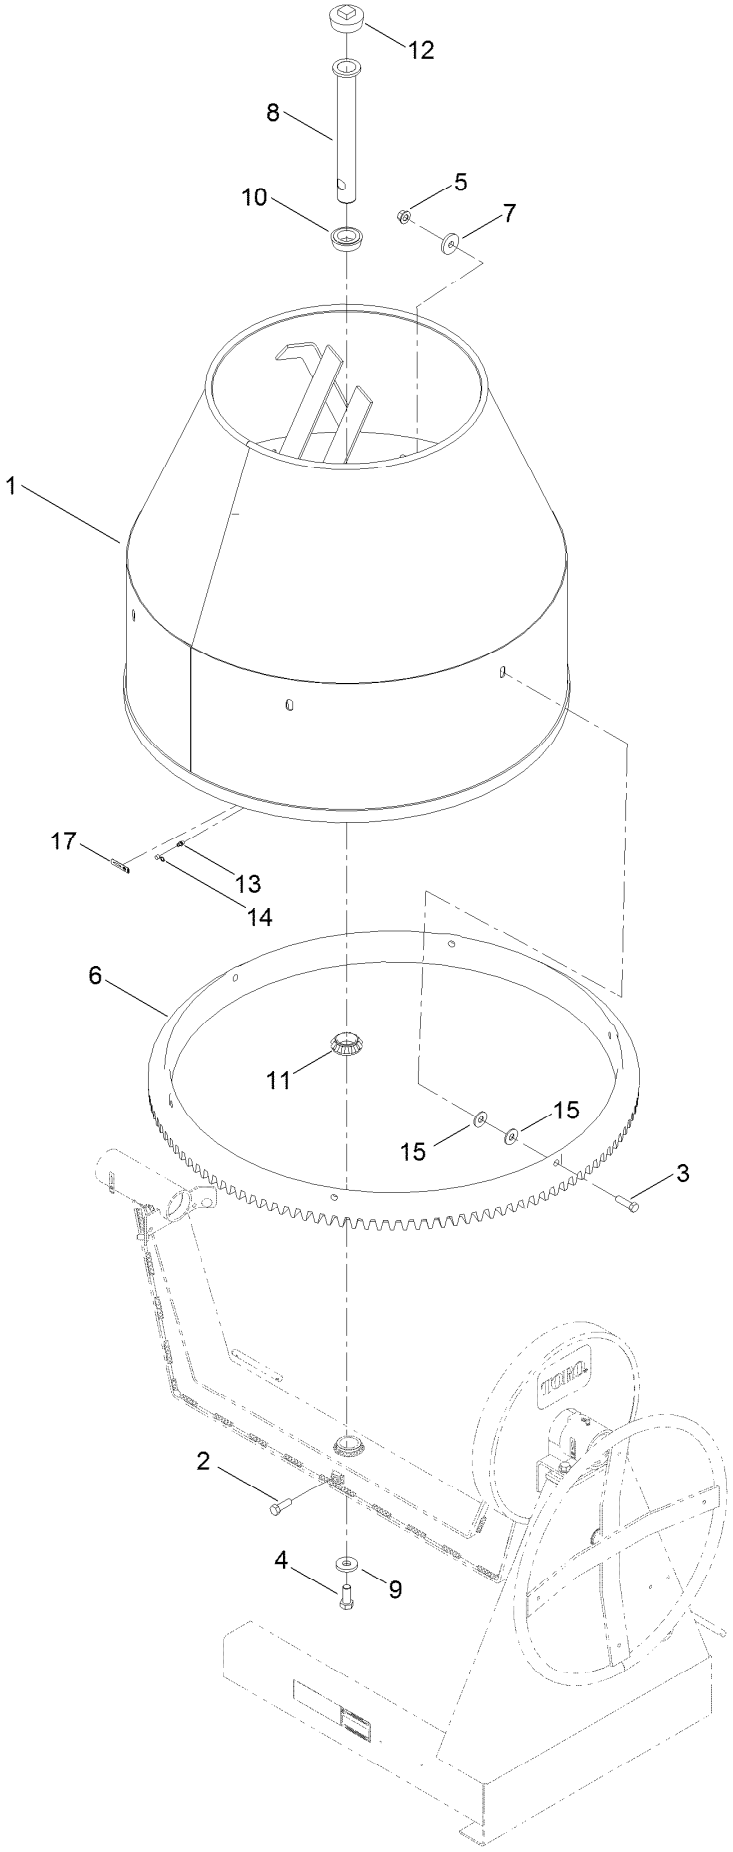

Drum Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-6306-01	1	Drum
2	325-6	1	Screw-HH
3	325-7	6	Screw-HH
4	327-4	1	Screw-HH
5	99-5107	6	Nut-Lock
6	ST26317-01	1	Gear-Ring
7	ST26326	6	Washer-Flat
8	ST27267	1	Spindle
9	ST27413	1	Washer-Flat
10	ST32086	1	Bearing
11	ST32161	1	Bearing-Roller
12	ST46022	1	Plug
13	ST46057	1	Fitting
14	ST47001	1	Cap-Plug
15	3256-6	12	Washer-Flat
17	125-8175	1	Decal-Grease

Cowl Assembly

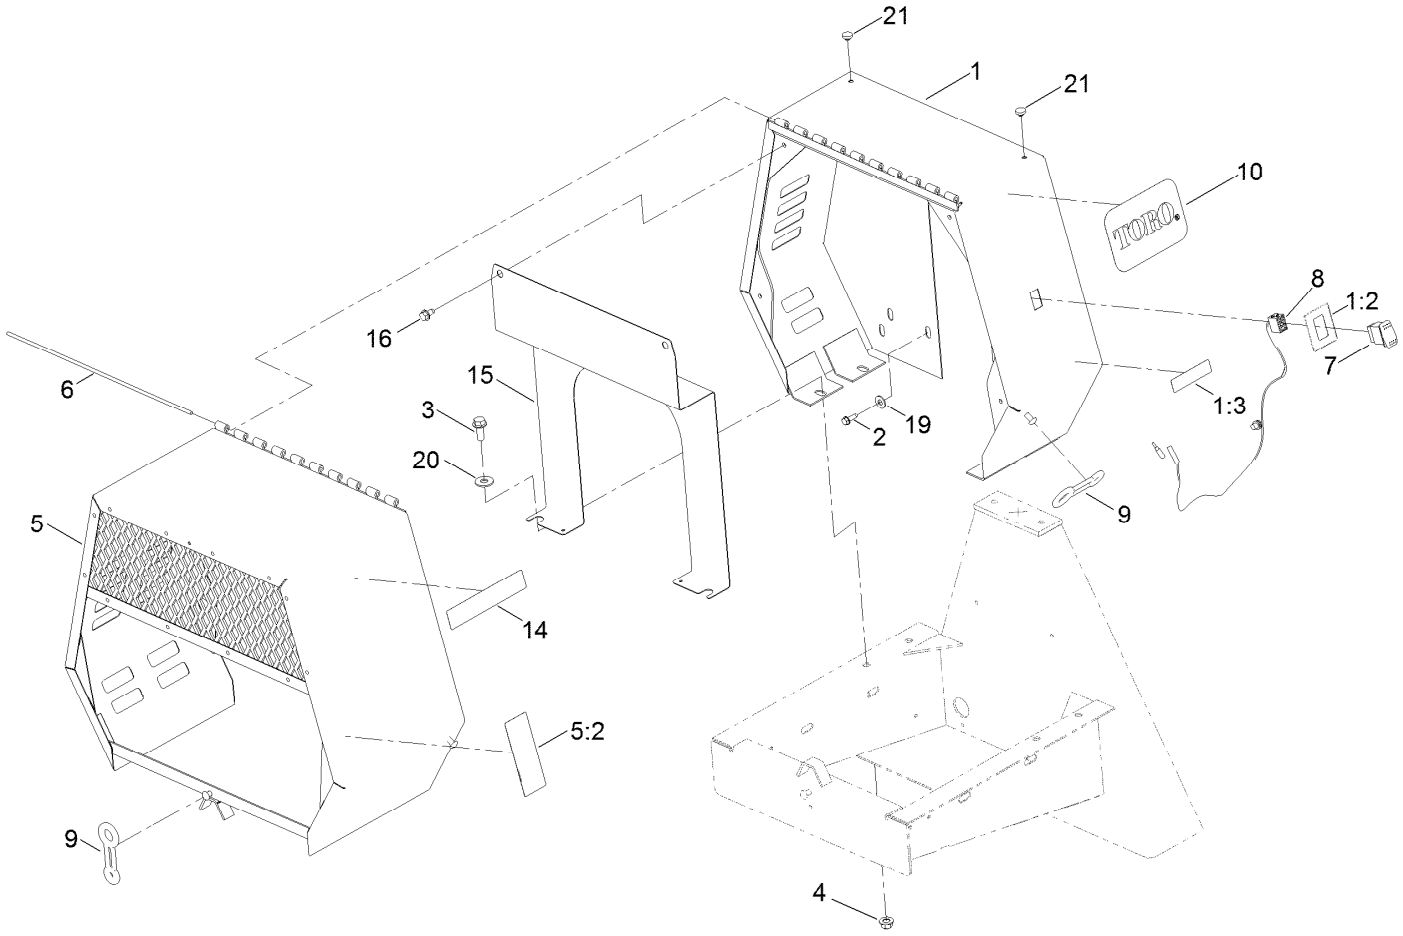

Cowl Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-2811	1	Stationary Cowl ASM
1:2	125-4940	1	Decal-Stop, Engine
1:3	133-8062	1	Decal-Arrestor, Spark
2	701243	2	Screw-Thd Roll, HWH
3	3234-38	4	Screw-HHF
4	99-5107	4	Nut-Lock
5	127-1685	1	Movable Cowl ASM
5:2	125-4939	1	Decal-Warning
6	ST44368	1	Pin
7	95-8999	1	Switch
8	125-4877	1	Harness-Wire, Mixer
9	ST47182	3	Latch-Rubber
10	67-7320	2	Decal
14	125-4937	2	Decal
15	125-8218-03	1	Plate-Engine
16	110-9380	2	Screw-HWH
19	3256-4	2	Washer-Flat
20	3256-6	2	Washer-Flat
21	1-513658	2	Bumper

Attachments and Accessories

For 68007 CM-958H-SED Concrete Mixer

Product Name	Model/Part
Trailer Light Kit	68063
Pintle Tow Pole Hitch, End-Dump Concrete Mixer	68130
Stamped Tow Pole Hitch, End-Dump Concrete Mixer	68131
1in Pin Tow Pole Hitch, End-Dump Concrete Mixer	68132

Notes:

Notes:

Notes:

Count on it.