
FORM NO. 3310-81

TORO

MODEL NO. 20506 - 600001 & UP
MODEL NO. 20696 - 600001 & UP

PARTS CATALOG

21" S.P. GRASSMASTER™ FINGERTIP
21" S.P. GRASSMASTER™ KEY LECTRIC®

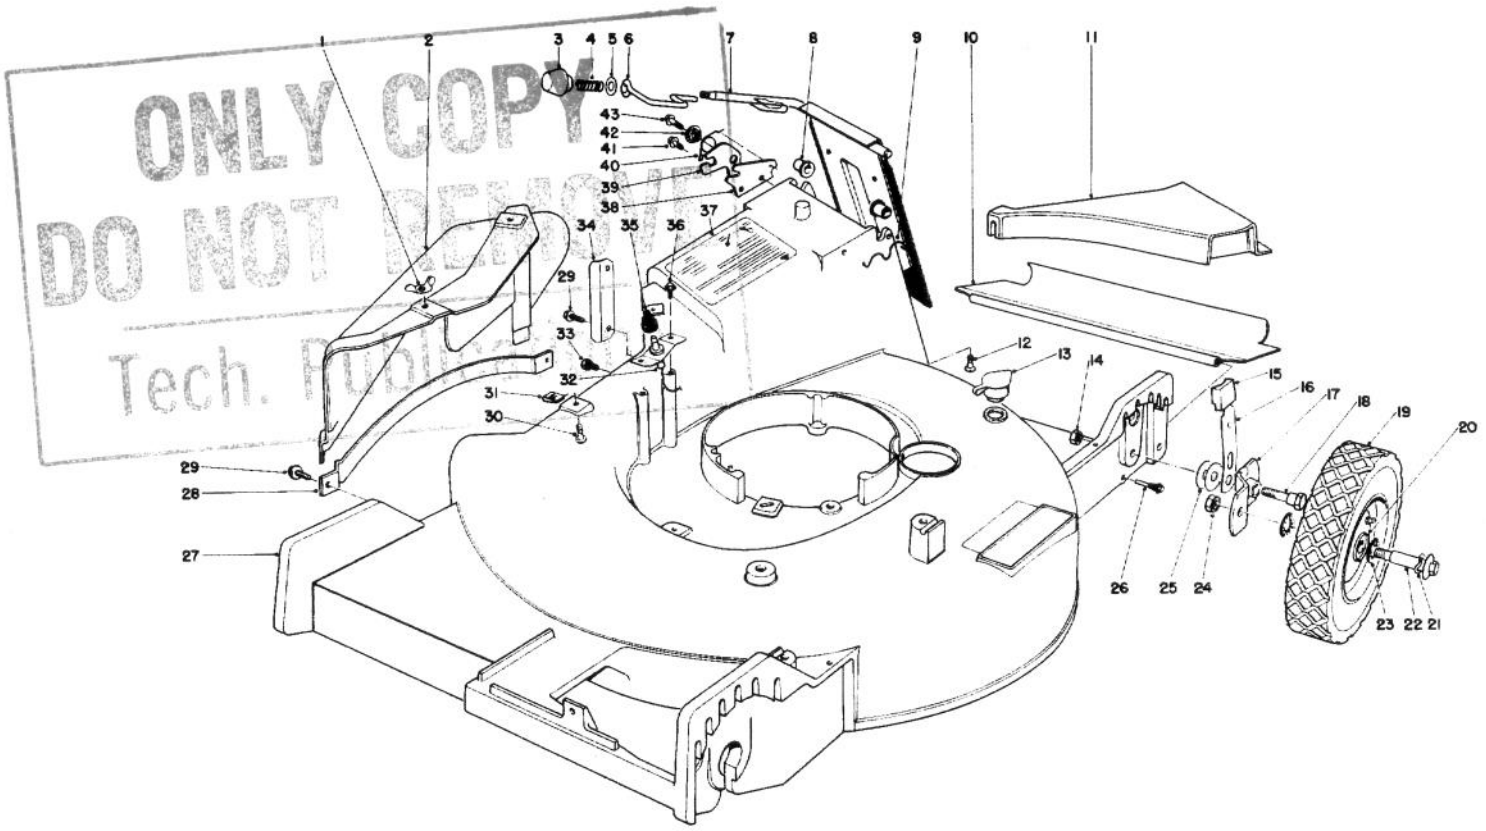

ONLY COPY
DO NOT
Tech.

HOUSING ASSEMBLY (Model 20506 & 20696)


Ref. No.	Part No.	Description	No. Used
1	32103-14	Wing Nut	2
2	23-0180	Deflector	1
3	233-37	Knob	1
4	23-0920	Spring – Compression	1
5	23-1120	Washer	1
6	23-0940	Latch Door	1
7	23-0990	Door Handle	1
8	23-0880	Bushing	2
9	23-0200	Door Retainer	1
10	23-0560	Rear Safety Shield	1
11	23-0360	Insert Rear	1
12	32144-17	Screw Flat Hd.	2
13	6-4500	Washout Plug	1
14	32146-5	Locknut	2

Ref. No.	Part No.	Description	No. Used
15	8-4220	Knob Arm	2
16	23-0400	Spring Arm	2
17	24-7710	Pivot Arm "A"	1
*	23-9120	Pivot Arm "B"	1
18	25-3440	Pivot Screw	2
19	26-2960	Wheel & Tire Assembly (Incl. Ref. #20)	2
20	251-180	Bearing	4
21	3290-393	Wave Washer	2
22	3-2652	Wheel Bolt	2
23	26-7500	Felt Washer	4
24	32146-12	Locknut	2
25	5-4460	Pivot Washer	4
26	8-6160	Pivot Screw	2

*Not Illustrated

Copyright 1976 by
The Toro Company
Minneapolis, Minnesota 55420 U.S.A.

3310-815

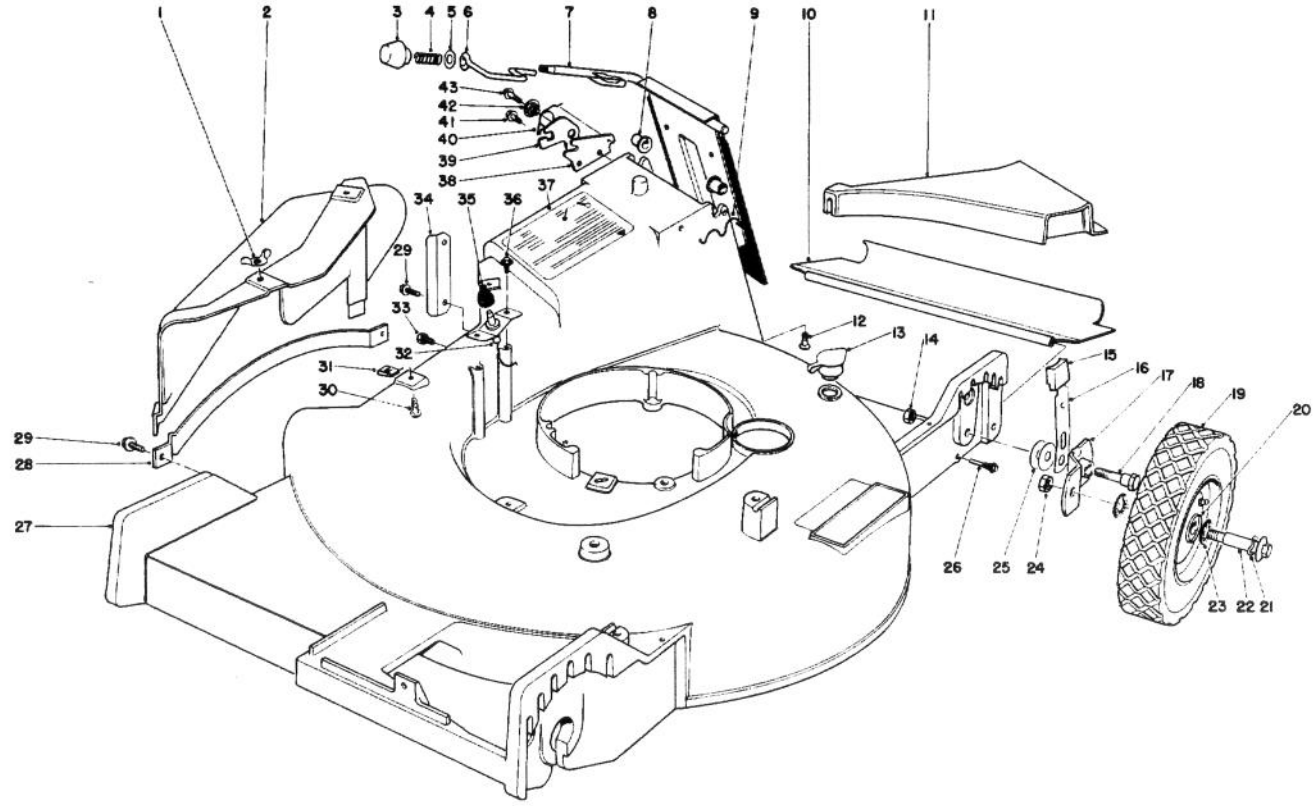


HOUSING ASSEMBLY (Model 20506 & 20696) (Continued)

Ref. No.	Part No.	Description	No. Used
27	6-2809	Housing	1
28	23-0210	Safety Bar	1
29	12-3270	Screw Special	3
30	3290-133	Screw Round Head	2
31	3290-380	Speed Nut	2
32	23-0150	Deflector Switch (Incl. Ref. #35) (Model 20506)	1
*	25-1010	Deflector Switch (Incl. Ref. #35) (Model 20696)	1
33	32104-114	Screw Self Tapping	1
34	23-0140	Clip-Retaining	1

Ref. No.	Part No.	Description	No. Used
35	12-4930	Boot Switch	1
36	32144-12	Screw	2
37	23-1280	Decal – Caution	1
38	23-1040	Latch Plate	1
39	23-1190	Safety Latch	1
40	23-1200	Spring Torsion	1
41	32104-17	Screw Hex Hd.	1
42	23-1180	Latch Spacer	1
43	11-9760	Screw Thread Forming	1
*	26-9510	Replacement Stud Kit	1


*Not Illustrated

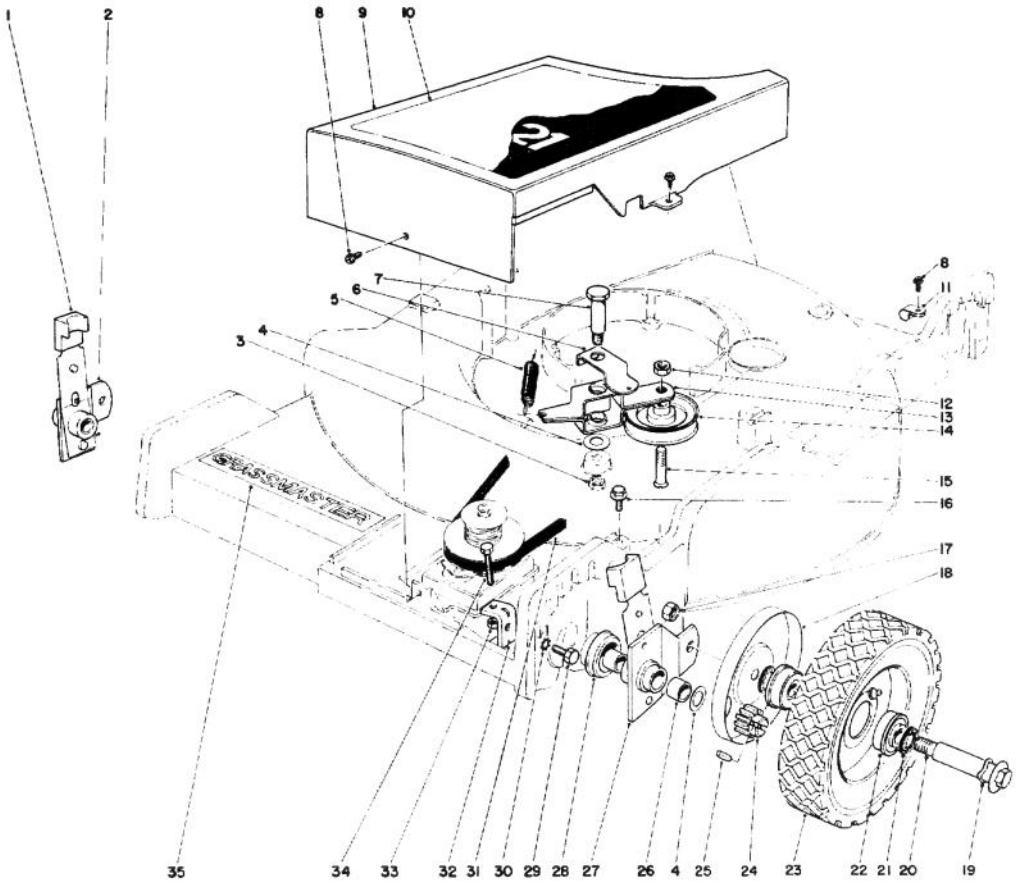

FRONT WHEEL AND PIVOT ARM ASSEMBLY (Model 20506 & 20696)

Ref. No.	Part No.	Description	No. Used
1	8-4220	Knob Arm	2
2	24-6040	Pivot Arm R.H. (Incl. Ref.#26)	1
3	32146-2	Locknut	1
4	18-9810	Thrust Washer	3
5	23-0530	Tension Spring	1
6	23-0100	Idler Bracket Lever	1
7	23-0310	Shoulder Bolt	1
8	12-5450	Screw Special	4
9	23-0510	Belt Cover	1
10	23-0840	Decal – Belt Cover	1
11	2412-52	Cable Clamp	1
12	3219-3	Hex Nut	1
13	23-0440	Idler Bracket	1
14	23-0570	Idler Pulley	1
15	23-0850	Screw Low Head	1
16	32144-11	Screw Hex Hd.	2
17	32146-12	Locknut	2
18	23-0280	Wheel Cover	2


Ref. No.	Part No.	Description	No. Used
19	3290-393	Wave Washer	2
20	26-4430	Wheel Bolt Front	2
21	26-7500	Felt Washer	4
22	251-180	Bearing	4
23	26-3010	Wheel & Tire Assembly (Incl. Ref. #22)	2
24	18-9690	Pinion Gear	2
25	3284-3	Coil Pin	2
26	256-206	Bushing	4
27	24-6050	Pivot Arm L.H. (Incl. Ref.#26)	1
28	23-0380	End Cap	2
29	322-5	Hex Hd. Capscrew	1
30	3255-8	Lockwasher	1
31	23-0220	V-Belt	1
32	23-0540	Bracket – Gear Box	1
33	32146-17	Jam Nut	1
34	23-0640	Screw	1
35	23-0930	Decal – Grassmaster	1

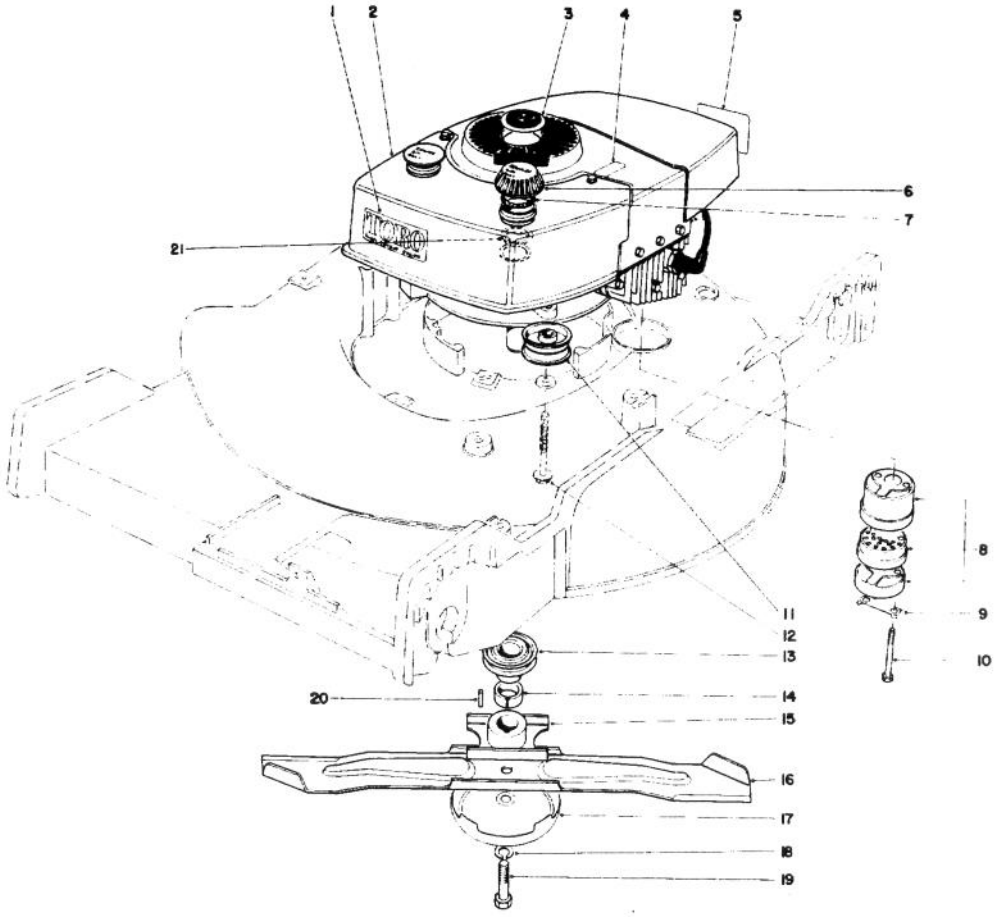

ENGINE ASSEMBLY (Model 20506)

Ref. No.	Part No.	Description	No. Used
1	23-1260	Decal - High Torque	1
2	221-486	Engine (TNT120-12003)	1
3	23-0600	Plug Button	1
4	25-1050	Decal - Fingertip Lockout	1
5	20-2710	Decal - Maintenance	1
6	20-2860	Gas Cap Assy. (Incl. # 7 & 21)	1
7	2210-144	Gasket	2
8	5-4769	Muffler Assy. (Incl. # 9 & 10)	1
9	3-5094	Locking Clip	1
10	321-20	Screw Hex Hd.	2
11	24-6510	Idler Pulley	1
12	11-0580	Screw	3
13	24-6580	Pulley Driver	1


Ref. No.	Part No.	Description	No. Used
14	24-8880	Spacer Pulley	1
15	24-6560	Blade Retainer	1
16	26-0880	Blade	1
17	8-4240	Anti Scalp Cup	1
18	3253-22	Lockwasher	1
19	23-0080	Screw Blade	1
20	21-5070	Key Square	1
21	2210-143	Baffle	1

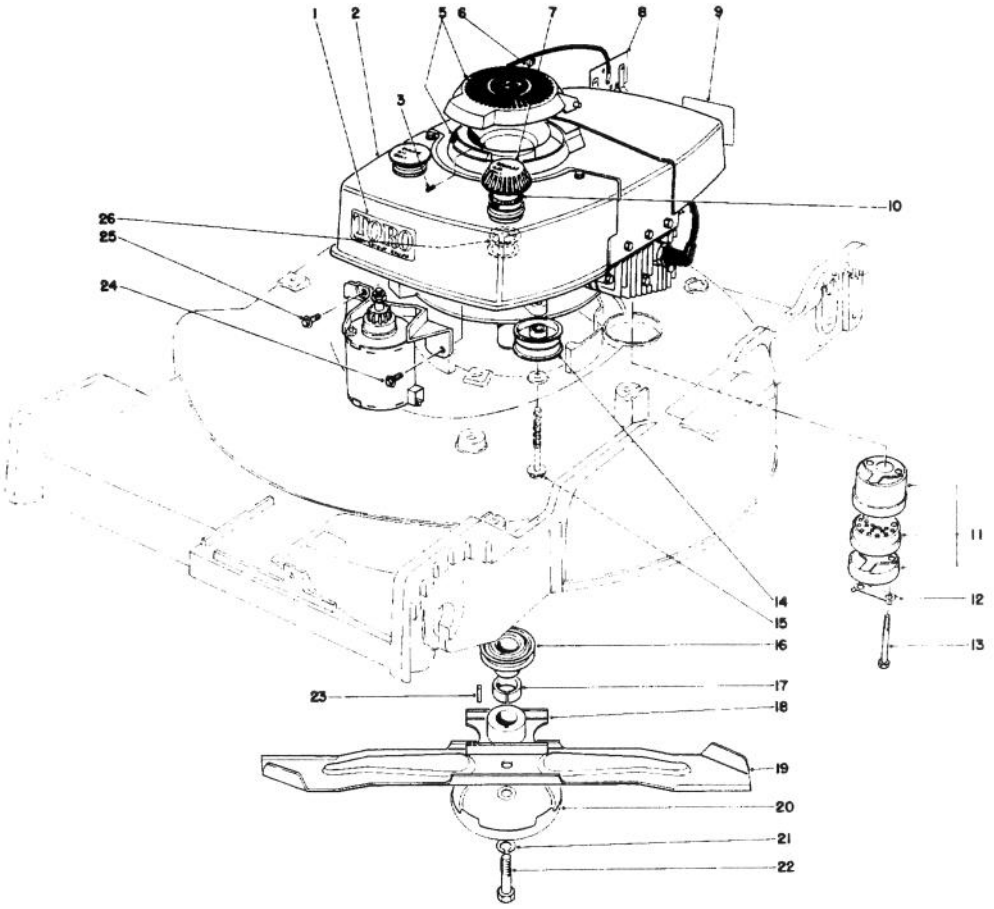

ENGINE ASSEMBLY (Model 20696)

Ref. No.	Part No.	Description	No. Used
1	23-1260	Decal – High Torque	1
2	221-485	Engine (TNT 120-12004)	1
3	32121-90	Spring Pin	1
5	25-2110	Cover Assembly	1
6	25-1570	Clip Wire	2
7	20-2860	Gas Cap Assembly (Incl. Ref. # 10 & 26)	1
8	24-9770	Switch and Junction Box	1
9	20-2710	Decal Maintenance	1
10	2210-144	Gasket	2
11	5-4769	Muffler Assembly (Incl. Ref. # 12 & 13)	1
12	3-5094	Locking Clip	1
13	321-20	Screw Hex Hd.	2
14	24-6510	Idler Screw	1

Ref. No.	Part No.	Description	No. Used
15	11-0580	Screw	3
16	24-6580	Driver Pulley	1
17	24-8880	Spacer Pulley	1
18	24-6560	Blade Retainer	1
19	26-0880	Blade	1
20	8-4240	Anti Scalp Cup	1
21	3253-22	Lockwasher	1
22	23-0080	Screw Blade	1
23	21-5070	Square Key	1
24	12-3270	Screw Special	1
25	11-9760	Screw Special	1
26	2210-143	Baffle	1

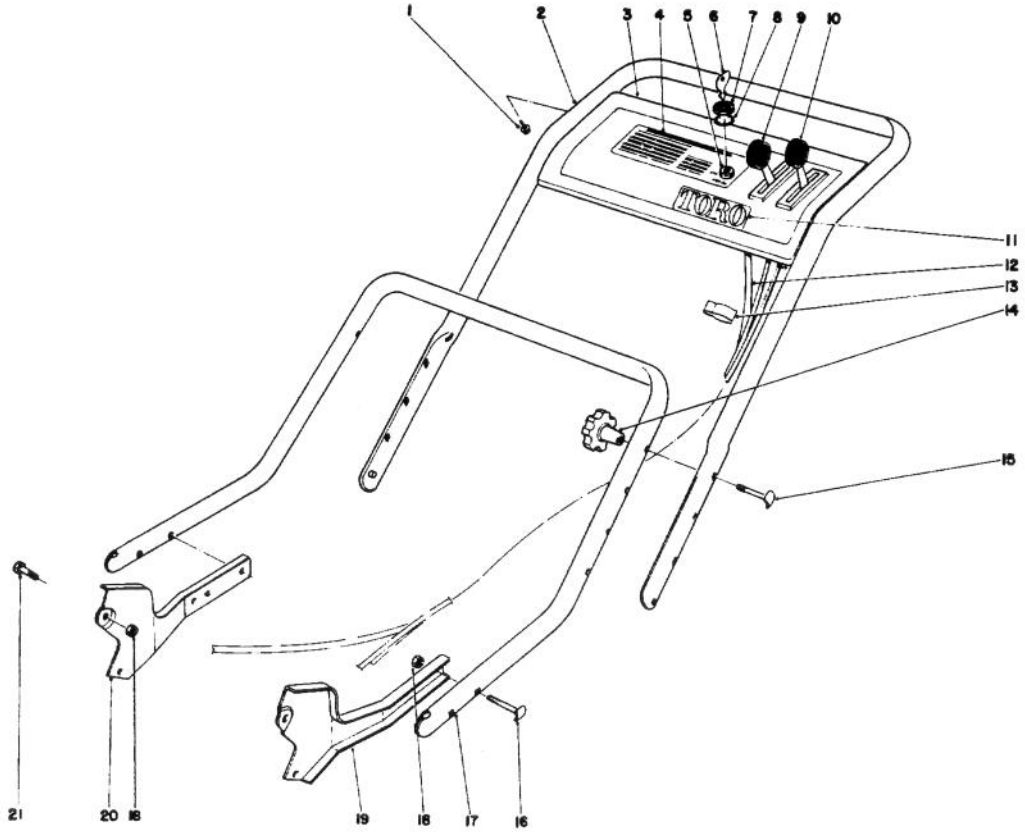


HANDLE ASSEMBLY (Model 20506)

Ref. No.	Part No.	Description	No. Used
1	32104-76	Screw Self Tapping	4
2	23-0580	Upper Handle	1
3	25-0390	Control Plate	1
4	23-0770	Decal - Control Plate	1
5	23-0650	On Off Switch	1
6	218-412	Key (Set of 2)	1
7	218-461	Hex Nut	1
8	3254-5	Lockwasher	1
9	20-9780	Speed Control	1
10	25-1030	Control Traction	1
11	20-4690	Decal Toro	1

Ref. No.	Part No.	Description	No. Used
12	23-0820	Harness Wiring	1
13	218-465	Clip Conduit	2
14	19-4050	Knob Handle Release	2
15	6-6330	Screw - Handle	2
16	23-9140	Screw - Handle	4
17	25-2230	Lower Handle	1
18	32146-5	Nut	8
19	25-2220	Latch Handle L.H.	1
20	25-2210	Latch Handle R.H.	1
21	322-4	Hex Hd. Capscrew	4
*	26-7270	Loose Parts Bag	1

* Not Illustrated

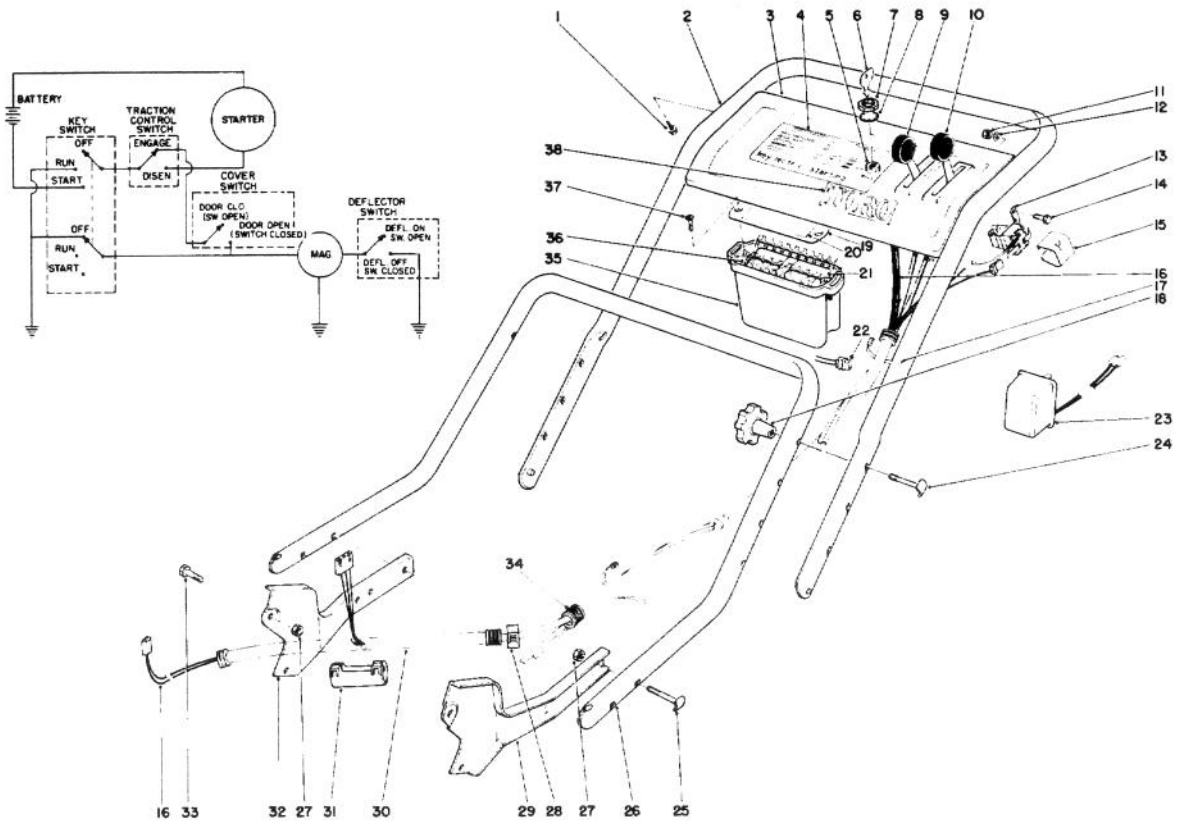


HANDLE ASSEMBLY (Model 20696)

Ref. No.	Part No.	Description	No. Used
1	32104-76	Self Tapping Screw	4
2	23-0580	Upper Handle	1
3	23-0590	Control Plate	1
4	25-1820	Decal – Control Plate	1
5	23-0660	Starter Switch	1
6	218-412	Key	2
7	3254-5	Lockwasher	1
8	218-461	Hex Nut	1
9	20-9780	Speed Control	1
10	25-1170	Traction Control	1
11	3296-9	Hex Nut	2
12	3256-21	Washer	2
13	24-9760	Safety Switch	1
14	3290-124	Hex Hd. Capscrew	2
15	25-1590	Switch Cover	1
16	25-0100	Wiring Harness	1
17	3290-378	Cable Tie	4
18	19-4050	Knob – Handle Release	2
19	6-8230	Cover – Battery Pack	1
20	25-4020	Decal – Battery	1

Ref. No.	Part No.	Description	No. Used
21	24-7760	Battery Pack	1
22	11-3790	Plug & Wire Assembly	1
23	22-4710	Battery Charger	1
24	6-6330	Handle Screw	2
25	23-9140	Handle Screw	4
26	25-2230	Lower Handle	1
27	32146-5	Nut	8
28	2412-48	Ring Fitting	5
29	25-2220	Latch Handle L.H.	1
30	25-1180	Lower Wiring Harness Cover	1
31	2412-49	Breakout Fitting	1
32	25-2210	Latch Handle R.H.	1
33	322-4	Capscrew	4
34	25-1190	Upper Wiring Harness Cover	1
35	6-9750	Container – Battery Pack	1
36	6-8320	Spacer – Battery	1
37	32104-93	Self Tapping Screw	2
38	20-4690	Decal – Toro	1
*	5-3556	Starter Rope	1
*	25-3770	Loose Parts	1

*Not Illustrated

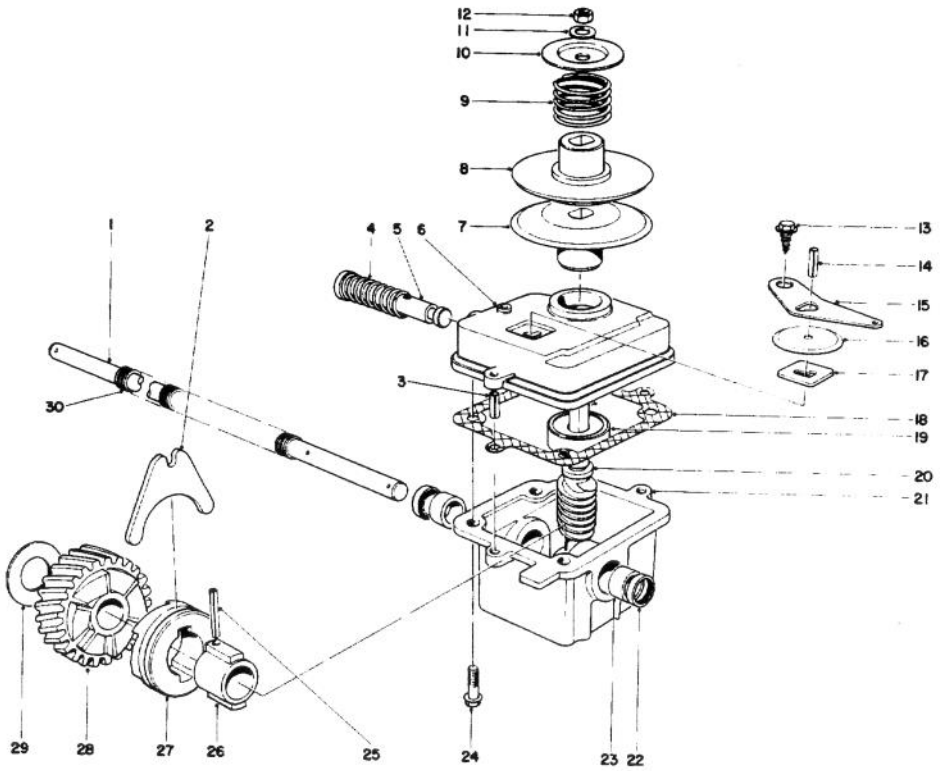


GEAR CASE ASSEMBLY (Model 20506 & 20696)

Ref. No.	Part No.	Description	No. Used
1	24-7740	Drive Shaft	1
2	5-3247	Shifter Fork	1
3	32121-1	Roll Pin	2
4	3-0731	Spring	1
5	5-3248	Shifter Rod	1
6	5-3283	Cover	1
7	23-0290	Pulley Half Lower	1
8	23-0300	Pulley Half Upper	1
9	23-0230	Spring Compression	1
10	23-0270	Spring Retainer	1
11	3256-16	Washer	1
12	32153-4	Locknut	1
13	32140-64	Self Tapping Screw	1
14	32121-23	Roll Pin	1
15	5-3252	Shifter Arm	1
16	3-2615	Transmission Dust Cover	1

Ref. No.	Part No.	Description	No. Used
17	3-0681	Latch Plate	1
18	3-0734	Gasket - Gear Case	1
19	251-144	Ball Bearing	1
20	23-0520	Shaft-Worm	1
21	5-4459	Gear Case (Incl. Ref. #22 & 23)	1
22	253-86	Oil Seal	2
23	256-110	Bushing	2
24	11-9760	Screw	4
25	32121-88	Coil Pin	1
26	3-0721	Sleeve	1
27	19-5660	Clutch Jaw	1
28	18-9740	Helical Gear	1
29	3-0724	Thrust Washer	1
30	24-8690	Cover - Drive Shaft	1
*	24-7730	Gear Case Assembly Complete (Incl. Item 1-29)	1

*Not Illustrated

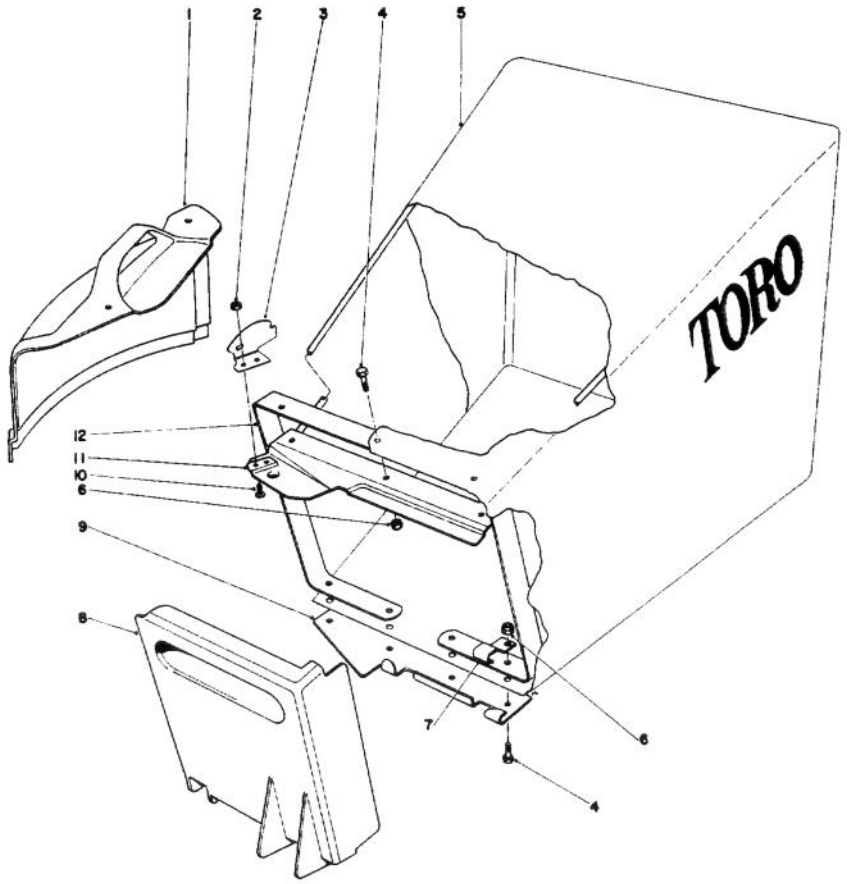


GRASS BAG ASSEMBLY (Model 20506 & 20696)

Ref. No.	Part No.	Description	No. Used
1	23-0170	Cover	1
2	32146-17	Locknut	2
3	23-1060	Latch - Bag	1
4	3290-321	Hex Hd. Machine Screw	7
5	6-1389	Grass Bag	1
6	32153-1	Locknut	7

Ref. No.	Part No.	Description	No. Used
7	23-5100	Bracket Support	1
8	23-1140	Door - Bag	1
9	23-1150	Bracket Door	1
10	25-3120	Screw	2
11	25-3230	Bag Frame	1
12	23-1110	Bag Support	1
*	6-5689	Grass Bagging Kit (Incl. Ref. 2 thru 12)	1

*Not Illustrated


ENGINE TECUMSEH MODEL NO. TNT 120-12003

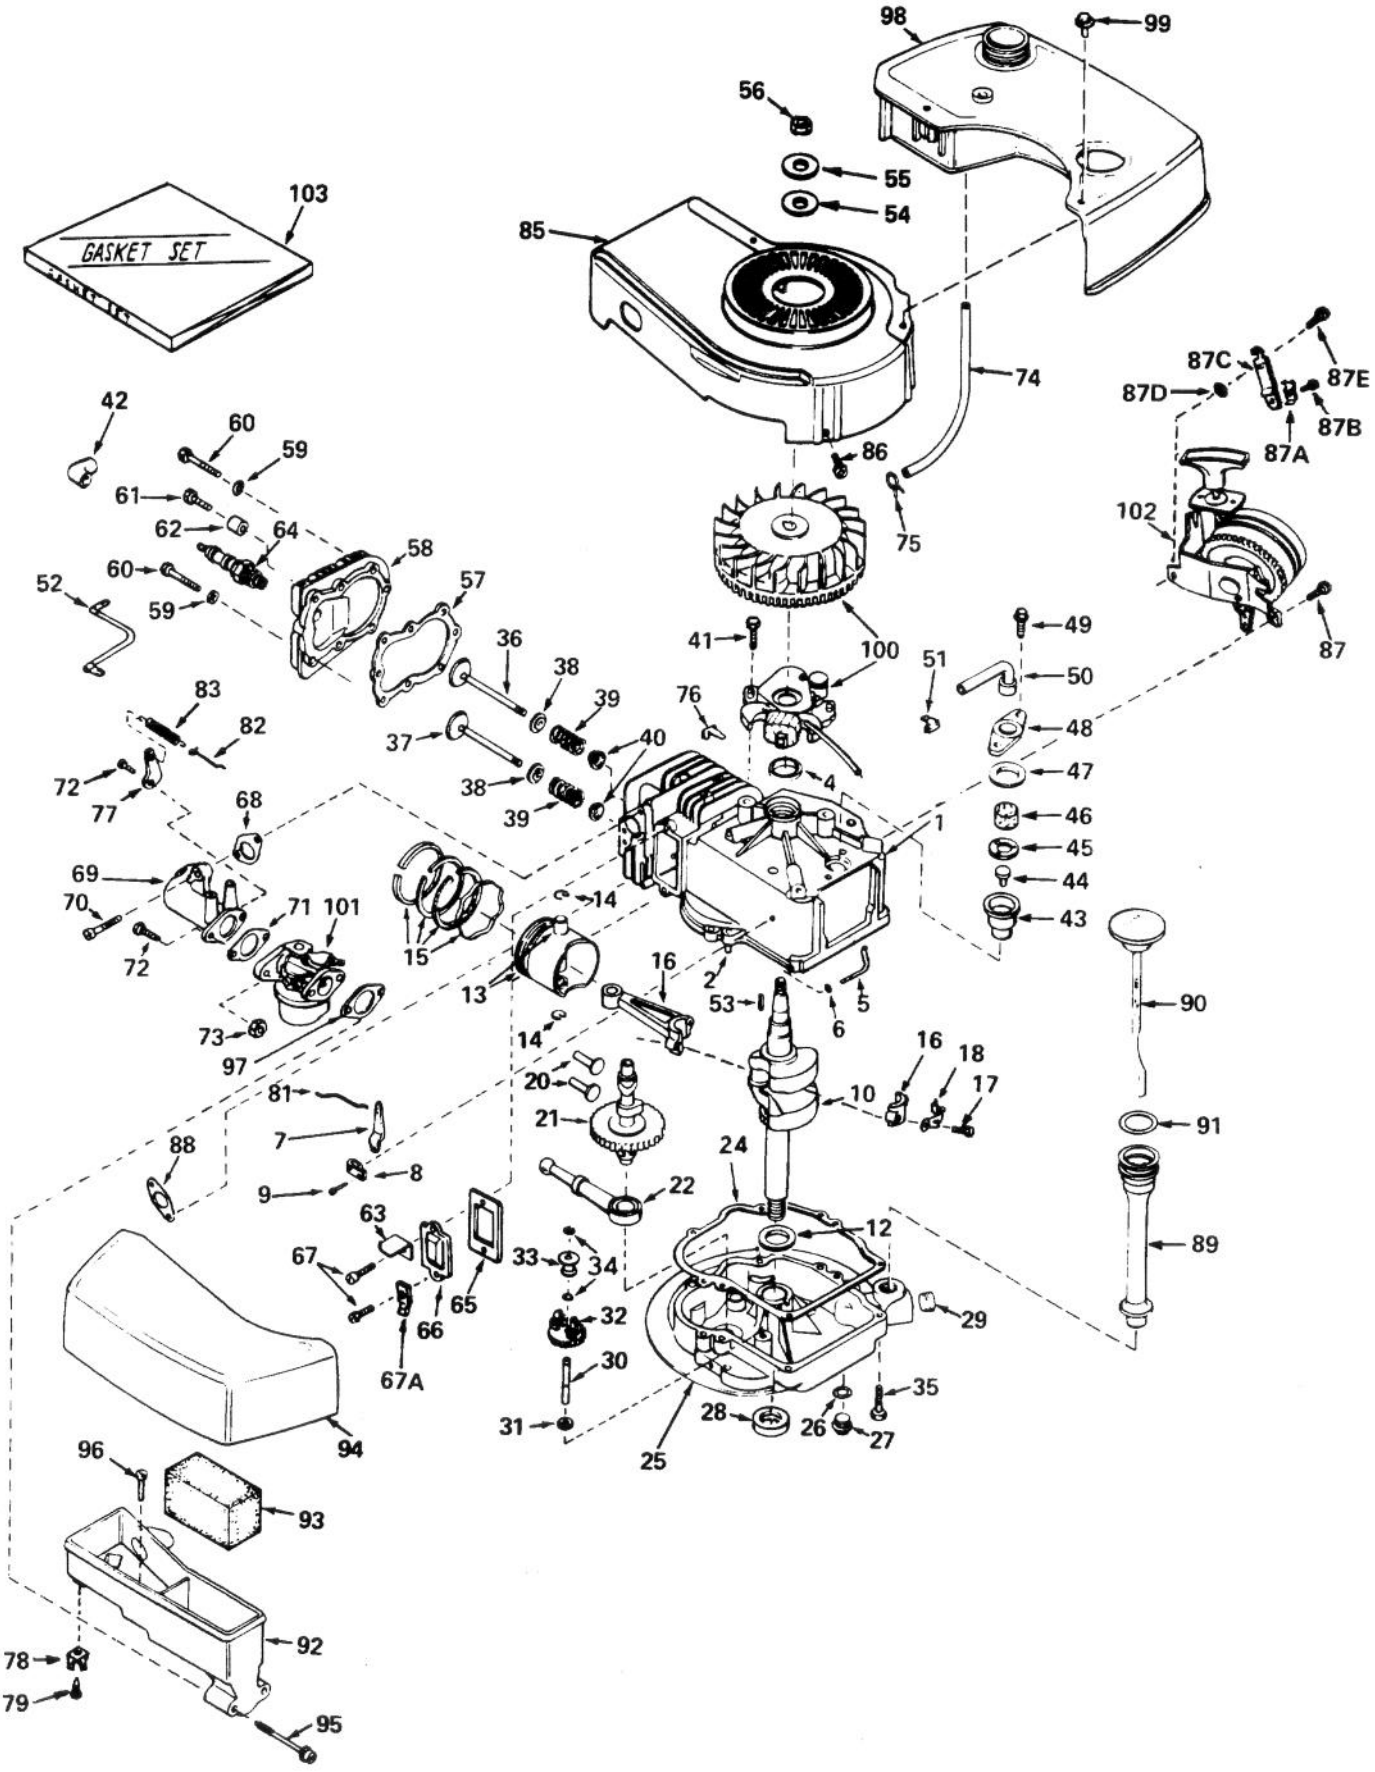

ENGINE TECUMSEH MODEL NO. TNT 120-12003


Ref. No.	Part No.	Description	No. Used
1	33899	Cylinder Assembly (Incl. Nos. 2, 4 & 87)	1
2	26727	Pin, Dowel	2
4	32600	Seal, Oil	1
5	30589	Rod, Governor (Incl. No. 6)	1
6	28277	Washer, Flat	1
7	32651	Lever, Governor	1
8	31335	Clamp, Governor Lever	1
9	650548	Screw, Hex Slotted Washer Hd.	1
10	34085	Crankshaft	1
12	32323	Washer, Thrust	1
13	33562	Piston & Pin Assembly (Incl. 2 of No. 14) (Std.)	1
13	33563	Piston & Pin Assembly (Incl. 2 of No. 14) (.010 Oversize)	1
13	33564	Piston & Pin Assembly (Incl. 2 of No. 14) (.020 Oversize)	1
14	20381	Ring, Piston Pin Retaining	2
15	33567	Ring Set, Piston (Std.)	1
15	33568	Ring Set, Piston (.010 Oversize)	1
15	33569	Ring Set, Piston (.020 Oversize)	1
16	32875	Rod Assembly, Connecting (Incl. Nos. 17 & 18)	1
17	32610	Bolt, Connecting Rod	2
18	32609	Plate, Lock	1
20	27241	Lifter, Valve	2
21	33553	Camshaft (Mech. Compression Release)	1
22	29914	Pump Assembly, Oil	1
24	*26750A	Gasket, Mounting Flange	1
25	33901	Flange Assembly, Mounting (Incl. Nos. 27 thru 30)	1
26	*28833	Gasket, Oil Drain Plug	1
27	27244	Plug, Oil Drain	1
28	27897	Seal, Oil	1
29	33885	Plug, Oil Drain	1
30	30574	Shaft, Mechanical Governor	1
31	30590A	Washer, Flat	1
32	33902	Gear Assembly, Governor	1
33	33903	Spool, Governor	1
34	29193	Ring, Retaining	2
35	650488	Screw, Hex Hd. Sems	6
36	29314A	Valve, Intake (Std.) (Incl. Nos. 38, 39 & 40)	1
36	29315B	Valve, Intake (1/32" Oversize) (Incl. Nos. 38, 39 & 40)	1
37	29313B	Valve, Exhaust (Std.) (Incl. Nos. 38, 39 & 40)	1
37	29315B	Valve, Exhaust (1/32" Oversize) (Incl. Nos. 38, 39 & 40)	1
38	31671	Cap, Upper Valve Spring	2
39	31672	Spring, Valve	2
40	31673	Cap, Lower Valve Spring	2
41	650489	Screw, Hex Hd. Sems w/Flatwasher	2
42	610118	Cover, Spark Plug	1
43	33731	Body, Breather Tube	1
44	33732	Valve, Check	1
45	33733	Baffle, Breather	1
46	33734	Element, Breather	1
47	*33735	Gasket, Breather	1
48	33737	Cover, Breather	1
49	650768	Screw, Hex Hd. w/Conical Washer	2
50	33886	Tube, Breather	1
51	33887	Clip, Breather Tube	1
52	33888	Wire, Ground	1
53	27247	Key, Flywheel	1
54	650791	Washer, Flat	1
55	650790	Washer, Belleville	1
56	650792	Nut, Flywheel	1
57	*33554	Gasket, Cylinder Head	1
58	33016	Head, Cylinder	1
59	26073	Washer	5
60	6021	Screw, Hex Hd. Cap	5
61	650697	Screw, Hex Hd. Cap	3
62	33892	Spacer	3
63	30593	Clip, Magneto Wire	1
64	33636	Plug, Spark (Champion J-8 or Equivalent)	1
65	*27234	Gasket, Valve Spring Cover	1
66	32755	Cover, Valve Spring Box	1
67	650128	Screw, Fil. Slotted Hd. Sems	2
67A	33932	Terminal	1
68	*30188	Gasket, Intake Pipe	1
69	33004	Pipe, Intake	1
70	650451	Screw, Fil. Flex Hd. Self-Locking	2
71	*31688	Gasket, Carburetor	1
72	6202	Screw, Hex Hd. Cap Sems	2
73	29752	Nut & Lockwasher	2
74	30705	Line, Fuel	1
75	26460	Clamp, Fuel Line	2
76	29443	Clip, Fuel Line	1
77	33086	Lever, R.P.M. Adjusting	1
78	33933	Terminal	1
79	29666	Screw, Phil. Fil. Hd. Self-Tap	1
81	33133	Link, Governor	1
82	33295	Link, Governor Spring	1
83	31361	Spring, Governor	1
85	33891	Housing, Blower	1
86	650497	Screw, Flex Pan Hd.	2
87	650737	Screw, Phil. Hex Hd. Sems, Self-Tap	3
87A	27793	Clip, Conduit	1
87B	28942	Screw, Slotted Hex Hd. Sems	1
87C	34099	Bracket	1
87D	27070	Washer	1
87E	650738	Screw, Phil. Hex Hd. Self-Tap	1
88	*30081	Gasket, Exhaust	1
89	33893	Tube, Oil Filler	1
90	33894	Dipstick, Oil (Incl. No. 91)	1
91	33590	"O" Ring	1
92	33895	Body, Air Cleaner	1
93	33896	Filter, Air	1
94	33897	Cover, Air Cleaner	1
95	650762	Screw, Fil. Hd. Mach. Sems	2
96	650784	Screw, Hex Hd. w/Flatwasher Thr'd Forming	1
97	*33051	Gasket, Air Cleaner	1
98	33904	Tank, Fuel	1
99	28763	Screw, Hex Washer Hd. Thr'd Forming	2
100	610755	Magneto (The complete magneto is not available as an assembly. The magneto no. is shown for reference purposes only. Order component parts individually, as shown in parts list.)	1
101	631831	Carburetor (Incl. No. 71)	1
102	590519	Starter, Side Mount	1
103	33906	Gasket Set (Incl. Items Marked *)	1

ENGINE TECUMSEH MODEL NO. TNT 120-12004

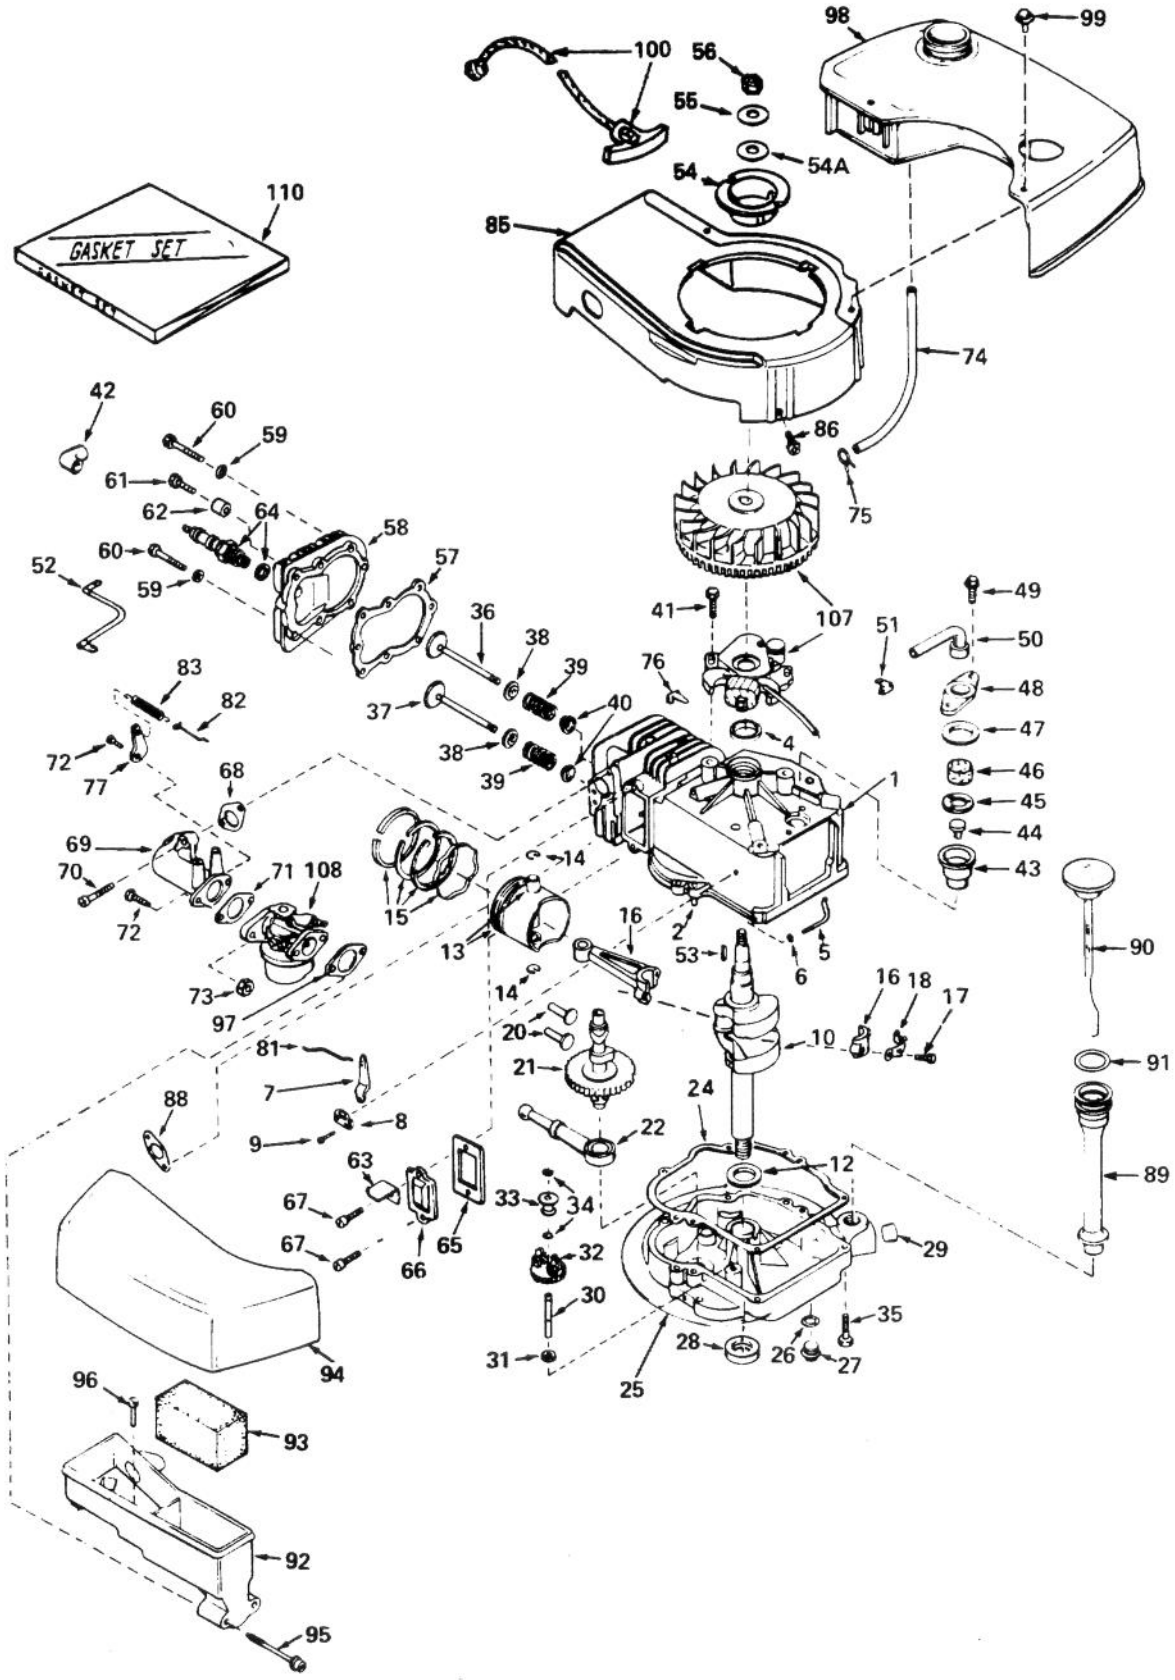

ENGINE TECUMSEH MODEL NO. TNT 120-12004

Ref. No.	Part No.	Description	No. Used
1	33899	Cylinder Assembly (Incl. Nos. 2, 4 & 87)	1
2	26727	Pin, Dowel	2
4	32600	Seal, Oil	1
5	30589	Rod, Governor (Incl. No. 6)	1
6	28277	Washer, Flat	1
7	32651	Lever, Governor	1
8	31335	Clamp, Governor Lever	1
9	650548	Screw, Hex Slotted Washer Hd.	1
10	34085	Crankshaft	1
12	32323	Washer, Thrust	1
13	33562	Piston & Pin Assembly (Incl. 2 of No. 14) (Std.)	1
13	33563	Piston & Pin Assembly (Incl. 2 of No. 14) (.010 Oversize)	1
13	33564	Piston & Pin Assembly (Incl. 2 of No. 14) (.020 Oversize)	1
14	20381	Ring, Piston Pin Retaining	2
15	33567	Ring Set, Piston (Std.)	1
15	33568	Ring Set, Piston (.010 Oversize)	1
15	33569	Ring Set, Piston (.020 Oversize)	1
16	32875	Rod Assembly Connecting (Incl. Nos. 17 & 18)	1
17	32610	Bolt, Connecting Rod	2
18	32609	Plate, Lock	1
20	27241	Lifter, Valve	2
21	33553	Camshaft (Mech. Compression Release)	1
22	29914	Pump Assembly, Oil	1
24	*26750A	Gasket, Mounting Flange	1
25	33901	Flange Assembly, Mounting (Incl. Nos. 27 thru 30)	1
26	*28833	Gasket, Oil Drain Plug	1
27	27244	Plug, Oil Drain	1
28	27897	Seal, Oil	1
29	33885	Plug, Oil Drain	1
30	30574	Shaft, Mech. Governor	1
31	30590A	Washer, Flat	1
32	33902	Gear Assembly, Governor	1
33	33903	Spool, Governor	1
34	29193	Ring, Retaining	2
35	650488	Screw, Hex Hd. Sems	6
36	29314A	Valve, Intake (Std.) (Incl. Nos. 38, 39 & 40)	1
36	29315B	Valve, Intake (1/32" Oversize) (Incl. Nos. 38, 39 & 40)	1
37	29313B	Valve, Exhaust (Std.) (Incl. Nos. 38, 39 & 40)	1
37	29315B	Valve, Exhaust (1/32" Oversize) (Incl. Nos. 38, 39 & 40)	1
38	31671	Cap, Upper Valve Spring	2
39	31672	Spring, Valve	2
40	31673	Cap, Lower Valve Spring	2
41	650489	Screw, Hex Hd. Sems w/flatwasher	2
42	610118	Cover, Spark Plug	1
43	33731	Body, Breather Tube	1
44	33732	Valve, Check	1
45	33733	Baffle, Breather	1
46	33734	Element, Breather	1
47	*33735	Gasket, Breather	1
48	33737	Cover, Breather	1
49	650768	Screw, Hex Hd. w/Conical Washer	2
50	33886	Tube, Breather	1
51	33887	Clip, Breather Tube	1
52	33888	Wire, Ground	1
53	27247	Key, Flywheel	1
54	32723	Pulley, Starter	1
54A	650791	Washer, Flat	1
55	650790	Washer, Belleville	1
56	650792	Nut, Flywheel	1
57	*33554	Gasket, Cylinder Head	1
58	33016	Head, Cylinder	1
59	26073	Washer	5
60	6021	Screw, Hex Hd. Cap	5
61	650697	Screw, Hex Hd. Cap	3
62	33892	Spacer	3
63	30593	Clip, Magneto Wire	1
64	33636	Plug, Spark (Champion J-8 or Equivalent)	1
65	*27234	Gasket, Valve Spring Cover	1
66	32755	Cover, Valve Spring Box	1
67	650128	Screw, Fil. Slotted Hd. Sems	2
68	*30188	Gasket, Intake Pipe	1
69	33004	Pipe, Intake	1
70	650451	Screw, Fil. Flex Hd. Self-locking	2
71	*31688	Gasket, Carburetor	1
72	6202	Screw, Hex Hd. Cap Sems	2
73	29752	Nut & Lockwasher	2
74	30705	Line, Fuel	1
75	26460	Clamp, Fuel Line	2
76	29443	Clip, Fuel Line	1
77	33086	Lever, R.P.M. Adjusting	1
81	33133	Link, Governor	1
82	33295	Link, Governor Spring	1
83	31361	Spring, Governor	1
85	33907	Housing, Blower	1
86	650497	Screw, Flex Pan Hd.	2
88	*30081	Gasket, Exhaust	1
89	33893	Tube, Oil Filler	1
90	33894	Dipstick, Oil (Incl. No. 91)	1
91	33590	"O" Ring	1
92	33895	Body, Air Cleaner	1
93	33896	Filter, Air	1
94	33897	Cover, Air Cleaner	1
95	650762	Screw, Fil. Hd. Mach. Sems	2
96	650784	Screw, Hex Hd. w/Flatwasher Thr'd Forming	1
97	*33051	Gasket, Air Cleaner	1
98	33904	Tank Fuel	1
99	28763	Screw, Hex Washer Hd. Thr'd Forming	2
100	590343	Rope Assembly, Starter	1
107	610900	Magneto (The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually as shown in parts list.)	1
108	631831	Carburetor (Incl. No. 71)	1
110	33906	Gasket Set (Incl. Items Marked *)	1

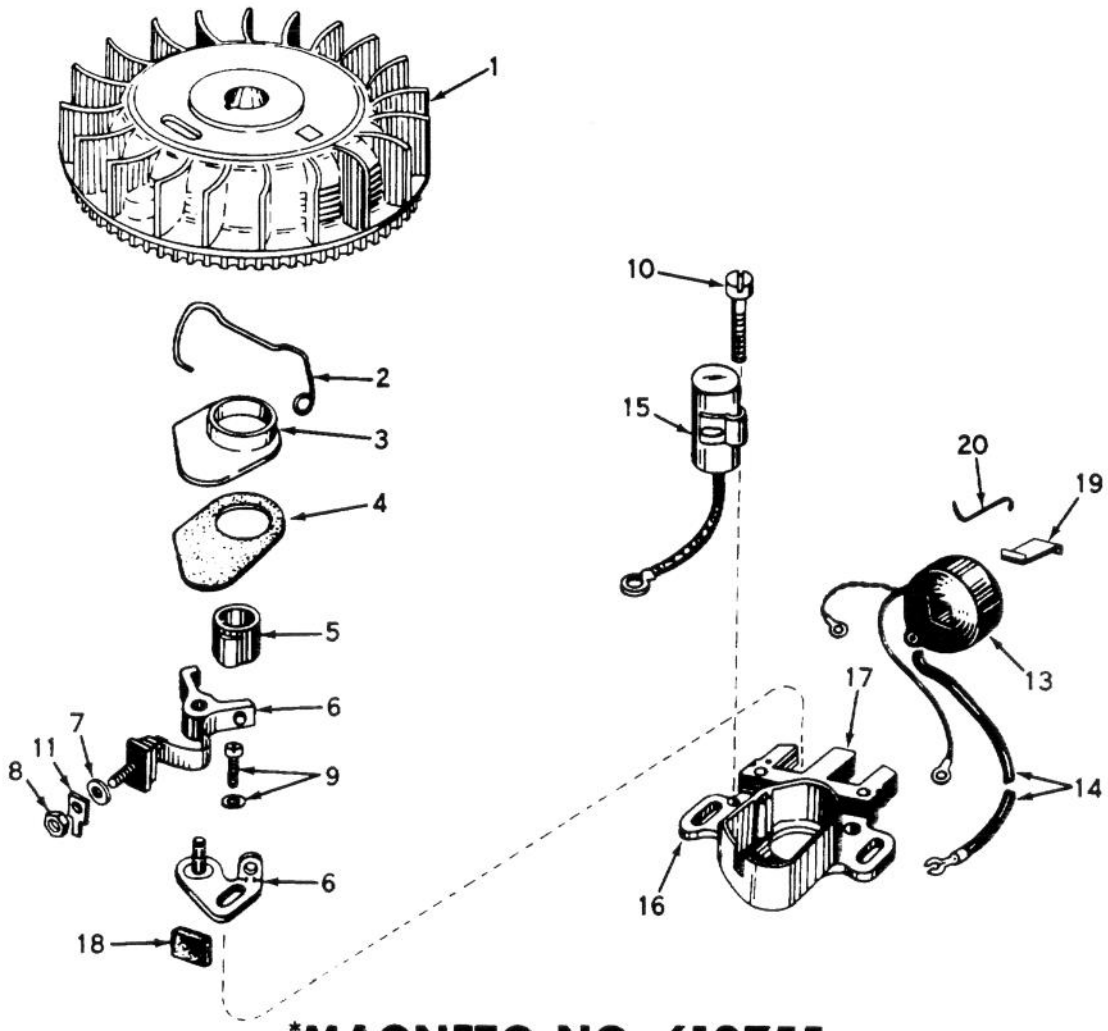


*MAGNETO NO. 610755

Ref. No.	Part No.	Description	No. Used
1	32517	Flywheel	1
2	30551	Spring, Breaker Box Dust Cover	1
3	30550	Cover, Breaker Box Dust	1
4	32052	Gasket, Dust Cover	1
5	30992	Cam, Breaker	1
6	30547A	Breaker Assy.	1
7	610385	Washer, Terminal	1
8	610408	Nut, Terminal	1
9	29181	Screw & Washer Assy., Breaker	1
10	610593	Screw, Condenser Fastening	1

Ref. No.	Part No.	Description	No. Used
11	33356	Tab, Ground Terminal	1
13	30560A	Coil Assy. (Incl. # 14)	1
14	30554	Wire, Ignition Lead	1
15	30548A	Condenser	1
16	30545	Core & Plate Group	1
17	30561A	Stator Assy. (Incl. Nos. 2, 3, 4, 6 thru 16, 18, 19 & 20)	1
18	30549	Felt, Cam Wiper	1
19	29629	Spring, Coil Wedge	1
20	31311	Clip, Coil Locking	1

*The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.

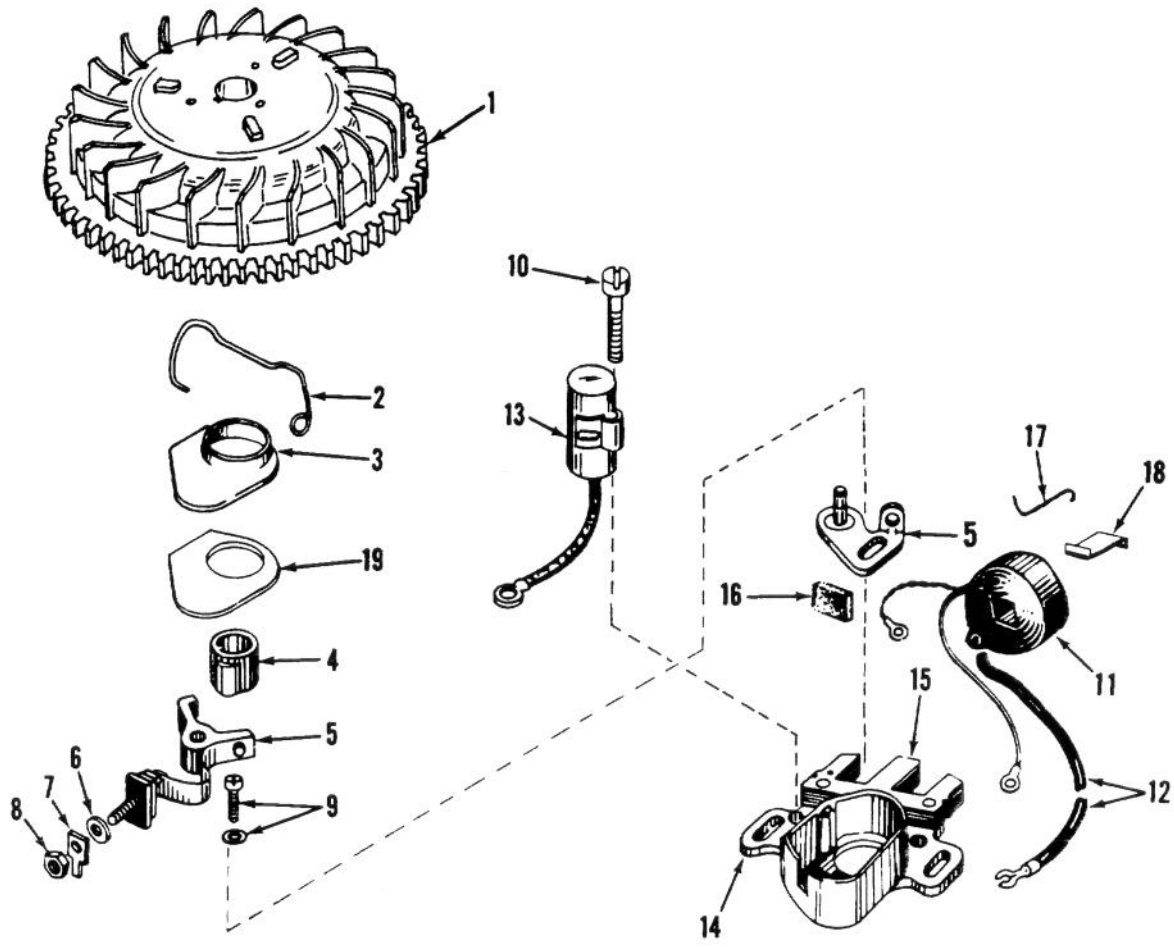


*MAGNETO NO. 610900

Ref. No.	Part No.	Description	No. Used
1	610899	Flywheel	1
2	30551	Spring, Breaker Box	1
3	30550	Cover, Breaker Box Dust	1
4	30992	Cam, Breaker	1
5	30547A	Contact Assembly, Breaker	1
6	610385	Washer, Terminal	1
7	33356	Tab, Ground Terminal	1
8	610408	Nut, Terminal	1
9	29181	Screw & Washer, Breaker	1
10	610593	Screw, Condenser Fastening	1

Ref. No.	Part No.	Description	No. Used
11	30560A	Coil Assy. (Incl. No. 12)	1
12	30554	Wire, Lead	1
13	30548A	Condenser	1
14	30545	Core & Plate	1
15	30561A	Stator Assy. (Incl. Nos. 2, 3, 5 thru 14 & 16 thru 19)	1
16	30549	Felt, Cam Wiper	1
17	31311	Clip, Coil Locking	1
18	29629	Spring, Coil Wedge	1
19	32052	Gasket, Dust Cover	1


*The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.

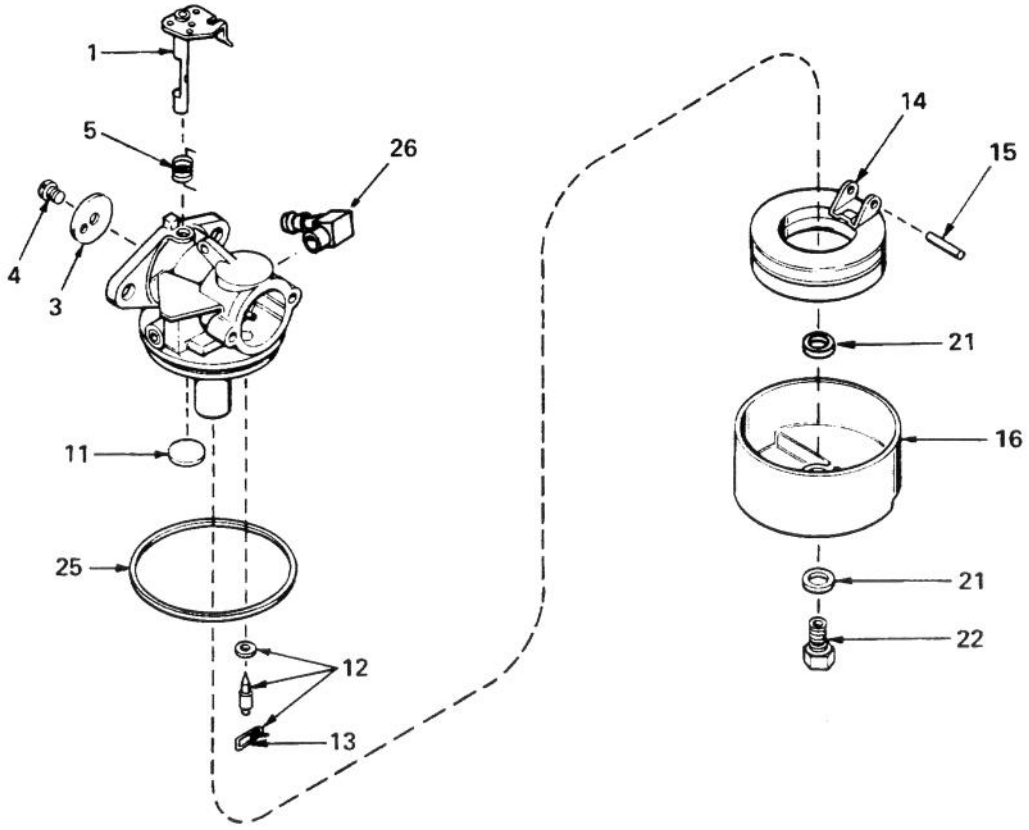

CARBURETOR NO. 631831

Ref. No.	Part No.	Description	No. Used
1	631615	Shaft & Lever Assy., Throttle	1
3	631616	Shutter, Throttle	1
4	650506	Screw	1
5	630731	Spring, Return	1
11	631027	Plug, Welch	1
12	631021	Inlet Needle, Seat & Clip Assy. (Incl. # 13)	1
13	631022	Clip, Inlet Needle	1


Ref. No.	Part No.	Description	No. Used
14	631023	Float, Carburetor	1
15	631024	Shaft, Float	1
16	631700	Bowl Float	1
21	631334	Gasket, Bowl-to-Body	2
22	631617	Nut, Float Bowl	1
25	631028	Gasket, Bowl-to-Body	1
26	631807	Fitting, Fuel Inlet	1

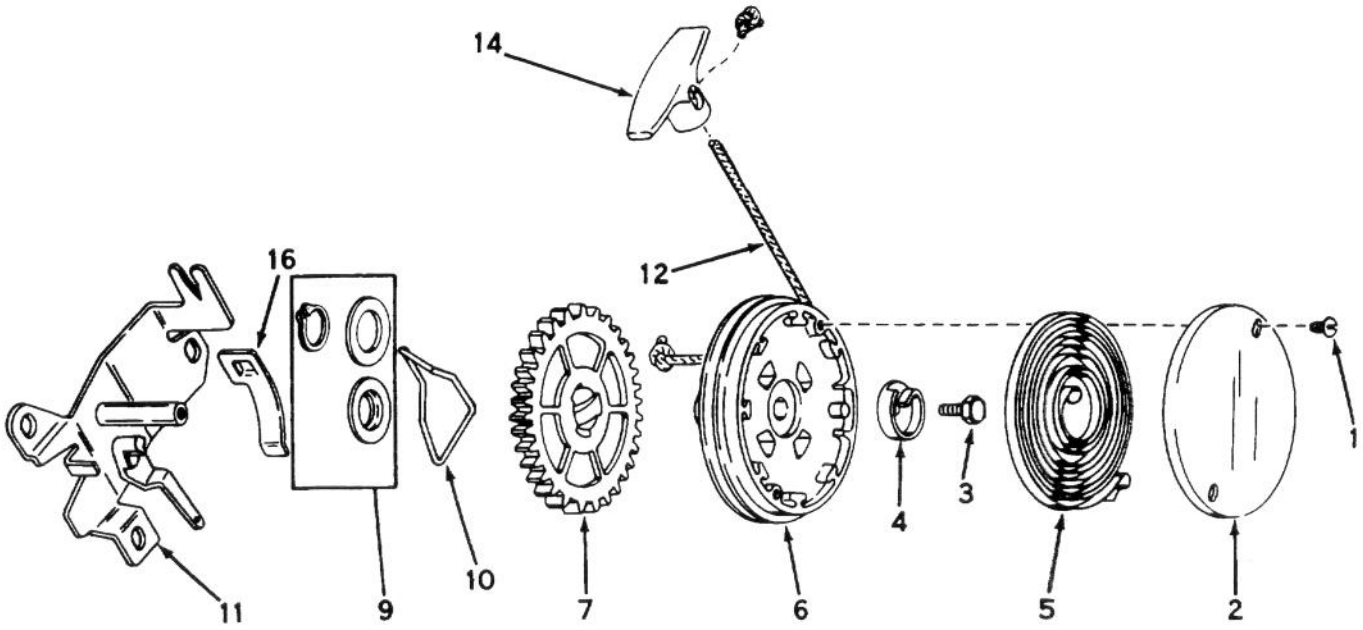

REWIND STARTER NO. 590519

Ref. No.	Part No.	Description	No. Used
1	590477	Screw, Cover	2
2	590431	Cover, Spring	1
3	590472	Screw, Hex Washer Hd. Taptite Left Hand Thread	1
4	590432	Hub, Spring	1
5	590433	Spring, Rewind	1
6	590434A	Pulley Assy. (Incl. # 9)	1
7	590435B	Gear	1

Ref. No.	Part No.	Description	No. Used
9	590470	Kit, Thrust Washer & Snap Ring	1
10	590438	Brake	1
11	590520	Bracket Assy., Mounting	1
12	590451A	Rope, Starter (Length 69" and 5/32" Diameter)	1
14	590452	Handle, Starter	1
16	590446	Clip, Rope	1

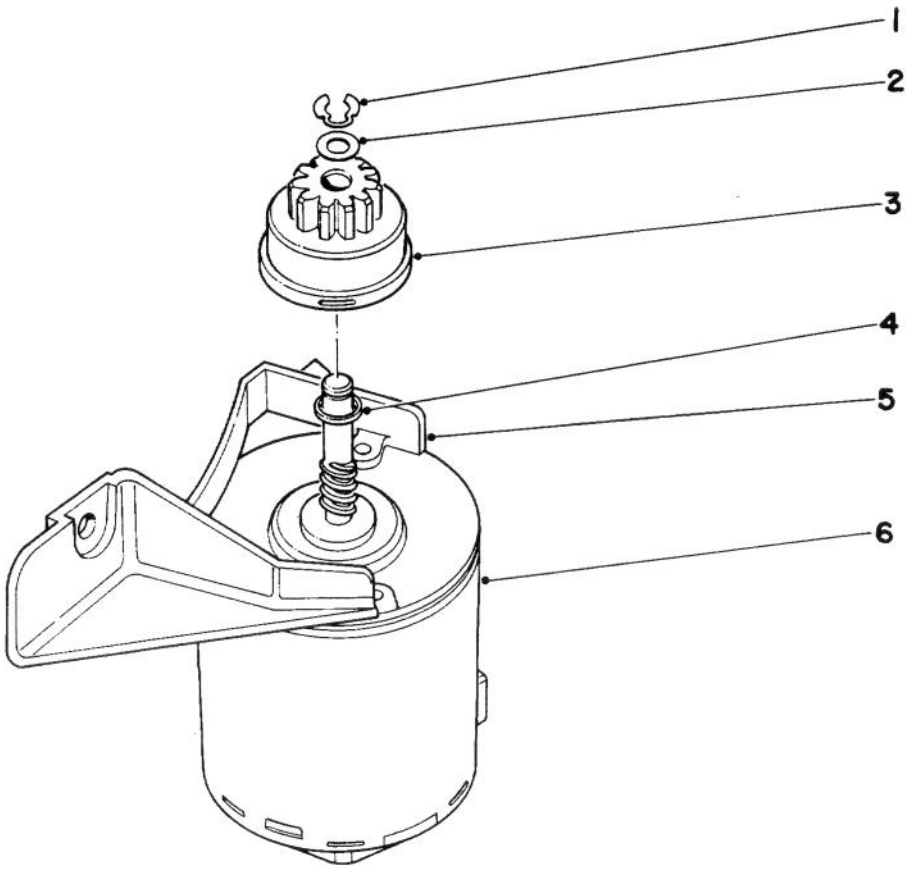

STARTER MOTOR

Ref. No.	Part No.	Description	No. Used
1	32151-47	Retaining Ring	1
2	25-3970	Washer	1
3	25-3960	Pinion Assembly	1

Ref. No.	Part No.	Description	No. Used
4	23-9590	Spacer	1
5	218-472	Mounting Bracket	1
6	25-3950	Starter Motor	1
*	25-3940	Starter Motor Assembly (Incl. Ref. # 1-6)	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Mower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on left side of the mower housing. In any correspondence concerning the mower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information.

1. Model and serial numbers of the mower.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

Keep Your TORO All Toro Genuine TORO PARTS & ACCESSORIES ***Insist on Genuine Toro Parts***

THE TORO PROMISE

It is Toro's policy to design and produce TORO products to provide our customers with a high level of performance and durability in normal operation. Our products, however, are produced in high volume, and it is inevitable that occasionally a unit will reach a customer with a defect in materials or workmanship which causes the unit to fall below the normal high level of TORO performance. Invariably, such a defect will be noticed in a residential product within one year after purchase. Recognizing this possibility, Toro has established a simple guarantee policy and procedure that is intended to assure customer satisfaction. This guarantee statement is as follows:

The Toro Promise

A Full One Year Warranty

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product . . . . . 1 year
Residential Products Used Commercially . . 45 days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should the customer feel that a product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer or Distributor, but preferably the dealer or distributor from whom you purchased the product.
2. He will instruct you to either return the product to him, or tell you the name and address of your nearest Authorized TORO Service Dealer or Distributor if the product is to be returned to such a dealer or distributor.
3. Bring the product and your original sales slip, or other evidence of purchase date, to the service dealer or distributor.
4. The servicing dealer or distributor will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to the customer.

If for any reason the customer is dissatisfied with the dealer's or distributor's analysis of the defect or the service he performs, he can contact us. Write:

TORO "Customer Care" Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

MAINTENANCE RECORD

Date	Hours Used	Oil Change	Air Cleaner Service	Lubrication	Winter Storage	Spring Service	Spark Plug Gap