Form No. 3327–738

Stump Grinder

Dingo® Attachment

Model No. 22429—220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002
All Rights Reserved

Contents

Description	Page
Frame and Tooth Assembly	3
Hydraulic Motor and Brake Assembly	4
Hydraulic Cylinder Assembly No. 104–6094	5
Shield and Guard Assembly	6

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

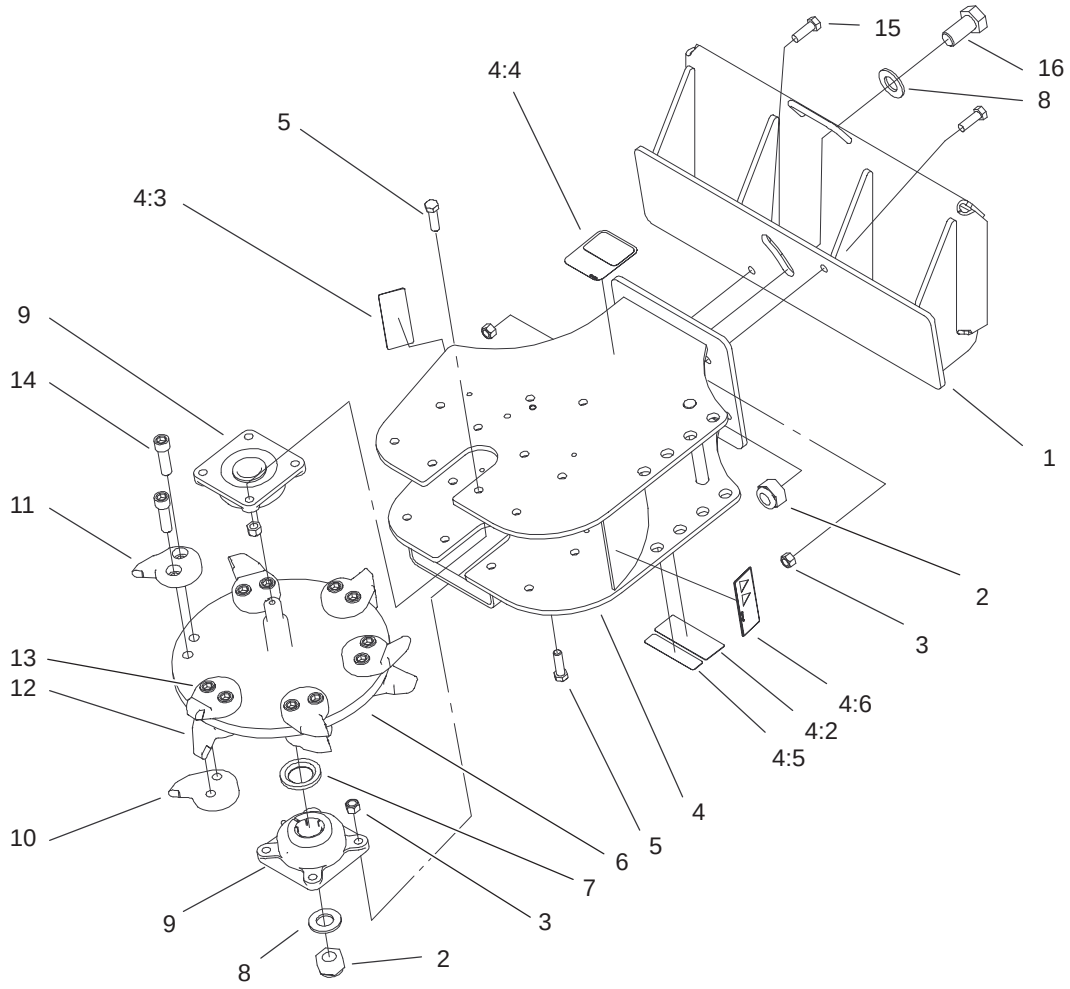

Sheet No.: 2

Frame and Tooth Assembly

Ref. No.	Part No.	Qty.	Description
1	104–2001–03	1	Grinder Mount ASM
2	104–2024	2	Nut–Lock
3	3296–23	10	Nut–Lock, NI
4	104–5807	1	Grinder Frame ASM
4:2	100–4708	1	Decal–Warning
4:3	93–7321	1	Decal–Danger
4:4	93–7340	1	Decal–Toro
4:5	93–9854	1	Decal–Warning
4:6	104–5850	1	Decal–Warning
5	325–7	8	Screw–HH
6	104–2025–03	1	Wheel–Cast
7	104–2036	1	Washer–Bearing
8	3256–62	2	Washer–Flat
9	104–2026	2	Bearing
10	104–2028	3	Tooth
11	104–2029	3	Tooth
12	104–2030	3	Tooth
13	104–2031	3	Tooth
14	3273–38	12	Screw–HSH
15	325–6	2	Screw–HH
16	104–2035	1	Bolt

Ref. No.	Part No.	Qty.	Description

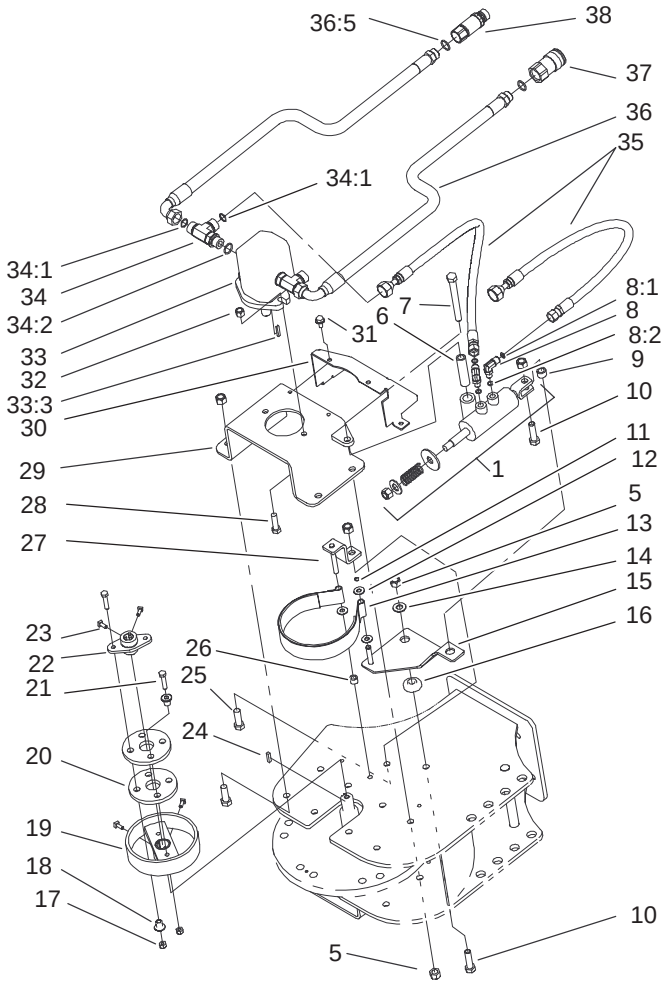

Sheet No.: 3

Hydraulic Motor and Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	104–6094	1	Cylinder ASM
5	3296–23	7	Nut–Lock, NI
6	104–5801	1	Spacer–Cylinder
7	325–18	1	Screw–HH
8	340–97	2	Fitting–HYD, 90°
8:1	237–22	1	O–Ring
8:2	237–78	1	O–Ring
9	104–5825	1	Spacer–Clevis
10	325–7	2	Screw–HH
11	32120–46	1	Ring–Retaining
12	3256–3	3	Washer–Flat
13	104–2038	1	Brake Band ASM
14	3256–26	1	Washer–Flat
15	104–2042–03	1	Brake Bracket ASM
16	104–1991	1	Spacer–Brake
17	3296–29	4	Nut–Lock, NI
18	71–4411	4	Spacer
19	104–2037	1	Drum–Brake
20	44–2230	2	Coupling–Rubber
21	322–7	4	Screw–HH
22	104–5830	1	Hub/Spacer ASM
23	3241–5	4	Screw–Set
24	10–7070	1	Key–Square
25	325–6	4	Screw–HH
26	52–2480	1	Spacer–Wheel
27	104–5800–03	1	Brake Rod ASM

Ref. No.	Part No.	Qty.	Description
28	324–6	2	Screw–HH
29	104–5806–03	1	Motor Mount ASM
30	104–5836–03	1	Cover–Brake
31	32144–14	4	Screw–HWH
32	3296–48	2	Nut–Lock NI
33	104–2010	1	Motor–HYD
*33:1	100–4629	1	Seal Kit
*33:2	104–5838	1	Shaft–Motor
33:3	104–5839	1	Key–Square
34	340–22	2	Adapter
34:1	237–65	2	O–Ring
34:2	237–80	1	O–Ring
35	104–5835	2	Hydraulic Hose ASM
36	104–2034	2	Hose–Hydraulic
36:5	237–80	1	O–Ring
37	100–4234	1	Coupler–Face, Flush
*37:1	100–6119	1	Kit–Seal
38	100–4701	1	Nipple–Connect, Pressure
*38:1	100–6120	1	Seal Kit

* Not illustrated

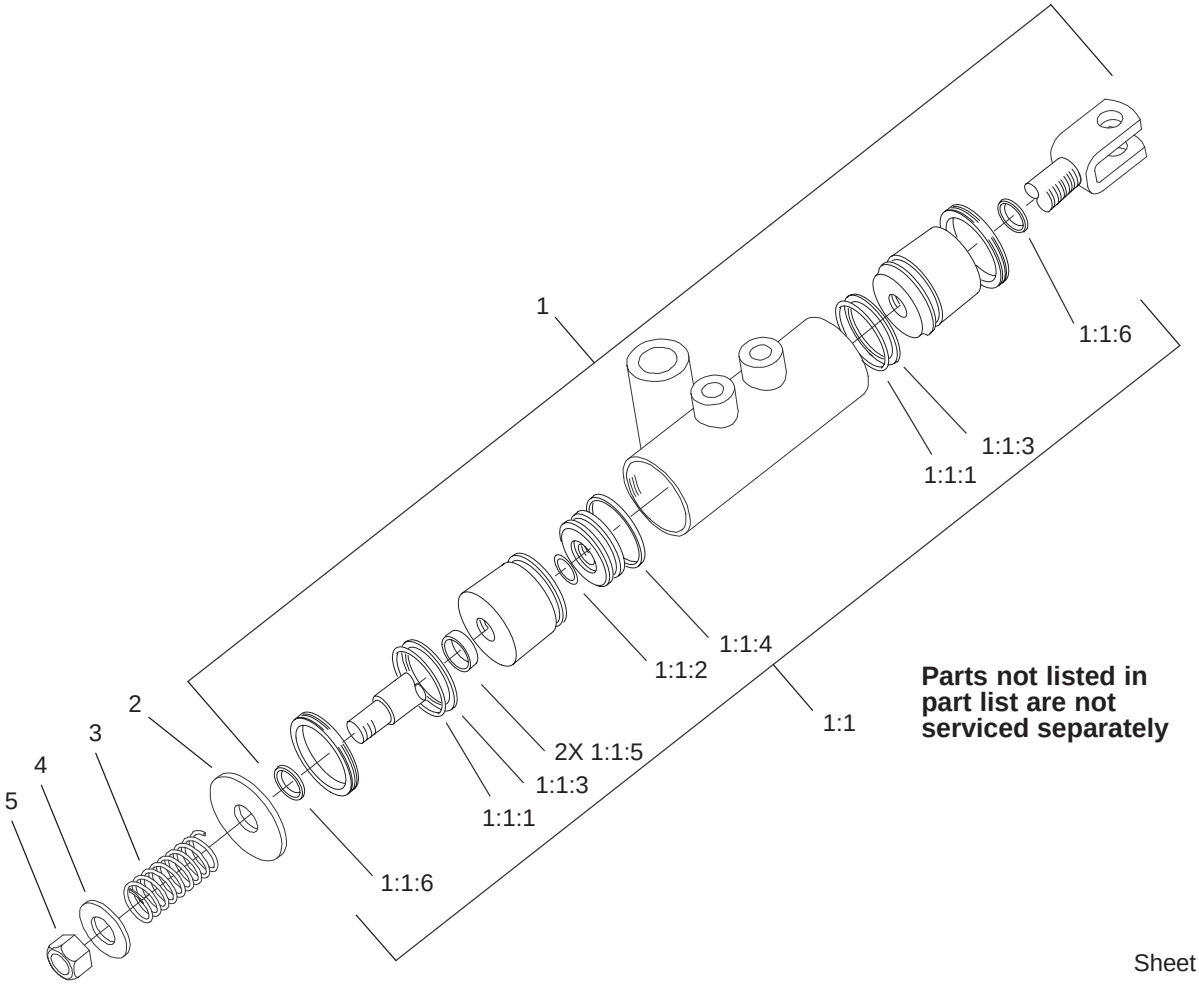

Parts not listed in part list are not serviced separately

Sheet No.: A1

Hydraulic Cylinder Assembly No. 104–6094

Ref. No.	Part No.	Qty.	Description
1	104–6093	1	Hydraulic Cylinder ASM
1:1	104–5847	1	Kit–Seal
☆1:1:1		2	O–Ring
☆1:1:2		1	O–Ring
☆1:1:3		2	O–Ring, Backup
☆1:1:4		1	T–Seal
☆1:1:5		2	Seal–Rod
☆1:1:6		2	Seal–Dust
2	104–5837	1	Washer–Cylinder
3	66–9010	1	Spring–Compression
4	3256–82	1	Washer–Flat
5	3296–29	1	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately

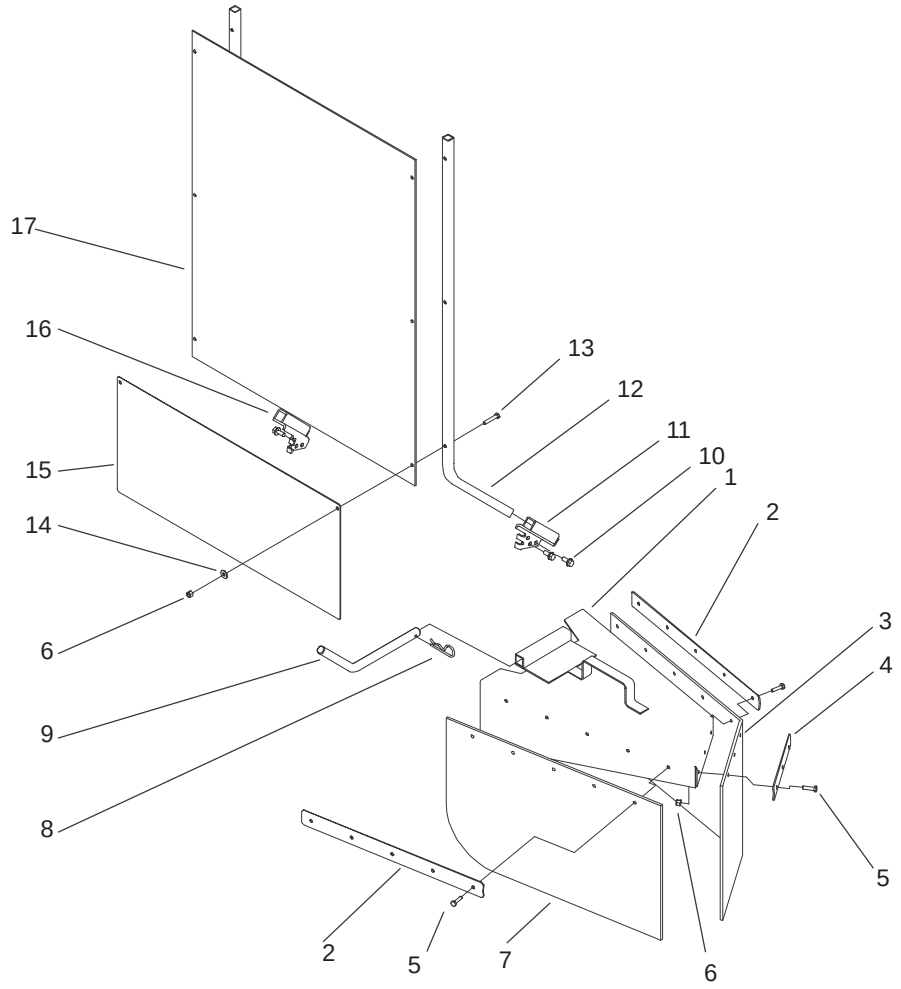

Sheet No.: 4

Shield and Guard Assembly

Ref. No.	Part No.	Qty.	Description
1	104–2012–03	1	Chipper Guard ASM
2	104–2019–03	2	Clamp–Skirt
3	104–2022	1	Guard–Skirt, Rear
4	104–2021–03	1	Clamp–Skirt
5	321–6	13	Screw–HH
6	3296–8	21	Nut–Lock, NI
7	104–2023	1	Guard–Skirt, Front
8	3290–343	1	Pin–Hair
9	104–2018	1	Pin–Hinge
10	32144–70	4	Screw–HH
11	104–5817–03	1	Bracket–Support, LH
12	104–5815–03	2	Support–Shield
13	321–9	6	Screw–HH
14	3256–78	6	Washer–Flat
15	104–5820	1	Skirt–Protector
16	104–5818–03	1	Bracket–Support, RH
17	104–5827	1	Shield–Lexan

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								

TORO®