Form No. 3449-194 Rev F

TORO®

Count on it.

Parts Catalog

60in Z Master® Professional MyRide® 2000 Series

Riding Mower

Model No. 77293—Serial No. 410200000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3449-194 F

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly 4
Roll-Over Protection System Assembly No. 144-1849 6
Transaxle Assembly 8
LH Transaxle Assembly No. 140-9489 10
RH Transaxle Assembly No. 140-9490 12
Control Console and Guard Assembly 14
Fuel Assembly 16
Fuel Tank Assembly No. 126-4724 18
Motion Control Assembly 20
Left and Right Control Arm Assembly 22
Caster Wheel and Fork Assembly 24
Fork and Caster Wheel Assembly 26
Rear Wheel Assembly 28
Electrical Assembly 30
Wire Harness Assembly No. 126-5803 32
Deck Lift Assembly 34
Deck Strut Assembly No. 126-8365 36
Engine, Clutch and Muffler Assembly 38
Suspension Platform and Seat Assembly 40
Seat Assembly No. 144-3771 42
Deck Assembly 44
Deflector Assembly No. 120-2451 46
Deck Decal Assembly No. 126-8958 48
Attachments and Accessories 50

© 2023—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Frame Assembly

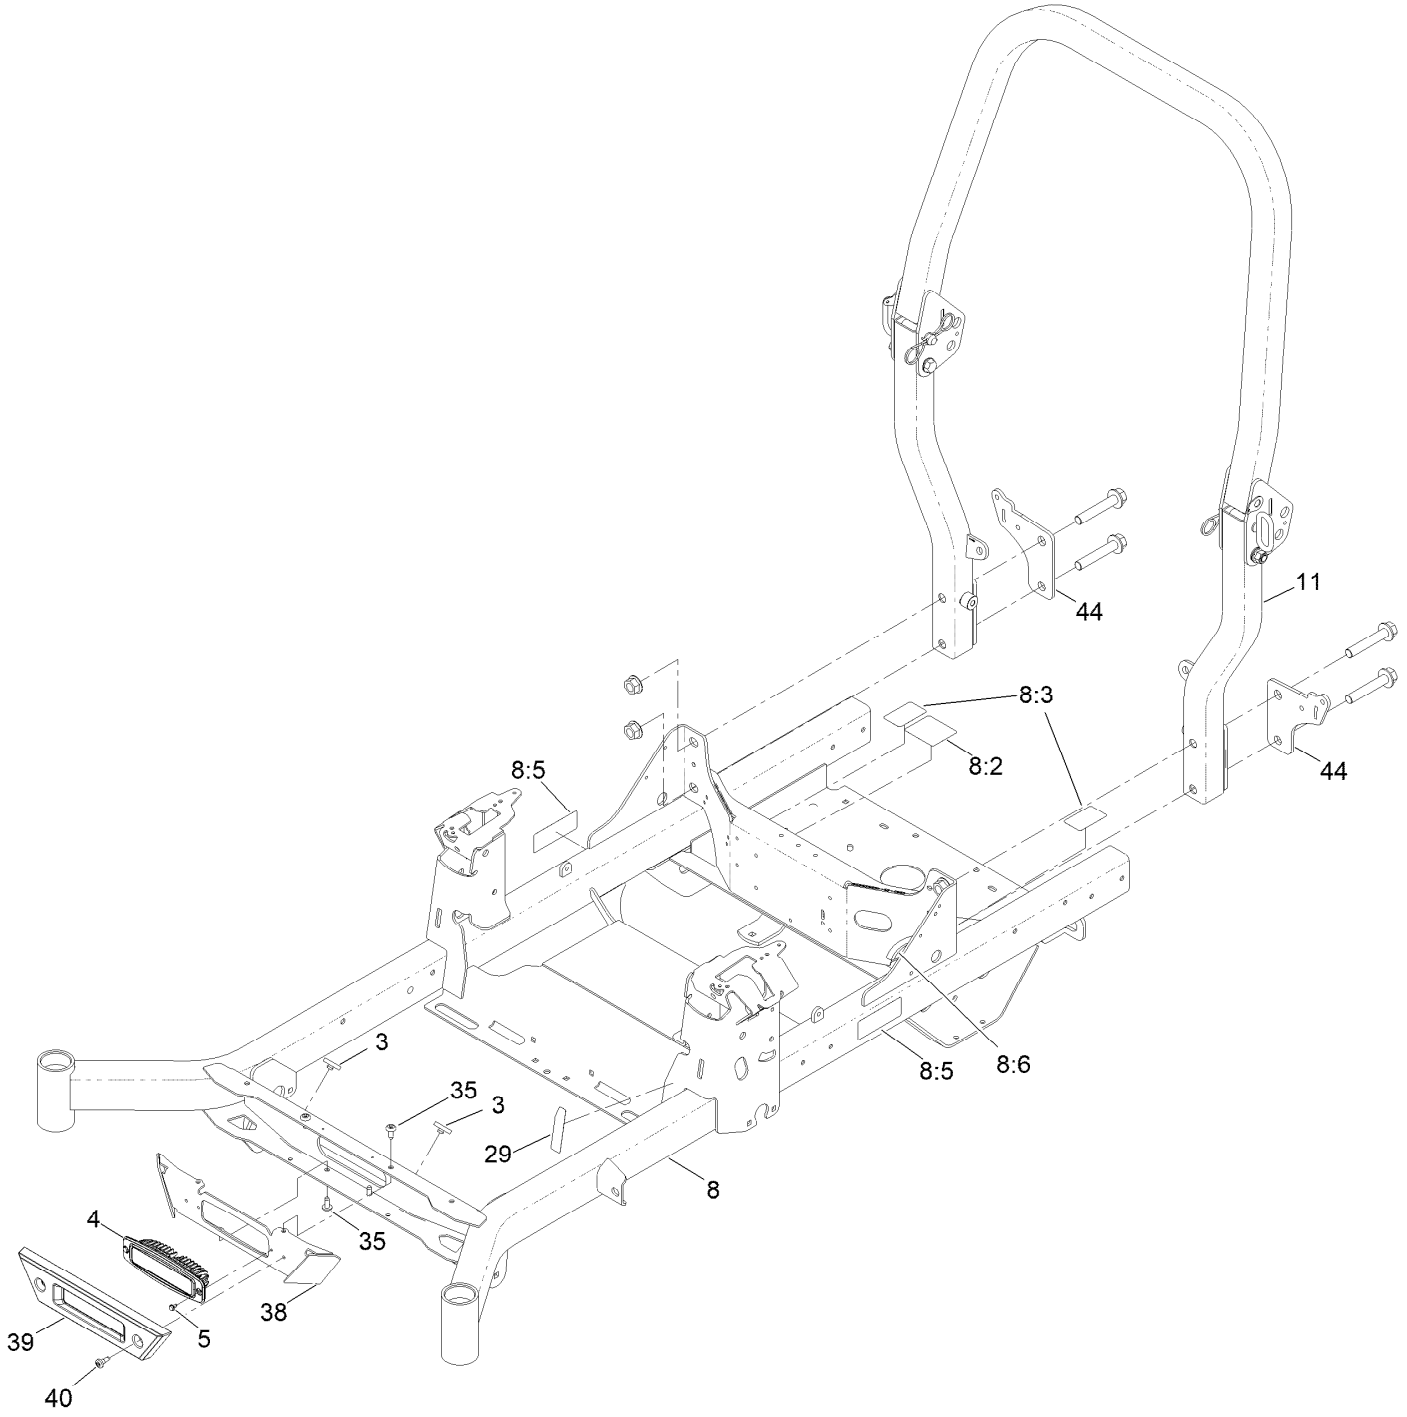

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
3	109-9233	2	Bumper-Push-In, Rubber
4	139-8089	1	Mount-Flush, Light
5	104-2065	2	Screw-HWH
8	144-1840	1	Frame-60, Mr
8:2	109-6014	1	Decal-Routing, Belt
8:3	116-8588	2	Decal-Release, Drive
8:5	126-4363	2	Decal-Warning
8:6	127-6618	1	Strip-Seal
11	144-1849	1	ASM-ROPS, Mr
29	145-3668	1	Decal-Fill, Fuel
35	138-9753	4	Screw
38	144-2628-01	1	Bracket-Light [red]
39	144-2603	1	Bumper-Front
40	135-2015	2	Screw-Shoulder
44	126-9487-03	2	Bracket

Roll-Over Protection System Assembly
No. 144-1849

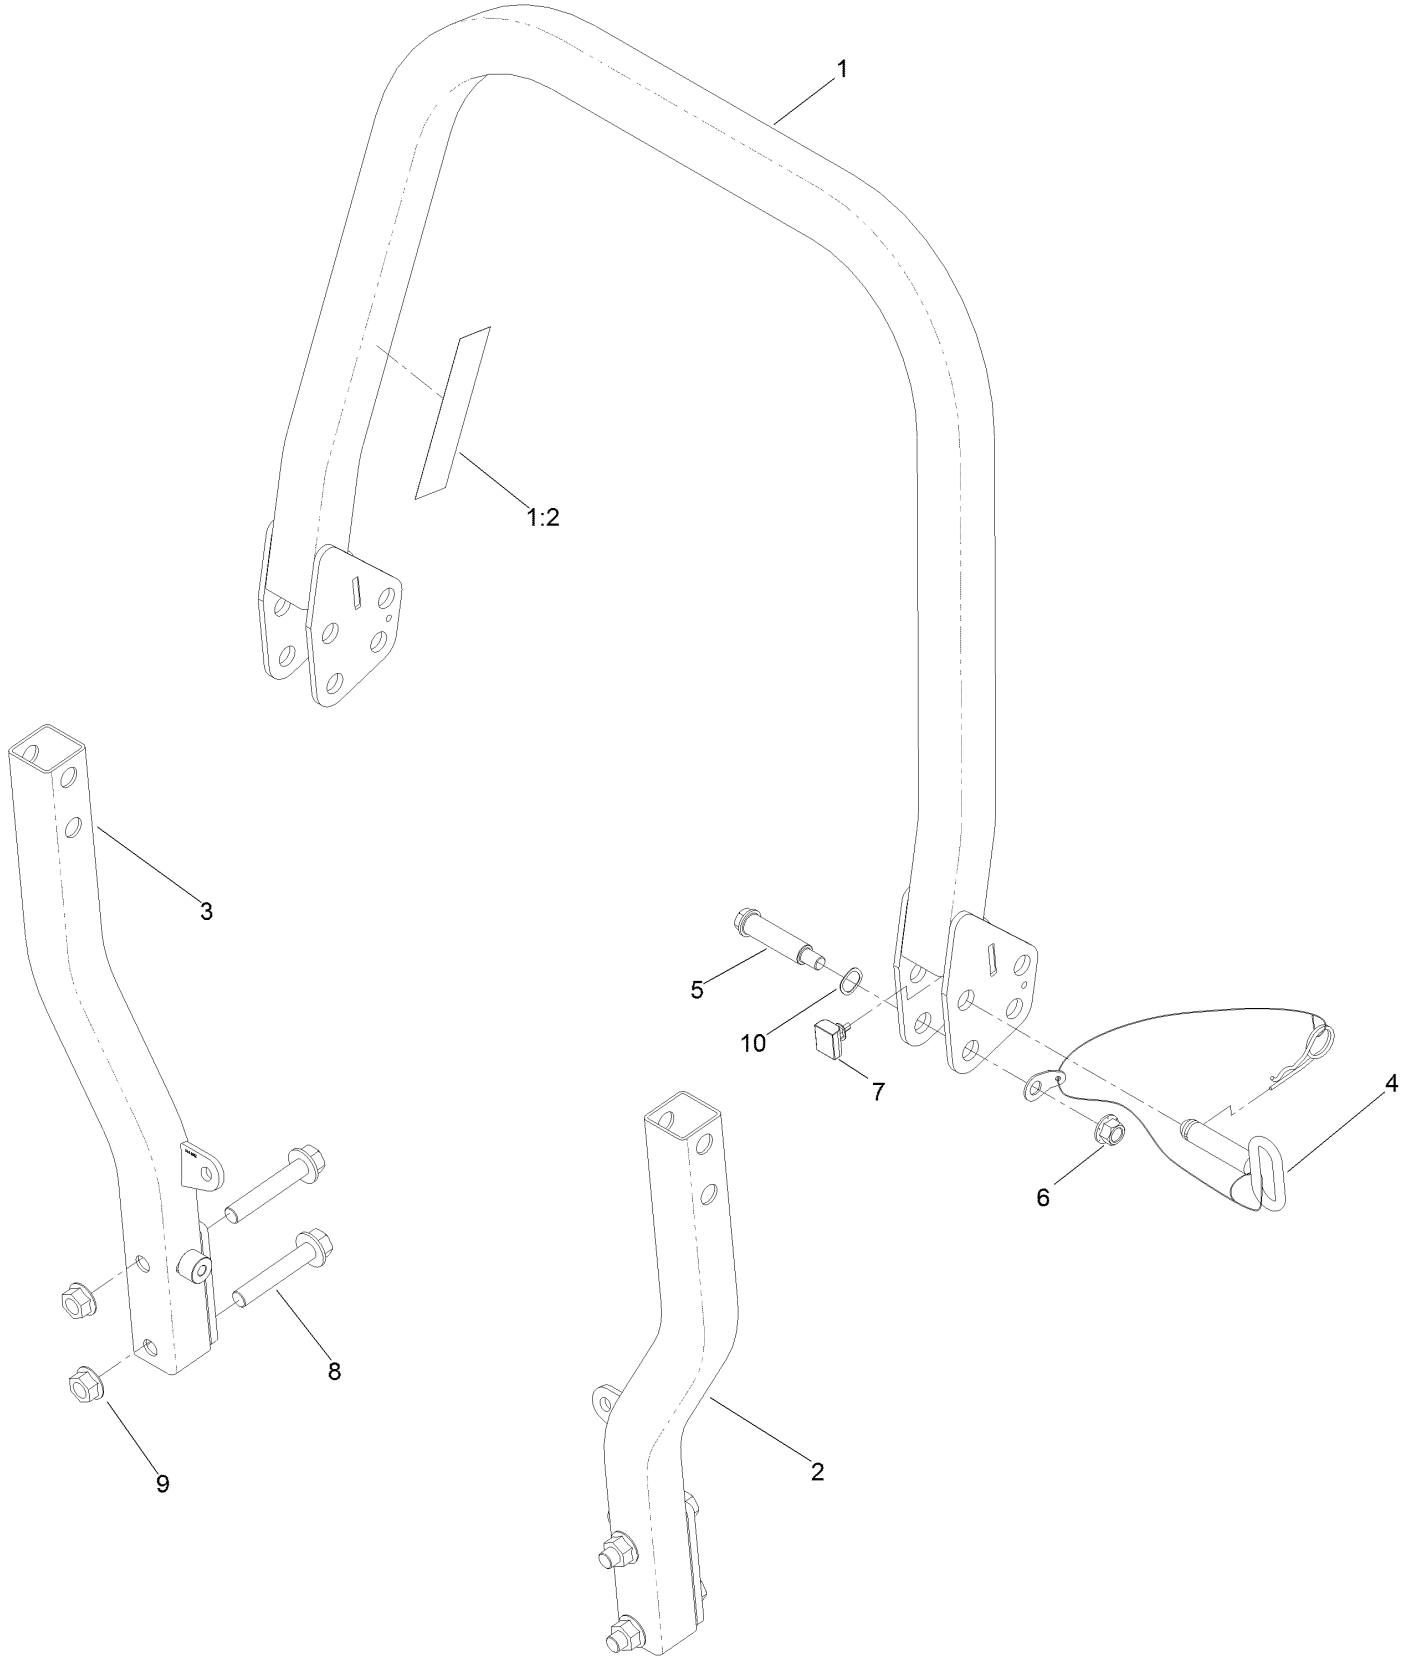

Roll-Over Protection System Assembly No. 144-1849 (continued)

Ref.	Part Number	Qty.	Description
1	144-1964	1	Upper ROPS ASM
1:2	107-3069	1	Decal-Warning
2		1	LH ROPS ASM [black] ●
3		1	RH ROPS ASM [black] ●
4	103-4553	2	Pin-Fold, ROPS
5	126-9209	2	Bolt-Shoulder
6	99-5107	2	Nut-Lock
7	109-5337	2	Bumper-ROPS
8	126-9488	4	Screw-HHF
9	32128-50	4	Nut-Flange
10	119-4164	2	Washer-Wave

● Not serviced separately

Transaxle Assembly

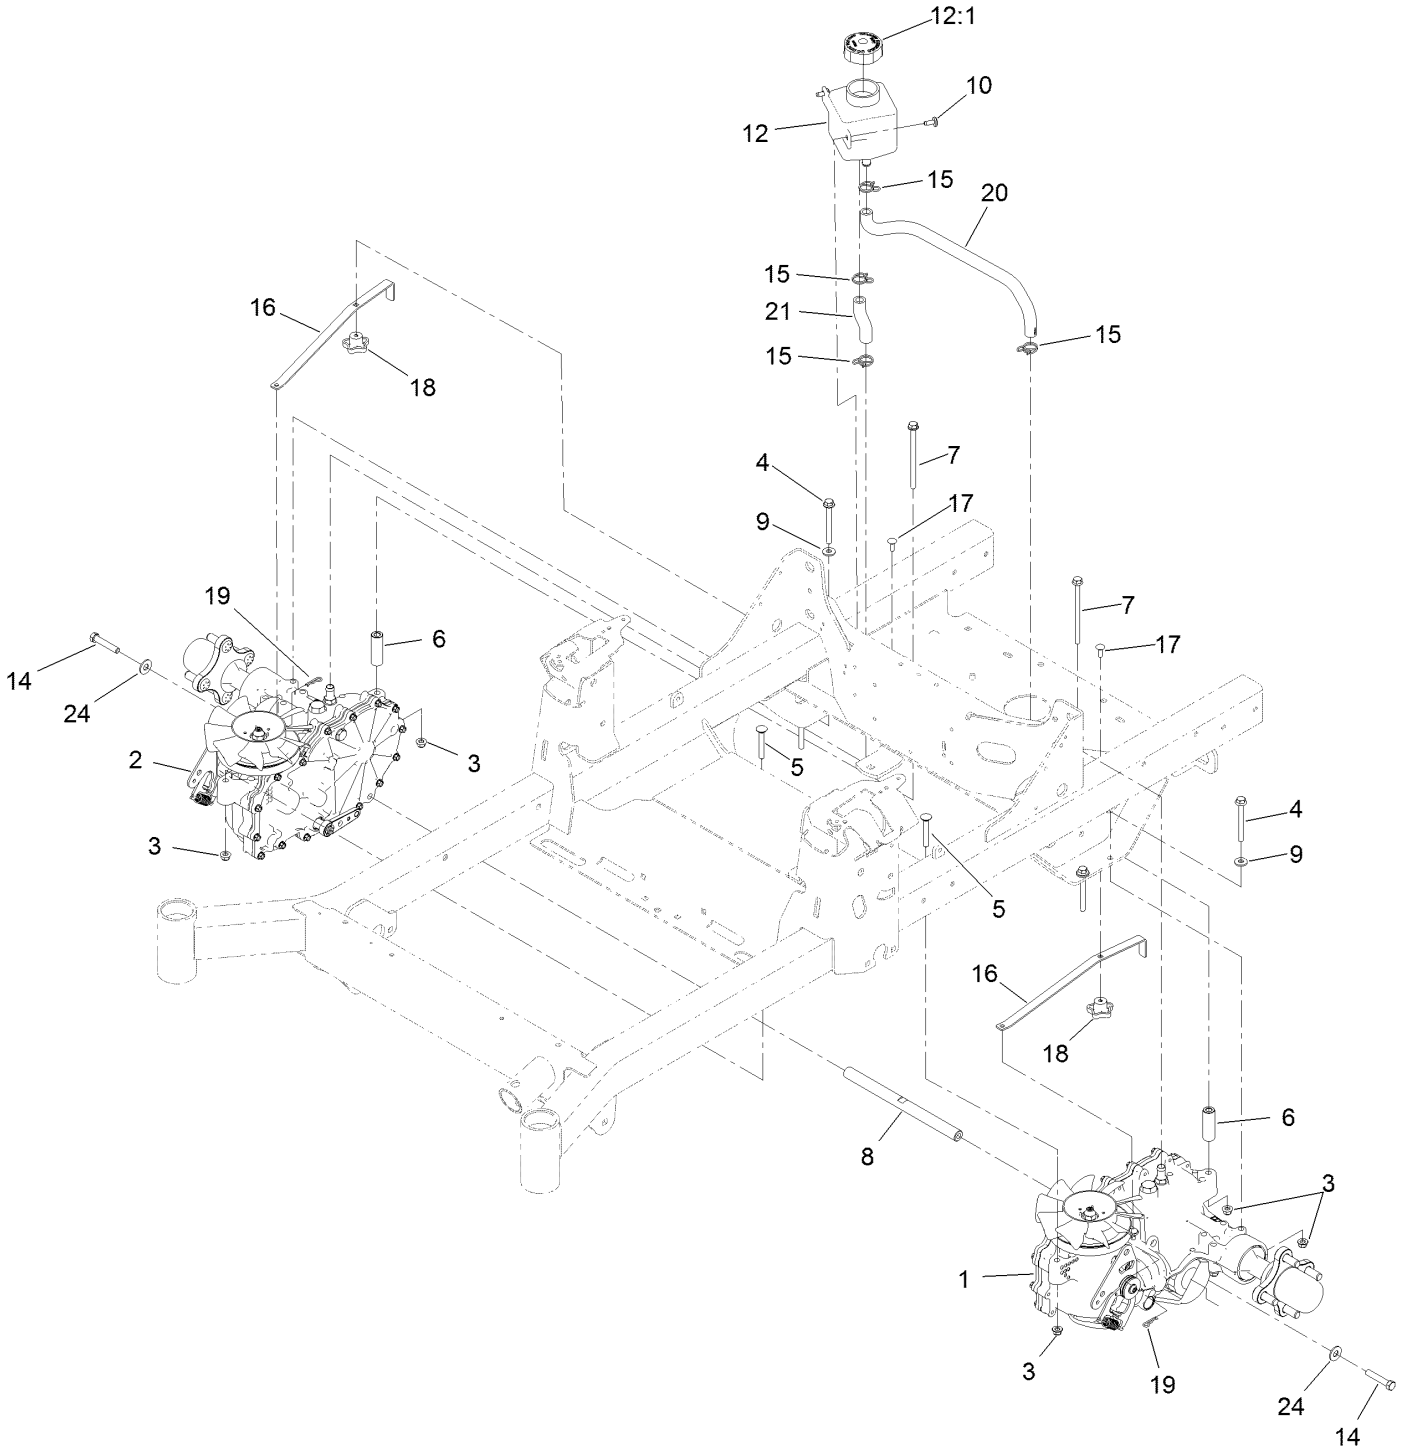

Transaxle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-9489	1	LH Transaxle ASM
2	140-9490	1	RH Transaxle ASM
3	104-8300	8	Nut-HF, NI
4	126-4687	4	Screw-HHF
5	3230-7	2	Bolt-CARR
6	116-5809	2	Spacer-Hydro
7	126-5896	2	Screw HHF
8	116-6833	1	Shaft-Spacer
9	1-303334	4	Washer-Spring
10	126-6266	2	Screw-Tph
12	109-2250	1	Tank-HYD
12:1	109-3320	1	Cap-Reservoir, HYD
14	94-7972	2	Screw-HH W/Loctite ●
15	126-0327	4	Clamp-Hose
16	109-5395	2	Arm-Bypass, Hydro
17	3229-1	2	Screw-CARR
18	108-6402	2	Knob-Handle
19	1-806003	2	Pin-Cotter
20	133-1325	1	Hose-Hydraulic
21	133-1320	1	Hose-Hydraulic
24	3256-4	2	Washer-Flat

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

LH Transaxle Assembly No. 140-9489

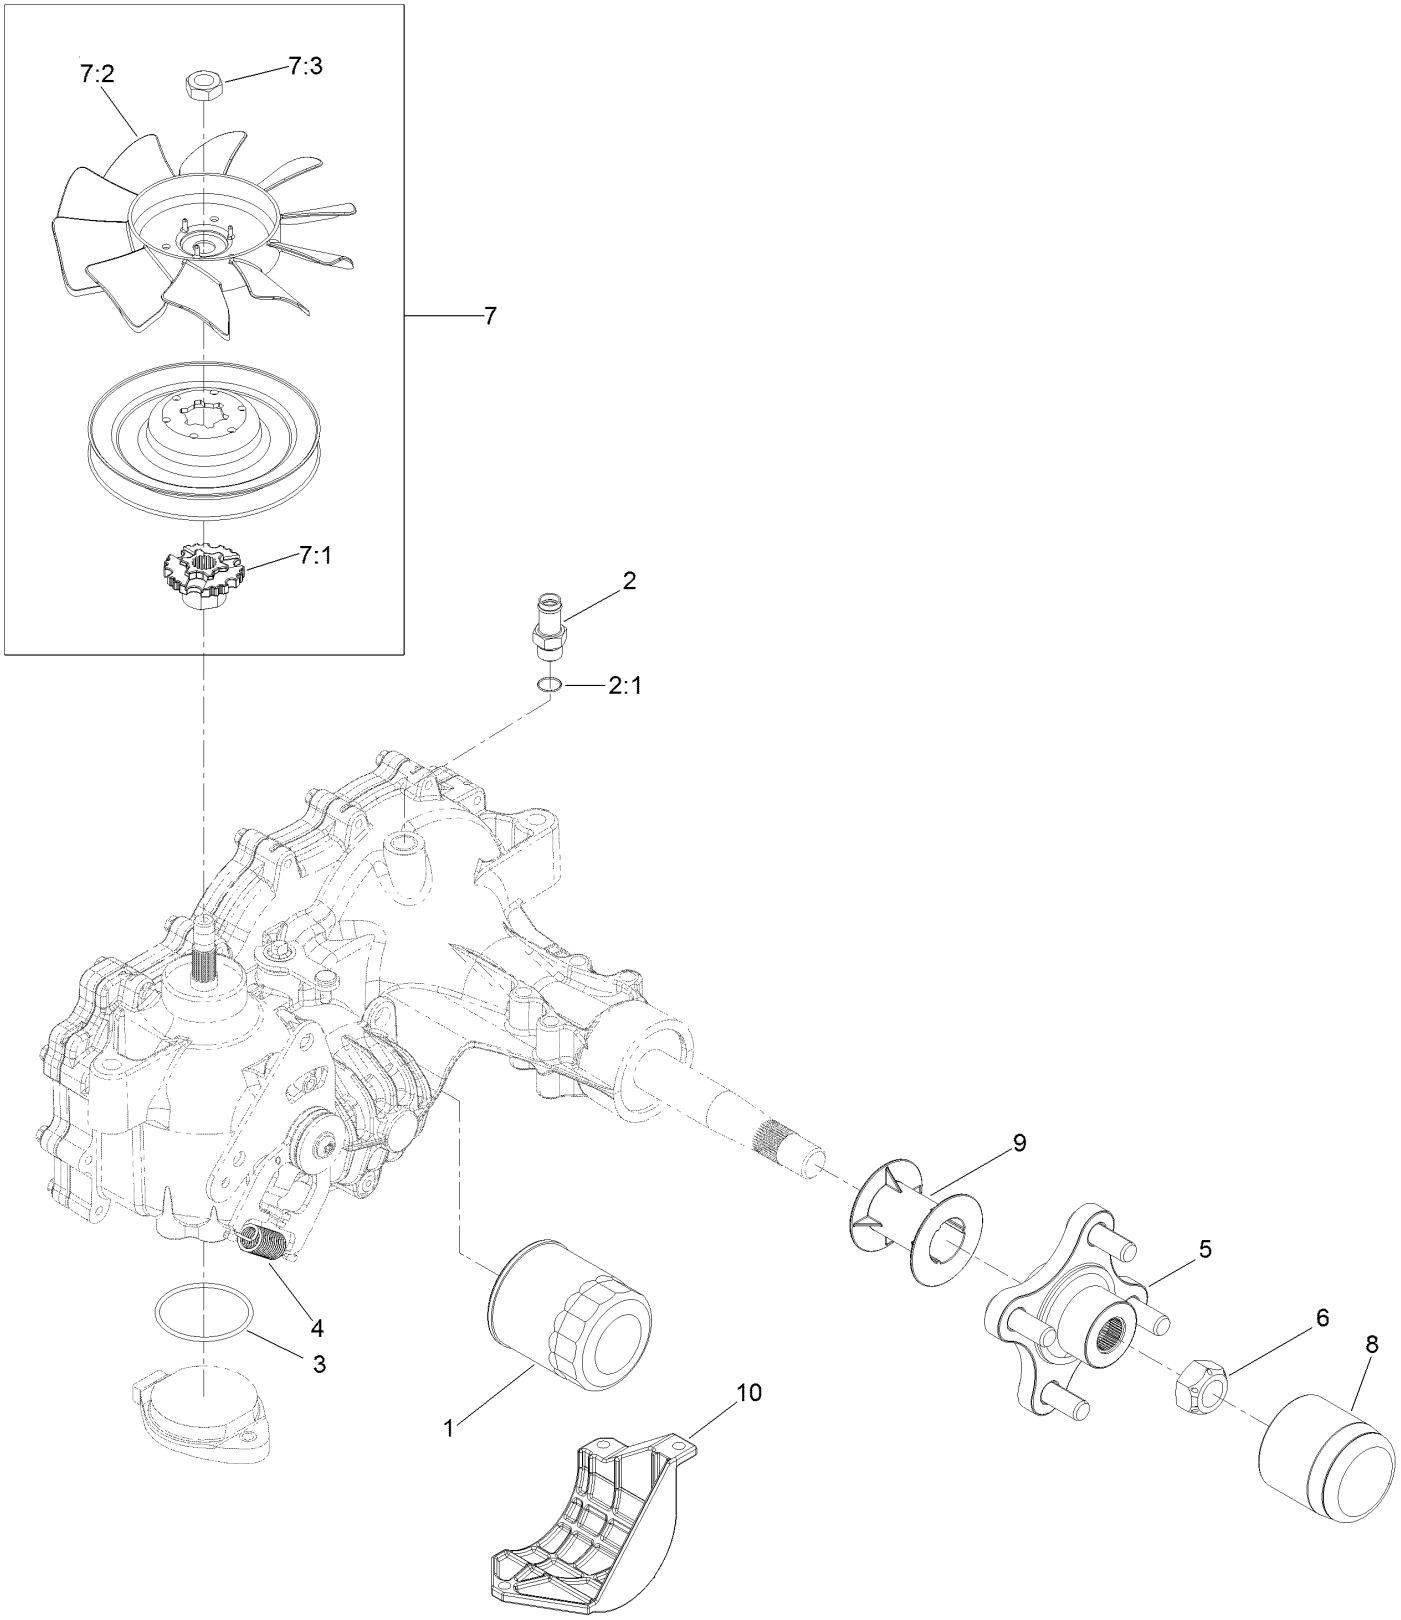

LH Transaxle Assembly No. 140-9489 (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	109-3540	1	O Ring-Seal
4	109-5592	1	Spring-Extension
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	126-8904	1	Fan And Pulley Kit
7:1	126-8905	1	Hub-Fan
7:2	126-0226	1	Fan
7:3	116-9714	1	Nut-HJ
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7979	1	Guard-Filter, LH
99	135-3604	1	Brake Shaft Seal Kit ●
99	121-3243	1	Seal Kit ●

● Not illustrated

RH Transaxle Assembly No. 140-9490

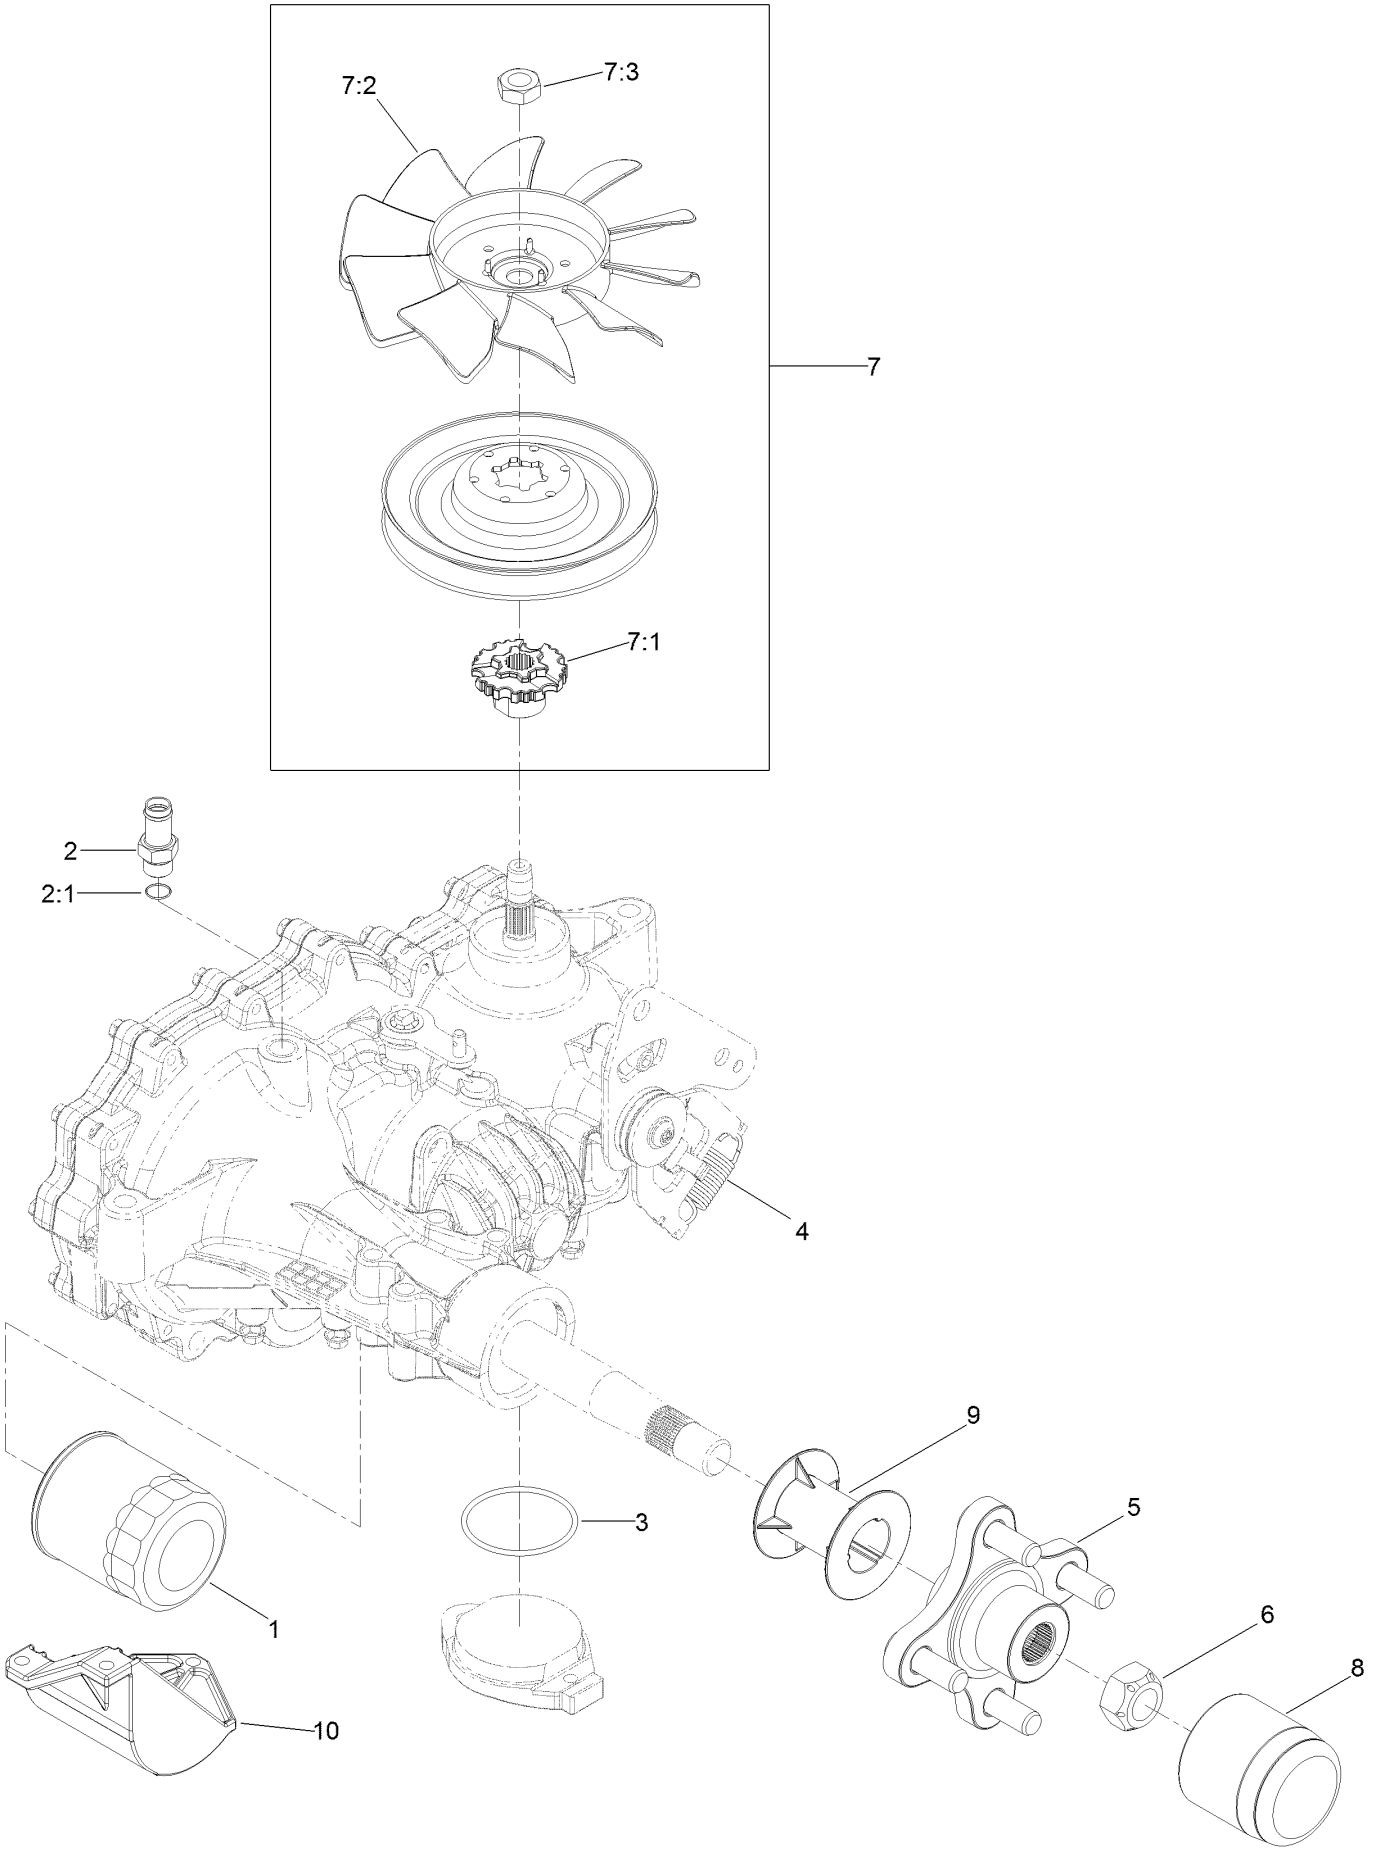

RH Transaxle Assembly No. 140-9490 (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	109-3540	1	O Ring-Seal
4	109-5592	1	Spring-Extension
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	126-8904	1	Fan And Pulley Kit
7:1	126-8905	1	Hub-Fan
7:2	126-0226	1	Fan
7:3	116-9714	1	Nut-HJ
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7981	1	Guard-Filter, RH
99	121-3243	1	Seal Kit ●
99	135-3604	1	Brake Shaft Seal Kit ●

● Not illustrated

Control Console and Guard Assembly

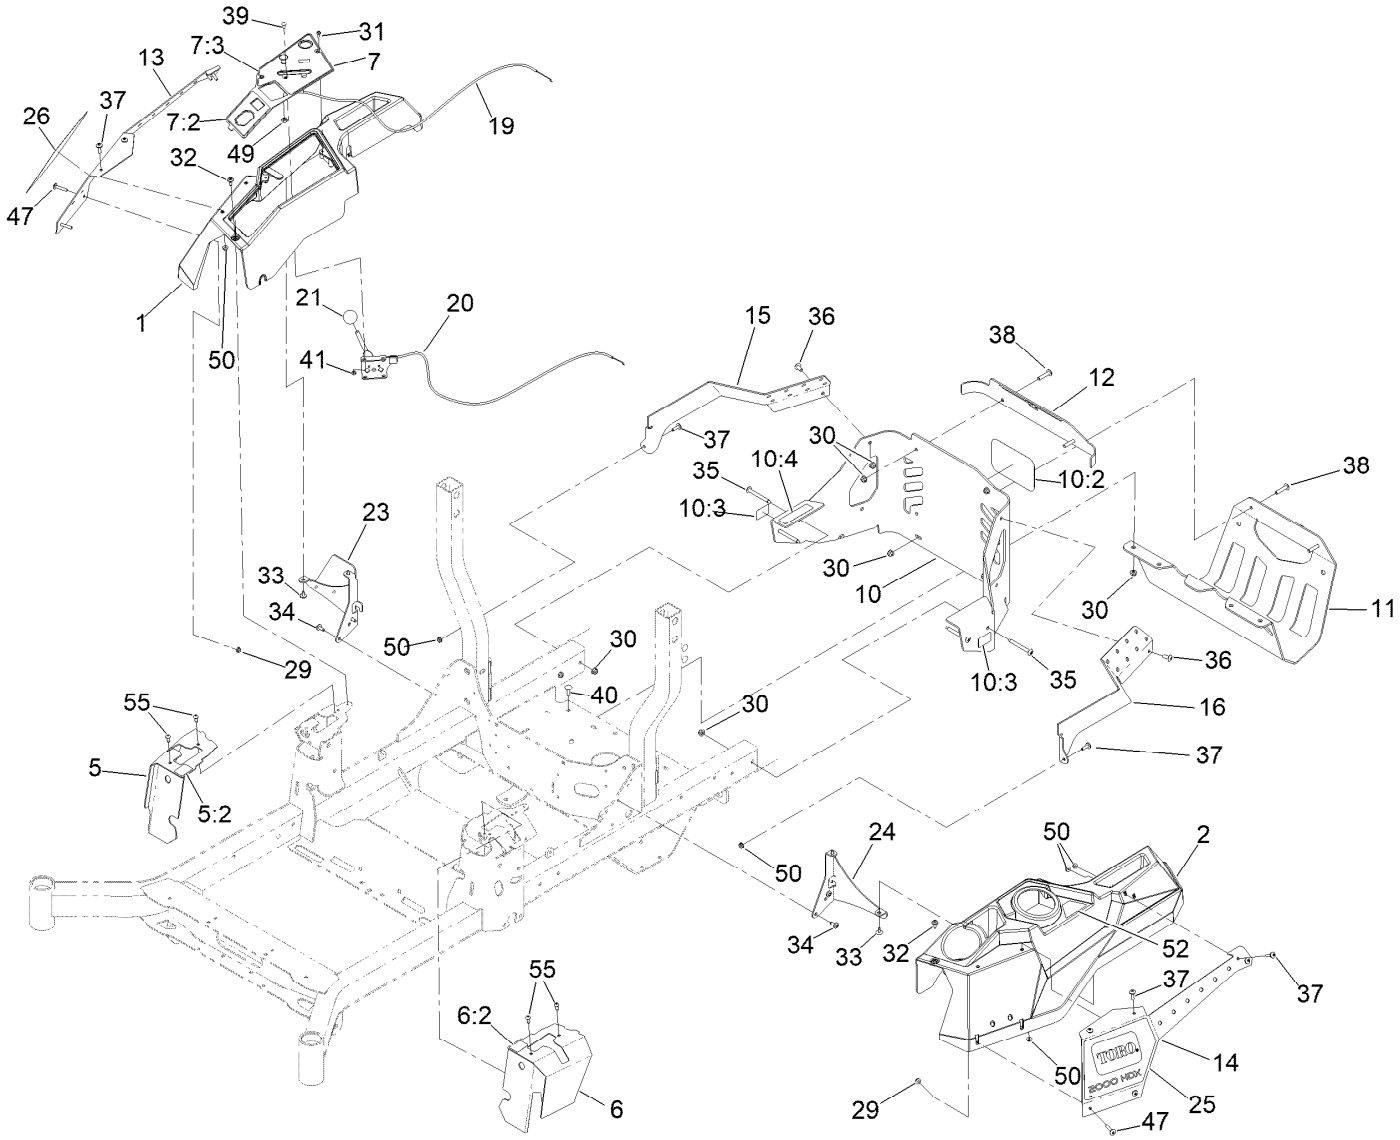

Control Console and Guard Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4983	1	Console-RH
2	126-4984	1	Console-LH
5	144-3768	1	Cover - Control, Motion
5:2	135-2310	1	Decal-Motion Control
6	144-3769	1	Cover - Control, Motion
6:2	135-2310	1	Decal-Motion Control
7	144-3780	1	Ctrl Panel ASM
7:2	126-9115	1	Decal-Panel, Control
7:3	144-3778	1	Decal-Panel Ctrl
10	139-3643	1	Rear Guard ASM
10:2	99-4693	1	Decal
10:3	106-5517	2	Decal-Warning
10:4	133-8062	1	Decal-Arrestor, Spark
11	135-5084-03	1	Guard-Muffler [black]
12	139-3644-01	1	Trim-Upper Rear
13	136-1745-03	1	Cover, Pod RH
14	136-1746-03	1	Cover-LH
15	126-9023-01	1	Bracket-Guard, RH
16	126-9022-01	1	Bracket-Guard, LH
19	126-7009	1	Cable-Control, Choke
20	126-7008	1	Cable-Control, Throttle
21	1-603175	1	Knob-Ball
23	126-9945	1	Support-Console, RH
24	126-5532-03	1	Bracket-Console, LH
25	140-4354	1	Decal - HDX
26	140-4352	1	Decal - HDX
29	104-7201	4	Nut-HF, NI
30	104-8300	12	Nut-HF, NI
31	117-5036	2	Screw-Plastic, HWH
32	120-7950	2	Screw-Torx
33	126-5544	4	Screw-Torx
34	126-6266	4	Screw-Tph
35	126-6267	4	Screw-TTH
36	126-6268	2	Screw-TTH
37	126-6269	10	Screw-Truss
38	126-7439	4	Screw-Torx
39	1-807513	2	Bolt-CARR
40	3230-22	2	Screw-CARR
41	3296-2	2	Nut-Lock, NI
47	126-8232	4	Screw-Truss Hex Skt
49	3220-3	1	Nut-HJ
50	32149-2	10	Nut-Keps
52	126-9939	1	Decal-Fill, Fuel
55	87-6620	4	Screw-Tph Thd Form

Fuel Assembly

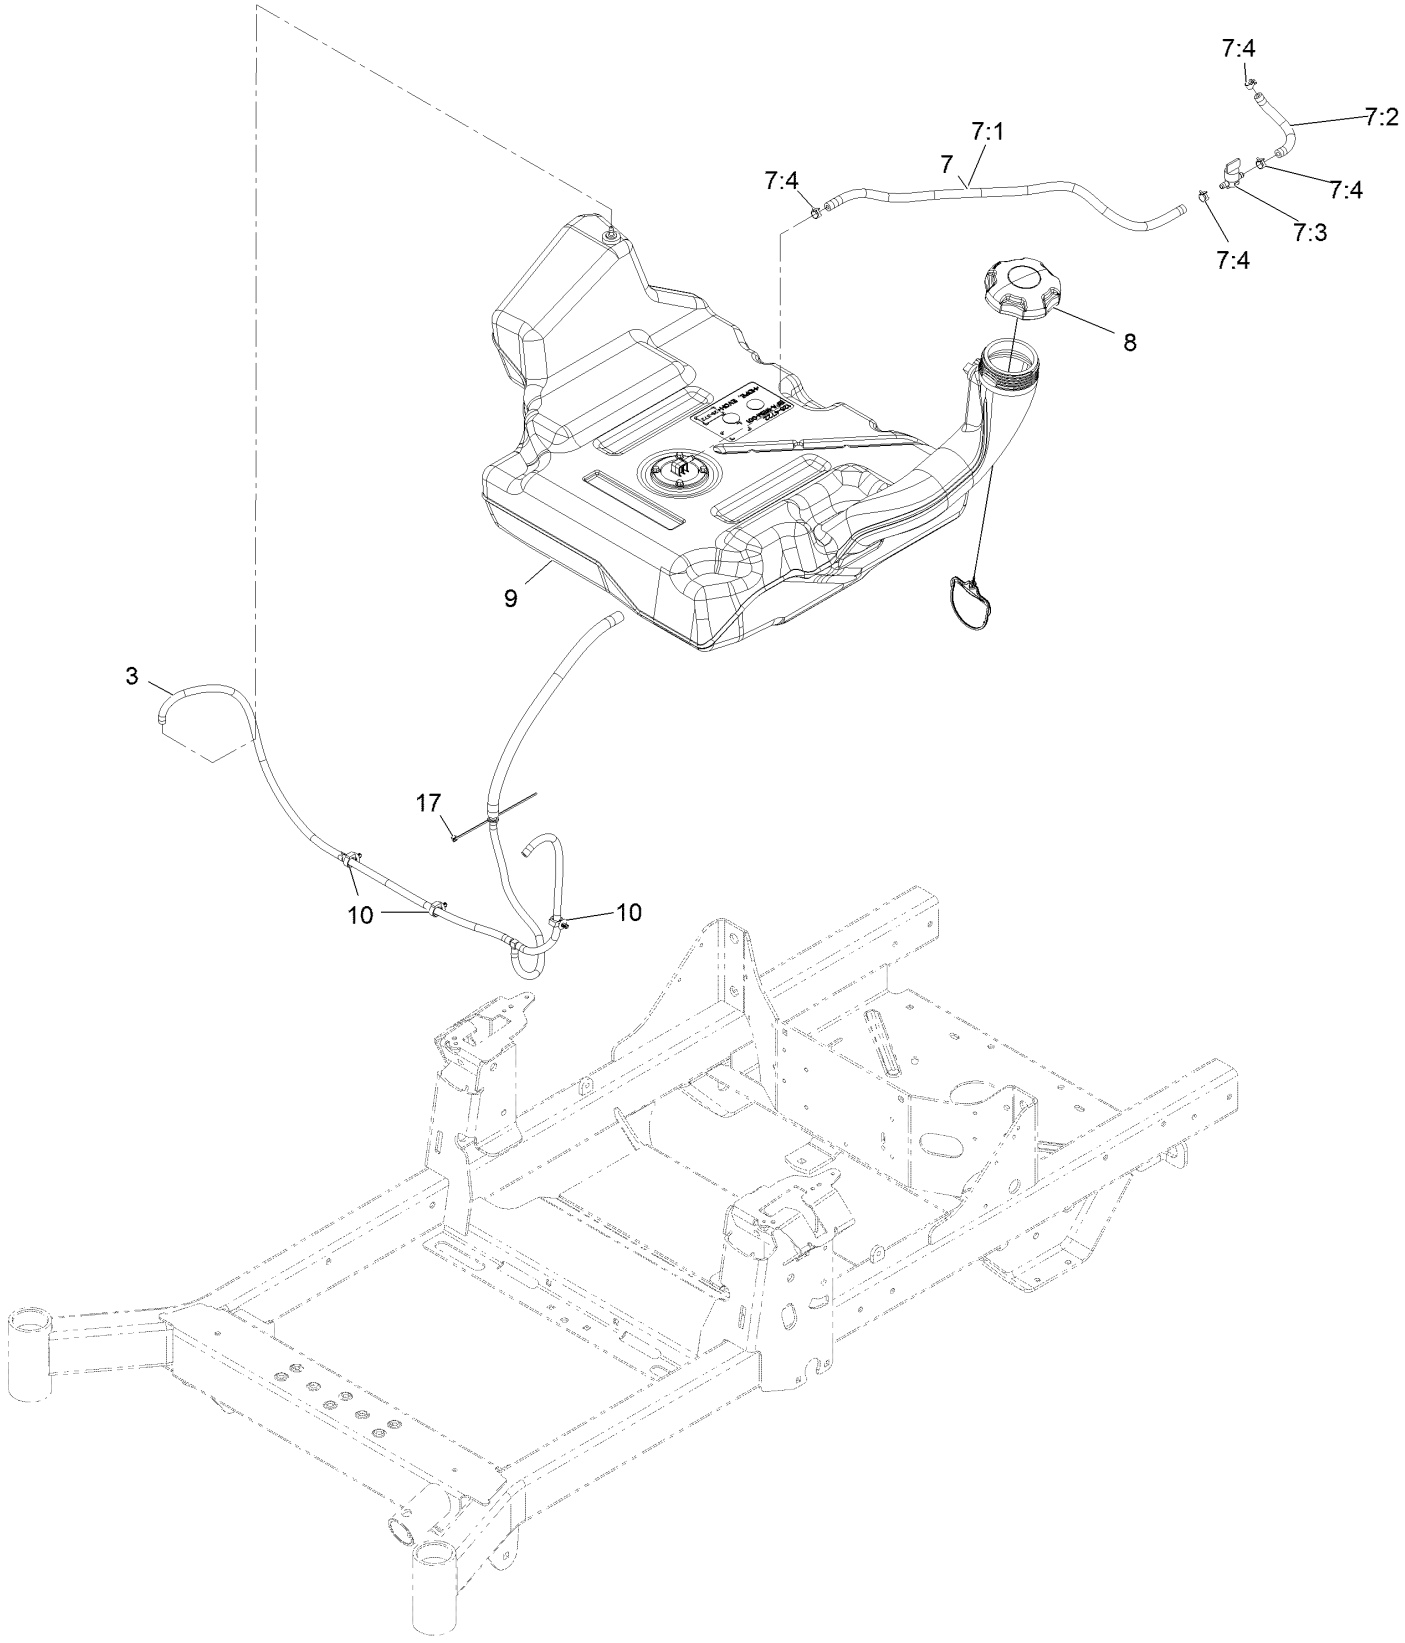

Fuel Assembly (continued)

Ref.	Part Number	Qty.	Description
3	126-8736	1	Vent Hose ASM
7	126-8740	1	Fuel Hose ASM
7:1	109-0302	1	Hose-Fuel Line 24"
7:2	109-0678	1	Hose-Fuel
7:3	1-603770	1	Valve-Fuel
7:4	2412-98	4	Clamp-Hose
8	135-4801	1	Cap-Fuel, Ratcheting
9	126-4724	1	Tank-Fuel
10	126-5523	3	Clip
17	1-303287	1	Tie-Cable 5 1/2 (Small)

Fuel Tank Assembly No. 126-4724

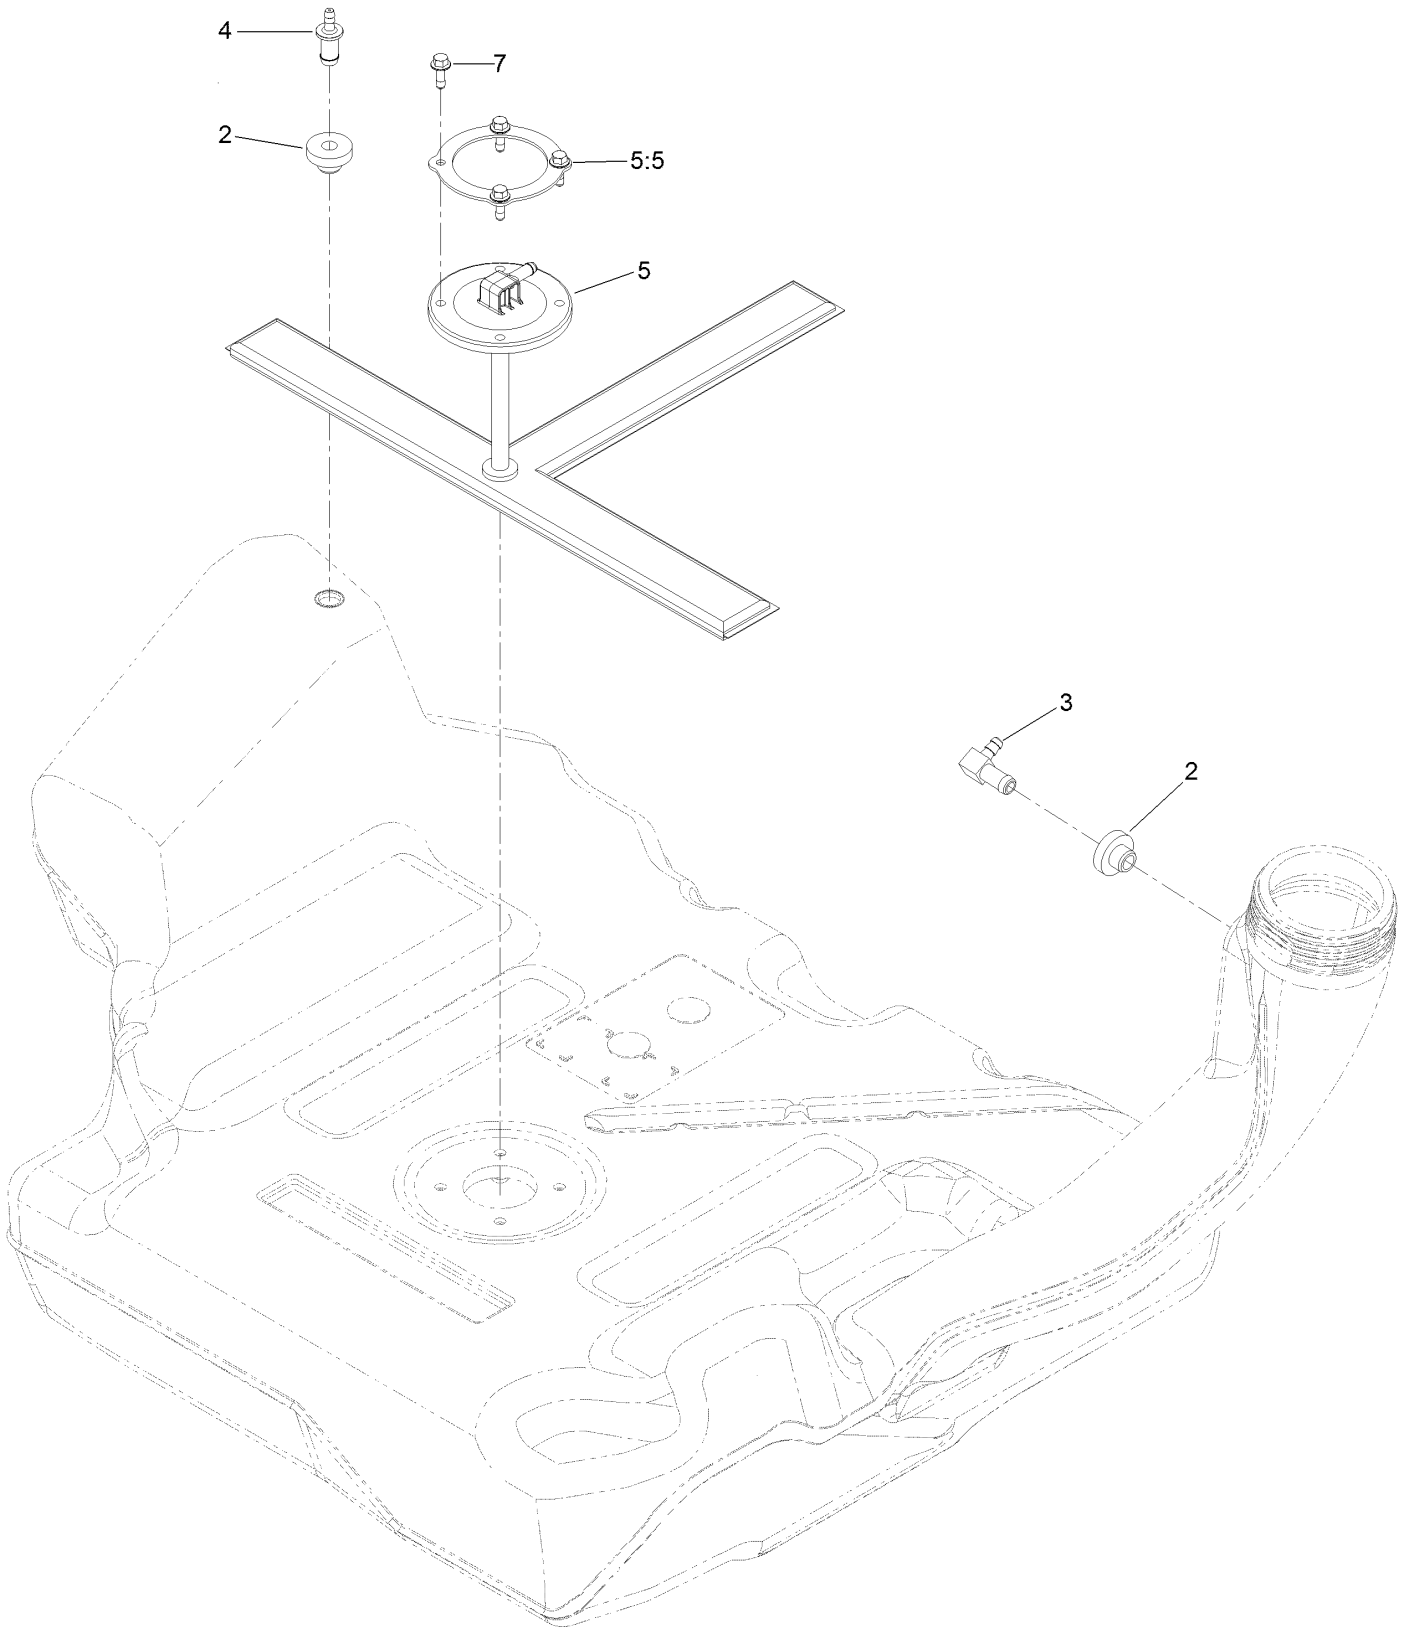

Fuel Tank Assembly No. 126-4724 (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	2	Bushing
3	126-9057	1	Fitting-90 DEG
4	116-4630	1	Fitting-Orifice, Straight
5	126-5528	1	Pickup-Fuel
5:5	126-5527	1	Ring-Retainer
7	126-5525	4	Bolt

Motion Control Assembly

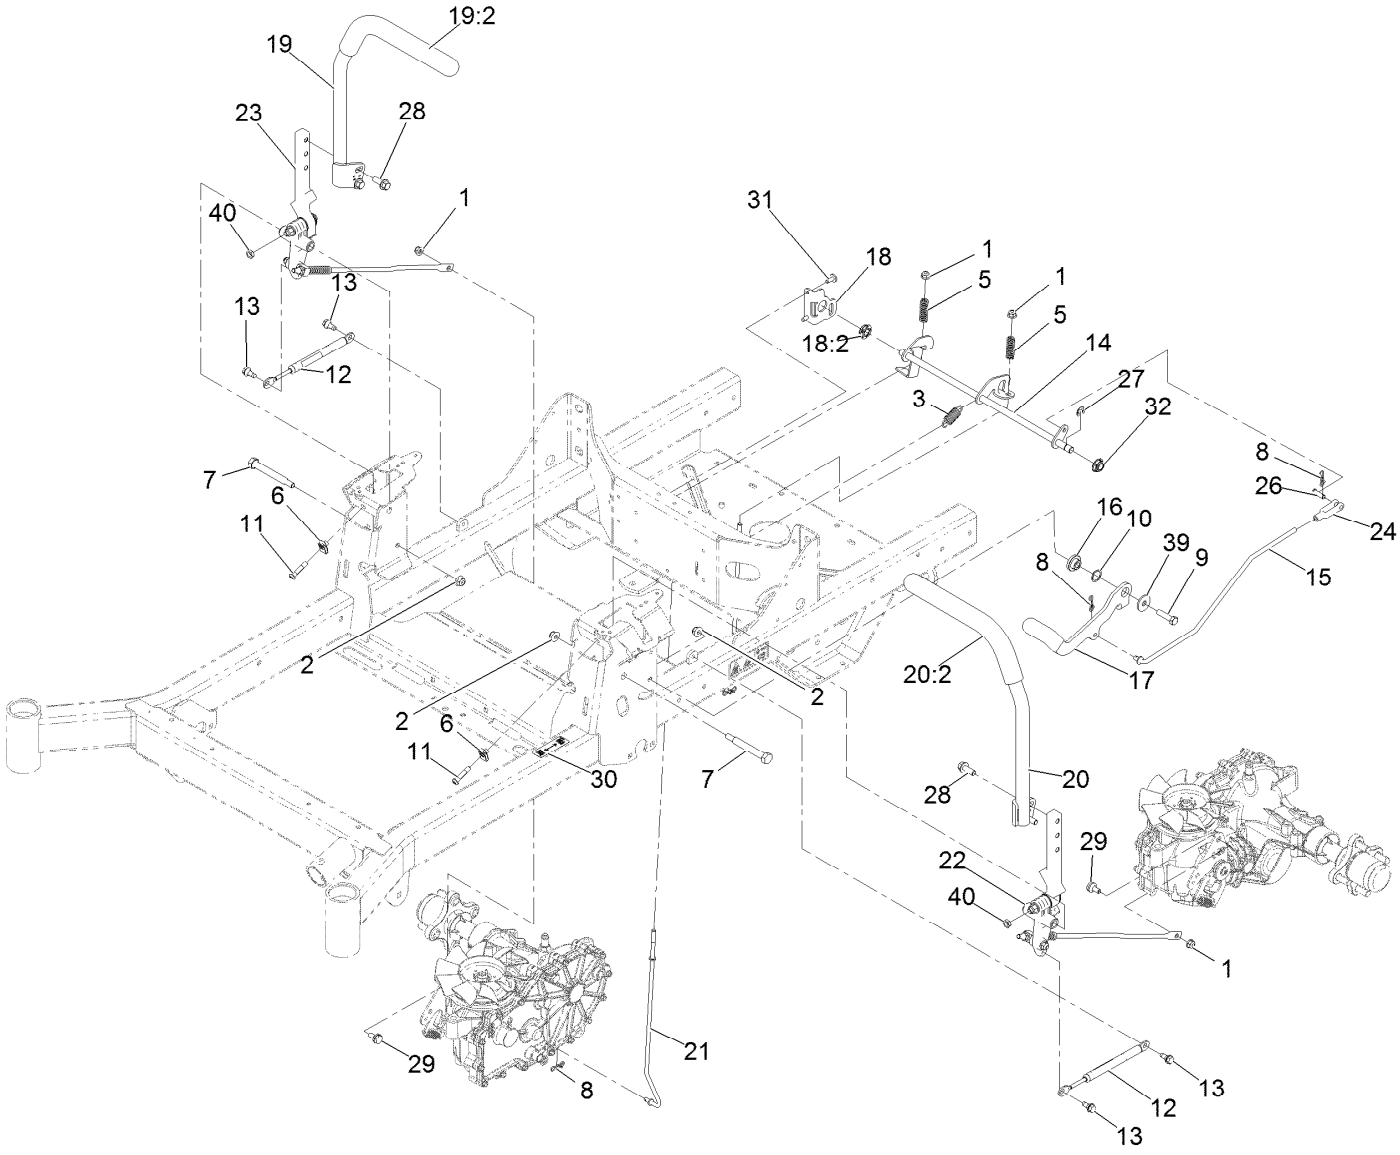

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8300	4	Nut-Nyloc 5/16-18 Flg
2	104-8301	3	Nut-Nyloc 3/8-16 Flg
3	107-1045	1	Spring-Extension
5	109-7694	2	Spring-Compression
6	112-3306	2	Nut
7	115-5099	2	Bolt-Pivot
8	119-1415	4	Pin-Cotter, Locking
9	323-8	1	Screw-HH 3/8-16 X 1 1/2
10	119-4164	1	Washer-Wave
11	126-4299	2	Screw-HSBH
12	126-4322	2	Damper
13	126-4424	4	Screw-Shoulder
14	126-5813	1	Shaft-Brake
15	126-5819	1	Linkage-Brake, Upper
16	126-5989	1	Pivot-Flange
17	126-9490	1	Lever-Brake (With Grip)
18	126-6456	1	Bracket-Brake
18:2	126-5820	1	Bearing-Spherical
19	138-6015	1	RH Extended Control Handle ASM
19:2	126-7359	1	Grip
20	138-6017	1	LH Extended Control Handle ASM
20:2	126-7359	1	Grip
21	126-7217	2	Linkage-Brake, Lower
22		1	LH Motion Control ASM ●
23		1	RH Motion Control ASM ●
24	1-303105	1	Yoke-Adjustable
26	1-808280	1	Pin-Clevis 5/16 X 1 49/64
27	32120-47	1	Ring-Retaining
28	3234-42	4	Screw HHF 3/8-16 X 1
29	37-8771	2	Screw-Shoulder 5/16-18 X 5/8
30	115-9625	1	Decal-Brake, Parking
31	126-6266	2	Screw-1/4-20 X .65 Torx Plus
32	126-5820	1	Bearing-Spherical
39	2844	1	Washer
40	3218-3	2	Nut-Jam 3/8-16

● Not serviced separately

Left and Right Control Arm Assembly

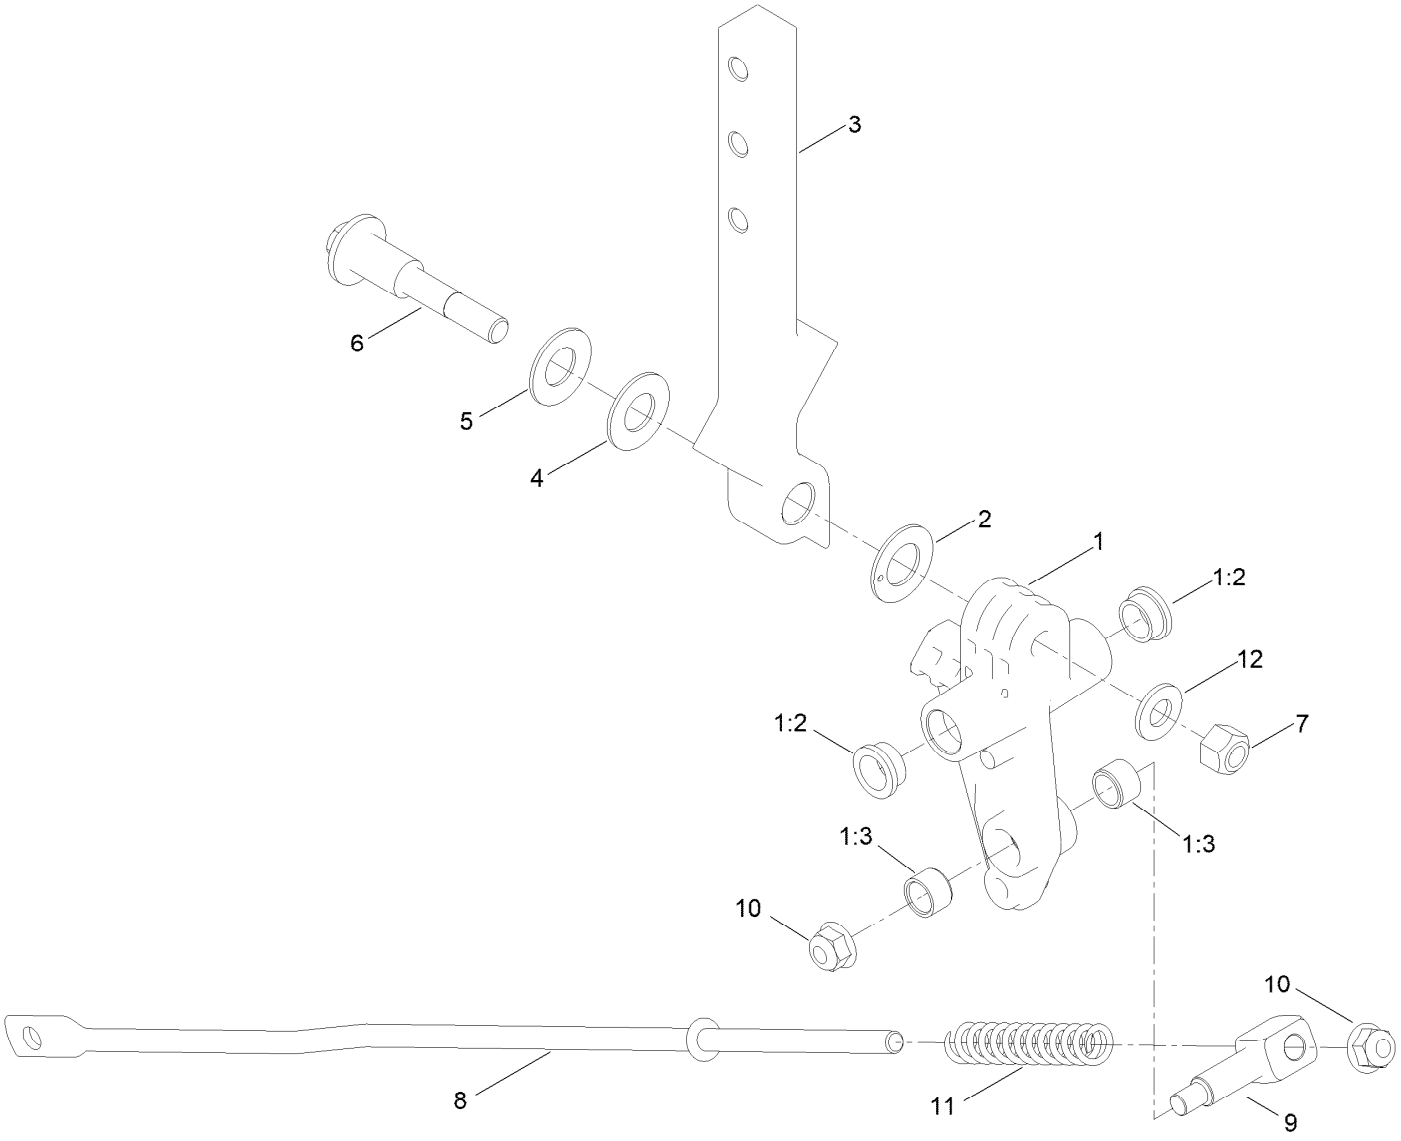

Left and Right Control Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3773	1	Control Arm ASM
1:2	126-8909	2	Bushing
1:3	1-413152	2	Bushing-Sleeve
2	126-7296	1	Washer-Friction
3	126-8182	1	Arm-Control
4	117-1240	1	Washer
5	119-8925	1	Washer-Belleville
6	117-1198	1	Bolt-Pivot
7	32152-2	1	Nut-Lock, Cone
8	126-5435	1	Link-Control
9	126-5434	1	Swivel
10	104-8300	2	Nut-HF, NI
11	126-8195	1	Spring-Return, Neutral
12	3256-24	1	Washer-Flat

Caster Wheel and Fork Assembly

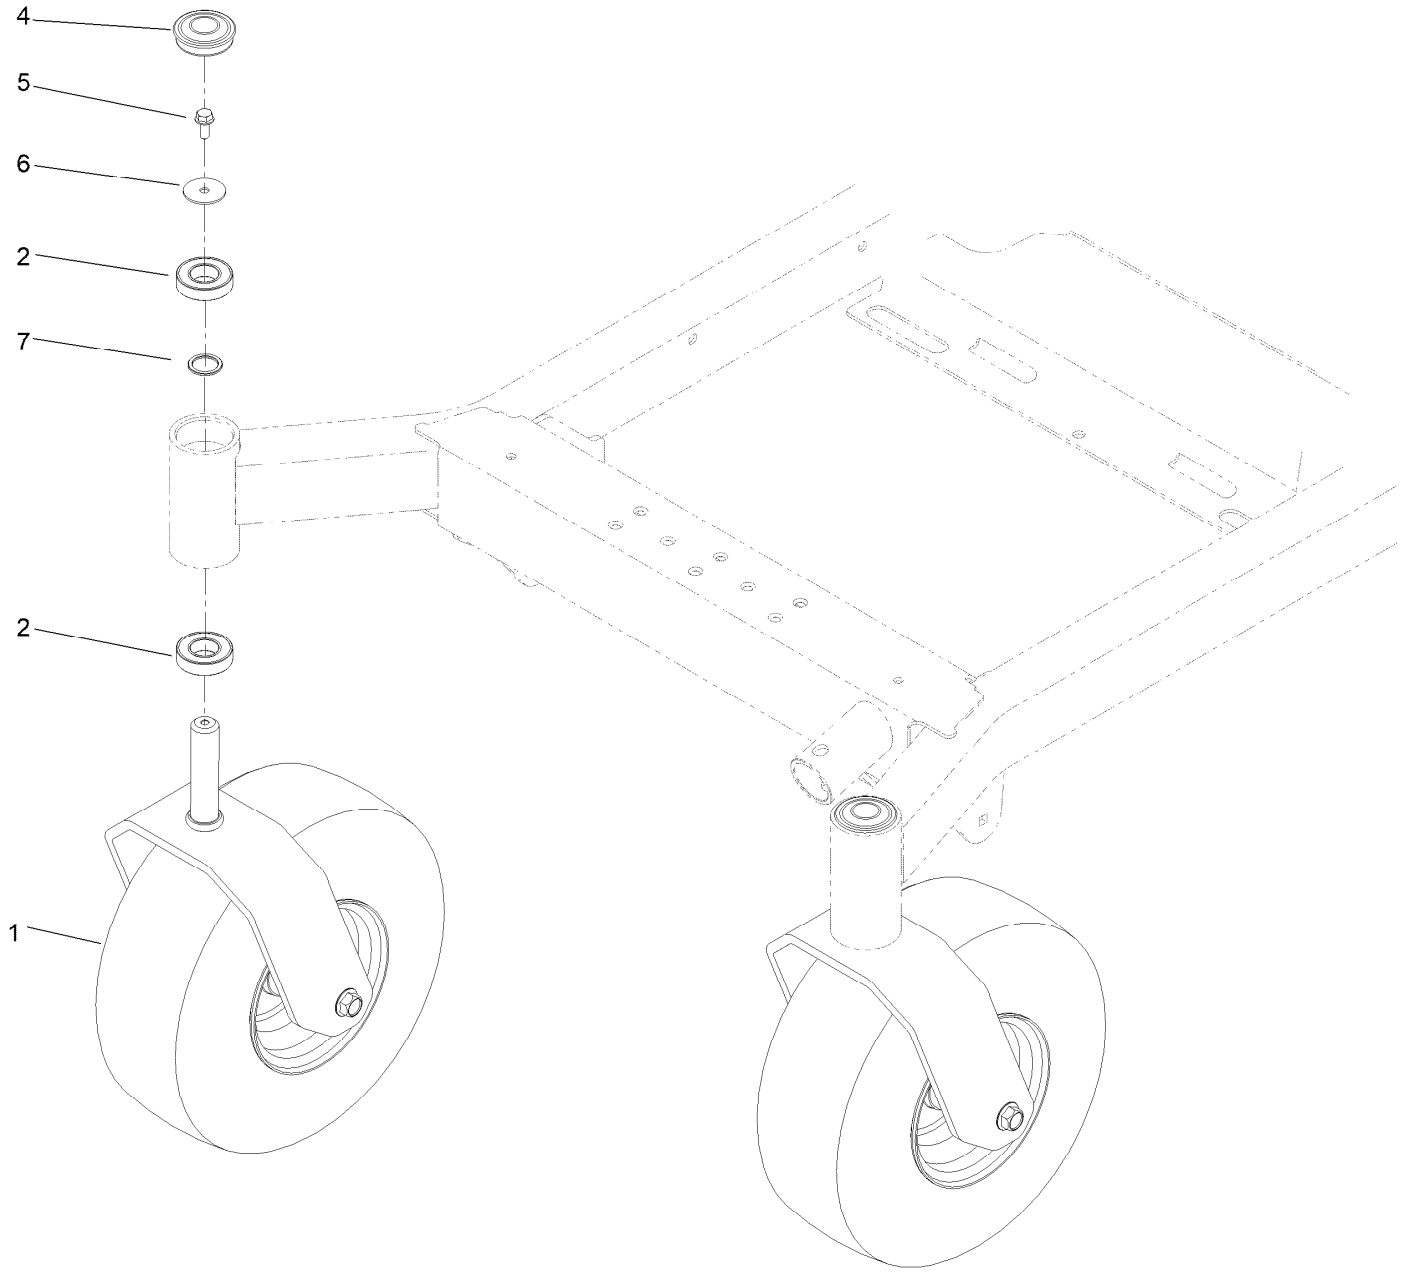

Caster Wheel and Fork Assembly (continued)

Ref.	Part Number	Qty.	Description
1		2	ASM-Front Caster W/Fork ●
2	109-3678	4	Bearing-Ball
4	144-0375	2	Cap, Grease
5	100-1668	2	Screw-HHF
6	3256-68	2	Washer-Flat
7	145-3660	2	Spacer-Bearing

● Not serviced separately

Fork and Caster Wheel Assembly

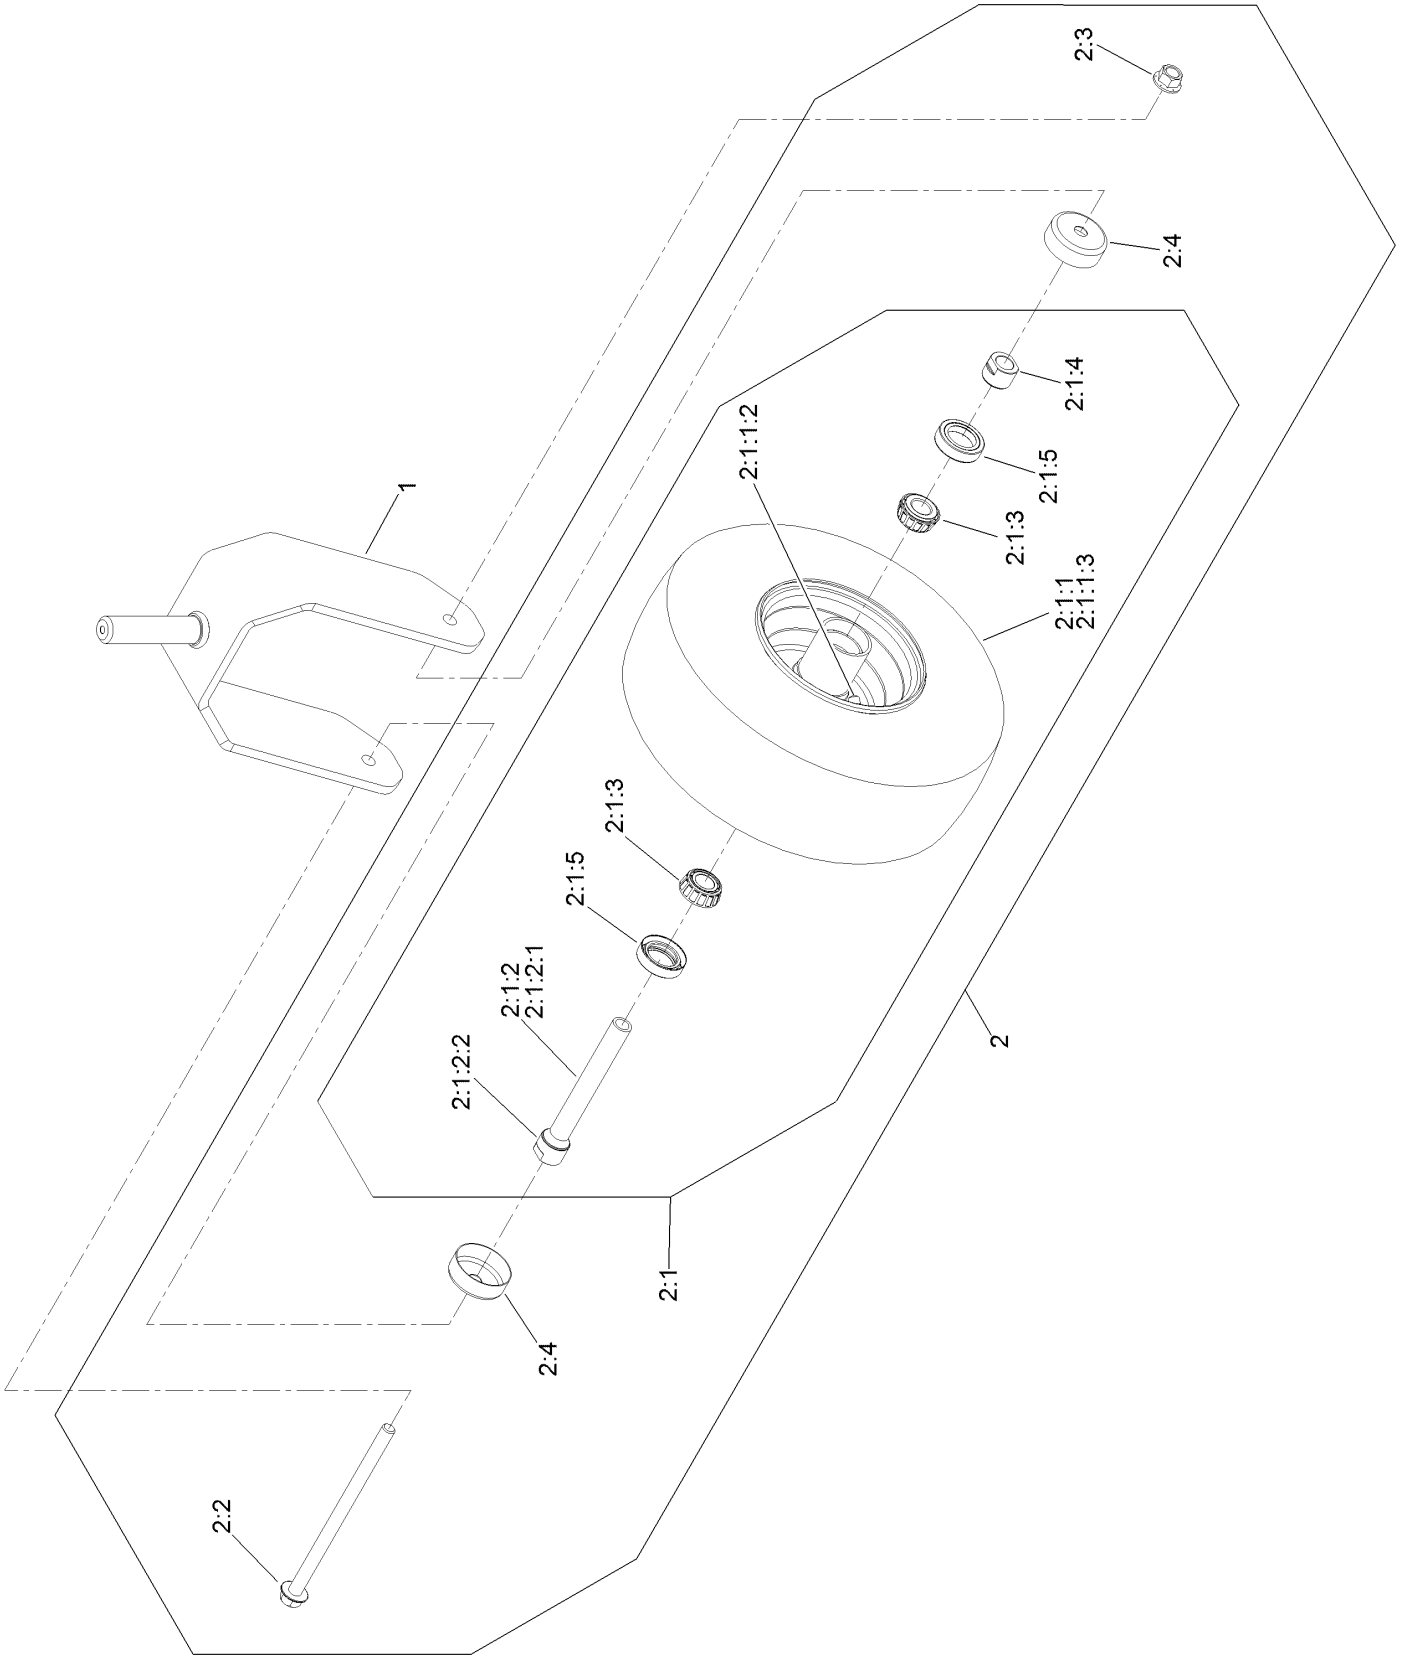

Fork and Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4312-01	1	Fork-Caster
2	139-3639	1	ASM-Pneumatic 13X6.50-6
2:1		1	Wheel And Bearings ASM ●
2:1:1		1	Wheel And Tire ASM ●
2:1:1:2	5108	1	Valve
2:1:1:3	126-5959	1	Tire
2:1:2	126-7796	1	Caster Axle ASM
2:1:2:1	126-5220	1	Axle-Caster
2:1:2:2	103-3051	1	Spacer-Nut
2:1:3	1-633585	2	Bearing-Cone, Taper
2:1:4	103-3051	1	Spacer-Nut
2:1:5	103-0063	2	Seal-Caster
2:2	126-5389	1	Screw-HHF
2:3	99-5107	1	Nut-Lock
2:4	103-2768	2	Guard-Seal

● Not serviced separately

Rear Wheel Assembly

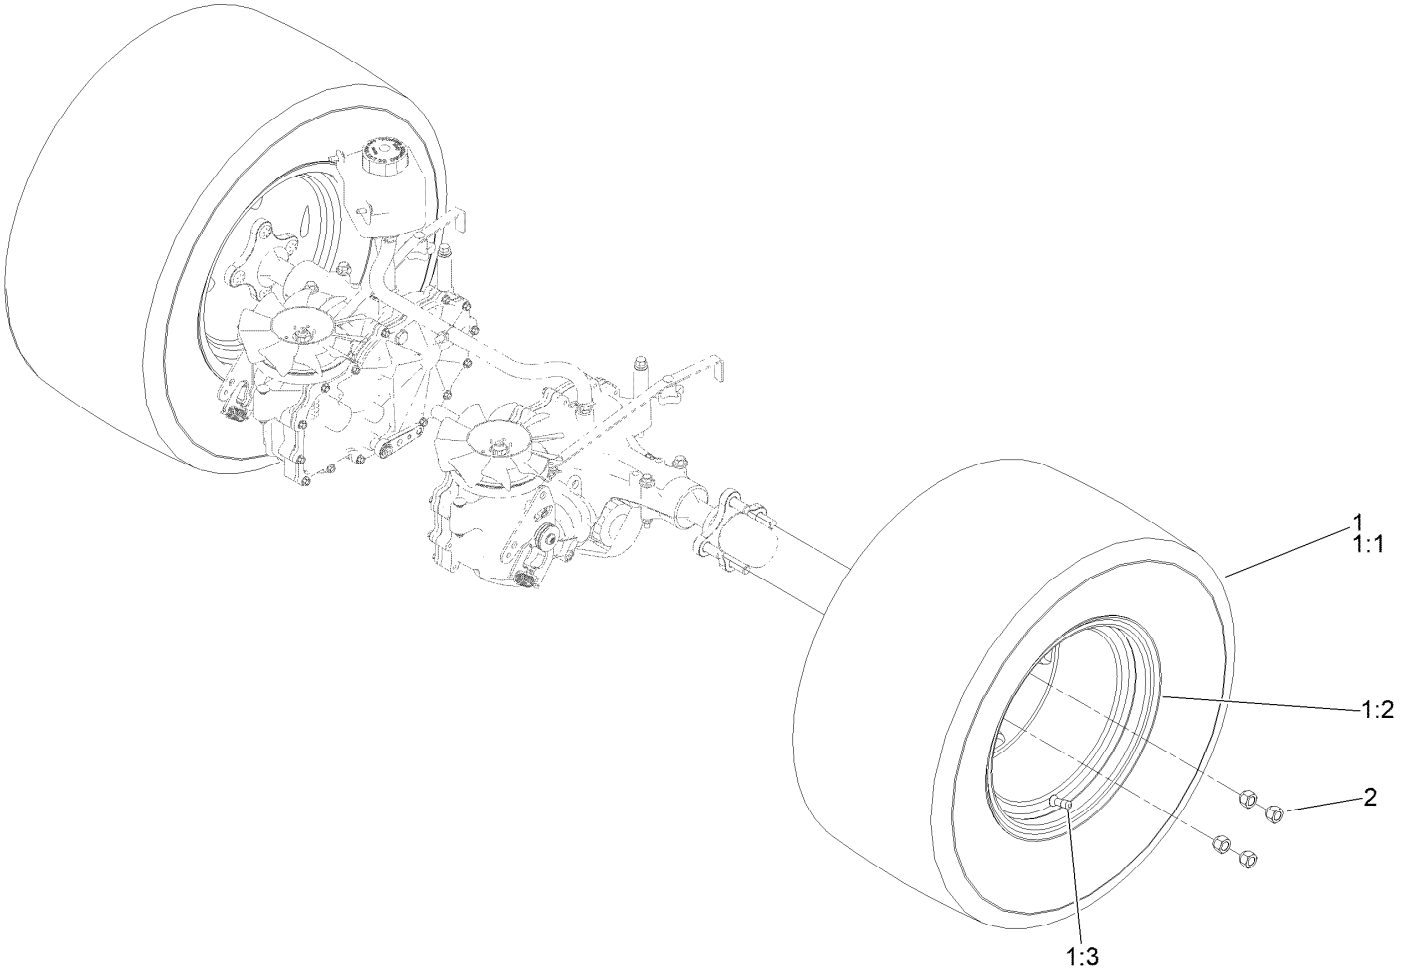

Rear Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	144-6986	2	ASM-Voodoo Trac 24X12-12
1:1	144-6963	1	Tire-Voodoo
1:2	144-6606	1	Wheel
1:3	232-27	1	Stem-Valve
2	242-50	8	Nut-Lug

Electrical Assembly

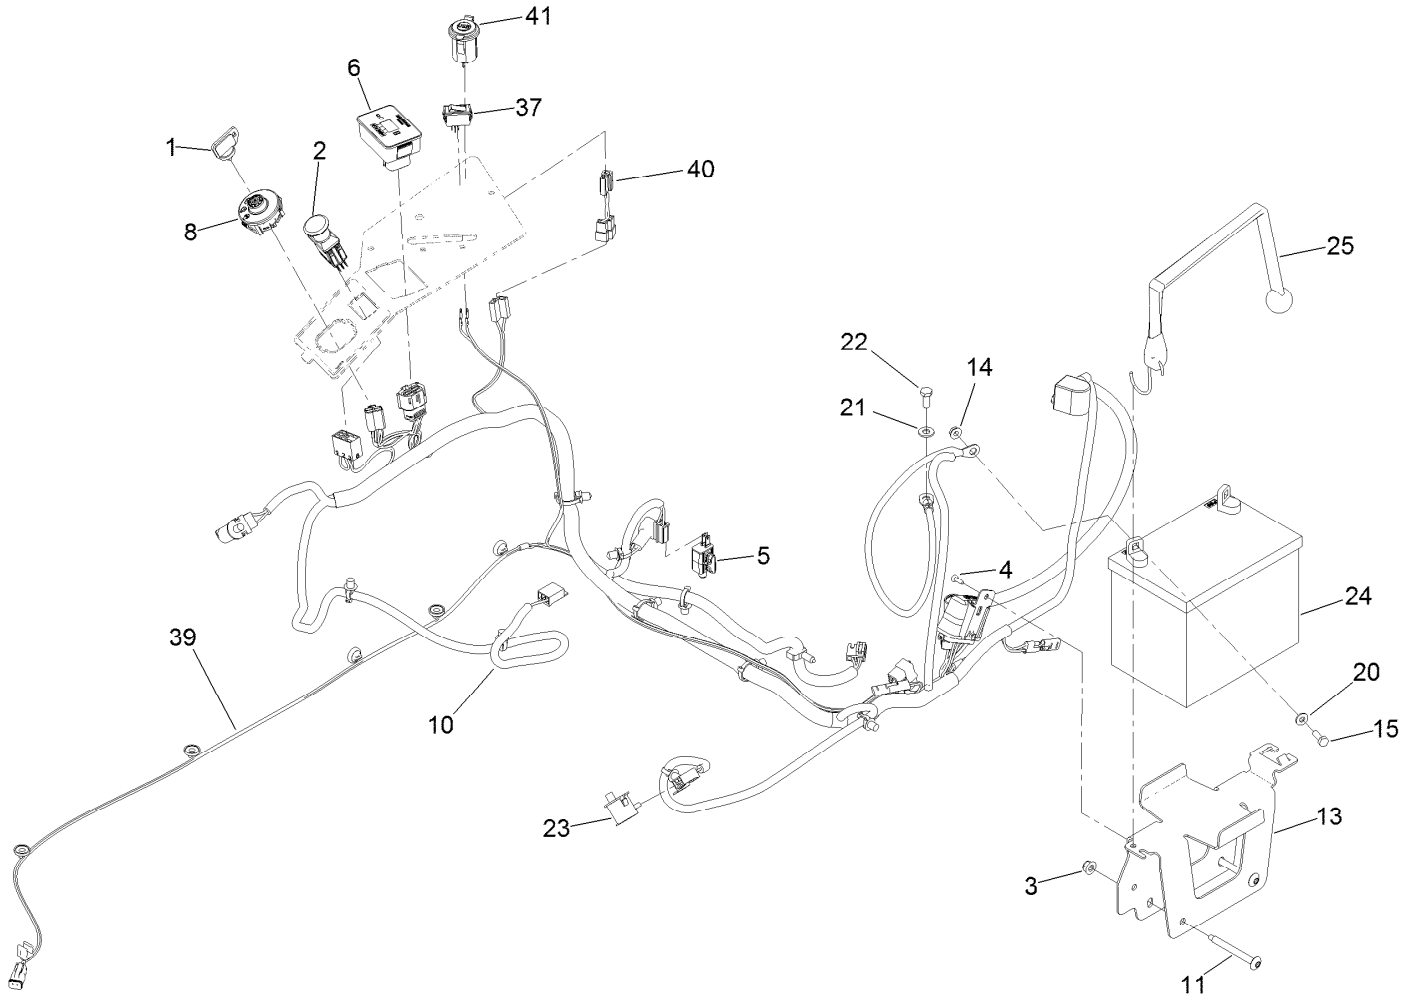

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	63-8360	1	Key-Ignition
2	103-5221	1	Switch-PTO
3	104-8300	2	Nut-HF, NI
4	105-6849	1	Screw-Forming, Thread
5	110-6765	1	Switch
6	116-5609	1	Module ASM
8	137-4100	1	Switch-Ignition
10	126-5803	1	Harness-Wire ▲
11	126-6267	2	Screw-TTH
13	126-6725-03	1	Tray-Battery
14	32128-33	2	Nut-HF
15	321-4	2	Screw-HH
20	3256-22	2	Washer-Flat
21	33094-00	1	Washer-Plain
22	33114-020	1	Screw-HH
23	82-2190	2	Switch-Bail
24		1	Battery ●■
25	142-8697	1	Strap, Bungee
37	92-8875	1	Switch-Rocker
39	140-4350	1	Harness - Wire
40	139-6395	1	Harness-Wire, USB Kit
41	140-7955	1	Port-Power, USB

● Obtain locally. ■ Not serviced separately

▲ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Wire Harness Assembly No. 126-5803

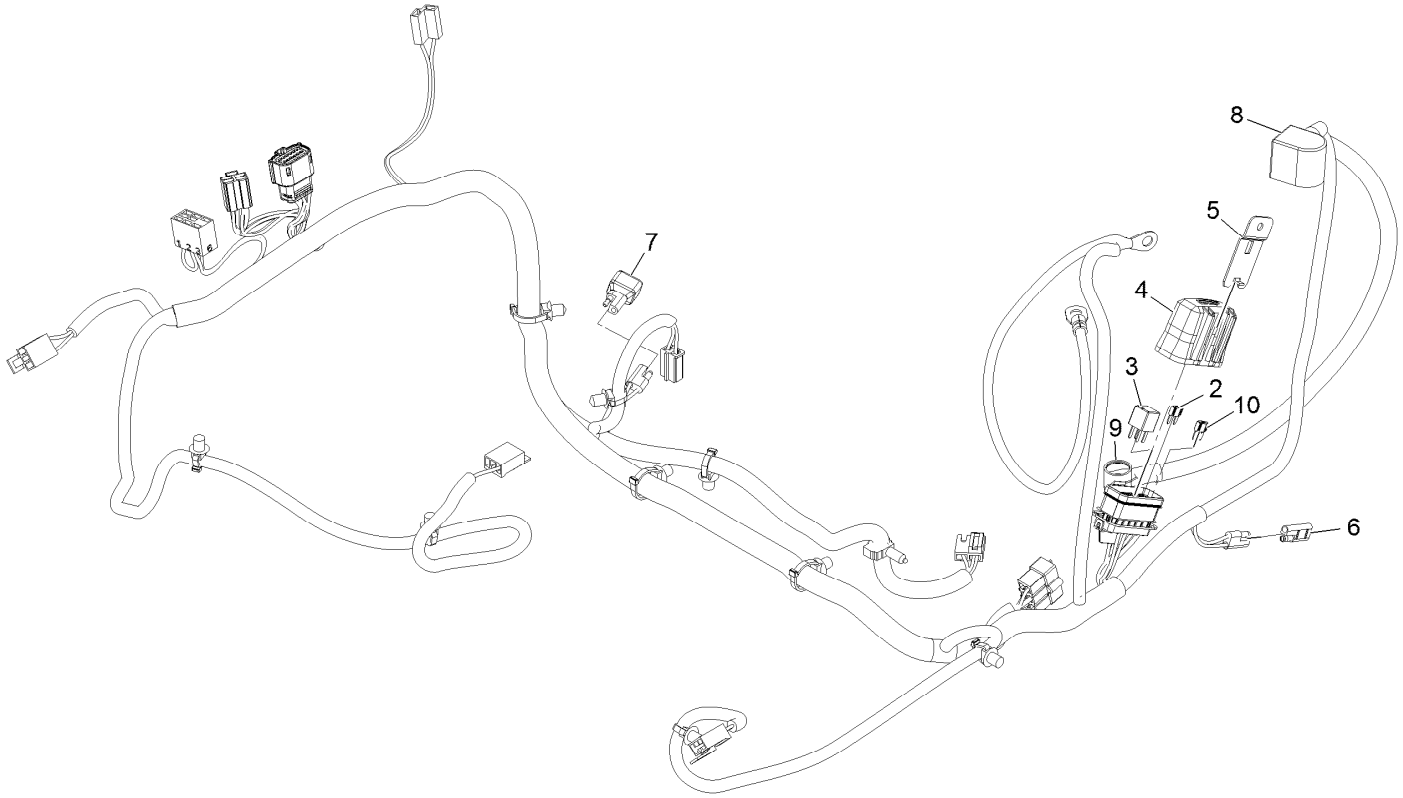

Wire Harness Assembly No. 126-5803 (continued)

Ref.	Part Number	Qty.	Description
2	121-8868	1	Fuse-Mini Blade, 20 Amp
3	126-3991	1	Relay-Micro
4	32180-176	1	Cover-Block, Fuse
5	32180-177	1	Clip-Mounting
6	116-0053	1	Cap-Plug
7	103-3895	1	Diode
8	126-8876	1	Insulator-Battery
9	1-543393	1	Insulator-Solenoid
10	121-8867	1	Fuse-Mini Blade, 15 Amp

Deck Lift Assembly

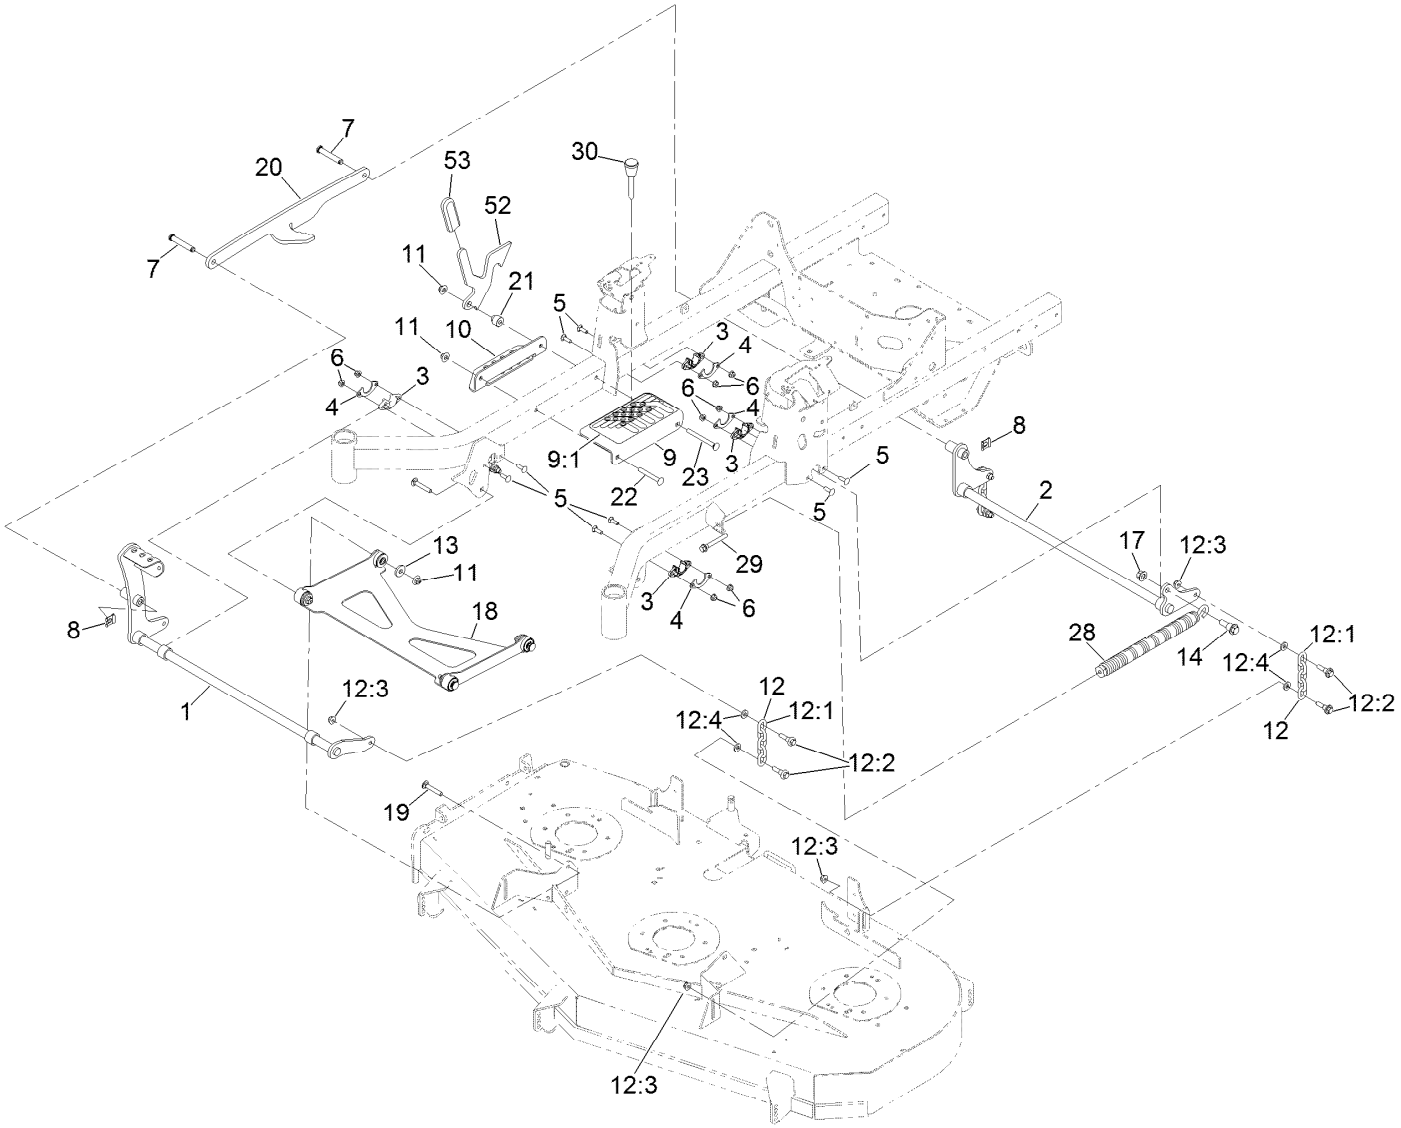

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3342-03	1	Shaft-Lift, Deck
2	126-3343-03	1	Shaft-Lift, Deck (Rear)
3	115-5065	4	Bushing-Flange
4	116-2887	4	Gusset-Lift, Deck
5	3230-22	8	Screw-CARR
6	104-8300	8	Nut-HF, NI
7	126-9181	2	Pin-Clevis
8	138-8491	2	Clip-Pin
9	126-4535	1	Bracket ASM
9:1	126-4784	1	Decal-HOC
10	126-4640-03	1	Angle-HOC, Lower
11	109-6658	4	Nut-Flange, NI
12	126-8877	4	Deck Chain ASM
12:1	1-633447	1	Chain-Lift, Deck
12:2	130-0742	2	Bolt-Shoulder
12:3	104-8301	2	Nut-HF, NI
12:4	43-0940	2	Spacer
13	1-373034	2	Washer
14	116-0780	1	Screw-Shoulder, HHF
17	99-5107	1	Nut-Lock
18	126-8365	1	Deck Strut ASM
19	3231-7	2	Screw-CARR
20	126-4639-03	1	Link-HOC
21	126-5221	1	Spacer-Stepped
22	3231-42	1	Screw-CARR
23	135-0313	1	Screw-CARR
28	116-0886	1	Spring-Extension
29	92-7674	1	Bolt-Shoulder
30	126-5401	1	Pin-HOC
52	140-1249	1	Plate-Transport Lock
53	132-4749	1	Grip-Lever

Deck Strut Assembly No. 126-8365

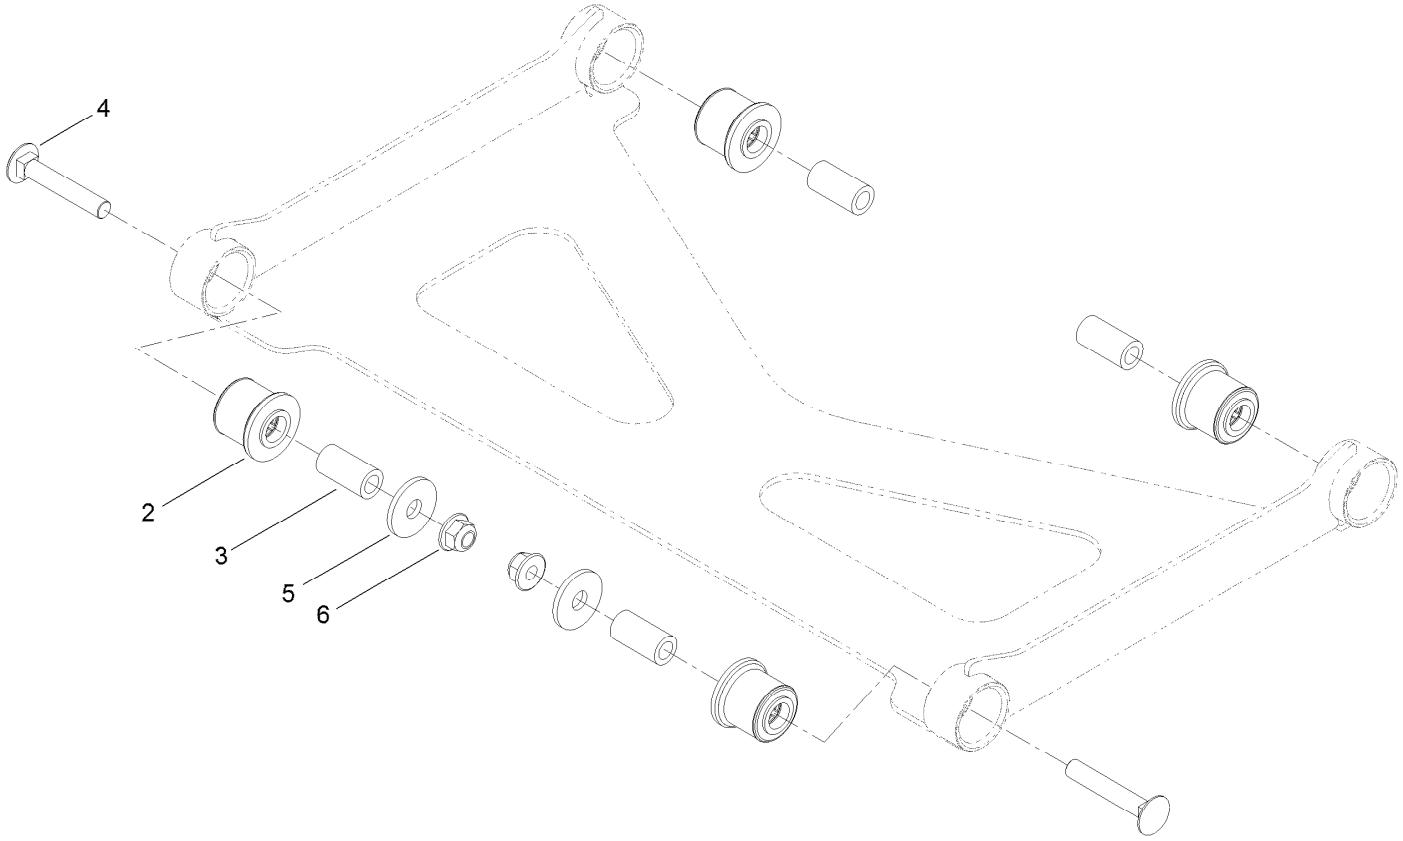

Deck Strut Assembly No. 126-8365 (continued)

Ref.	Part Number	Qty.	Description
2	126-8360	4	Bushing-Rubber, Suspension
3	108-6544	4	Spacer
4	3231-7	2	Screw-CARR
5	2844	2	Washer
6	104-8301	2	Nut-HF, NI

Engine, Clutch and Muffler Assembly

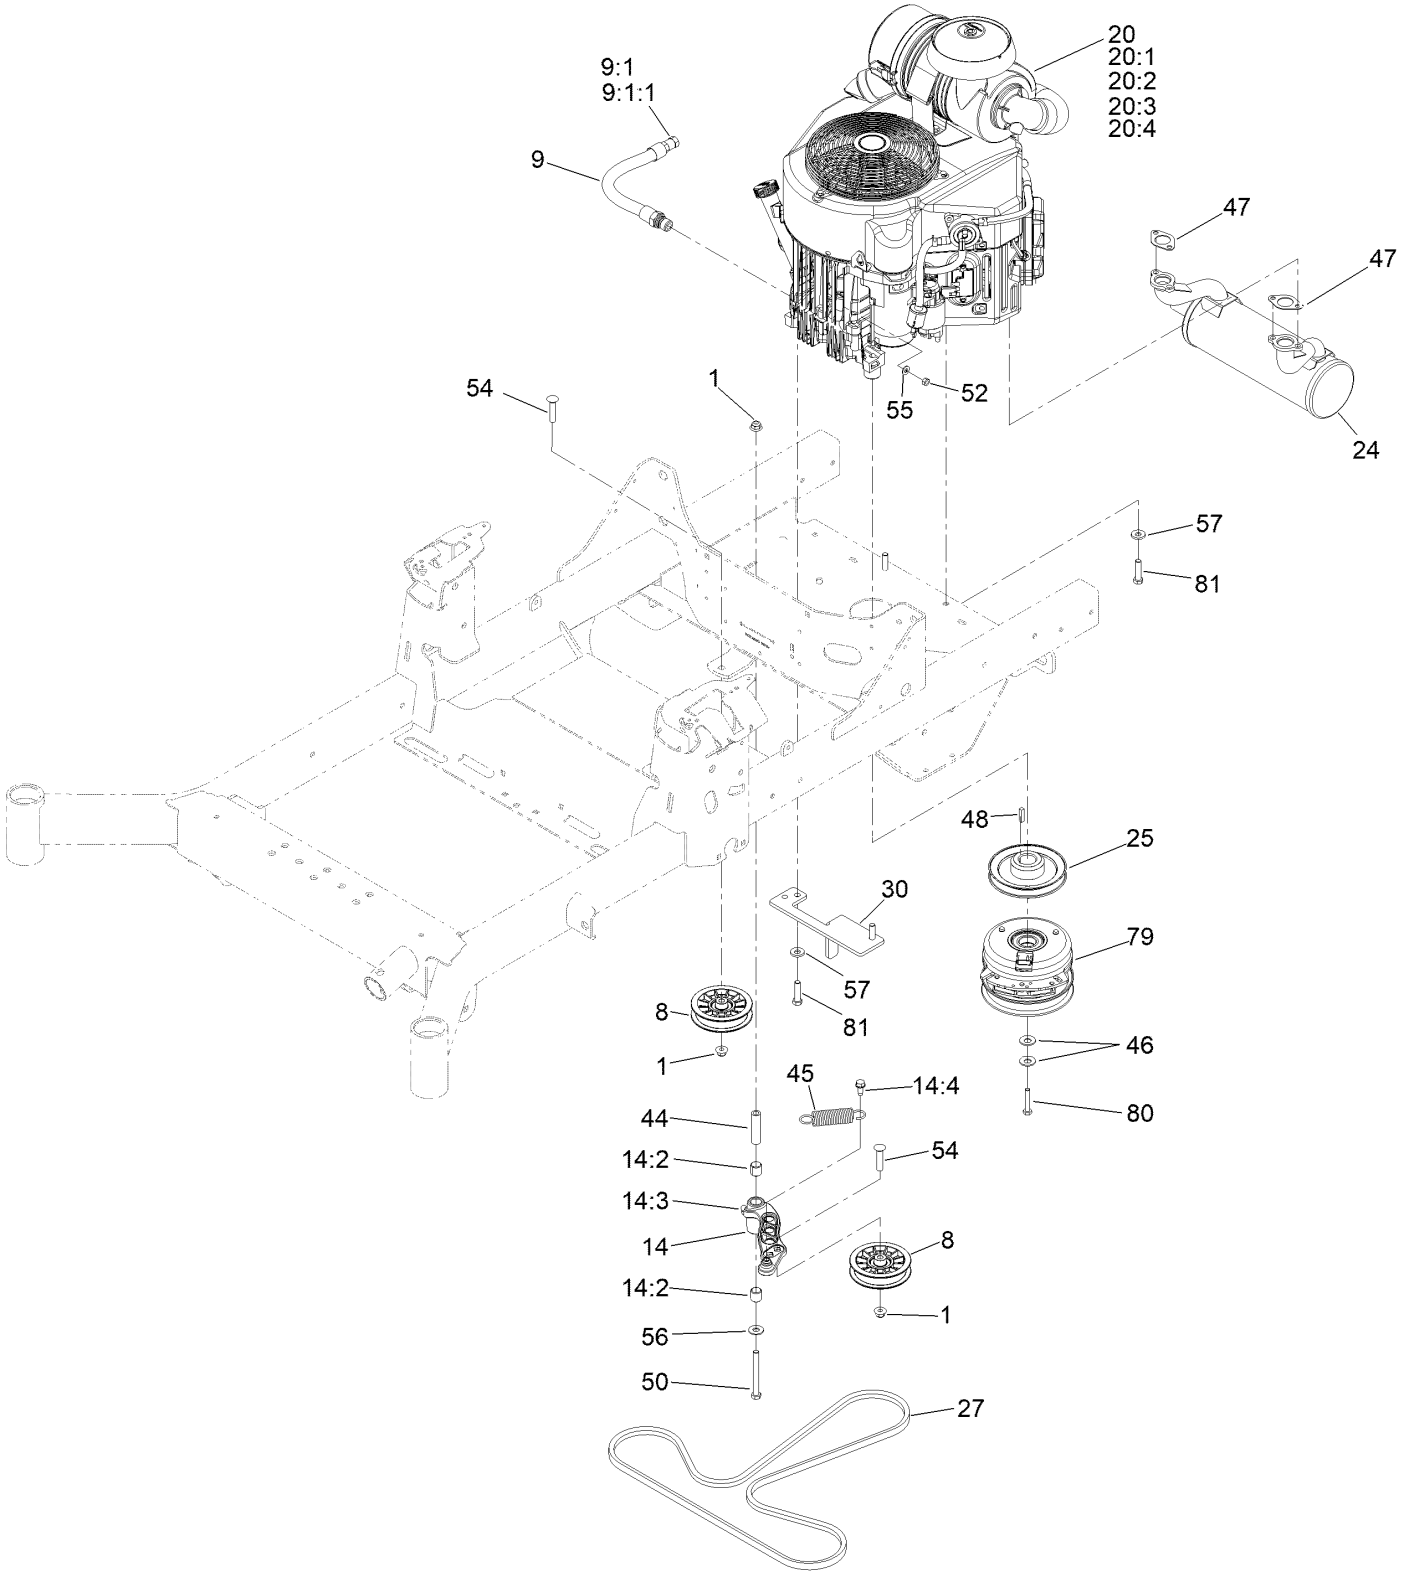

Engine, Clutch and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8301	3	Nut-HF, NI
8	116-2456	2	Pulley-Flat Idler
9	116-4924	1	Engine Oil Drain Hose ASM ■
9:1	353-508	1	Plug-HH ●
9:1:1	237-42	1	O-Ring
14	126-0973	1	Idler Arm ASM
14:2	1-513034	2	Sleeve-Bearing
14:3	302-40	1	Fitting-Grease, 90 DEG
14:4	32144-11	1	Screw-HWH
20		1	Engine-Kawasaki, Fx730V ▲◆
20:1		1	Kawasaki 49065-7007 Engine Oil Filter ▲◆
20:2		1	Kawasaki 49019-7005 Fuel Filter ▲◆
20:3		1	Kawasaki 11013-7045 Safety Filter ▲◆
20:4		1	Kawasaki 11013-7044 Engine Air Filter ▲◆
24	126-4360	1	Muffler
25	126-5358	1	Sheave (W/Hub)
27	126-5993	1	Belt-V
30	126-6687-03	1	Anchor-Clutch
44	1-603384	1	Bushing-Pivot, Idler
45	1-603402	1	Spring-Extension
46	1-603610	2	Washer-Spring
47	1-653313	2	Gasket-Exhaust
48	1-807259	1	Key
50	323-15	1	Screw-HH
52	3217-5	1	Nut-Hex
54	3231-29	2	Screw-CARR
55	3256-22	1	Washer-Flat
56	3256-4	1	Washer-Flat
57	98-5975	4	Washer-Belleville
79	140-5456	1	Clutch-PTO
80	3212-10	1	Screw-HH
81	323-7	4	Screw-HH

● Torque to 24-26 ft-lb
▲ Not serviced separately
■ Torque to 23-29 ft-lb
◆ Obtain parts from www.kawpower.com

Suspension Platform and Seat Assembly

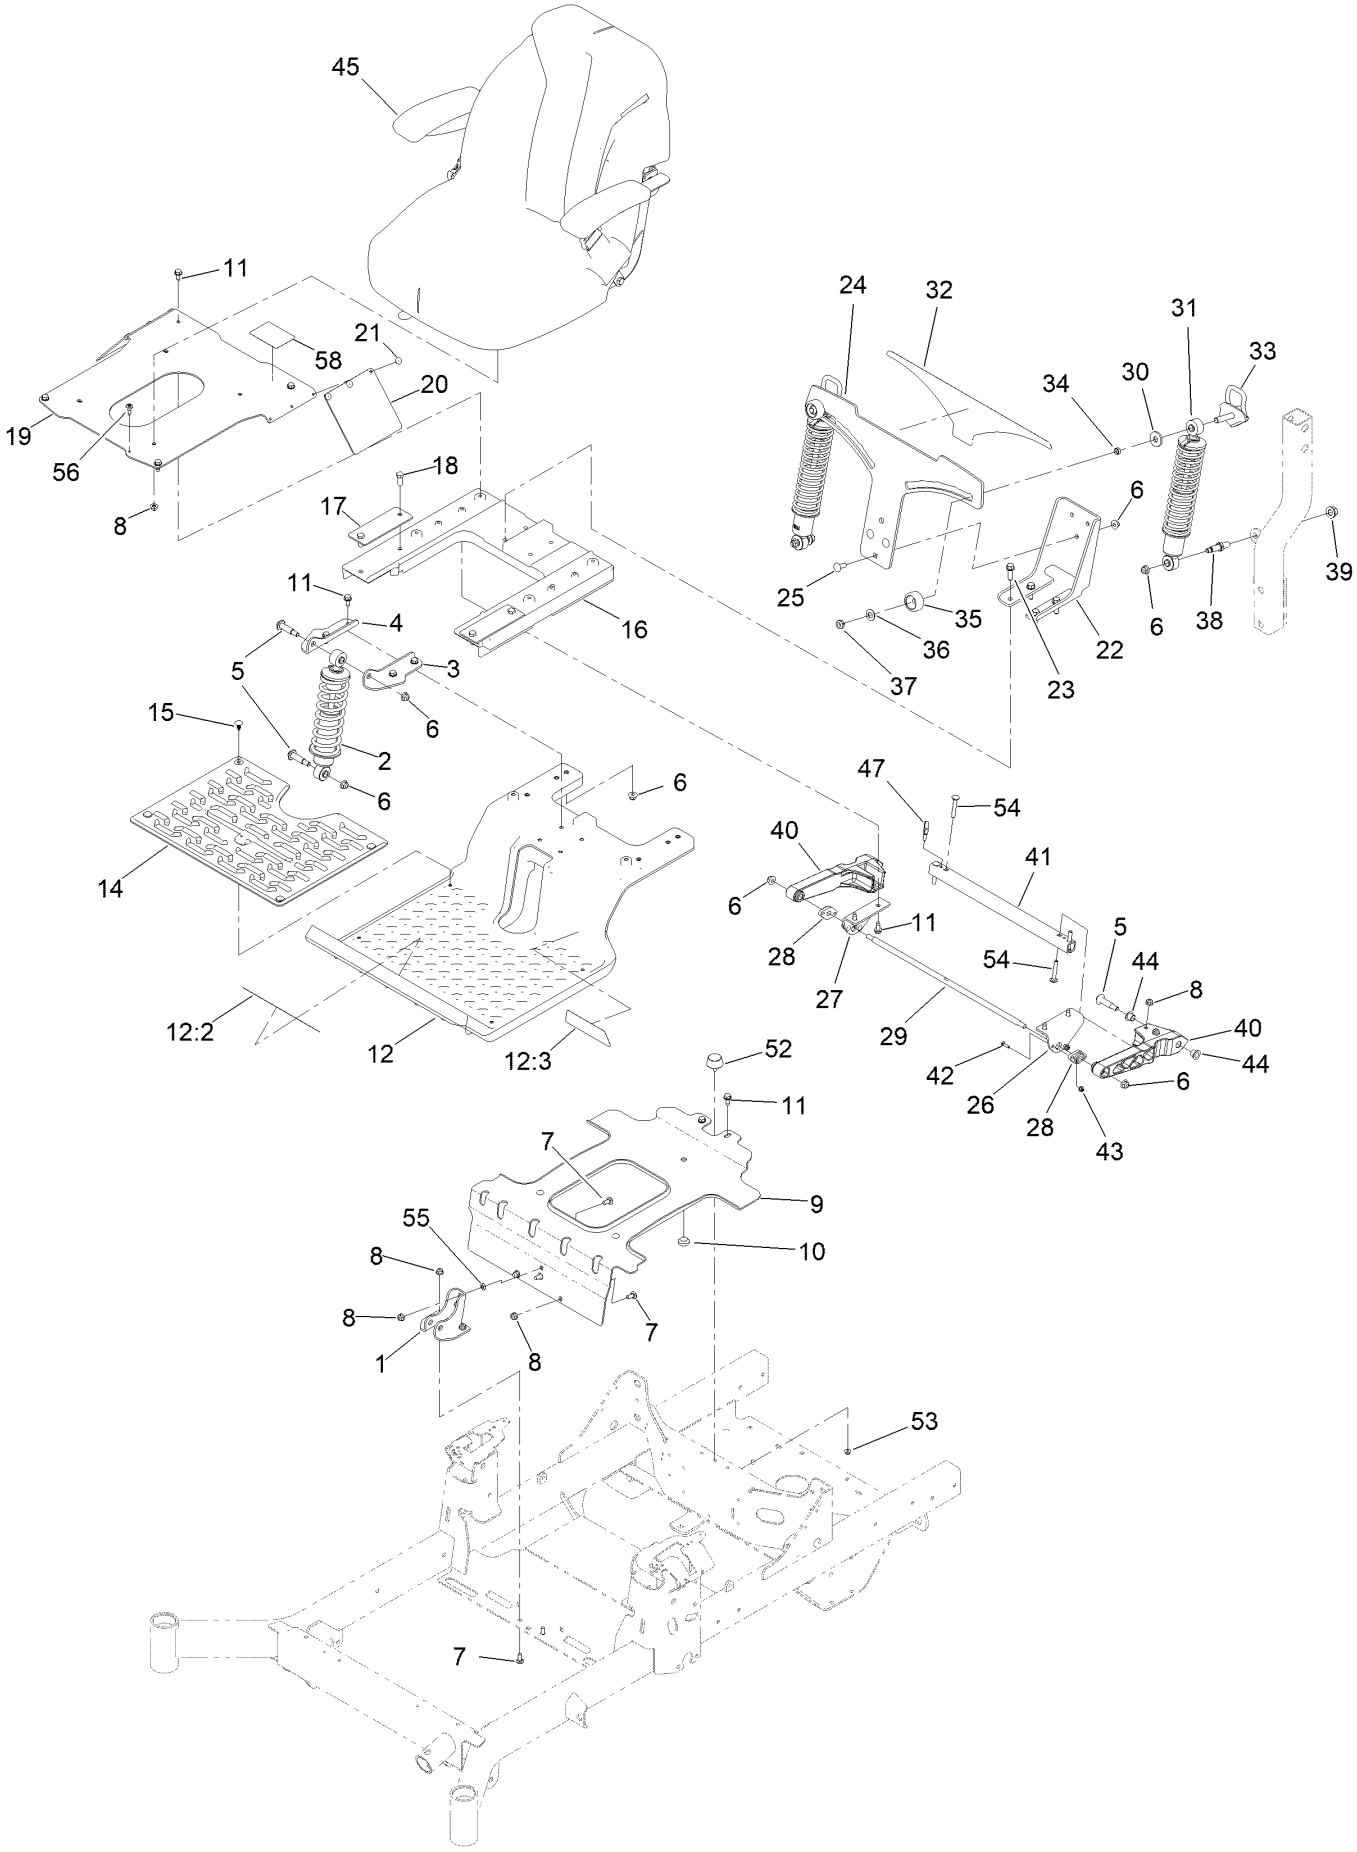

Suspension Platform and Seat Assembly (continued)

Ref.	Part Number	Qty.	Description
1	133-1864-03	1	Bracket-Shock, Front Lower
2	136-8971	1	Shock/Spring
3	133-9318-03	1	Bracket-Shock Mount, Upper (LH)
4	133-9319-03	1	Bracket-Shock Mount, Upper (RH)
5	136-9028	4	Bolt-Shoulder, HWH
6	104-8301	13	Nut-HF, NI
7	3230-23	6	Bolt-CARR
8	104-8300	14	Nut-HF, NI
9	136-8963-03	1	Bracket-Tank
10	135-0505	3	Bumper-Seat
11	32144-70	14	Screw-HWHTF
12	147-1654	1	Subframe-Front
12:2	132-0871	1	Decal-Danger
12:3	136-7470	1	Decal
14	144-2634	1	Floor Mat
15	117-2382	4	Plug-Plastic
16	137-7031	1	Subframe-Rear
17	133-7089-03	2	Plate-Backer
18	323-6	4	Screw-HH
19	136-8962-03	1	Plate-Seat
20	136-8967	2	Flap-Rubber
21	132-5064	6	Rivet-Pop
22	136-8955-03	1	Bracket-Mount, Lower
23	32144-109	4	Screw-Thd
24	136-1744-03	1	Plate-Mounting, Adj Shock
25	3231-22	3	Screw-CARR
26	136-1741-03	1	Bracket-Arm, Trailing (LH)
27	136-1742-03	1	Bracket-Arm, Trailing (RH)
28	127-0146	2	Bearing-Flange
29	136-1739	1	Rod-Pivot
30	131-4699	2	Washer-Plastic
31	133-5193	2	Shock/Spring ASM
32	136-1720	1	Decal-Myride
33	136-5634	2	Cam Lock ASM
34	133-5109	2	Bearing-Sleeve
35	136-5636	2	Knob-Lock, Cam
36	3-6803	2	Washer-Adjusting
37	3296-45	2	Nut-Hex
38	133-4401	2	Bolt-Shoulder
39	99-5107	2	Nut-Lock
40	136-8979	2	Trailing Arm
41	137-9754-03	1	Tube-Arm, Trailing
42	3229-20	4	Screw-CARR
43	120-4578	4	Nut-HF
44	125-5239	4	Bushing-Flange
45	144-3771	1	Seat-Fixed Toro
47	105-1853	1	Clamp-Hose
52	131-8834	1	Bumper
53	104-7201	1	Nut-HF, NI
54	3230-6	4	Bolt-CARR
55	117-2749	2	Nut-Push
56	135-2015	1	Screw-Shoulder
58	136-9024	1	Decal-Aid, Service

Seat Assembly No. 144-3771

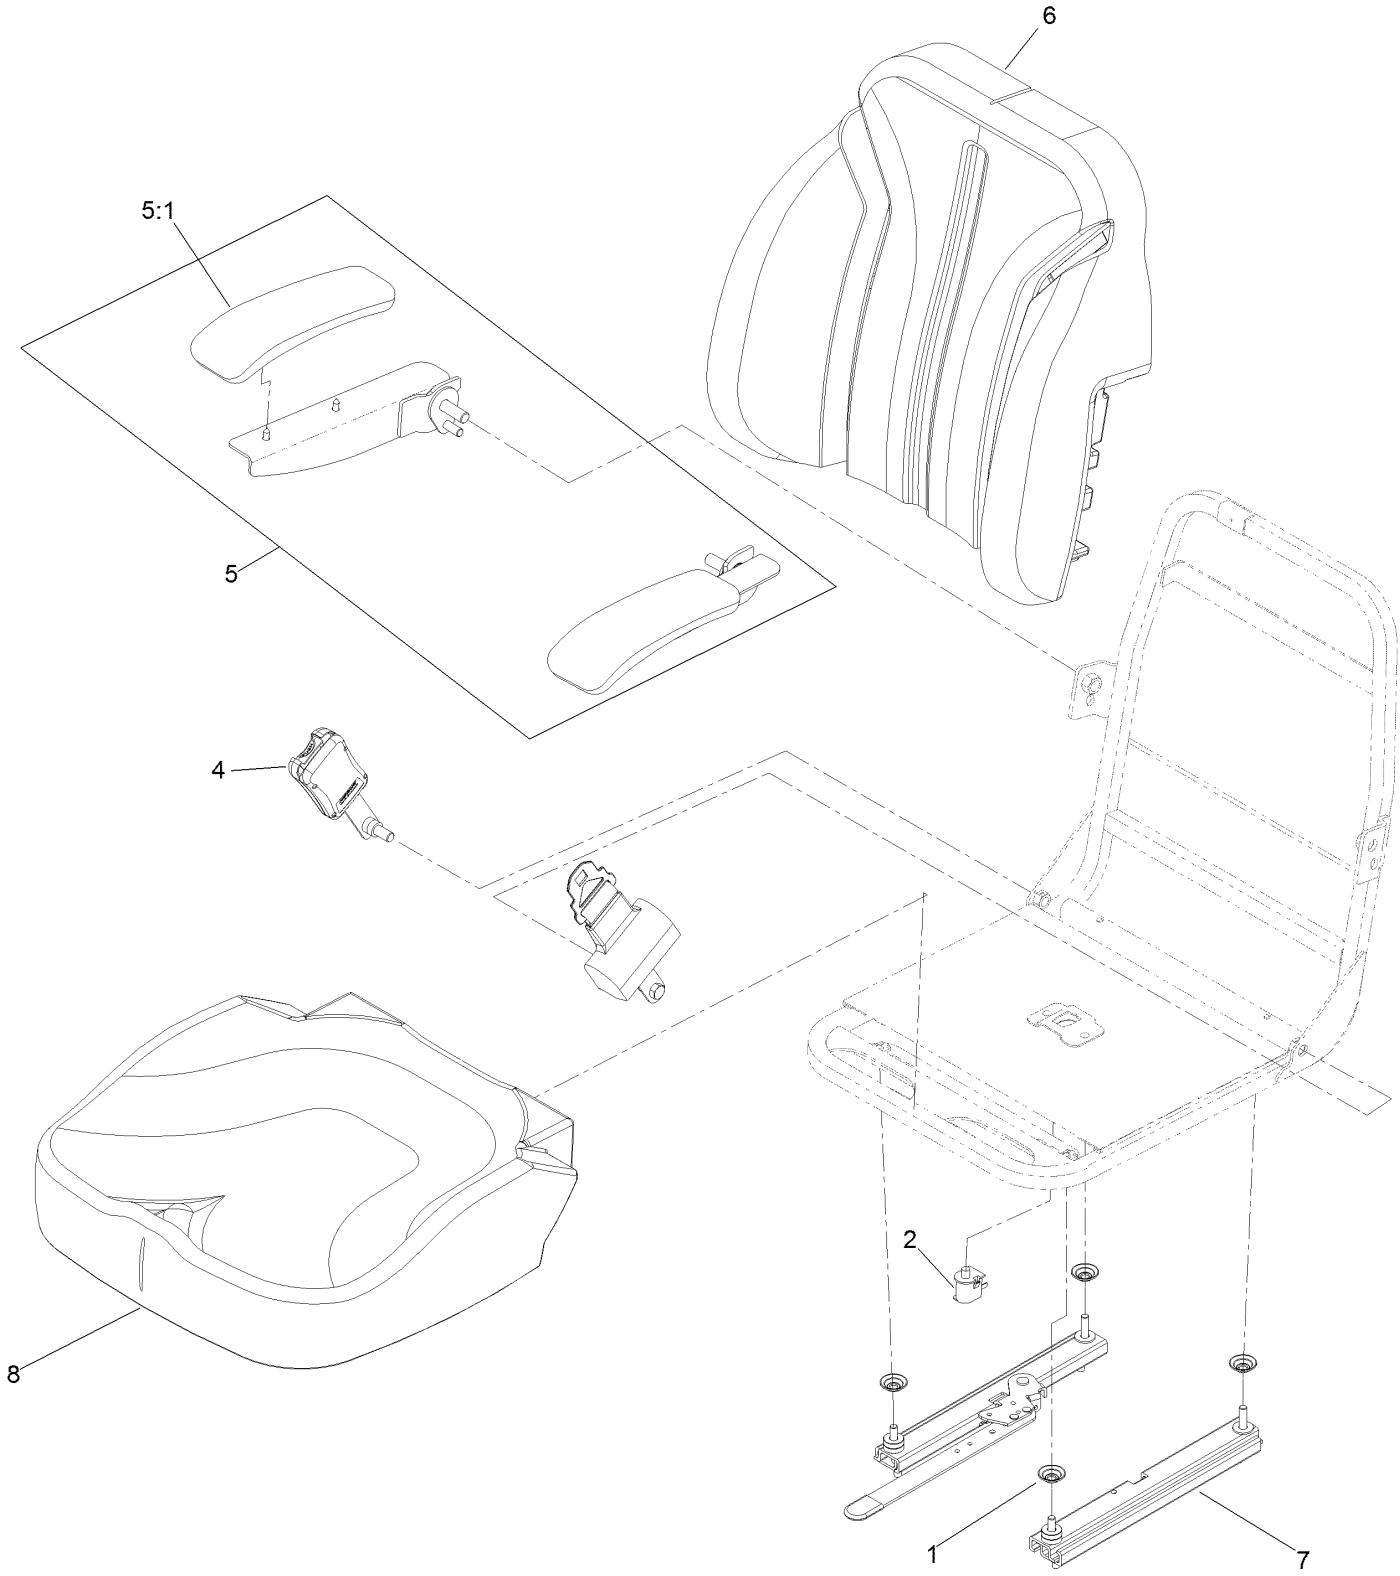

Seat Assembly No. 144-3771 (continued)

Ref.	Part Number	Qty.	Description
1	136-9002	4	Spacer-Mounting
2	82-2190	1	Switch-Bail
4	126-9091	1	Seat Belt Kit
5	126-2058	1	Armrest Kit
5:1	110-4163	2	Cushion-Rest, Arm
6	144-3772	1	Cover-Back, Toro Seat
7	126-2177	1	Track-Seat
8	144-3773	1	Cover-Bottom, Toro Seat

Deck Assembly

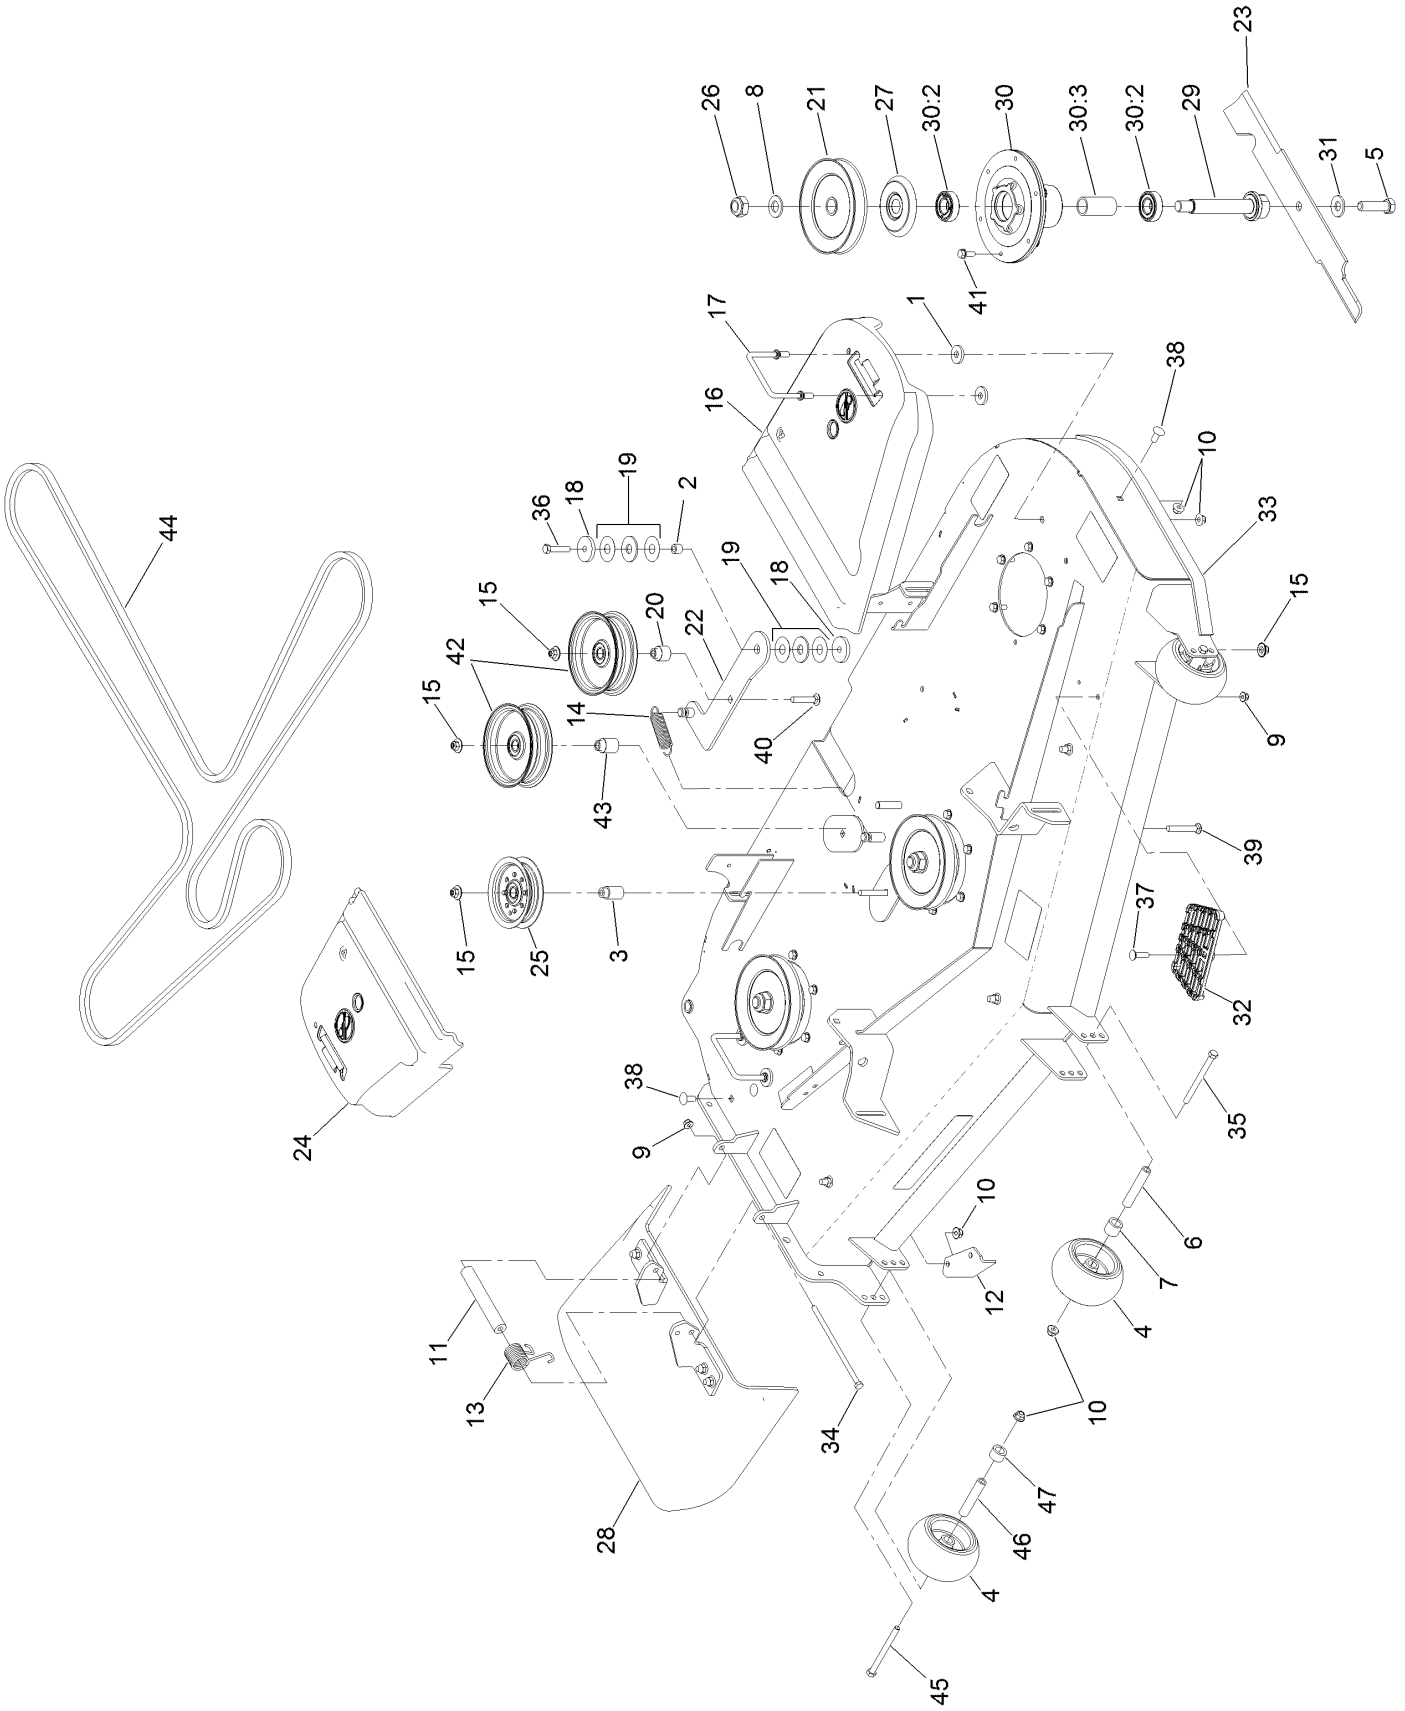

Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-373034	4	Washer
2	1-413088	1	Bushing-Lever, Lift
3	1-413113	1	Bushing-Idler
4	1-603299	3	Roller-Scalp, Anti
5	51-4060	3	Screw-Blade
6	98-7912	2	Tube-Spanner
7	98-7913	2	Tube-Spacer
8	92-5836	3	Washer
9	104-8300	2	Nut-HF, NI
10	104-8301	13	Nut-HF, NI
11	105-4622	1	Spacer
12	107-8541-01	1	Baffle-Discharge
13	108-4052	1	Spring-Torsion
14	139-3616	1	Spring - Extension
15	109-6658	4	Nut-Flange, NI
16	109-6938	1	Cover-Belt, LH
17	109-6982	2	Wireform-Cover
18	110-9981	2	Washer-Plain
19	114-0463	2	Washer-Friction, Composite
20	126-7684	1	Bushing-Idler
21	135-0363	3	Sheave-Drive, Blade
22	115-5054	1	Arm-Idler
23	133-2127	3	Blade-Rotary, 20.5In (Hi Flow)
24	116-0094	1	Cover-Belt, RH
25	116-3626	1	Pulley-Idler
26	3296-67	3	Nut-Lock, NI
27	117-7210	3	Shield-Bearing
28	120-2451	1	Deflector ASM
29	126-7629	3	Shaft-Spindle
30	120-5477	3	Spindle ASM
30:2	116-0720	2	Bearing-Ball
30:3	115-2641	1	Spacer-Bearing
31	125-1736	3	Washer-Belleville
32	126-4781-03	1	Step-Deck
33	126-8958	1	Deck Decal ASM
34	322-50	1	Screw-HH
35	323-23	2	Screw-HH
36	323-9	1	Screw-HH
37	3230-3	1	Screw-CARR
38	3231-27	6	Screw-CARR
39	3231-31	2	Screw-CARR
40	3231-6	1	Screw-CARR
41	32144-41	18	Screw-Taptite
42	116-4669	2	Idler-Pulley, Flat
43	126-7683	1	Bushing-Idler
44	135-1873	1	Belt-Deck Drive
45	323-17	1	Screw-HH
46	133-2129	1	Tube-Shafting
47	133-2128	1	Tube-Spacer

Deflector Assembly No. 120-2451

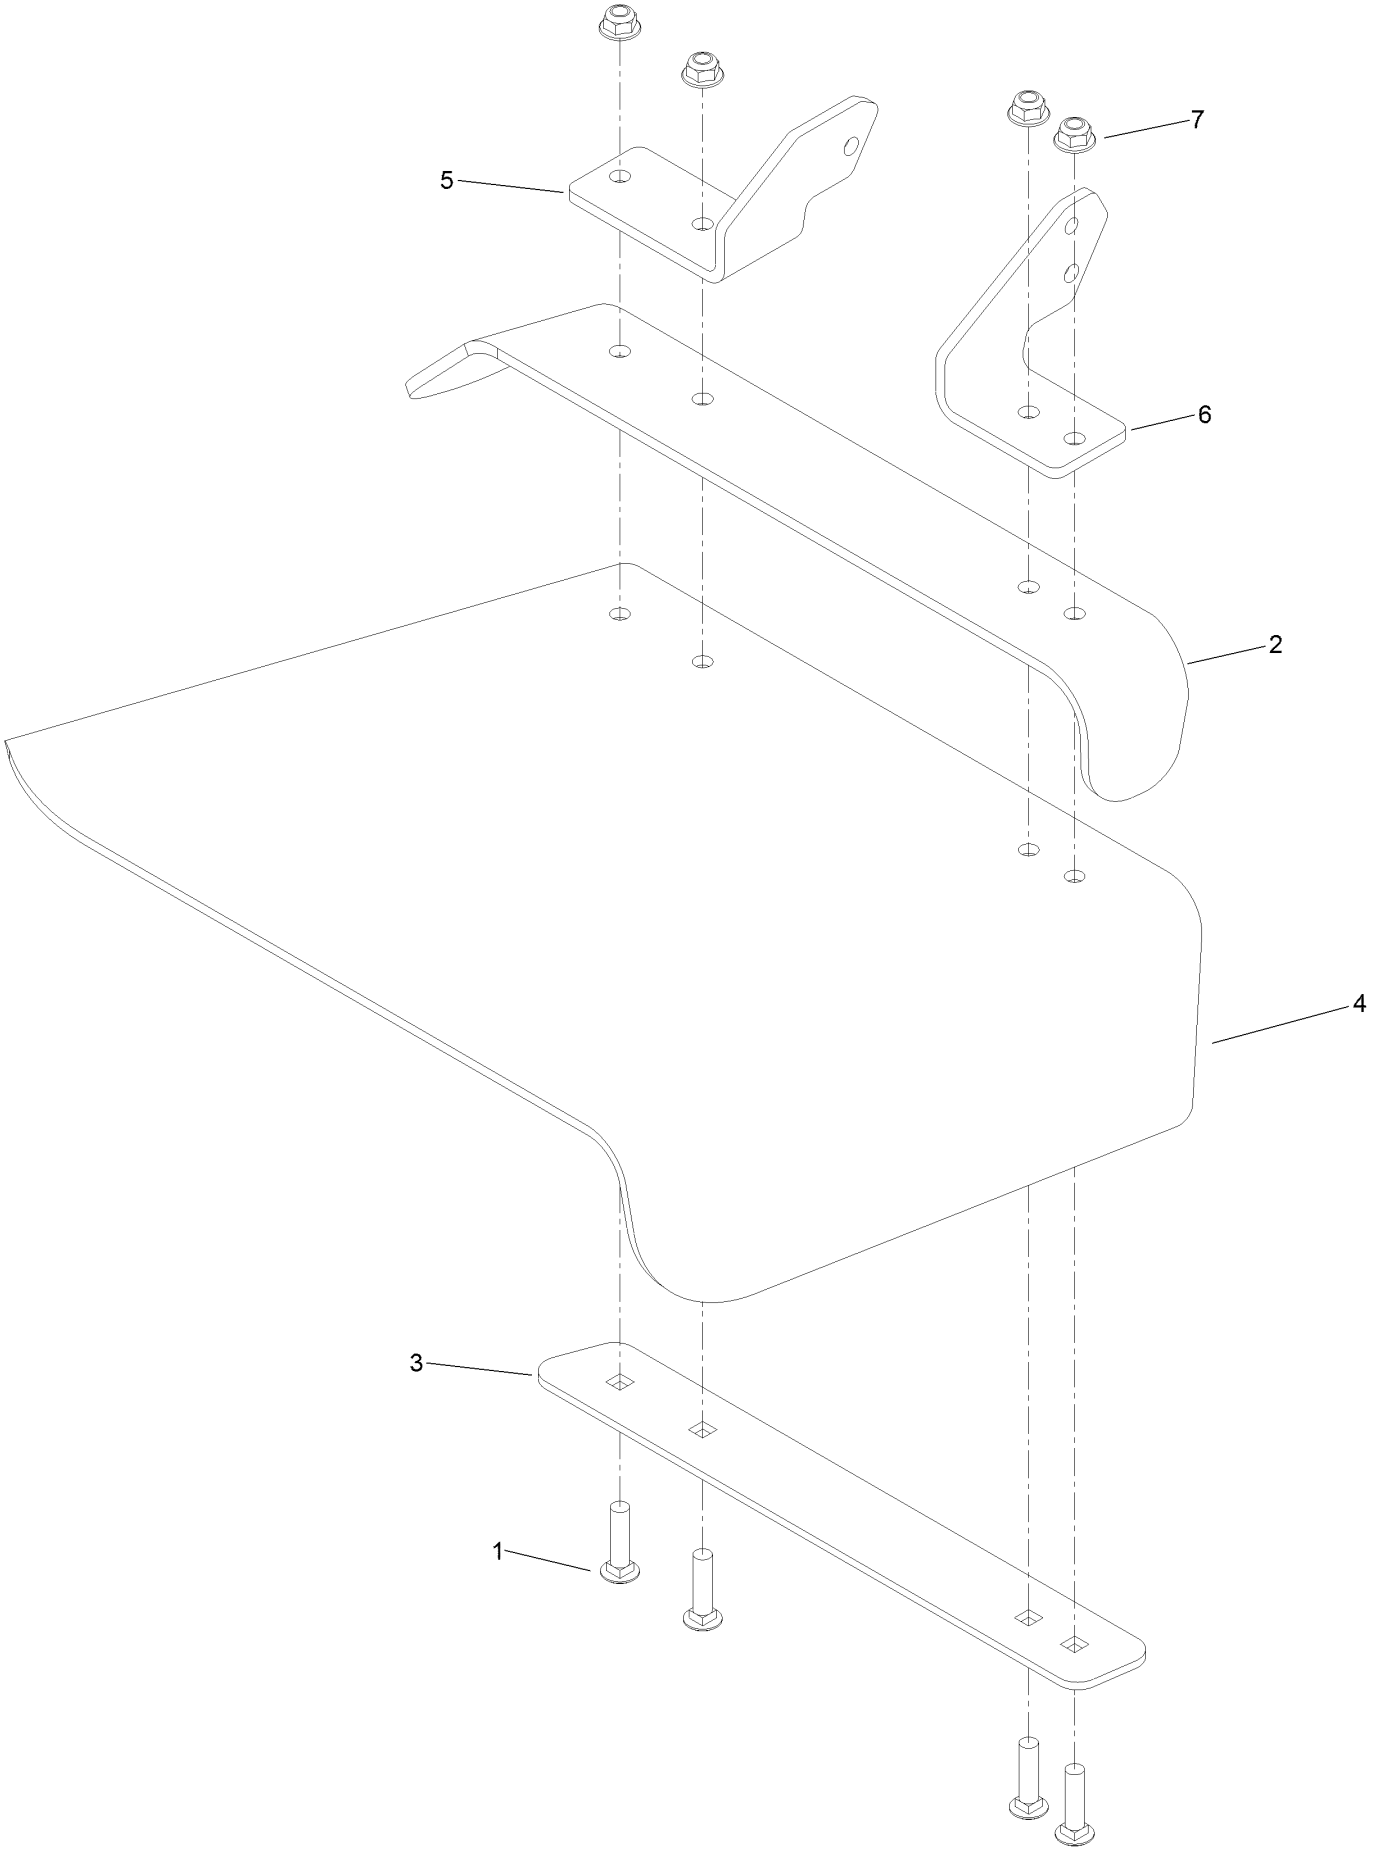

Deflector Assembly No. 120-2451 (continued)

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI

Deck Decal Assembly No. 126-8958

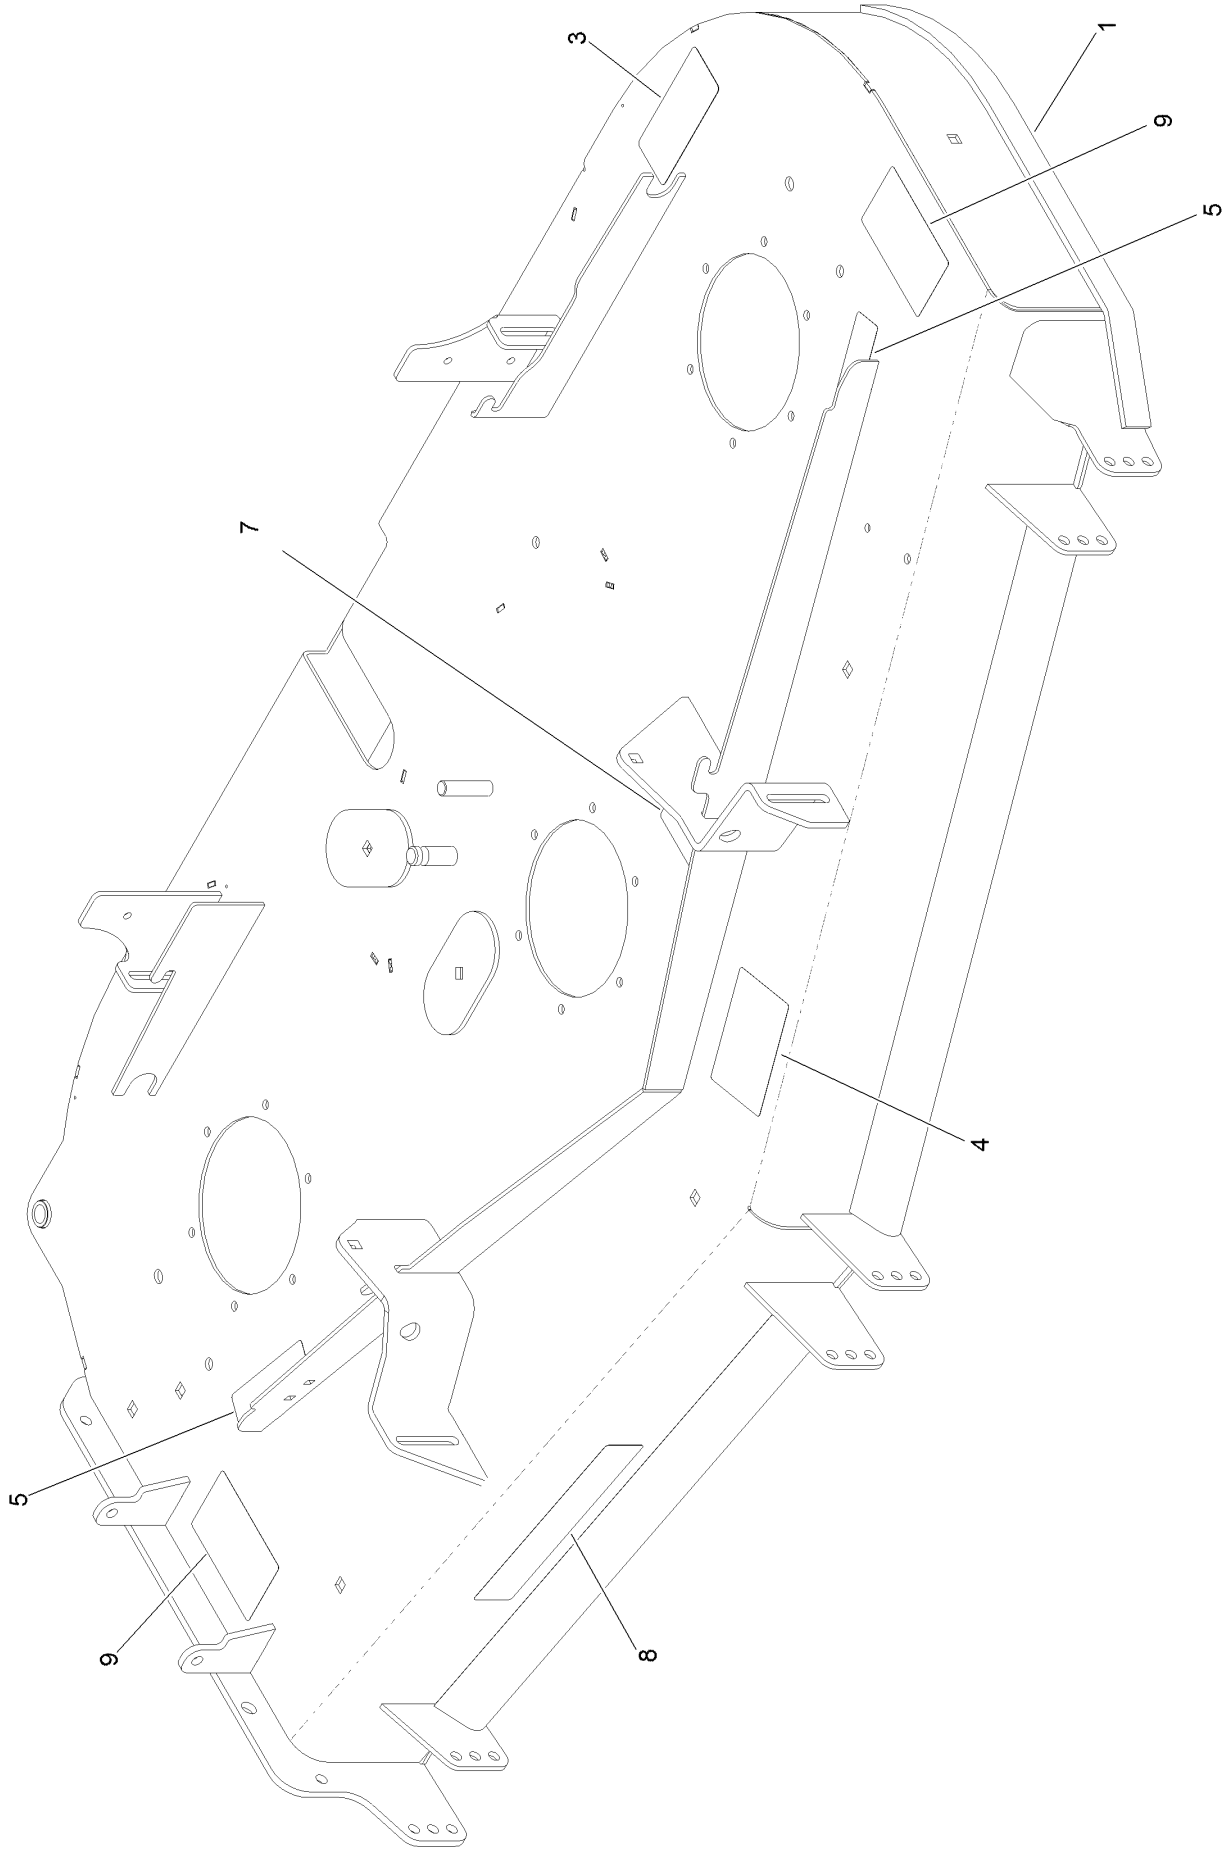

Deck Decal Assembly No. 126-8958 (continued)

Ref.	Part Number	Qty.	Description
1		1	Deck Decal ASM ●
3	93-7818	1	Decal-Torque, Blade Bolt
4	112-3858	1	Decal-Scalp, Anti
5	112-9028	2	Decal-Cover, Missing
7	117-1194	1	Decal-Routing, Belt
8	107-1619	1	Decal
9	117-3848	2	Decal-Danger

● Not serviced separately

Attachments and Accessories

For 77293 60in Z Master Professional MyRide 2000 Series Riding Mower

Product Name	Model/Part
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Cover-Hitch	126-8299
Trash Container Kit	126-8379
Weight Caster Kit	126-8639
60in Recycler Kit	126-8703
Jack Kit	127-6666
Engine Maintenance Kit-Kawasaki FX	133-1307
Hi-Back Seat Cover	133-1308
Blade-Rotary, 20.5in (Hi Flow)	133-2127
Blade-Rotary, Atomic 20.5in	133-2157
Blade-Rotary, Recycling 20.5in	133-2161
Blade (6 Pack) 20.5in, Hi Flow	133-2174
Blade (6 Pack) 20.5in, Recycler	133-2177
Blade (6 Pack) 20.5in, Atomic	133-2180
5 Gallon Bucket	133-2533
MVP Belt And Blade Kit, Titan Hd 1500 Or 2000 Series Riding Mower With 60in Deck	135-2254
HD Shock and Spring Kit	137-2042
Spark Arrestor, 1.25 I.D.	137-8098
Tweel-Turf	139-3649
Asm-semi Pneumatic 13x6.50-6	140-4896
Tilt Sensor-Radius	142-2802
Kit-Light (mid-mount ZRT Mower)	144-1992
Kit-Jack Mount	144-1993
Hardtop Sun Canopy	144-3719
Handle Extension Kit	145-3615
Bucket Mount Kit	145-3687
Universal Mount Kit	145-3688
Trimmer Mount Kit	145-3689
Kit-Titan Hd Triple Threat Attachment	145-3691
Toro Deluxe Rider Cover	490-7319
E-Z Vac Standard Blower Kit 60-in 5d	78403
Heavy Duty Bagger Kit	78431
60in Completion Kit	78435
Standard EZ Vac Bagger	78481

Notes:

Count on it.