Form No. 3437-947 Rev C

TORO®

Count on it.

Parts Catalog

TX 1000 Wide Track

Compact Tool Carrier

22328HD—414000000

www.Toro.com.

CE

3437-947 C

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Frame Assembly 4
LH Fuel Tank Assembly No. 130-1026 6
RH Fuel Tank Assembly No. 130-1027 8
Hydraulic Tank and Track Shaft Assembly 10
Track, Drive Wheel and Tensioner Assembly 12
Brake Assembly 14
Front Tower Assembly 16
Hydraulic Motor and Hose Assembly 18
Hydraulic Motor Assembly No. 138-0761 20
Hydraulic Motor Assembly No. 138-0778 22
Radiator and Air Cleaner Assembly 24
Radiator Support Kit Assembly No. 161-7280 26
Air Cleaner Assembly No. 93-2190 28
Engine and Muffler Assembly 30
Tandem Pump and Gear Pump Assembly 32
Tandem Pump Assembly No. 138-0767 34
Gear Pump Assembly No. 130-7731 36
Control Valve and Reference Bar Assembly 38
Control Valve Assembly No. 145-3279 40
2-Spool Valve and Auxiliary Valve Assembly 42
2-Spool Valve Assembly No. 144-7353 44
Double Detent Auxiliary Valve Assembly No. 145-4402 46
Loader Arm Assembly 48
Hydraulic Cylinder Assembly No. 140-7634 50
Hydraulic Cylinder Assembly No. 139-0779 52
Loader Hydraulic Assembly 54
Quick Attach Assembly 56
Front Cover and Side Panel Assembly 58
Hood Assembly 60
Manual Tube Assembly 62
Platform Assembly 64
Electrical Assembly 66
Attachments and Accessories 68

© 2025—The Toro® Company

8111 Lyndale Avenue South
Bloomington, MN 55420

www.Toro.com.
Printed in the USA.


Frame Assembly

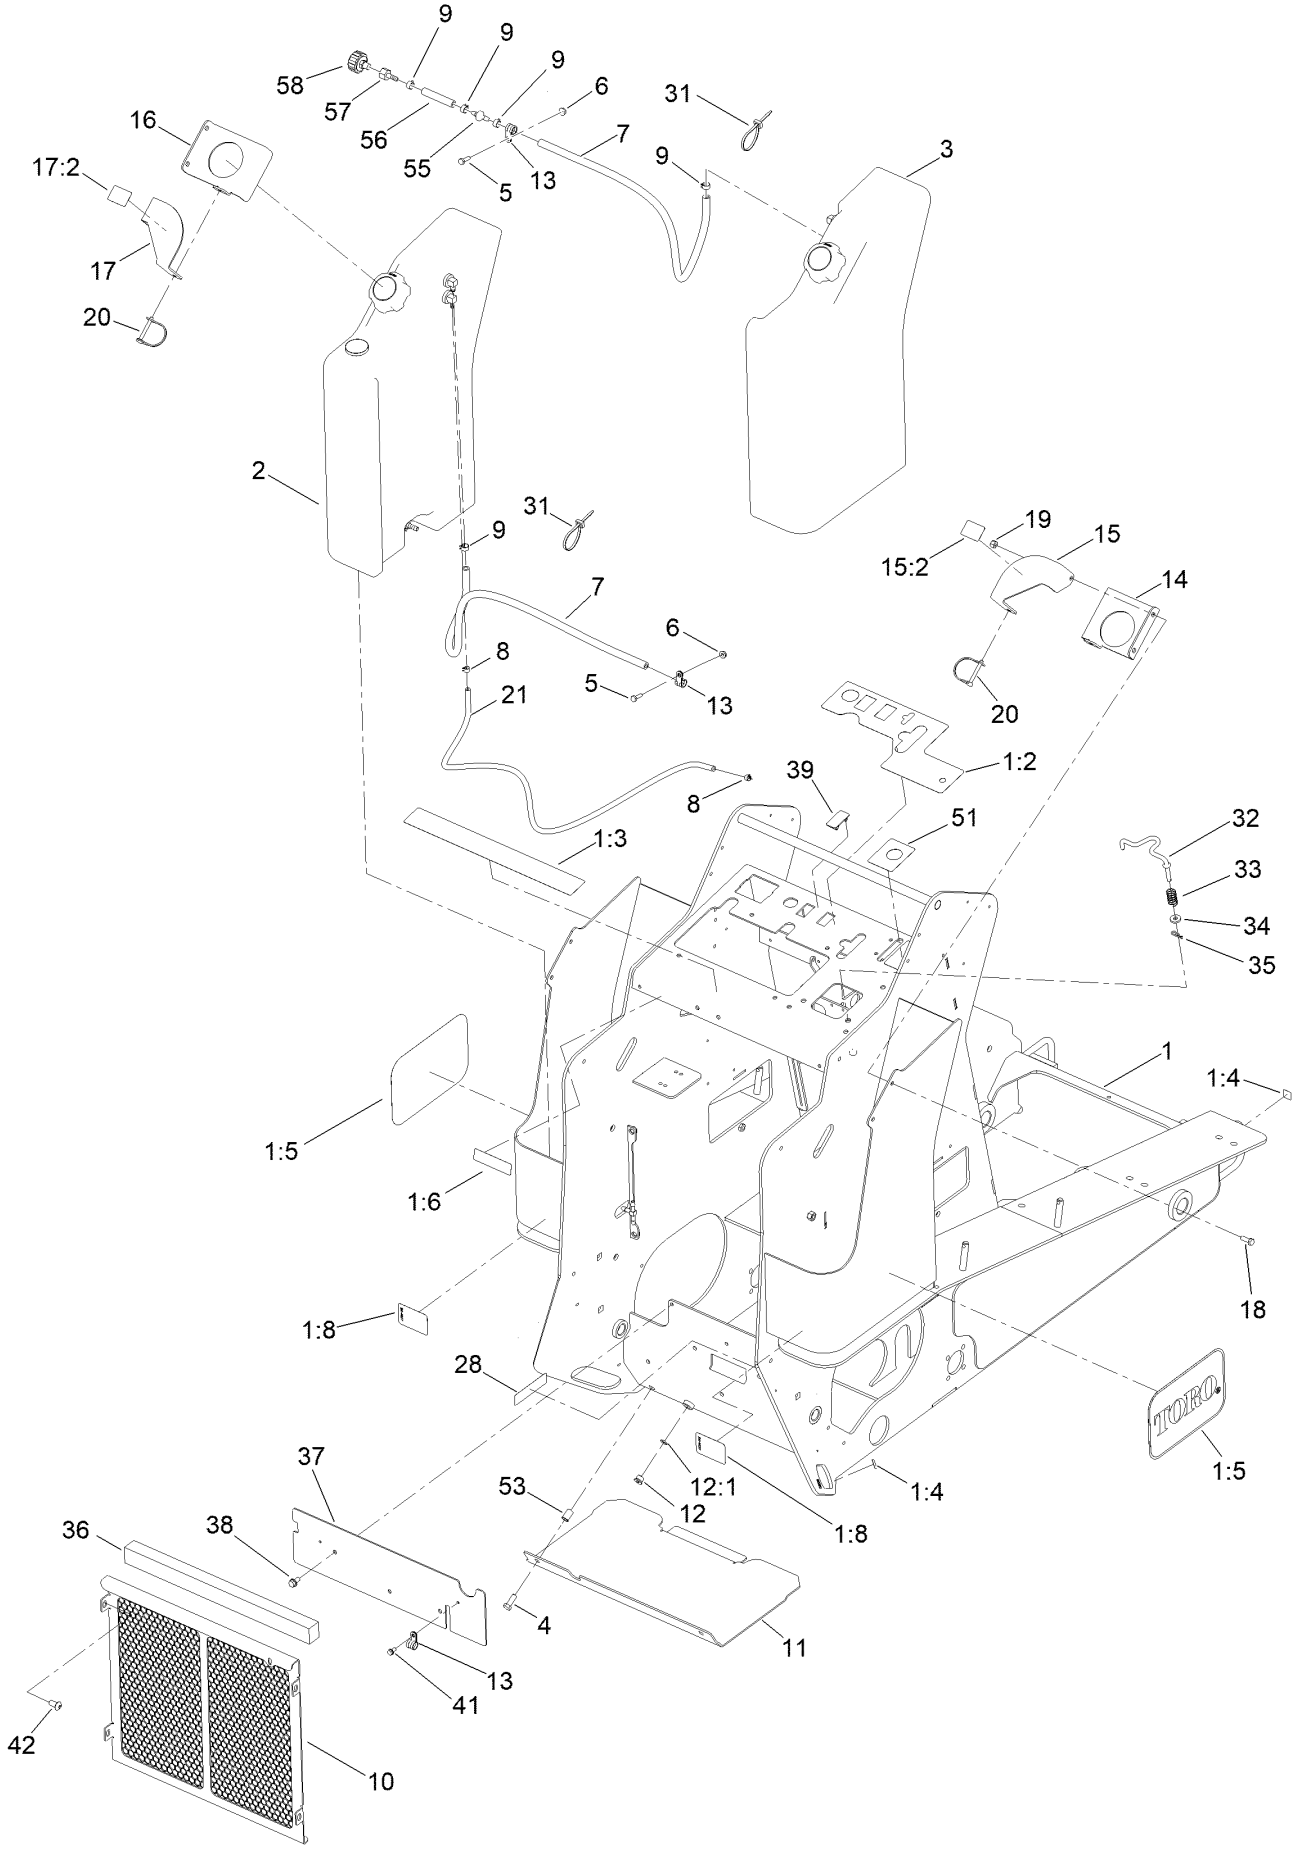

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	144-7379	1	Tx1000 Frame ASM (Service)
1:2	138-0828	1	Decal-Control Panel
1:3	145-0637	1	Decal-Safety
1:4	93-9084	4	Decal-Point, Lift
1:5	66-6140	2	Decal
1:6	115-4865	1	Decal-Fill, Radiator
1:8	100-4627	2	Reflector
2	130-1026	1	LH Fuel Tank ASM
3	130-1027	1	RH Fuel Tank ASM
4	323-6	2	Screw-HH
5	321-5	2	Screw-HH
6	32128-33	2	Nut-HF
7	109-0309	2	Hose-Fuel
8	2412-80	2	Clamp-Hose
9	92-2379	8	Clamp-Hose
10	145-3756-03	1	Screen ASM
11	130-0995-01	1	Cover-Bottom
12	353-989	1	Plug-Hex, Hollow
12:1	237-42	1	O-Ring
13	2412-134	4	Clamp-R
14	130-1104-03	1	Plate-Hold Down, RH
15	130-5317	1	Plate-Lock, Fuel Cap, RH
15:2	130-2845	1	Decal-Ultra Low Sulfur Diesel
16	130-1134-03	1	Plate-Hold Down, LH
17	130-5316	1	Plate-Lock, Fuel Cap, LH
17:2	93-6680	1	Decal-Diesel
18	322-4	4	Screw-HH
19	3296-29	4	Nut-Lock, NI
20	100-1663	2	Pin-Hitch
21	130-7714	1	Hose-Fuel
28	133-8062	1	Decal-Spark Arrestor
31	3290-378	2	Tie-Cable
32	131-0713	1	Rod-Interlock
33	85-6750	1	Spring-Control
34	88-7200	1	Washer-Flat
35	3290-307	1	Pin-Cotter
36	131-9175	1	Seal-Foam
37	145-3757-01	1	Panel, Frame
38	32144-14	3	Screw-HWHTF
39	99-7420	1	Plug-Hole
41	32144-4	2	Screw-HWH
42	3274-80	4	Screw-HH
51	137-9030	1	Decal-Ignition Switch
53	32148-10	2	Nut-Clinch
55	99-5000	2	Valve-Check, Fuel
56	112-6388	2	Hose-Fuel
57	354-95	2	Fitting-Straight
58	68-6150	2	Breather


LH Fuel Tank Assembly No. 130-1026

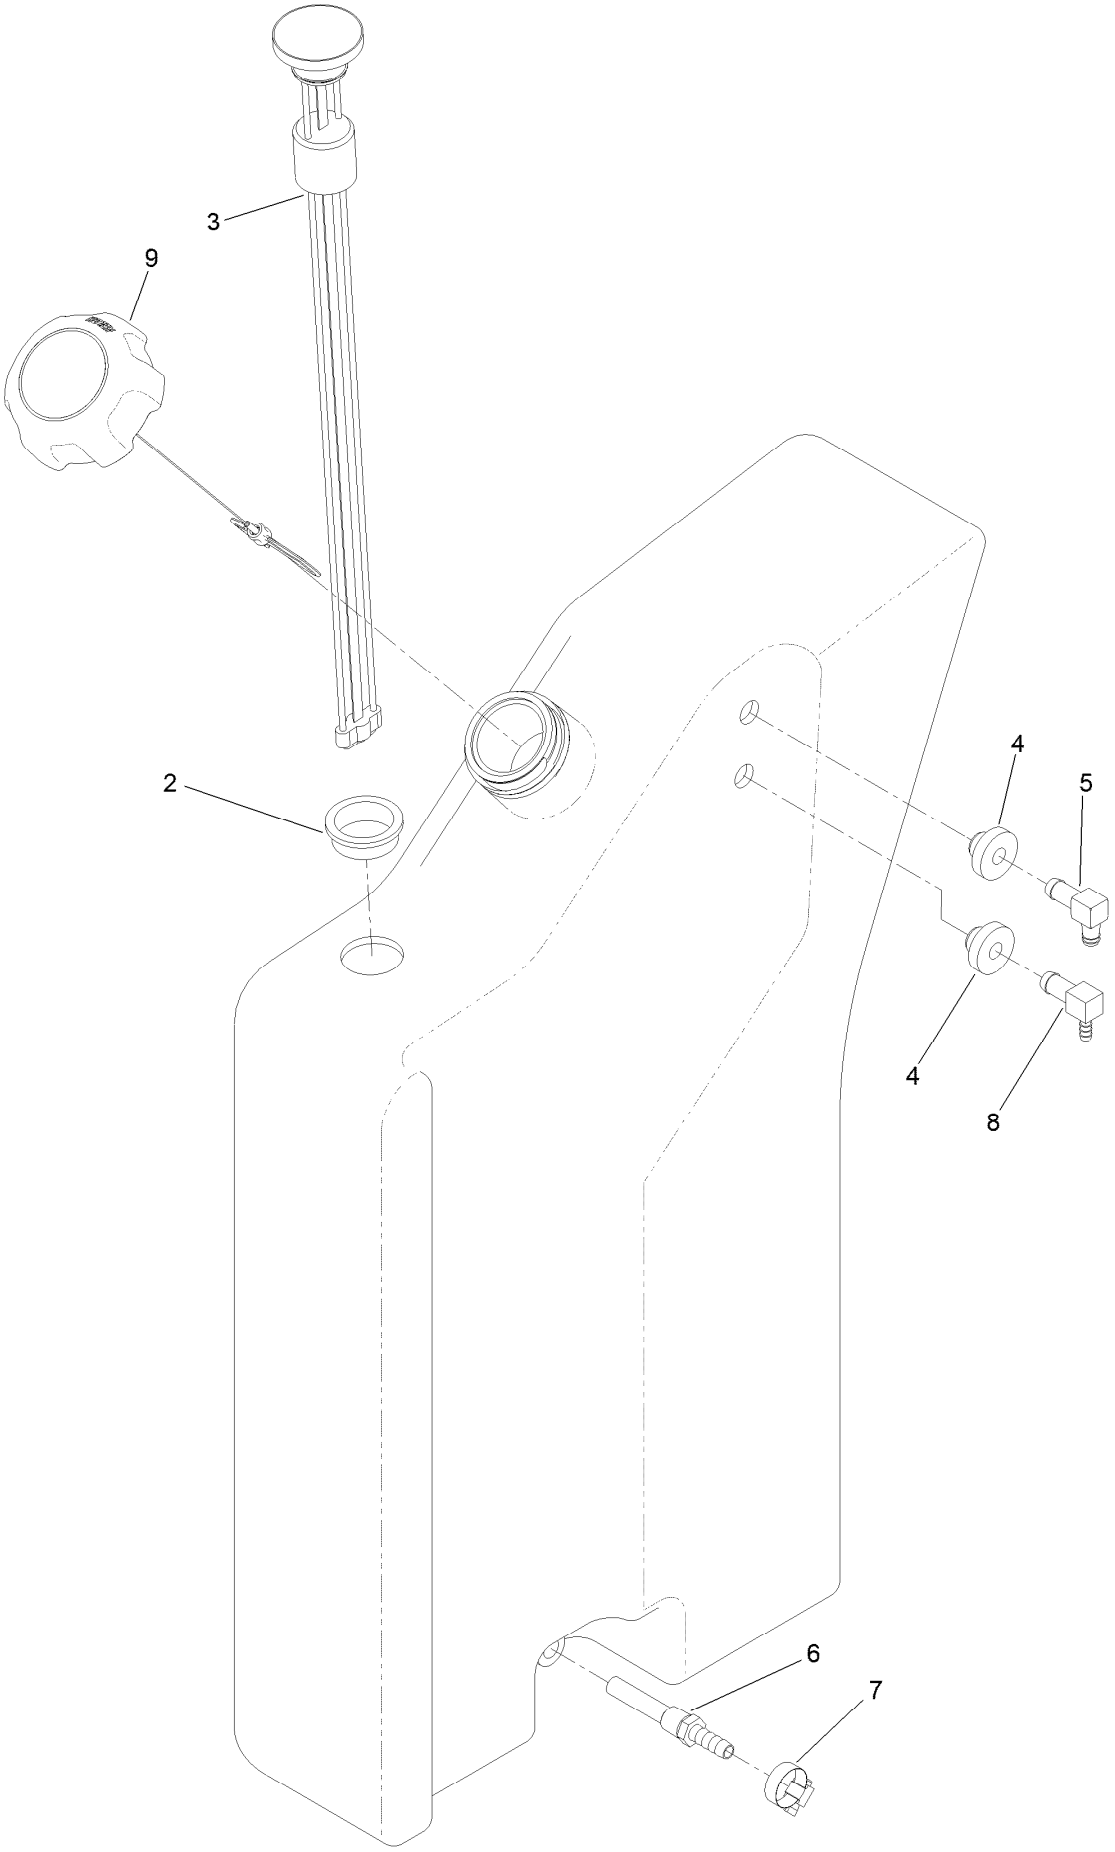

LH Fuel Tank Assembly No. 130-1026 (continued)

Ref.	Part Number	Qty.	Description
2	95-8972	1	Grommet
3	104-5603	1	Gauge-Level, Fuel
4	46-6560	2	Bushing
5	1-643259	1	Fitting-Elbow
6	112-6374	1	Fitting-Strainer
7	2412-36	1	Clamp-Hose
8	104-5228	1	Fitting-Elbow, 90 DEG
9	130-7567	1	Cap-Diesel,


RH Fuel Tank Assembly No. 130-1027

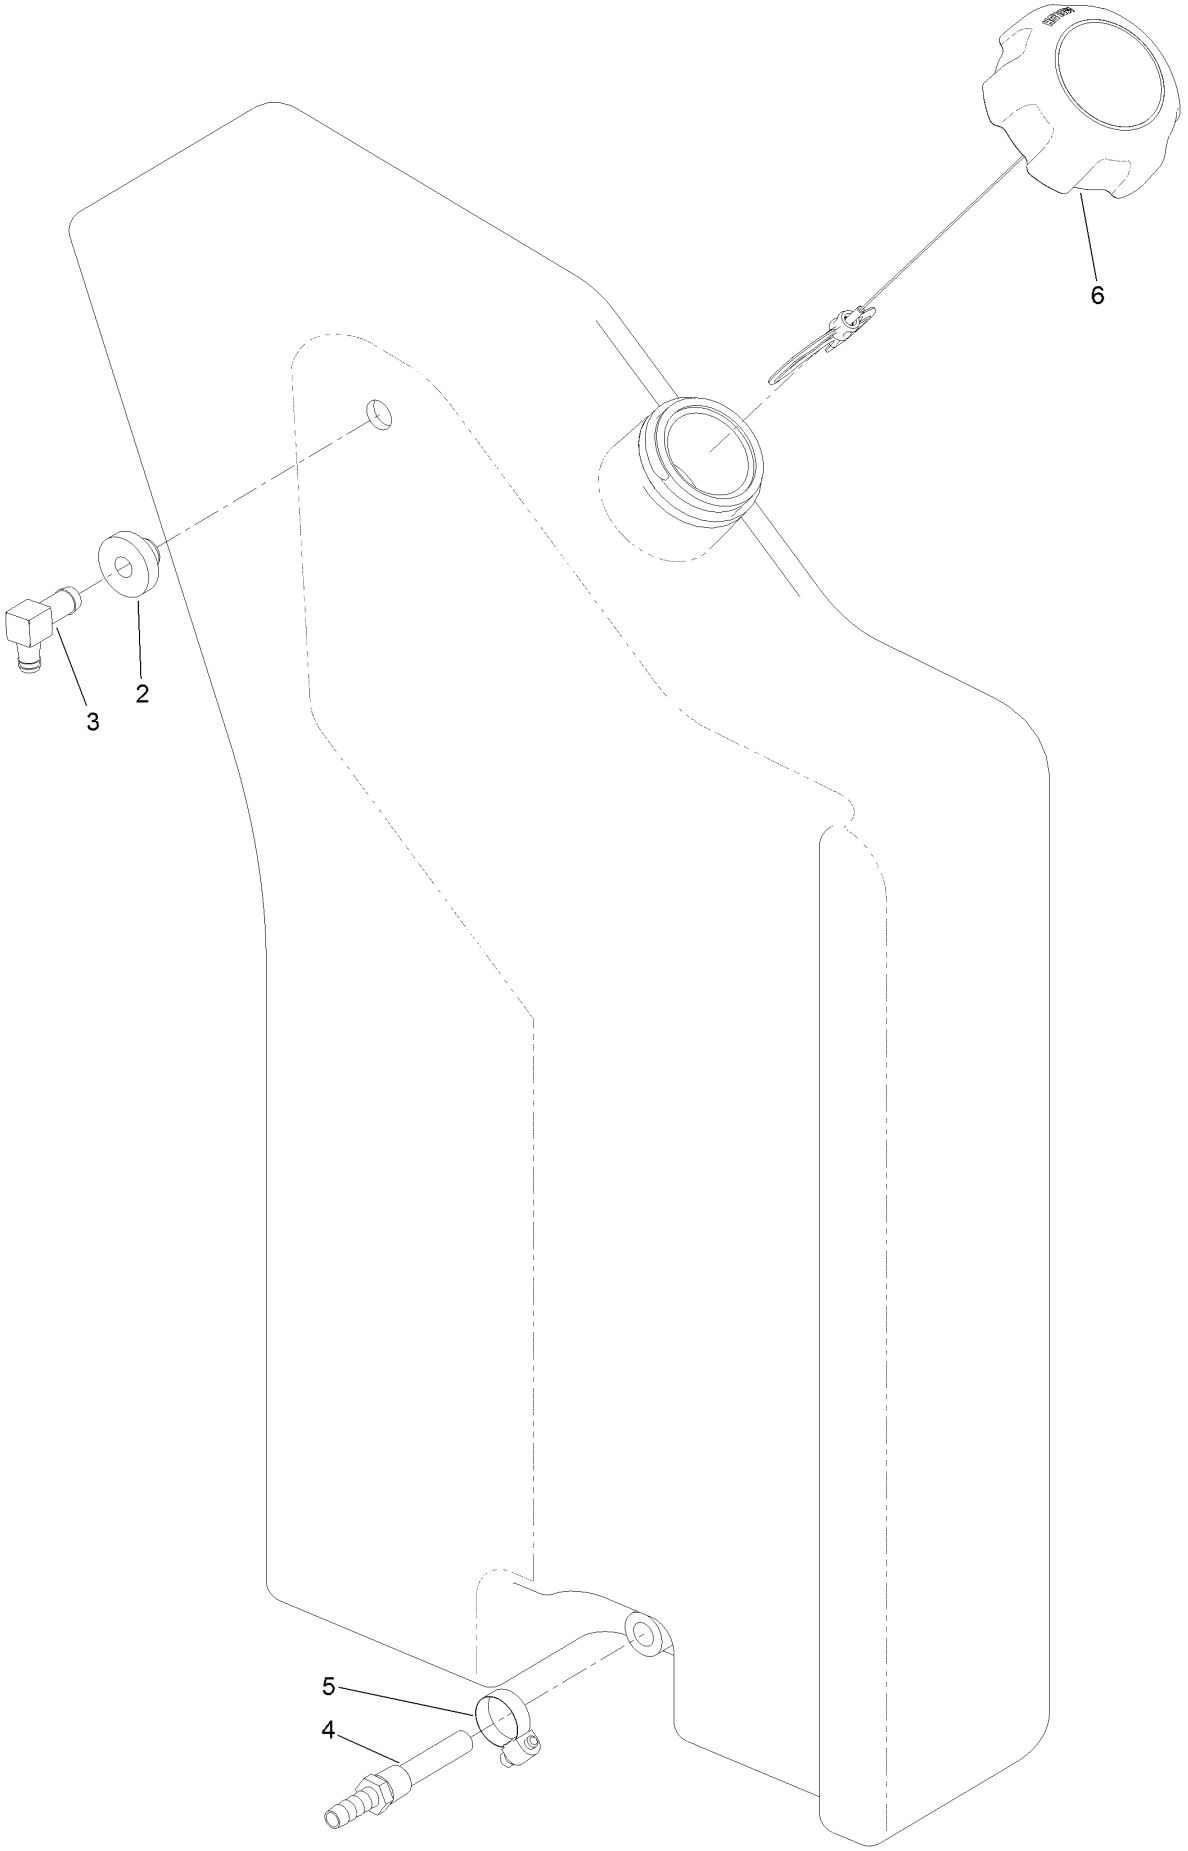

RH Fuel Tank Assembly No. 130-1027 (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	1	Bushing
3	1-643259	1	Fitting-Elbow
4	112-6374	1	Fitting-Strainer
5	2412-36	1	Clamp-Hose
6	130-7567	1	Cap-Diesel,


Hydraulic Tank and Track Shaft Assembly

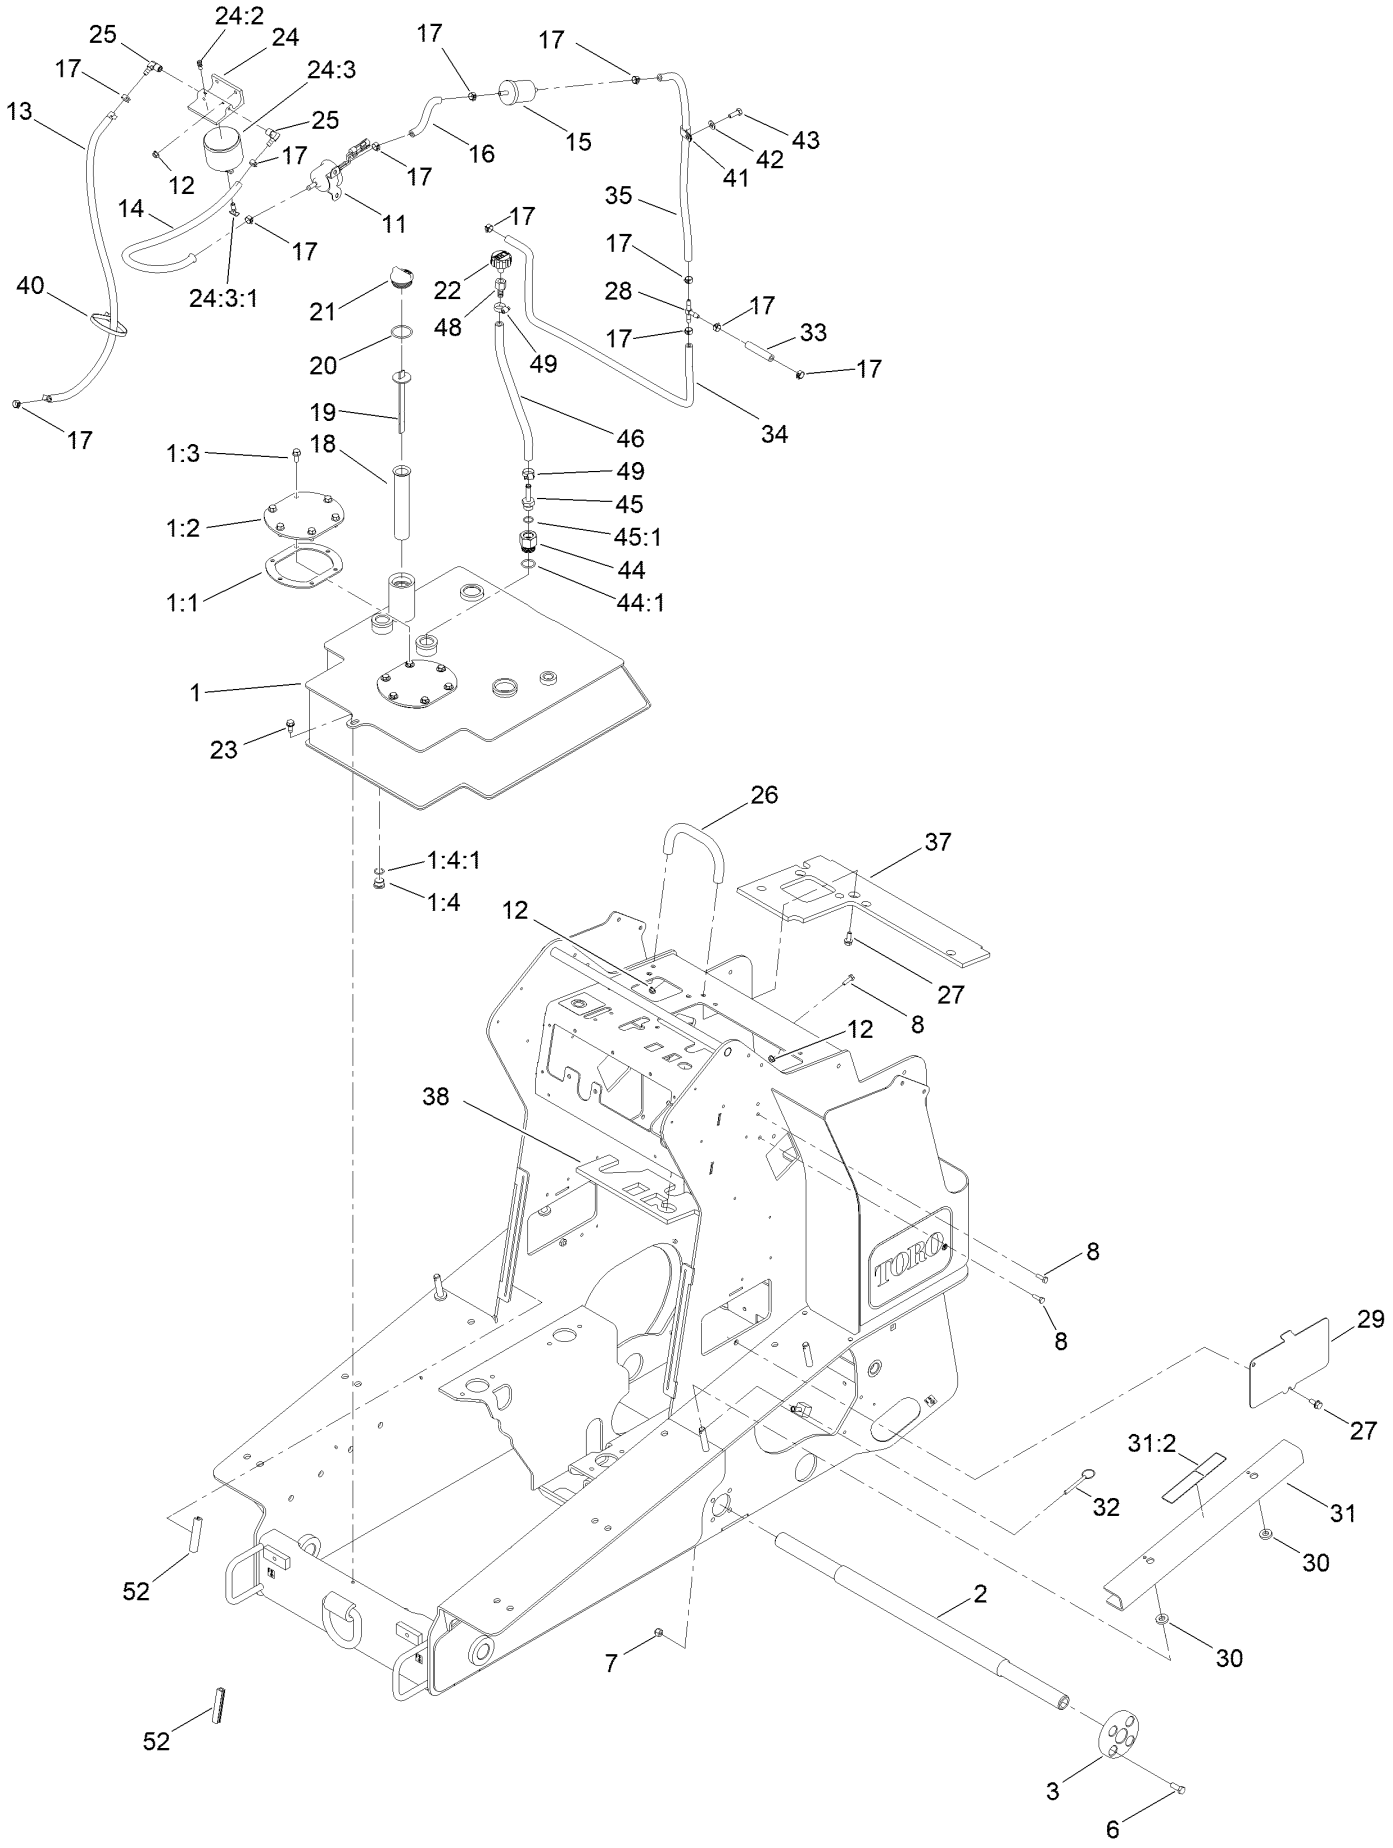

Hydraulic Tank and Track Shaft Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-0404	1	Tank-HYD
1:1	107-3557	1	Gasket-Cover, Access
1:2	108-6297-01	1	Cover-Tank
1:3	98-9940	6	Screw-HHF
1:4	353-988	1	Plug-Hex
1:4:1	237-79	1	O-Ring
2	125-0425	1	Shaft-Track
3	132-9074	2	Hub-Shaft
6	323-6	8	Screw-HH
7	3296-39	8	Nut-Lock, NI
8	321-5	4	Screw-HH
11	145-3154	1	Pump-Fuel, Electric
12	32128-33	4	Nut-HF
13	110-6186	1	Hose-Fuel
14	110-4112	1	Hose-Fuel
15	98-7612	1	Filter-Fuel
16	136-5837	1	Hose-Fuel
17	92-2379	12	Clamp-Hose
18	61-2790	1	Filter-Screen
19	130-7686	1	Dipstick
20	237-101	1	O-Ring
21	93-7498	1	Plug-Plastic
22	68-6150	1	Breather
23	32144-11	1	Screw-HWH
24	109-2678	1	Filter ASM
24:2	63-8290	1	Vent-Air
24:3	63-8300	1	Element-Spin On
24:3:1	63-8310	1	Valve-Drain
25	353-781	2	Fitting-HYD, 90
26	112-2620	1	Bar-Reference
27	3234-5	4	Screw-HHF
28	99-5005	1	Fitting-Tee, Barbed
29	130-1036-01	2	Plate-Cover, Access
30	83-1470	4	Washer-Neoprene
31	130-5315	2	Arm-Locking
31:2	115-4858	1	Decal-Danger
32	108-0094	4	Pin-Cotterless
33	133-0223	1	Hose-Fuel
34	121-7914	1	Hose-Fuel
35	133-1636	1	Hose-Fuel
37	132-8416	1	Foam-Heat Shield
38	140-7698	1	Foam-Heat Shield
40	3334-945	1	Tie-Cable
41	92-6064	1	Clamp-R
42	3256-38	1	Washer-Flat
43	322-4	1	Screw-HH
44	96-0864	1	Fitting-Straight
44:1	237-81	1	O-Ring
45	115-2231	1	Fitting-STR
45:1	237-79	1	O-Ring
46	94-5625	1	Hose
48	354-94	1	Fitting-Female, Barbed
49	2412-36	2	Clamp-Hose
52	70-2041	2	Trim - Edge


Track, Drive Wheel and Tensioner Assembly

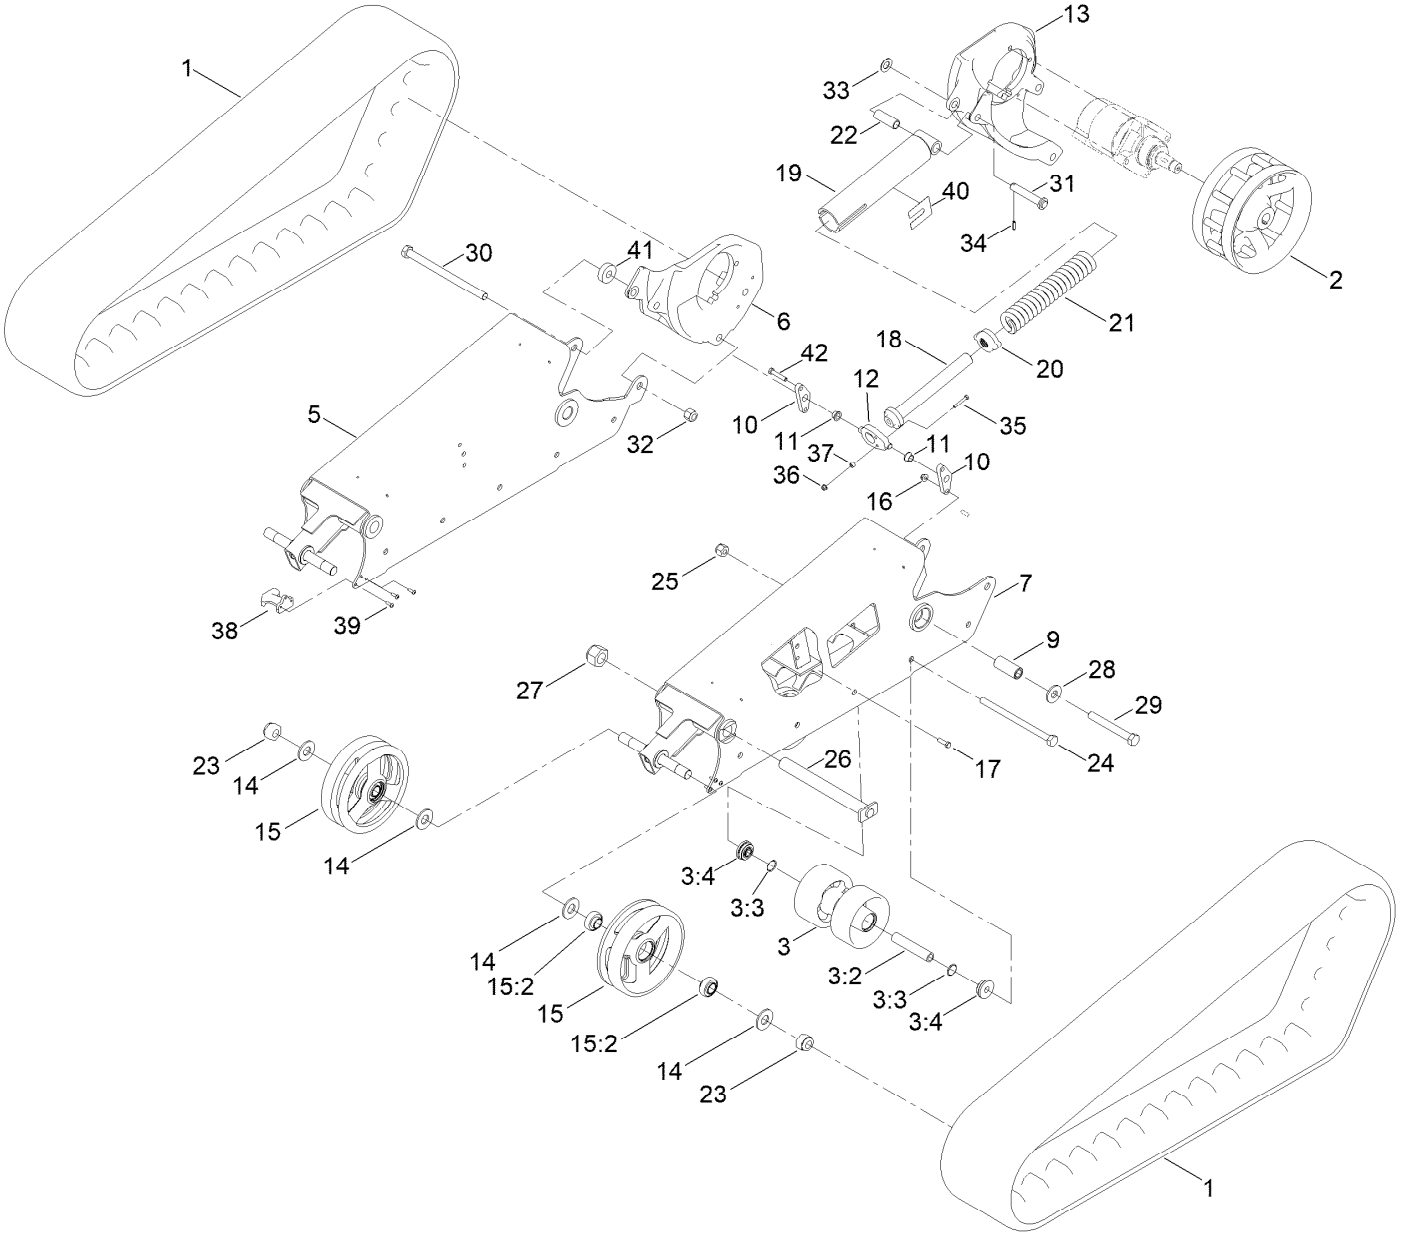

Track, Drive Wheel and Tensioner Assembly (continued)

Ref.	Part Number	Qty.	Description
1	136-5845	2	Track
2	144-7352	2	Wheel-Hub
3	138-1417	10	Wheel ASM
3:2	138-1418	1	Spacer
3:3	138-0547	2	Bearing-Ball
3:4	138-1422	2	Seal ASM
5	133-8592-01	1	RH Track Guide ASM
6	127-9596-03	1	Mount-Motor, RH
7	132-8609-01	1	LH Track Guide ASM
9	130-1069	2	Spacer
10	127-9566	4	Plate-Mount,Pivot
11	65-8770	4	Bushing-Bellcrank
12	132-8620	2	Plate-Pivot
13	127-9595-03	1	Mount-Motor, LH
14	115-0722	8	Washer-Plain
15	133-8626	4	Tensioner-Wheel
15:2	104-6129	2	Bearing-Ball
16	104-8301	8	Nut-HF, NI
17	323-7	4	Screw-HH
18	127-9563	2	Bolt-Tensioner
19	127-9559-03	2	Pivot-Tensioner
20	108-4664	2	Block-Tensioner
21	95-3624	2	Spring-Compression
22	127-9565	2	Spacer-Pivot
23	104-2024	4	Nut-Hex, NI
24	133-8579	10	Screw-HH
25	3296-24	10	Nut-Hex
26	133-8577	2	Pin-Track
27	125-0399	2	Nut-HH
28	99-2659	2	Washer
29	AU426-1296	2	Screw-HH
30	133-8580	2	Screw-HH
31	130-1057	2	Pin-Tensioner
32	3296-51	2	Nut-Lock, NI
33	3256-39	2	Washer-Flat
34	32121-24	2	Pin-Spring
35	321-10	2	Screw-HH
36	32128-32	2	Nut-HHF
37	98-4799	2	Spacer
38	133-8581	4	Track-Guide
39	3274-69	12	Screw-HSBH
40	136-5750	2	Decal-Indicator, Tensioner
41	133-8574	2	Spacer-Wheel, Mount
42	323-10	4	Screw-HH


Brake Assembly

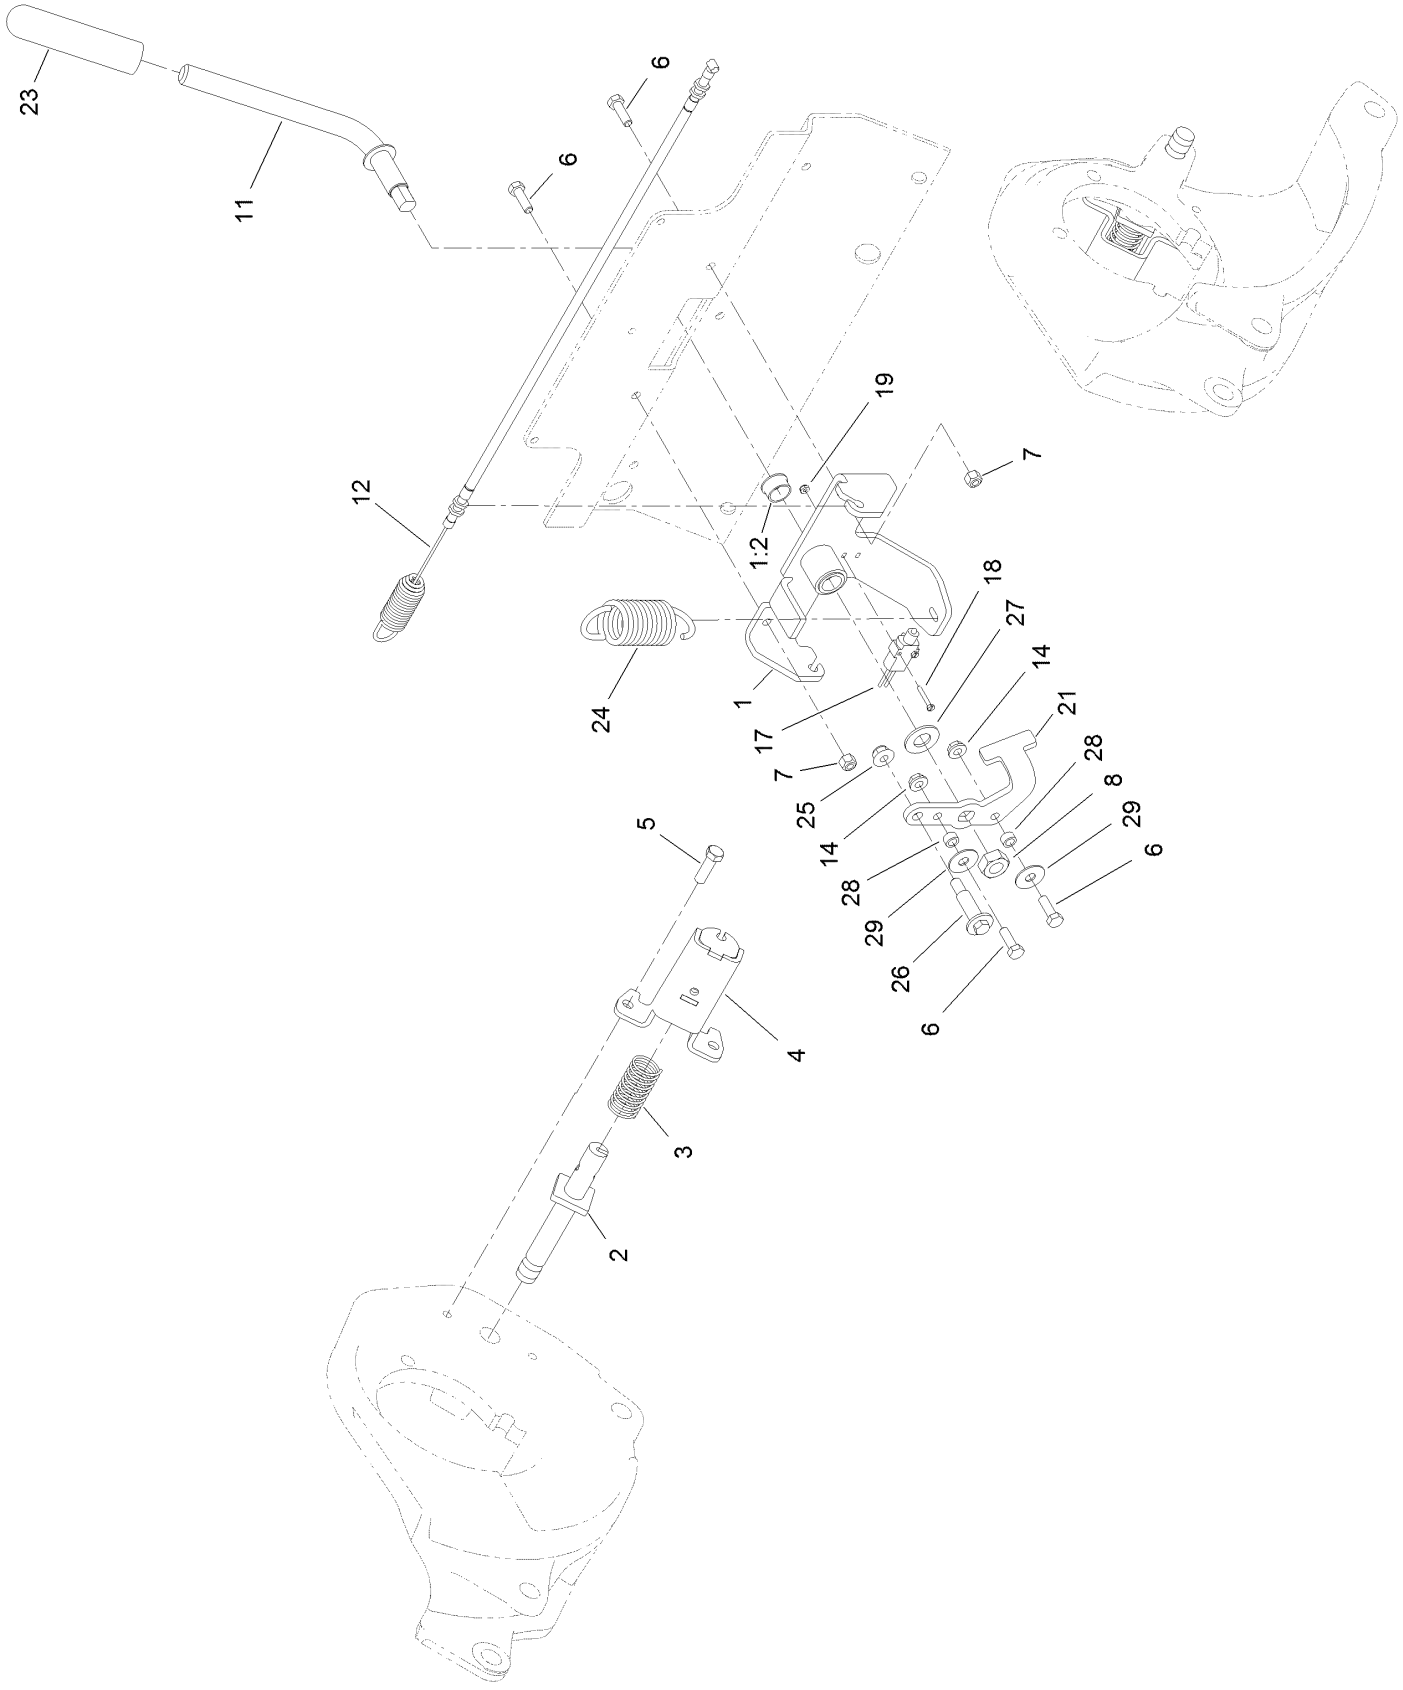

Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	136-4798	1	Bracket-Brake
1:2	256-252	2	Bearing-Flange
2	130-5256	2	Shaft ASM
3	125-0344	2	Spring-Compression
4	137-4648-03	2	Mount-Brake
5	323-7	4	Screw-HH
6	322-5	4	Screw-HH
7	3296-29	2	Nut-Lock, NI
8	3296-33	1	Nut-Lock, NI
11	133-0232	1	Lever-Brake
12	136-4789	2	Cable-Brake
14	32128-20	2	Nut-HF
17	95-8900	1	Switch
18	32105-9	2	Screw-HH
19	3296-9	2	Nut-Hex
21	138-0205-0P	1	Plate-Brake Linkage
23	110-1037	1	Grip-Handle
24	136-4787	1	Spring-EXT
25	104-8301	1	Nut-HF, NI
26	136-7198	1	Bolt-Shoulder
27	3256-27	1	Washer-Flat
28	85-9120	2	Spacer-Pivot, Tilt
29	52-2860	2	Washer


Front Tower Assembly

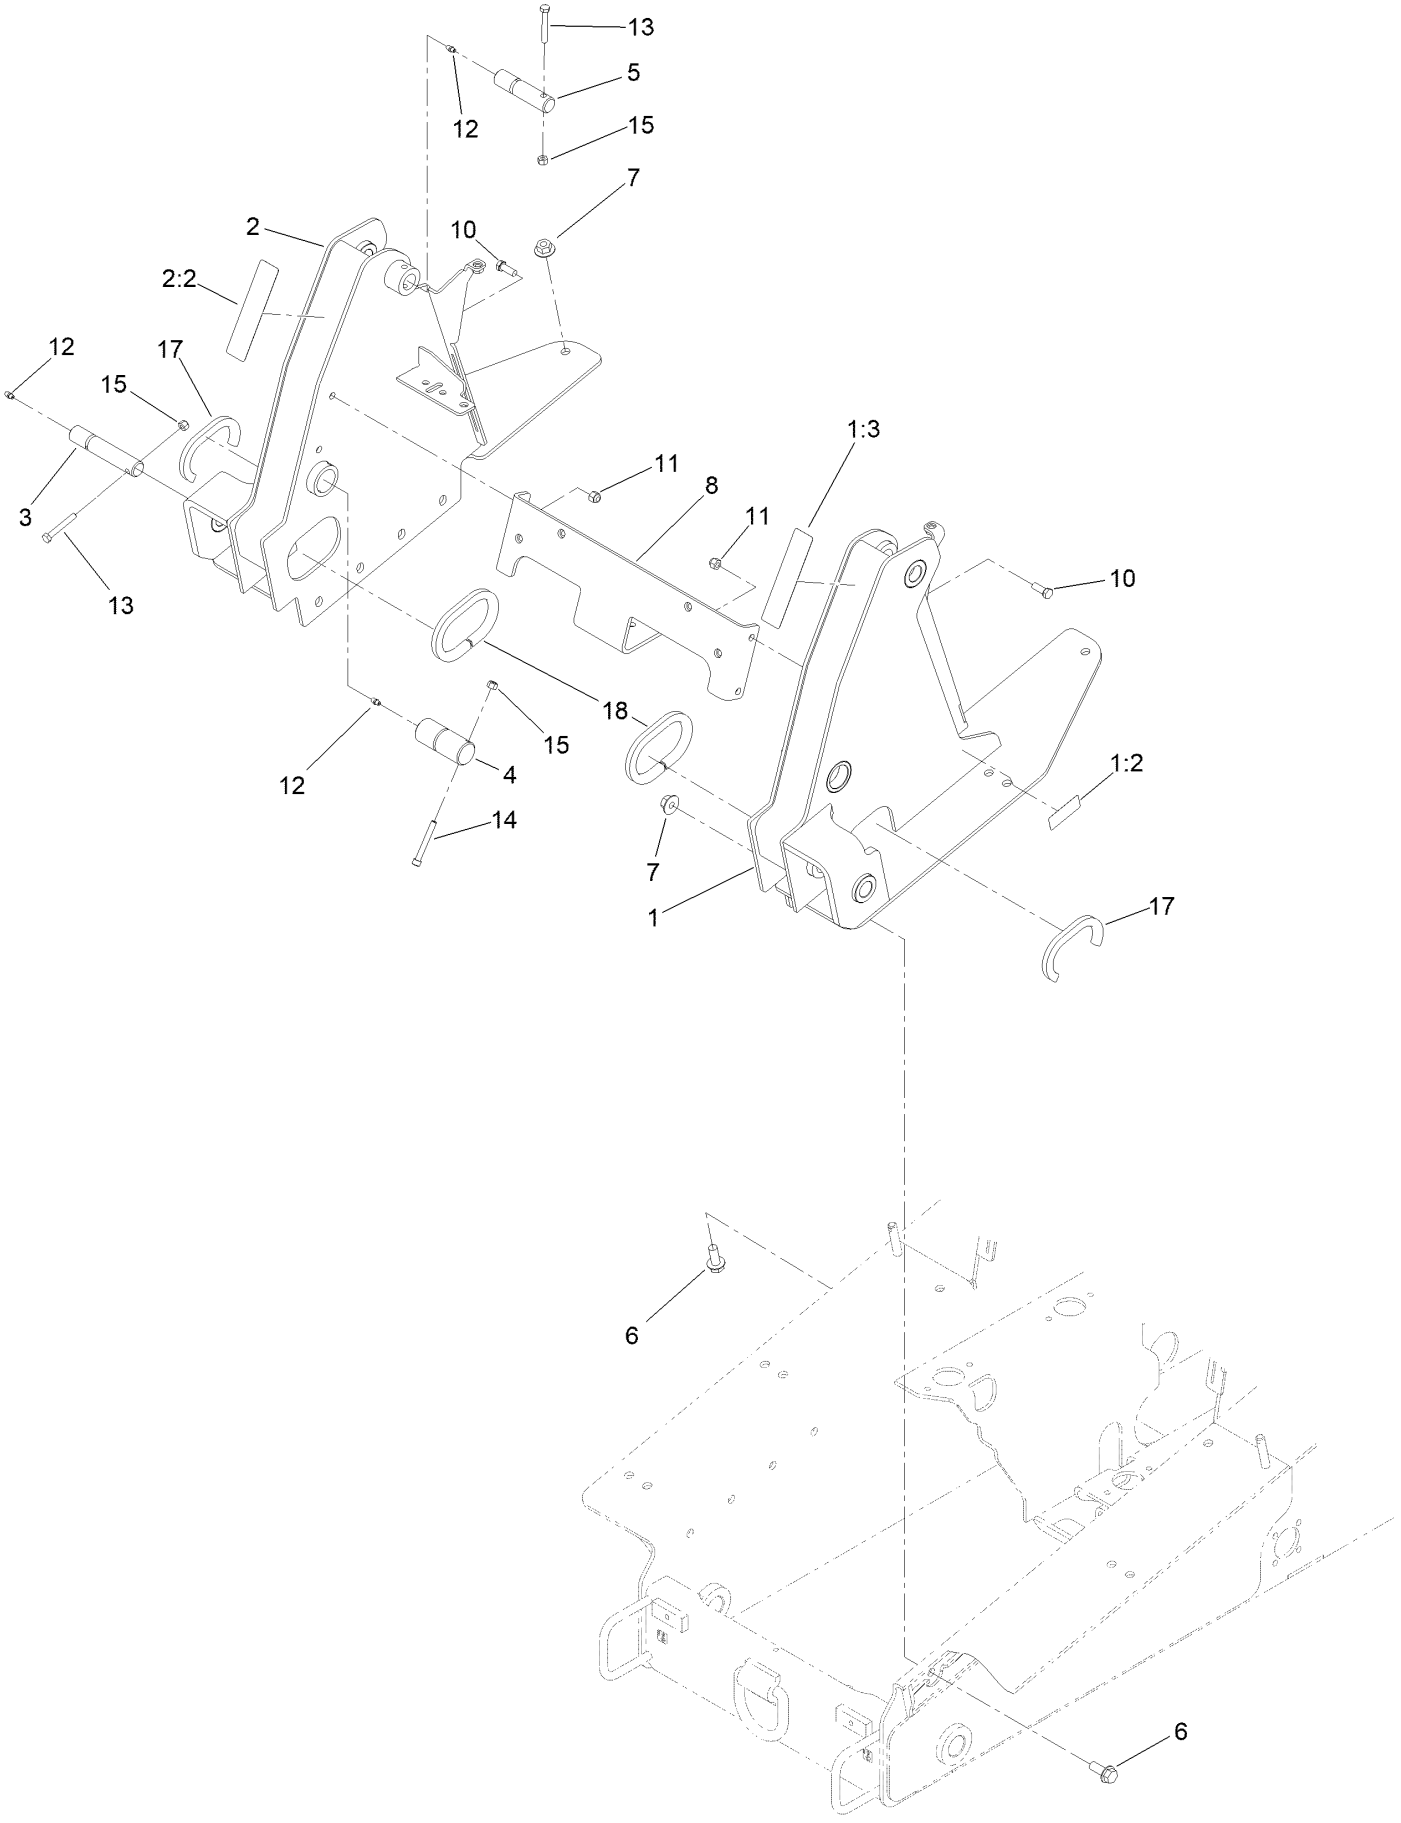

Front Tower Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-5323	1	Tower-Front, LH
1:2	115-2047	1	Decal-Surface, Hot
1:3	131-9290	1	Tape-Reflective
2	145-4447	1	Tower-Loader, RH ASM
2:2	131-9290	1	Tape-Reflective
3	131-9201	2	Pin-HYD
4	125-3748	2	Pin-Arm
5	125-3695	2	Pin-Link
6	3234-38	18	Screw-HHF
7	32128-52	18	Nut-Lock, Flg
8	125-3667-03	1	Plate-Cross, Tower
10	AU426-616	4	Screw-HH
11	3296-39	4	Nut-Lock, NI
12	302-5	6	Fitting-Grease
13	322-11	4	Screw-HH
14	3274-40	2	Screw-HSH
15	3296-29	6	Nut-Lock, NI
17	133-8571	4	Trim-Seal
18	133-8572	2	Trim-Seal


Hydraulic Motor and Hose Assembly

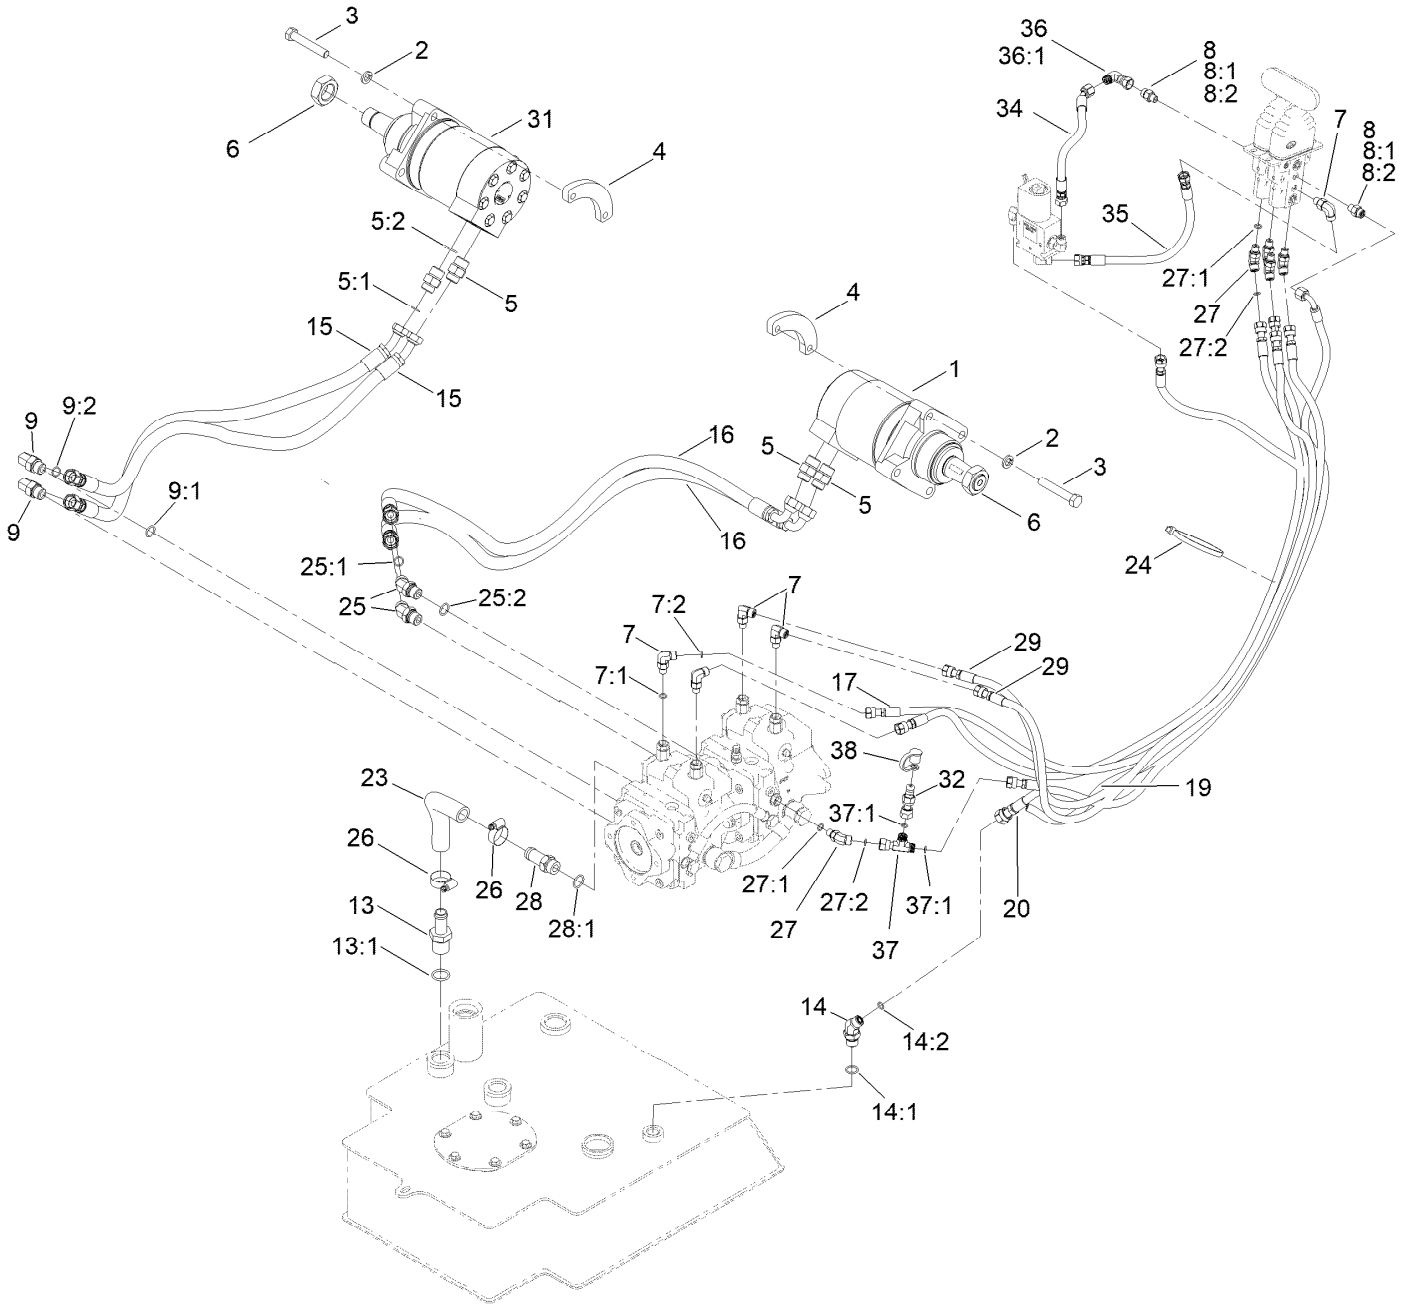

Hydraulic Motor and Hose Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-0761	1	Motor-HYD
2	3253-7	8	Washer-Lock
3	115-4845	8	Screw-HH, TAP
4	137-4614	4	Plate-Mounting, Wheelmotor
5	340-6	4	Fitting-Straight
5:1	237-30	1	O-Ring
5:2	237-80	1	O-Ring
6	107-9319	2	Nut-Hex
7	340-132	5	Fitting-Elbow, 90 DEG
7:1	237-78	1	O-Ring
7:2	237-21	1	O-Ring
8	340-92	2	Fitting-Straight
8:1	237-78	1	O-Ring
8:2	237-21	1	O-Ring
9	340-98	2	Fitting-Elbow, 90 DEG
9:1	237-79	1	O-Ring
9:2	237-30	1	O-Ring
13	354-73	1	Fitting
13:1	237-81	1	O-Ring
14	340-138	1	Fitting-HYD, 45 DEG
14:1	237-79	1	O-Ring
14:2	237-22	1	O-Ring
15	133-0226	2	Hose-HYD
16	130-7734	2	Hose-HYD
17	139-0789	2	HYD Hose ASM
19	139-0790	1	HYD Hose ASM
20	139-0791	1	HYD Hose ASM
23	133-0231	1	Hose-Return
24	3334-945	1	Tie-Cable
25	340-101	2	Fitting-HYD, 45 DEG
25:1	237-30	1	O-Ring
25:2	237-79	1	O-Ring
26	2412-129	2	Clamp-Hose
27	340-103	5	Fitting-HYD, 45 DEG
27:1	237-78	1	O-Ring
27:2	237-21	1	O-Ring
28	354-136	1	Fitting-STR
28:1	237-80	1	O-Ring
29	139-0792	2	HYD Hose ASM
31	138-0778	1	Motor-HYD
32	115-8886	1	Nipple-Test
34	140-5878	1	Hose ASM
35	140-5877	1	Hose ASM
36	92-2745	1	Elbow-90
36:1	237-21	1	O-Ring
37	340-151	1	Fitting-Tee
37:1	237-21	2	O-Ring
38	354-79	1	Cap-Dust


Hydraulic Motor Assembly No. 138-0761

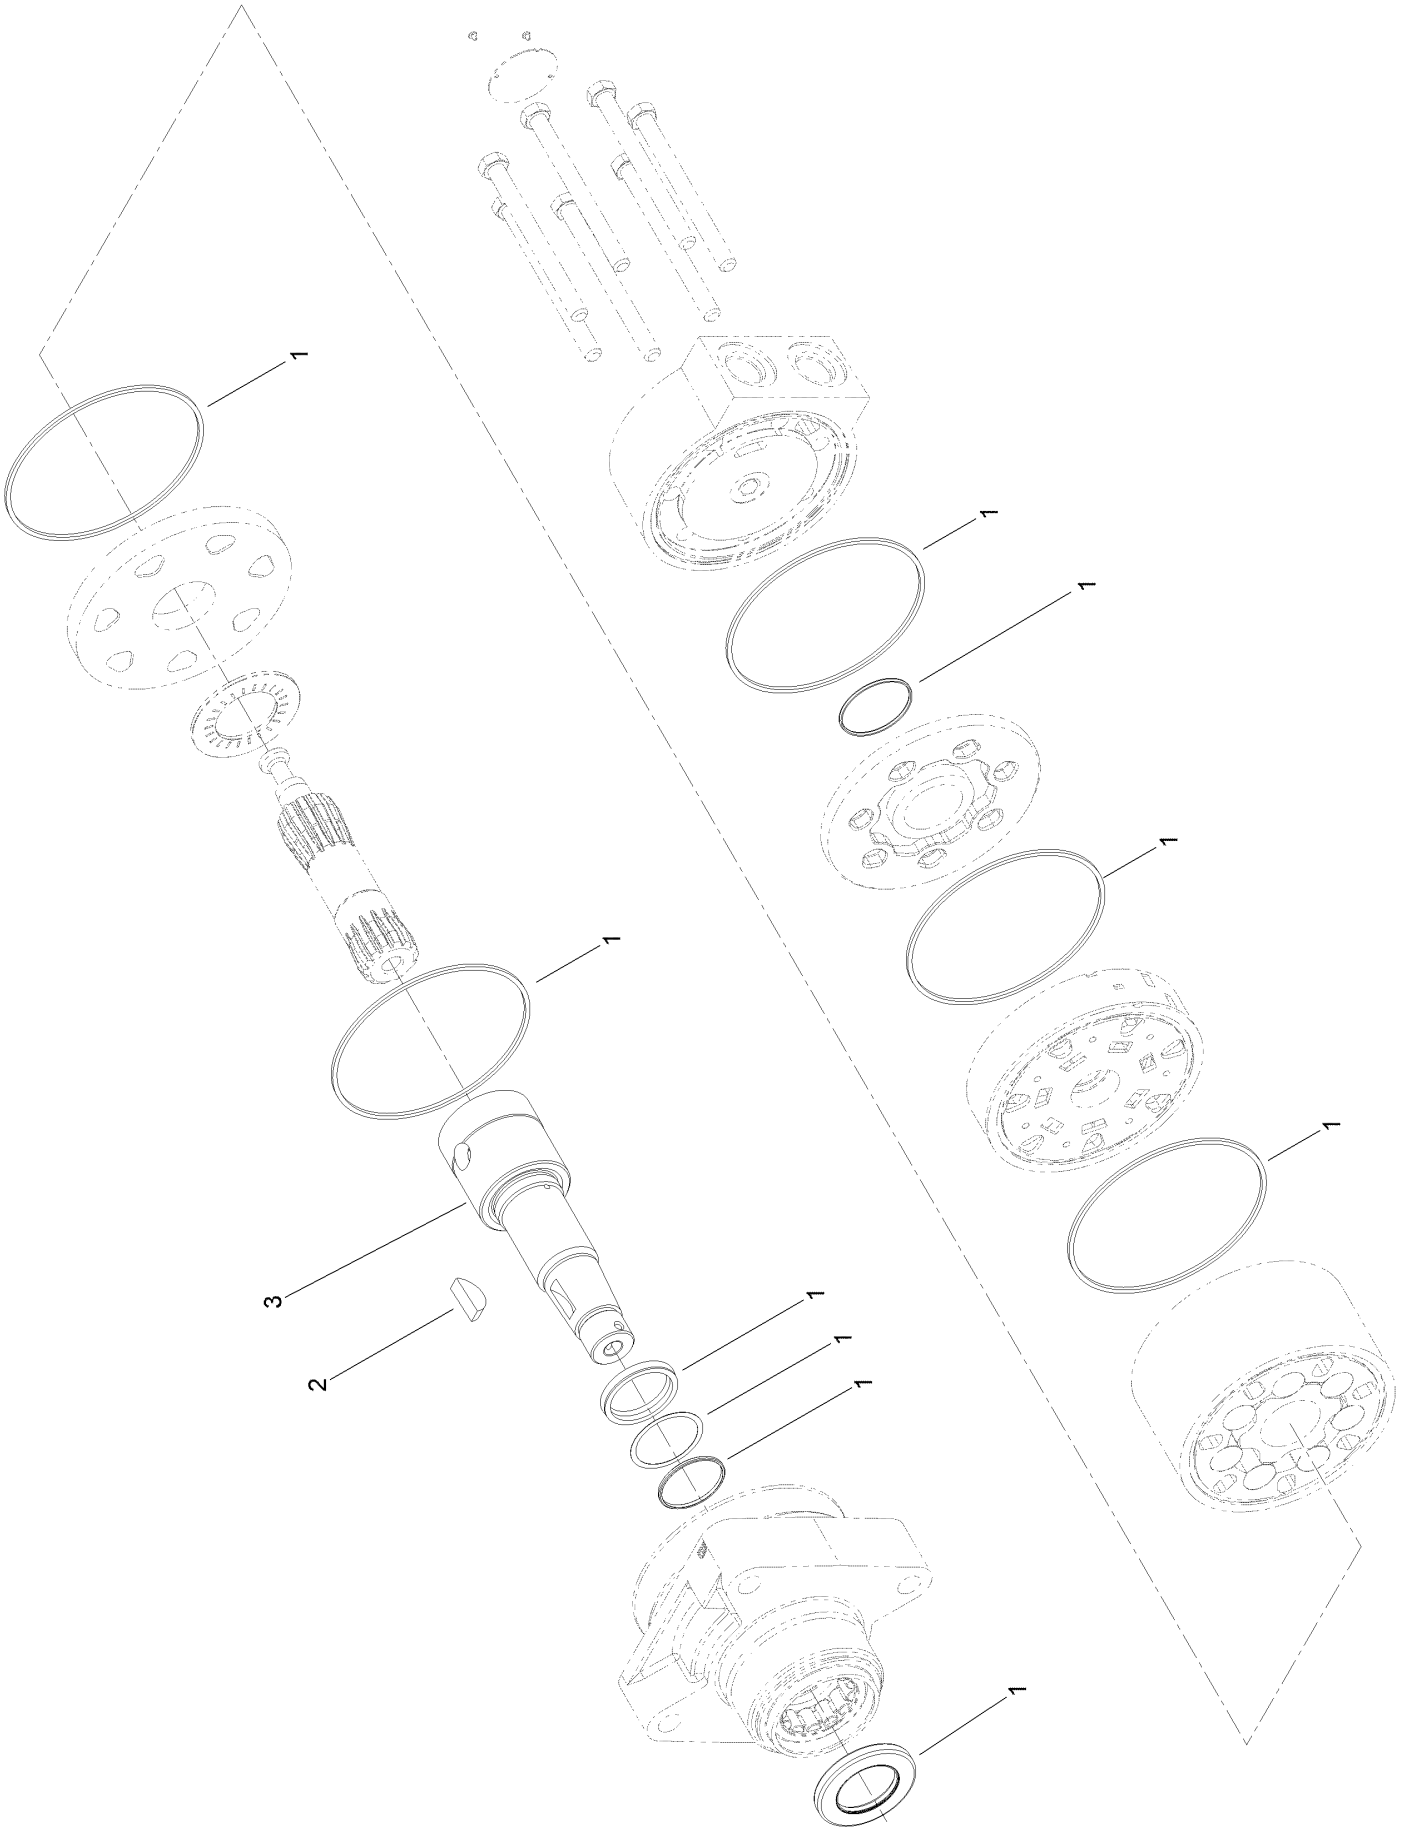

Hydraulic Motor Assembly No. 138-0761 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	137-1824	1	Seal Kit
2	3257-42	1	Key-Woodruff
3	140-7697	1	Shaft - Coupling Tgk


Hydraulic Motor Assembly No. 138-0778

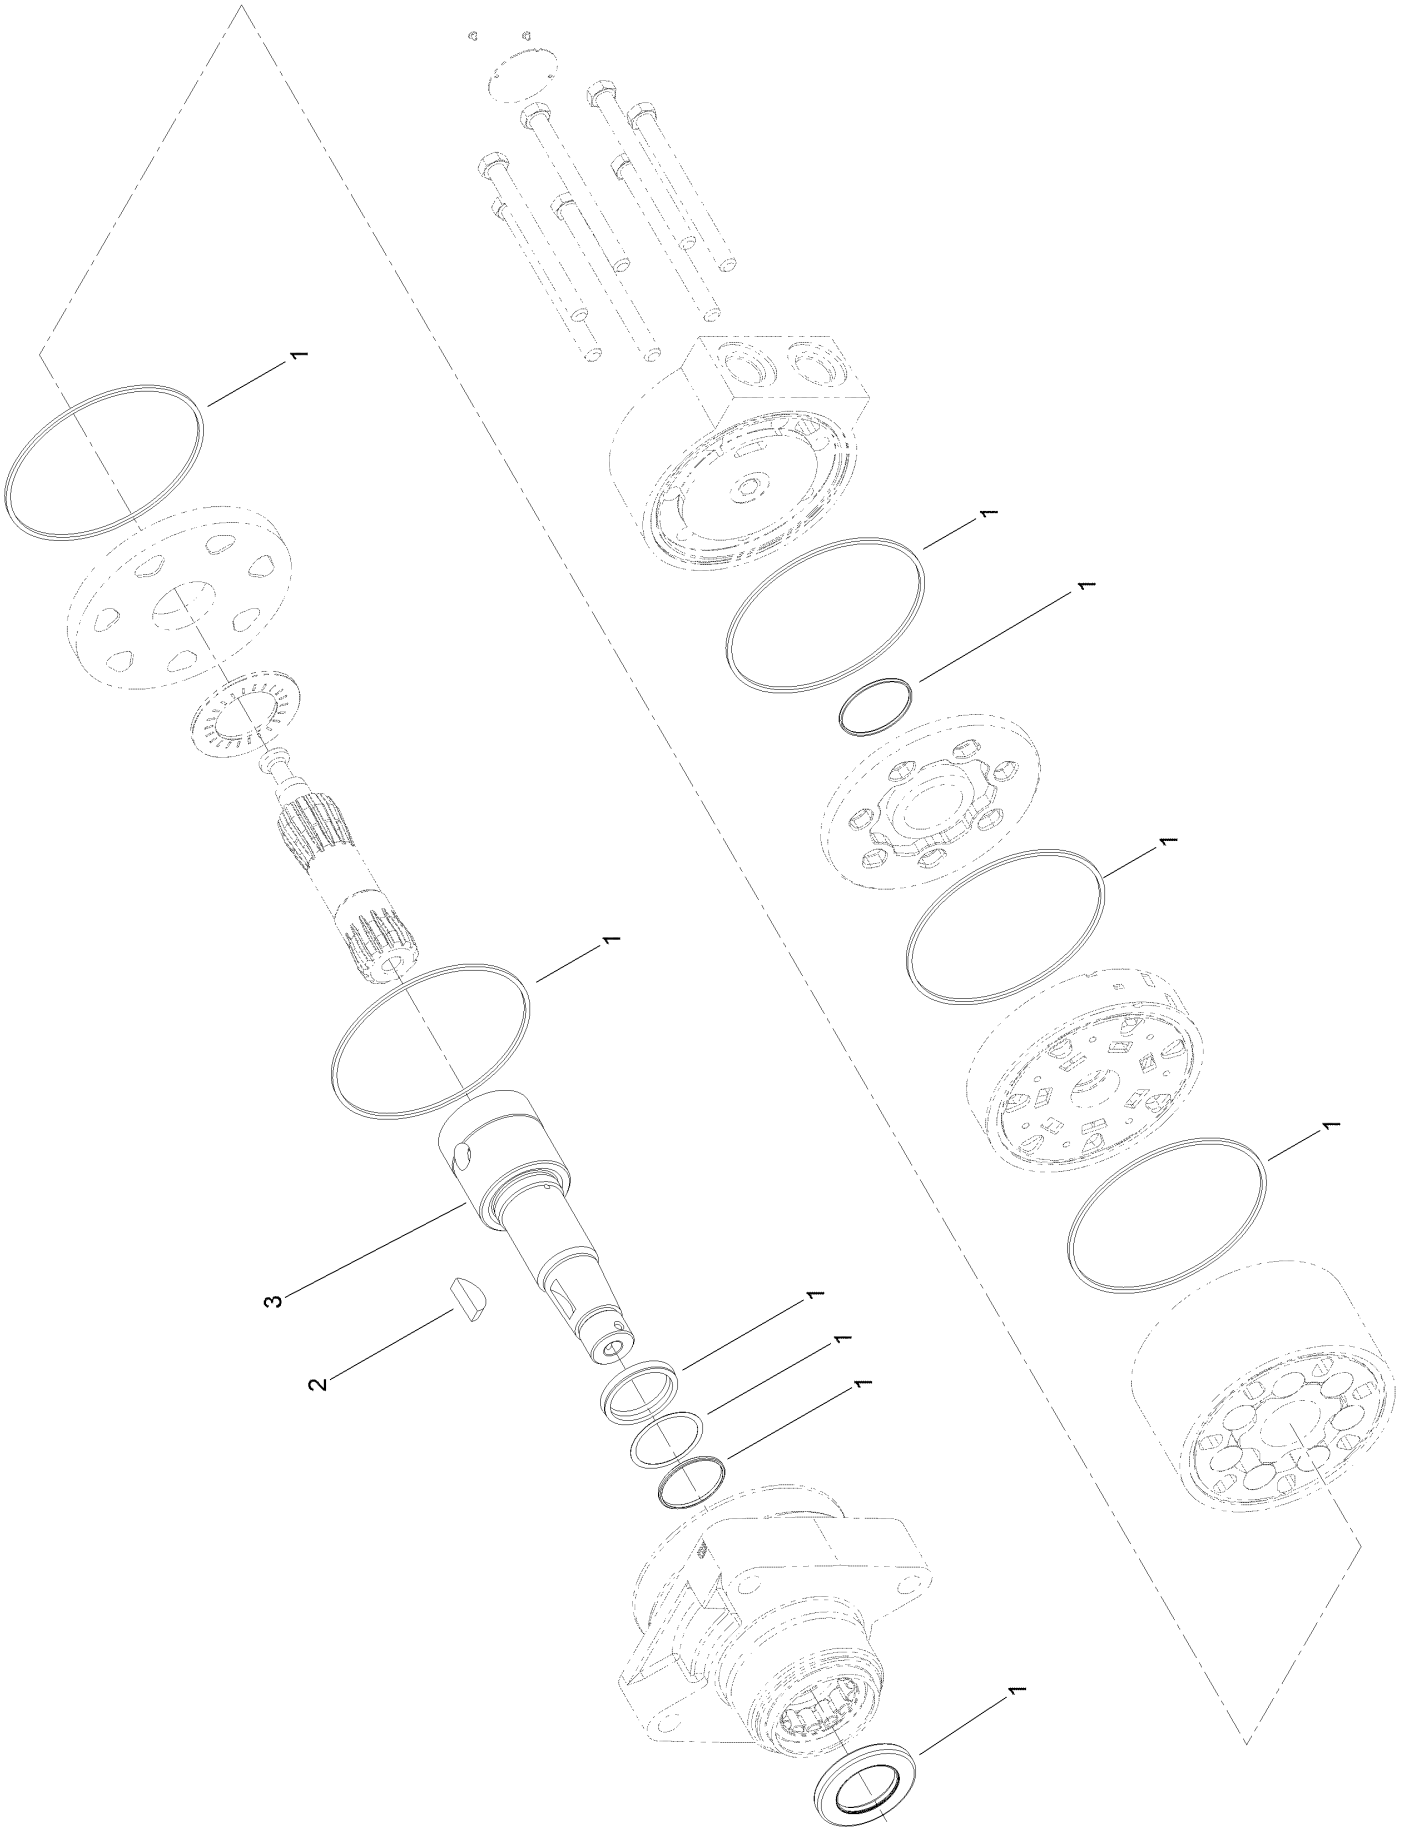

Hydraulic Motor Assembly No. 138-0778 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	137-1824	1	Seal Kit
2	3257-42	1	Key-Woodruff
3	140-7697	1	Shaft - Coupling Tgk

Radiator and Air Cleaner Assembly

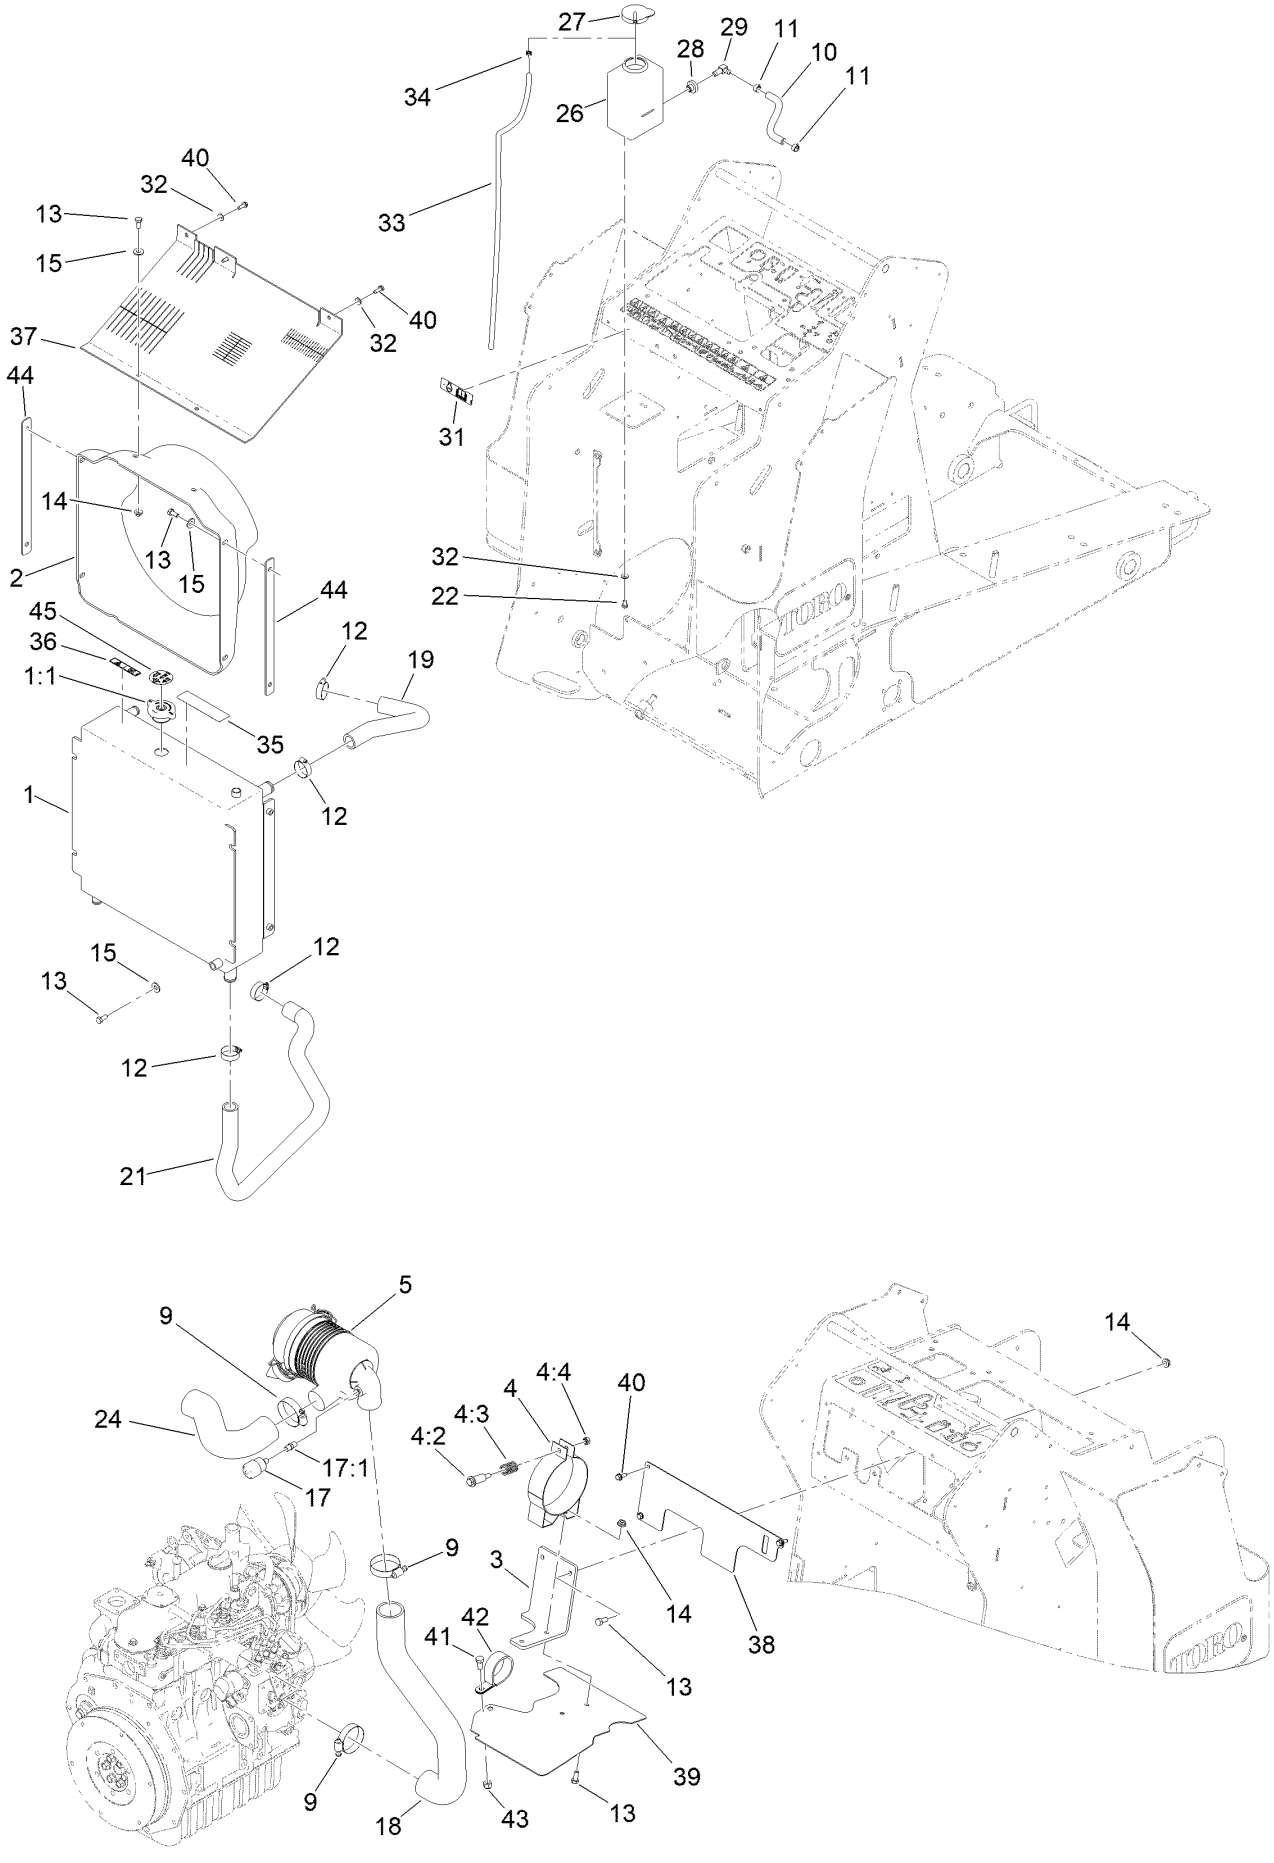


Radiator and Air Cleaner Assembly (continued)

Ref.	Part Number	Qty.	Description
1	144-7364	1	Cooling ASM, Kirkland
1:1	144-7368	1	Cap, Radiator
1:2	161-7280	1	Radiator Support Kit ●
2	131-9256	1	Shroud-Fan
3	125-0377-03	1	Bracket
4	93-2191	1	Air Cleaner Mounting Band ASM
4:2	94-3653	1	Bolt
4:3	94-3654	1	Spring
4:4	33024-00	1	Nut-Lock, NI
5	93-2190	1	Air Cleaner ASM
9	2412-92	3	Clamp-Hose
10	112-2386	1	Hose-Fuel
11	92-2379	2	Clamp-Hose
12	2412-34	4	Clamp-Hose
13	322-3	14	Screw-HH
14	32128-20	6	Nut-HF
15	3256-3	10	Washer-Flat
17	104-3563	1	Indicator
17:1	94-1416	1	Adapter-Indicator
18	131-9173	1	Hose-Intake, Engine
19	136-4552	1	Hose-Radiator
21	131-9153	1	Hose-Radiator, Lower
22	321-2	2	Screw-HH
24	130-0952	1	Hose-Air, Inlet
26	1-643163	1	Tank-Overflow
27	1-643164	1	Cap-Tank, Overflow
28	46-6560	1	Bushing
29	46-6550	1	Fitting-Elbow, 90 DEG
31	115-4865	1	Decal-Fill, Radiator
32	3256-22	5	Washer-Flat
33	108-6344	1	Hose-Fuel
34	2412-80	1	Clamp-Hose
35	93-7814	1	Decal-Danger
36	93-6681	1	Decal-Warning, Fan
37	131-9214	1	Guard-Air
38	131-9215	1	Cover-Air
39	131-8013	1	Baffle-Heat
40	32144-44	6	Screw-HWH, Thread Roll
41	323-4	1	Screw-HH
42	2412-107	1	Clamp-R
43	3296-39	1	Nut-Lock, NI
44	138-0751	2	Plate-Shim
45	117-3276	1	Decal-Danger

● Not illustrated


Radiator Support Kit Assembly No. 161-7280

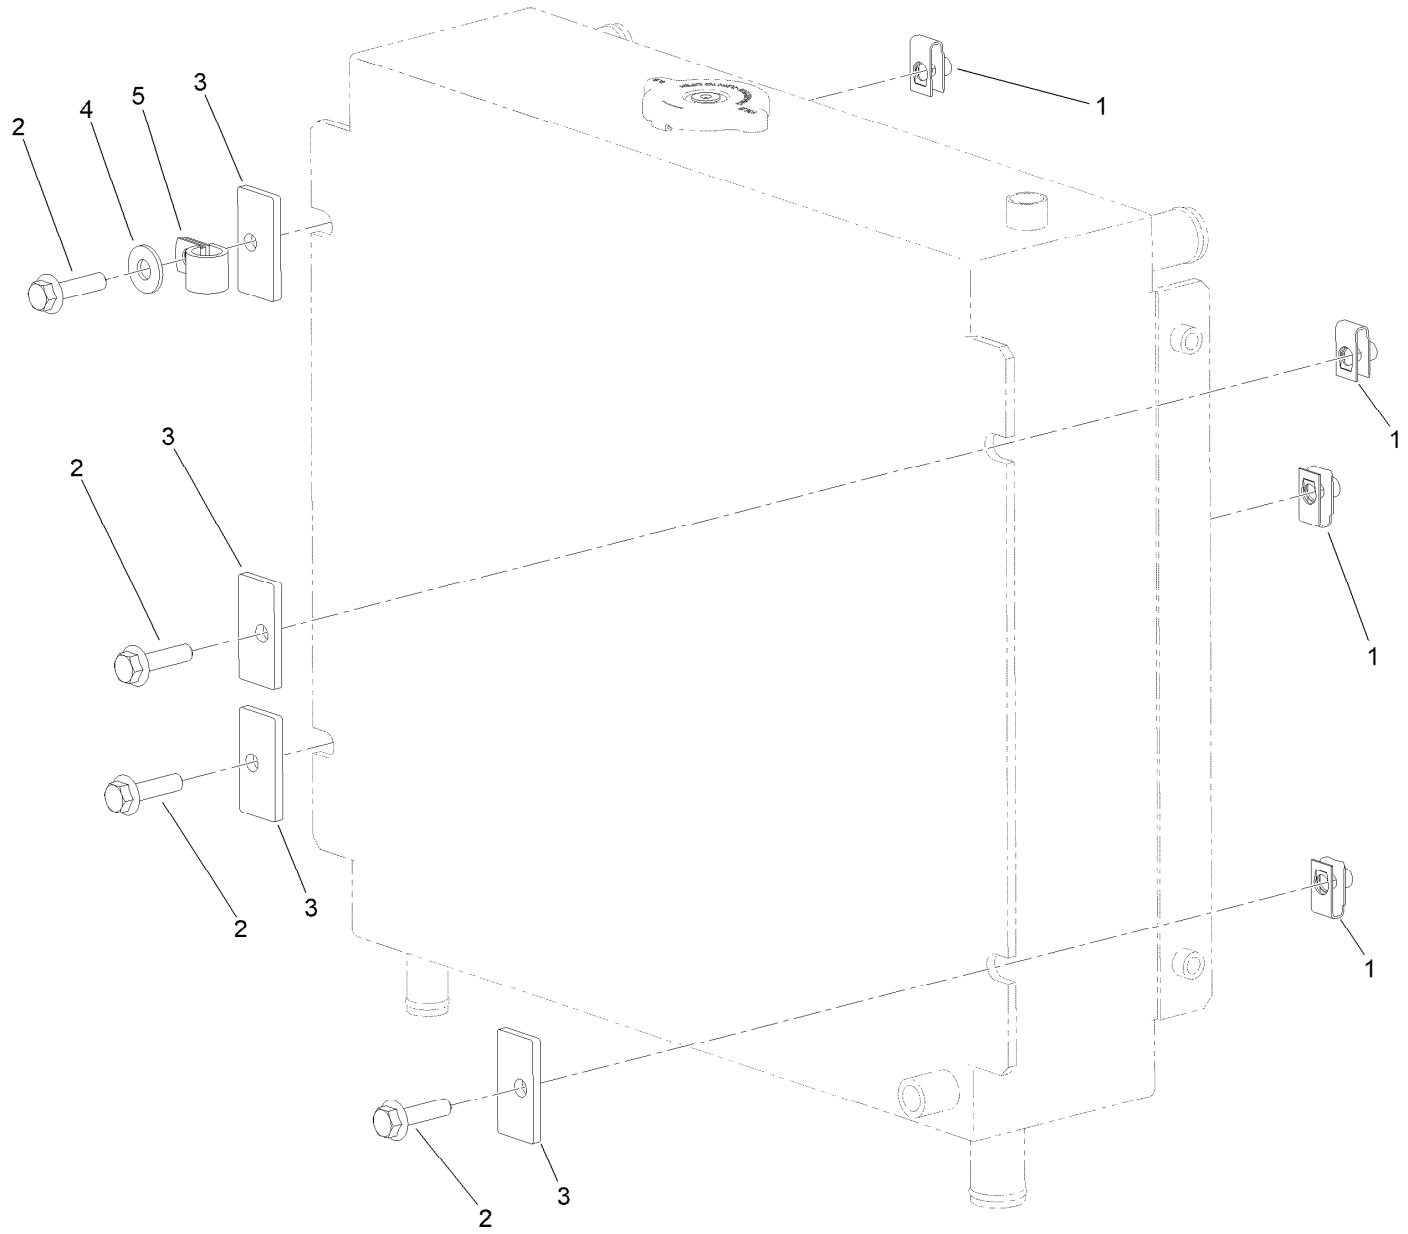

Radiator Support Kit Assembly No. 161-7280 (continued)

Ref.	Part Number	Qty.	Description
1	115-7721	4	Nut-Clip, U
2	132-3837	4	Screw-HHF
3	161-7293-03	4	Washer-Square
4	3256-3	1	Washer-Flat
5	92-6064	1	Clamp-R


Air Cleaner Assembly No. 93-2190

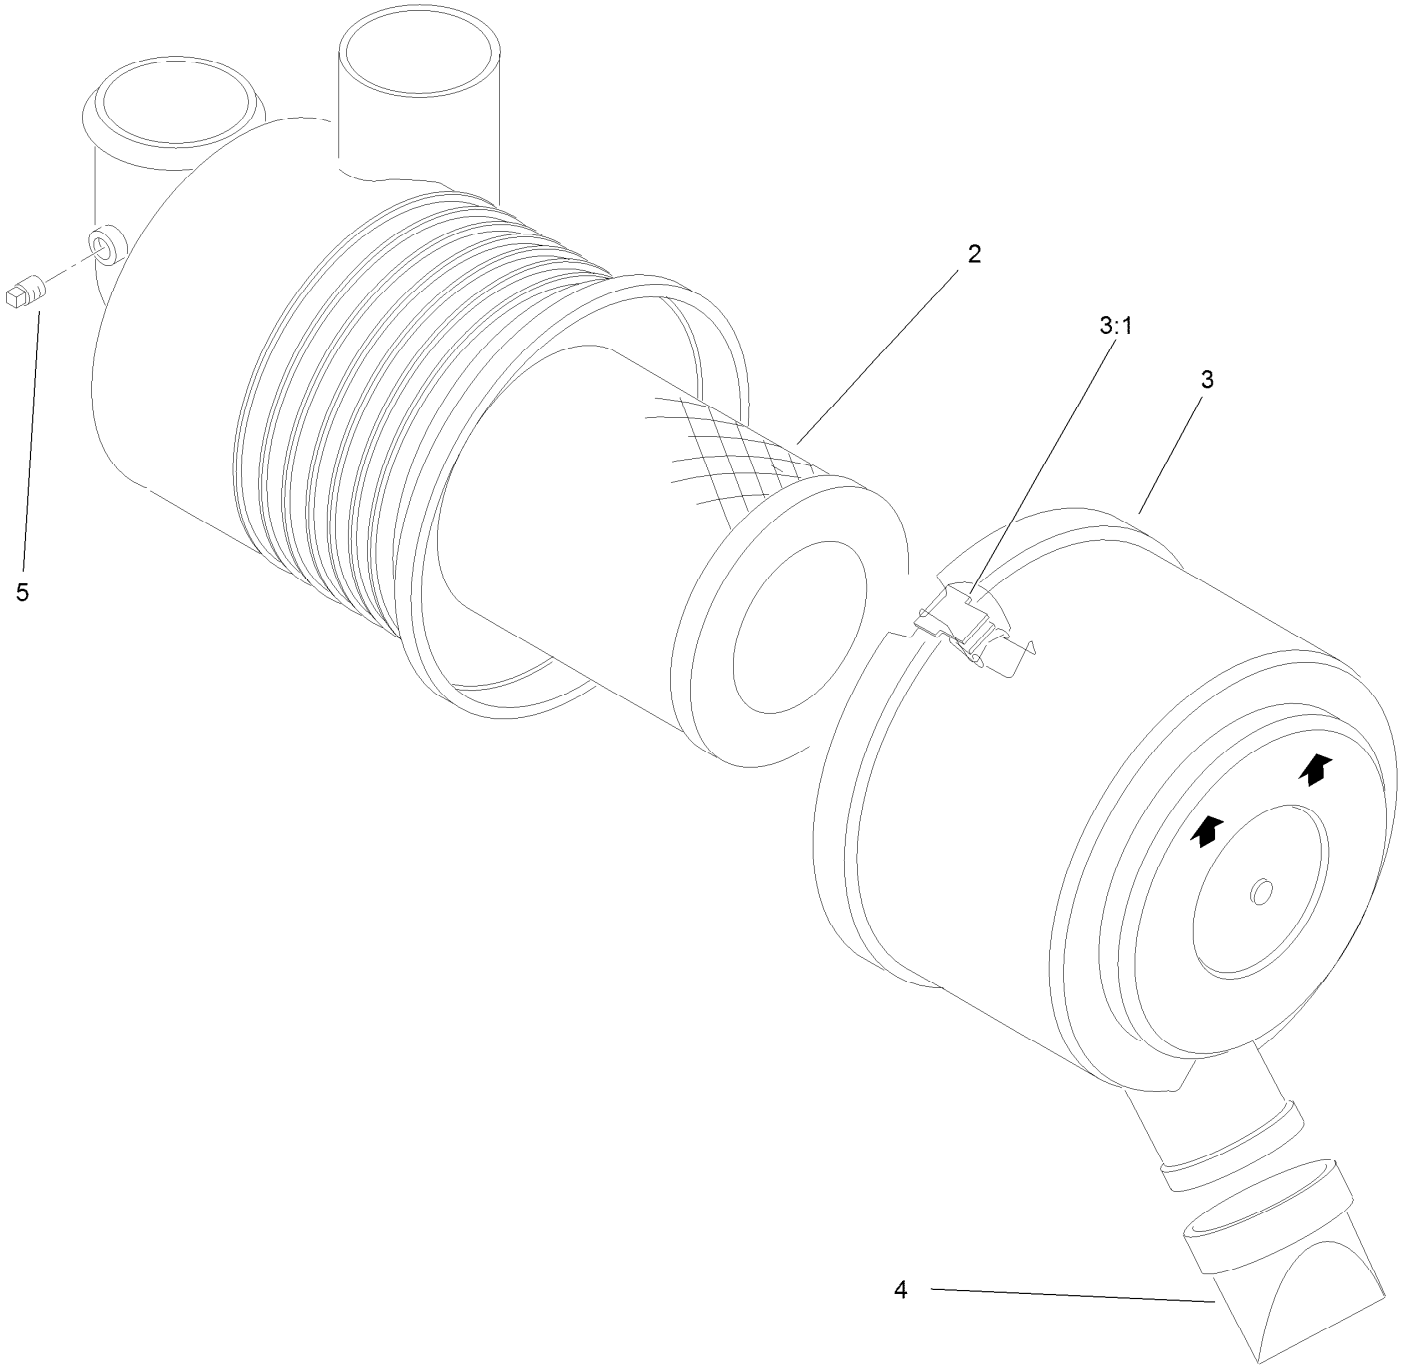

Air Cleaner Assembly No. 93-2190 (continued)

Ref.	Part Number	Qty.	Description
2	108-3811	1	Filter-Air V-Twin HD
3	94-3652	1	Cover ASM
3:1	1-643283	2	Latch-Cleaner, Air
4	87-9400	1	Valve-Vacuator
5	285-17	1	Plug-Pipe


Engine and Muffler Assembly

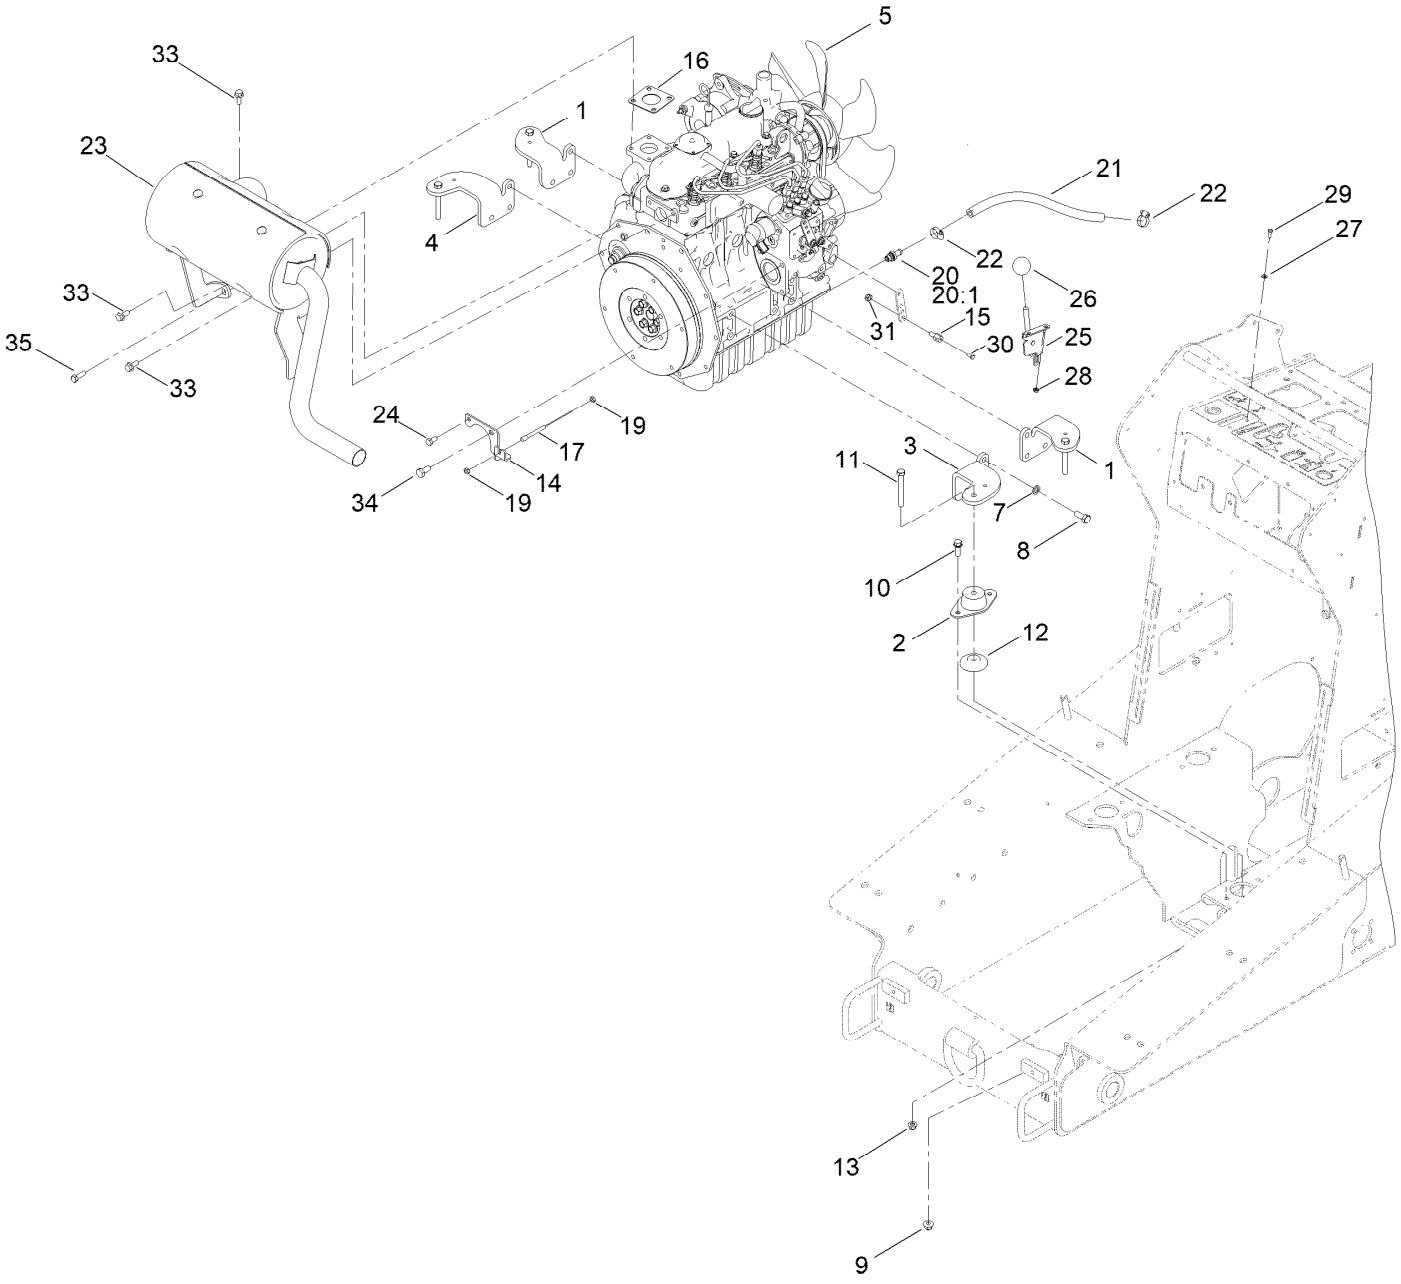

Engine and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1	115-8066-0P	2	Mount-Engine
2	121-9076	4	Mount-Engine
3	115-8068-0P	1	Mount-Engine, LH
4	115-8063-0P	1	Mount-Engine RH
5	138-6911	1	Engine-Kubota, D1305
7	48-9590	12	Washer-Lock
8	43-0090	12	Screw-HH
9	104-8301	4	Nut-HF, NI
10	3234-29	8	Screw-HHF
11	323-14	4	Screw-HH
12	138-6462	4	Support-Isolator
13	104-8300	8	Nut-HF, NI
14	130-1148-03	1	Bracket-Throttle
15	98-9311	1	Swivel-Throttle
16	99-8343	1	Gasket-Muffler
17	130-7743	1	Cable-Throttle
19	3220-1	2	Nut-Jam
20	139-7317	1	Fitting-Barb
20:1	140-1983	1	Seal-Oring
21	138-0830	1	Hose-Oil Drain
22	2412-36	2	Clamp-Hose
23	138-0753	1	Muffler
24	33114-016	1	Screw-HH
25	108-9730	1	Lever-Control
26	233-42	1	Knob
27	3256-51	2	Washer-Flat
28	32149-7	2	Nut-Keps
29	3290-134	2	Screw
30	25-8640	1	Screw-HH
31	3296-20	1	Nut-Lock, NI
33	33104-020	6	Screw-HHF
34	63-7790	1	Screw-Cap
35	99-5131	1	Bolt


Tandem Pump and Gear Pump Assembly

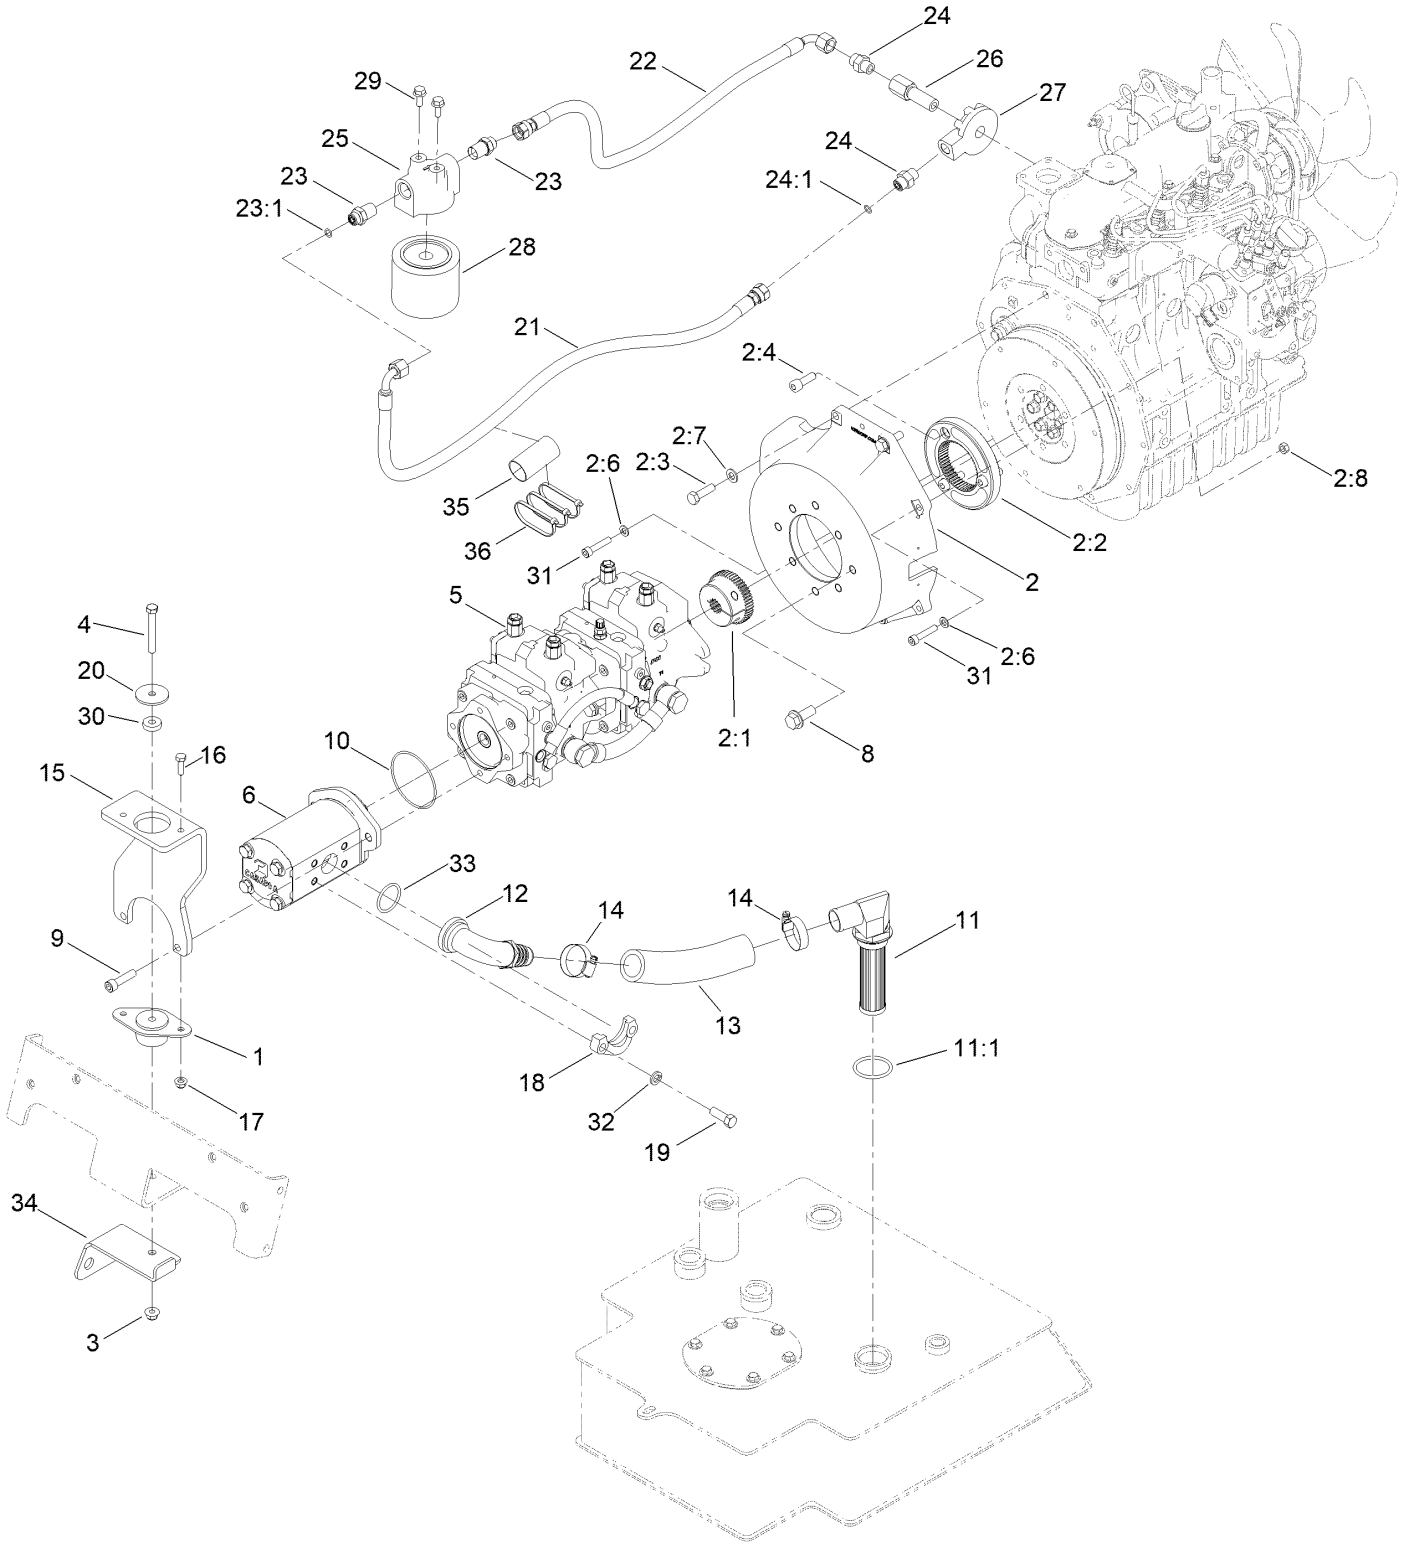

Tandem Pump and Gear Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-9076	1	Mount-Engine
2	138-0822	1	Mount-Pump
2:1	130-7725	1	Hub-Pump
2:2	125-1179	1	Flange-Coupler
2:3	56-2140	2	Screw-HH
2:4	108-1420	3	Screw-HSH
2:6	115-7370	4	Washer-Plain
2:7	33095-00	2	Washer-Flat
2:8	33014-00	1	Nut-Hex
3	104-8301	1	Nut-HF, NI
4	323-13	1	Screw-HH
5	138-0767	1	Pump-Tandem
6	130-7731	1	Pump-Gear
8	3234-38	2	Screw-HHF
9	09718	2	Screw-Sh
10	353-949	1	O-Ring
11	145-0622	1	Strainer Fitting ASM
11:1	237-101	1	O-Ring
12	112-7374	1	Fitting
13	130-7561	1	Hose-Suction
14	2412-111	2	Clamp-Hose, W/Liner
15	138-0231-03	1	Bracket-Support, Pump
16	322-5	2	Screw-HH
17	104-8300	2	Nut-HF, NI
18	136-5794	2	Flange
19	324-5	4	Screw-HH
20	63-7400	1	Washer-Rebound
21	139-0793	1	HYD Hose ASM
22	139-0794	1	HYD Hose ASM
23	136-5838	2	Fitting-HYD
23:1	237-22	1	O-Ring
24	130-7716	2	Fitting-HYD
24:1	237-22	1	O-Ring
25	130-7588	1	Base-Filter
26	130-7587	1	Pipe-Joint
27	130-7586	1	Base-Filter
28	104-5169	1	Filter-Oil
29	33104-020	2	Screw-HHF
30	62-6660	1	Spacer
31	131-0197	1	Screw-HSH
32	3253-6	4	Washer-Lock
33	115-5420	1	O-Ring
34	138-0790-0P	1	Bracket-Bulkhead
35	AU112950	1	Protector-Hose
36	3290-378	3	Tie-Cable

Tandem Pump Assembly No. 138-0767

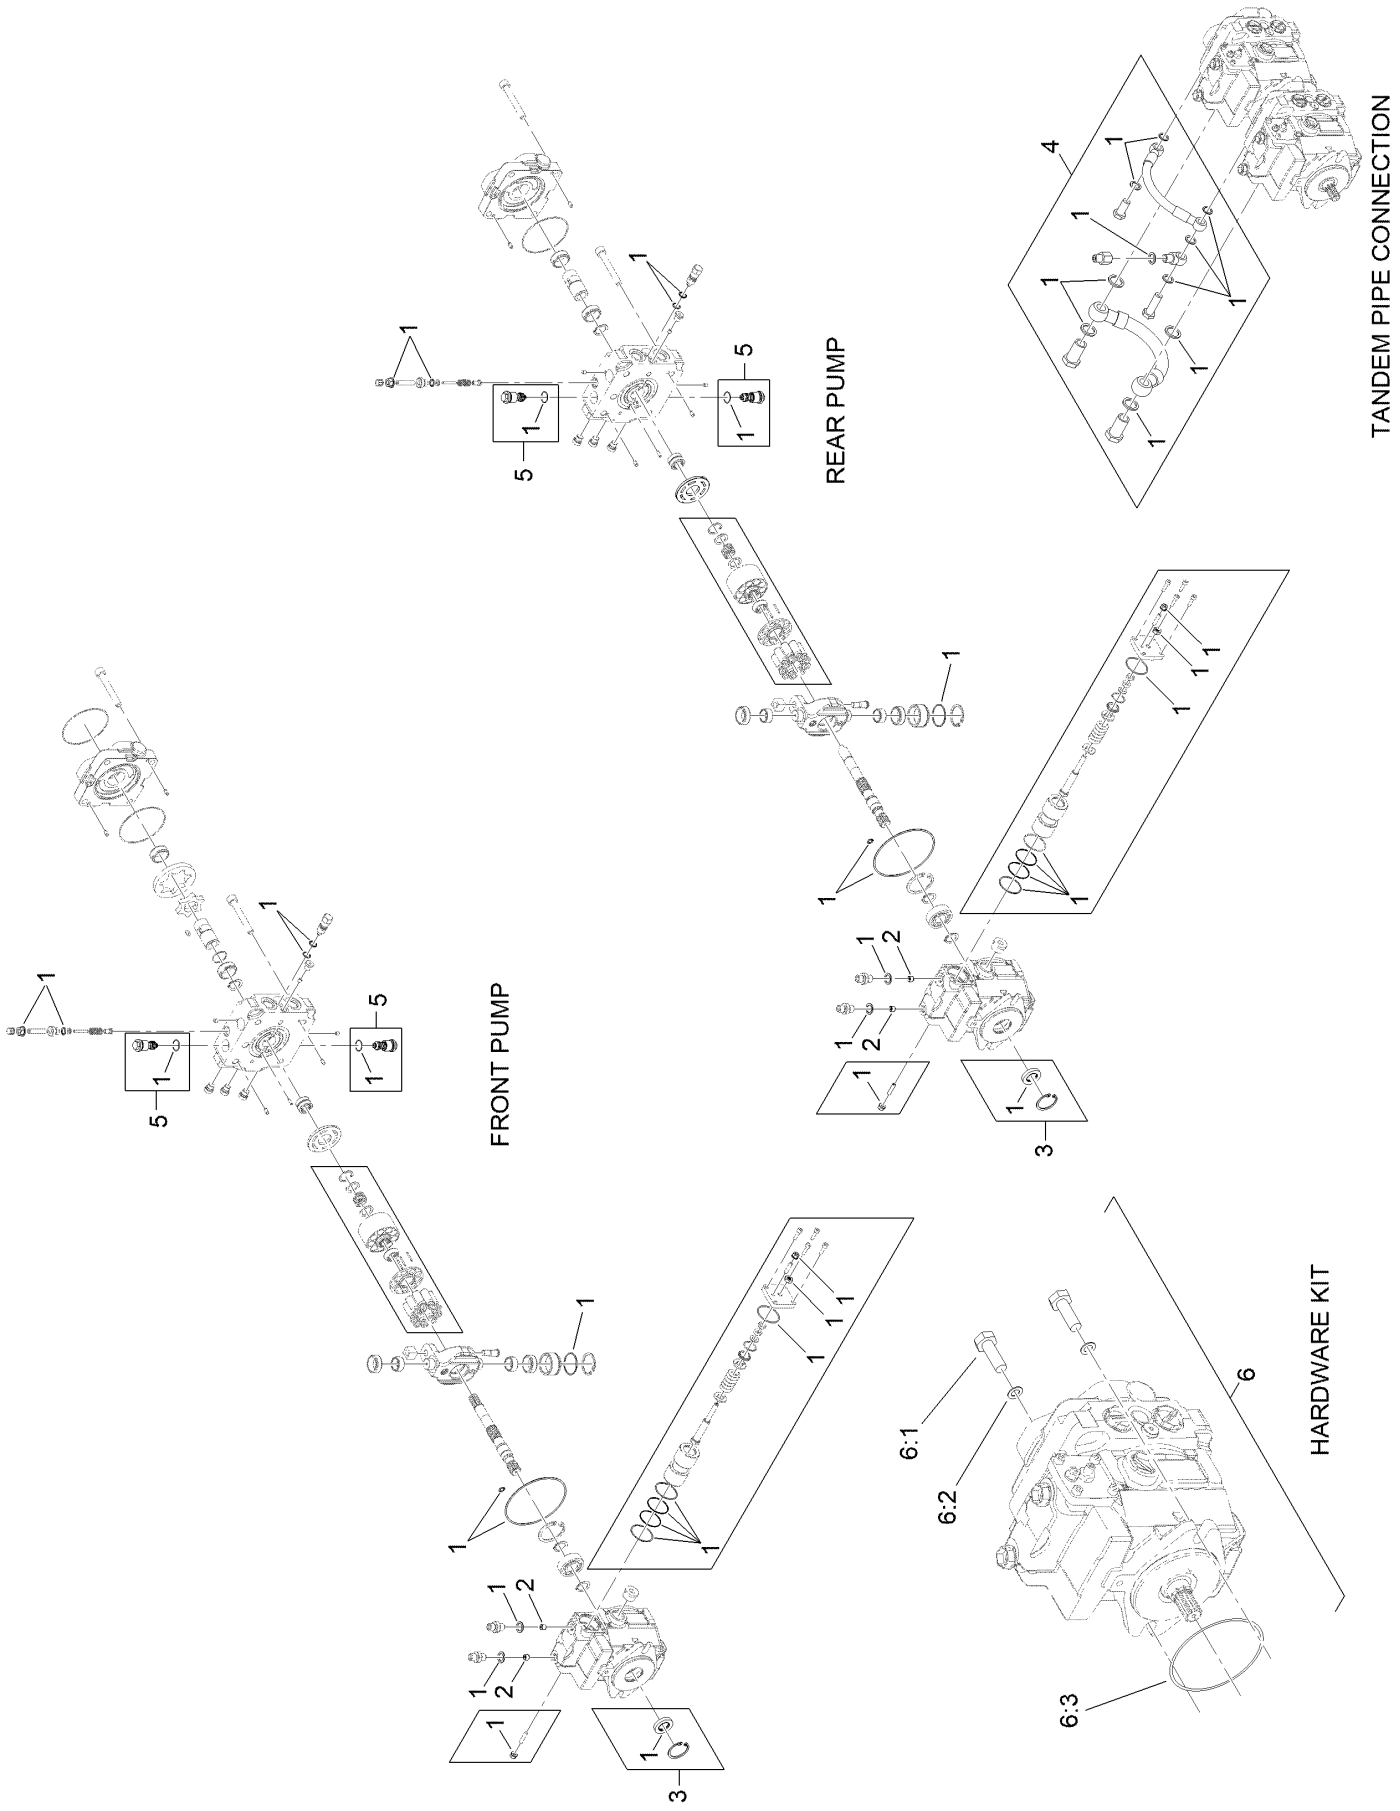


Tandem Pump Assembly No. 138-0767 (continued)

Ref.	Part Number	Qty.	Description
1	132-6041	2	Seal Kit
2	132-6042	4	Spacer-Jet
3	132-6045	1	Shaft Seal Kit
4	132-6047	1	Tandem Connection Pipe Kit
5	138-0781	4	Valve-Relief
6	140-5300	1	Hardware Kit
6:1		2	Bolt-Hex ●
6:2		2	Washer ●
6:3		1	O-Ring ●

● Not serviced separately

Gear Pump Assembly No. 130-7731

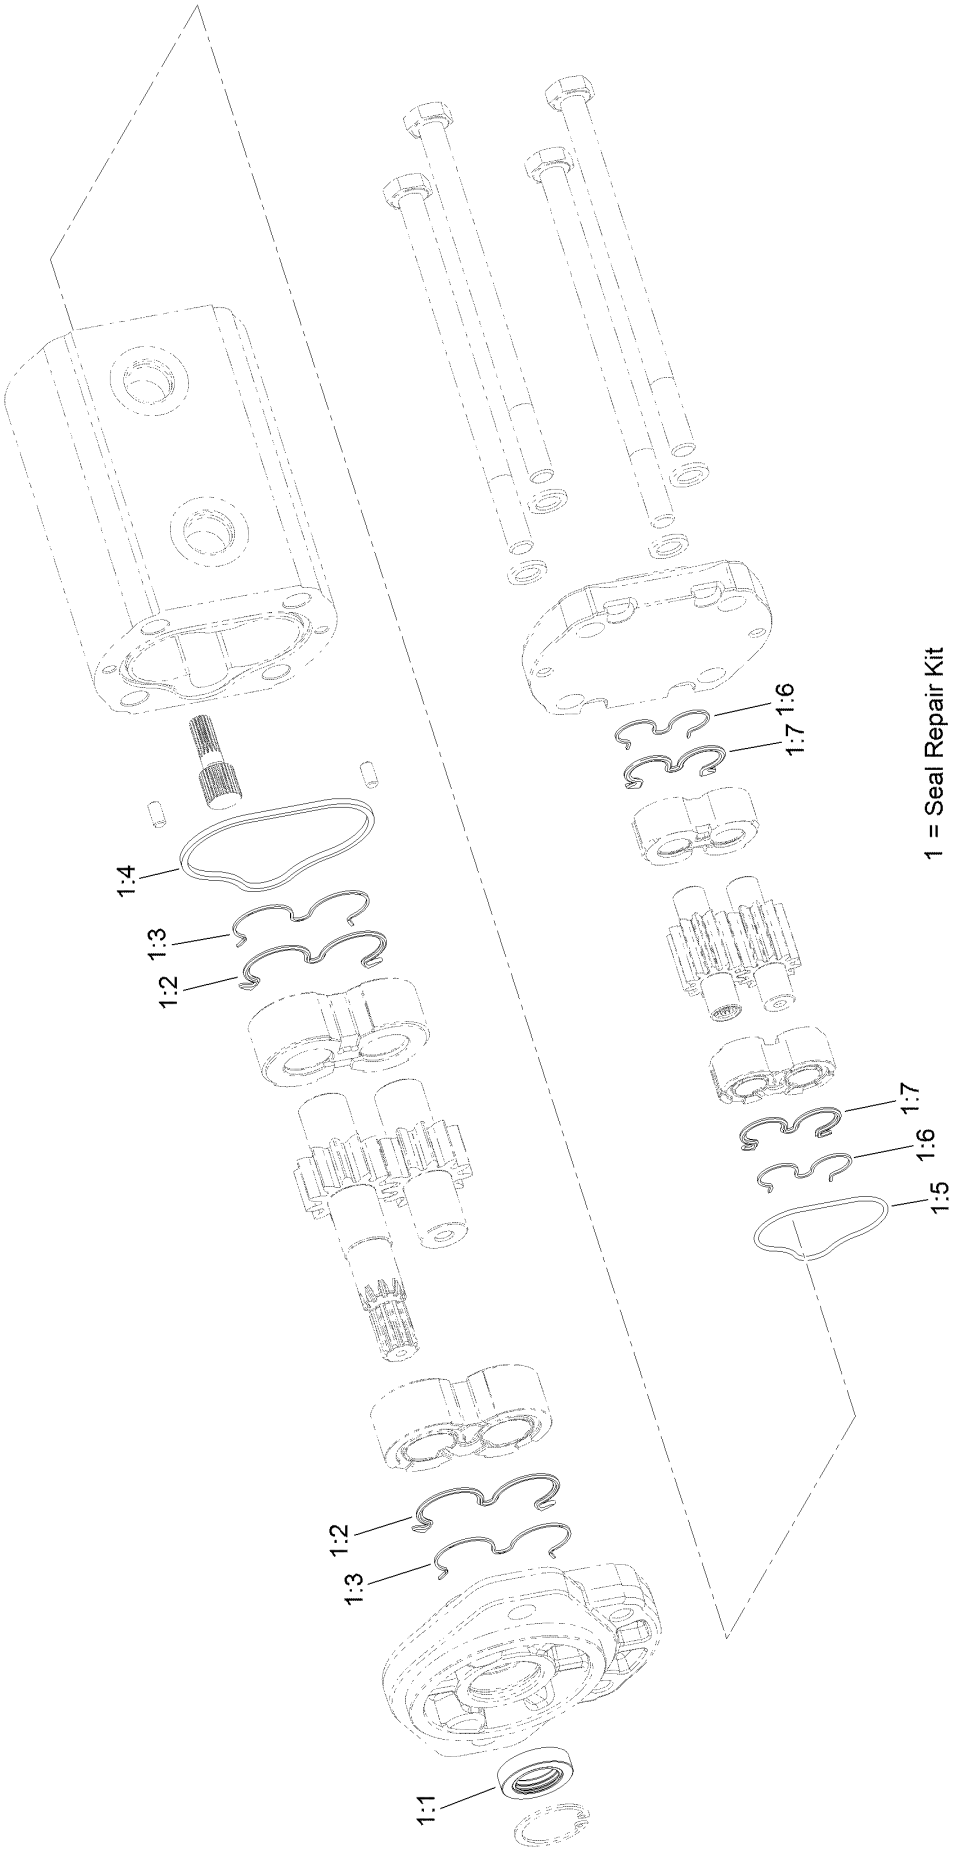


Gear Pump Assembly No. 130-7731 (continued)

Ref.	Part Number	Qty.	Description
1	132-6028	1	Seal Kit
1:1		1	Seal-Shaft ●
1:2		2	Seal-Gear ●
1:3		2	Ring-Backup ●
1:4		1	Seal-Square ●
1:5		1	O-Ring ●
1:6		2	Ring-Backup ●
1:7		2	Seal-Gear, Rear ●

● Not serviced separately


Control Valve and Reference Bar Assembly

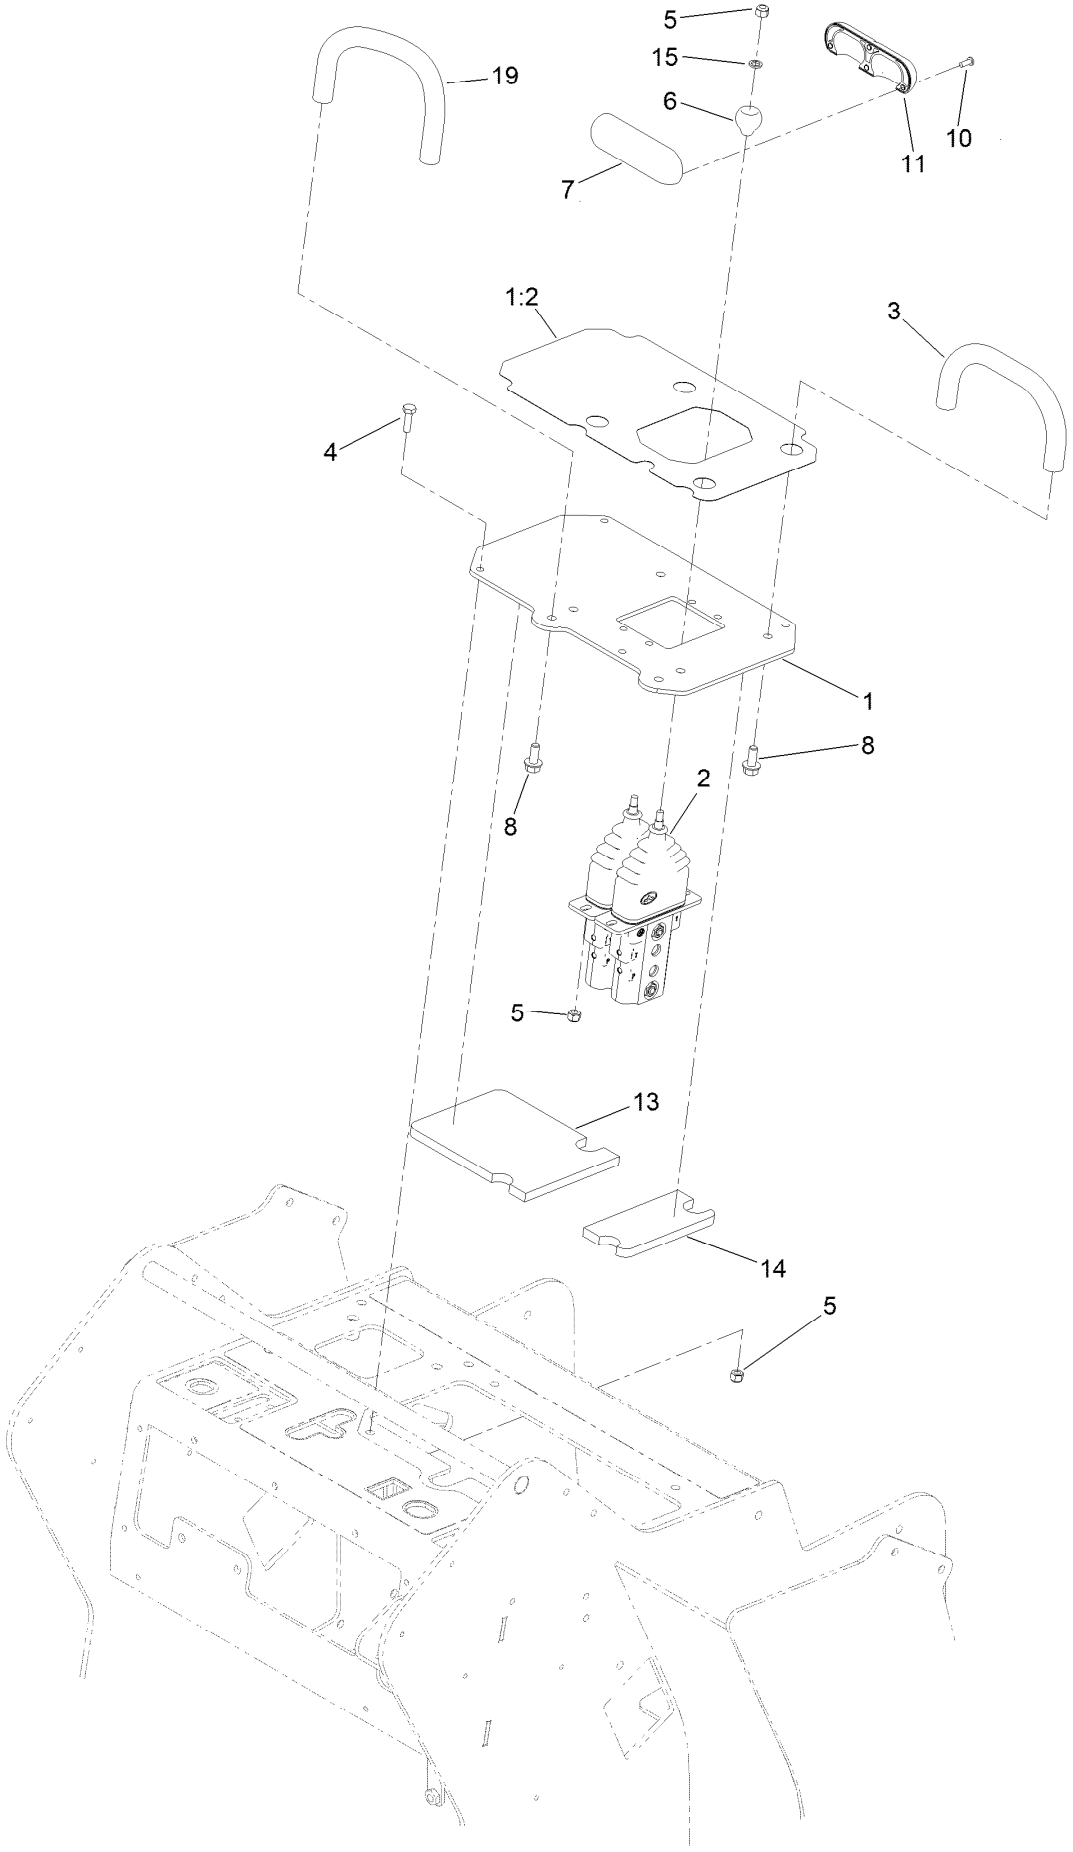

Control Valve and Reference Bar Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-5321	1	Plate-Control
1:2	131-0708	1	Decal-Control Panel
2	145-3279	1	Valve-Control (Traction)
3	112-2620	1	Bar-Reference
4	321-5	8	Screw-HH
5	3296-42	10	Nut-Lock, NI
6	130-7723	2	Ball-Traction
7	130-7692	1	Handle-Control
8	3234-5	4	Screw-HHF
10	94-6961	4	Screw
11	131-9162	1	Handle-Traction
13	132-8414	1	Foam-Shield, Heat
14	132-8415	1	Foam-Shield, Heat
15	75-5470	2	Spacer-Bearing
19	138-0791	1	Bar-Reference

Control Valve Assembly No. 145-3279

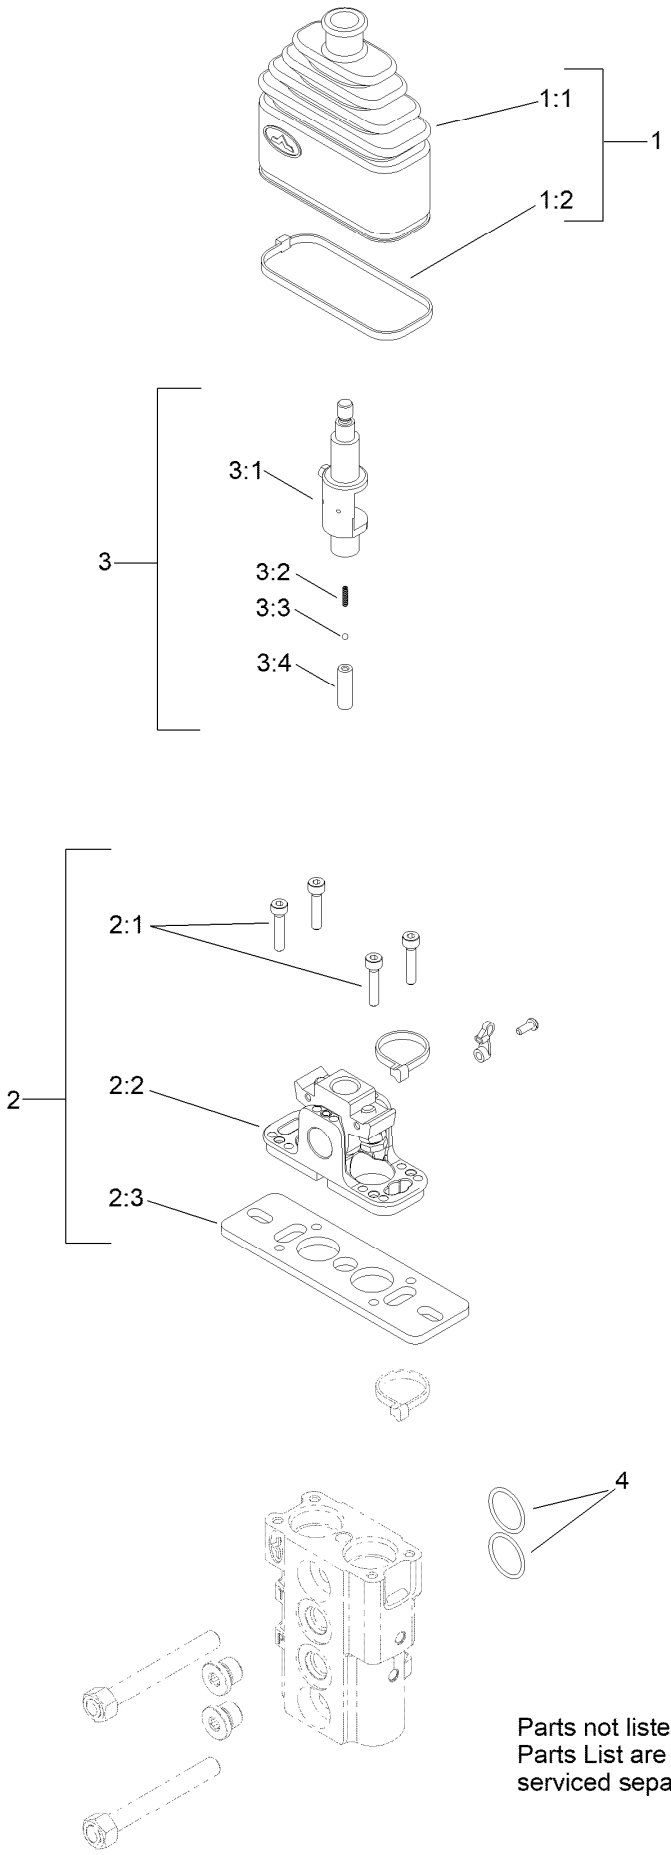


Parts not listed in Parts List are not serviced separately

Control Valve Assembly No. 145-3279 (continued)

Ref.	Part Number	Qty.	Description
1	132-6034	2	Bellow Kit
1:1		1	Bellow-Rubber ●
1:2		1	Tie-Cable ●
2	132-6036	2	Fulcrum Kit
2:1		4	Screw ●
2:2		1	Support Kit ●
2:3		1	Plate-Mounting ●
3	132-6037	2	Switch Holder Lever Kit
3:1		1	Lever-Holder, Switch ●
3:2		1	Spring-Return ●
3:3		1	Sphere ●
3:4		1	Holder-Spring ●
4	100-7246	2	O-Ring

● Not serviced separately


2-Spool Valve and Auxiliary Valve Assembly

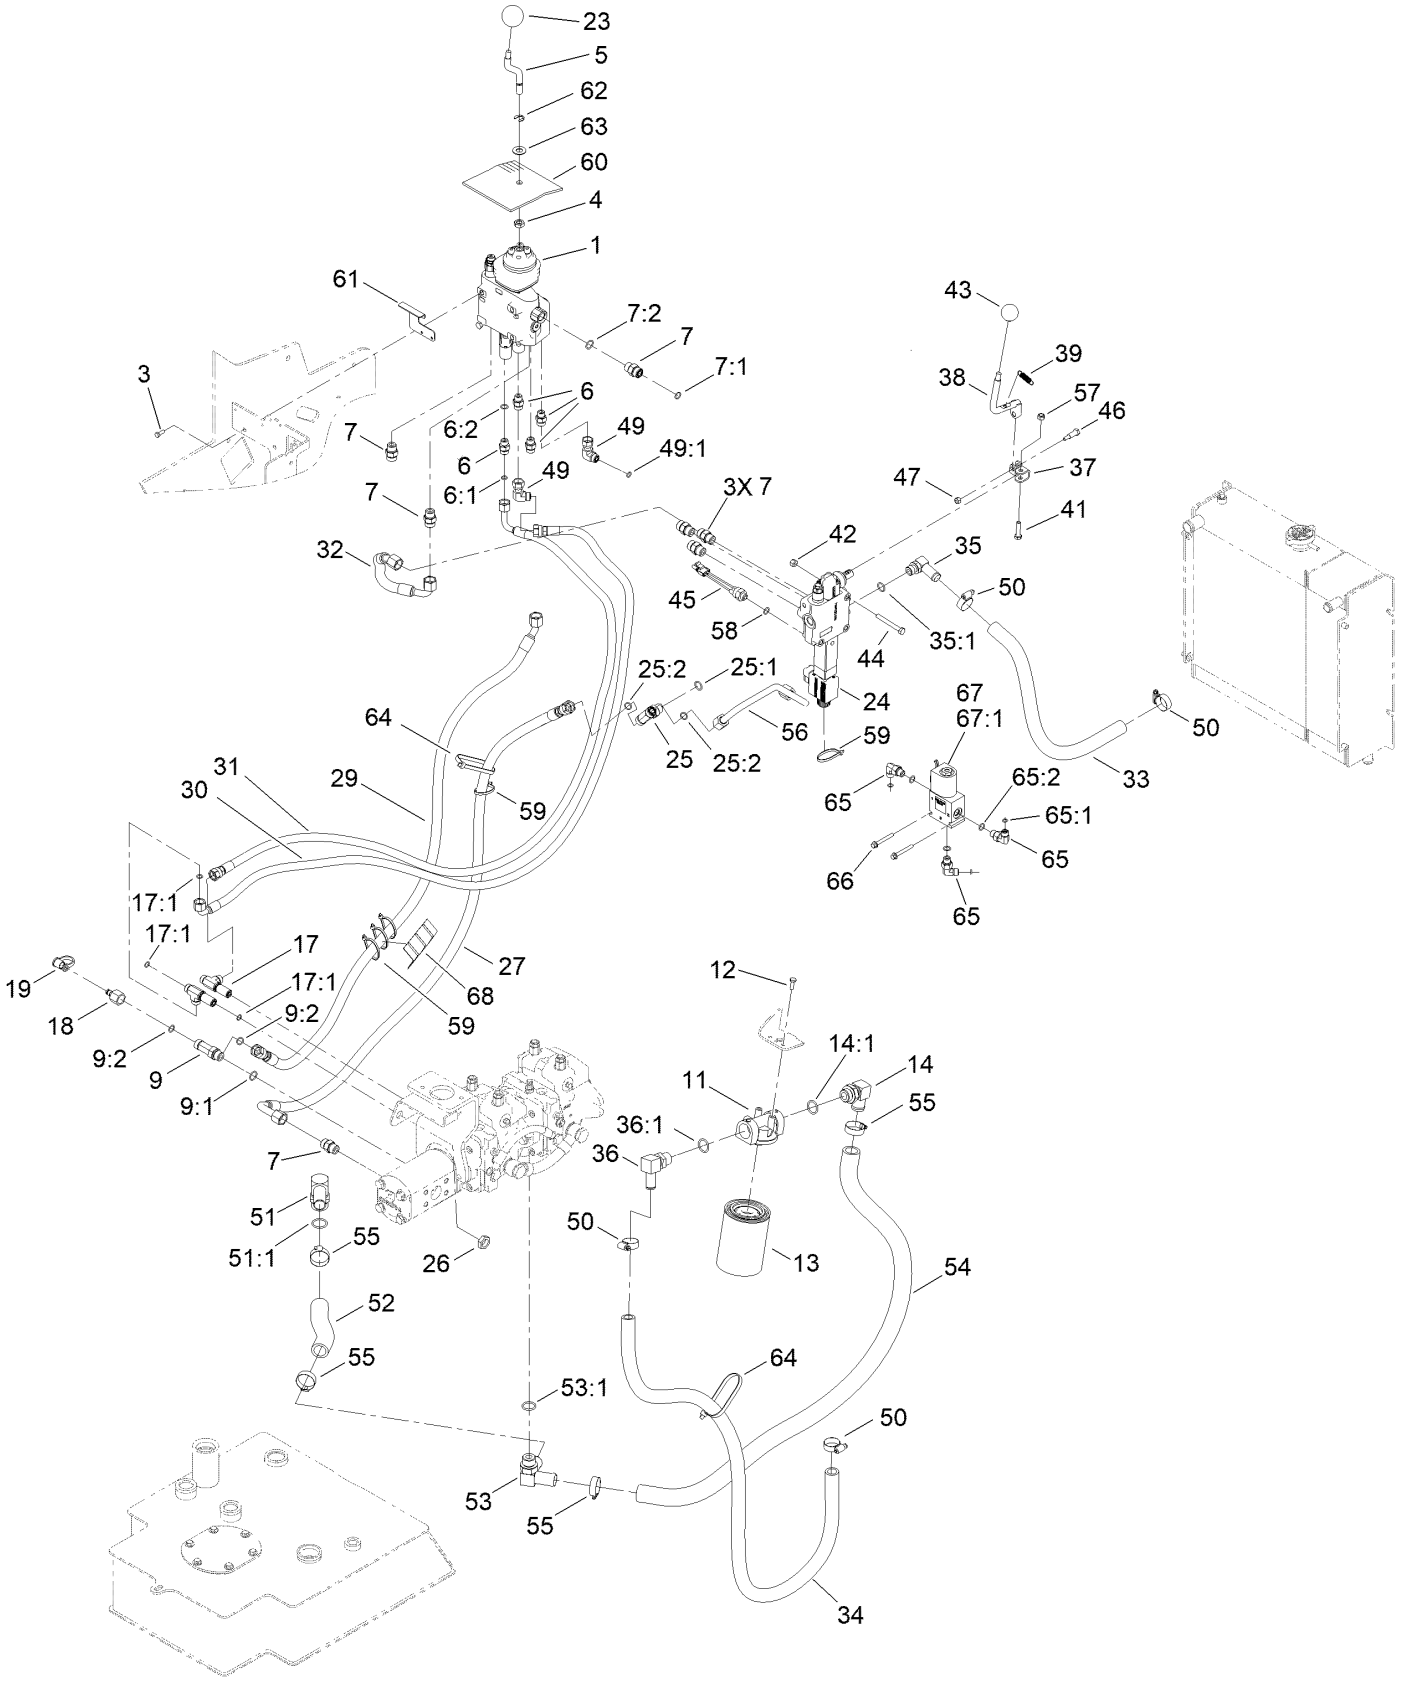

2-Spool Valve and Auxiliary Valve Assembly (continued)

Ref.	Part Number	Qty.	Description
1	144-7353	1	Valve-2 Spool
3	322-4	3	Screw-HH
4	51-2070	1	Nut
5	131-8025	1	Shaft-Handle, Lift/Tilt
6	340-2	4	Fitting-Straight
6:1	237-22	1	O-Ring
6:2	237-42	1	O-Ring
7	340-4	7	Fitting-Straight
7:1	237-30	1	O-Ring
7:2	237-79	1	O-Ring
9	340-109	1	Fitting-Tee
9:1	237-79	1	O-Ring
9:2	237-30	2	O-Ring
11	92-5821	1	Head-Filter
12	321-4	2	Screw-HH
13	86-3010	2	Filter-Oil
14	100-4202	1	Fitting-90
14:1	237-81	1	O-Ring
17	340-68	2	Fitting-Tee, Bulkhead
17:1	237-22	3	O-Ring
18	100-5616	1	Fitting
19	354-79	1	Cap-Dust
23	233-21	1	Knob
24	145-4402	1	Valve- Aux, Double Detent
25	340-157	1	Fitting-HYD, Tee
25:1	237-79	1	O-Ring
25:2	237-30	2	O-Ring
26	340-70	4	Nut-Lock
27	139-0795	1	HYD Hose ASM
29	139-0796	1	HYD Hose ASM
30	139-0797	1	HYD Hose ASM
31	139-0798	1	HYD Hose ASM
32	145-4535	1	HYD Hose
33	130-7565	1	Hose-Return
34	130-7566	1	Hose-Return
35	353-954	1	Fitting-Elbow, 90
35:1	237-79	1	O-Ring
36	353-987	1	Fitting-Elbow, 90
36:1	237-81	1	O-Ring
37	133-0235	1	Bracket-Auxiliary
38	131-9277	1	Handle ASM
39	114-0249	1	Spring-Extension
41	33114-035	1	Screw-HH
42	3296-29	3	Nut-Lock, NI
43	233-42	1	Knob
44	322-13	3	Screw-HH
45	72-4310	1	Switch-Ball
46	119-2309	1	Bolt-Shldr,HH
47	3296-42	1	Nut-Lock, NI
49	340-159	2	Elbow-90
49:1	237-22	2	O-Ring
50	2412-129	4	Clamp-Hose
51	56-9530	1	Fitting-HYD, 90 DEG
51:1	237-117	1	O-Ring
52	127-9627	1	Hose-Suction
53	AU375462A1	1	Connector
53:1	237-81	1	O-Ring
54	127-9626	1	Hose-Return
55	2412-34	4	Clamp-Hose
56	131-9226	1	Hydraulic Tube ASM
57	33024-00	1	Nut-Lock, NI
58	237-42	1	O-Ring
59	3290-378	5	Tie-Cable
60	131-8011	1	Deflector-Air
61	131-8012	1	Bracket-Deflector
62	32151-68	1	Ring-Retaining
63	110-6894	1	Washer-Pivot
64	3334-945	2	Tie-Cable
65	340-82	3	Fitting-Elbow, 90 DEG
65:1	237-42	1	O-Ring
65:2	237-21	1	O-Ring
66	3234-34	2	Screw-HHF
67	158-627	1	Solenoid Valve
67:1	217-770	1	Solenoid Coil
68	AU112950	2	Protector-Hose


2-Spool Valve Assembly No. 144-7353

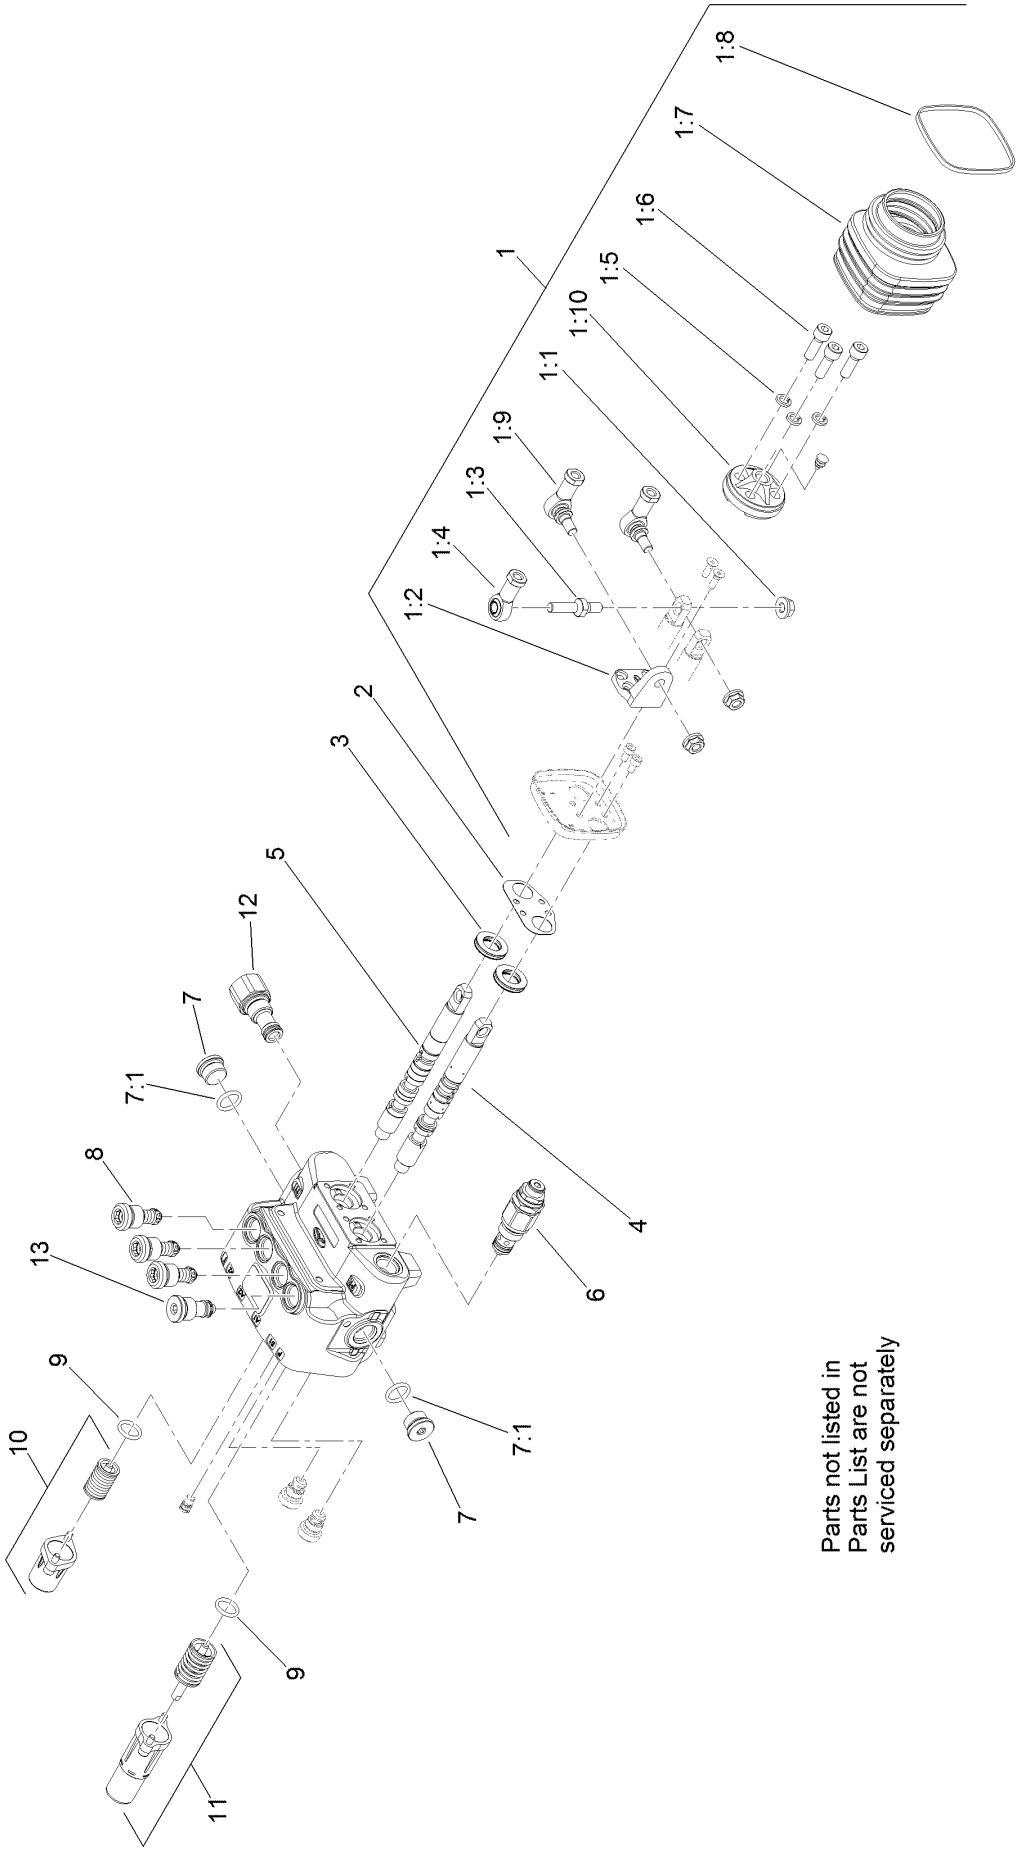

2-Spool Valve Assembly No. 144-7353 (continued)

Ref.	Part Number	Qty.	Description
1	106-7724	1	Joystick Kit
1:1	98-0668	3	Nut
1:2	106-7726	1	Pivot-Joystick
1:3	106-7727	1	Pin-Joystick
1:4	106-7728	1	End-Rod
1:5	42-9850	3	Washer-Lock, Spring
1:6	98-5828	3	Screw-HSH
1:7	106-7729	1	Bellow-Rubber
1:8	3290-379	1	Tie-Cable
1:9	106-7730	2	Joint-Joystick
1:10	106-7731	1	Holder-Articulated
2	106-7725	1	Seal-Joystick
3	106-7738	2	Seal-Valve, Spool
4	144-7350	1	Spool - Valve
5	106-7736	1	Spool-Valve
6	132-6031	1	Valve-Relief, Main
7	353-988	2	Plug-Hex
7:1	237-79	1	O-Ring
8	106-7734	3	Valve-Relief
9	106-7719	2	Seal-Valve
10	106-7732	1	Valve Spring Kit
11	106-7733	1	Detent Spring Kit
12	132-6032	1	Joint-SAE 8
13	132-6033	1	Plug


Double Detent Auxiliary Valve
Assembly No. 145-4402

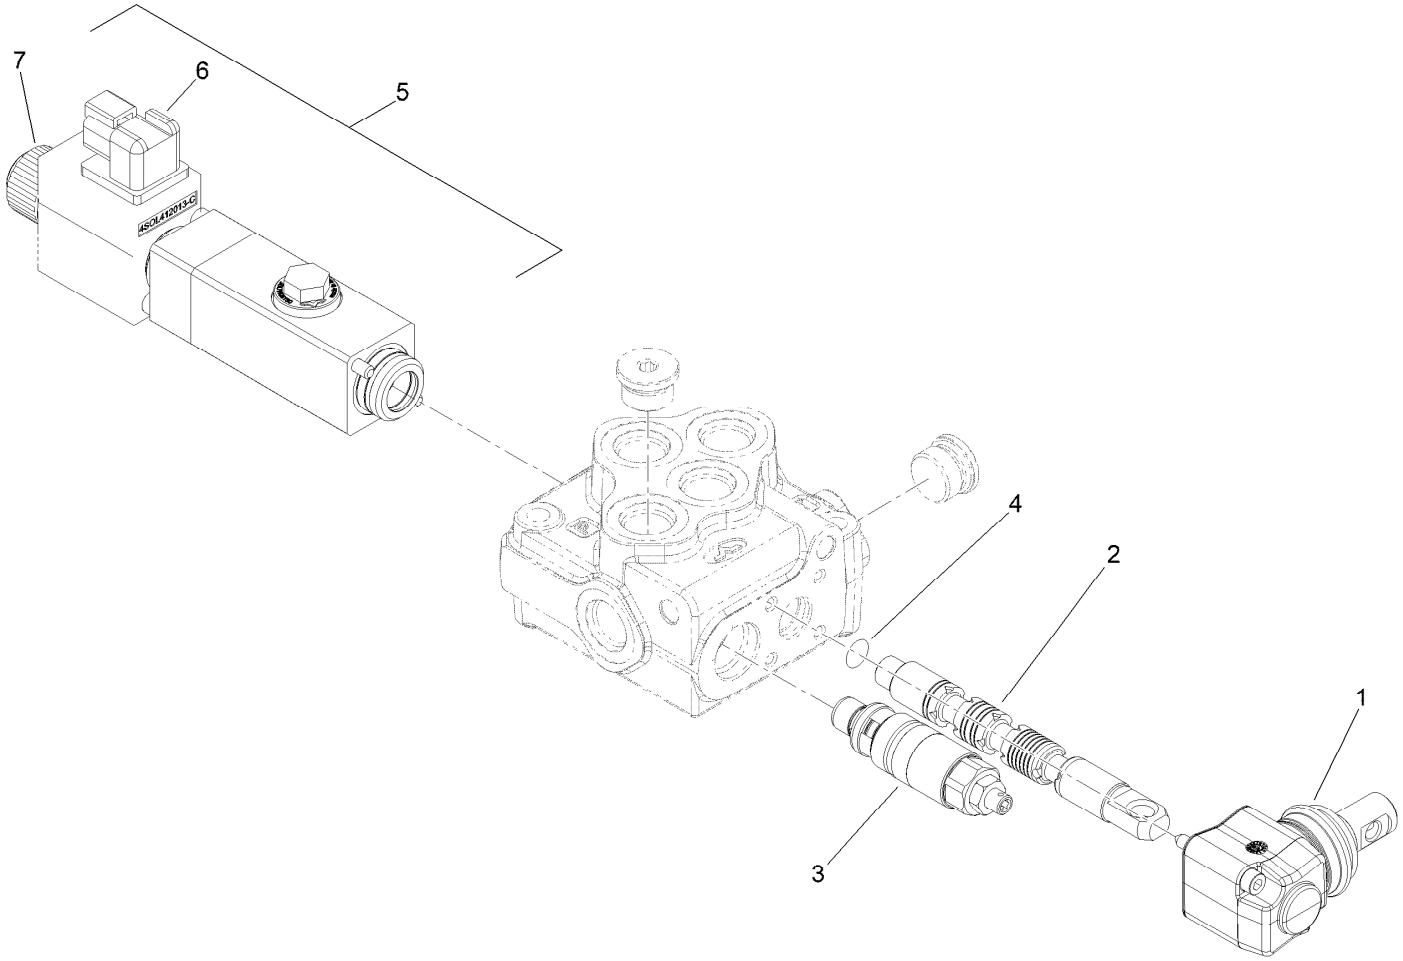

Double Detent Auxiliary Valve
Assembly No. 145-4402 (continued)

Ref.	Part Number	Qty.	Description
1	132-6038	1	Lever Kit (With Screws)
2	145-4403	1	Spool-Valve
3	132-6039	1	Valve-Relief
4	106-7719	1	Seal-Valve
5	145-4404	1	Kit-Valve, Spring/Coil ASM
6	136-5811	1	Coil-Valve
7	145-4405	1	Pull Tube, Valve


Loader Arm Assembly

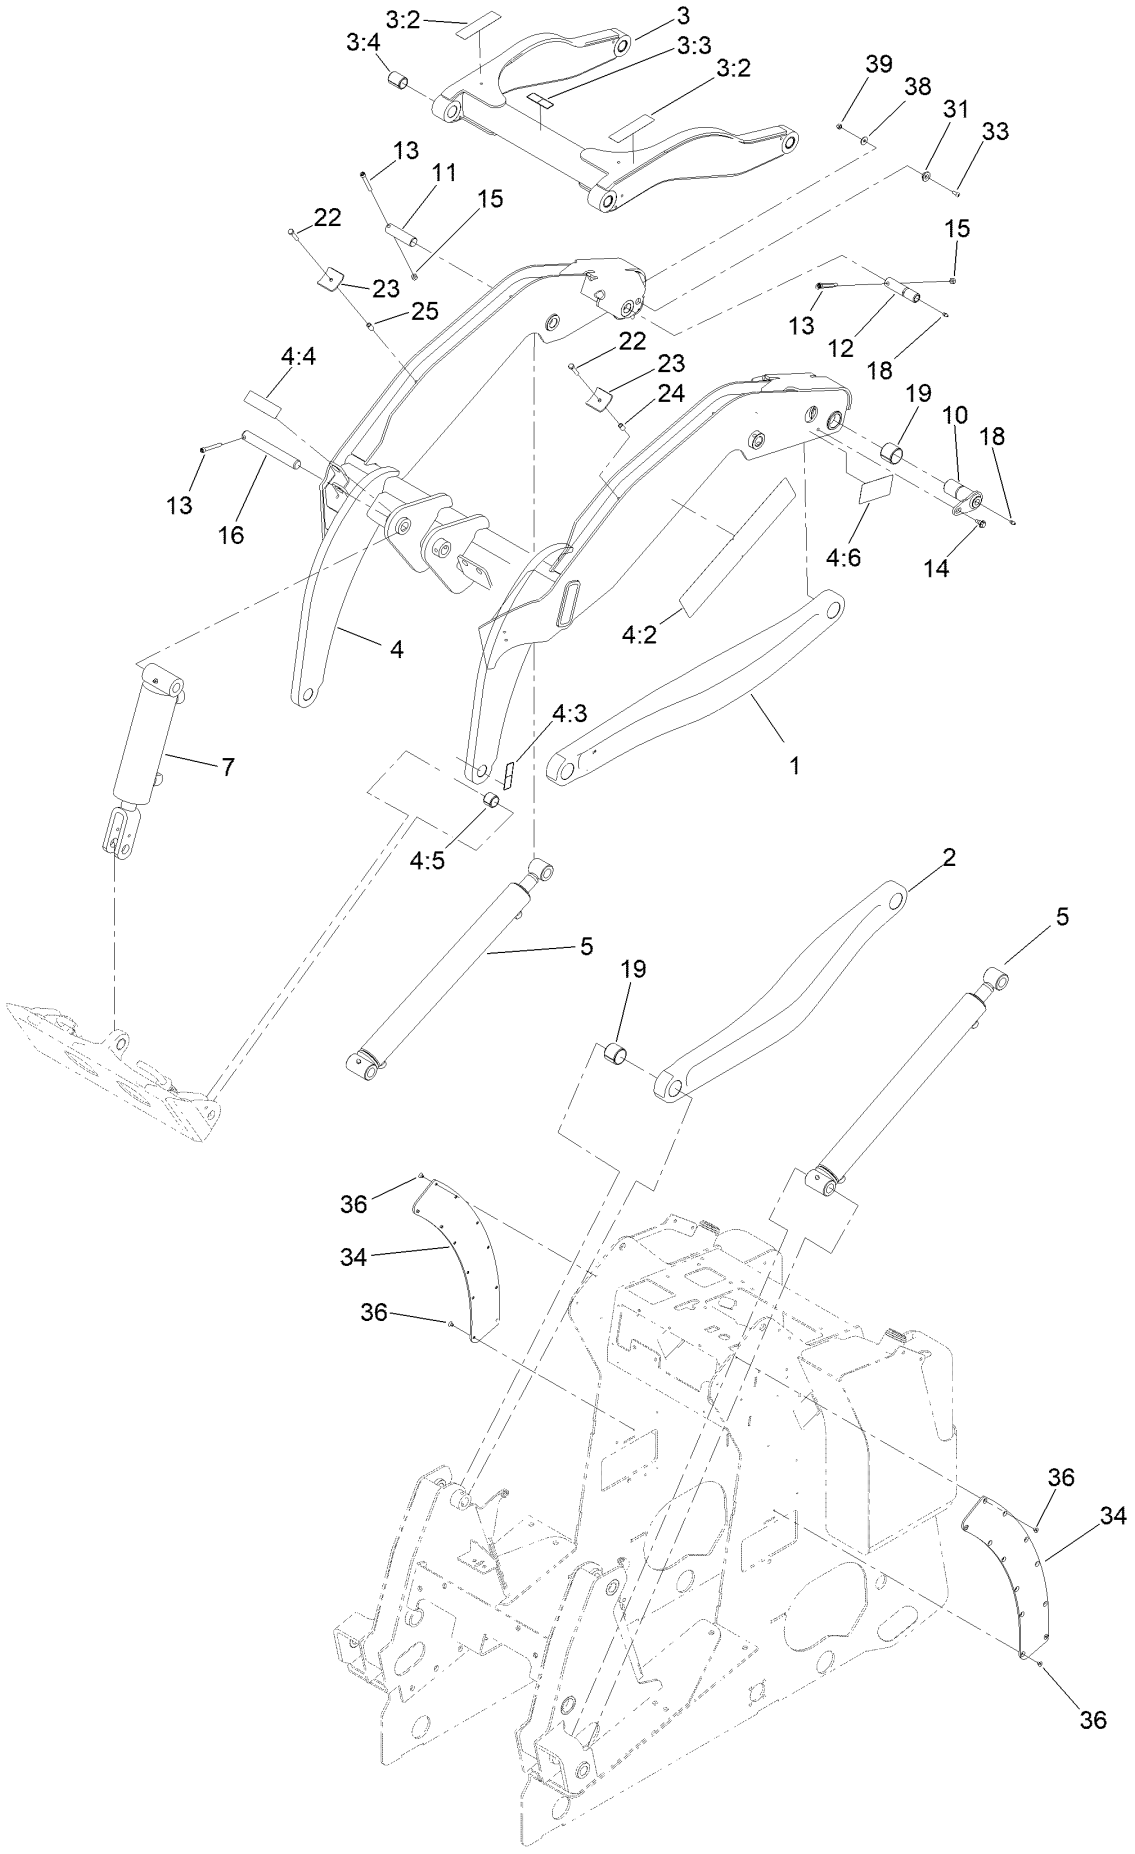

Loader Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-5151-03	1	Link-Lower, LH
2	130-5153-03	1	Link-Lower, RH
3	130-5318	1	Link-Upper
3:2	130-2836	2	Decal-Warning, Crushing
3:3	120-0625	1	Decal-Warning
3:4	130-5200	4	Bushing-Spring
4	131-8023	1	Loader Arm ASM
4:2	133-0217	2	Decal
4:3	120-0625	2	Decal-Warning
4:4	115-4855	1	Decal-Caution
4:5	98-4871	2	Bushing-Tension
4:6	131-0711	2	Decal-Warning
5	140-7634	2	Cylinder HYD (2.25X20.16 Double Action)
7	139-0779	1	CYL-HYD
10	136-4708	2	Pin-Pivot
11	130-5178	2	Pin-Pivot
12	125-3695	2	Pin-Link
13	3274-40	5	Screw-HSH
14	99-5105	2	Screw-Shoulder
15	3296-29	4	Nut-Lock, NI
16	130-5210	1	Pin-Locking
18	302-5	4	Fitting-Grease
19	130-5199	4	Bushing-Spring
22	5-1470	4	Screw-HH
23	130-5221	4	Plate-Holddown, Hose
24	131-9150	2	Spacer-Hose
25	131-9151	2	Spacer-Hose
31	133-1666	2	Guide
33	3274-31	2	Screw-HSBH
34	131-0596	2	Pad-Wear, Frame
36	ST80422	16	Screw
38	87-6630	2	Washer-Plain
39	3296-42	2	Nut-Lock, NI

Hydraulic Cylinder Assembly No. 140-7634

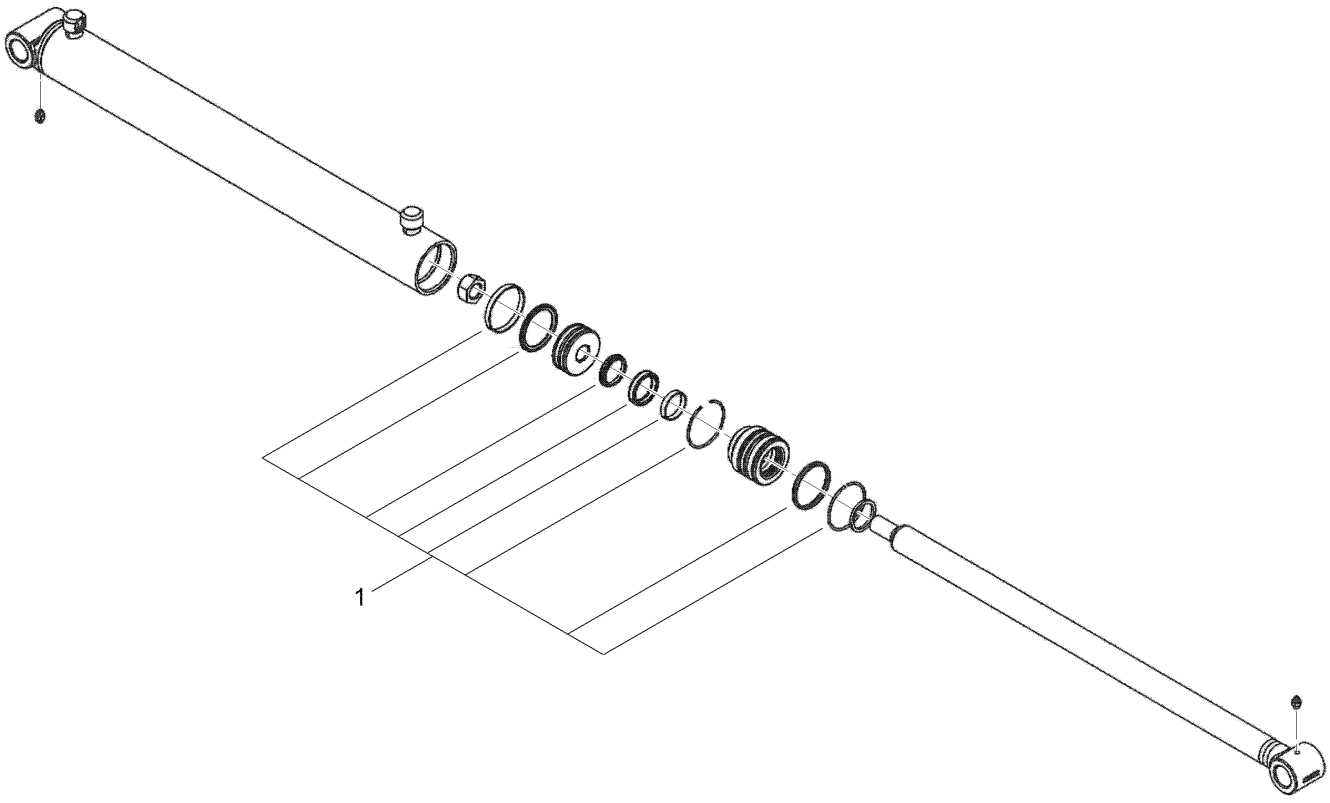

Hydraulic Cylinder Assembly No. 140-7634 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	140-5309	1	Kit-Seal, Hydraulic CYL


Hydraulic Cylinder Assembly No. 139-0779



Hydraulic Cylinder Assembly No. 139-0779 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	140-5308	1	Seal Kit
2	163-8918	1	Rod-Clevis


Loader Hydraulic Assembly

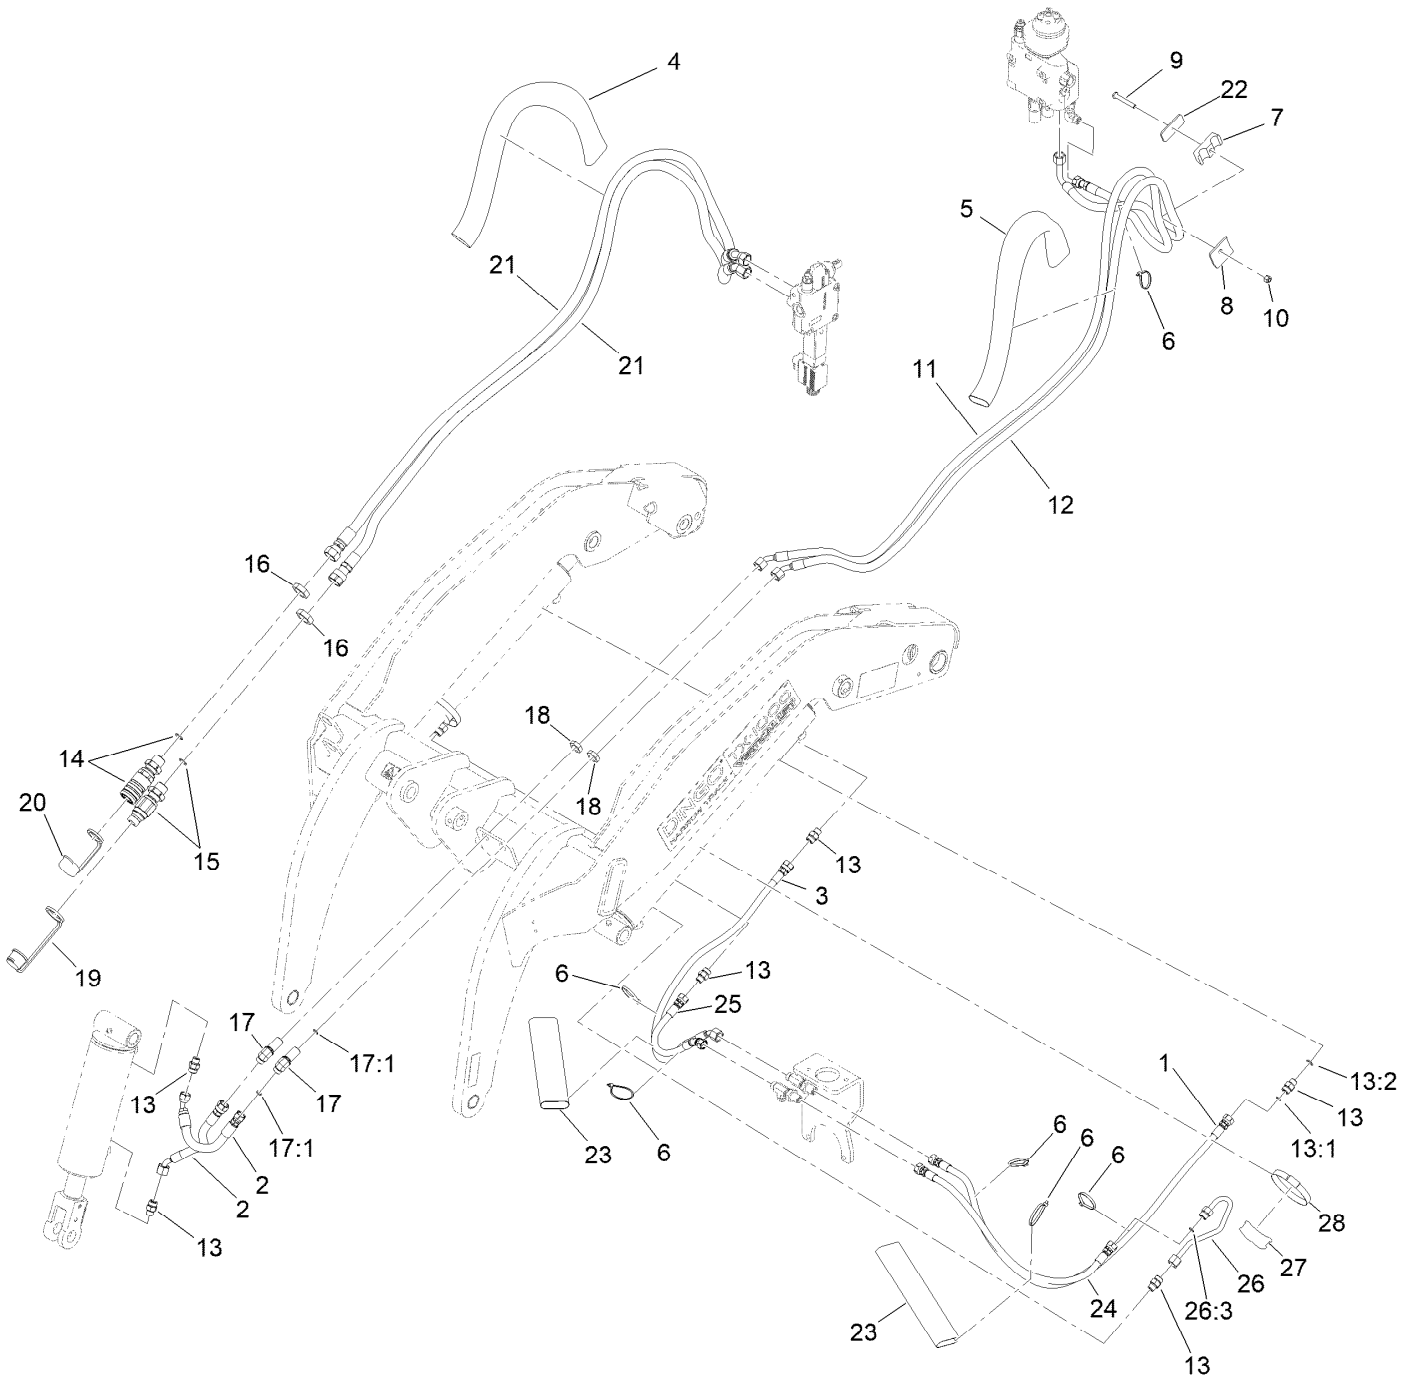

Loader Hydraulic Assembly (continued)

Ref.	Part Number	Qty.	Description
1	144-4114	1	Hose ASM
2	139-0802	2	HYD Hose ASM
3	144-4111	1	Hose ASM
4	130-7718	1	Sleeve-Protective
5	100-6128	1	Sleeve-Protective
6	3290-378	6	Tie-Cable
7	94-8105	2	Clamp-Tube
8	130-5221	2	Plate-Holddown, Hose
9	9114524	2	Bolt-TAP, HH
10	3296-29	2	Nut-Lock, NI
11	139-0804	1	HYD Hose ASM
12	139-0805	1	HYD Hose ASM
13	340-2	6	Fitting-Straight
13:1	237-22	1	O-Ring
13:2	237-42	1	O-Ring
14	139-4798	1	Coupler ASM,Bulkhead,
15	139-4799	1	Coupler ASM,Bulkhead,
16	340-74	2	Nut-Lock, Bulkhead
17	340-69	2	Elbow-Bulkhead, 45 DEG
17:1	237-22	2	O-Ring
18	340-70	2	Nut-Lock
19	100-8815	1	Cap-Dust, Nipple
20	100-8816	1	Cap-Dust, Coupler
21	139-0806	2	HYD Hose ASM
22	131-9152	2	Plate-Clamp, Hose
23	133-8568	2	Sleeve-Protective
24	144-4112	1	Hose ASM
25	144-4115	1	Hose ASM
26	140-5724	2	Tube-HYD
26:3	237-22	1	O-Ring
27	137-0146	2	Block-Hardline
28	2412-110	2	Clamp-Band/Screw


Quick Attach Assembly

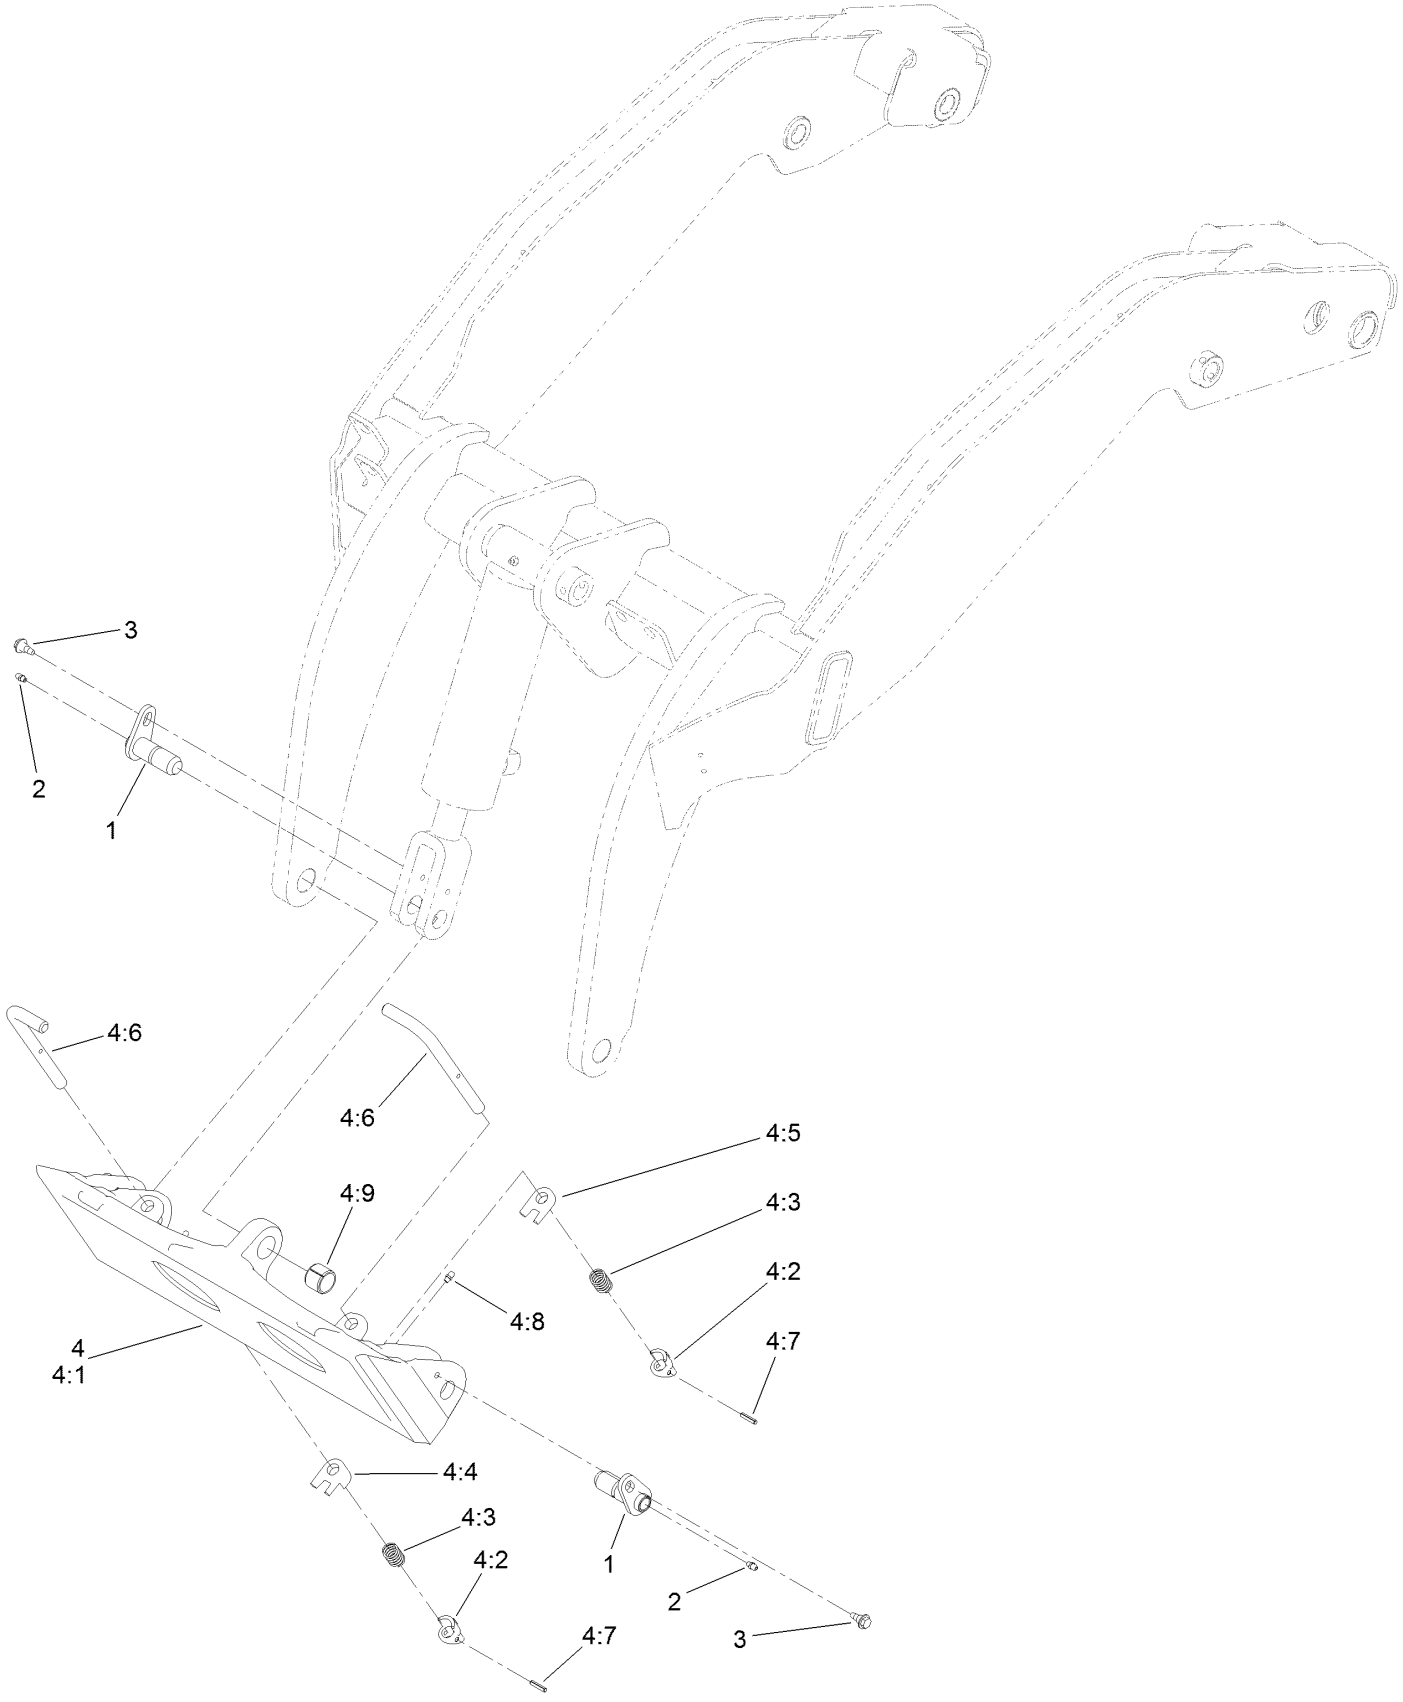

Quick Attach Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-5222	3	Pin-Pivot
2	302-5	3	Fitting-Grease
3	99-5105	3	Screw-Shoulder
4	132-8418	1	Quick Attach ASM
4:1	130-7708-03	1	Mount-Qtach
4:2	105-0246	2	Cam
4:3	98-4694	2	Spring-Compression
4:4	104-5909	1	Stop-RH
4:5	104-5903	1	Stop-LH
4:6	132-8419	2	Pin-Locking
4:7	3285-1	2	Pin-Grooved
4:8	302-5	2	Fitting-Grease
4:9	98-4871	1	Bushing-Tension


Front Cover and Side Panel Assembly

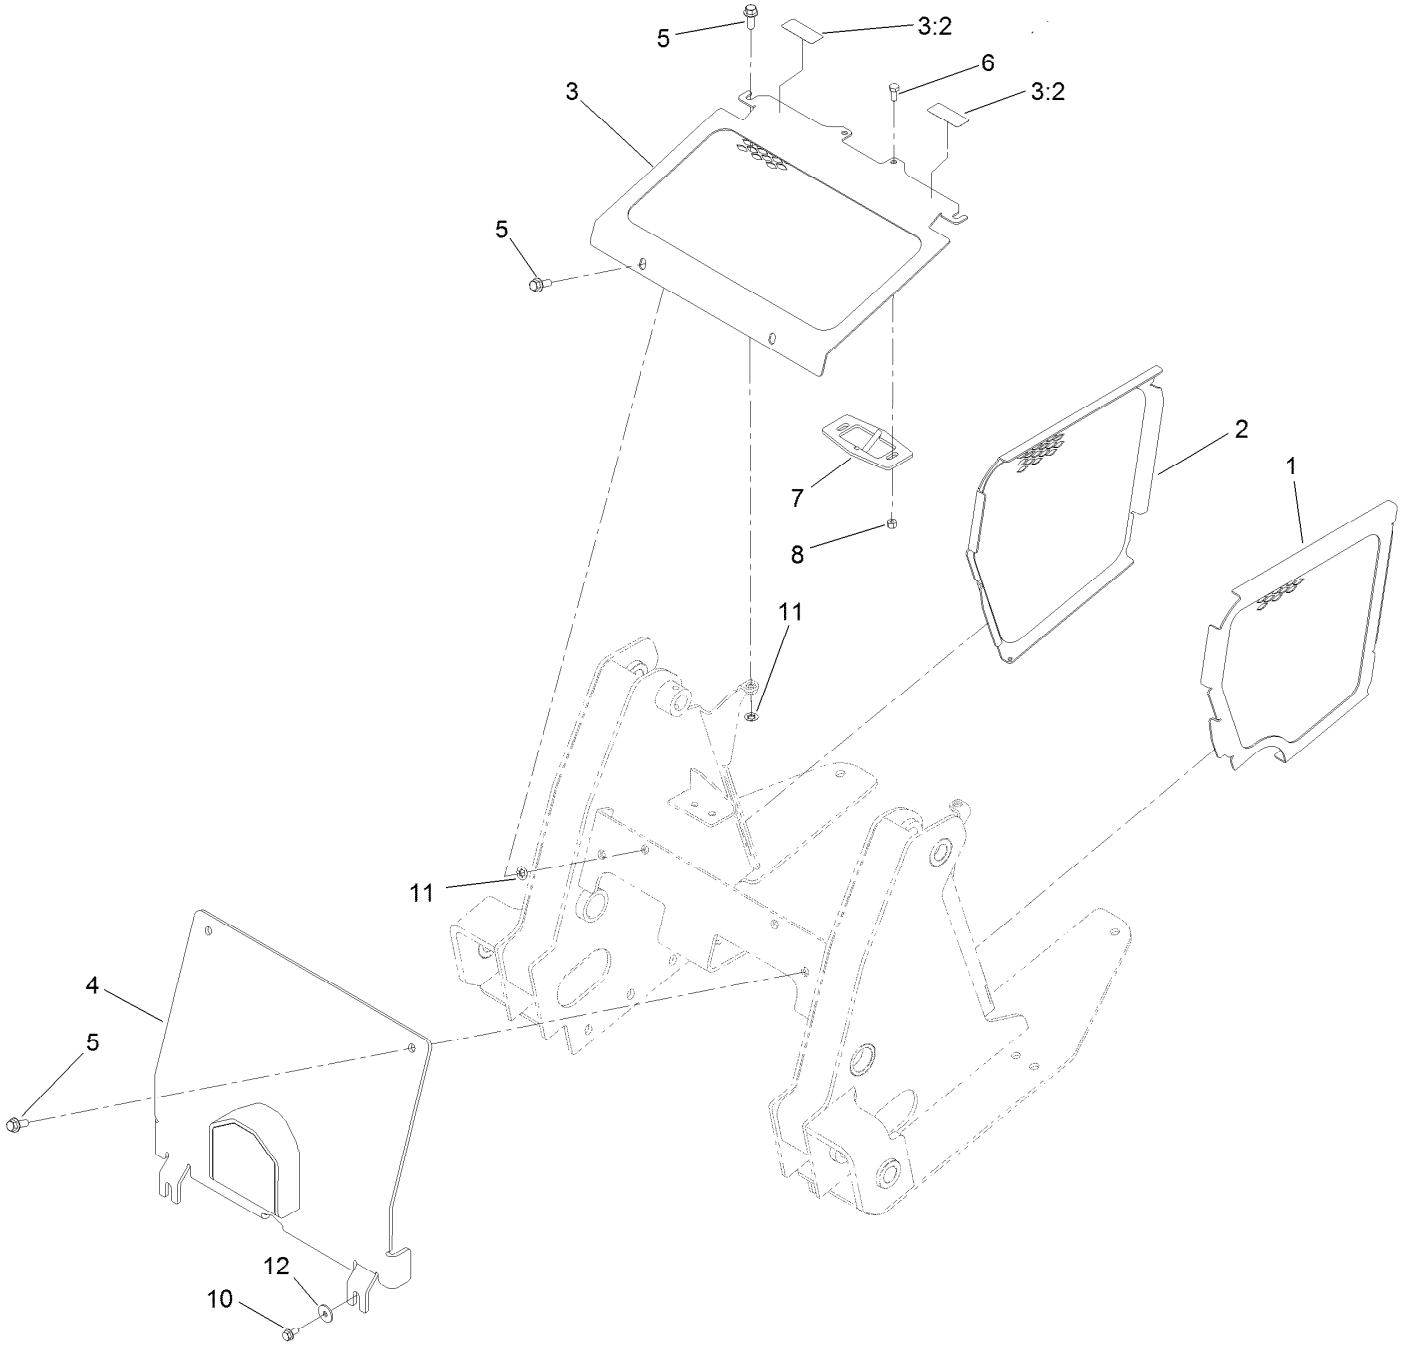

Front Cover and Side Panel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-1734-03	1	Panel-Side, LH
2	132-1733-03	1	Panel-Side, RH
3	136-5752	1	Front Cover ASM
3:2	115-2047	2	Decal-Surface, Hot
4	133-0230-03	1	Cover-Front
5	3234-42	6	Screw-HHF
6	322-3	2	Screw-HH
7	130-5239-03	1	Hood Latch/Rod ASM
8	3296-29	2	Nut-Lock, NI
10	3234-5	2	Screw-HHF
11	107-3154	2	Nut-Push
12	115-7109	2	Washer-Flat


Hood Assembly

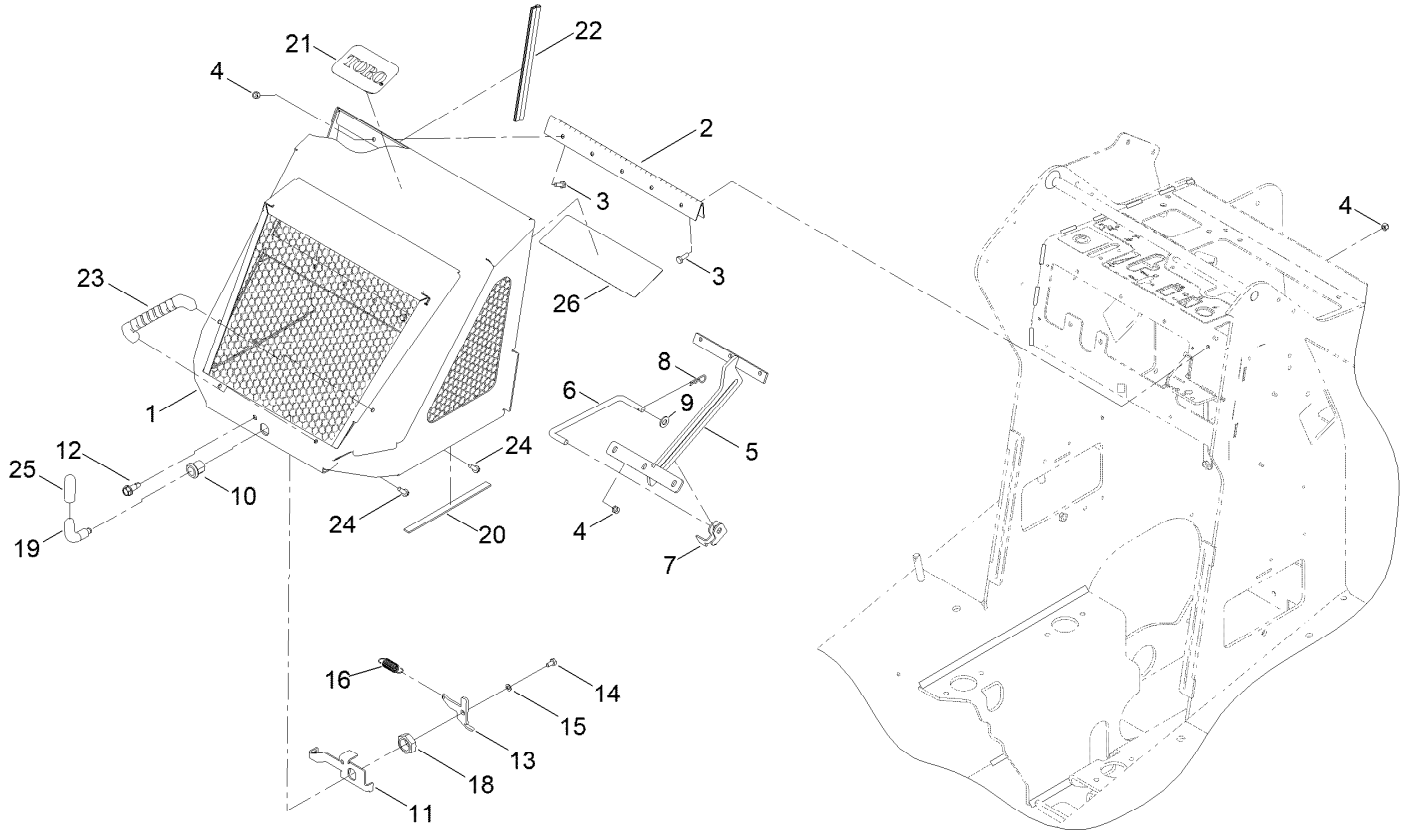

Hood Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-5298-03	1	Engine Hood ASM
2	100-1284	1	Hinge-Hood
3	321-4	12	Screw-HH
4	3296-42	12	Nut-Lock, NI
5	130-5228-03	1	Bracket-Prop, Hood
6	108-6357	1	Rod-Support, Hood
7	115-0714	1	Bracket-Latch, Locking
8	3290-250	1	Pin-Cotter
9	3256-24	1	Washer-Plain
10	106-9335	1	Housing-Latch
11	130-5232-03	1	Bracket-Latch
12	105-6245	1	Screw-Tapping
13	130-5233	1	Cam-Hooked
14	321-2	1	Screw-HH
15	3253-3	1	Washer-Lock
16	104-0869	1	Spring
18	119-7457	1	Nut
19	108-5639	1	Handle-Latch
20	132-7282	2	Strip-Foam
21	117-0871	1	Decal
22	130-5345	1	Trim-Seal, Bulb
23	65-5100	2	Handle-Door
24	46-8091	4	Screw-HWH
25	133-0206	1	Grip-Lever, Hood
26	139-8822	1	Decal-Service Tx1000 De
26	139-8826	1	Decal-Service Tx1000 ES
26	139-8831	1	Decal-Service Tx1000 Fr
26	139-8836	1	Decal-Service Tx1000 It
26	139-8841	1	Decal-Service Tx1000 Ne
26	139-8846	1	Decal-Service Tx1000 Pl
26	139-8851	1	Decal-Service Tx1000 Ru
26	139-8856	1	Decal-Service Tx1000 Sk
26	140-3619	1	Decal, Service Tx1000


Manual Tube Assembly

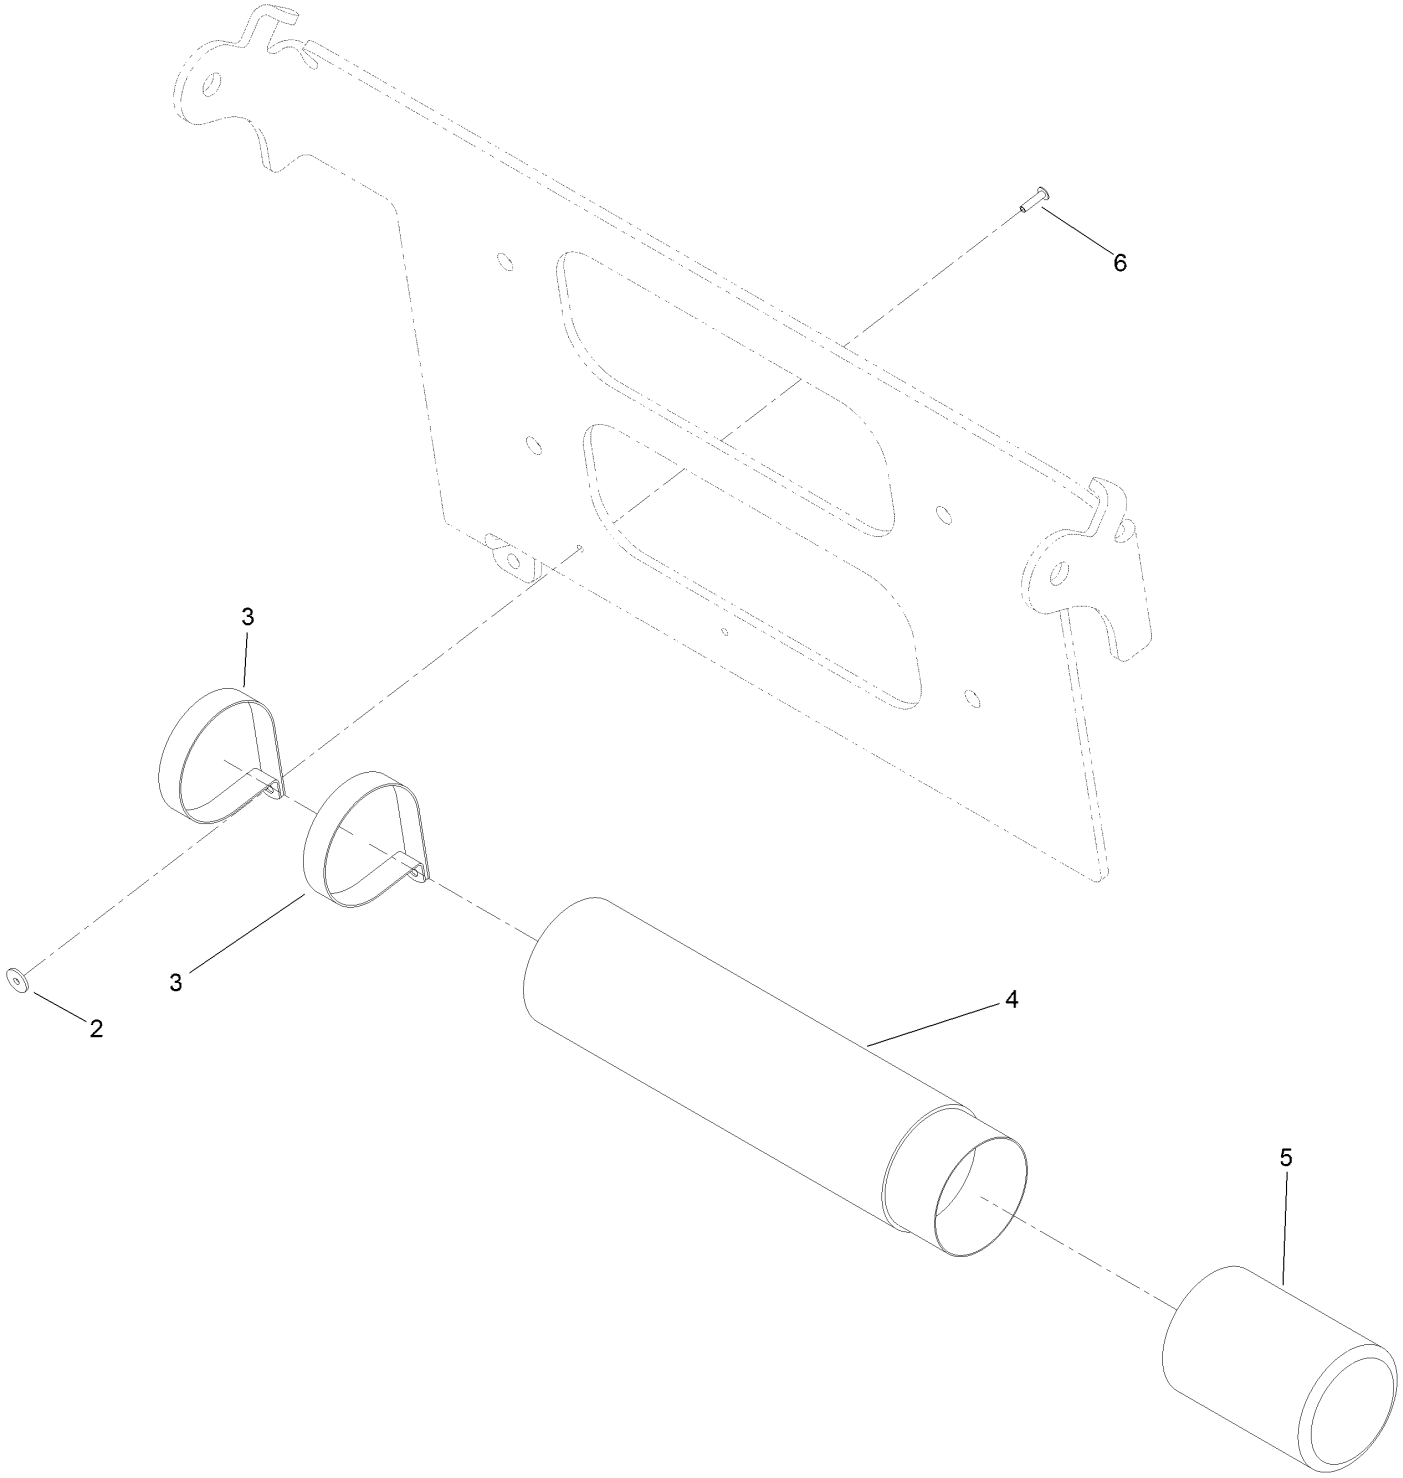

Manual Tube Assembly (continued)

Ref.	Part Number	Qty.	Description
2	3269-10	2	Washer-Back
3	2412-120	2	Clamp-R
4	104-7050	1	Tube-Manual
5	104-7048	1	Cap-Housing
6	3269-17	2	Rivet-Pop


Platform Assembly

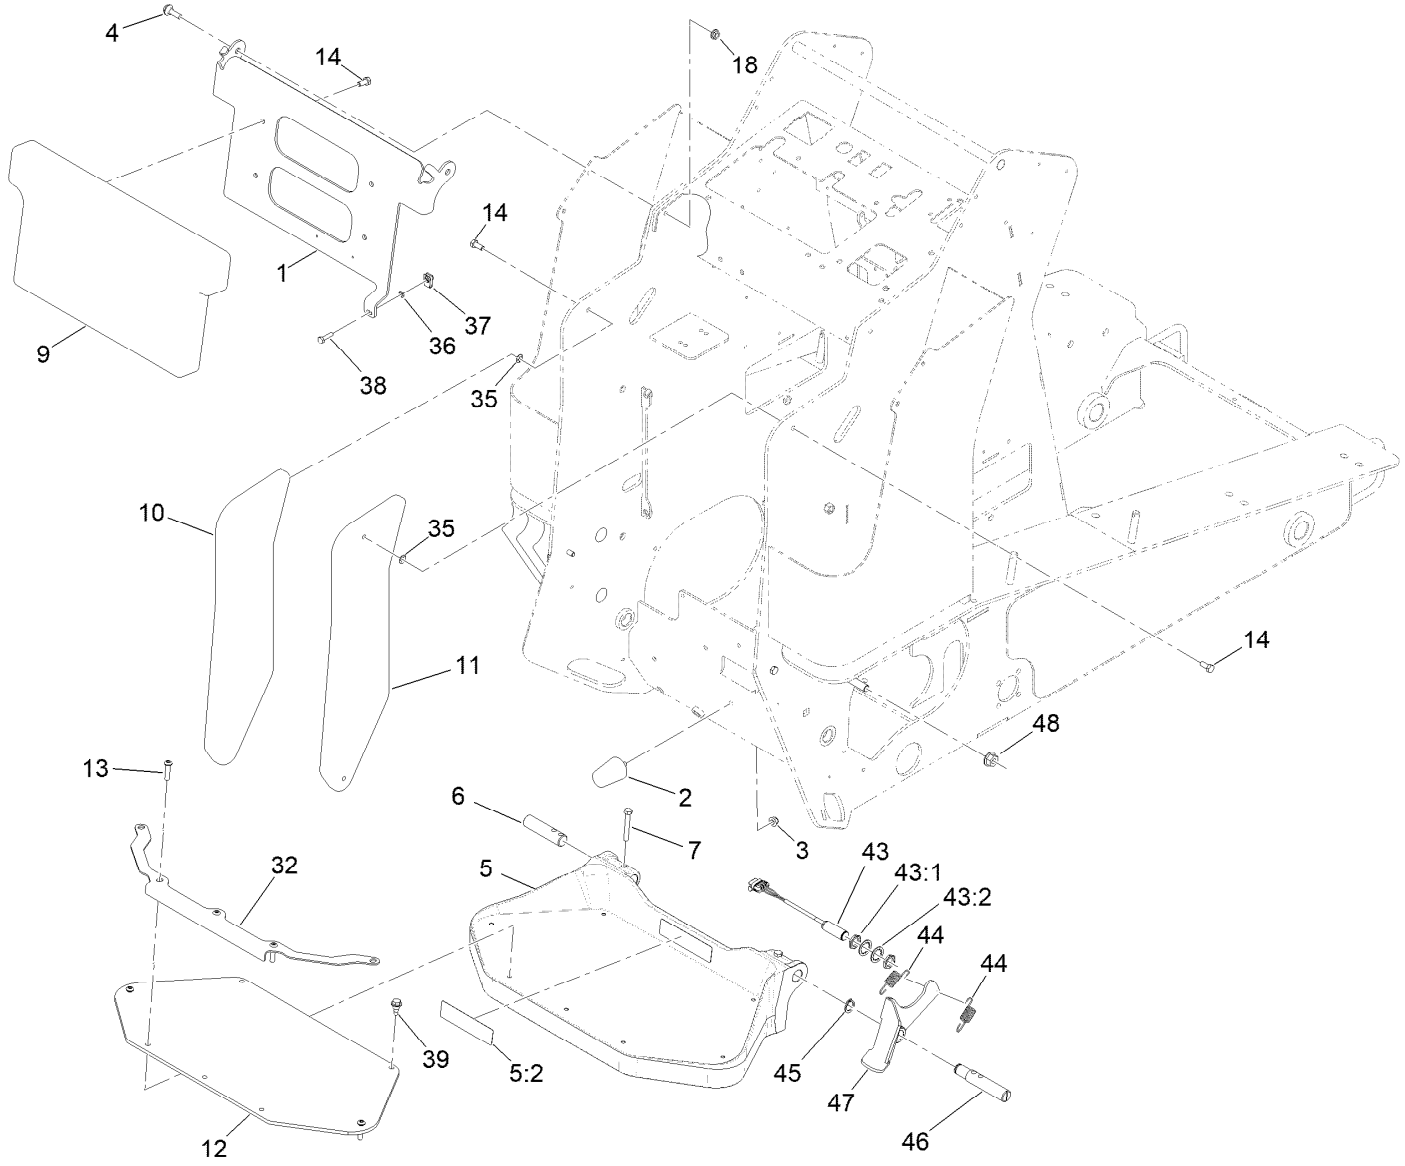

Platform Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-6026-03	1	Hinge-Pad
2	110-5070	3	Bumper
3	104-8300	3	Nut-HF, NI
4	108-3744	2	Screw-Shoulder
5	145-3785	1	Platform
5:2	131-0709	1	Decal-Parking Brake
6	125-3749	1	Pin-Cylinder
7	322-11	2	Screw-HH
9	130-1042	1	Cushion-Pad
10	130-1043	1	Cushion-Pad
11	130-1044	1	Cushion-Pad
12	144-7382	1	Pad-Foot
13	3290-511	5	Screw-HSBH
14	322-3	8	Screw-HH
18	32128-20	2	Nut-HF
32	144-7371-03	1	Plate - Clamp
35	117-2749	2	Nut-Push
36	1-803037	1	Nut-Retaining
37	107069	1	Clip
38	321-6	1	Screw-HH
39	99-5105	2	Screw-Shoulder
43	115-5300	1	Proximity Switch ASM
43:1	117-3207	2	Nut-Hex
43:2	117-3208	2	Washer-Lock, Internal Tooth
44	137-6189	2	Spring-Extension
45	32120-93	1	Ring-Retaining
46	144-0754	1	Pin-Platform
47	145-3759-03	1	Pedal ASM [black]
48	32128-49	2	Nut-HHF

Electrical Assembly

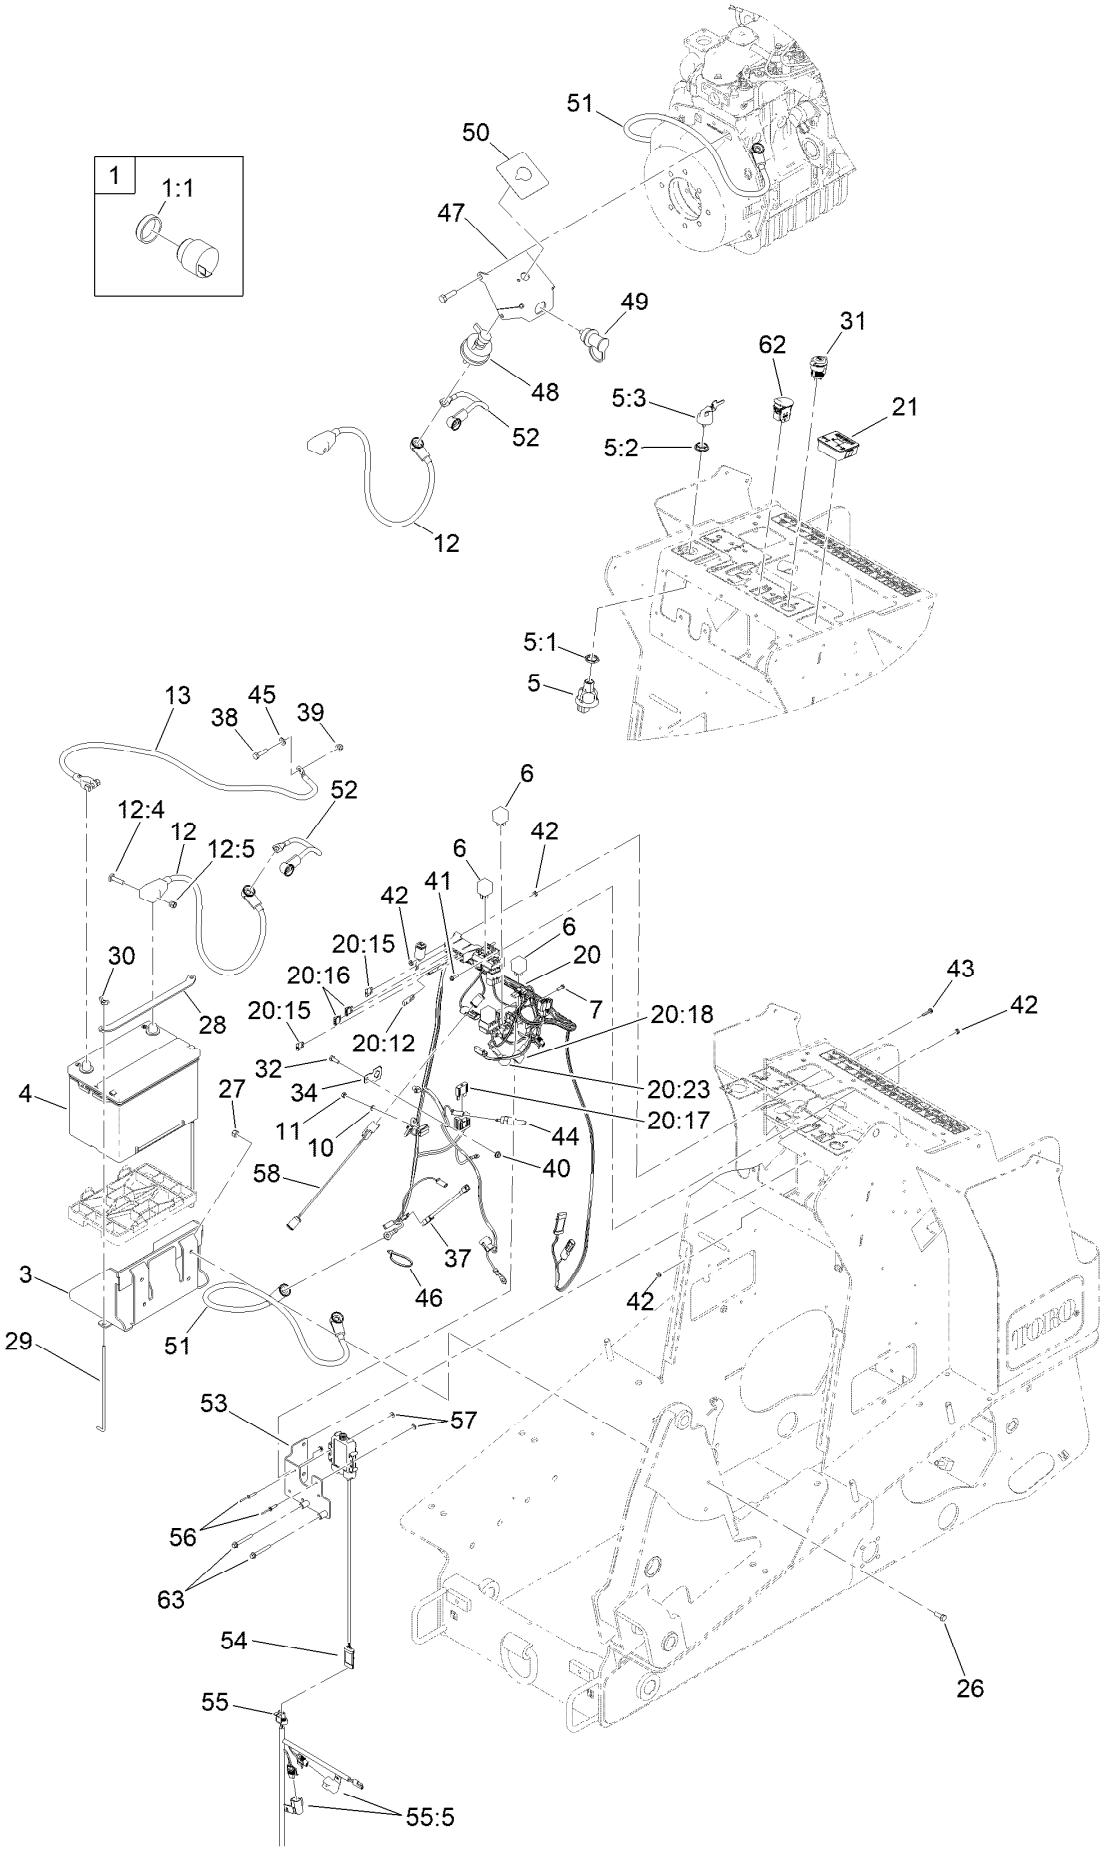

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	80-9330	1	Audio Alarm ASM
1:1	104-5107	1	Nut-Plastic, Knurled
3	130-5236-03	1	Tray-Battery
4	106-5190	1	Battery, 660 CCA W/O Electrolyte
5	121-5159	1	Switch-Ignition
5:1	121-5160	1	Nut-Hex
5:2	122-2704	1	Nut-Face, M22 (Plastic)
5:3	121-5162	1	Set-Key, Ignition
6	1-643275	6	Relay
7	3290-134	2	Screw
10	43-5930	1	Washer-Lock, Spring
11	43-2830	1	Nut-Hex
12	139-6366	1	Cable-Battery, Pos ASM
12:4	32180-109	1	Bolt-Battery Clamp, 5/16-18 Unc
12:5	32180-108	1	Nut-Hex Shoulder
13	104-0761	1	Cable-Negative
20	122-2374	1	Harness-Wire, Main
20:12	103-3895	1	Diode
20:15	218-578	2	Fuse-Blade, 10 Amp
20:16	109355	2	Fuse-Blade, 15 Amp
20:17	94-8002	1	Fuse-Blade, 50 Amp
20:18	116-0053	1	Cap-Plug
20:23	100-4918	1	Diode
21	130-7635	1	Module-Hour Meter
26	322-4	4	Screw-HH
27	3296-29	4	Nut-Lock, NI
28	136-5755-03	1	Strap-Hold Down, Battery
29	136-5756	2	Rod-Hold Down, Battery
30	1-803038	2	Wingnut
31	109-9376	1	Receptacle-12V
32	321-4	1	Screw-HH
34	114-5502	1	Clip-Fuse
37	112-2463	1	Harness-Link, Fusible
38	322-6	1	Screw-HH
39	104-8300	1	Nut-HF, NI
40	32128-33	1	Nut-HF
41	32105-13	3	Screw-HWH
42	32149-7	9	Nut-Keps
43	117-1701	2	Screw-HWHTF
44	98-3825	1	Switch-Temp
45	3256-23	1	Washer-Plain
46	3290-378	1	Tie-Cable
47	131-8009-03	1	Mount-Remote Terminal
48	AUR52278	1	Switch-Disconnect, Master
49	132-1364	1	Stud-Jumper, Positive
50	131-8026	1	Decal-Battery Disconnect
51	131-8032	1	Cable-Battery, Positive
52	122-0103	1	Cable-Battery, Positive
53	140-5895-0P	1	Bracket
54	131-0560	1	GPS ASM
55	131-0567	1	Harness-Wire, GPS
55:4	121-8864	2	Fuse-Mini Blade, 5 Amp ●
55:5	32180-101	2	Cover-Fuse, Single
56	3269-28	2	Rivet-Pop
57	3269-26	2	Washer-Plain
58	136-5813	1	Harness-Wire
62	122-2542	1	Switch-Rocker, On-None-(On)
63	3234-34	2	Screw-HHF

● Not illustrated

Attachments and Accessories

For 22328HD — TX 1000 Wide Track Compact Tool Carrier

Product Name	Model/Part
Light Kit ASM	144-7100
Kit Road Wheel, 5-pack	144-7392
Kit Road Wheel, 5-pack	144-7393
Standard Bucket	22340
Adjustable Forks	22341
High Volume Bucket	22342
Loose Materials Bucket	22410
48in Hydraulic Blade	22414
Bore Drive Head	22420
Rod and Reamer	22421
Multi-Purpose Tool	22423
Direct Drive Power Box Rake	22426
Stump Grinder	22429
Tree Forks	22438
Cement Bowl	22442
40in Tiller	22445
Crumber Kit	22464
Trench Filler	22472
High-Torque Trencher Head	22473
High-Speed Trencher Head	22474
4-in-1 Bucket	22478
Narrow Bucket	22520
Standard Bucket with Spacer	22522
Grapple Rake	22577
Dingo Snow Canopy	22584
Snow Thrower	22585
Auger Head	22805
Universal Swivel Auger Head	22806
18in Auger Bit	22814
24in Auger Bit	22815
30in Auger Bit	22816
12in Auger Bit Extension	22818
24in Auger Bit Extension	22819
6in Full-Flight Auger Bit	22820
9in Full-Flight Auger Bit	22821
12in Full-Flight Auger Bit	22822
15in Full-Flight Auger Bit	22823
Vibratory Plow	22911
Soil Cultivator	23102
Backhoe With 12in Bucket	23106
Backhoe Fit-Up Kit	23126
Low Flow Auxiliary Kit	23134
Concrete Breaker	23135
Leveler	23165
Double Detent Valve	23171
Stump Grinder Fit-Up Kit	23172

Attachments and Accessories (continued)

New Red Paint - Gallon 361-11
Dark Metallic Gray Aerosol Paint 361-12
Semi-Gloss Black Spray Paint 361-9
Air Dry Red Paint - Qt 5340
Spark Arrestor 98-9099

Notes:

Notes:



Count on it.