Form No. 3478-153 Rev A

TORO®

Count on it.

Parts Catalog

Z Master® Professional 6000 Series Riding Mower

with 72in TURBO FORCE® Side Discharge Mower

Model No. 72983—Serial No. 420000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3478-153 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame Assembly 4
Roll-Over Protection System Assembly No. 109-9211 6
Caster Fork and Wheel Assembly 8
Hydraulic Drive Assembly 10
Pump Idler Assembly No. 116-1255 12
LH Hydro Assembly No. 135-7907 14
RH Hydro Assembly No. 135-7908 16
Rear Wheel Assembly 18
Park Brake Assembly 20
Fuel Tank Assembly 22
Fuel Tank Assembly No. 135-0643 24
Seat Mounting Assembly 26
Seat Assembly No. 147-4984 28
Motion Control Assembly 30
Console Assembly 32
RH Console Assembly No. 115-7400 34
LH Console Assembly No. 115-7401 36
Electrical Assembly 38
Main Harness Assembly No. 146-2456 40
Deck Lift Assembly 42
Height-of-Cut Assembly No. 109-7438 44
Engine, Clutch and Muffler Assembly 46
Deck Assembly 48
Deck Decal Assembly No. 140-1170 50
Rubber Deflector Assembly No. 108-2792 52
Idler Arm Assembly 54
Frame Decal Assembly 56
Attachments and Accessories 58

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame Assembly

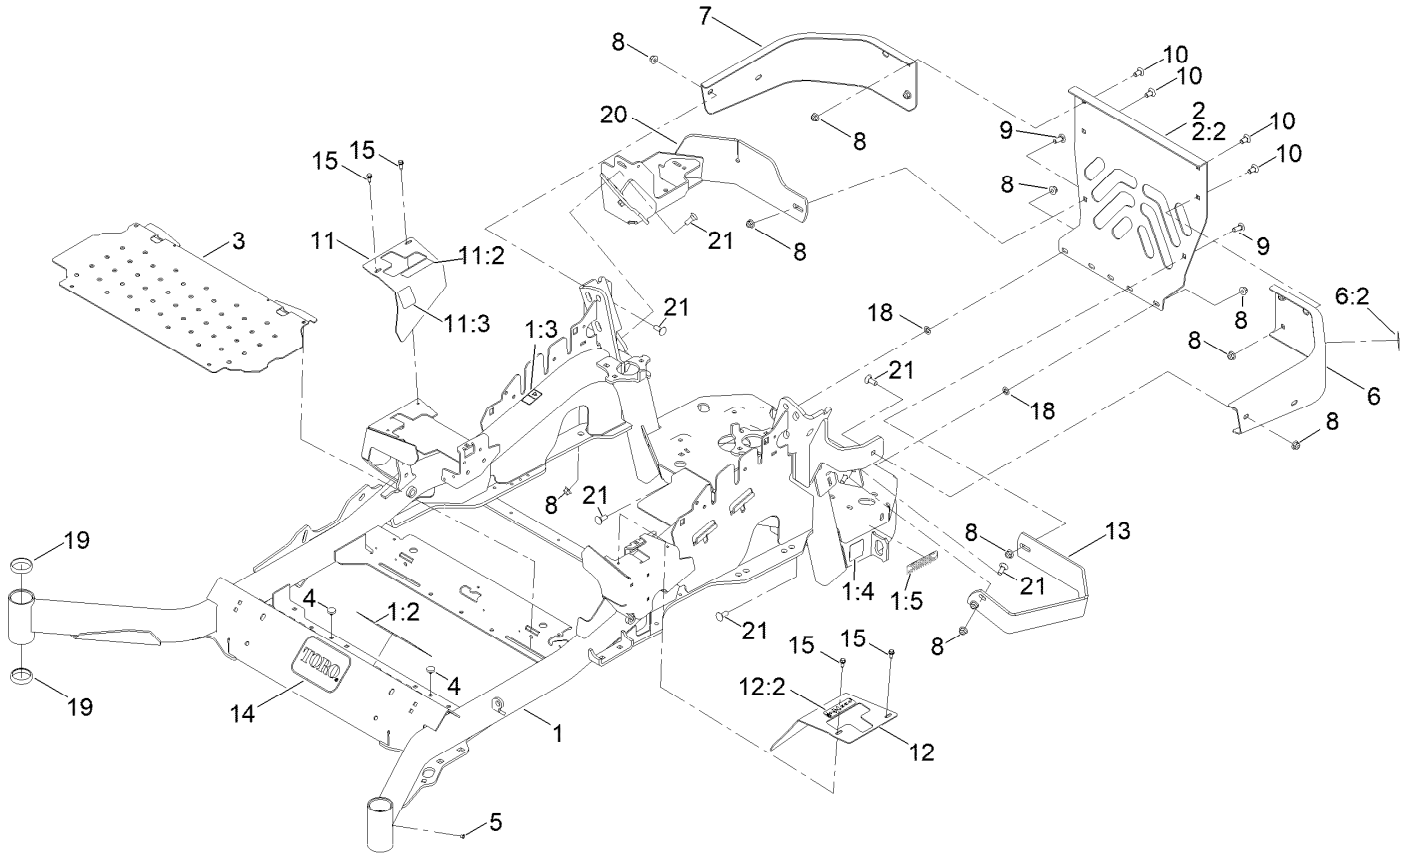

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	142-7266	1	Mainframe Service ASM - 72
1:2	106-5517	2	Decal-Warning
1:3	132-0871	1	Decal-Danger
1:4	106-2655	2	Decal-Hazard, Pinched Finger
1:5	133-8062	1	Decal-Spark Arrestor
2	115-7410	1	Rear Guard ASM
2:2	67-7320	1	Decal
3	116-8898-01	1	Floorpan
4	1-513658	2	Bumper
5	1-811010	2	Plug
6	116-0180	1	LH Bumper ASM
6:2	106-5517	1	Decal-Warning
7	116-0057-03	1	Bumper-RH
8	119-4042	14	Nut-HF, NI
9	3231-22	2	Screw-CARR
10	3231-21	4	Screw-CARR
11	116-5899	1	RH Motion Control Cover ASM
11:2	99-8936	1	Decal-Control, Motion
11:3	116-5988	1	Decal-Park Brake, CE
12	116-0580	1	LH Motion Control Cover ASM
12:2	99-8936	1	Decal-Control, Motion
13	126-2067-03	1	Guard-Muffler
14	68-3640	1	Decal
15	32144-10	4	Screw-HWH
18	107-3154	2	Nut-Push
19	1-543508	4	Cup-Bearing
20	146-6764-03	1	Battery Guard ASM [black]
21	3231-2	8	Bolt-CARR

Roll-Over Protection System Assembly
No. 109-9211

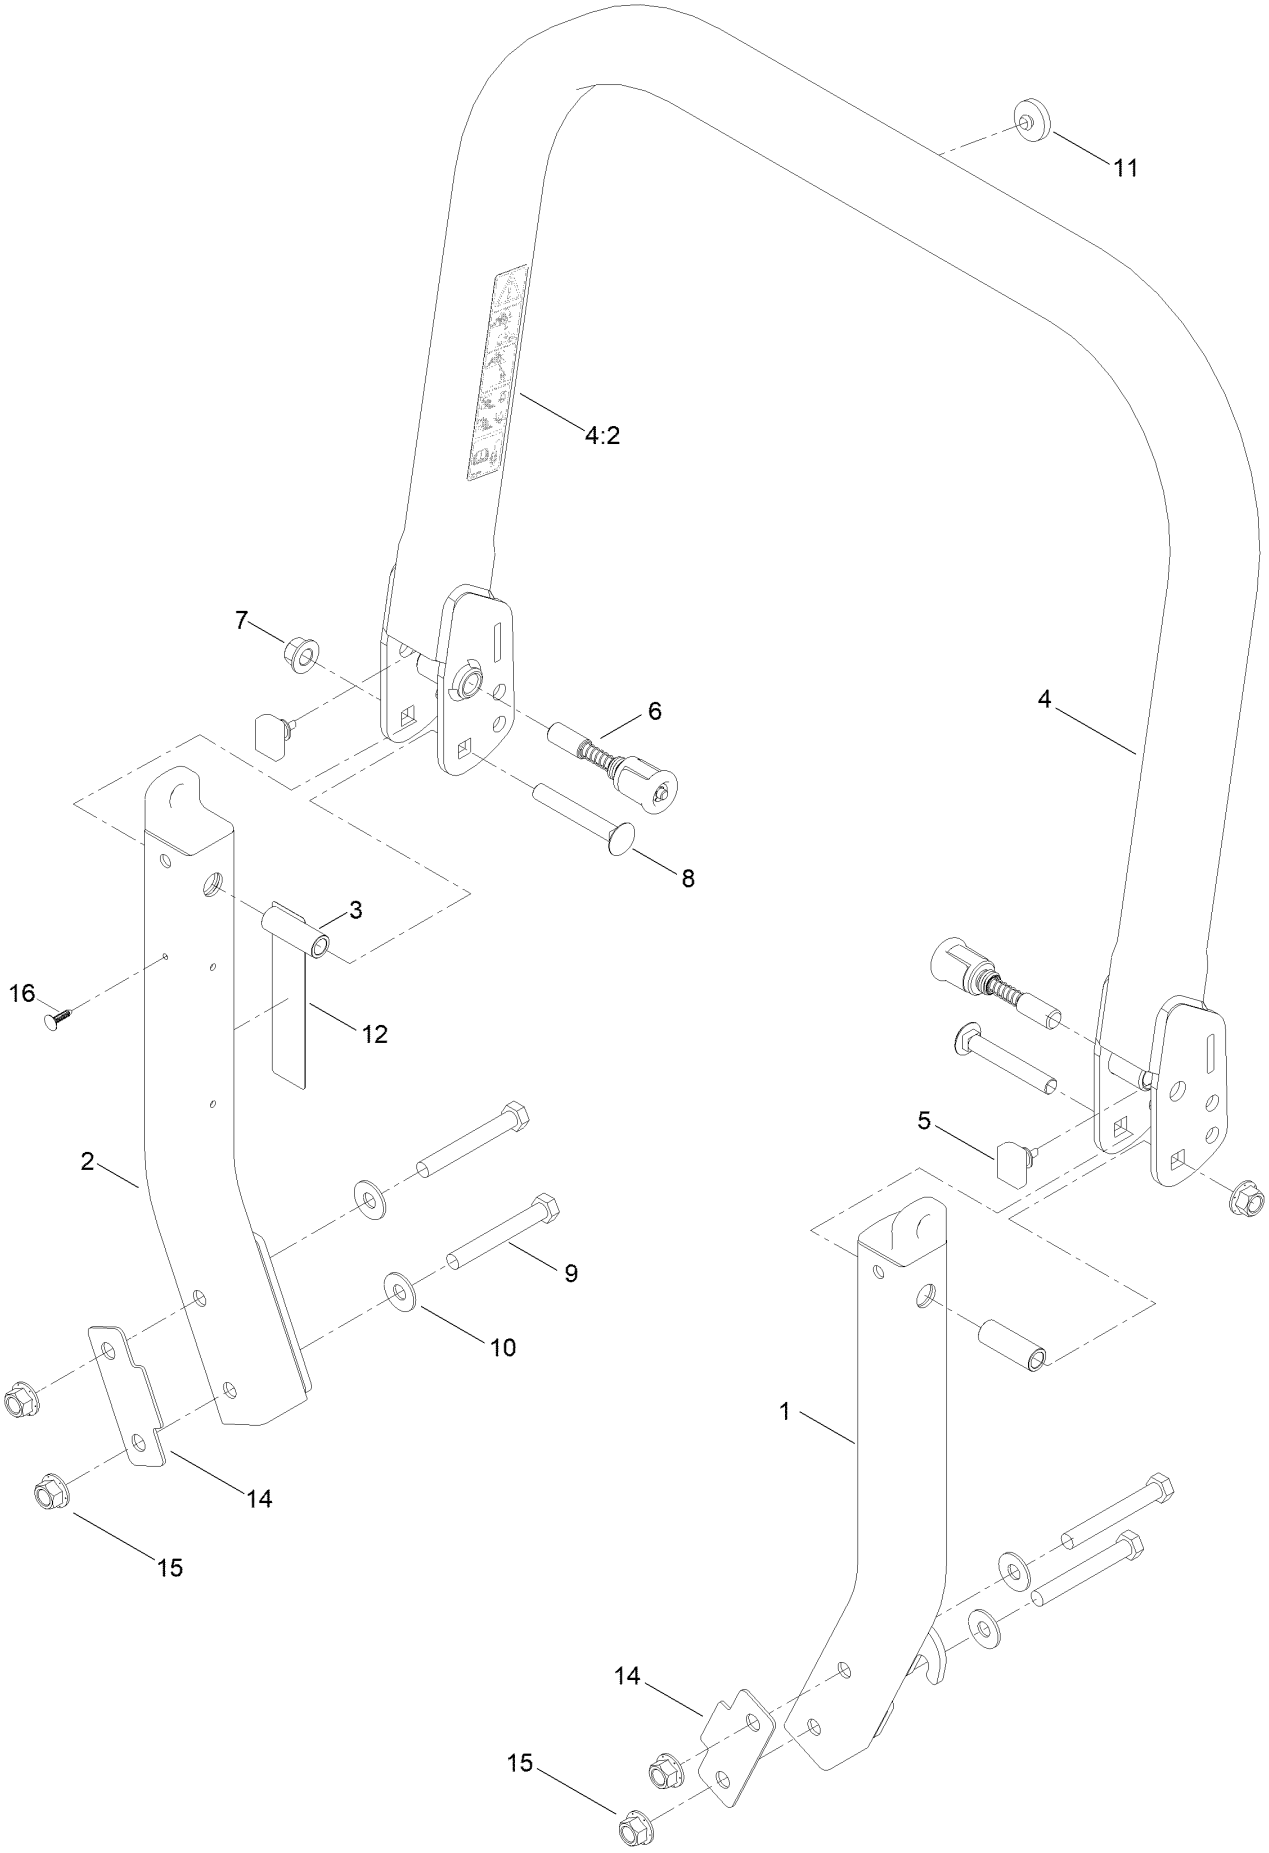


Roll-Over Protection System Assembly No. 109-9211 (continued)

Ref.	Part Number	Qty.	Description
1		1	Leg-ROPS, LH ●
2		1	Leg-ROPS, RH ●
3	109-6653	2	Spacer
4		1	Upper ROPS ASM ●
4:2	107-3069	1	Decal-Warning
5	109-5337	2	Bumper-ROPS
6	116-0104	2	Pin-Spring
7	139-1689	8	Nut-HF
8	3233-10	2	Screw-CARR
9	325-35	4	Screw-HH
10	109-9505	4	Washer-Spring
11	109-9233	1	Bumper-Push-In, Rubber
12	117-0346	1	Decal-Caution, Fuel Vent
14	116-0960	2	Spacer
15	325-13	2	Screw-HH
16	125-8067	1	Plug-Plastic

● Not serviced separately

Caster Fork and Wheel Assembly

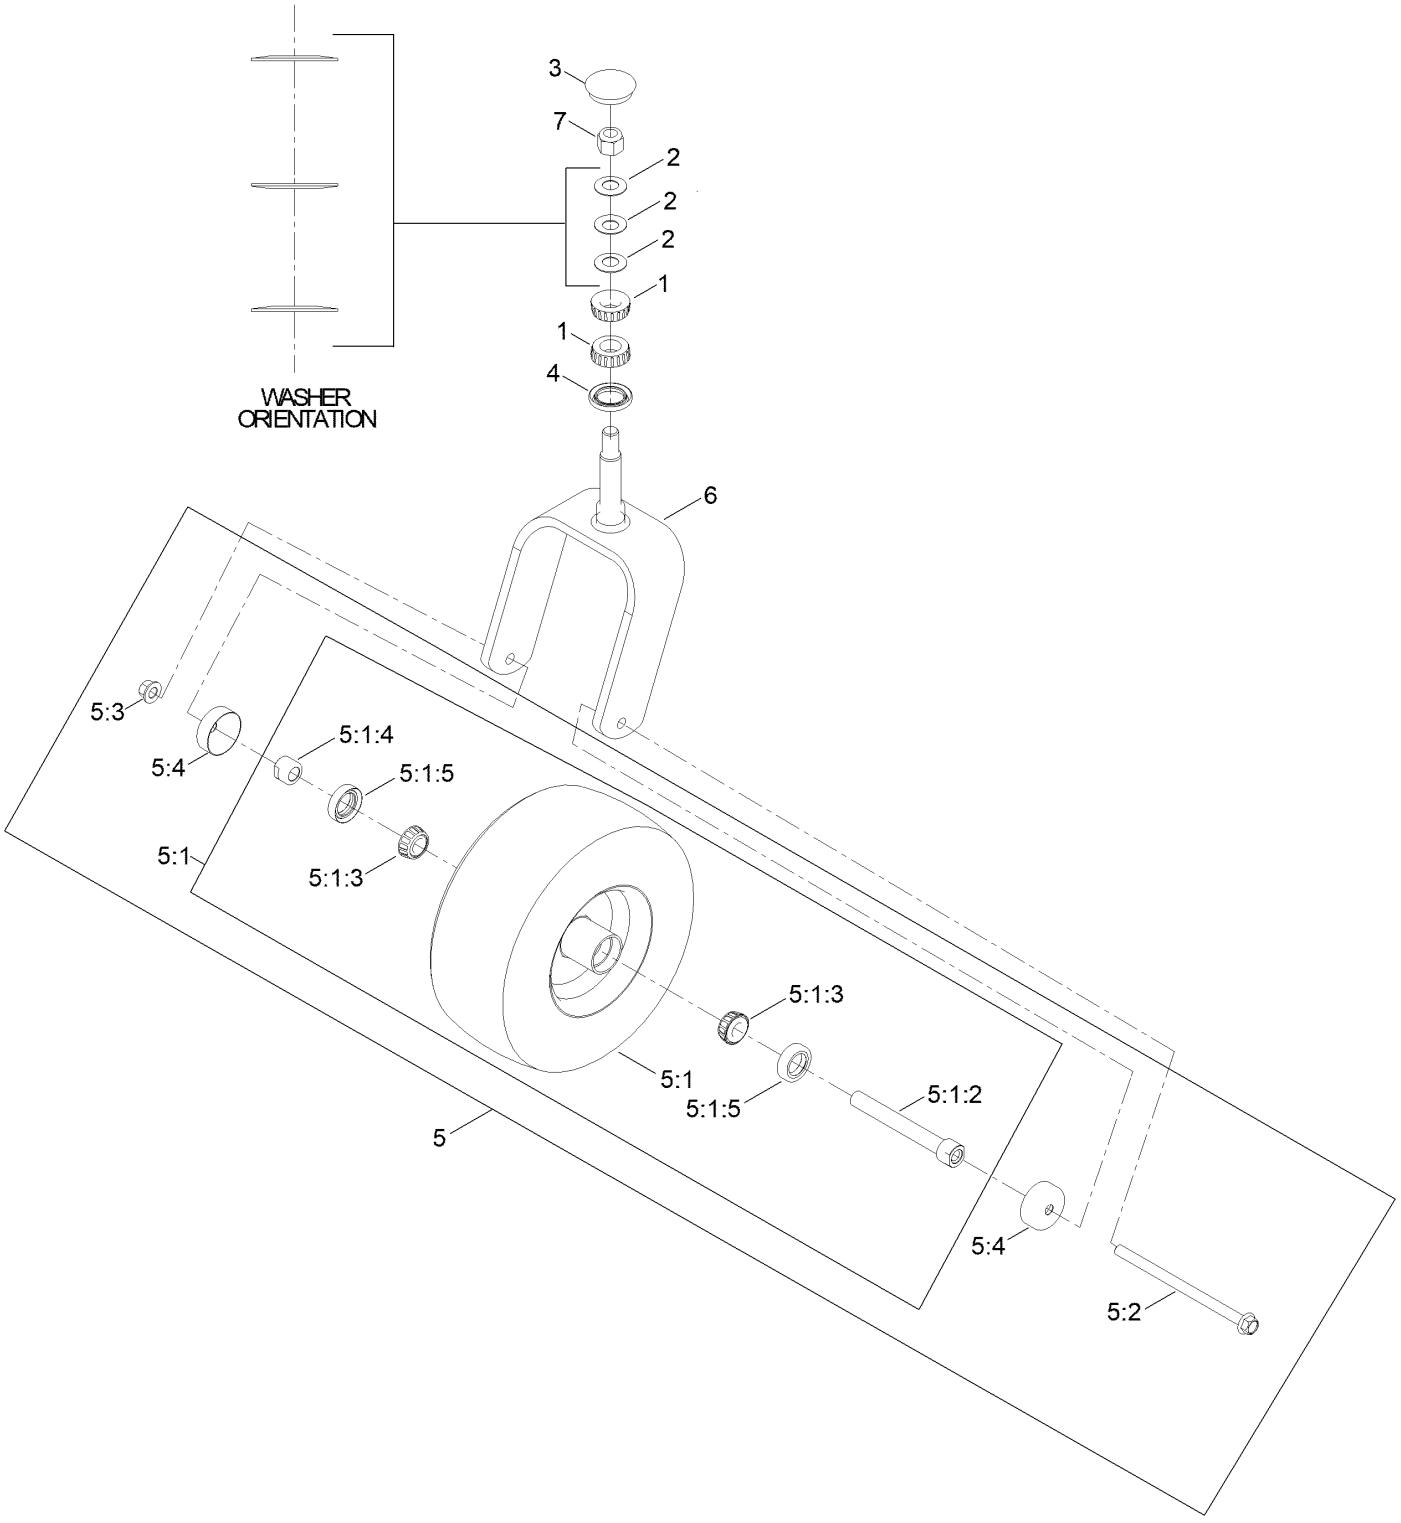


Caster Fork and Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-543509	2	Bearing-Roller, Tapered
2	1-633508	3	Washer-Bellville
3	103-4882	1	Cap-Grease
4	116-5647	1	Seal-Grease
5	146-7967	1	Semi Pneumatic ASM 13X6.50-6
5:1		1	Wheel And Bearings ASM ●
5:1:2	126-7796	1	Caster Axle ASM
5:1:3	1-633585	2	Bearing-Cone, Taper
5:1:4	103-3051	1	Spacer-Nut
5:1:5	103-0063	2	Seal-Caster
5:2	147-2939	1	Screw-HHF
5:3	139-1689	1	Nut-HF
5:4	103-2768	2	Guard-Seal
6	146-2794-01	1	Weld, Caster Fork
7	3296-51	1	Nut-Lock, NI

● Not serviced separately

Hydraulic Drive Assembly

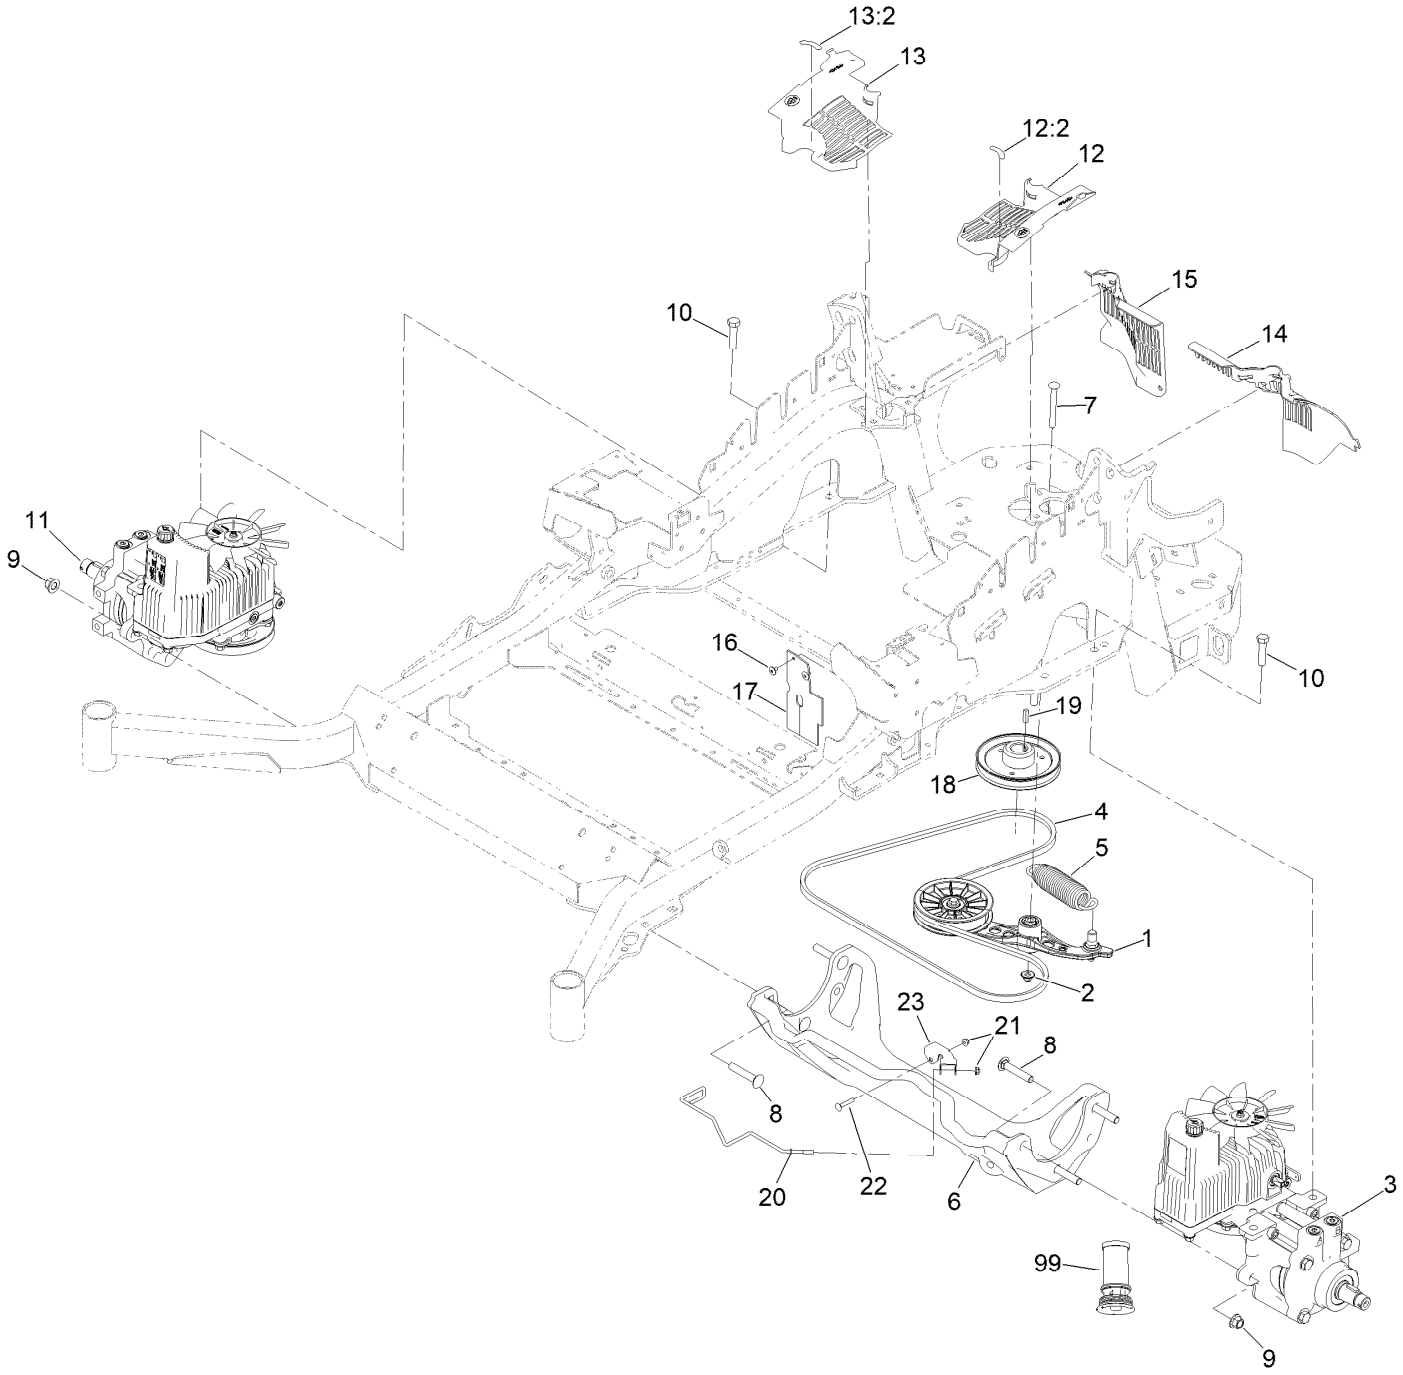


Hydraulic Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-1255	1	Pump Idler ASM
2	109-6658	1	Nut-Flange, NI
3	135-7907	1	Hydro-LH
4	126-9835	1	Belt-V
5	116-6317	1	Spring-Extension
6	116-7558	1	Cradle-Hydro
7	116-1502	1	Bolt-Shoulder, Carriage
8	126-0095	6	Screw-CARR
9	139-1689	6	Nut-HF
10	325-8	4	Screw-HH
11	135-7908	1	Hydro-RH
12	116-0170	1	LH Hydro Guard ASM
12:2	116-8726	1	Decal-Oil, Hydro
13	116-0171	1	RH Hydro Guard ASM
13:2	116-8726	1	Decal-Oil, Hydro
14	142-6499	1	Guard-Hydro, Rear LH
15	109-9058	1	Guard-Hydro, Rear (RH)
16	1-803035	2	Rivet-Pop
17	116-2362	1	Deflector-Air Flow
18	142-9445	1	Sheave, W/Hub
19	1-807259	1	Key
20	146-5103	1	Guide-Belt
21	104-7201	2	Nut-HF, NI
22	3229-4	1	Screw-CARR
23	146-5102	1	Bracket-U
99	114-4713	1	Hypr-Oil 500 (Quart) ●
99	114-4714	1	Hypr-Oil 500 (Gallon) ●
99	114-4715	1	Hypr-Oil 500-5 (5 Gallon) ●
99	117-0390	1	Filter-Hydro

● Not illustrated


Pump Idler Assembly No. 116-1255

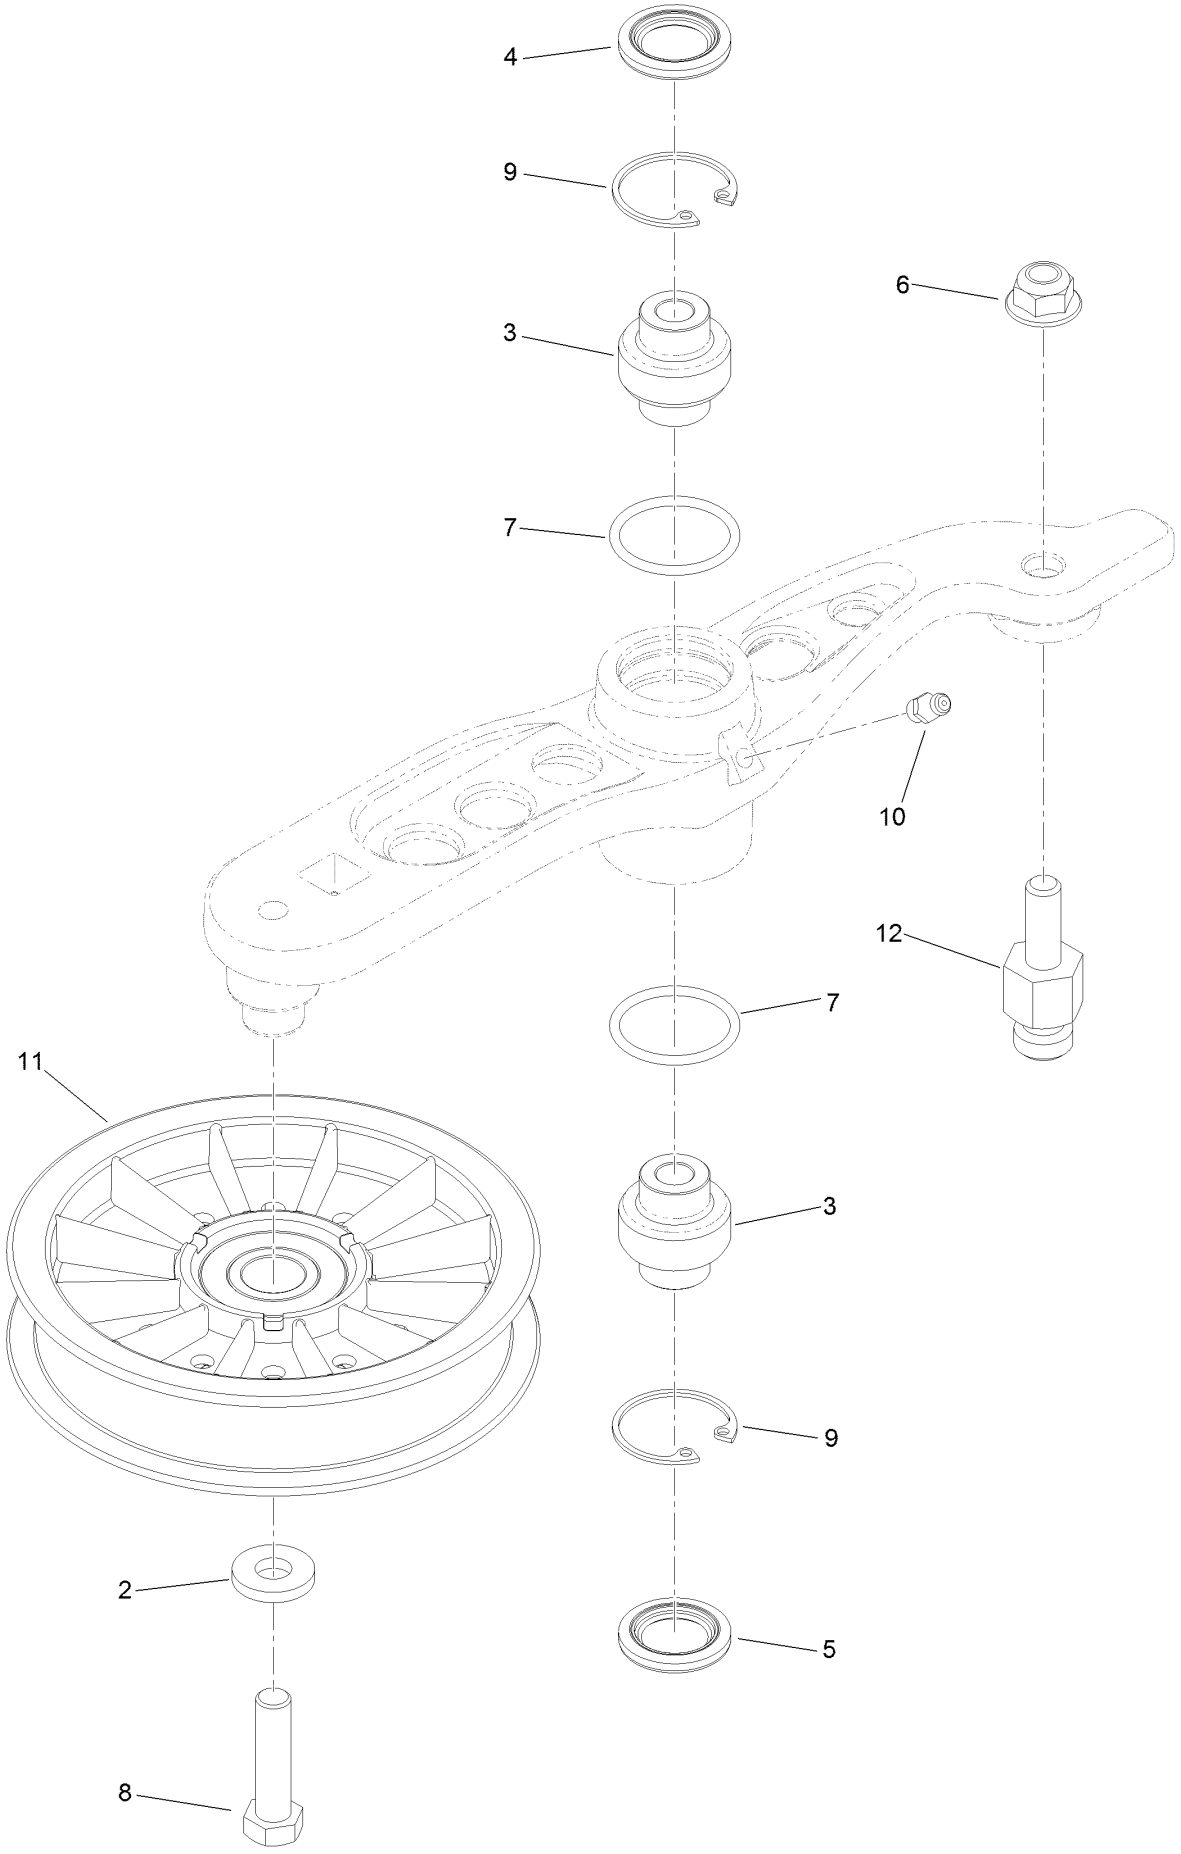

Pump Idler Assembly No. 116-1255 (continued)

Ref.	Part Number	Qty.	Description
2	43-0940	1	Spacer
3	103-3504	2	Bearing-Spherical
4	103-3505	1	Seal-Lip, Double
5	103-3506	1	Seal-Lip, Single
6	109-6658	1	Nut-Flange, NI
7	106-7159	2	O-Ring
8	323-8	1	Screw-HH
9	32120-10	2	Ring-Snap
10	302-19	1	Fitting-Grease
11	109-8076	1	Pulley-Idler
12	132-4724	1	Pin-Anchor, Spring

LH Hydro Assembly No. 135-7907

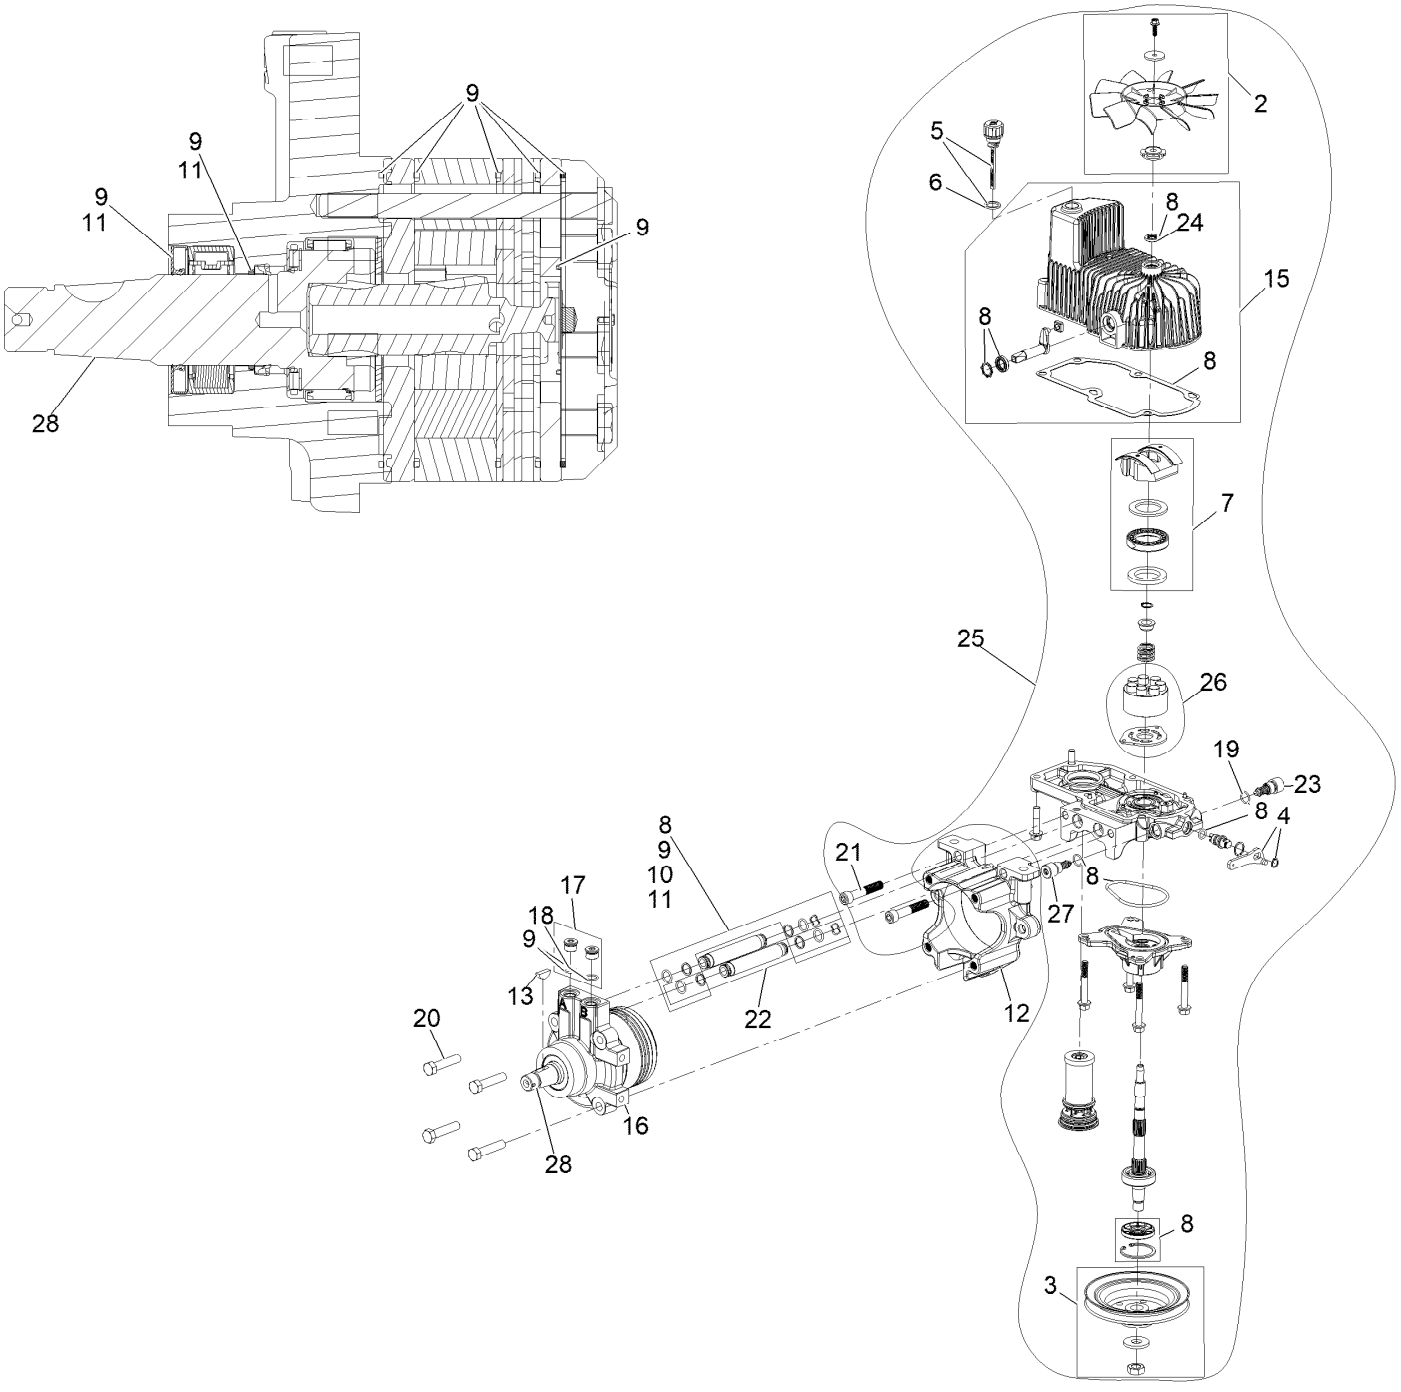


LH Hydro Assembly No. 135-7907 (continued)

Ref.	Part Number	Qty.	Description
2	142-3603	1	Kit, 7.8 In Fan
3	116-0234	1	Pulley Kit
4	116-0235	1	Handle
5	116-0236	1	Dipstick
6	116-0237	1	Gasket
7	116-1367	1	Swash Block Kit
8	142-3604	1	Kit, Pump Seal
9	116-1369	1	Motor Seal Kit
10	116-1370	1	Tube Seal Kit
11	116-1371	1	Output Shaft Seal Kit
12	116-5469	1	Cup-Nose
13	3257-42	1	Key-Woodruff 5/16 X 1
15	142-4460	1	Kit, Housing-Hydro LH
16	146-1948	1	HYD Motor,280Cc LH Sealed
17	116-7901	1	Magnetic Plugs Service Kit
18	76-1900	2	O-Ring
19	116-8662	2	O-Ring-Valve, Check
20	116-8974	4	Screw-HH 1/2-20 X 2 1/4
21	116-8975	2	Screw-HSH 1/2-20 X 2 3/4
22	116-9922	2	Hydraulic Tube Kit
23	126-7467	1	Shock Valve, 16Cc Hydro
24	126-7711	1	Seal-Drive, Fan
25	142-3607	1	Kit, Pump Section 16Cc LH
26	142-4501	1	Kit - 16Cc Port Plate,Rotate Grp
27	142-4458	1	Shock Valve Orificed 3300
28	146-3749	1	Output Shaft- Tl Uht Motor
99	116-1373	1	Flow Test Kit ●

● Not illustrated

RH Hydro Assembly No. 135-7908

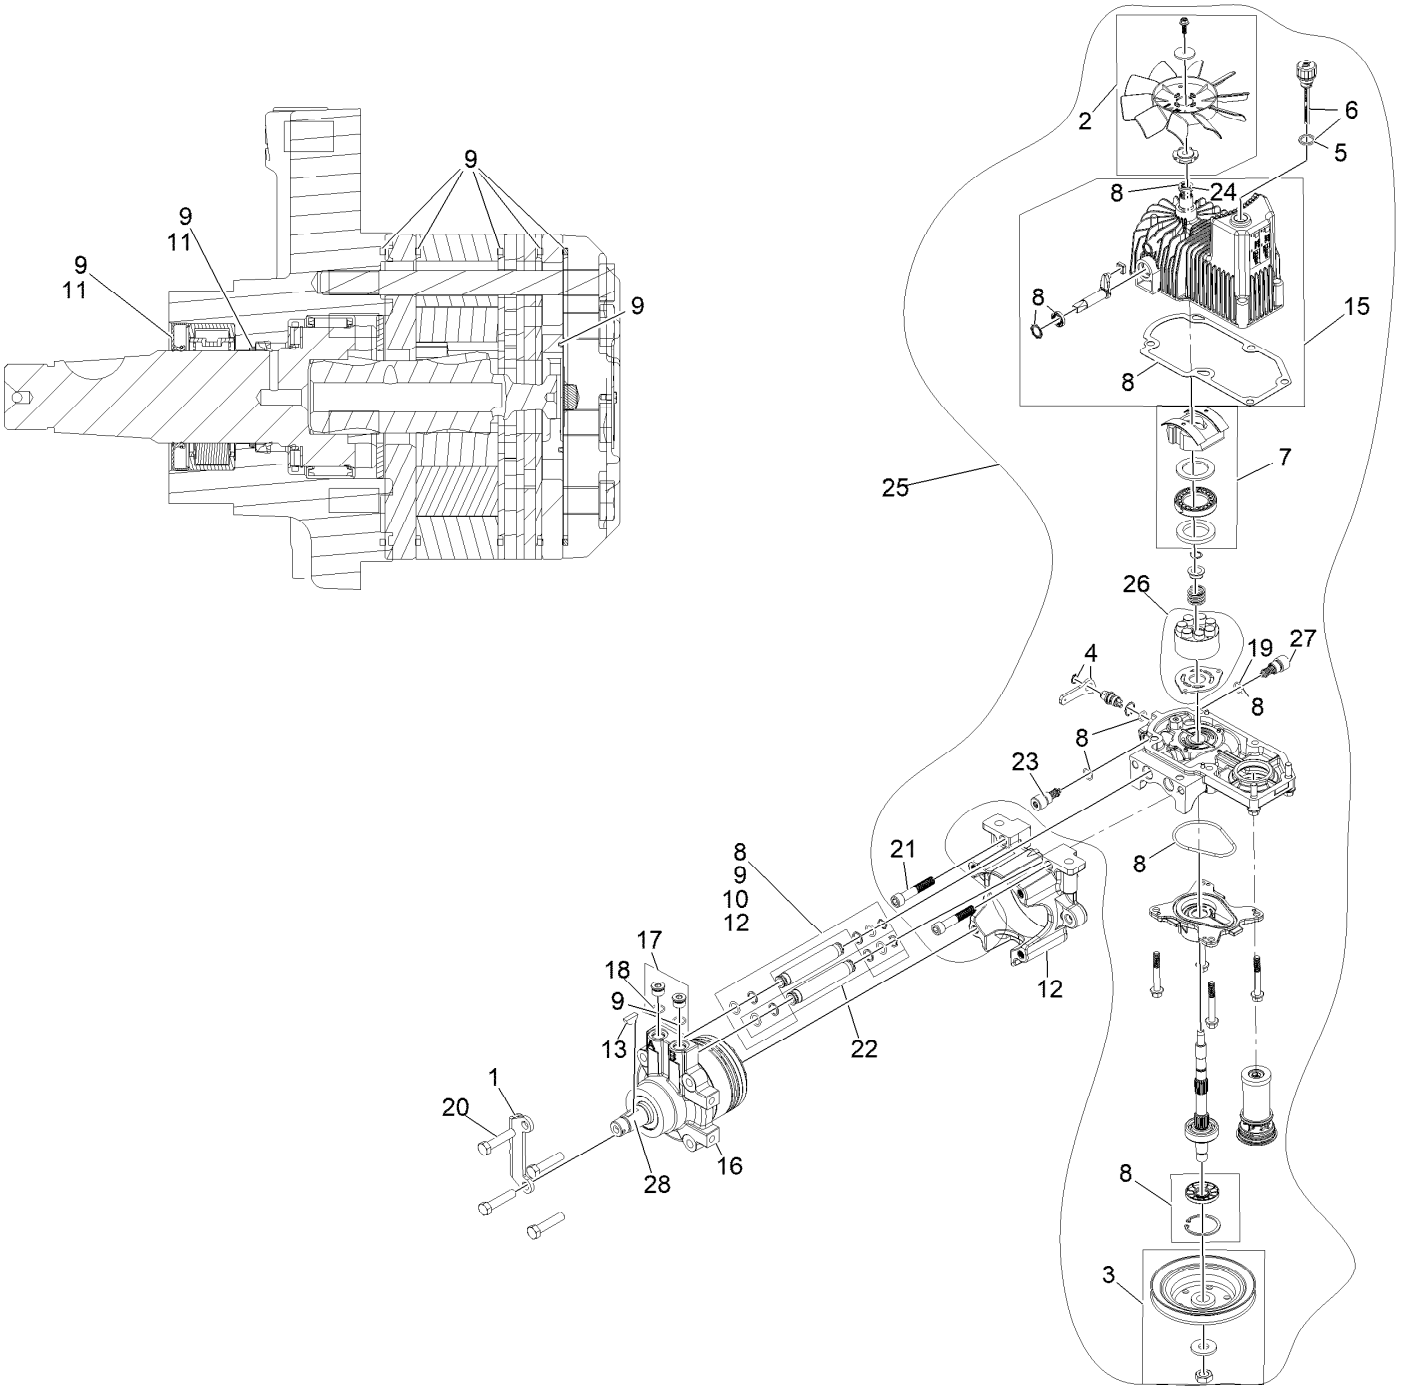


RH Hydro Assembly No. 135-7908 (continued)

Ref.	Part Number	Qty.	Description
1	135-7827	1	Plate, Horse Shoe Mount
2	142-3603	1	Kit, 7.8 In Fan
3	116-0234	1	Pulley Kit
4	116-0235	1	Handle
5	116-0237	1	Gasket
6	116-0236	1	Dipstick
7	116-1367	1	Swash Block Kit
8	142-3604	1	Kit, Pump Seal
9	116-1369	1	Motor Seal Kit
10	116-1370	1	Tube Seal Kit
11	116-1371	1	Output Shaft Seal Kit
12	116-5469	1	Cup-Nose
13	3257-42	1	Key-Woodruff 5/16 X 1
15	142-4461	1	Kit, Housing-Hydro RH
16	146-1947	1	HYD Motor,280Cc RH Sealed
17	116-7901	1	Magnetic Plugs Service Kit
18	76-1900	2	O-Ring
19	116-8662	2	O-Ring-Valve, Check
20	116-8974	4	Screw-HH 1/2-20 X 2 1/4
21	116-8975	2	Screw-HSH 1/2-20 X 2 3/4
22	116-9922	2	Hydraulic Tube Kit
23	126-7467	1	Shock Valve, 16Cc Hydro
24	126-7711	1	Seal-Drive, Fan
25	142-3606	1	Kit, Pump Section 16Cc RH
26	142-4501	1	Kit - 16Cc Port Plate,Rotate Grp
27	142-4458	1	Shock Valve Orificed 3300
28	146-3749	1	Output Shaft- Tl Uht Motor
99	116-1373	1	Flow Test Kit ●
99	116-4245	1	Puller-Pulley

● Not illustrated


Rear Wheel Assembly

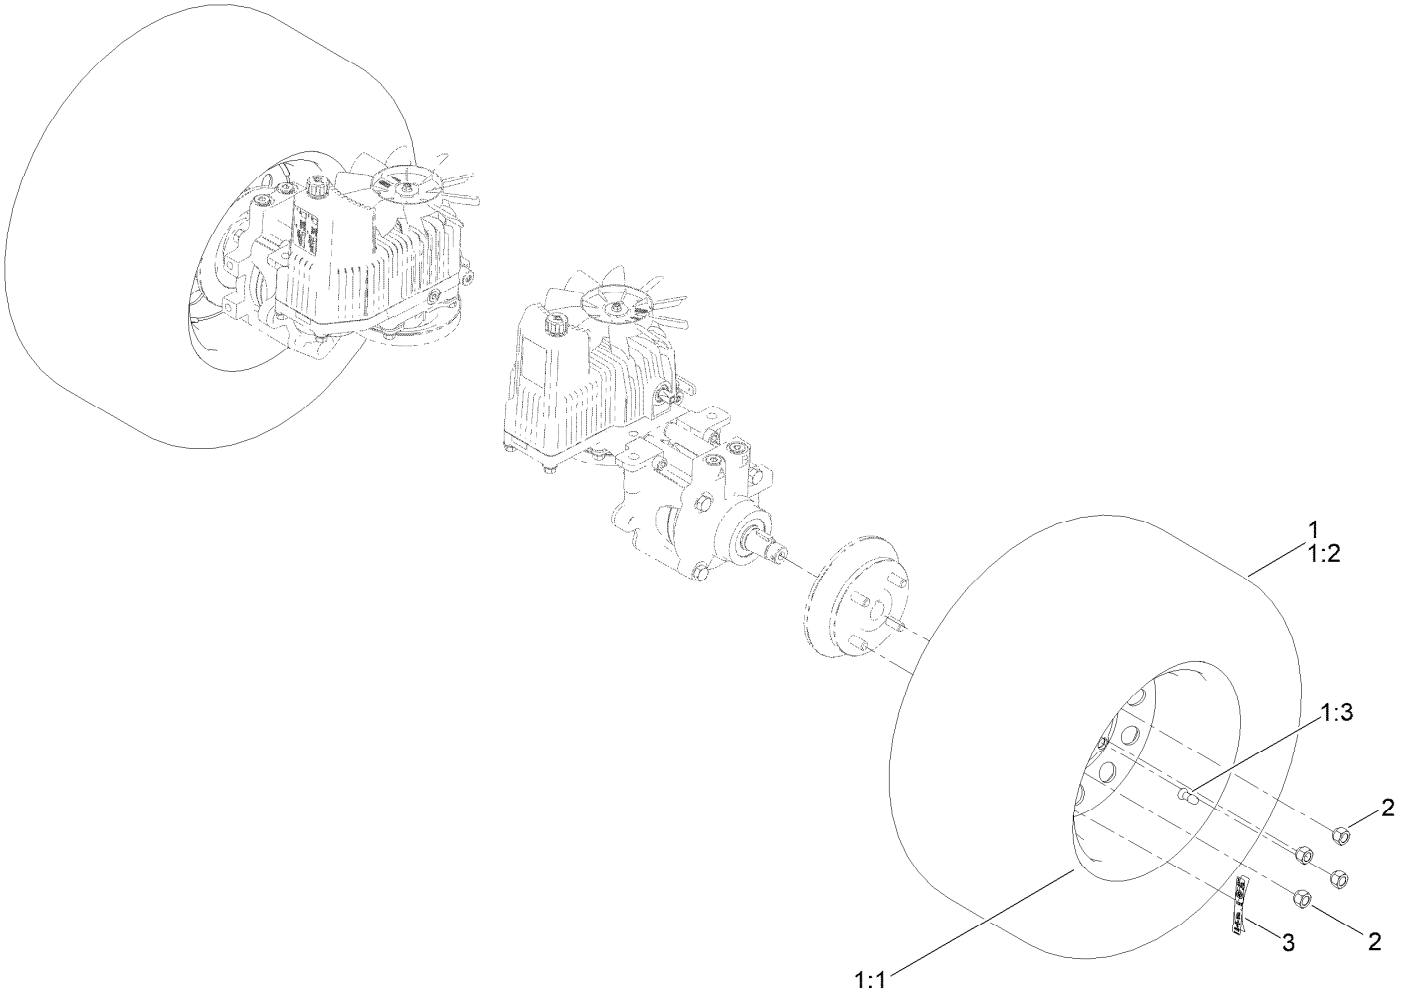

Rear Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-3480	2	Wheel And Tire ASM
1:1	163-3485	1	Wheel
1:2	146-0590	1	Tire-24X12-12
1:3	232-27	1	Stem-Valve
2	139-2564	8	Nut-Lug
3	126-2055	2	Decal-Torque, Wheel Hub Lug

Park Brake Assembly

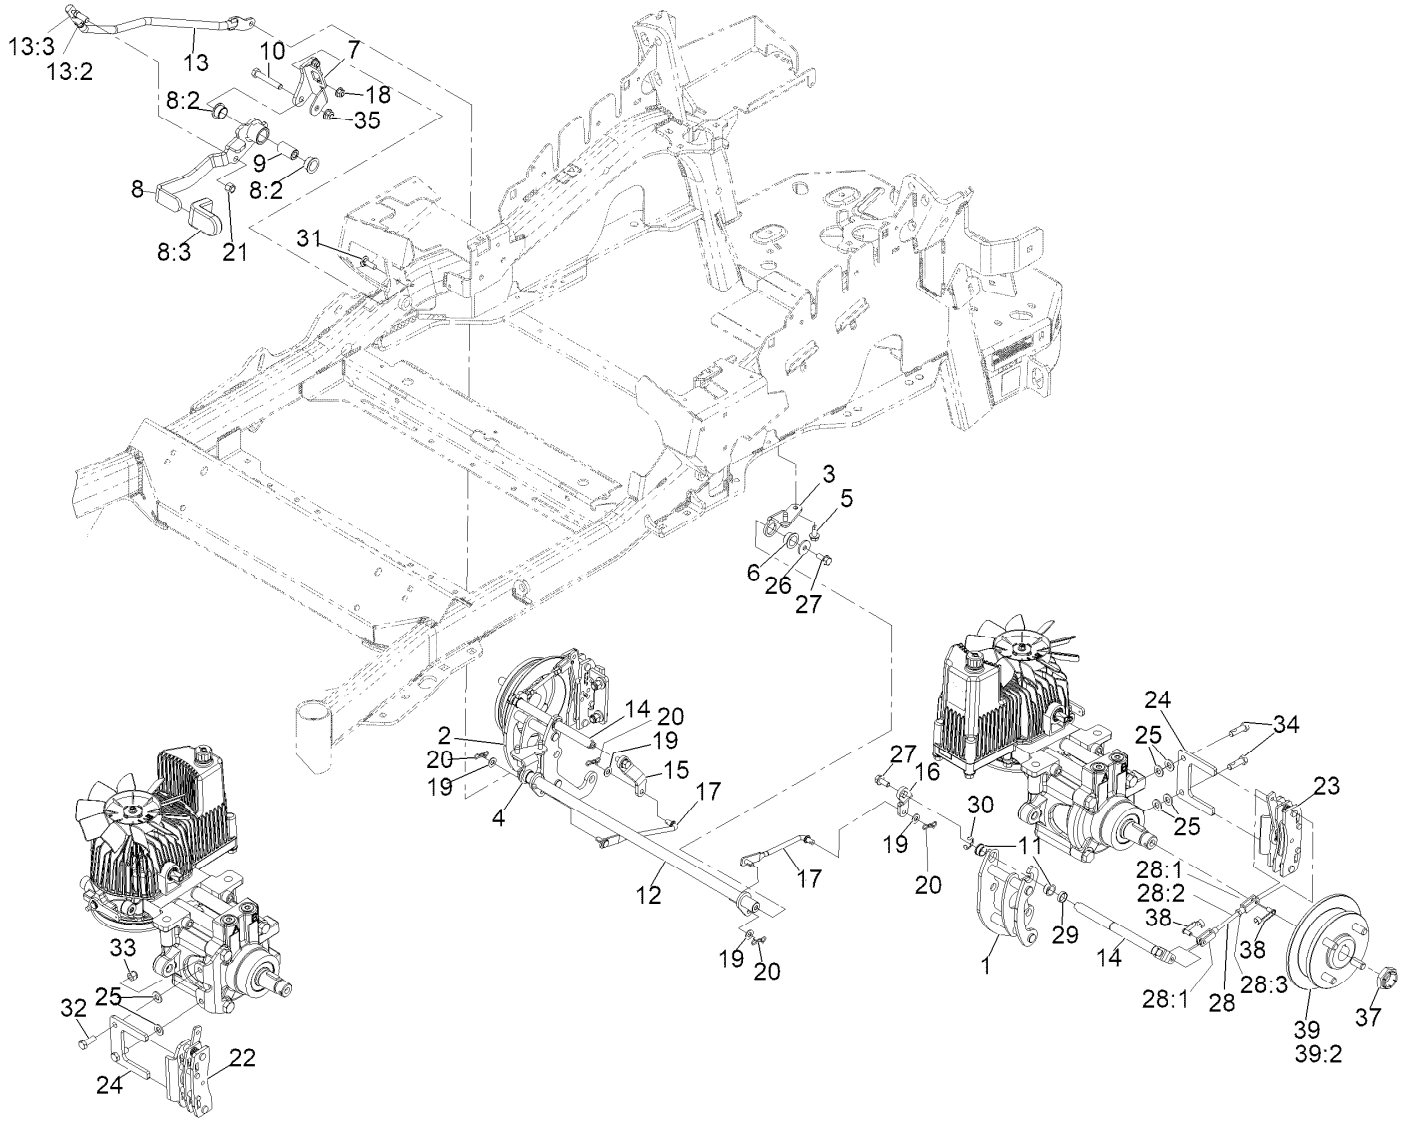


REAR VIEW OF
RIGHT HAND HYDRO

Park Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4248	1	Mount-Bellcrank, LH
2	126-4249	1	Mount-Bellcrank, RH
3	116-9681	1	Mount-Pivot, LH
4	116-9682	1	Mount-Pivot, RH
5	32144-70	4	Screw-HWH 5/16-18 X 3/4 Tf
6	109-8054	2	Bushing-Flanged
7	116-9096-01	1	Bracket-Mount
8	135-7565	1	Brake Lever ASM
8:2	109-8054	2	Bushing-Flanged
8:3	132-4749	1	Grip-Lever
9	116-9117	1	Pivot-Handle, Brake
10	323-11	1	Screw-HH 3/8-16 X 2 1/4
11	126-6199	4	Bushing
12	135-7800	1	Shaft-Cross
13	135-7805	1	ASM, Front Linkage
13:2	94-7572	1	End-Tie Rod, RH
13:3	3220-3	1	Nut-Jam 3/8-24
14	126-4251	2	Bellcrank
15	126-3716	1	Arm-Inner, RH
16	126-3715	1	Arm-Inner, LH
17	142-6328	2	Mid-Link, Short
18	119-4041	2	Nut-HF
19	3256-23	4	Washer-5/16 SAE
20	119-1415	4	Pin-Cotter, Locking
21	3296-6	1	Nut-Nyloc 3/8-24
22	135-7440	1	Caliper-Brake, RH
23	135-7441	1	Caliper-Brake, LH
24	135-7828	2	Plate-Mount, Brake
25	3256-24	6	Washer-3/8 SAE
26	115-7109	2	Washer-Flat
27	98-9940	4	Screw-HHF
28	126-7587	2	Rear Linkage ASM
28:1	126-7588	2	Yoke
28:2	116-9069	1	Linkage, Rear
28:3	3220-1	1	Nut-Jam 1/4-28
29	126-6200	2	Spacer
30	32120-19	2	E-Ring
31	3230-2	2	Bolt-Carriage 5/16-18 X 1
32	135-7915	2	Screw-HH,
33	112-0236	2	Nut-Lock
34	135-7890	2	Screw-HH, Patch
35	119-4042	1	Nut-HF, NI
37	116-1399	2	Locknut
38	126-6395	4	Pin-Clevis, Spring
39	142-2701	2	Wheel Hub ASM
39:2	116-1696	4	Stud-Wheel


Fuel Tank Assembly

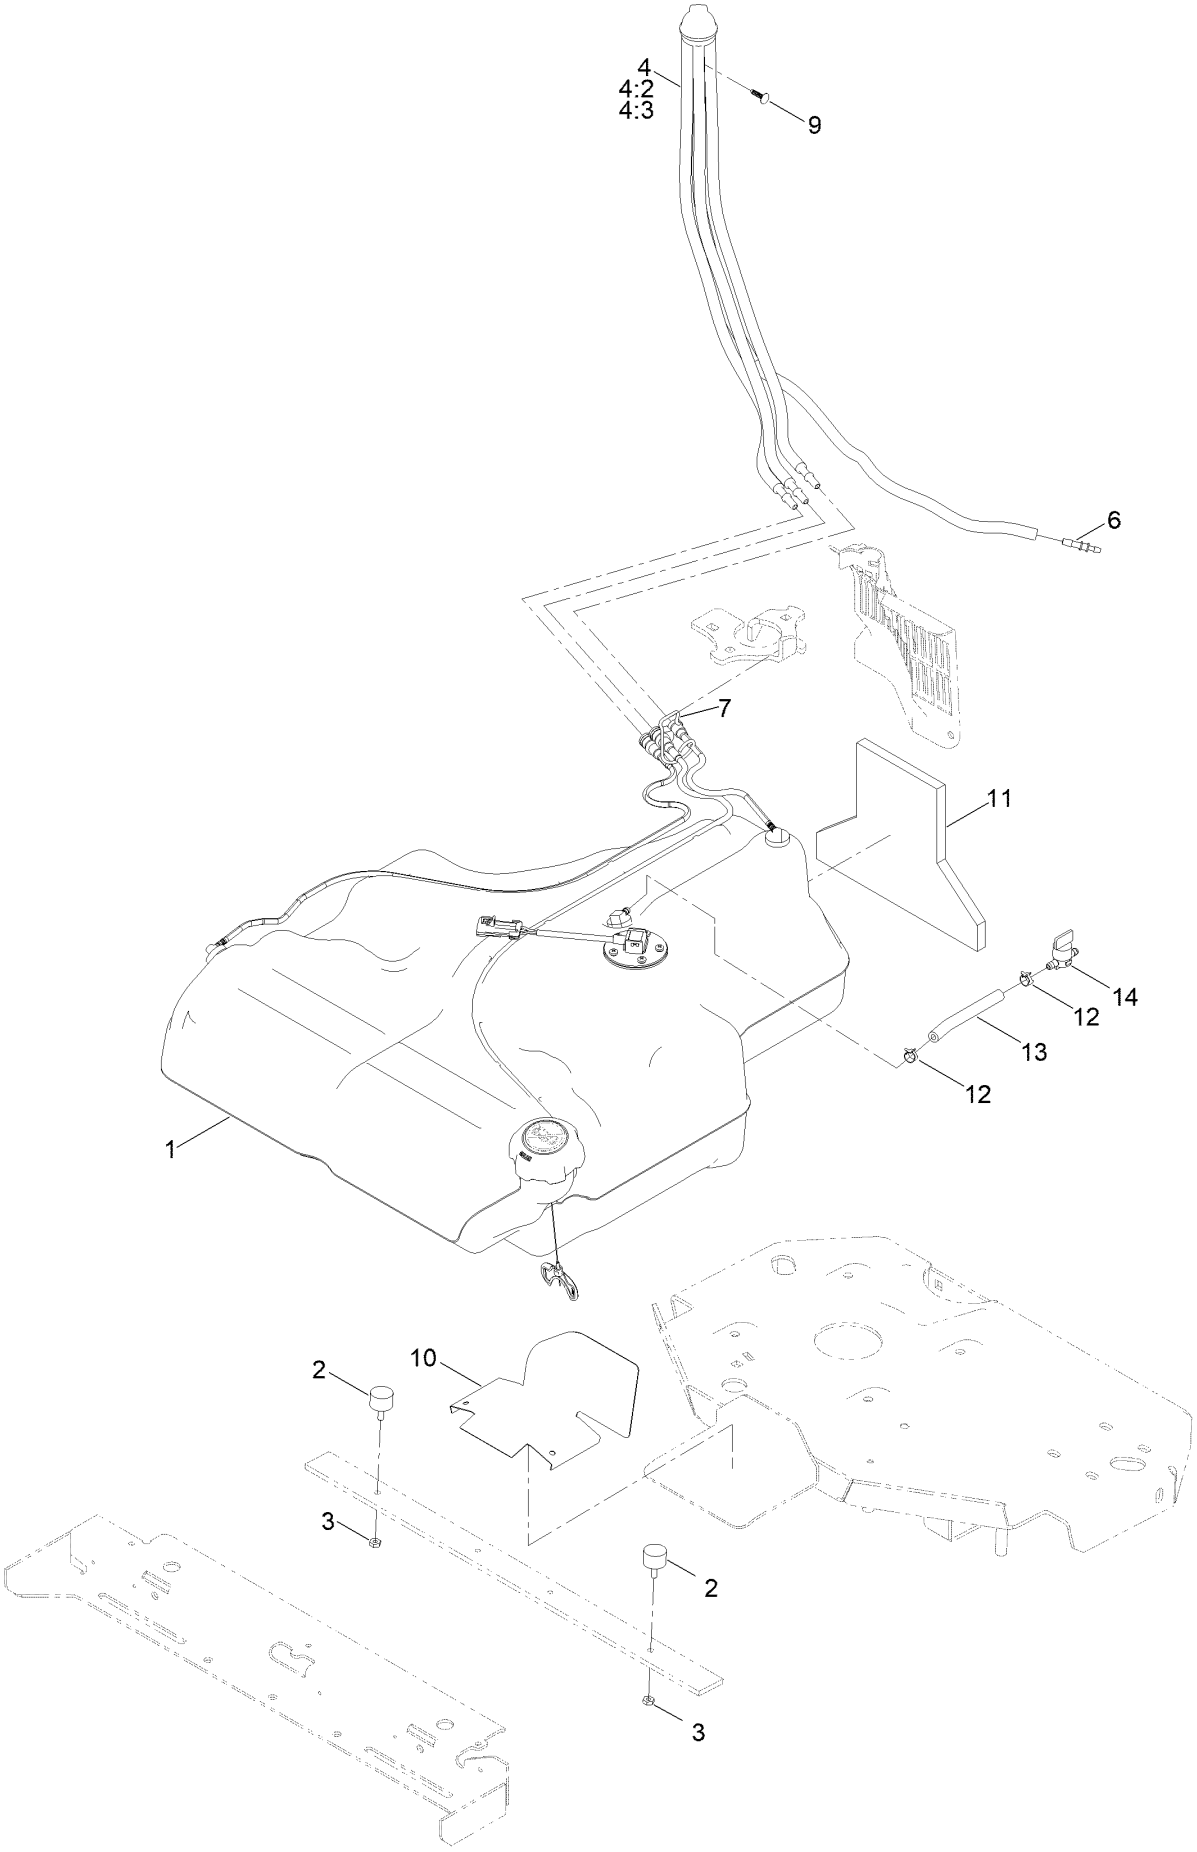

Fuel Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-0643	1	Fuel Tank ASM
2	1-523420	2	Bumper
3	3218-1	2	Nut-Jam
4	127-0583	1	Fuel Manifold Vent ASM
4:2	109-0302	3	Hose-Fuel
4:3	108-5376	1	Hose-Fuel
6	135-5678	1	Barb-Fuel
7	116-6005	1	Retainer-Line, Vapor
9	125-8067	1	Plug-Plastic
10	126-0032-01	1	Guard-Exhaust
11	126-0224	1	Insulation-Foam, Fuel Tank
12	2412-98	2	Clamp-Hose
13	109-0650	1	Hose-Fuel
14	1-603770	1	Valve-Fuel


Fuel Tank Assembly No. 135-0643

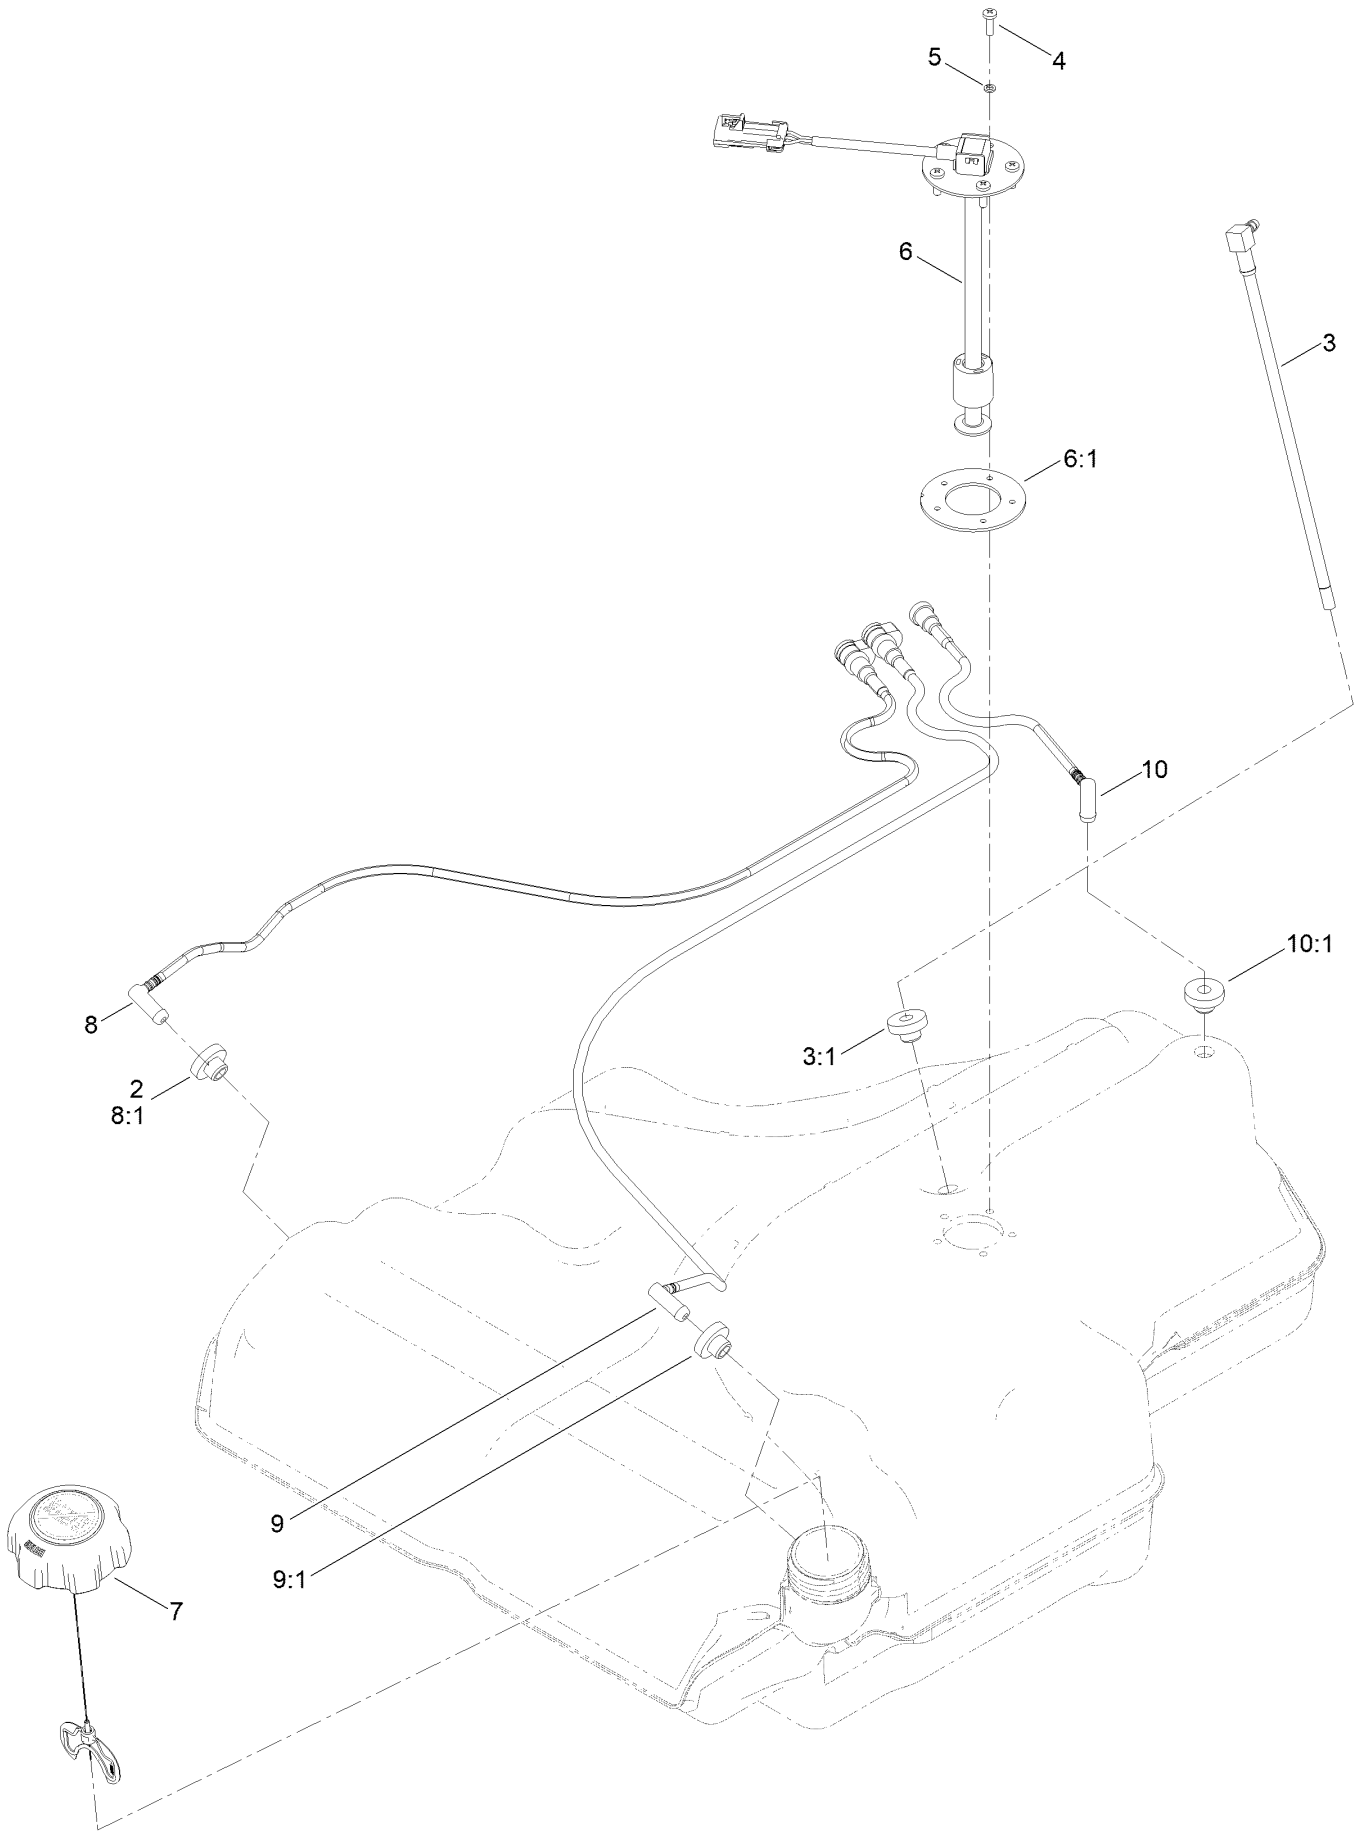

Fuel Tank Assembly No. 135-0643 (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	4	Bushing
3	116-2459	1	Fuel Line Kit (With Grommet)
3:1	46-6560	1	Bushing
4	3290-500	5	Screw-PPH
5	3253-17	5	Washer-Lock
6	126-3913	1	Float-Sender, Fuel
6:1	126-3950	1	Gasket-Sender
7	137-4127	1	Cap-Fuel
8	116-2460	1	RH Vent Line Kit (With Grommet)
8:1	46-6560	1	Bushing
9	116-2461	1	LH Vent Line Kit (With Grommet)
9:1	46-6560	1	Bushing
10	116-2462	1	Rear Vent Line Kit (With Grommet)
10:1	46-6560	1	Bushing


Seat Mounting Assembly

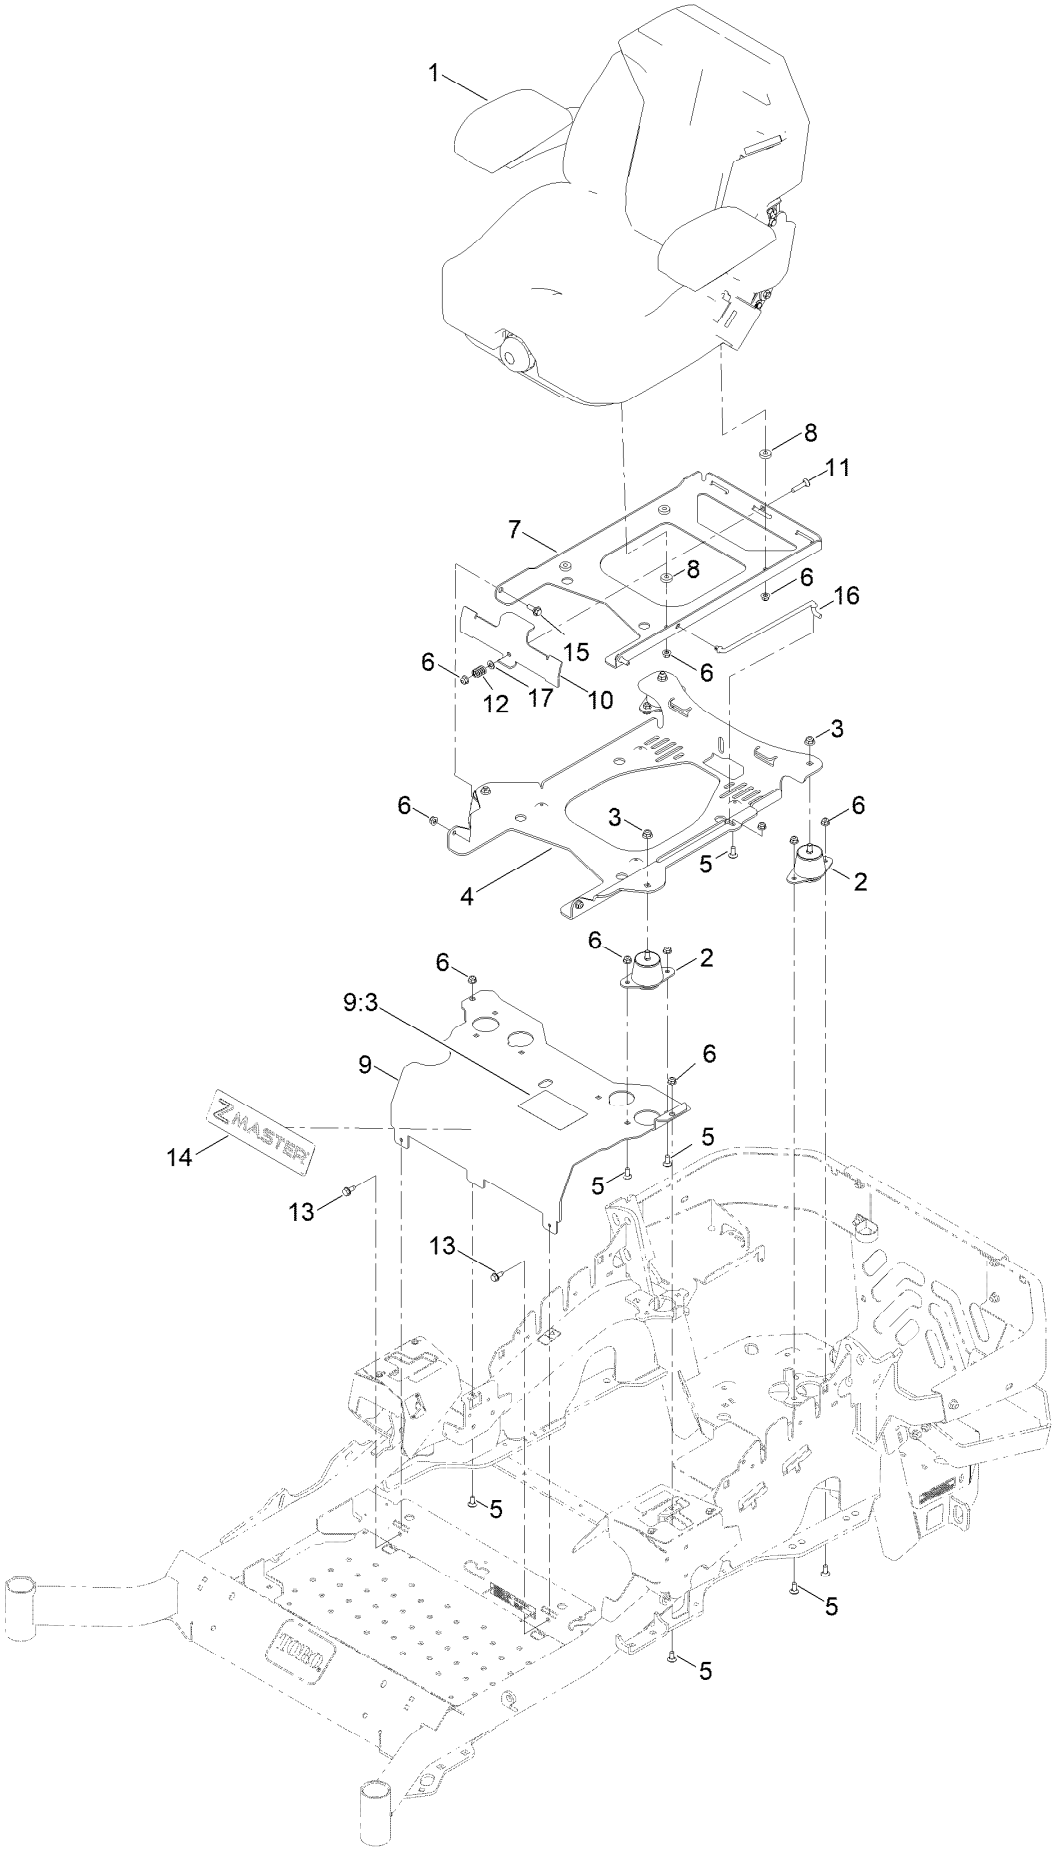

Seat Mounting Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-4984	1	Seat-Suspension
2	109-9034	4	Isolator-Seat
3	119-4042	4	Nut-HF, NI
4	116-3860-03	1	Plate-Tilt, Seat Support
5	137-3061	11	Bolt-CARR
6	119-4041	18	Nut-HF
7	116-3859-03	1	Plate-Frame, Seat
8	26-4840	4	Spacer-Pin, Mounting
9	125-9385	1	Seat Mount ASM
9:3	125-9383	1	Decal-Service Aid
10	109-9881-03	1	Plate-Latch, Seat
11	3230-4	1	Screw-CARR
12	107-3017	1	Spring-Compression
13	32144-70	2	Screw-HWHTF
14	140-1215	1	Decal-Console
15	116-1297	2	Screw-Shoulder
16	116-0070	1	Rod-Prop
17	3256-23	1	Washer-Plain


Seat Assembly No. 147-4984

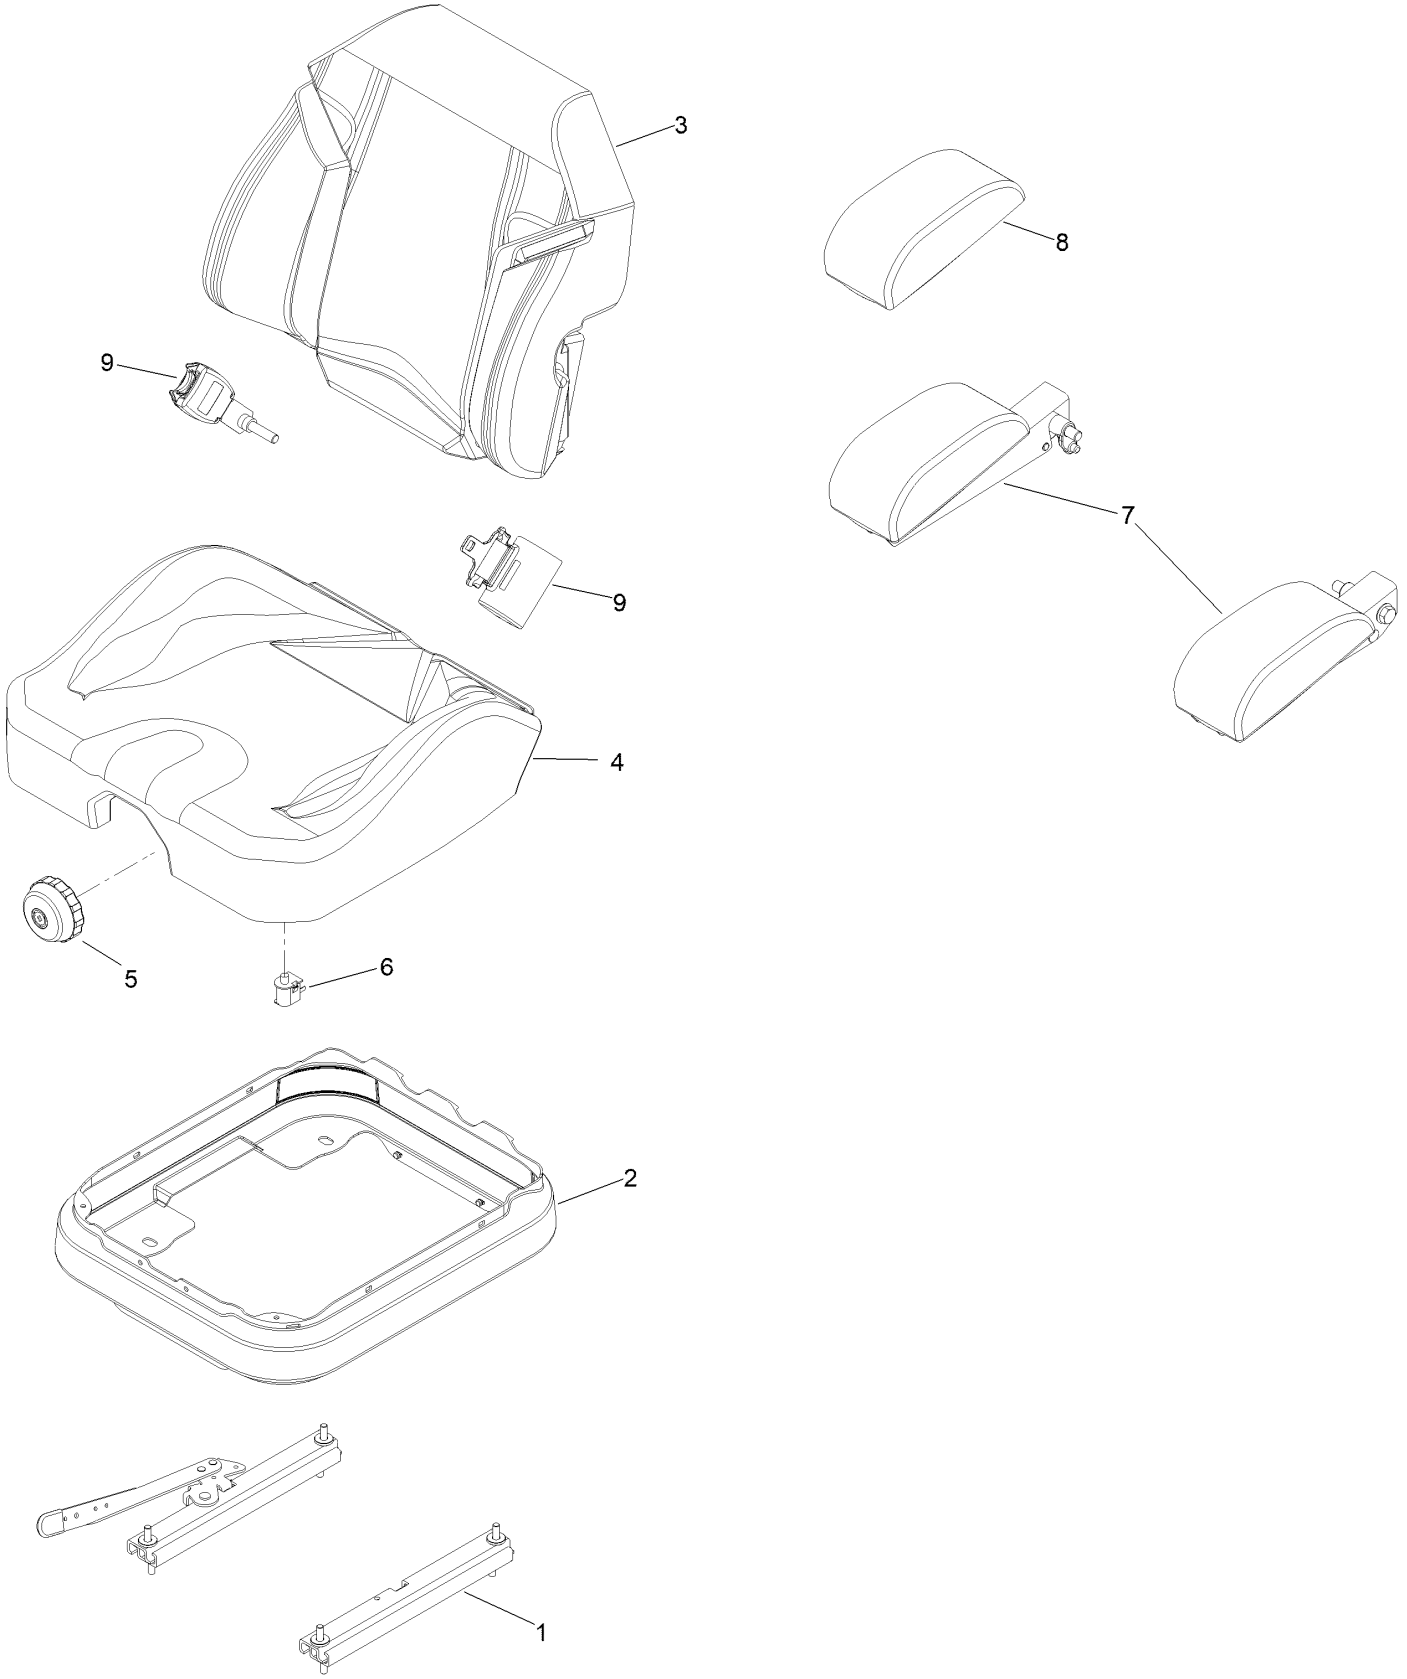

Seat Assembly No. 147-4984 (continued)

Ref.	Part Number	Qty.	Description
1	140-8012	1	Seat Track Set
2	116-5659	1	Cover-Suspension Bellows
3	140-8004	1	Cover-Back
4	140-8005	1	Cover-Cushion
5	116-8911	1	Knob-Adjuster
6	82-2190	1	Switch-Bail
7	147-4985	1	Armrest Kit
8	109-9802	1	Arm Rest Pad Set
9	126-2061	1	Seat Belt Service Kit

Motion Control Assembly

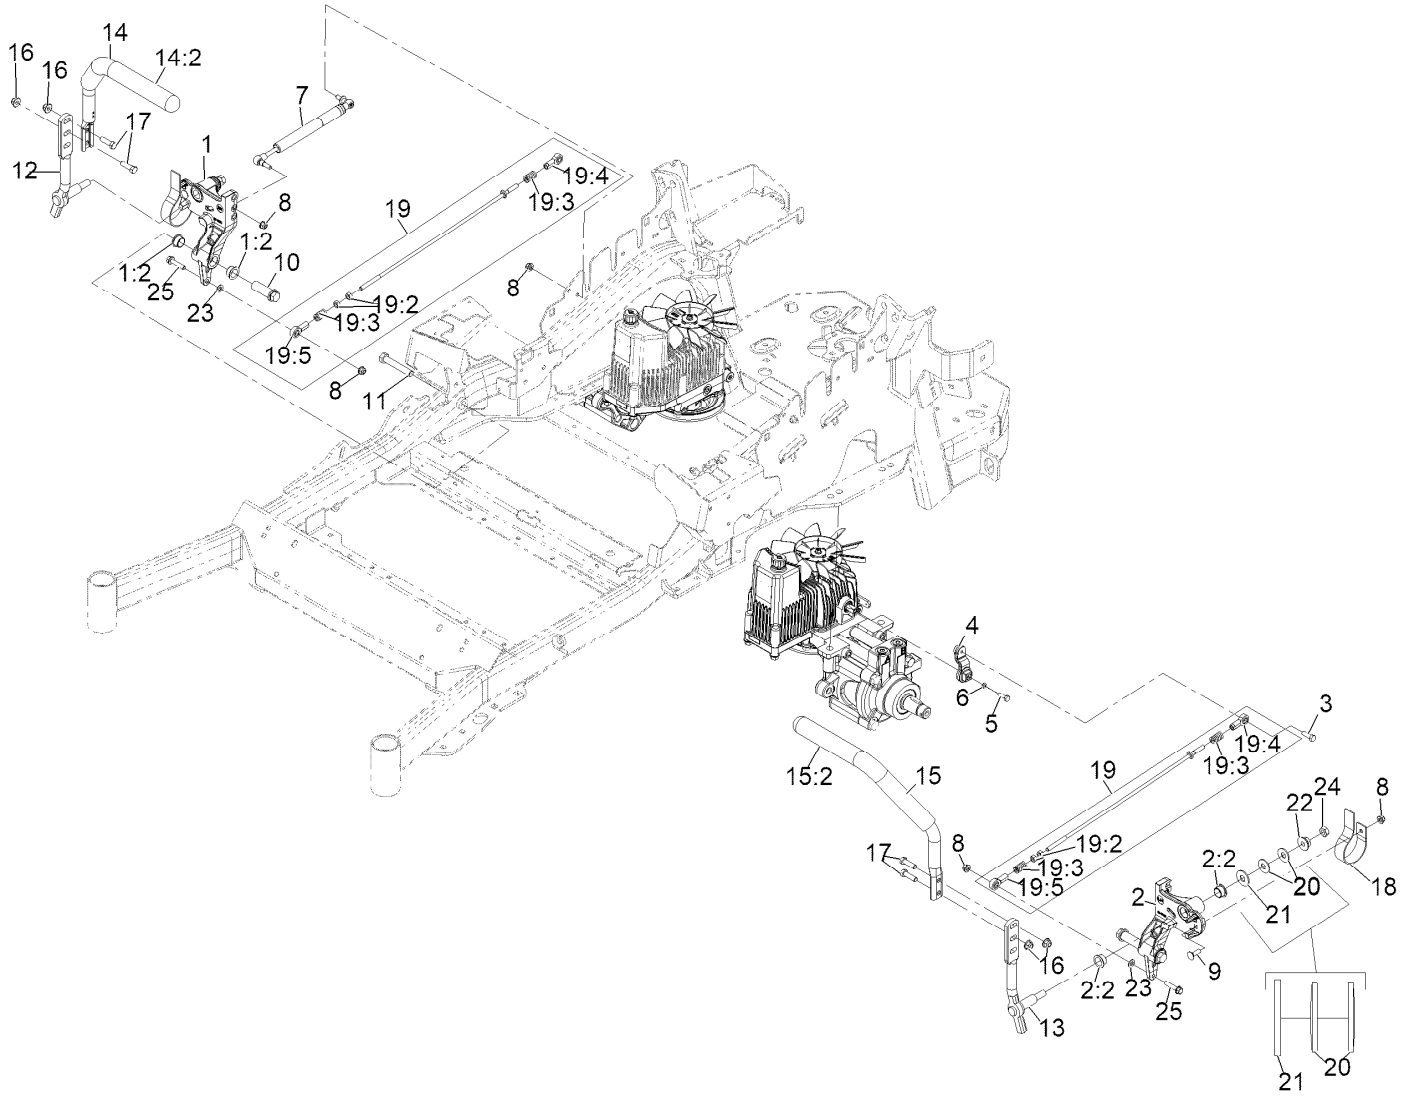


Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-0880	1	RH Motion Control And Bushing ASM
1:2	109-8054	4	Bushing-Flanged
2	116-0881	1	LH Motion Control And Bushing ASM
2:2	109-8054	4	Bushing-Flanged
3	116-0648	2	Screw-HH 5/16-18 X 1 W/Patch ●
4	109-4581	2	Arm-Control, Pump
5	9080046	2	Screw-HH 1/4-20 X 7/8 ●
6	1-303435	2	Washer-Spring Disc 1/4
7	146-0859	2	Damper, Motion Control
8	119-4041	8	Nut-HF
9	3230-2	2	Bolt-Carriage 5/16-18 X 1
10	109-5891	2	Hub-Threaded
11	325-12	2	Screw-HH 1/2-13 X 3
12	116-0039	1	Lever-Control Motion, RH
13	116-0040	1	Lever-Control Motion, LH
14	135-4371	1	RH Handle ASM
14:2	109-5668	1	Grip-Lever, Control
15	135-4373	1	LH Handle ASM
15:2	109-5668	1	Grip-Lever, Control
16	119-4042	4	Nut-HF, NI
17	323-7	4	Screw-HH 3/8-16 X 1 1/4
18	109-5575	2	Spring-Leaf
19	109-8106	2	Front Pump Linkage ASM
19:2	3219-2	2	Nut-Hex 5/16-24
19:3	1-323245	2	Spring-Compression
19:4	1-633152	1	Balljoint
19:5	1-543017	1	Balljoint
20	109-9505	4	Washer, Spring Disc 1/2
21	3256-6	2	Washer
22	32128-56	2	Nut-Hex 1/2-13 Flange
23	3256-23	2	Washer-5/16 SAE
24	3218-5	2	Nut-Jam 1/2-13
25	115-1794	2	Screw-Hex Flange 5/16-18 X 1 1/2

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


Console Assembly

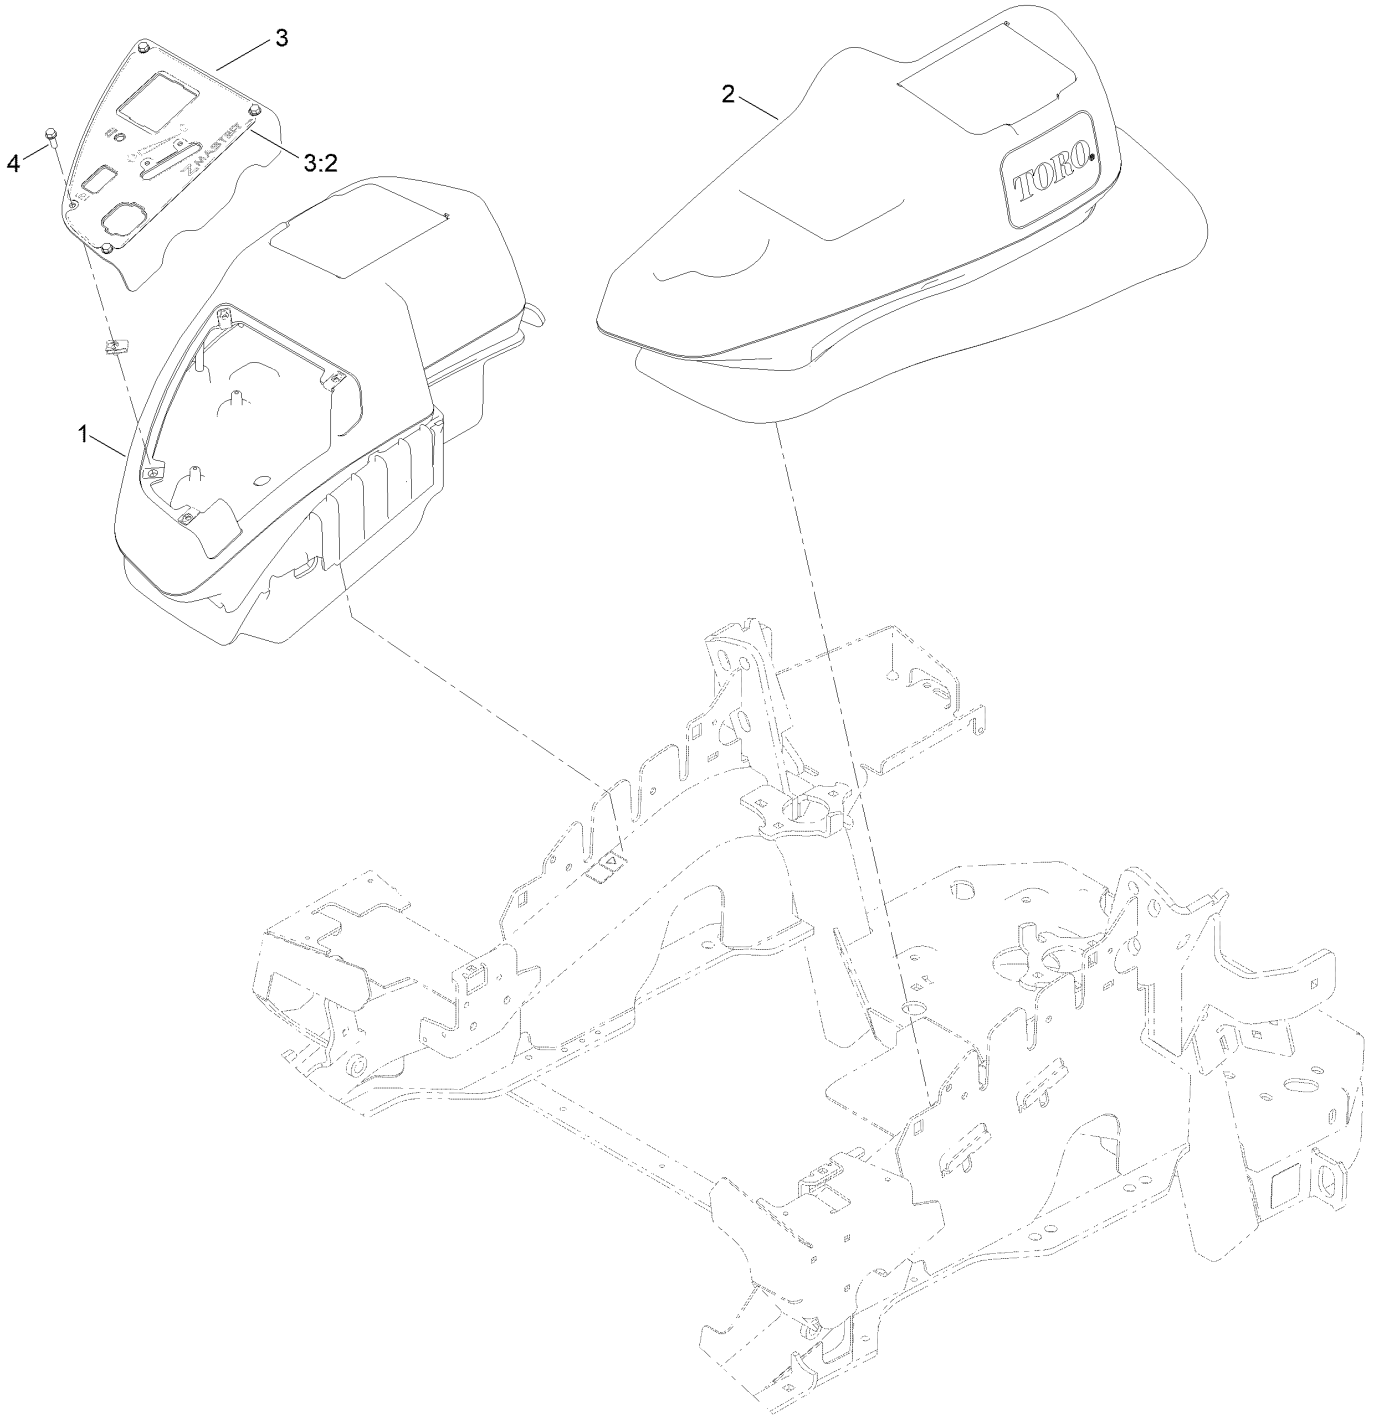

Console Assembly (continued)

Ref.	Part Number	Qty.	Description
1	115-7400	1	RH Console ASM
2	115-7401	1	LH Console ASM
3	161-9923	1	Control Panel W/ Decal ASM
3:2	161-9922	1	Decal-Control Panel
4	32105-15	4	Screw-HWH


RH Console Assembly No. 115-7400

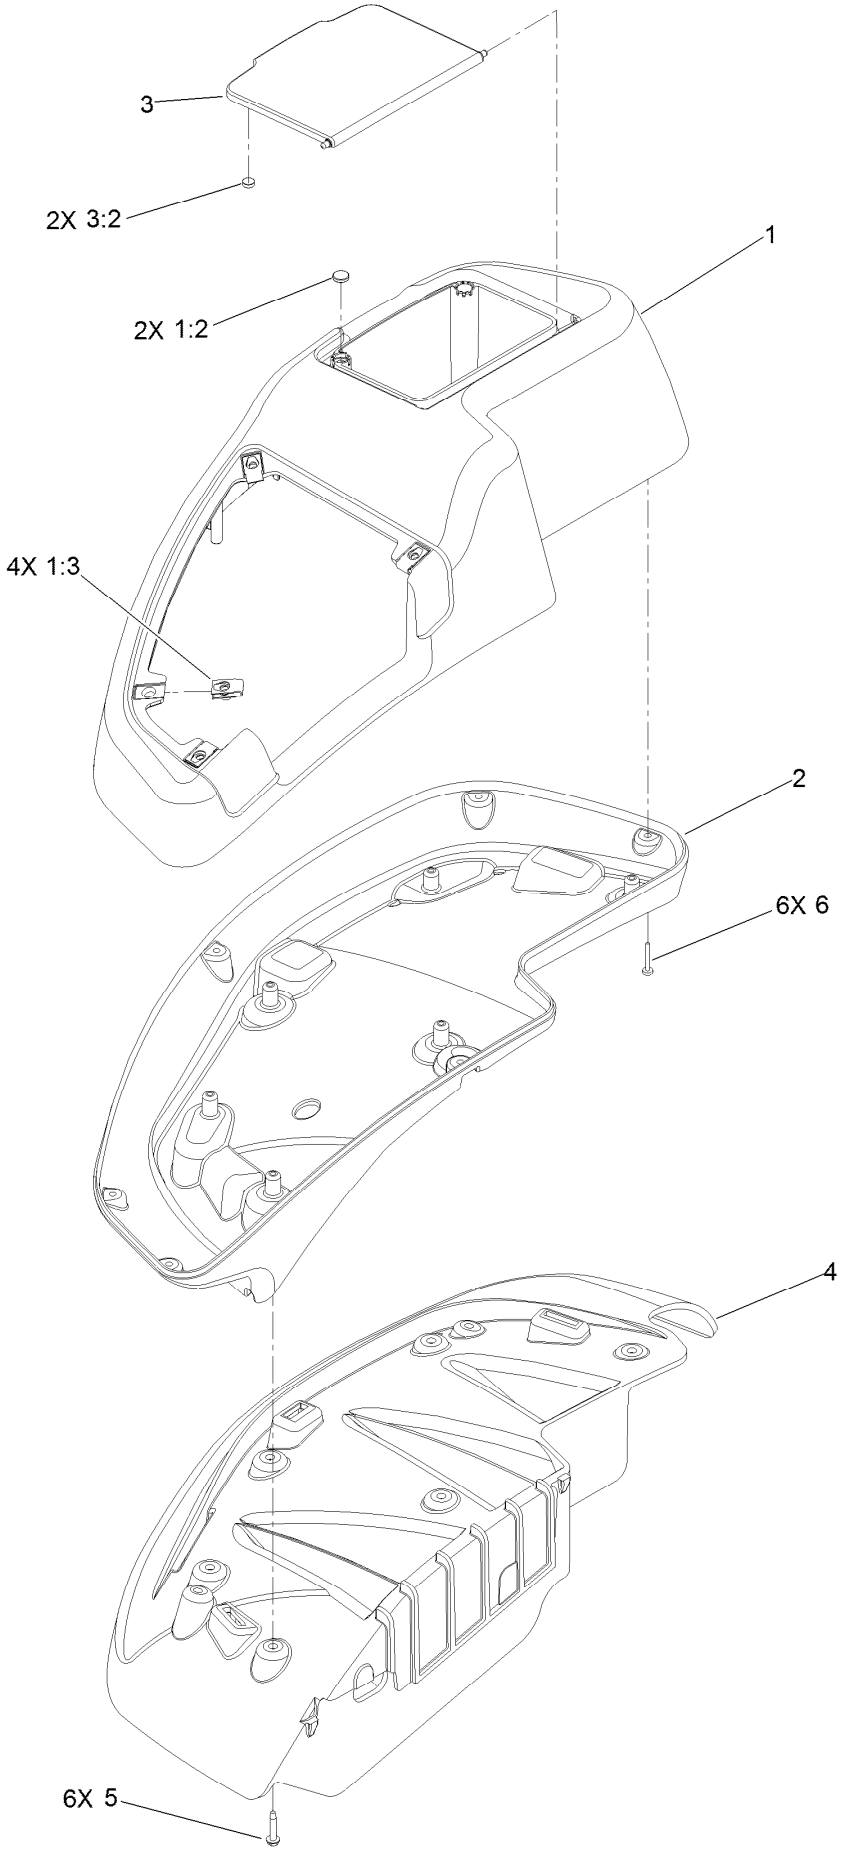

RH Console Assembly No. 115-7400 (continued)

Ref.	Part Number	Qty.	Description
1	114-1538	1	RH Wide Top Console ASM
1:2	117-0883	2	Puck
1:3	107069	4	Clip
2	115-3643	1	Console-Lower, RH Wide
3	114-1537	1	Wide Lid ASM
3:2	114-5896	2	Magnet
4	109-9083	1	Fender-Wide, RH
5	32144-89	6	Screw-Thread Forming
6	117-0347	6	Screw-PPH


LH Console Assembly No. 115-7401

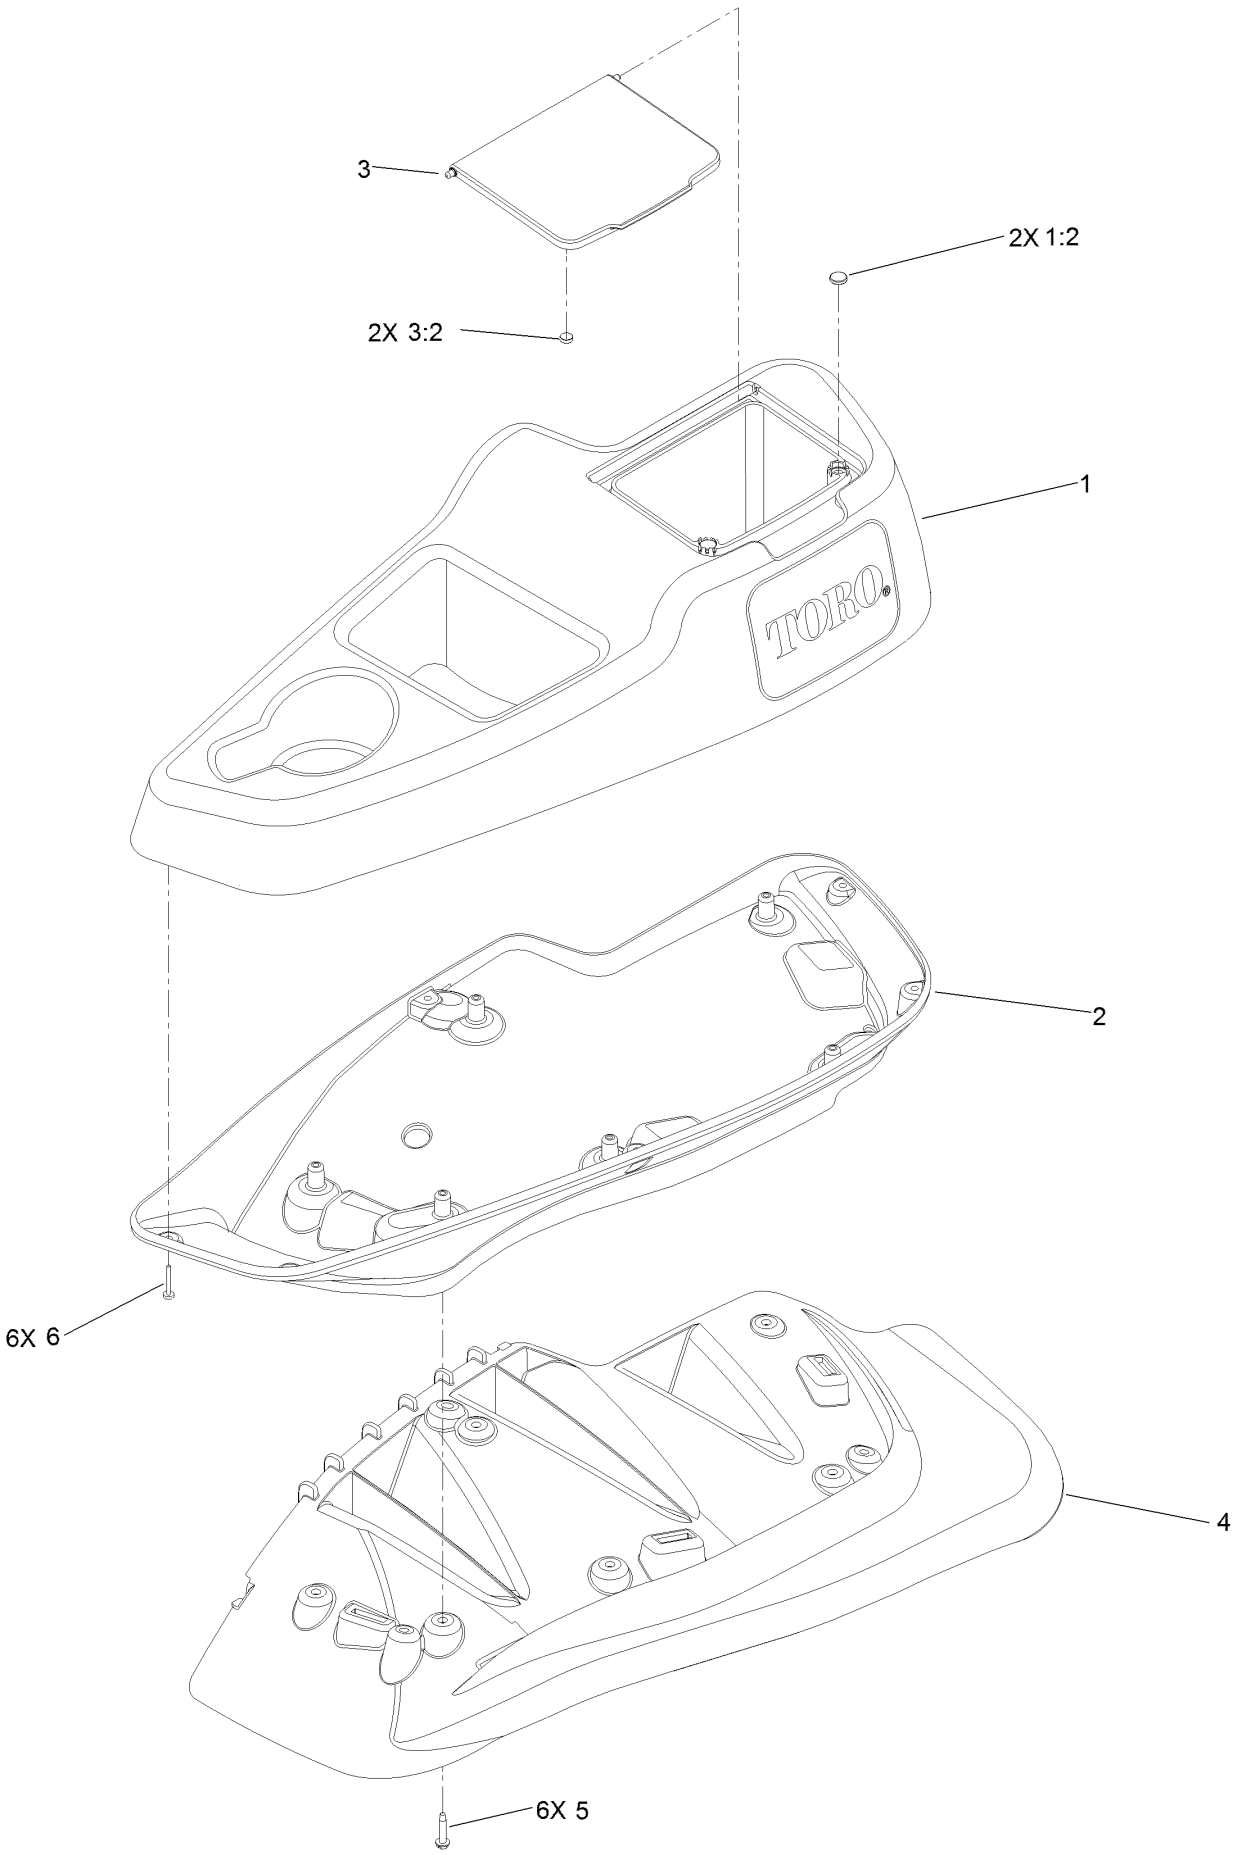

LH Console Assembly No. 115-7401 (continued)

Ref.	Part Number	Qty.	Description
1	114-1539	1	LH Wide Console Top ASM
1:2	117-0883	2	Puck
2	115-3641	1	Console-Lower, LH Wide
3	114-1537	1	Wide Lid ASM
3:2	114-5896	2	Magnet
4	109-9085	1	Fender-Wide, LH
5	32144-89	6	Screw-Thread Forming
6	117-0347	6	Screw-PPH

Electrical Assembly

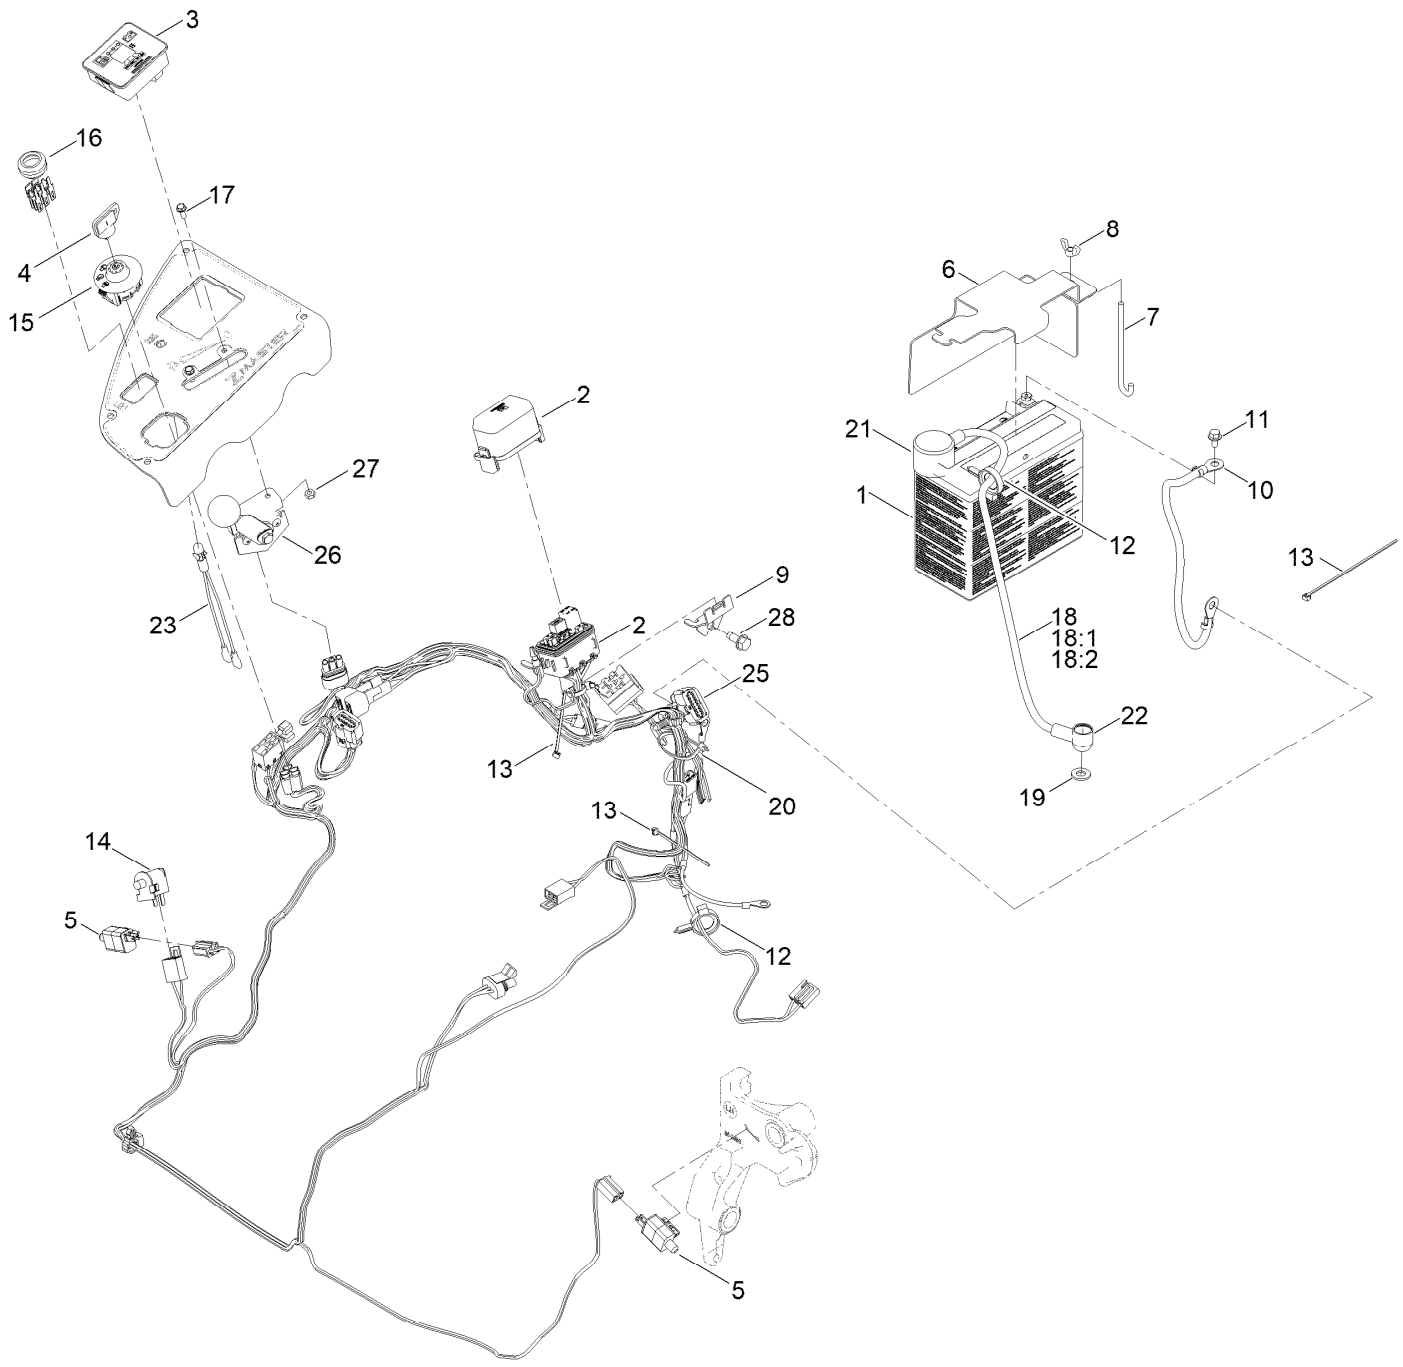


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	142-7345	1	Battery - Agm, 12V, 310 CCA
2	146-6929	1	Harness-Main ■
3	146-2550	1	Fuel-Hour Meter ASM
4	1-603511	1	Keys-Ignition (Spare Pair)
4	63-8360	1	Key-Ignition
5	110-6765	2	Switch
6	142-6707-03	1	Bracket-Holddown, Battery
7	142-6406	1	Bolt-Holddown
8	1-543792	1	Wingnut
9	161-9924	1	Plate-Fuse Holder
10	112-7063	1	Cable-Battery, Black
11	126-2713	2	Screw-HHF, Patch
12	105-1853	2	Clamp-Hose
13	1-303287	3	Tie-Cable
14	82-2190	1	Switch-Bail
15	137-4100	1	Switch-Ignition
16	135-3653	1	Switch, PTO 10A
17	137-3030	2	Screw-HWH
18	115-3864	1	Cable-Battery, Positive
18:1	1-543393	1	Insulator-Solenoid
18:2	109-2407	1	Insulator-Battery
19	3256-24	1	Washer-Plain
20	3290-378	1	Tie-Cable
21	109-2407	1	Insulator-Battery
22	1-543393	1	Insulator-Solenoid
23	1-643267	1	Indicator-LED, Red
25	146-2917	1	Harness-Jumper
26	146-1950	1	Throttle Controller-Etc
27	3296-2	2	Nut-Lock, NI
28	32144-70	1	Screw-HWHTF
99	142-7682	1	Hardware Kit, Battery ●

● Not illustrated
■ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.


Main Harness Assembly No. 146-2456

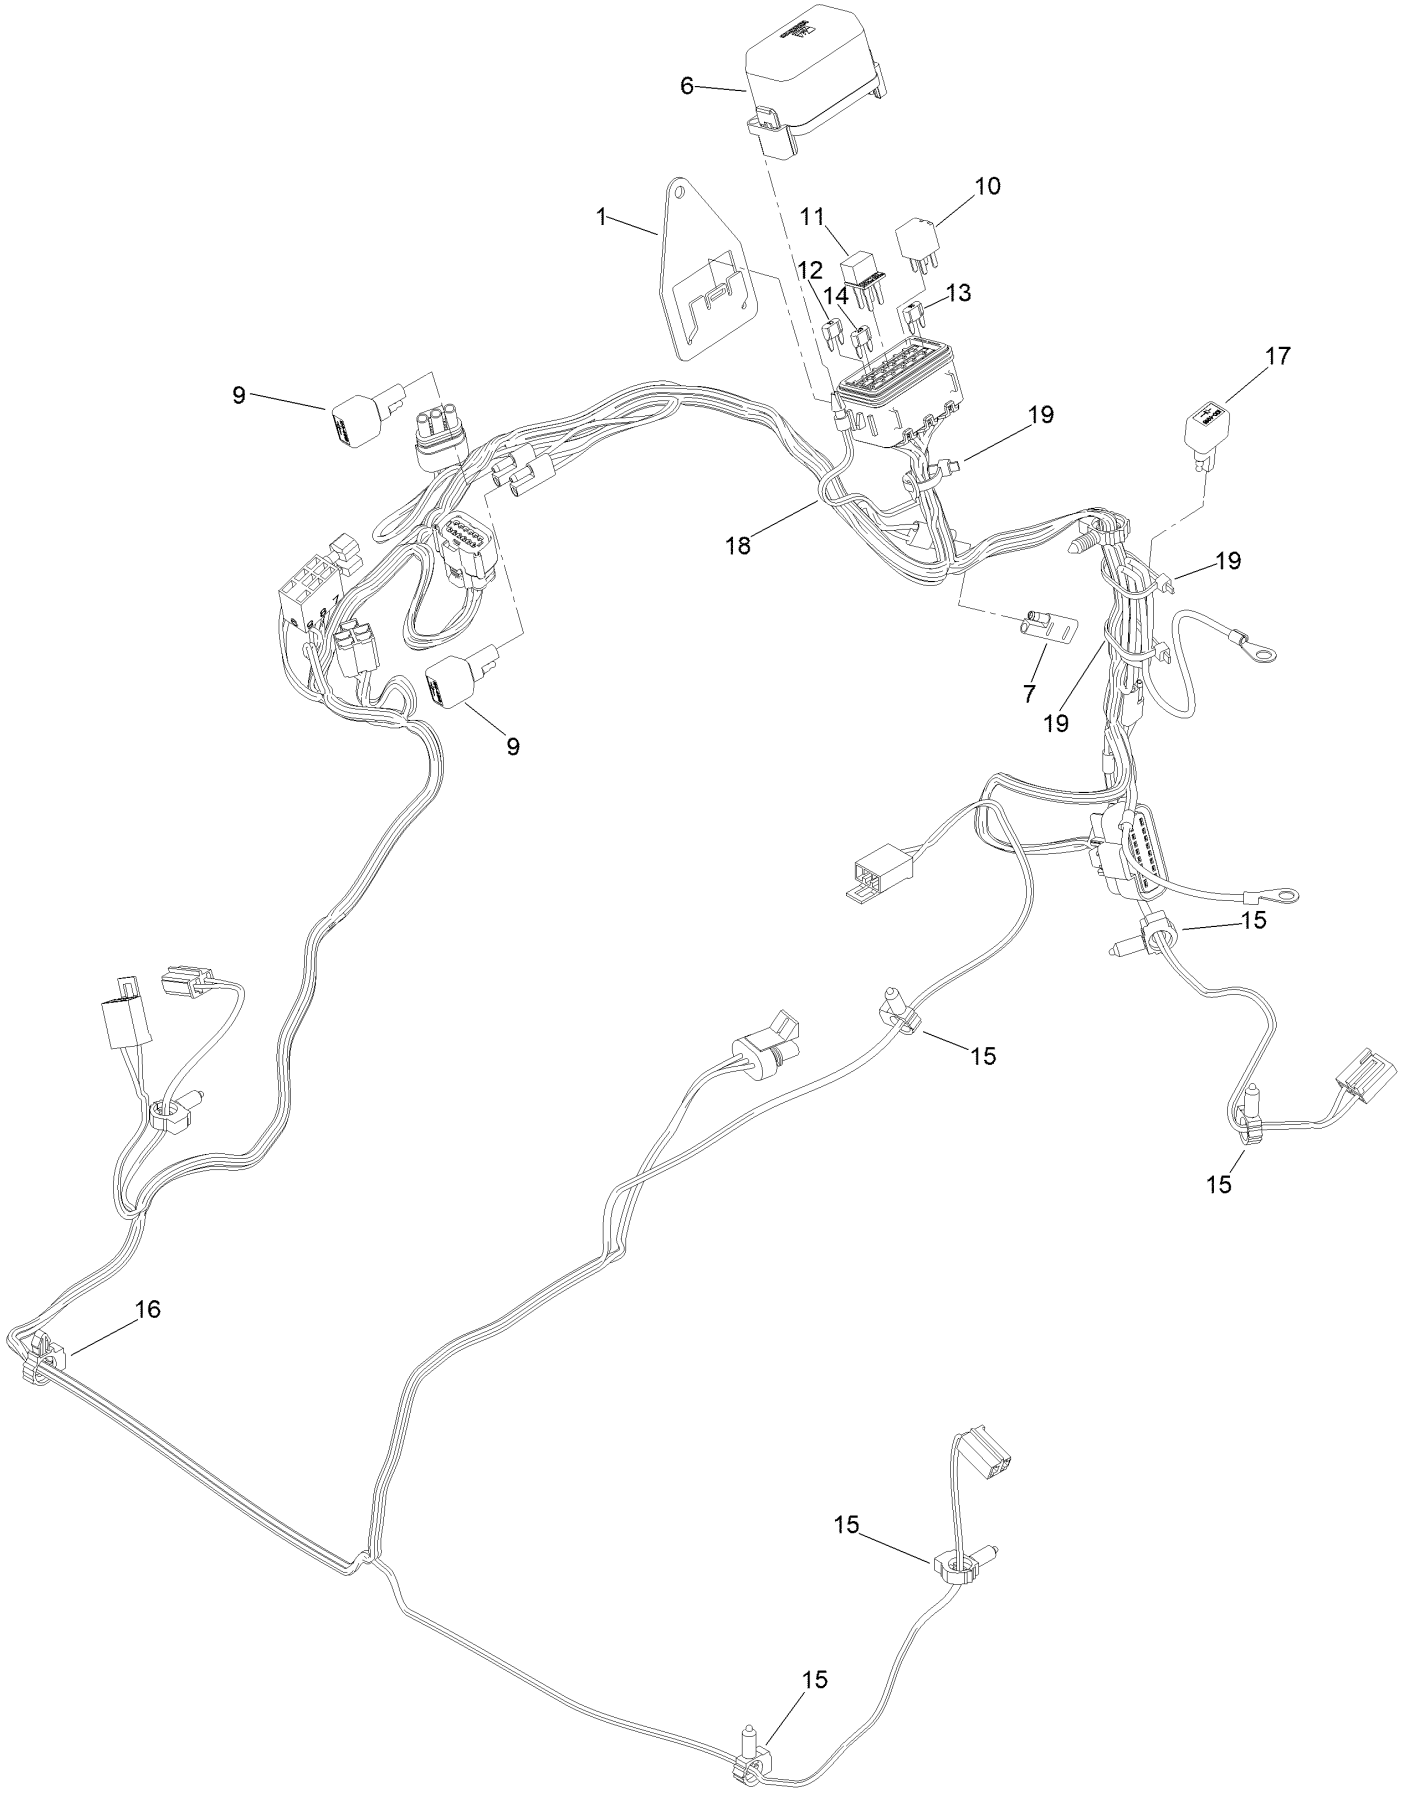

Main Harness Assembly No. 146-2456 (continued)

Ref.	Part Number	Qty.	Description
1	142-9524	1	Bracket-Littlefuse, Pdm 18F
6	32180-220	1	Cover
7	116-0053	1	Cap-Plug
9	100-4918	3	Diode
10	126-3991	1	Relay-Micro
11	146-2730	1	Relay-Engine Idle, 10K
12	121-8866	1	Fuse-Mini Blade, 10 Amp
13	121-8867	1	Fuse-Mini Blade, 15 Amp
14	121-8868	1	Fuse-Mini Blade, 20 Amp
15	32180-037	6	Clip-Harness
16	32181-019	1	Clip-Harness
17	32181-020	1	Clip-Harness
18	32181-021	1	Teather-Cap Littelfuse 18W
19	3290-378	3	Tie-Cable


Deck Lift Assembly

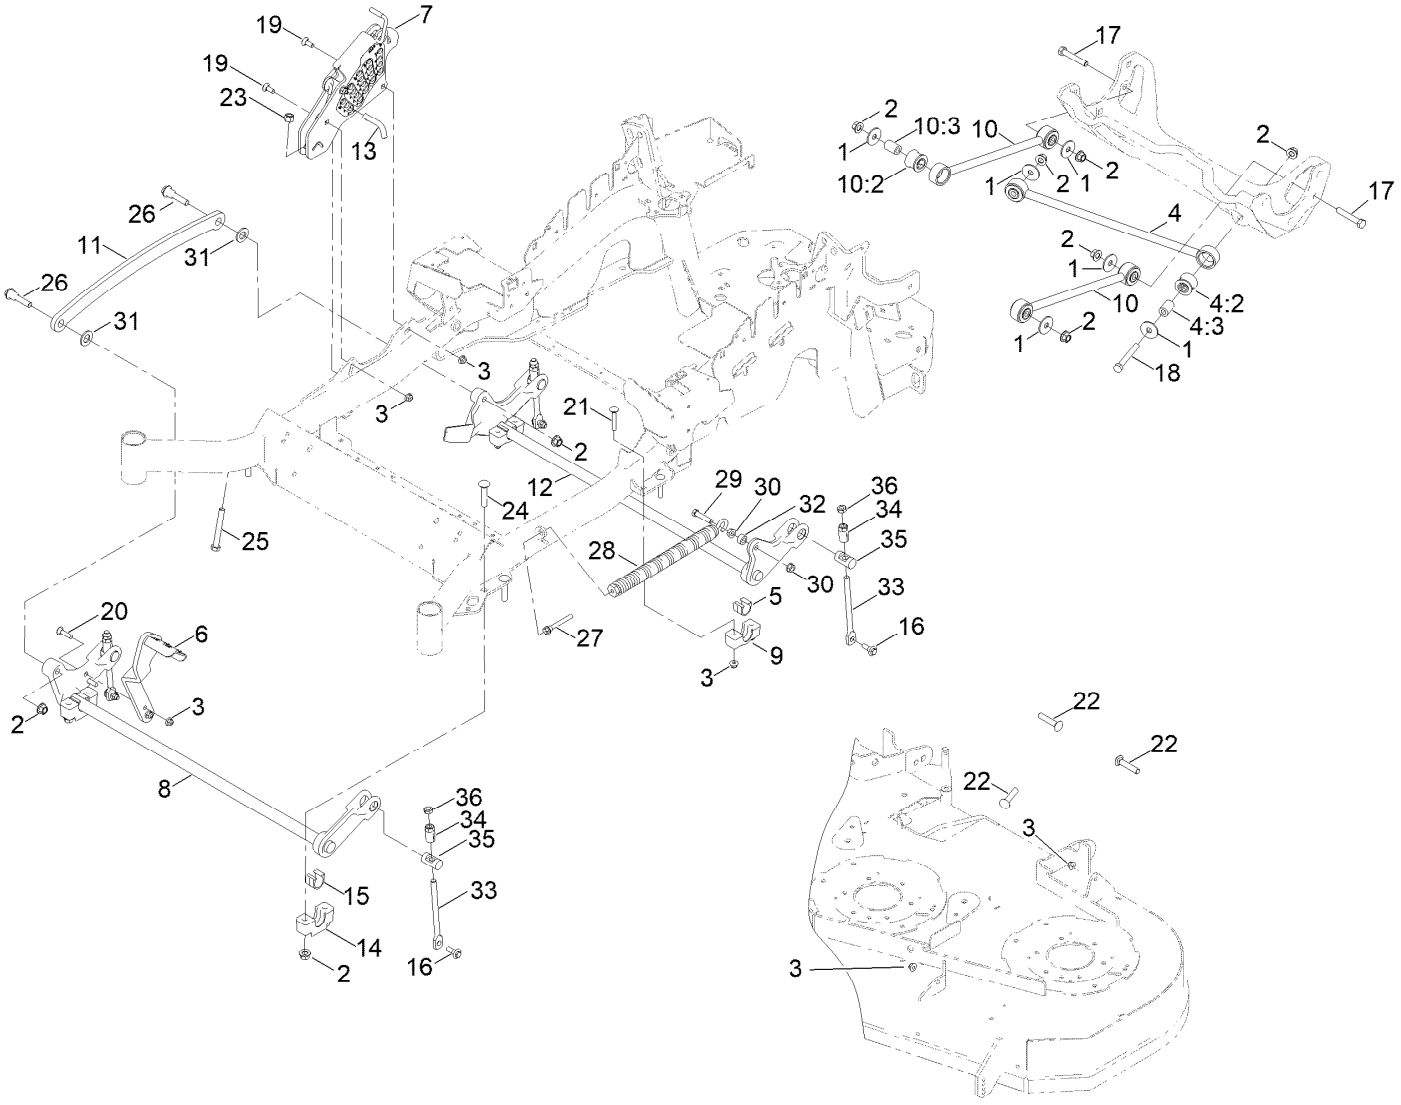

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	86-1990	6	Washer
2	139-1689	12	Nut-HF
3	119-4042	12	Nut-HF, NI
4	109-5013	1	Panhard Rod ASM
4:2	109-5009	2	Bushing-Suspension, Rubber
4:3	109-5010	2	Spacer
5	109-7173	2	Bearing-Cross Shaft, Rear
6	116-1919-01	1	Lever-Foot
7	109-7438	1	HOC ASM
8	126-2477-03	1	Decklift-Front
9	127-0553	2	Support-Bearing, Cross Shaft (Rear)
10	109-7952	2	Deck Strut ASM
10:2	109-5009	2	Bushing-Suspension, Rubber
10:3	109-5010	2	Spacer
11	116-0797-03	1	Link-Lift, Deck
12	116-2645-03	1	Lift-Deck, Rear
13	116-5584	1	Pin-HOC
14	109-9409	2	Support-Bearing, Cross Shaft (Front)
15	109-9410	2	Bearing-Cross Shaft, Front
16	109-9840	4	Screw-Shoulder, HHF
17	325-12	2	Screw-HH
18	325-17	1	Screw-HH
19	3231-2	2	Bolt-CARR
20	3231-4	2	Screw-CARR
21	3231-7	4	Screw-CARR
22	3233-34	3	Screw-CARR
23	3296-23	1	Nut-Lock, NI
24	116-1700	4	Bolt-CARR
25	116-0559	1	Bolt-TAP
26	116-2022	2	Screw-HHF, Shoulder
27	92-7674	1	Bolt-Shoulder
28	116-0000	1	Spring-Extension
29	109-9065	1	Screw-HH
30	32128-37	2	Nut-HF
31	3256-28	2	Washer-Flat
32	116-2695	1	Spacer
33	109-8007	4	Link-Adjuster, Deck Lift
34	109-7840	4	Adjuster-Lift, Deck
35	109-8353	4	Trunnion
36	3218-5	4	Nut-Jam


Height-of-Cut Assembly No. 109-7438

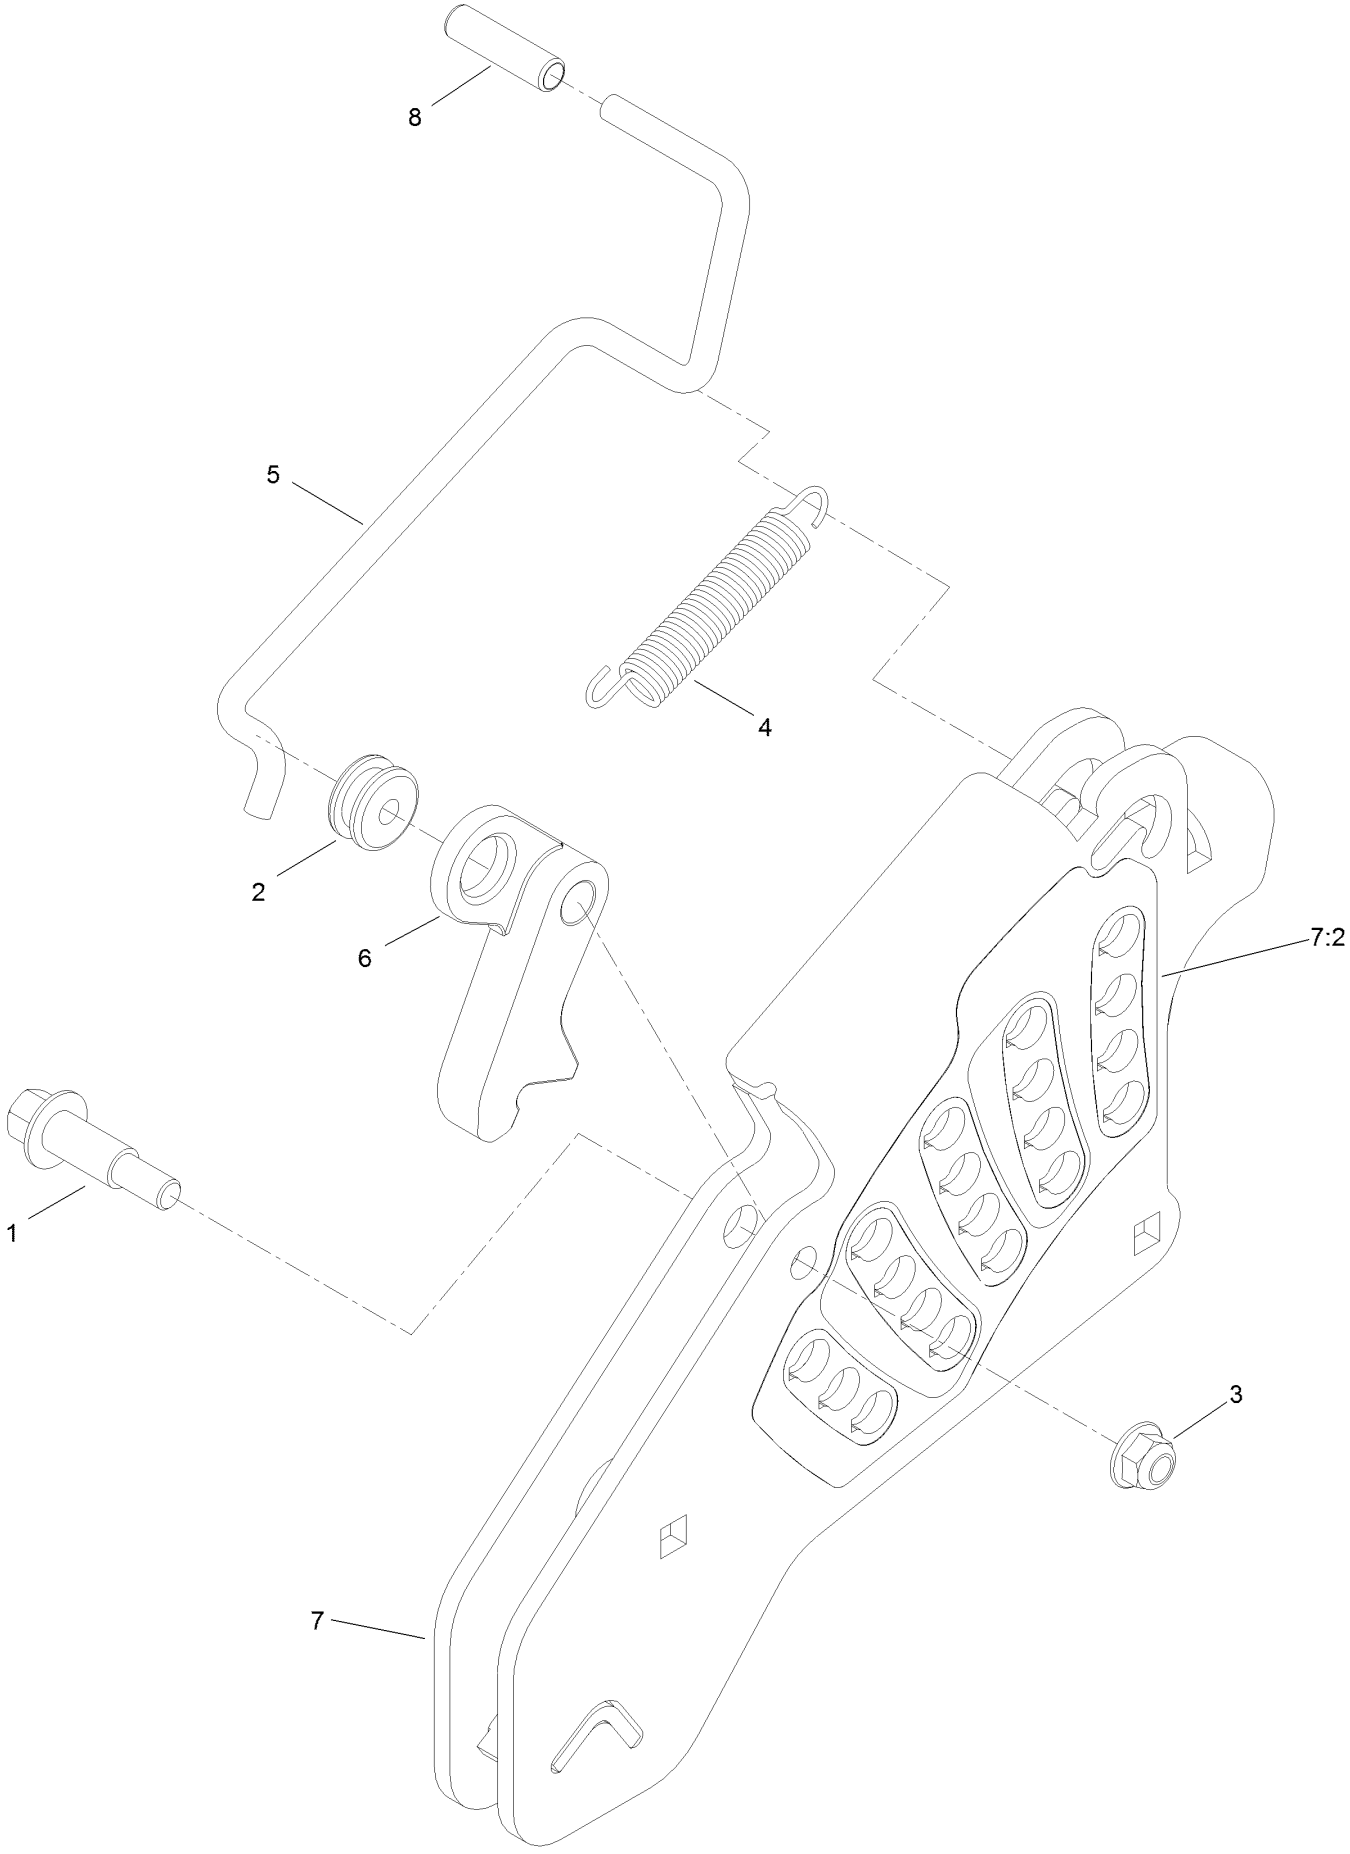

Height-of-Cut Assembly No. 109-7438 (continued)

Ref.	Part Number	Qty.	Description
1	62-1330	1	Bolt-Shoulder
2	109-7130	1	Grommet
3	119-4042	1	Nut-HF, NI
4	109-7124	1	Spring-Extension
5	109-7128	1	Rod-Lock, Transport
6	116-0118	1	Pawl-Transport, HOC
7	109-7335	1	HOC Plate ASM
7:2	126-4398	1	Decal-HOC
8	109-8250	1	Grip-Lever

Engine, Clutch and Muffler Assembly

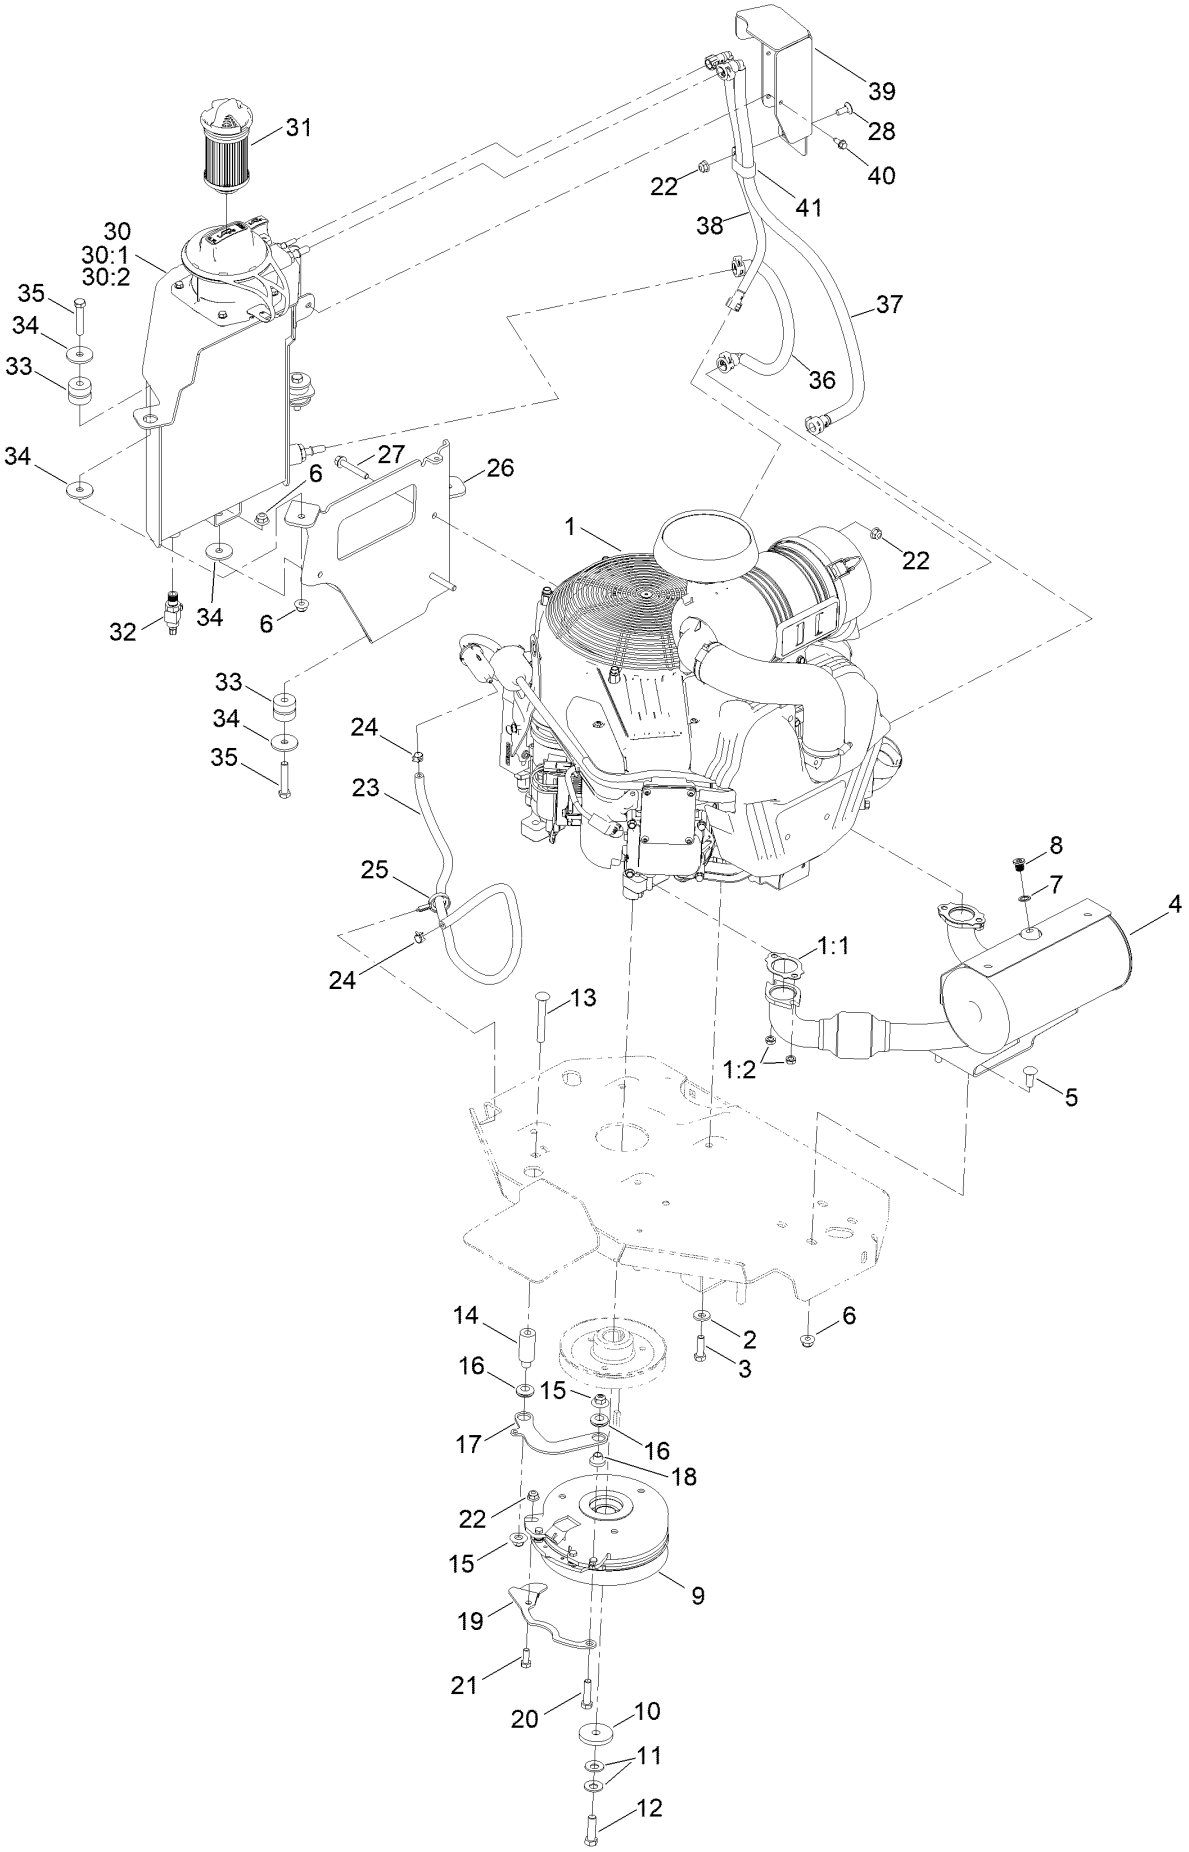


Engine, Clutch and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine Vanguard EFI ■▲
1:1	142-6842	2	Gasket-Exhaust
1:2	142-6843	4	Nut-Hex
2	98-5975	4	Washer-Belleville
3	323-7	4	Screw-HH
4	142-5876	1	Muffler
5	3231-22	4	Screw-CARR
6	119-4042	7	Nut-HF, NI
7	139-3385	1	Washer-Copper
8	139-3390	1	Plug-HSH
9	126-4185	1	Clutch Kit
10	109-6919	1	Washer-Plain
11	1-603610	2	Washer-Spring
12	109-9761	1	Screw-HH
13	3231-42	1	Screw-CARR
14	116-3319	1	Spacer
15	109-6658	2	Nut-Flange, NI
16	93-5108	2	Grommet-Rubber
17	116-3317-01	1	Link-Anchor, Clutch
18	116-3318	1	Spacer
19	116-3331-01	1	Belt-Guide
20	323-8	1	Screw-HH
21	322-4	1	Screw-HH
22	119-4041	4	Nut-HF
23	109-0275	1	Hose-Fuel
24	2412-98	2	Clamp-Hose
25	105-1853	1	Clamp-Hose
26	142-6608	1	Mount-Tank, Oil
27	142-6275	2	Screw-HHF
28	137-3061	1	Bolt-CARR
30	146-5307	1	Reservoir-Oil
30:1	142-7452	1	Oil Dipstick ASM
30:2	142-7453	1	Oil Tank Cap ASM
31	142-6841	1	Filter-Oil
32	103-6602	1	Valve-Oil Drain
33	142-6009	3	Isolator-Tank
34	1-213069	6	Washer
35	323-10	3	Screw-HH
36	142-7420	1	Hose-Supply
37	142-7421	1	Hose-Scavenge
38	142-6393	1	Hose-Vent
39	142-6731-03	1	Guard-Hose
40	32144-10	3	Screw-HWH
41	120-1959	1	Clamp
42	32180-078	1	Clip-Edge ●
99	142-8433	1	Filter, Outer Air ●
99	142-8434	1	Filter, Inner Air ●
99	142-8435	1	Plug, Spark ●
99	163-4159	1	Fuel Filter Kit
99:1	142-7451	1	Filter-Fuel ●
99:2	32180-450	1	Tie-Cable, Double Loop ●
99:3	163-4170	1	Line, Fuel ●

● Not illustrated
▲ Obtain parts from www.briggsandstratton.com

■ Not serviced separately

Deck Assembly

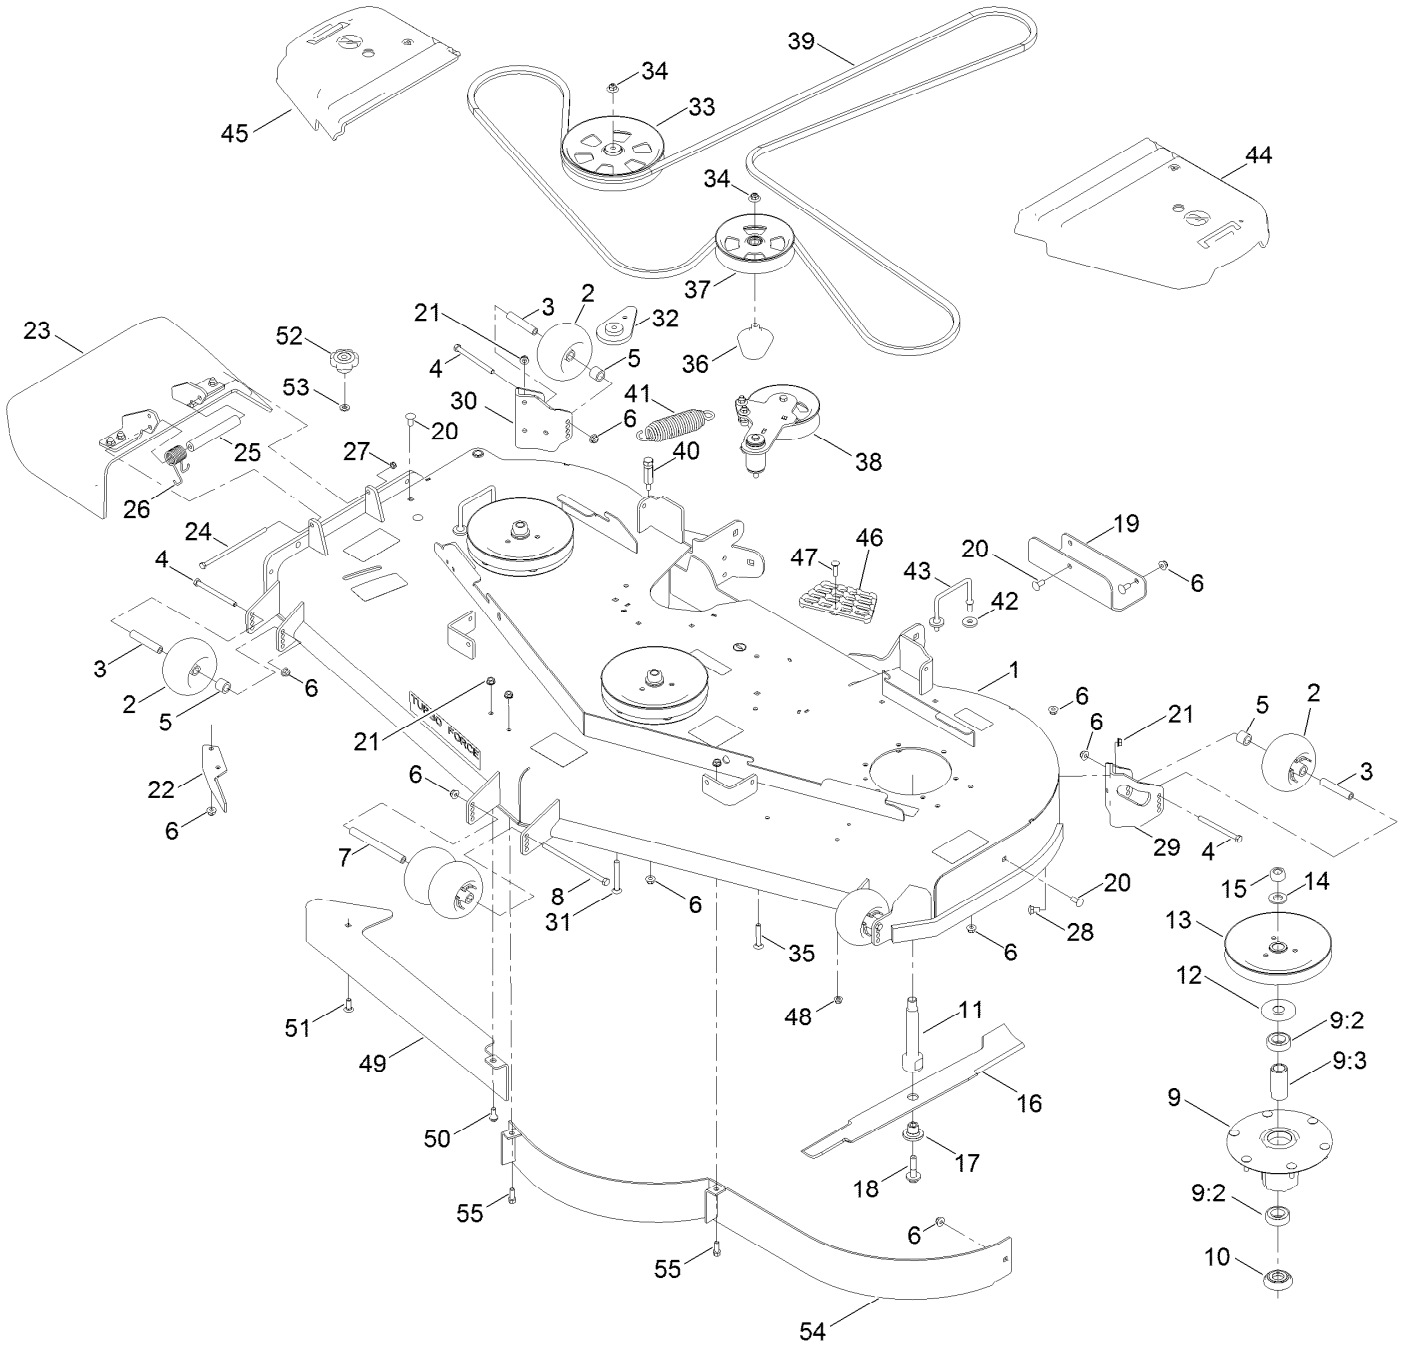


Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-1170	1	Deck Decal ASM
2	1-603299	6	Roller-Scalp, Anti
3	98-7912	4	Tube-Spanner
4	323-23	4	Screw-HH
5	98-7913	4	Tube-Spacer
6	119-4042	34	Nut-HF, NI
7	98-5967	1	Spacer-Wheel
8	108-5388	1	Screw-HH
9	137-9780	3	Spindle ASM
9:2	116-0720	2	Bearing-Ball
9:3	138-6042	1	Spacer-Bearing
10	137-9784	3	Guard-Bottom
11	138-6045	3	Shaft-Spindle
12	103-1330	3	Guard-Bearing, Top
13	138-6060	3	Sheave-Drive, Blade
14	103-2802	3	Washer
15	116-7306	3	Nut-Hex
16	140-1238	3	Blade
17	137-9787	3	Bushing-Hex
18	109-9220	3	Screw-Sems
19	121-7975-01	1	Plate-Skid
20	3231-27	6	Screw-CARR
21	3290-357	9	Nut-HSF
22	106-3216-01	1	Baffle-Discharge
23	108-2792	1	Rubber Deflector ASM
24	322-50	1	Screw-HH
25	105-4622	1	Spacer
26	108-4052	1	Spring-Torsion
27	3296-47	1	Nut-Lock,NI
28	3231-1	6	Screw-CARR
29	106-7354-01	1	Mount-Wheel, LH
30	106-7355-01	1	Mount-Wheel, RH
31	3231-42	1	Screw-CARR
32	109-9416	1	Spacer-Idler
33	132-4734	1	Pulley-Idler,Flat
34	109-6658	2	Nut-Flange, NI
35	3231-40	1	Bolt-CARR
36	109-2872	1	Spacer-Pulley
37	136-5404	1	Pulley-Idler, Flat
38		1	Idler Arm ASM ●
39	109-9023	1	Belt-V
40	114-5867	1	Anchor-Spring, Tall
41	116-6317	1	Spring-Extension
42	1-373034	4	Washer
43	109-6982	2	Wireform-Cover
44	109-6938	1	Cover-Belt, LH
45	116-0094	1	Cover-Belt, RH
46	126-4781-03	1	Step-Deck
47	3230-3	1	Screw-CARR
48	119-4041	1	Nut-HF
49	138-6051-01	1	Plate-Baffle
50	94-7582	1	Bolt-Shoulder
51	3231-22	1	Screw-CARR
52	109-1092	1	Knob
53	100-4852	1	Washer-Hardened
54	114-5843-01	1	Baffle
55	92-1624	2	Screw-HWH Thd Form

● Not serviced separately

Deck Decal Assembly No. 140-1170

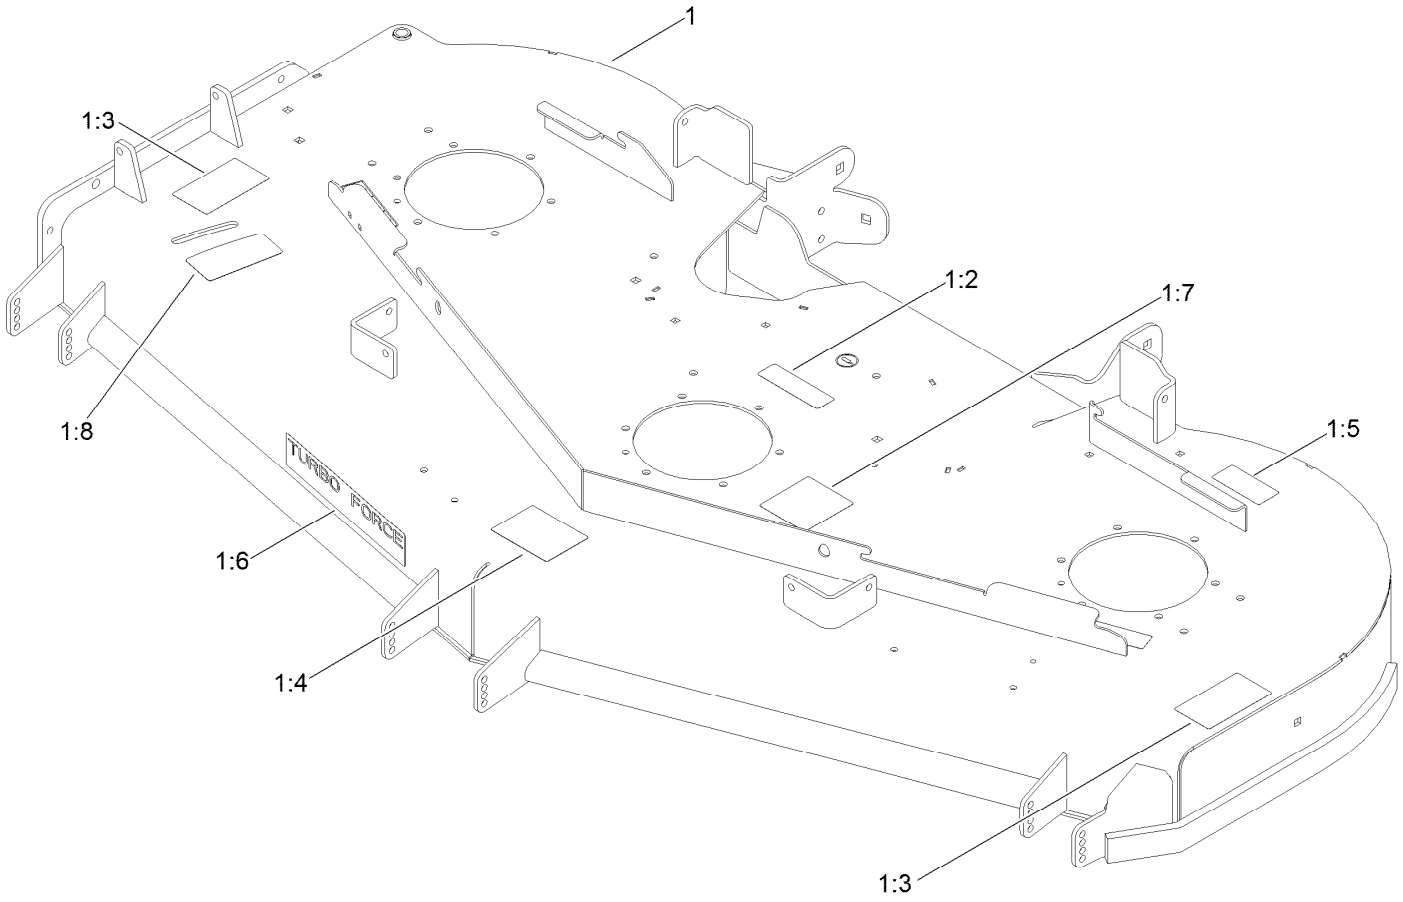


Deck Decal Assembly No. 140-1170 (continued)

Ref.	Part Number	Qty.	Description
1		1	Deck ASM ●
1:2	112-9028	3	Decal-Cover, Missing
1:3	117-3848	2	Decal-Danger
1:4	127-0326	1	Decal-Scalp, Anti
1:5	116-8283	1	Decal-Torque, Bolt
1:6	107-1620	1	Decal
1:7	136-5508	1	Decal-Routing, Deck Belt
1:8	131-1180	1	Decal-Adjustment, Baffle

● Not serviced separately


Rubber Deflector Assembly No. 108-2792

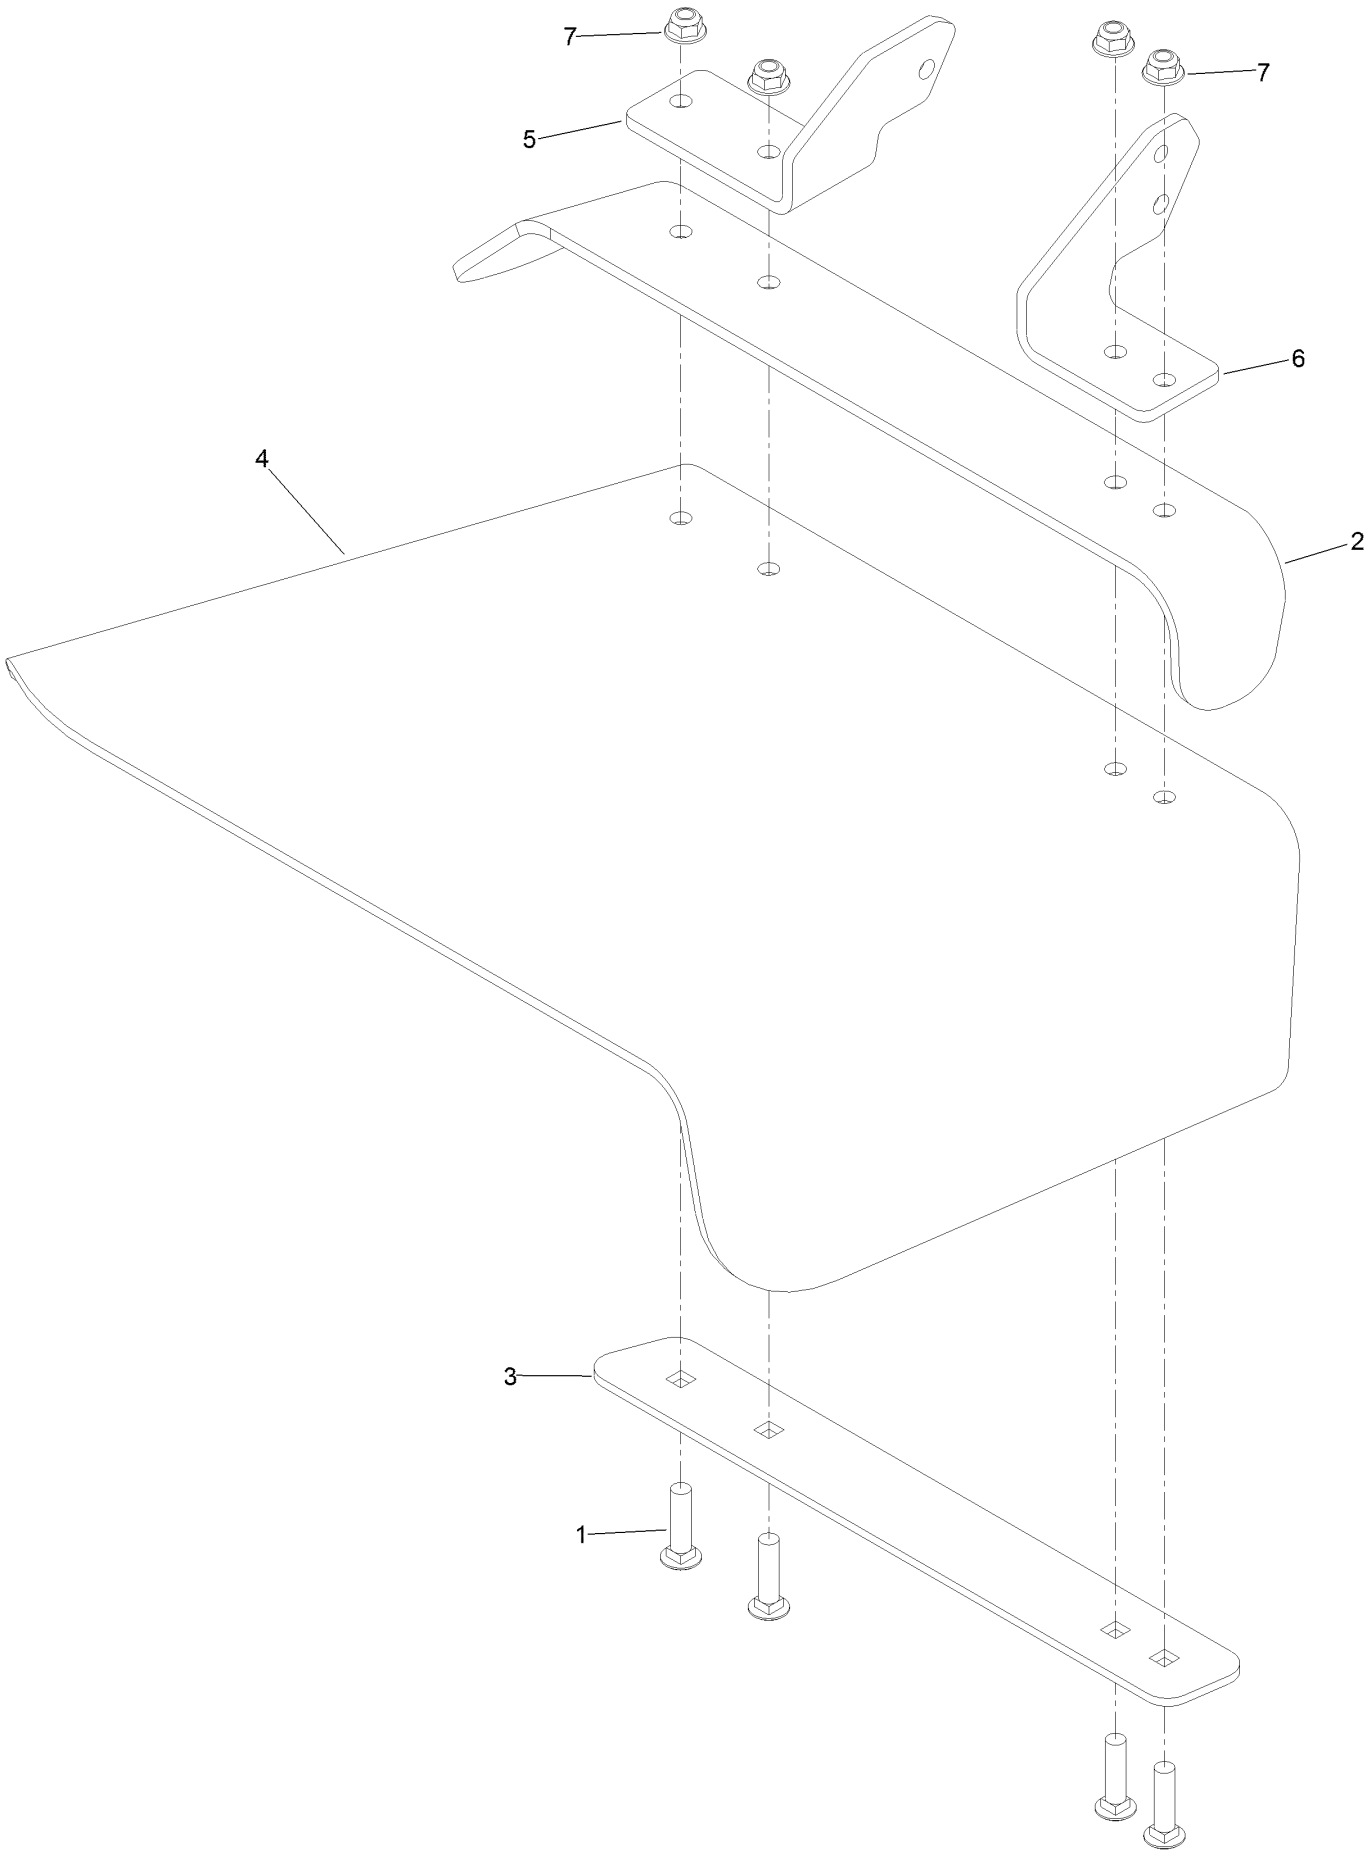

Rubber Deflector Assembly No. 108-2792 (continued)

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	119-4042	4	Nut-HF, NI


Idler Arm Assembly

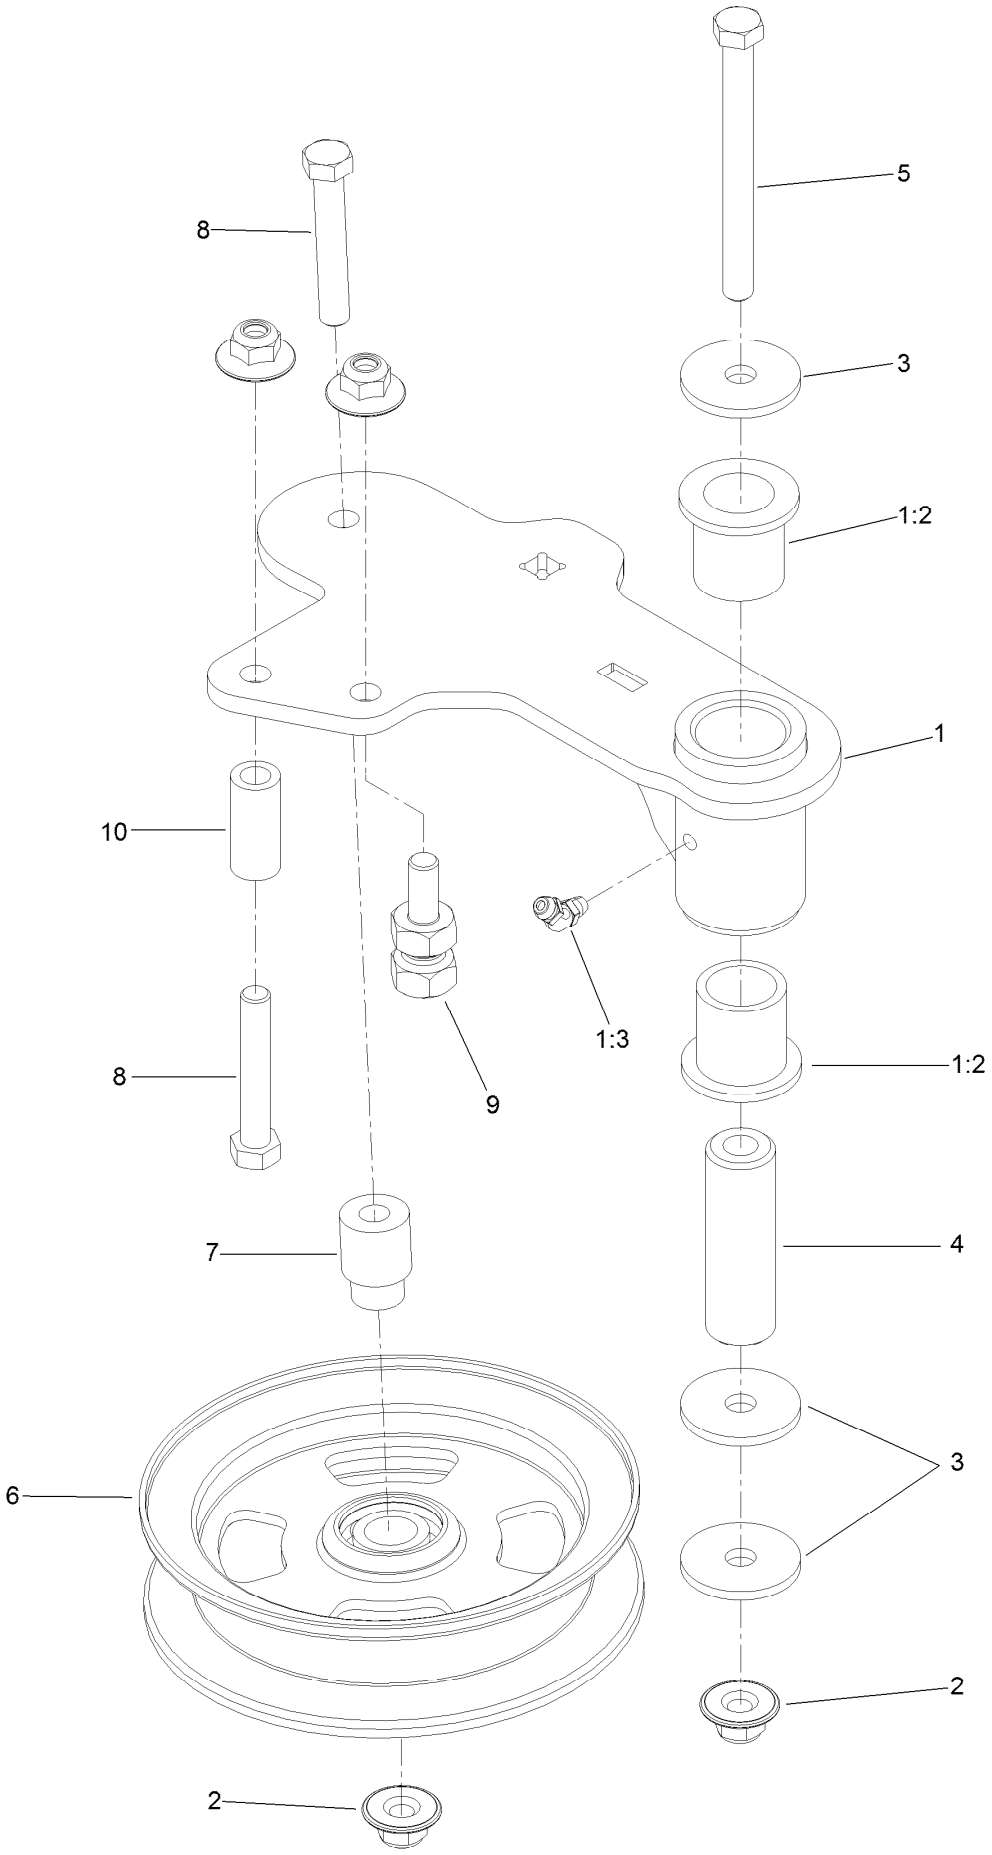

Idler Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	114-5870	1	Idler Arm ASM
1:2	1-303514	2	Bearing-Flanged
1:3	1481	1	Fitting-Grease
2	109-6658	4	Nut-Flange, NI
3	1-213069	3	Washer
4	114-5848	1	Spacer-Plain
5	98-5961	1	Screw-HH
6	132-9425	1	Pulley-Idler, Flat
7	112-4212	1	Mount-Pulley
8	323-11	2	Screw-HH
9	132-4729	1	Anchor-Spring, Short
10	104-0151	1	Spacer

Frame Decal Assembly

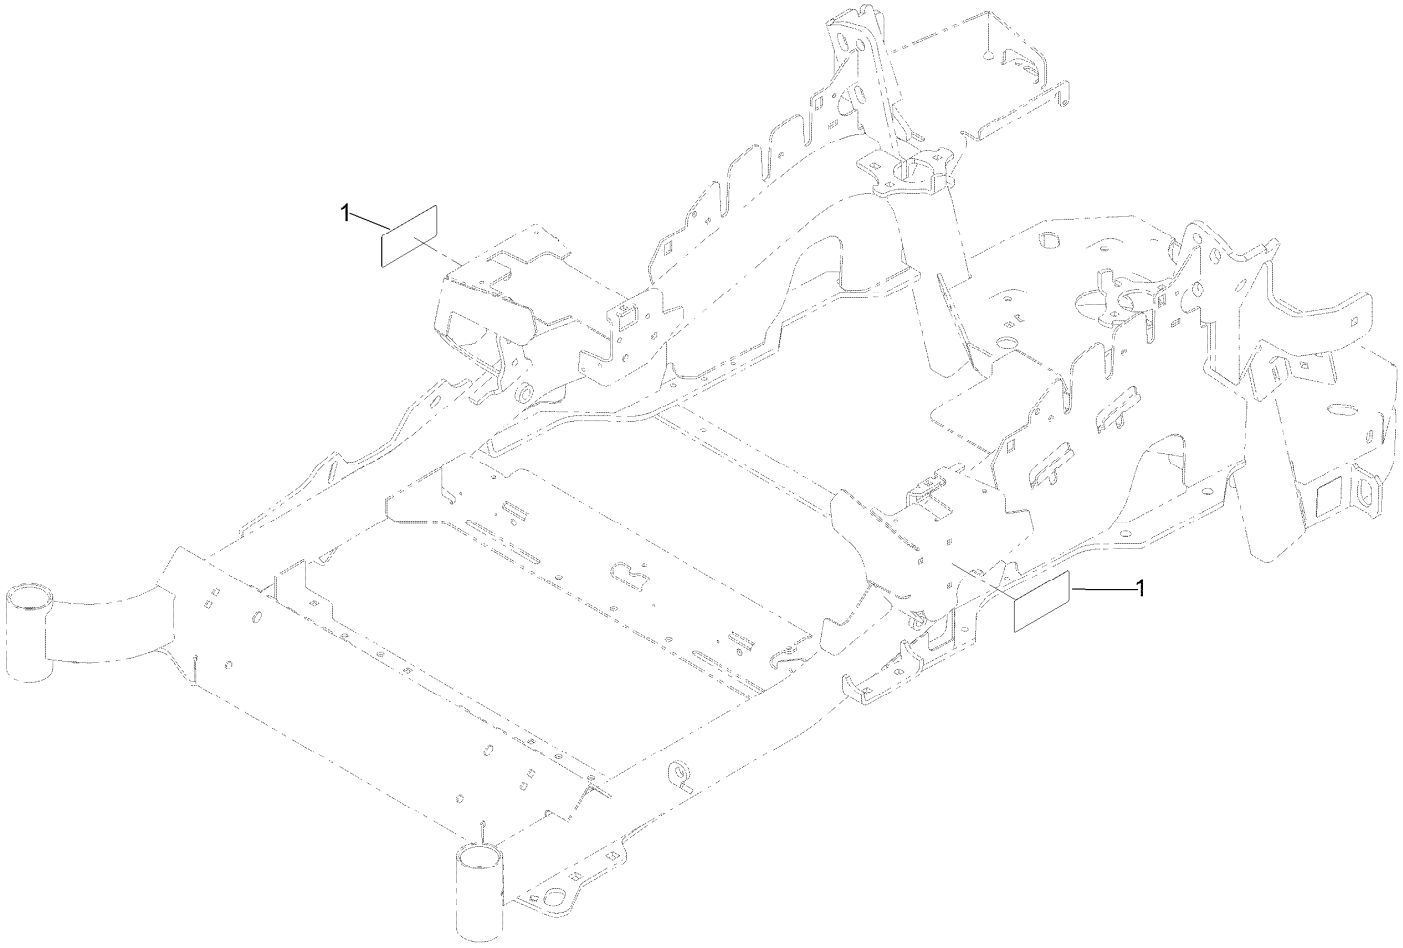

Frame Decal Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	120-5895	2	Decal

Attachments and Accessories

For 72983 — Z Master Professional 6000 Series Riding Mower with 72in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Turbo Baffle Kit	107-1634
Hitch Kit	109-9487
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Roller Striper Kit	115-7480
Light Kit	116-1154
Seat Cover (with Arm Rest)	117-0095
Operator Controlled Discharge Chute Kit	117-3600
Seat Tilt Frame and ISO Mount Kit	121-7596
Toro Rops Lock Kit	126-4064
Jack Kit With Adapter, Zero-Turn-Radius Side-Discharge or Rear-Discharge Riding Mower	126-7282
Jack Kit Adapter, Zero-Turn-Radius Side-Discharge or Rear-Discharge Riding Mower	126-7283
Jack Kit	127-6666
Power Deck Lift Kit	132-5986
Worklight Kit	135-7320
Bucket Mount Kit	137-9216
Trimmer Mount	137-9769
Recycler Kit-G3/GM 3300 72in	139-6659
24x12n12 - Tweel Turf	139-7891
Blade-24.50 High Flow	140-1238
Blade-24.50 Atomic	140-1239
Blade-24.50 Medium Flow	140-4850
Blade-24.50 Low Flow	140-4851
Blade-24.50 Recycler	140-4852
6 Pack-Blade, 24.5 High Flow	140-4872
6 Pack-Blade, 24.5 Med Flow	140-4873
6 Pack-Blade, 24.5 Low Flow	140-4874
6 Pack-Blade, 24.5 Atomic	140-4875
6 Pack-Blade, 24.5 Recycler	140-4876
Weight Kit, Under Toe Board	140-4958
Slope Sensor-Lazer/Z-Master 3000/5000/6000	142-4910
Screen-Spark Arrestor	142-7683
Jack Mount Kit	146-0696
Blade-24.50 High Flow	147-6253
6 Pack-Blade, 24.50 High Flow	147-6257
13inx6.5n6 Caster Tweel Asm	147-6295
Toro Rider Over Seat Bag	490-7317
Toro Deluxe Rider Cover	490-7319
Toro Rider Arm Rest Bag	490-7320
Blower and Drive Kit	78554
72in E-z Vac Triple Bagger	78555
72in E-z Vac Dfs Bagger	78556

Attachments and Accessories (continued)

Filter Minder Gauge 99-4664
Trash Holder Kit TC26



Count on it.