Form Number 3350-855

62in Blower Kit

Groundsmaster® 200 Series Side Discharge Mowers

Model No. 30506 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

PROTOTYPE

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
PPH. . . . . phillips pan head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head
WH. . . . . wing head


Footnotes

❶ Not serviced separately

Contents

Description	Page
Blower Housing and Mount Assembly	 3
Shelf and Deflector Assembly	 4
Pulley and Bumper Assembly	 5
Counterbalance Spring and Front and Back Pivot Bracket Assembly	 6

PROTOTYPE

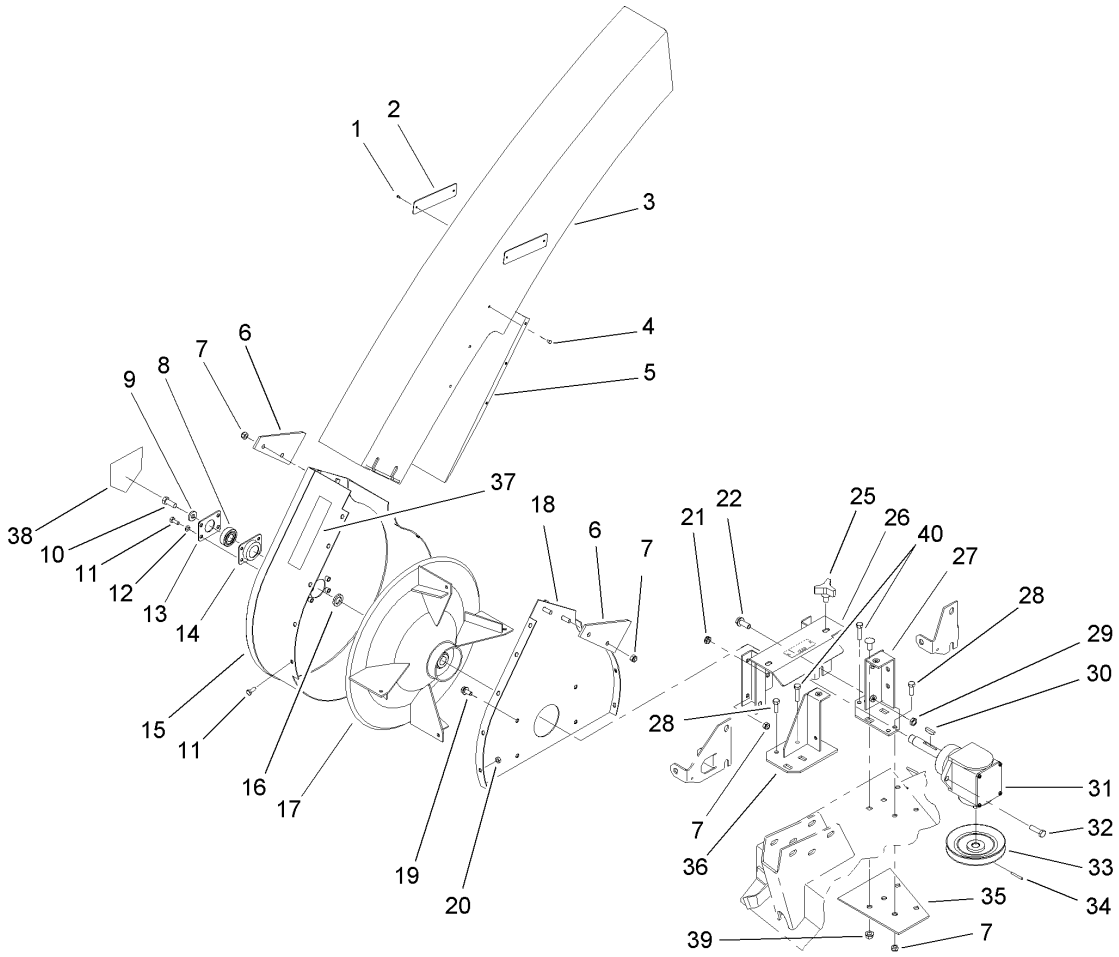


Blower Housing and Mount Assembly

Ref	Part No.	Qty.	Description
1	3290-271	4	Rivet-Pop
2	107-2926	2	Decal-Warning Plate
3	77-6720	1	Chute-Blower
3	80-3720	1	Chute ASM
4	3290-409	6	Rivet
5	77-6730-03	1	Deflector-Chute
6	43-0960-03	2	Brkt-Chute
7	3296-29	11	Nut-Lock, NI
8	38-7820	1	Bearing-Ball
9	43-0940	1	Spacer-Hub, Blower
10	3235-22	1	Screw-HH Lock
11	321-3	13	Screw-HH
12	3253-3	4	Washer-Lock
13	63-9700-03	1	Plate-Cover
14	37-6730	1	Cup-Bearing
15	13-0269	1	Blower Housing ASM
16	63-9710	1	Spacer-Bearing
17	56-4780-03	1	Impeller
18	77-5820-03	1	Plate-Mounting
19	3234-14	4	Screw-HHF
20	3296-42	9	Nut-Lock, NI
21	3296-44	2	Nut-Lock, NI
22	3234-11	2	Screw-HHF
25	62-6520	2	Knob

Ref	Part No.	Qty.	Description
26	99-5187-03	1	Mount-Blower
27	77-5560	1	Bracket-LH
28	322-5	2	Screw-HH
29	3218-3	2	Nut-Jam
30	3257-40	1	Key-Hi Pro
31	53-4530-03	1	Gear Box ASM
32	323-7	2	Screw-HH
33	56-4810-03	1	Pulley
34	32121-8	1	Pin-Roll
35	99-5159-03	1	Plate-Reinforcement
36	99-5177	1	RH Bracket ASM
37	93-7301	1	Decal-Warning
38	106-6753	1	Decal-Danger, Ce
39	3290-357	4	Nut-Flange
40	322-3	2	Screw-HH


PROTOTYPE

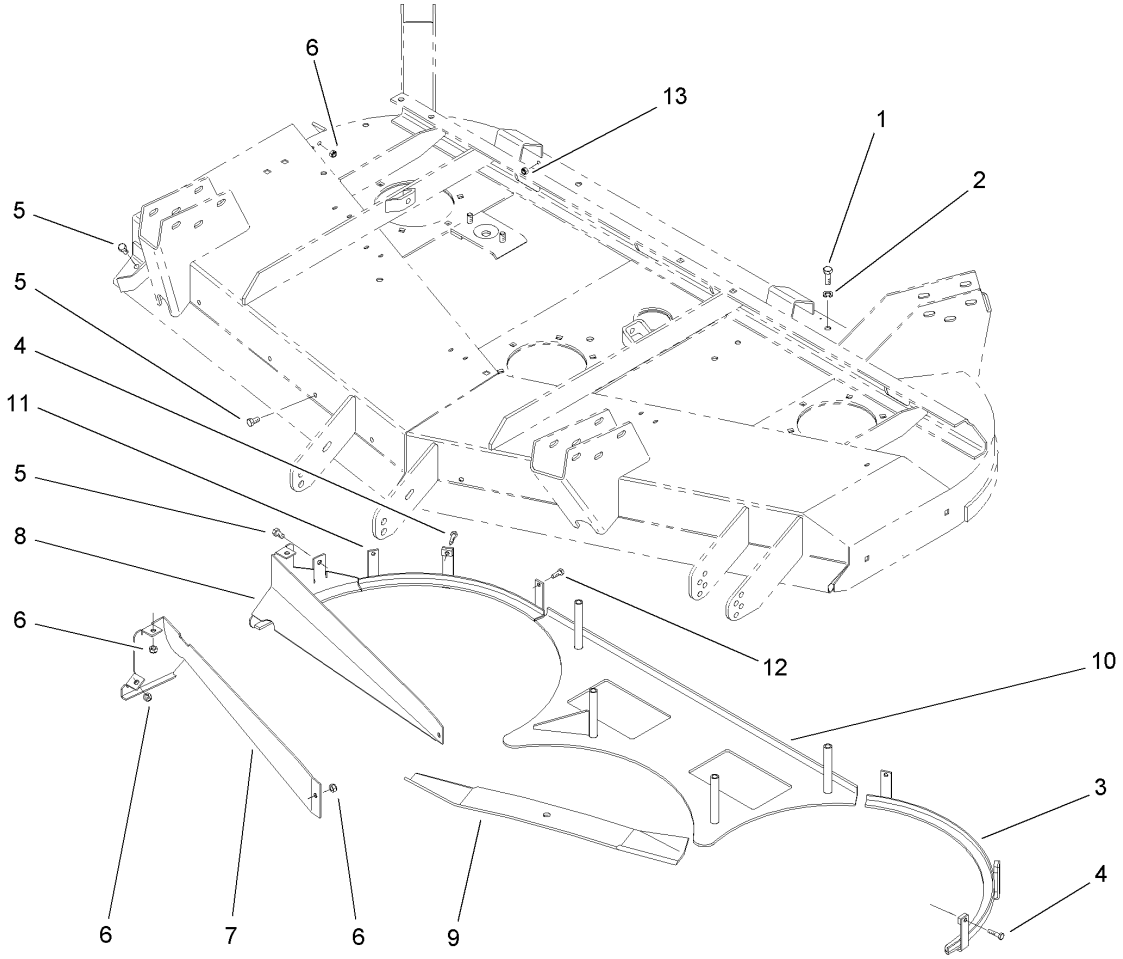

Shelf and Deflector Assembly

Ref	Part No.	Qty.	Description
1	323-6	4	Screw-HH
2	3253-21	4	Washer-Lock
3	77-5930-01	1	Shelf-Bottom, LH
4	321-6	3	Screw-HH
5	322-2	5	Screw-HH
6	3296-29	6	Nut-Lock, NI
7	77-5740-01	1	Deflector-Front
8	77-5670-01	1	Deflector-Rear
9	77-6710-03	3	Blade (21.5in)
10	77-5640-01	1	Shelf-Bottom, Right Rear
11	77-5850-01	1	Shelf-Bottom, RH
12	321-4	3	Screw-HH
13	3296-42	6	Nut-Lock, NI

PROTOTYPE

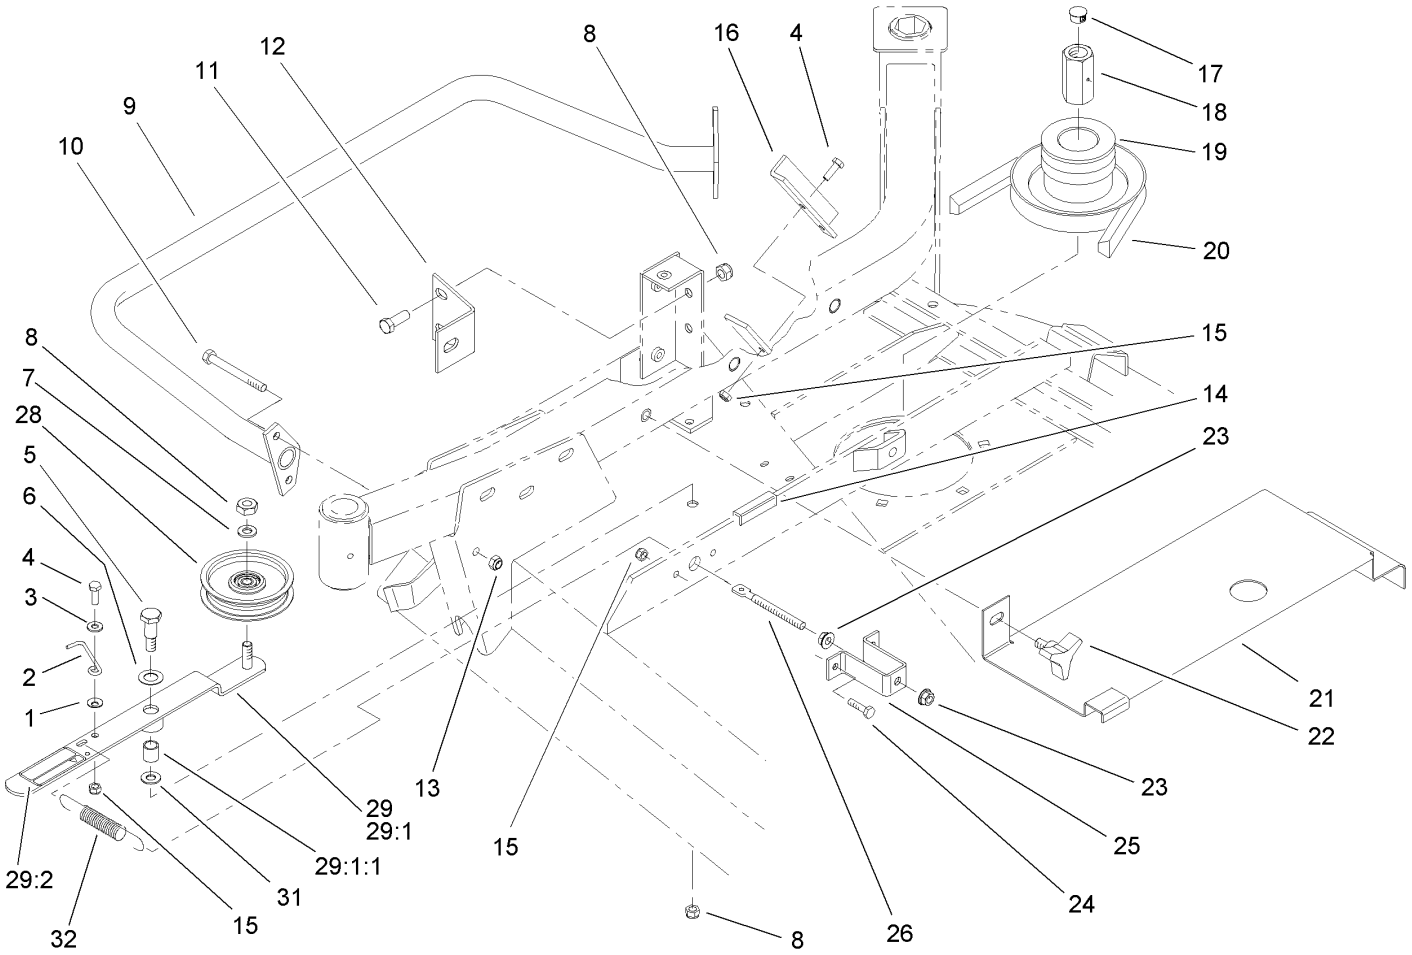


Pulley and Bumper Assembly

Ref	Part No.	Qty.	Description
1	3290-451	1	Washer-Belleville
2	99-5183	1	Hook
3	3256-22	1	Washer-Flat
4	321-4	3	Screw-HH
5	80-3250	1	Screw-Pivot
6	257-10	1	Washer-Thrust
7	3256-38	1	Washer-Flat
8	3296-59	3	Nut-Lock, NI
9	99-5166-03	1	Bumper ASM
10	322-14	4	Screw-HH
11	323-6	2	Screw-HH
12	99-5176-03	1	Brace-Blower
13	3296-29	4	Nut-Lock, NI
14	70-2040	1	Trim
15	3296-42	5	Nut-Lock, NI
16	80-3550-03	1	Stop-Deflector
17	59-5310	1	Nut-Cover
18	59-5190	1	Nut-Pulley
19	77-5420-03	1	Pulley-Splined
20	80-3590	1	V-Belt
21	99-5169-01	1	Cover-Belt
22	62-6520	1	Knob
23	32128-20	2	Nut-HF
24	321-6	2	Screw-HH

Ref	Part No.	Qty.	Description
25	99-5165-01	1	Bracket-Spring
26	80-3560	1	Rod-Threaded
28	56-4920-01	1	Pulley-Idler
29	80-3310	1	Idler Arm ASM
❶29:1		1	Idler Arm And Bushing ASM
29:1:1	256-206	1	Bushing
29:2	93-6696	1	Decal-Warning
31	257-9	1	Washer-Thrust
32	37-8880	1	Spring-Traction

PROTOTYPE

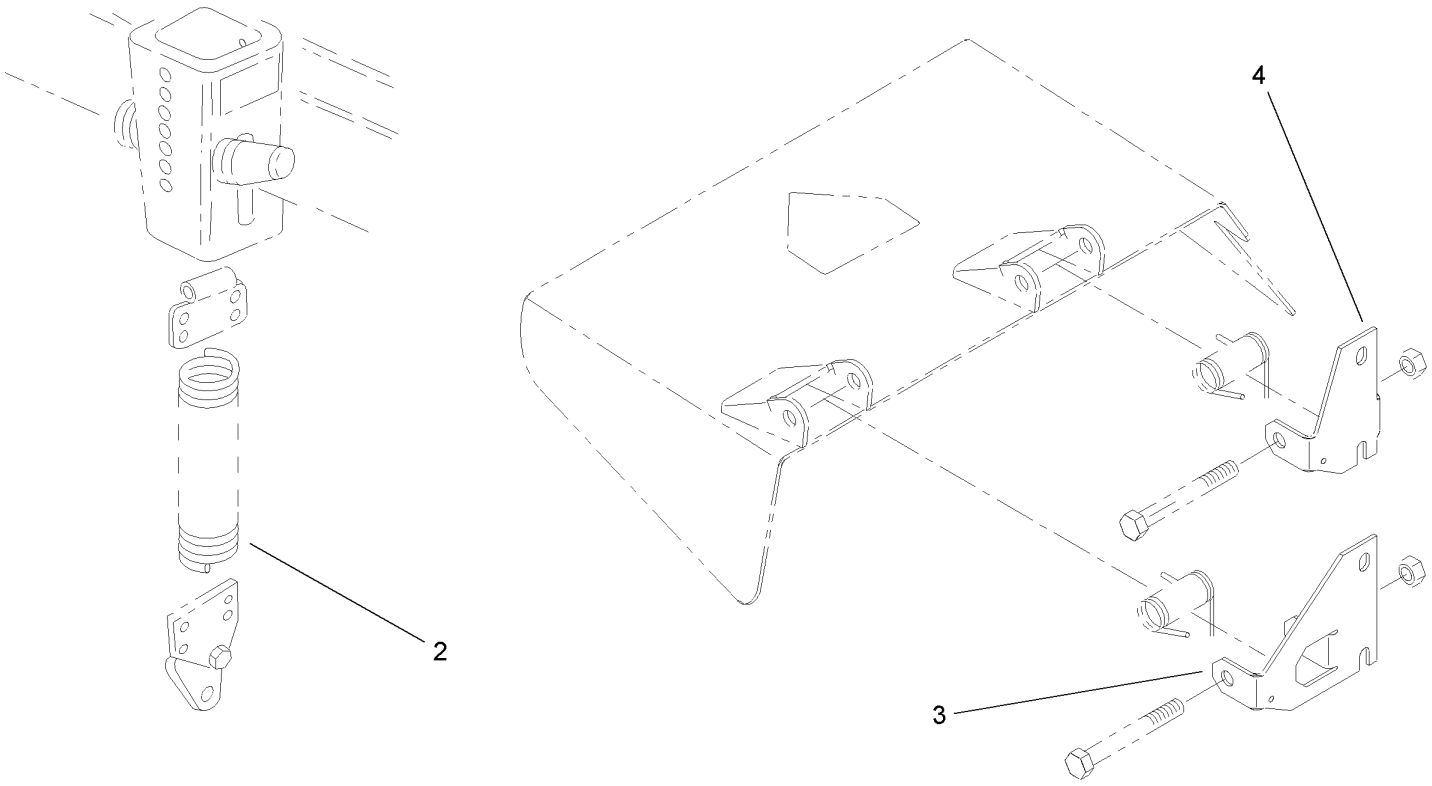

Counterbalance Spring and Front and Back Pivot Bracket Assembly

Ref	Part No.	Qty.	Description
2	66-8390-03	1	Spring-Extension
3	80-2810-03	1	Bracket-Pivot, Front
4	80-2820-03	1	Bracket-Pivot, Rear

PROTOTYPE

NOTES

PROTOTYPE



PROTOTYPE