Form No. 3483-331 Rev A

TORO®

Count on it.

Parts Catalog

Seatbelt Alarm Kit

Groundsmaster® 4500, 4700, or Reelmaster® 7000 Series Traction Unit

Model No. 50262

Register at www.Toro.com.
Original Instructions (EN)

CE

3483-331 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Seatbelt Alarm Kit Assembly Groundsmaster 4500 or 4700 Installation 4
Seatbelt Alarm Kit Assembly Reelmaster 7000 Series Installation 6
Wire Harness Assembly No. 122-4518. 8
Proximity Sensor Assembly No. 115-5300 10

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Seatbelt Alarm Kit Assembly
Groundsmaster 4500 or 4700 Installation

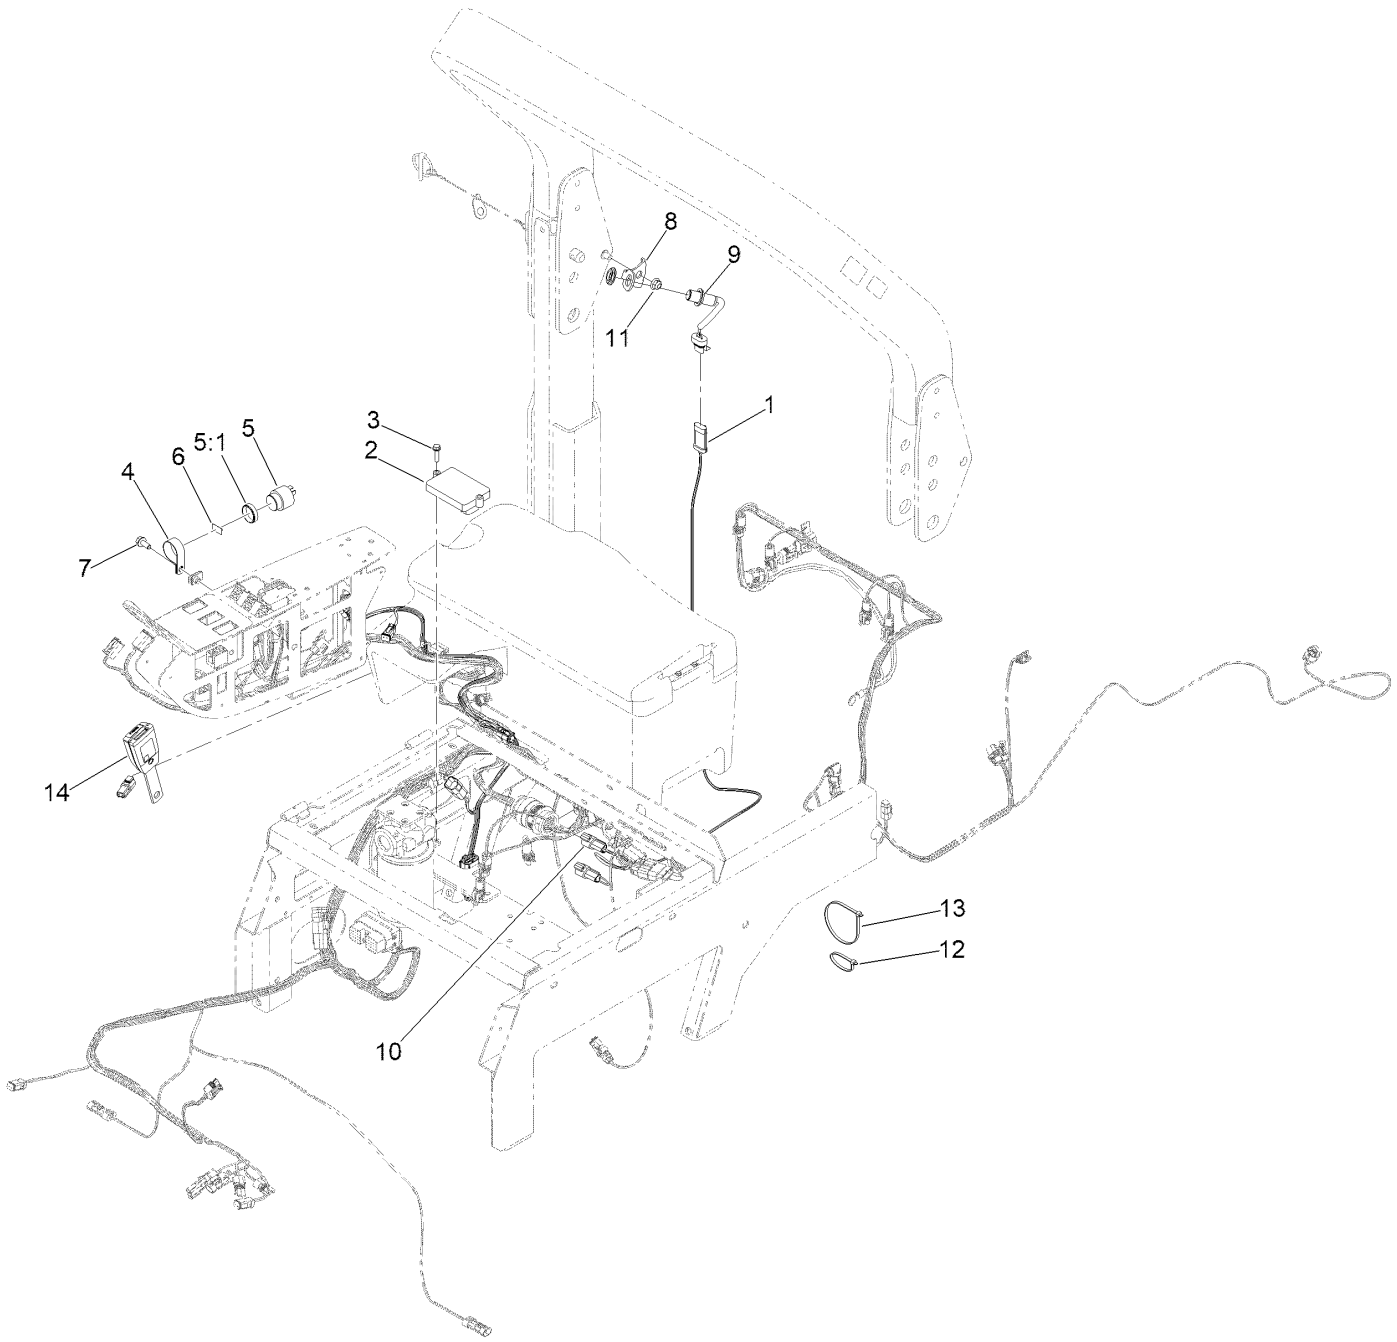

Seatbelt Alarm Kit Assembly
Groundsmaster 4500 or 4700 Installation (continued)

Ref.	Part Number	Qty.	Description
1	122-4518	1	Harness-Wire, Seatbelt Warning
2	122-4414	1	Fasm, Tsm-1201
3	32144-86	2	Screw-HWHTF
4	2412-74	1	R-Clamp
5	80-9330	1	Audio Alarm ASM
5:1	104-5107	1	Nut-Plastic, Knurled
6	164-7051	1	Decal-Cover, Buzzer
7	3234-5	1	Screw-HHF
8	161-8966-03	1	Bracket-Sensor, ROPS
9	115-5300	1	Proximity Sensor ASM
10	122-4610	1	Harness-Wire, Seatblt Warning
11	119-4042	1	Nut-HF, NI
12	3290-378	6	Tie-Cable
13	3290-379	2	Tie-Cable
14	161-8975	1	Buckle-Seatbelt


Seatbelt Alarm Kit Assembly
Reelmaster 7000 Series Installation

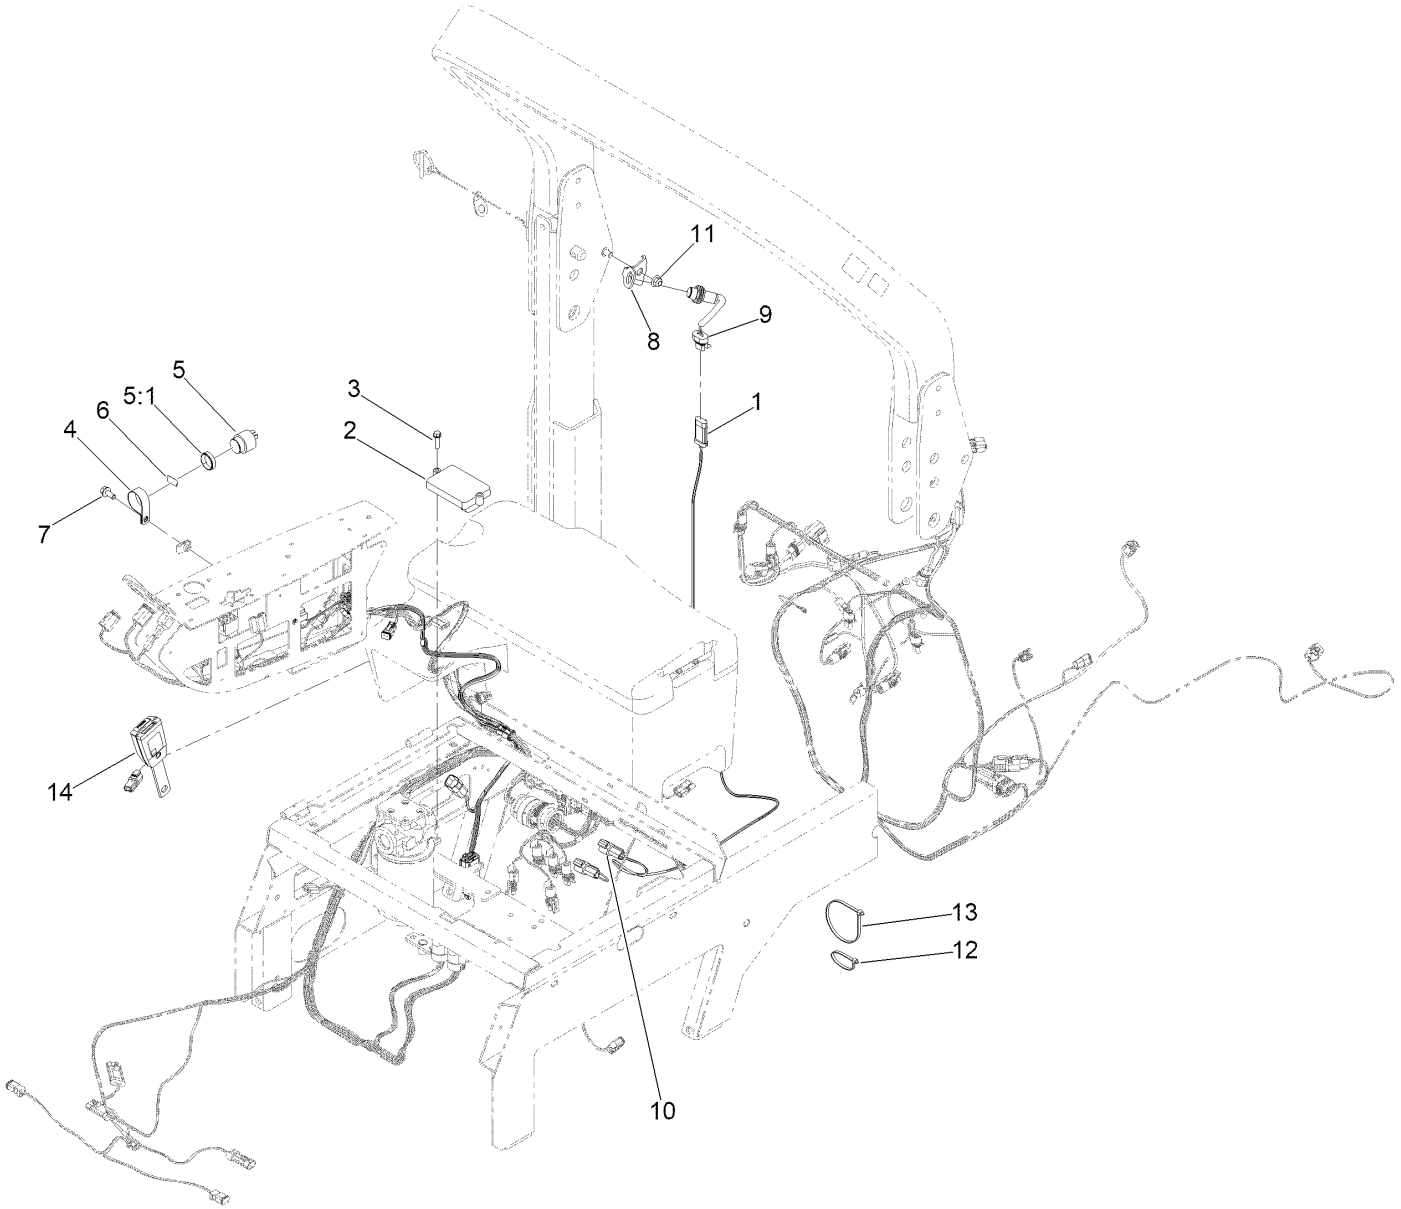

Seatbelt Alarm Kit Assembly
Reelmaster 7000 Series Installation (continued)

Ref.	Part Number	Qty.	Description
1	122-4518	1	Harness-Wire, Seatbelt Warning
2	122-4414	1	Fasm, Tsm-1201
3	32144-86	2	Screw-HWHTF
4	2412-74	1	R-Clamp
5	80-9330	1	Audio Alarm ASM
5:1	104-5107	1	Nut-Plastic, Knurled
6	164-7051	1	Decal-Cover, Buzzer
7	3234-5	1	Screw-HHF
8	161-8966-03	1	Bracket-Sensor, ROPS
9	115-5300	1	Proximity Sensor ASM
10	122-4610	1	Harness-Wire, Seatblt Warning
11	119-4042	1	Nut-HF, NI
12	3290-378	6	Tie-Cable
13	3290-379	2	Tie-Cable
14	161-8975	1	Buckle-Seatbelt


Wire Harness Assembly No. 122-4518

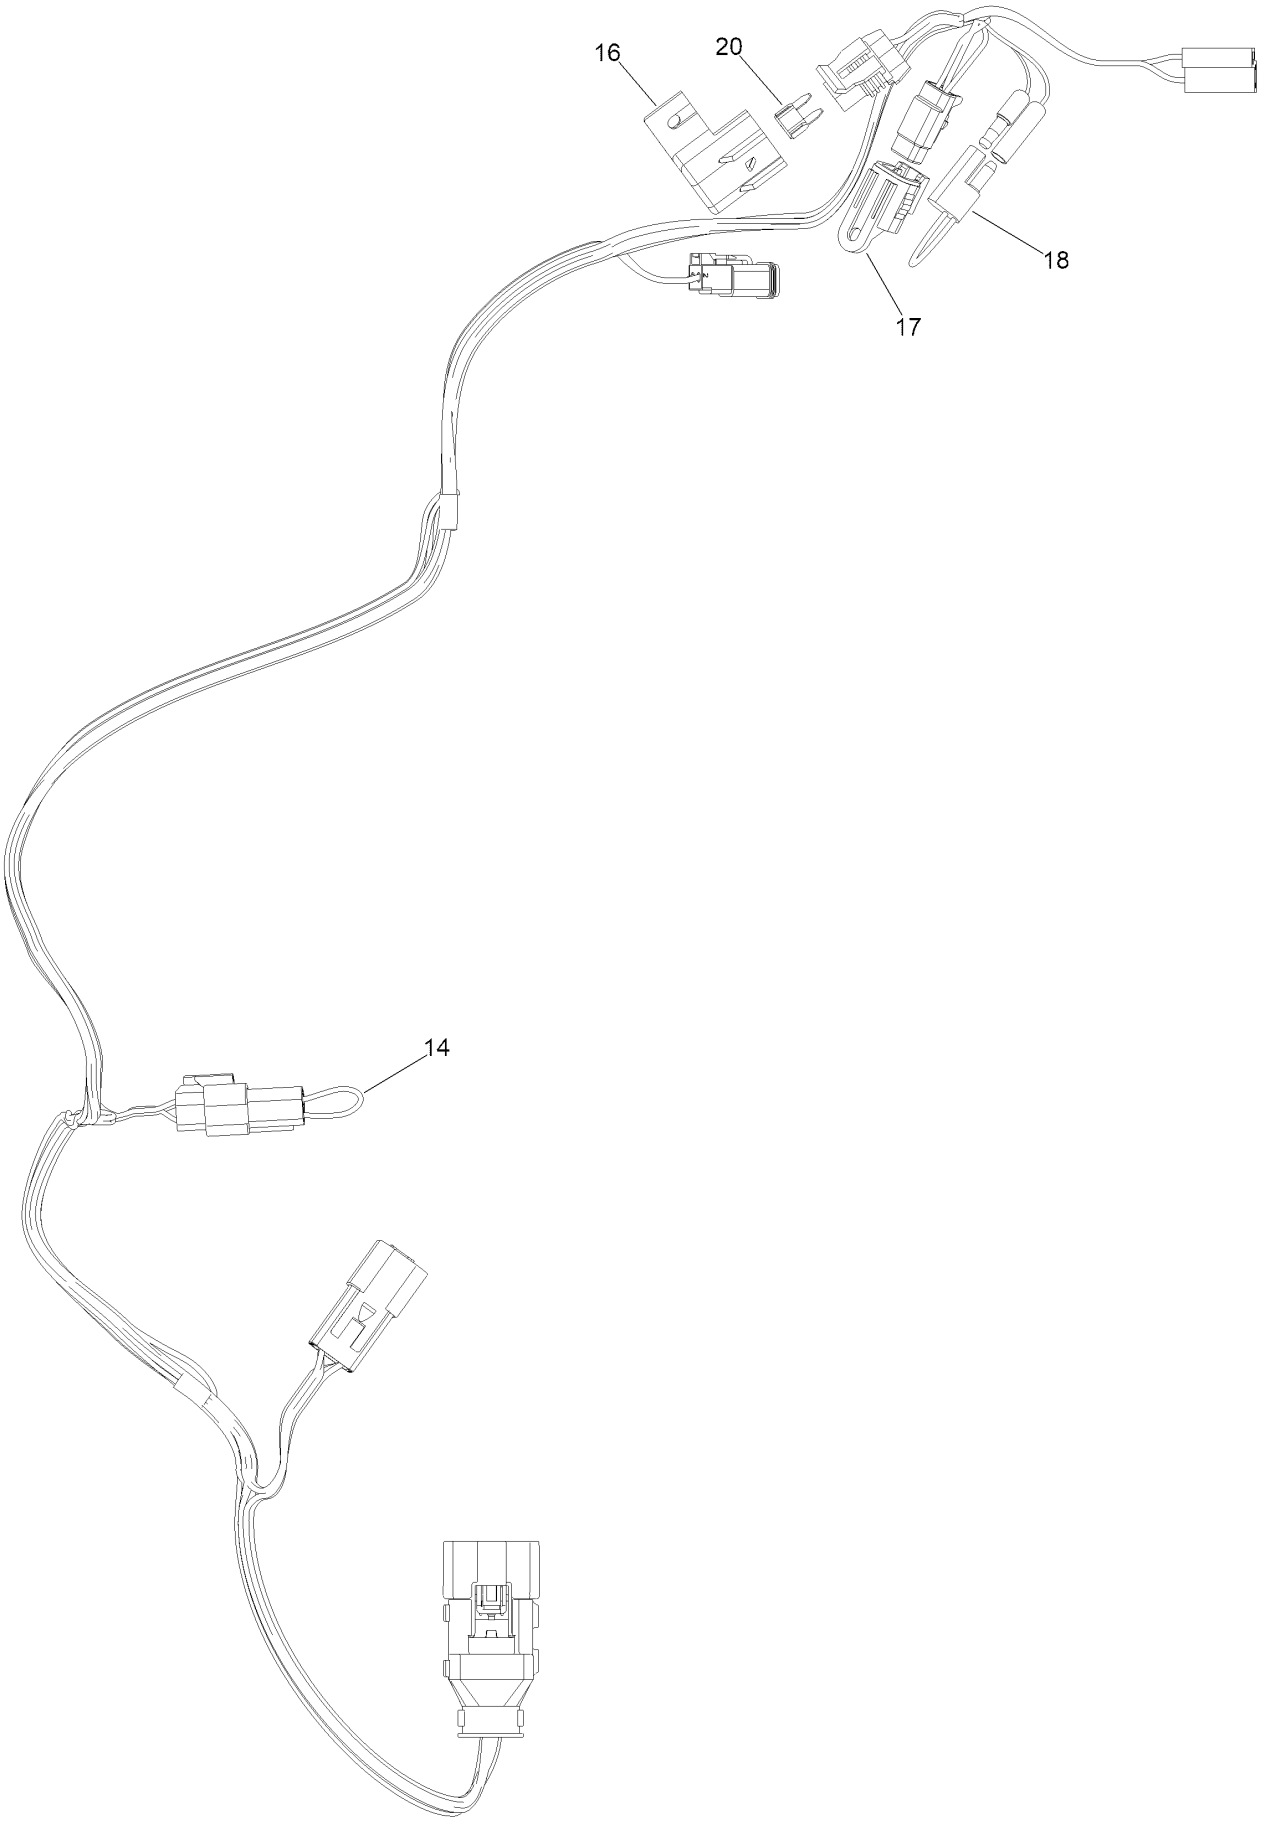

Wire Harness Assembly No. 122-4518 (continued)

Ref.	Part Number	Qty.	Description
14	122-4533	1	Harness-Wire, Seatbelt Warning
16	32180-101	1	Cover-Fuse, Single
17	32180-691	1	Cap- Dust, 2 Way
18	32180-416	1	Cap-Tethered
20	121-8861	1	Fuse-Mini Blade, 2 Amp

Proximity Sensor Assembly No. 115-5300

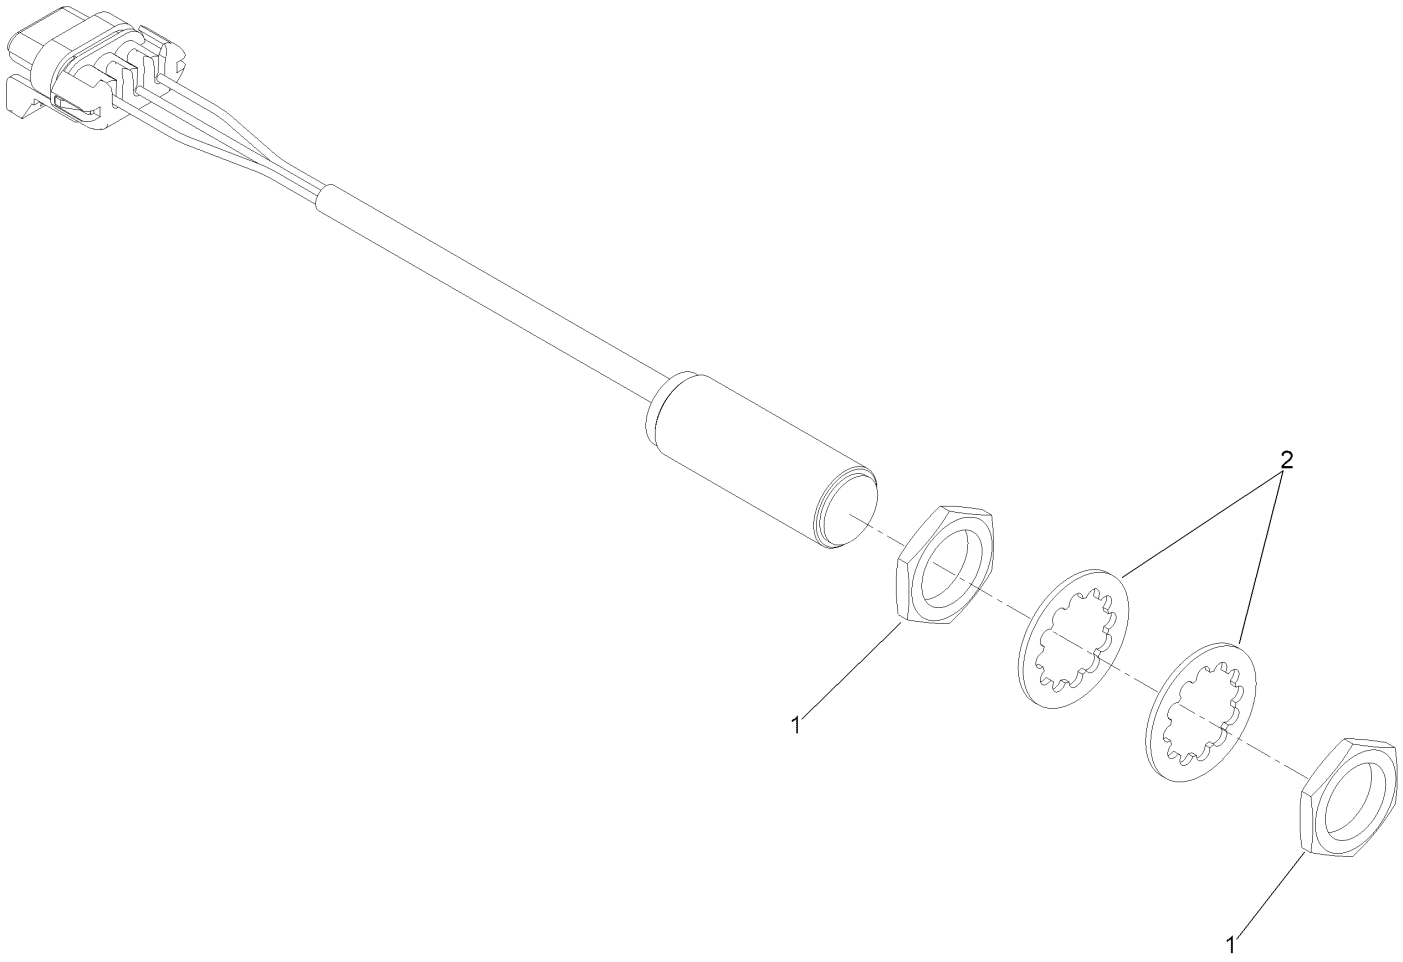

Proximity Sensor Assembly No. 115-5300 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	117-3207	2	Nut-Hex
2	117-3208	2	Washer-Lock, Internal Tooth



Count on it.