Form Number 3352-121

Mid-Size ProLine, T-Bar, Gear Drive
15 HP with 44in Side Discharge Mower

Model No. 30326 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine Installation Assembly	3
Fuel Tank Assembly	4
Lower Control Assembly	5
Transmission Drive Assembly	6
Wheel Drive and Brake Assembly	7
Upper Handle Assembly	8
Control Panel Assembly	9
Carrier Frame Assembly	10
Spindle, Pulley and Belt Assembly	11
Spindle Assembly No. 106-0786	12
Spindle Assembly No. 106-0784	13
Deck Assembly	14
Deflector Assembly No. 107-4194	15
Drive Belt and Tensioner Assembly	16
Cylinder and Crankcase Assembly Kawasaki FH430V-AS28	17
Piston and Crankshaft Assembly Kawasaki FH430V-AS28	18
Valve and Camshaft Assembly Kawasaki FH430V-AS28	19
Lubrication Equipment Assembly Kawasaki FH430V-AS28	20
Cooling Equipment Assembly Kawasaki FH430V-AS28	21
Electrical Equipment Assembly Kawasaki FH430V-AS28	22
Control Euipment Assembly Kawasaki FH430V-AS28	23
Carburetor Assembly Kawasaki FH430V-AS28	24
Air Filter and Muffler Assembly Kawasaki FH430V-AS28	25
Fuel Valve Assembly Kawasaki FH430V-AS28	26
Starter Assembly Kawasaki FH430V-AS28	27
Decal Assembly Kawasaki FH430V-AS28	28
Attachments and Accessories List	29

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PPH. . . . . phillips pan head
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
ROPS. . . . . roll over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard

Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Obtain parts from your local Kawasaki dealer

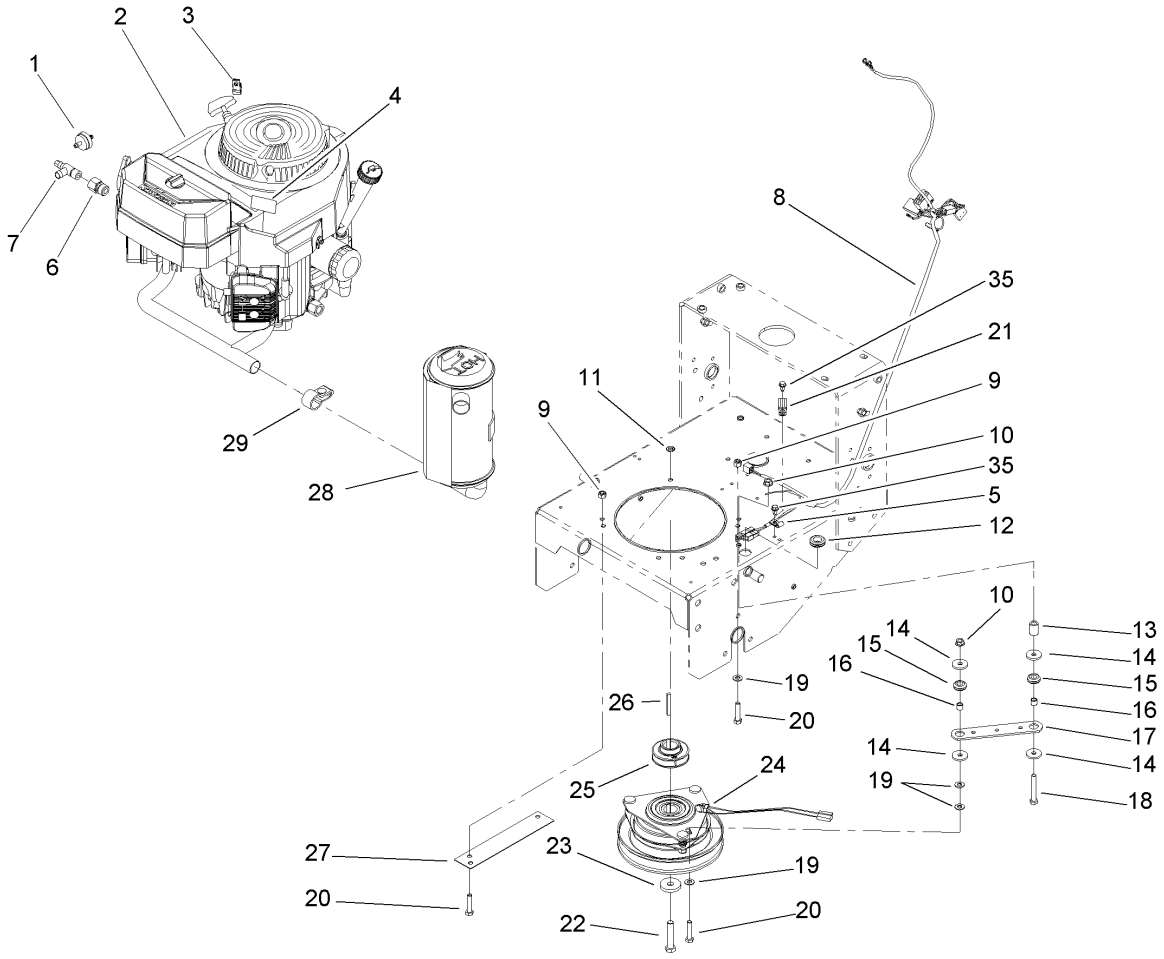

Engine Installation Assembly

Ref	Part No.	Qty.	Description
1	56-6360	1	Filter-Fuel
❷2		1	Engine-Kawasaki, Fh430v-As28
3	2412-87	1	Clamp-Cable
4	106-0699	1	Decal-Warning, Hot Surfaces
5	2412-72	1	Clip-Closed, Insulated
6	103-1966	1	Adapter
7	103-1965	1	Valve-Drain, Oil
8	104-8137	1	Harness-Wire
9	3296-29	4	Nut-Lock, NI
10	32128-20	2	Nut-HF
11	3255-8	1	Washer-Lock
12	237-124	1	Grommet
13	104-6373	1	Tube-Retainer
14	1-613235	4	Washer
15	1-633630	2	Grommet-Brake
16	1-633545	2	Spacer
17	1-633543-03	1	Strap-Clutch, Brake
18	322-11	1	Screw-HH
19	3256-23	5	Washer-Flat
20	322-7	5	Screw-HH
21	2412-134	1	R-Clamp
22	3212-9	1	Screw-HH
23	107-4136	1	Washer
24	105-2635	1	Clutch / Brake

Ref	Part No.	Qty.	Description
25	107-4112	1	Pulley-Drive
26	608006	1	Key-Square
27	94-5847-01	1	Cover-Pulley
28	100-6467	1	Muffler
29	103-5465	1	Clamp-Muffler
35	12-3270	2	Screw
❶99	103-1964	1	Hose-Drain, Oil

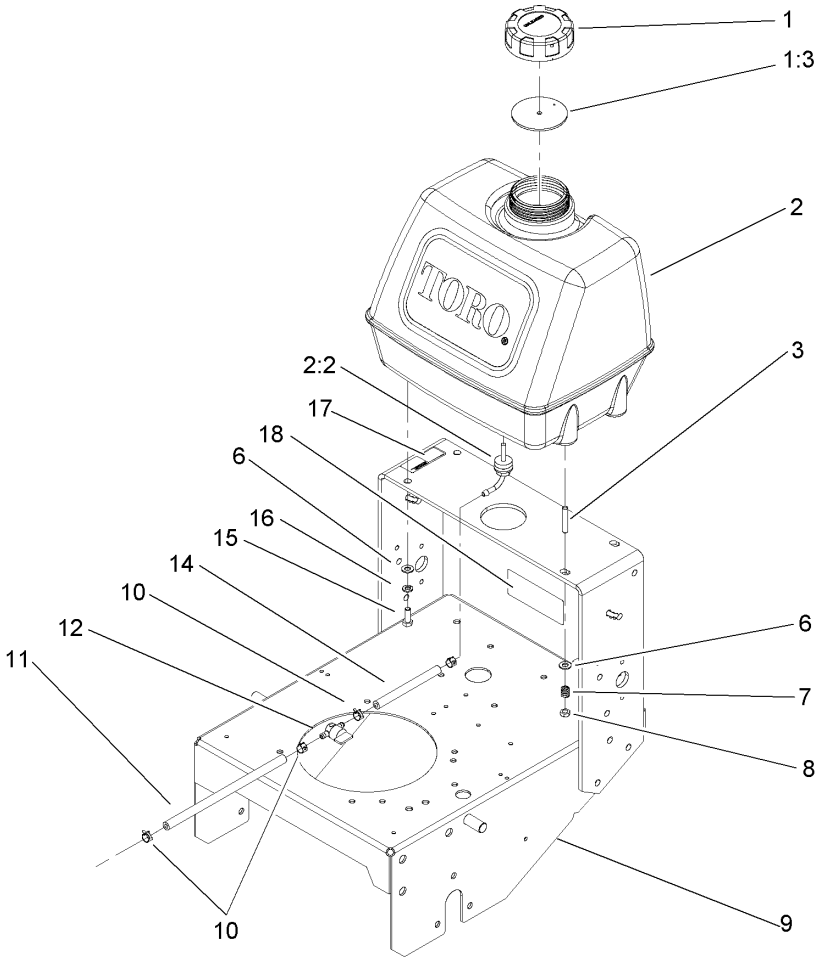

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	104-8121	2	Stud-Threaded
6	3256-23	4	Washer-Flat
7	1-633349	2	Spring-Tank, Fuel
8	3296-47	2	Nut-Lock, NI
9	106-0546-01	1	Gear Frame ASM
10	2412-98	4	Clamp
11	47-2982	1	Hose-Fuel
12	1-603770	1	Valve-Fuel
14	47-2980	1	Hose-Fuel
15	322-4	2	Screw-HH
16	3253-4	2	Washer-Lock
17	95-2814	1	Decal-Shut Off, Fuel
18	98-0776	1	Decal-Caution

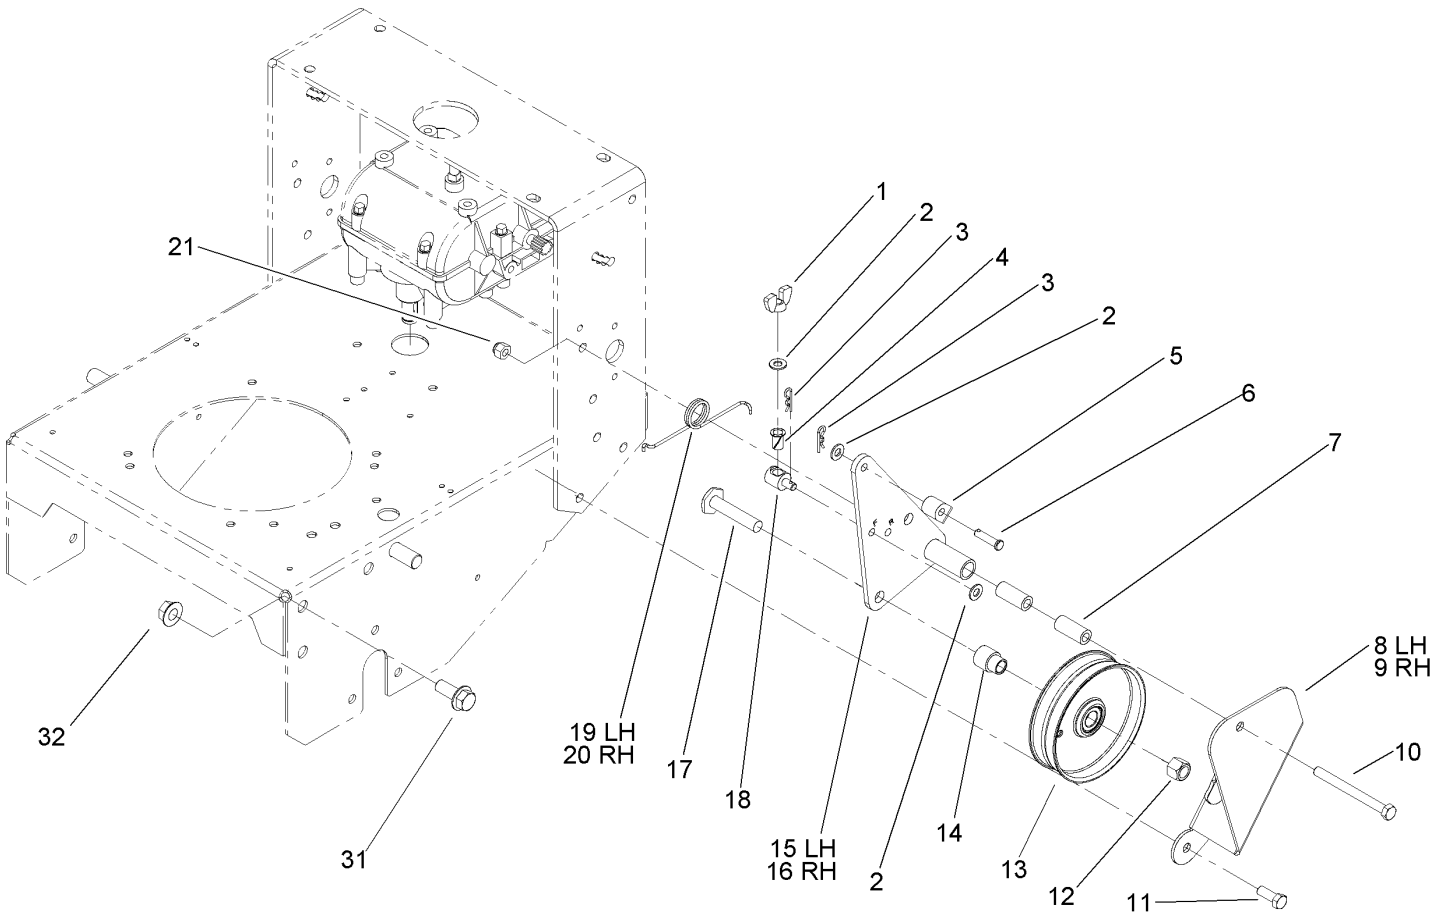

Lower Control Assembly

Ref	Part No.	Qty.	Description
1	32103-25	2	Nut-Wing
2	3256-23	6	Washer-Flat
3	3290-307	4	Pin-Hair
4	52-2890	2	Bushing-Nylon
5	74-0521	2	Fitting-Rod
6	283-6	2	Pin-Clevis
7	74-0040	4	Spacer-Pivot, Idler
8	67-6380-01	1	Bracket-Support, LH
9	67-6370-01	1	Bracket-Support, RH
10	323-16	2	Screw-HH
11	323-6	4	Screw-HH
12	3296-23	2	Nut-Lock, NI
13	95-2800	2	Pulley-Idler
14	95-2801	2	Spacer-Pulley
15	74-0220-01	1	Bracket-Idler, LH
16	74-0230-01	1	Bracket-Idler, RH
17	51-4450	2	Screw-Leveler
18	68-9690	2	Fitting-Rod
19	51-4380	1	Spring-Torsion, LH
20	51-4370	1	Spring-Torsion, RH
21	3296-39	6	Nut-Lock, NI
31	3234-32	6	Screw-HHF
32	32128-23	6	Nut-HF

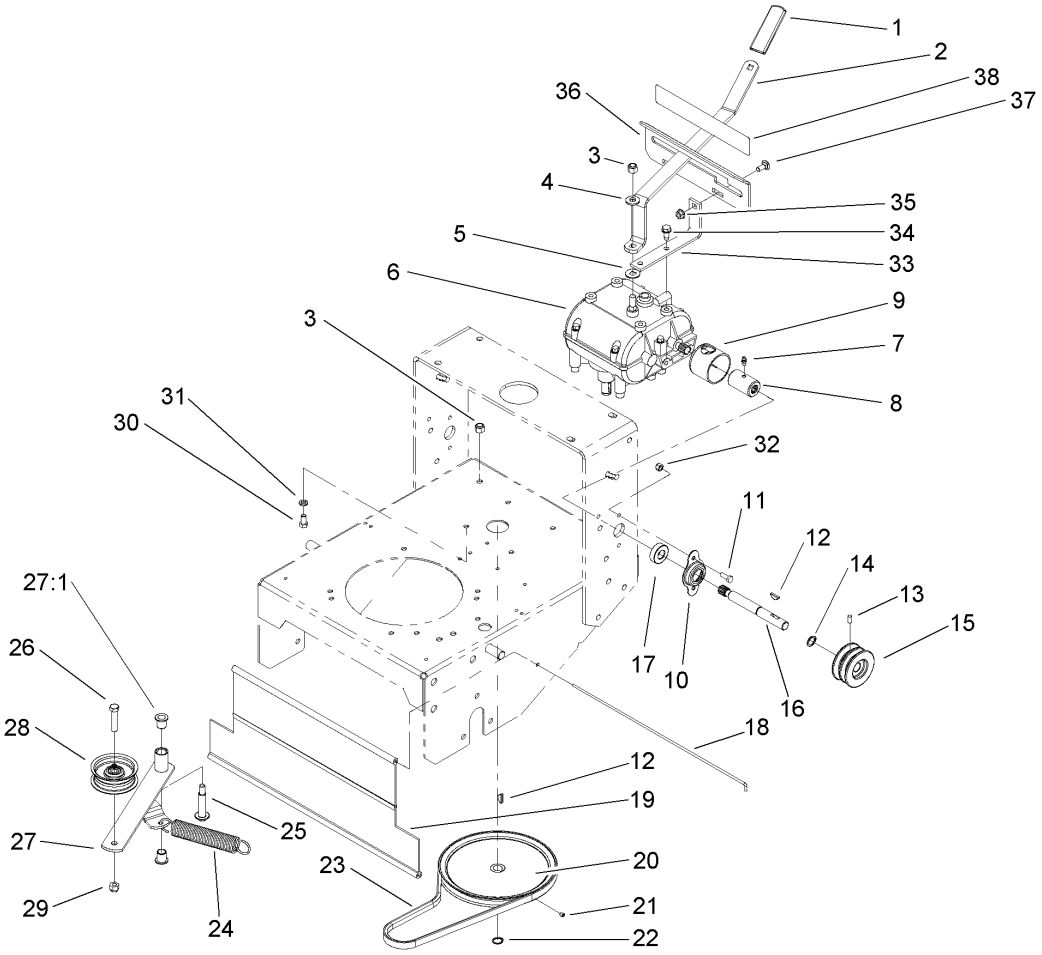

Transmission Drive Assembly

Ref	Part No.	Qty.	Description
1	47-1970	1	Grip
2	98-3274-03	1	Lever-Shift
3	3296-6	2	Nut-Lock
4	98-5975	1	Washer-Belleville
5	1-323379	1	Washer
6	1-323500	1	Transmission
7	302-5	2	Fitting-Grease
8	1-323680	2	Coupler
9	51-4220	2	Guard-Coupler
10	1-323254	2	Flange-Output
11	321-4	4	Screw-HH
12	3257-5	3	Key-Woodruff
13	3245-9	2	Screw-Set
14	32151-62	2	Ring-Retaining
15	105-2698	2	Pulley-Transmission
16	104-1102	2	Shaft-Output
17	1-323252	2	Bearing-Shaft
18	95-1529	1	Rod-Shield
19	95-1526	1	Shield-Trailing
20	105-5646	1	Pulley-Driven
21	3245-1	1	Screw-Set, HSH
22	32120-64	1	Ring-Snap, External
23	105-5668	1	V-Belt
24	68-2190	1	Spring

Ref	Part No.	Qty.	Description
25	27-6230	1	Bolt-Wheel
26	323-9	1	Screw-HH
27	16-7509	1	Lever-Idler
27:1	256-155	2	Bushing-Flange
28	62-4540	1	Pulley
29	3296-39	1	Nut-Lock, NI
30	322-2	4	Screw-HH
31	3253-4	4	Washer-Lock
32	3296-42	4	Nut-Lock, NI
33	1-323389-03	2	Bracket-Plate, Shift
34	9264964	4	Screw-Hwh, Thread Cut
35	32128-20	2	Nut-HF
36	1-323387-03	1	Plate-Shift
37	3230-1	2	Bolt-CARR
38	98-3256	1	Decal-Speed, Ground

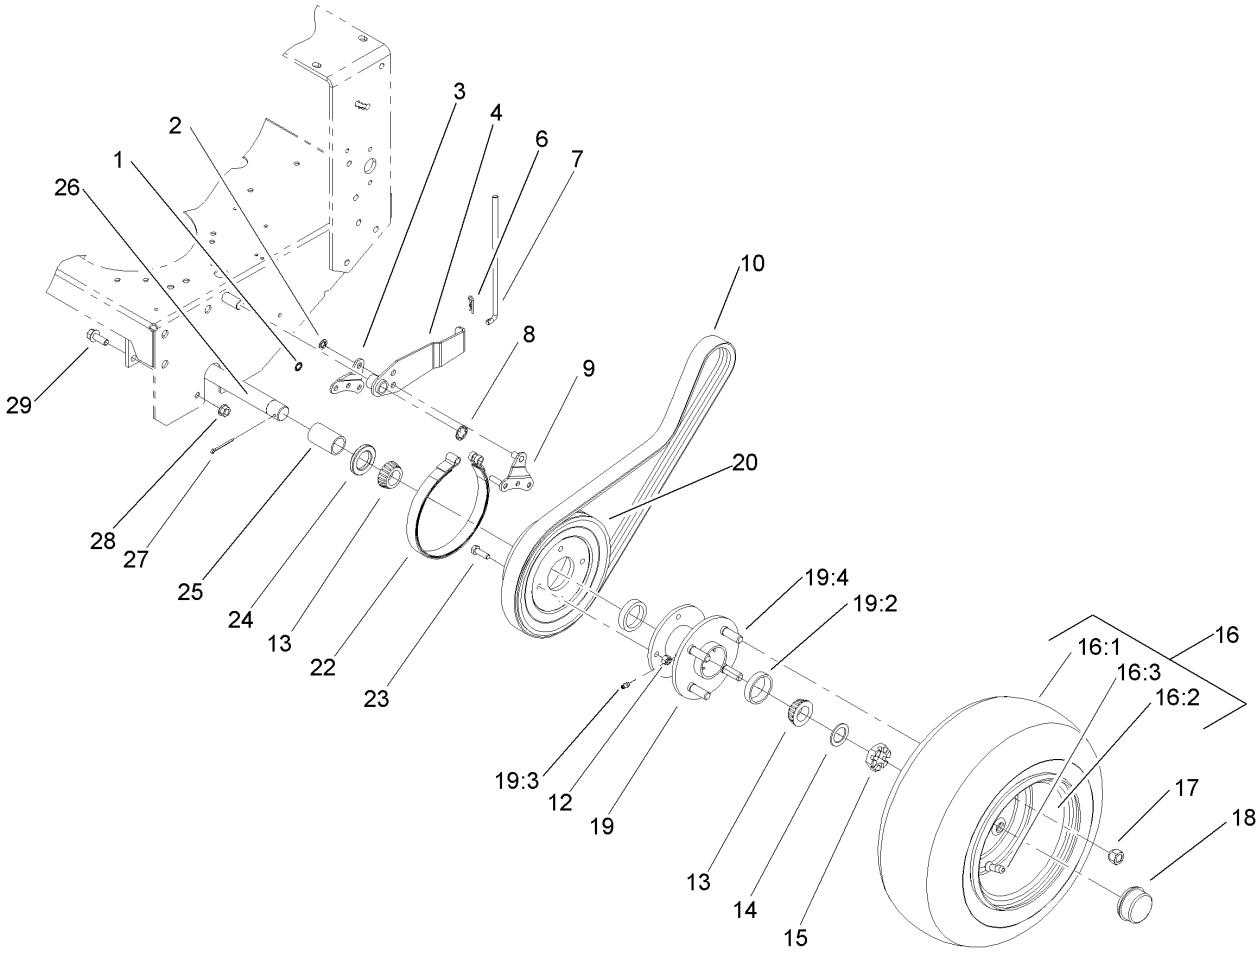

Wheel Drive and Brake Assembly

Ref	Part No.	Qty.	Description
1	32151-72	4	Ring-Retaining
2	32151-56	2	Ring-Retaining, External
3	106-8792	2	Plate-Link, Brake
4	106-8779-01	2	Brake Arm ASM
6	3290-307	2	Pin-Hair
7	51-4580	2	Rod-Brake
8	32151-40	2	Ring-Retaining
9	106-8773	2	Brake Link ASM
10	51-4290	2	V-Belt
12	3296-29	8	Nut-Lock, NI
13	254-94	4	Bearing-Cone, Tapered
14	1-523157	2	Washer-Spacer
15	1-809082	2	Nut-SHH
16	106-0892	2	Wheel And Tire ASM
16:1	104-6322	1	Tire
16:2	106-0893	1	Wheel
16:3	232-27	1	Stem-Valve
17	242-50	8	Nut-Lug
18	241-119	2	Cap-Dust
19	1-413333	2	Hub/wheel ASM
19:2	254-72	2	Bearing-Cup, Tapered
19:3	302-19	1	Fitting-Grease
19:4	1-633926	4	Stud-Wheel
20	106-5544	2	Pulley-Wheel

Ref	Part No.	Qty.	Description
22	1-323262	2	Band-Brake
23	322-5	8	Screw-HH
24	1-543511	2	Seal-Grease
25	104-1197	2	Spacer-Wheel
26	104-1196-01	1	Axle ASM
27	1-806800	2	Pin-Cotter
28	32128-21	6	Nut-HF
29	3234-11	6	Screw-HHF

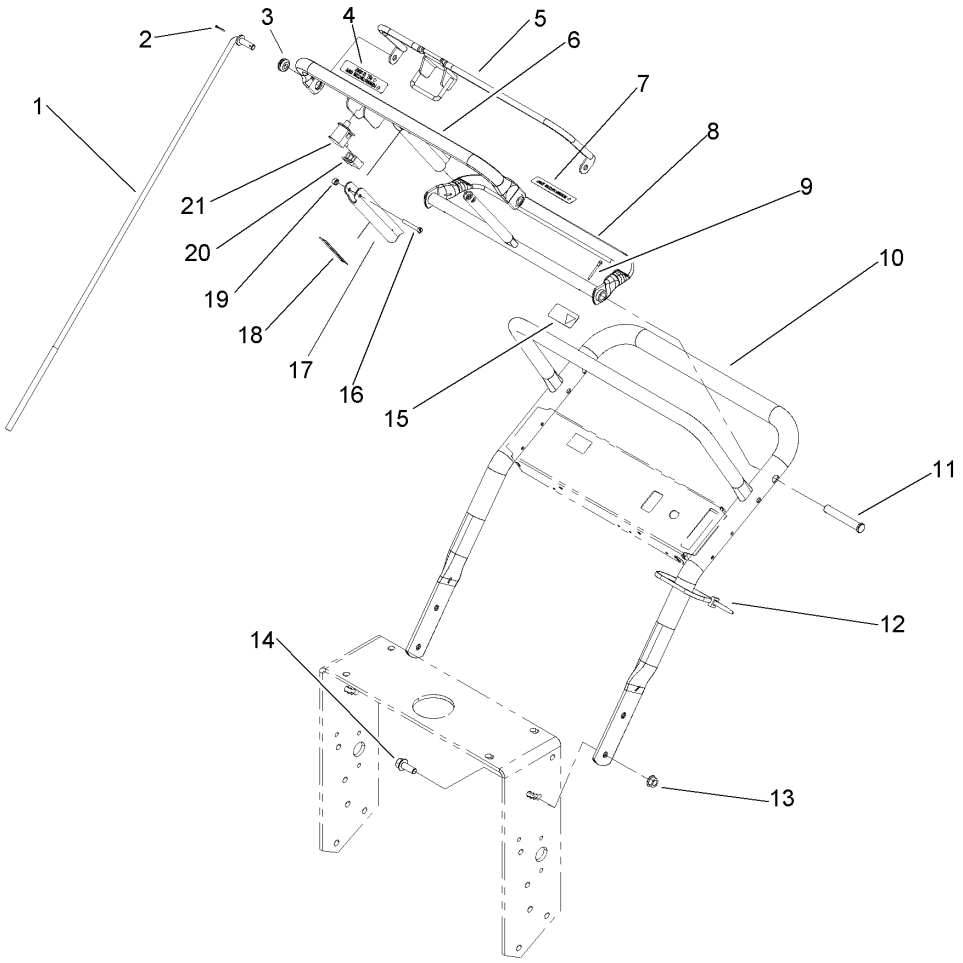

Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	105-4677	2	Rod-Control
2	3272-4	2	Pin-Cotter
3	237-141	2	Grommet-Rubber
4	82-2290	1	Decal
5	82-7680-03	1	Bail ASM
6	82-7690-03	1	Bar-Control
7	82-2280	1	Decal
8	106-5477-03	1	Control Pivot ASM
9	3272-11	2	Pin-Cotter
10	105-3158-03	1	Upper Handle ASM
11	283-55	2	Pin-Clevis
12	3290-378	1	Tie-Cable
13	32128-21	4	Nut-HF
14	3234-11	4	Screw-HHF
15	98-4387	1	Decal-Protection, Ear
16	32105-1	1	Screw-SHH
17	51-4850-03	1	Lever-Brake, Parking
18	52-2010	1	Decal-Lever, Parking
19	3296-2	1	Nut-Lock
20	218-595	1	Connector-Body
21	82-2190	1	Switch-Bail

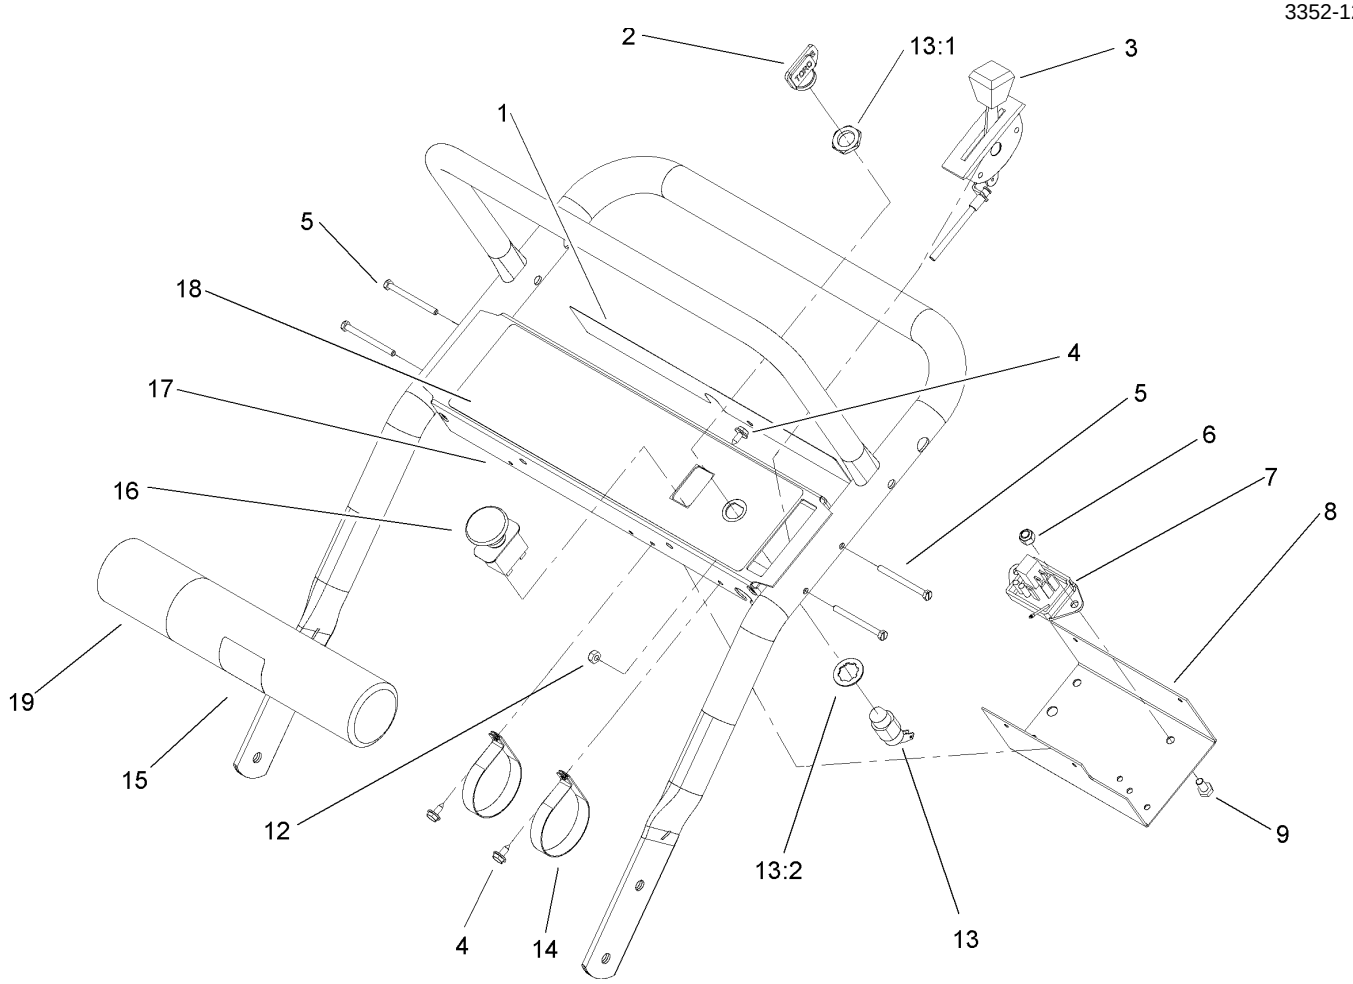

Control Panel Assembly

Ref	Part No.	Qty.	Description
1	105-0884	1	Decal-Danger
2	63-8360	1	Key-Ignition
3	107-4101	1	Cable-Throttle
4	32104-76	4	Screw
5	32105-14	4	Screw-SHH
6	3296-42	1	Nut-Lock, NI
7	104-8141	1	Module-Delay
8	93-1187-03	1	Panel-Bottom
9	321-2	1	Screw-HH
12	3296-2	4	Nut-Lock
13	29-5560	1	Switch-On/off
13:1	218-461	1	Nut-HH
13:2	3254-5	1	Washer-Tooth
14	2412-120	2	R-Clamp
15	104-7050	1	Housing-Manual
16	104-8140	1	Switch-PTO
17	104-8177-03	1	Panel-Control
18	106-5499	1	Decal-Control Panel
19	104-7048	1	Cap-Housing

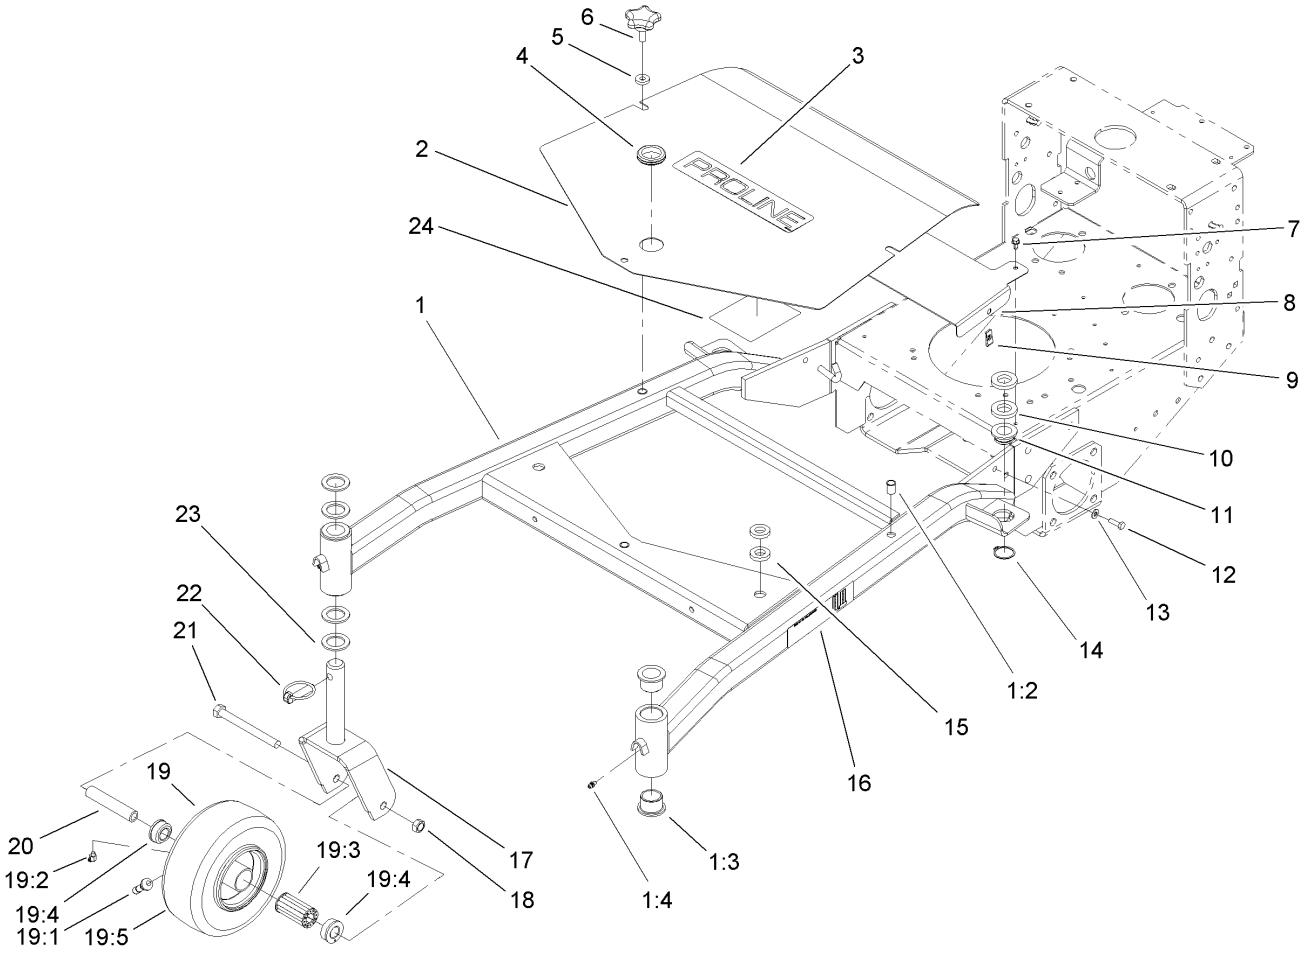

Carrier Frame Assembly

Ref	Part No.	Qty.	Description
1	106-0707	1	Carrier Frame ASM
1:2	32148-9	3	Insert-Nut
1:3	94-1291	4	Bushing
1:4	302-5	2	Fitting-Grease
2	106-0537-01	1	Cover
3	106-0719	1	Decal
4	240-3	1	Grommet-Rubber
5	106-0565	3	Washer-Rubber
6	106-0887	3	Knob
7	12-3270	2	Screw
8	105-9389-01	1	Shield-Heat
9	3290-199	2	Nut-Speed
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	321-5	2	Screw-HH
13	3256-22	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	105-0842	4	Spacer
16	106-0635	2	Decal-HOC
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock, Side
19	100-6451	2	Castor Wheel ASM
19:1	232-27	1	Stem-Valve
19:2	302-11	1	Fitting-Lube, 45 DEG

Ref	Part No.	Qty.	Description
19:3	83-4740	1	Bearing
19:4	62-5580	2	Bearing-Outside
19:5	100-6452	1	Tire-Tubeless
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust
24	106-5503	1	Decal-Service, Hydro Tbar
24	106-5505	1	Decal-Service, Gear Tbar
24	106-5511	1	Decal-Service, Gear Pistol Grip
24	106-5513	1	Decal-Service, Hydro Pistol Grip

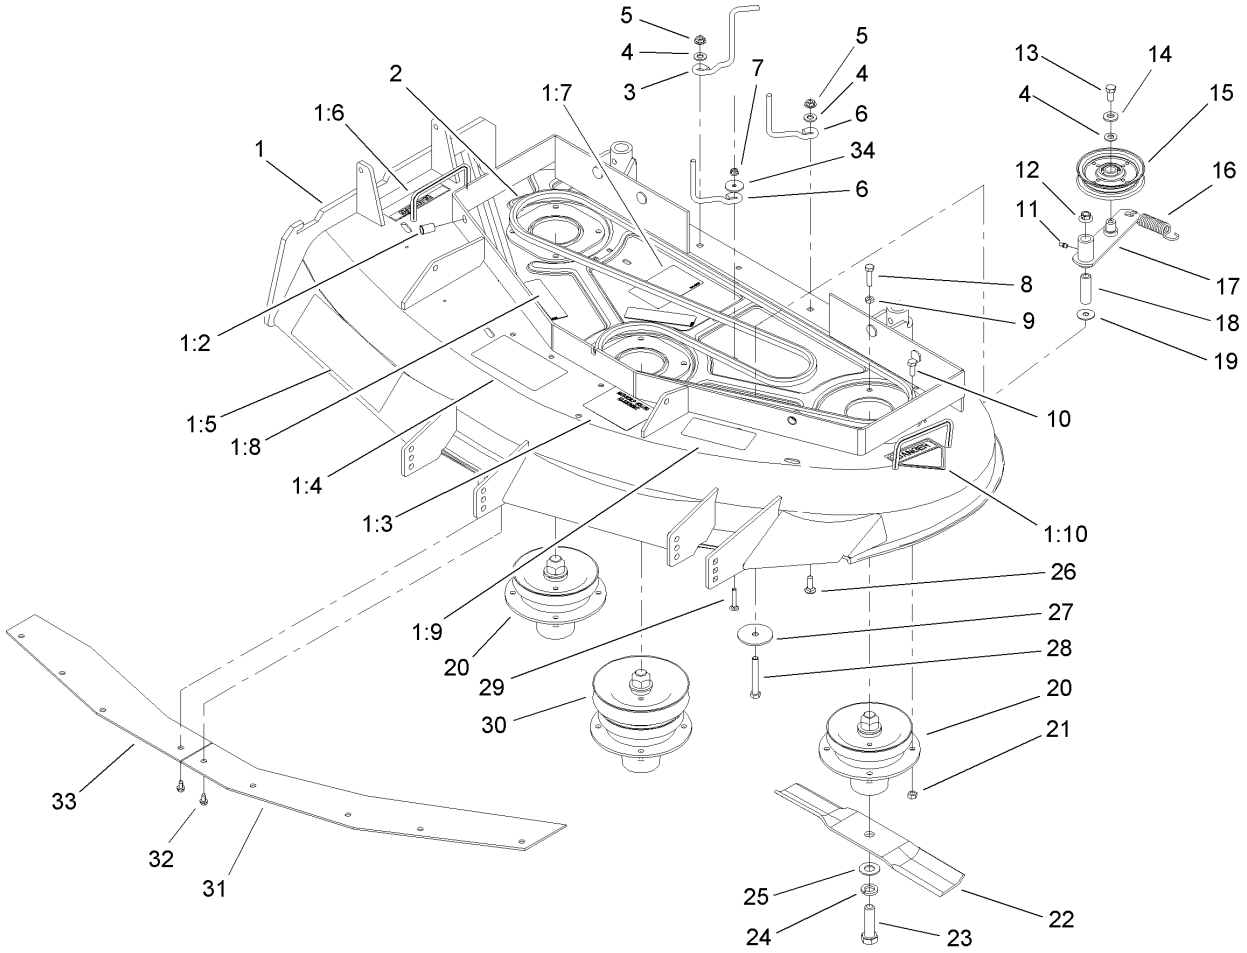

Spindle, Pulley and Belt Assembly

Ref	Part No.	Qty.	Description
1	107-4212	1	Deck ASM
1:2	32148-10	2	Insert-Threaded
1:3	106-5532	1	Decal-Anti Scalp
1:4	66-1340	1	Decal-Danger
1:5	106-0704	1	Decal
1:6	93-1122	1	Decal-Danger
1:7	104-8186	1	Decal-Routing, Belt
1:8	67-5360	3	Decal-Danger
1:9	68-8340	1	Decal-Torque
1:10	43-8480	1	Decal-Danger
2	27-1160	1	V-Belt
3	106-5488	1	Guide-Belt
4	3256-24	3	Washer-Flat
5	32128-13	2	Nut-HF
6	52-4780	2	Rod-Belt
7	32128-10	1	Nut-Lock, HHF
8	322-6	1	Screw-HH
9	3218-2	1	Nut-Jam
10	322-4	11	Screw-HH
11	302-19	1	Fitting-Grease
12	32128-19	1	Nut-HF
13	323-4	1	Screw-HH
14	98-5975	1	Washer-Belleville
15	65-5940	1	Pulley-Idler

Ref	Part No.	Qty.	Description
16	54-2730	1	Spring-Extension
17	104-8110	1	Idler Arm ASM
18	104-8113	1	Tube-Idler
19	52-2860	1	Washer
20	106-0786	2	Spindle Housing ASM
21	32152-1	12	Nut-Lock, Cone
22	54-0010-03	3	Blade
23	51-4060	3	Screw-Blade
24	3253-8	3	Washer-Lock
25	3256-27	3	Washer-Flat
26	3230-2	2	Bolt-CARR
27	20-9530	1	Washer-End
28	323-13	1	Screw-HH
29	3229-4	1	Screw-CARR
30	106-0784	1	Spindle Housing ASM
31	100-3258-03	1	Plate-Blowout, LH
32	12-3270	9	Screw
33	100-3257-03	1	Plate-Blowout, RH
34	1-503033	1	Washer-Retainer, Pulley

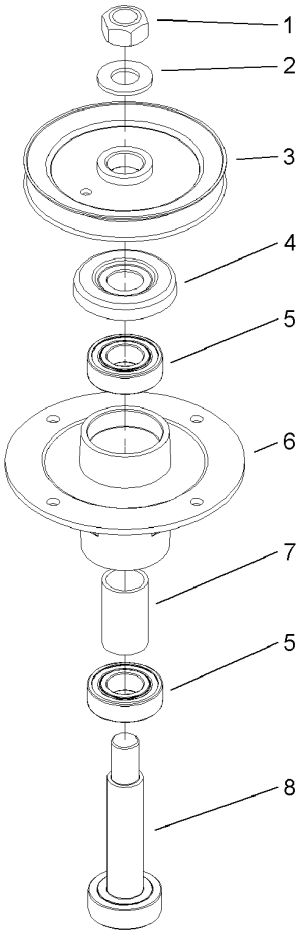

Spindle Assembly No. 106-0786

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1181	1	Pulley ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0818	1	Housing-Spindle
7	106-0794	1	Spacer-Bearing
8	106-0780	1	Shaft-Spindle

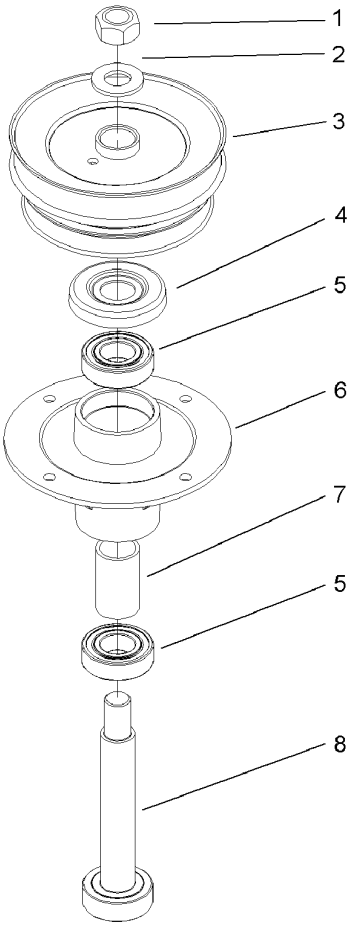

Spindle Assembly No. 106-0784

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1116	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0818	1	Housing-Spindle
7	106-0794	1	Spacer-Bearing
8	106-0779	1	Shaft-Spindle

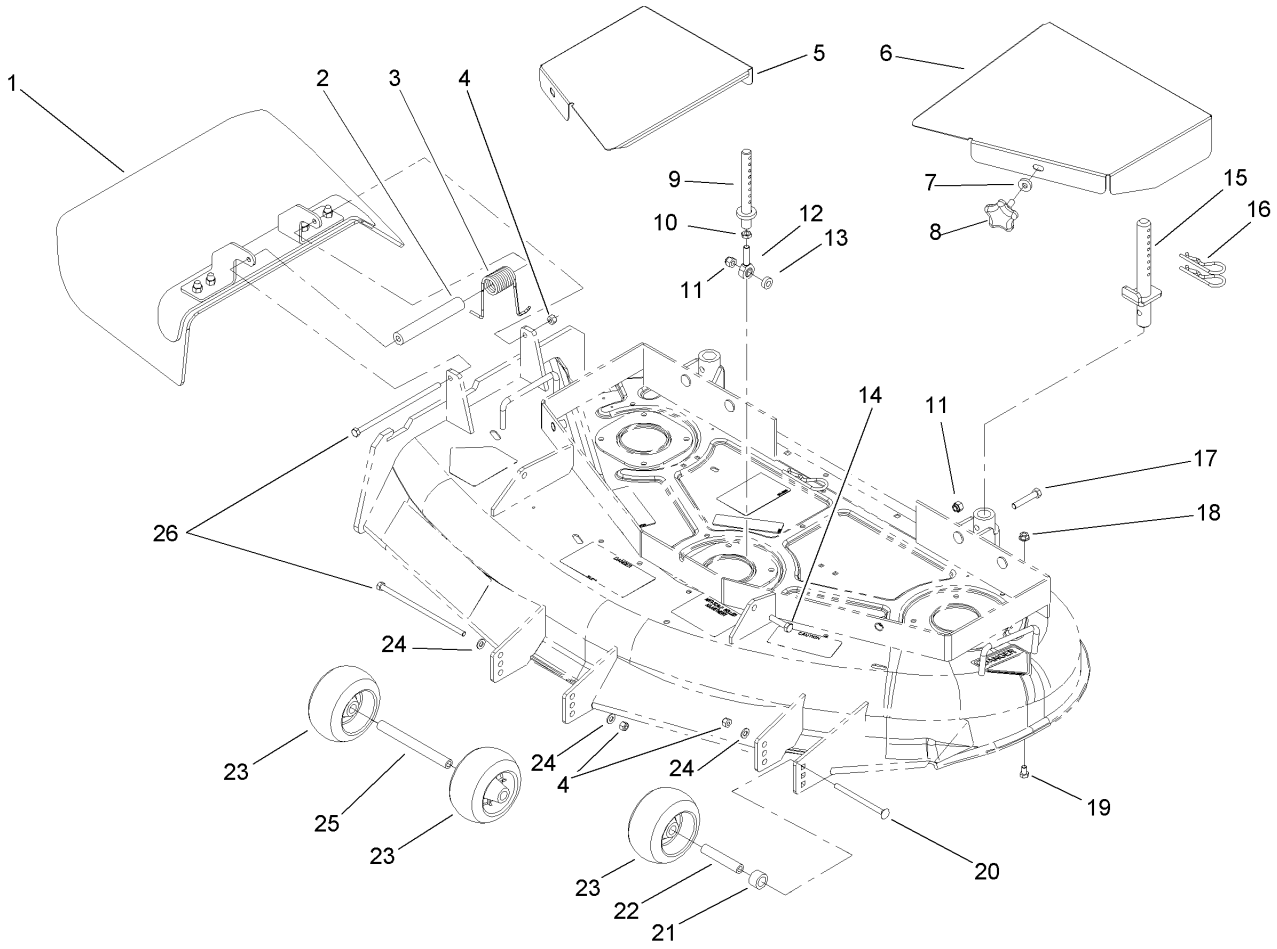

Deck Assembly

Ref	Part No.	Qty.	Description
1	107-4194	1	Deflector ASM
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	3	Nut-Lock, NI
5	106-3363-01	1	Cover-Belt, RH
6	106-3362-01	1	Cover-Belt, LH
7	106-0565	2	Washer-Rubber
8	106-0887	2	Knob
9	106-0684	2	Front Pin ASM
10	3220-3	2	Nut-Jam
11	3296-39	4	Nut-Lock, NI
12	1-613204	2	Balljoint
13	104-1156	2	Spacer
14	323-8	2	Screw-HH
15	106-3365	2	Rear Pin ASM
16	3290-256	6	Pin-Hair
17	323-10	2	Screw-HH
18	32128-20	4	Nut-HF
19	322-1	4	Screw-HH
20	3230-30	1	Screw-CARR
21	106-0563	1	Spacer-Wheel
22	106-0545	1	Bushing-Roller
23	1-603299	3	Roller-Anti Scalp
24	3256-23	3	Washer-Flat

Ref	Part No.	Qty.	Description
25	98-5967	1	Spacer-Wheel
26	322-50	2	Screw-HH

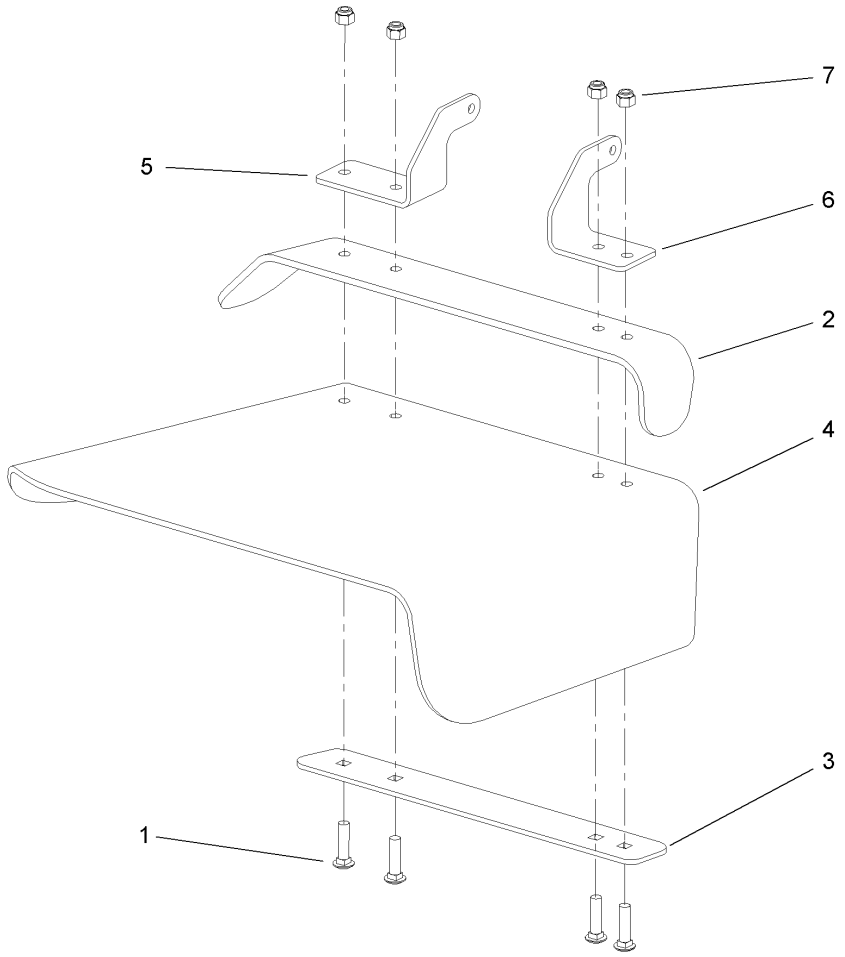

Deflector Assembly No. 107-4194

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	107-4197-01	1	Bracket-Hinge, Rear
6	107-4196-01	1	Bracket-Hinge, Front
7	3296-39	4	Nut-Lock, NI

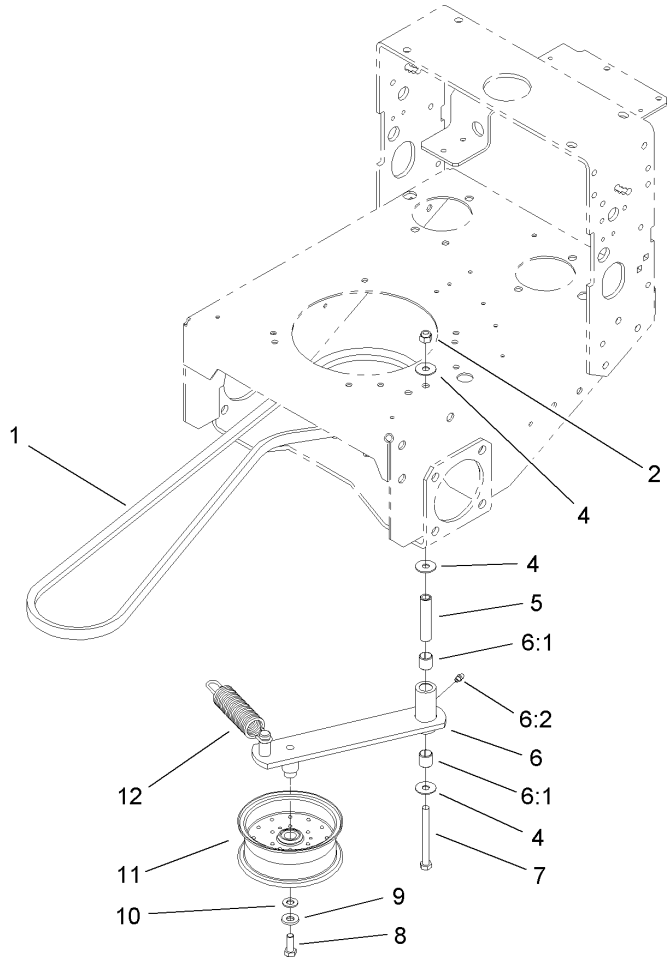

Drive Belt and Tensioner Assembly

Ref	Part No.	Qty.	Description
1	104-8120	1	V-Belt, PTO
2	3296-39	1	Nut-Lock, NI
4	52-2860	3	Washer
5	104-6377	1	Tube-Idler
6	106-0734	1	Idler Arm ASM
6:1	1-513034	2	Sleeve-Bearing
6:2	302-5	1	Fitting-Grease
7	323-42	1	Screw-HH
8	323-6	1	Screw-HH
9	98-5975	1	Washer-Belleville
10	3256-24	1	Washer-Flat
11	1-413099	1	Pulley-Idler
12	105-8443	1	Spring-Extension

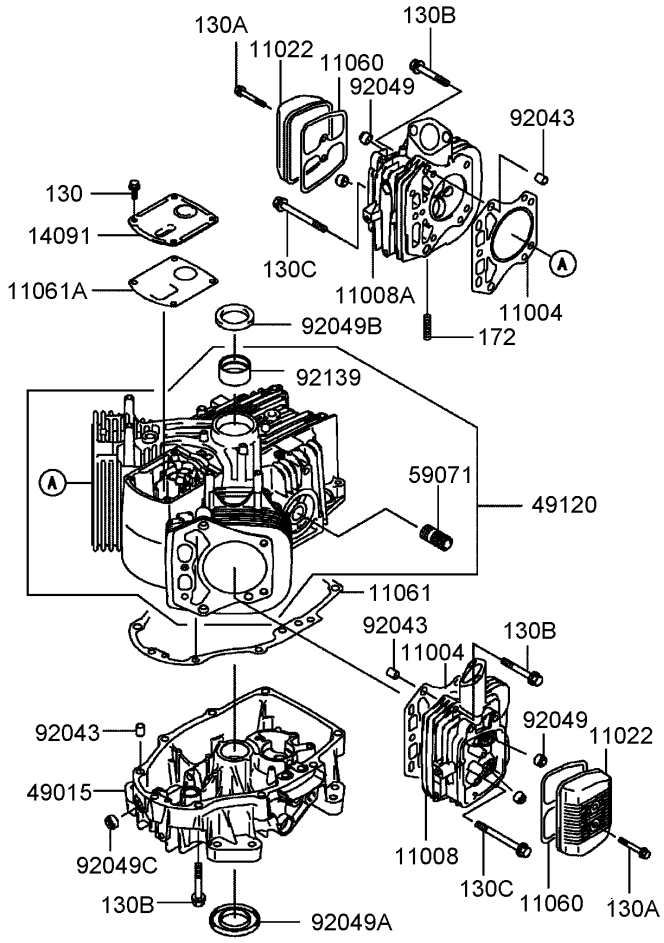

Cylinder and Crankcase Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸11004	11004-7008	2	Gasket-Head
❸11008	11008-7021	1	Head-Comp-Cylinder, No. 2
❸11008A	11008-7022	1	Head-Comp-Cylinder, No. 1
❸11022	11022-7003	2	Case-Rocker
❸11060	11060-7001	2	Gasket-Case, Rocker
❸11061	11061-7007	1	Gasket-Cover, Crankcase
❸11061A	11061-7008	1	Gasket-Breather
❸14091	14091-7007	1	Cover
❸49015	49015-7032	1	Cover-Crankcase
❸49120	49120-7015	1	Crankcase-Comp
❸59071	59071-2079	1	Joint
❸92043	92043-7001	6	Pin
❸92049	92049-7001	4	Seal-Oil, Rvc2 (6x11x10.2)
❸92049A	92049-7015	1	Seal-Oil, Sd (35x62x8 L Hs)
❸92049B	92049-7016	1	Seal-Oil, Sd (35x48x8 R Hs)
❸92049C	92049-7019	1	Seal-Oil, So (8x14x5 Hs)
❸92139	92139-7002	1	Bushing
❸130	130B0612	4	Bolt-Flanged
❸130A	130B0640	4	Bolt-Flanged
❸130B	130T0850	17	Bolt-Flanged
❸130C	130T0875	2	Bolt-Flanged
❸172	172G0818	4	Bolt-Stud

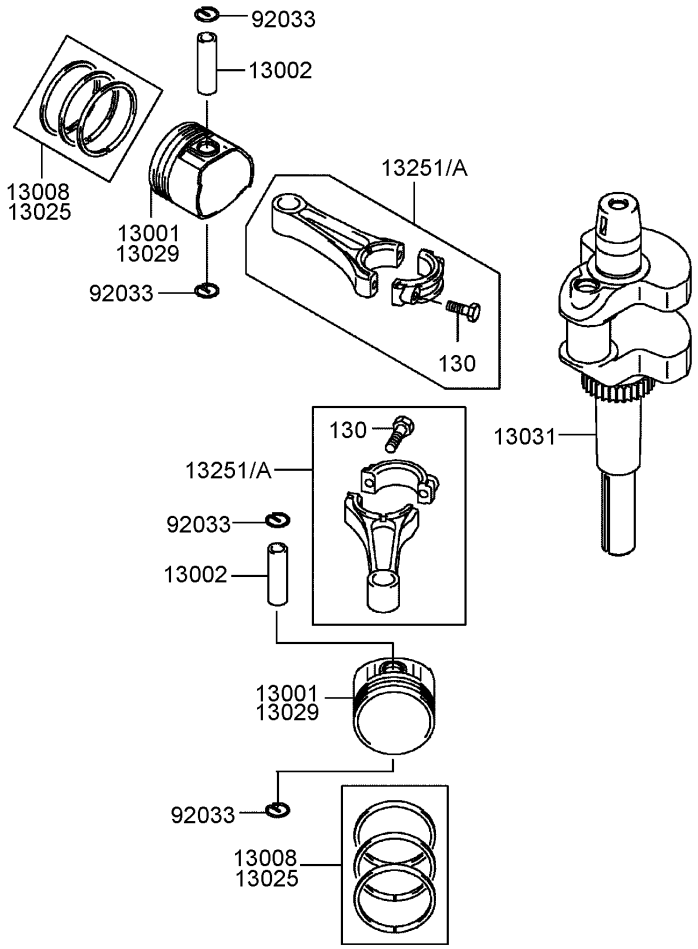

Piston and Crankshaft Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸13001	13001-7009	2	Piston-Engine
❸13002	13002-7001	2	Pin-Piston
❸13008	13008-7001	2	Ring Set-Piston
❸13025	13025-7003	1	Ring Set-Piston (L,0.50)
❸13029	13029-7005	1	Piston-Engine (L,0.50)
❸13031	13031-7033	1	Crankshaft-Comp
❸13251	13251-7007	2	Connecting Rod ASM
❸13251A	13251-7008	2	Connecting Rod ASM (U/s=0.50)
❸92033	92033-7005	4	Ring-Snap
❸130	130G0630	4	Bolt-Flanged

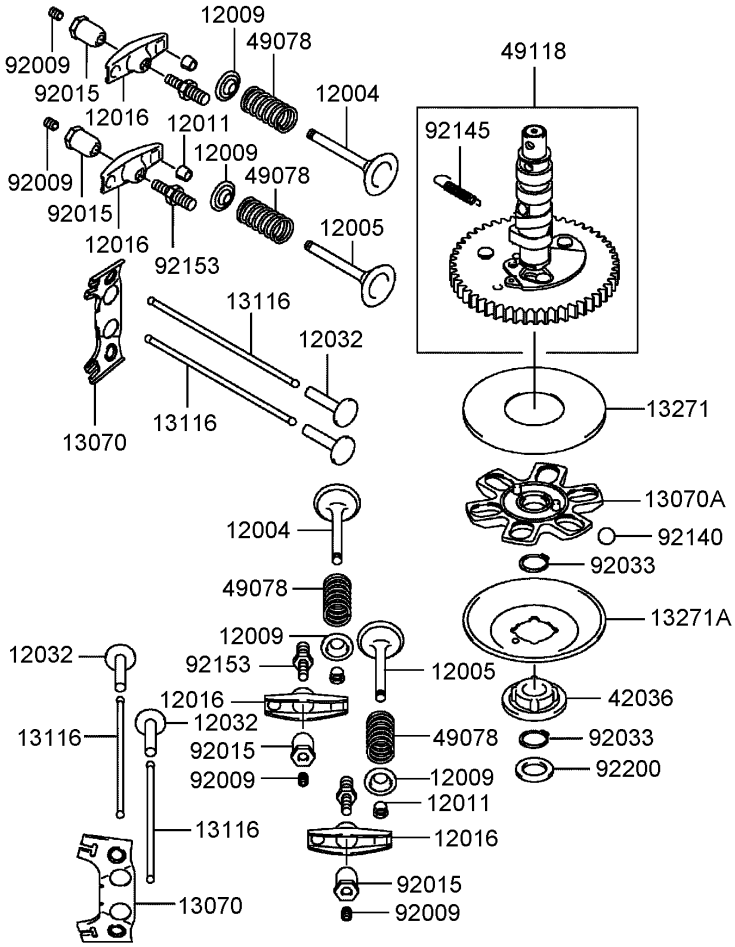

Valve and Camshaft Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸12004	12004-7003	2	Valve-Intake
❸12005	12005-7003	2	Valve-Exhaust
❸12009	12009-7001	4	Retainer-Spring, Valve
❸12011	12011-2056	8	Collet
❸12016	12016-7001	4	Arm-Rocker
❸12032	12032-7001	4	Tappet
❸13070	13070-7001	2	Guide
❸13070A	13070-7004	1	Guide
❸13116	13116-2057	4	Rod-Push
❸13271	13271-7007	1	Plate
❸13271A	13271-7021	1	Plate-Governor
❸42036	42036-7009	1	Sleeve
❸49078	49078-7001	4	Spring-Valve, Engine
❸49118	49118-7009	1	Camshaft-Comp
❸92009	92009-2341	4	Screw
❸92015	92015-2253	4	Nut
❸92033	92033-7001	2	Ring-Snap
❸92140	92140-7002	6	Ball
❸92145	92145-7001	1	Spring
❸92153	92153-7019	4	Bolt
❸92200	92200-7001	1	Washer

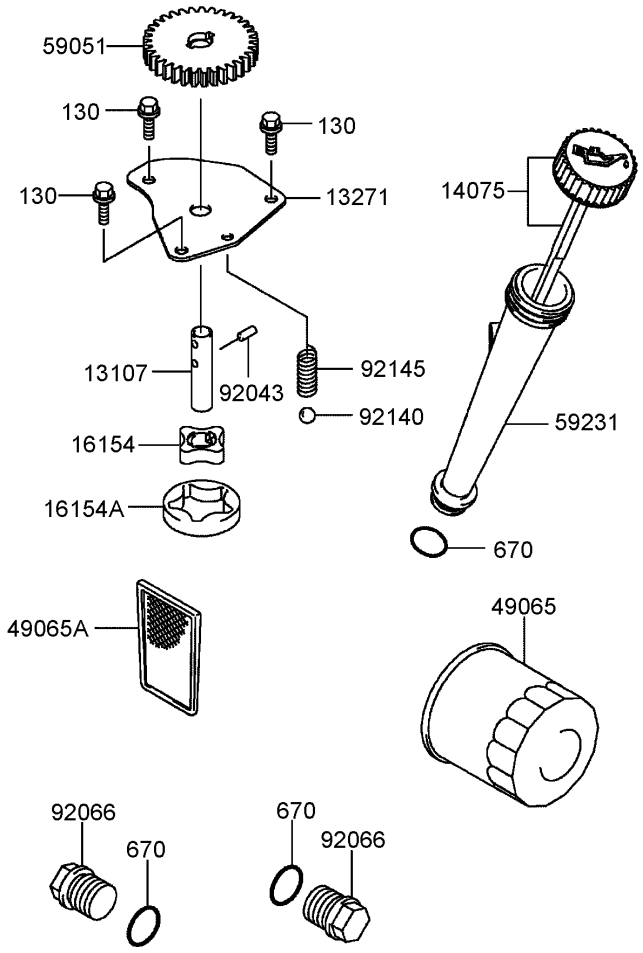

Lubrication Equipment Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸13107	13107-7009	1	Shaft
❸13271	13271-7017	1	Plate
❸14075	14075-7009	1	Cap ASM
❸16154	16154-2053	1	Rotor-Pump (In)
❸16154A	16154-2054	1	Rotor-Pump (Out)
❸49065	49065-2078	1	Filter-Oil
❸49065A	49065-7004	1	Filter-Oil
❸59051	59051-7011	1	Gear-Spur
❸59231	59231-7003	1	Filler
❸92043	92043-7003	2	Pin
❸92066	92066-7003	2	Plug
❸92140	92140-7003	1	Ball
❸92145	92145-7002	1	Spring
❸130	130B0612	3	Bolt-Flanged
❸670	670D2016	3	O-Ring (16mm)

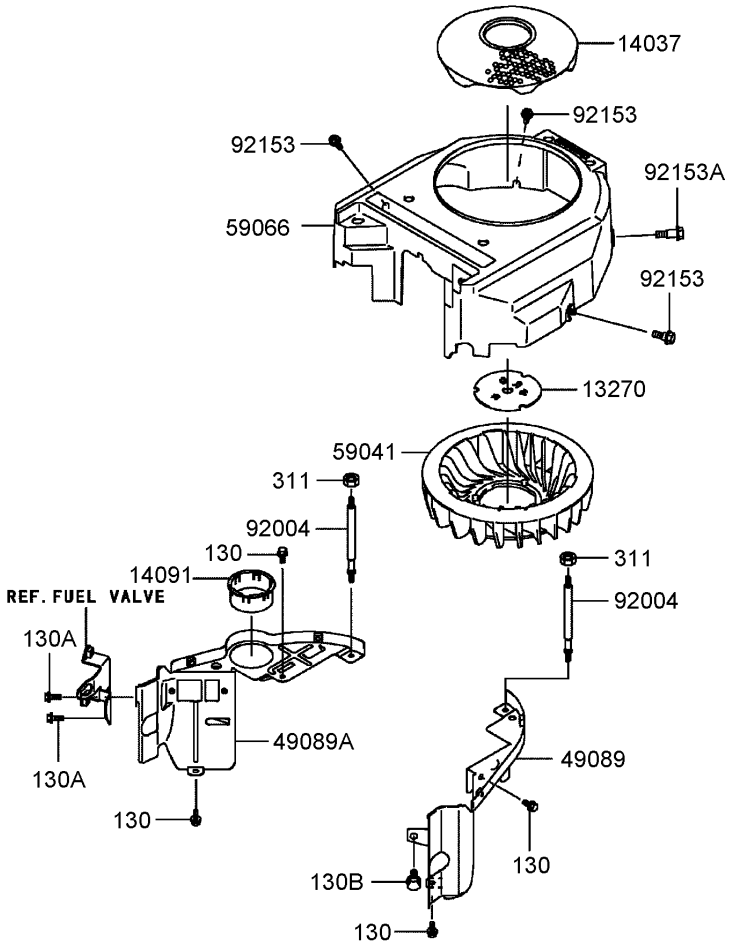

Cooling Equipment Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸13270	13270-7007	1	Plate
❸14037	14037-7021-9H	1	Screen
❸14091	14091-7009	1	Cover
❸49089	49089-7044	1	Shroud-Engine
❸49089A	49089-7045	1	Shroud-Engine
❸59041	59041-7010	1	Fan
❸59066	59066-7023	1	Housing-Fan
❸92004	92004-7007	2	Stud
❸92153	92153-7007	3	Bolt
❸92153A	92153-7008	1	Bolt
❸130	130B0612	4	Bolt-Flanged
❸130A	130B0616	2	Bolt-Flanged
❸130B	130B0816	1	Bolt-Flanged
❸311	311F0600	2	Nut-Hex

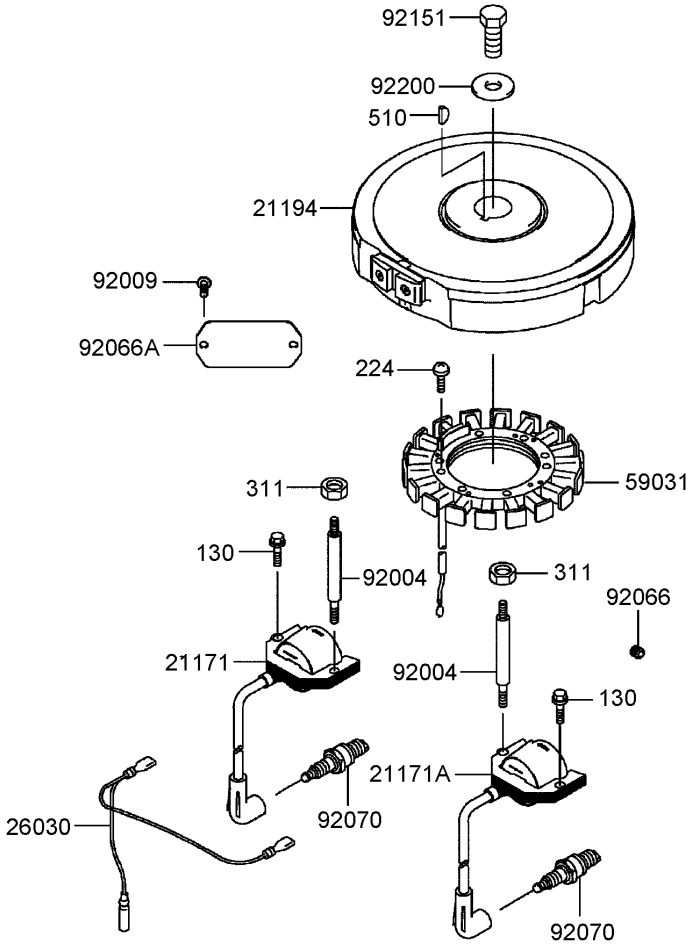

Electrical Equipment Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸21171	21171-7013	1	Ignition Coil ASM
❸21171A	21171-7014	1	Ignition Coil ASM
❸21194	21194-7012	1	Flywheel-Comp
❸26030	26030-7001	1	Harness
❸59031	59031-7002	1	Coil-Charging
❸92004	92004-7008	2	Stud
❸92009	92009-2308	2	Screw
❸92066	92066-7002	1	Plug
❸92066A	92066-7005	1	Plug
❸92070	92070-7003	2	Plug-Spark (Rcj8y, Solid)
❸92151	92151-2097	1	Bolt (12x30)
❸92200	92200-7002	1	Washer
❸130	130B0620	2	Bolt-Flanged
❸224	224B0520	4	Screw-Pan
❸311	311F0600	2	Nut-Hex
❸510	510A5100	1	Key-Woodruff

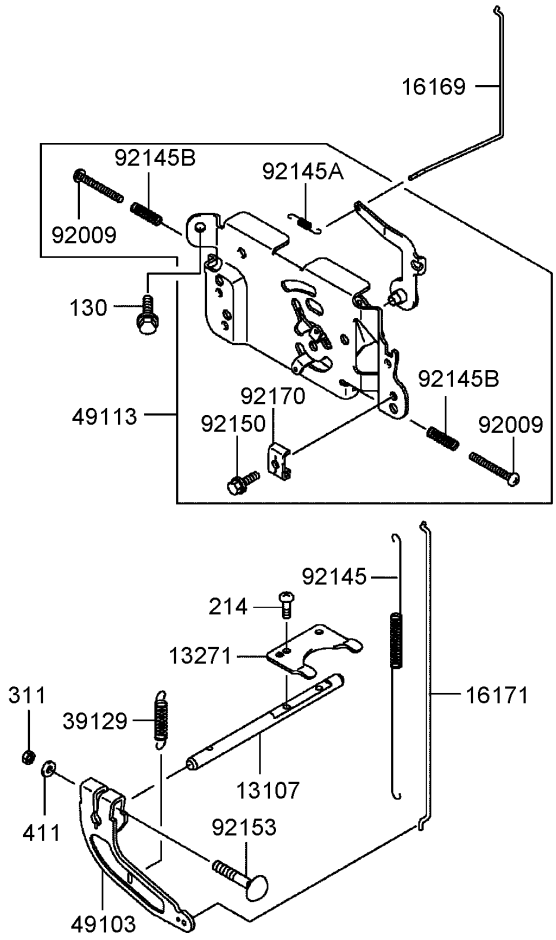

Control Euipment Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸13107	13107-7010	1	Shaft
❸13271	13271-7018	1	Plate
❸16169	16169-7012	1	Link-Choke
❸16171	16171-7007	1	Link
❸39129	39129-7003	1	Spring-Governor
❸49103	49103-7004	1	Arm-Governor
❸49113	49113-7027	1	Panel-Control, Comp
❸92009	92009-7007	2	Screw (4x35)
❸92145	92145-7003	1	Spring
❸92145A	92145-7004	1	Spring
❸92145B	92145-7005	2	Spring
❸92150	92150-2182	1	Bolt (5x18)
❸92153	92153-7005	1	Bolt (6x35)
❸92170	92170-7001	1	Clamp
❸130	130B0612	2	Bolt-Flanged
❸214	214B0408	2	Screw-Pan
❸311	311B0600	1	Nut-Hex
❸411	411b0600	1	Washer-Plain

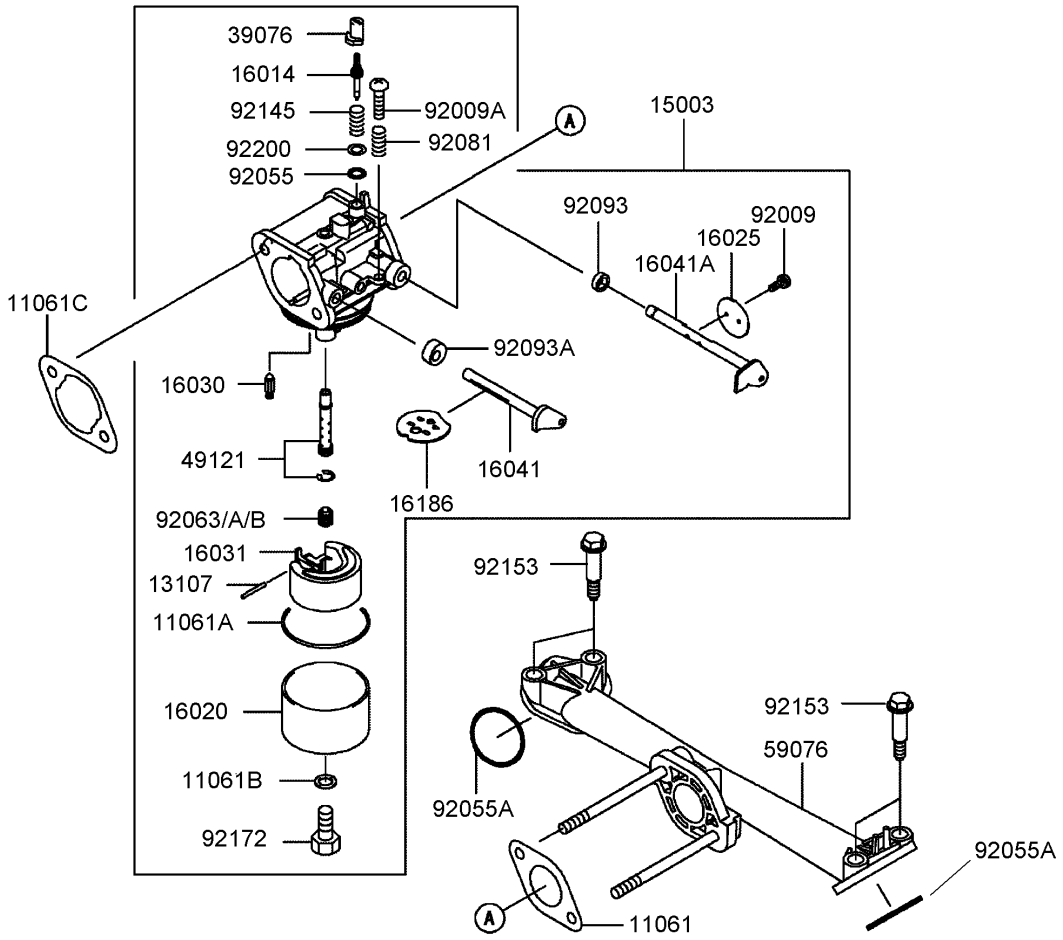

Carburetor Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸11061	11061-7004	1	Gasket-Insulator
❸11061A	11061-7009	1	Gasket-Chamber
❸11061B	11061-7010	1	Gasket-Screw
❸11061C	11061-7018	1	Gasket-Cleaner, Air
❸13107	13107-7018	1	Shaft
❸15003	15003-7061	1	Carburetor-ASM
❸16014	16014-7002	1	Screw-Pilot
❸16020	16020-7003	1	Chamber-Float
❸16025	16025-7006	1	Valve-Throttle
❸16030	16030-7003	1	Valve-Float
❸16031	16031-7002	1	Float
❸16041	16041-7016	1	Shaft-Choke, Carburetor
❸16041A	16041-7018	1	Shaft-Throttle, Carburetor
❸16186	16186-7002	1	Choke Valve ASM
❸39076	39076-7001	1	Limiter
❸49121	49121-7001	1	Nozzle-Main
❸59076	59076-7005	1	Manifold-Intake
❸92009	92009-2083	2	Screw
❸92009A	92009-2349	1	Screw
❸92055	92055-2174	1	O-Ring
❸92055A	92055-7007	2	O-Ring (Id=31)
❸92063	92063-7026	1	Jet-Main, #88
❸92063A	92063-7028	1	Jet-Main, #85
❸92063B	92063-7029	1	Jet-Main, #82

Ref	Part No.	Qty.	Description
❸92081	92081-2234	1	Spring
❸92093	92093-2100	1	Seal
❸92093A	92093-7003	1	Seal
❸92145	92145-7015	1	Spring
❸92153	92153-7009	4	Bolt
❸92172	92172-7002	1	Screw
❸92200	92200-7014	1	Washer

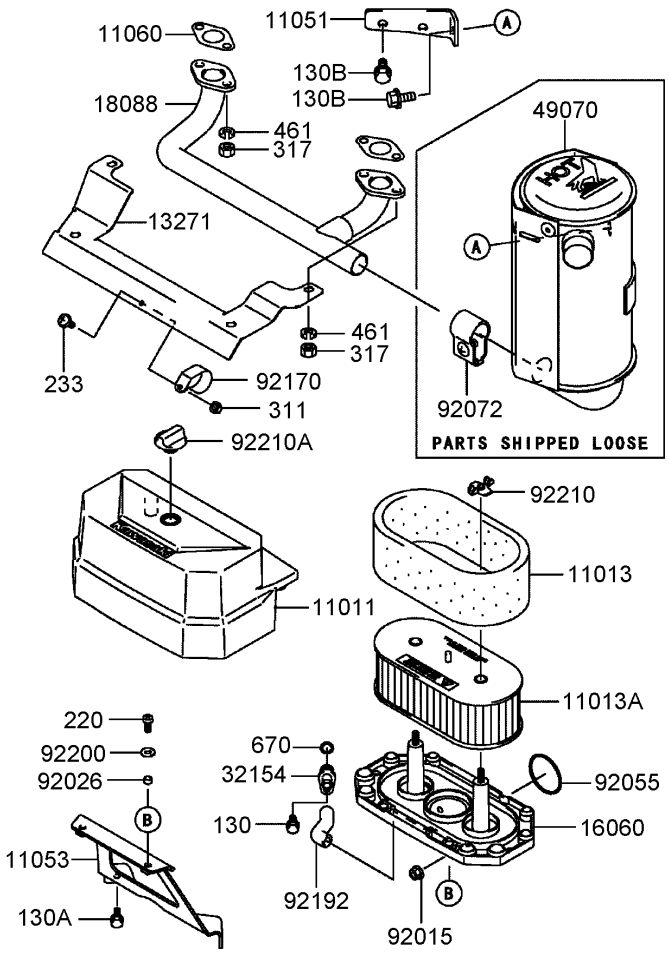

Air Filter and Muffler Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸11011	11011-7035	1	Case-Filter, Air
❸11013	11013-7025	1	Element-Filter, Air
❸11013A	11013-7031	1	Element-Filter, Air
❸11051	11051-7005-9H	1	Bracket
❸11053	11053-7022	1	Bracket
❸11060	11060-7021	2	Gasket-Muffler
❸13271	13271-7022	1	Plate
❸16060	16060-7016	1	Pipe-Intake
❸18088	18088-7001	1	Pipe-Exhaust
❸32154	32154-7006	1	Pipe
❸49070	49070-7015	1	Muffler-Comp
❸92015	92015-1193	2	Nut
❸92026	92026-7001	2	Spacer (6.2x7.9x5)
❸92055	92055-7015	1	O-Ring
❸92072	92072-7008	1	Band
❸92170	92170-7002	1	Clamp
❸92192	92192-7010	1	Tube
❸92200	92200-2070	2	Washer
❸92210	92210-7004	2	Nut
❸92210A	92210-7019	1	Nut
❸130	130B0610	1	Bolt-Flanged
❸130A	130B0612	2	Bolt-Flanged
❸130B	130B0816	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
❸220	220B0614	2	Screw-Pan (Cross)
❸233	233B0416	1	Screw-Pan
❸311	311B0400	1	Nut-Hex
❸317	317R0800	4	Nut-Hex, Small
❸461	461F0800	4	Washer-Spring
❸670	670B2010	1	O-Ring (10mm)

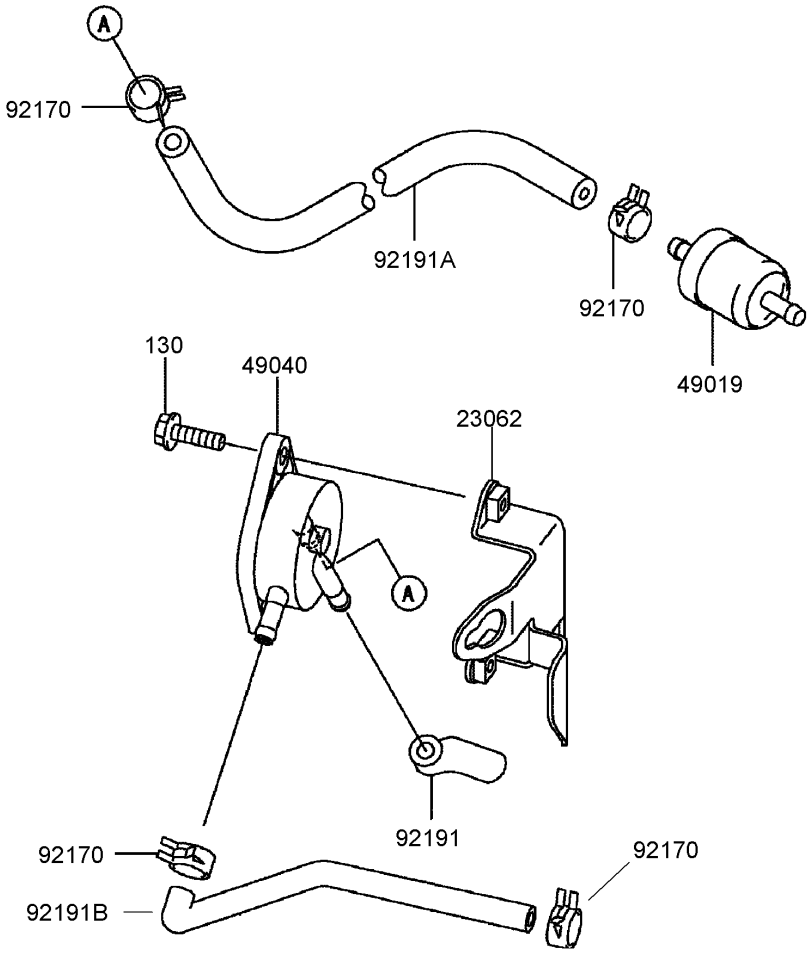

Fuel Valve Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸23062	23062-7004-9H	1	Bracket-Comp
❸49019	49019-7001	1	Filter-Fuel
❸49040	49040-7001	1	Pump-Fuel
❸92170	92170-2088	4	Clamp
❸92191	92191-7002	1	Tube
❸92191A	92191-7003	1	Tube (6.35x12.7x160)
❸92191B	92191-7004	1	Tube
❸130	130B0620	2	Bolt-Flanged

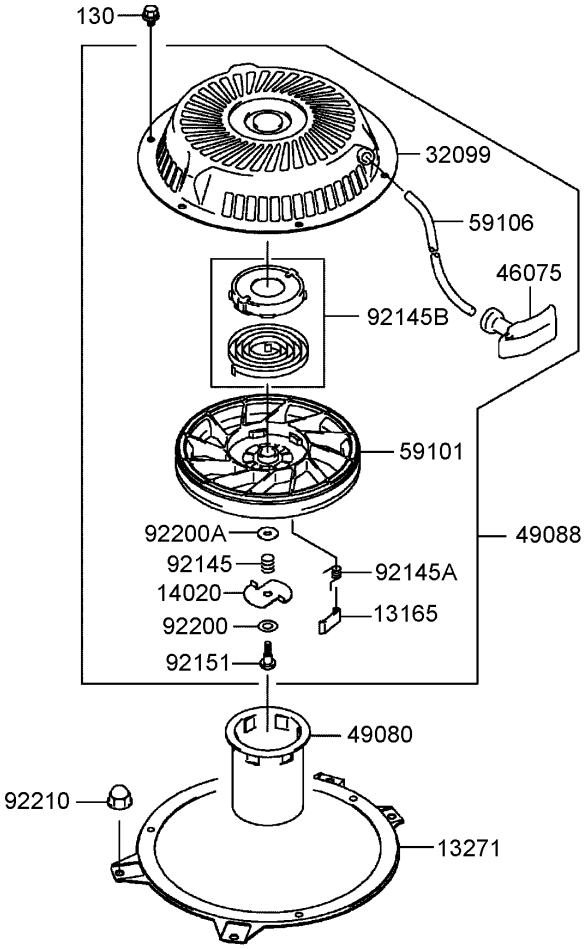

Starter Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸13165	13165-7001	2	Pawl-Starter, Recoil
❸13271	13271-7003-9H	1	Plate
❸14020	14020-7001	1	Retainer
❸32099	32099-7002	1	Case-Recoil, Starter
❸46075	46075-7001	1	Grip-Recoil, Starter
❸49080	49080-7001	1	Pulley-Starting
❸49088	49088-7013	1	Starter-Recoil
❸59101	59101-7001	1	Reel-Recoil
❸59106	59106-7001	1	Rope
❸92145	92145-7006	1	Spring
❸92145A	92145-7007	2	Spring
❸92145B	92145-7008	1	Spring
❸92151	92151-7008	1	Bolt
❸92200	92200-7004	1	Washer
❸92200A	92200-7005	1	Washer
❸92210	92210-0003	4	Nut
❸130	130B0608	3	Bolt-Flanged

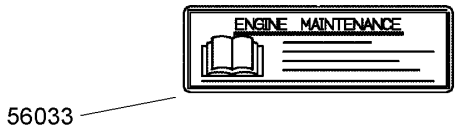

56033

56070

56080

56080A

Decal Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸56033	56033-7001	1	Label-Manual
❸56070	56070-7001	1	Label-Warning
❸56080	56080-2077	1	Label-Brand
❸56080A	56080-7024	1	Label-Brand

Attachments and Accessories

For 30326 - Mid-Size ProLine T-Bar Gear, 15 HP with 44in Side Discharge Mower

Product Name	Model/Part
Atomic Blade	104-1300
Striping Kit	106-3370
Weight Kit	106-5491
Soft Bag (3 Bushel)	30104
Steel Grass Catcher	30107
Tru Trak Sulky	30110
High Lift Blade	55-4940-03
Recycler Blade	92-7952-03
44 Inch Recycler Kit	99-4582
44" MULCHING KIT	99-8525

NOTES

NOTES

TORO®