Form Number 3352-329

# Fifth Wheel Hitch Kit
## Heavy-Duty Workman® Vehicles

**Model No. 44230 - 240000001 and up.**

# Parts Catalog

**Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

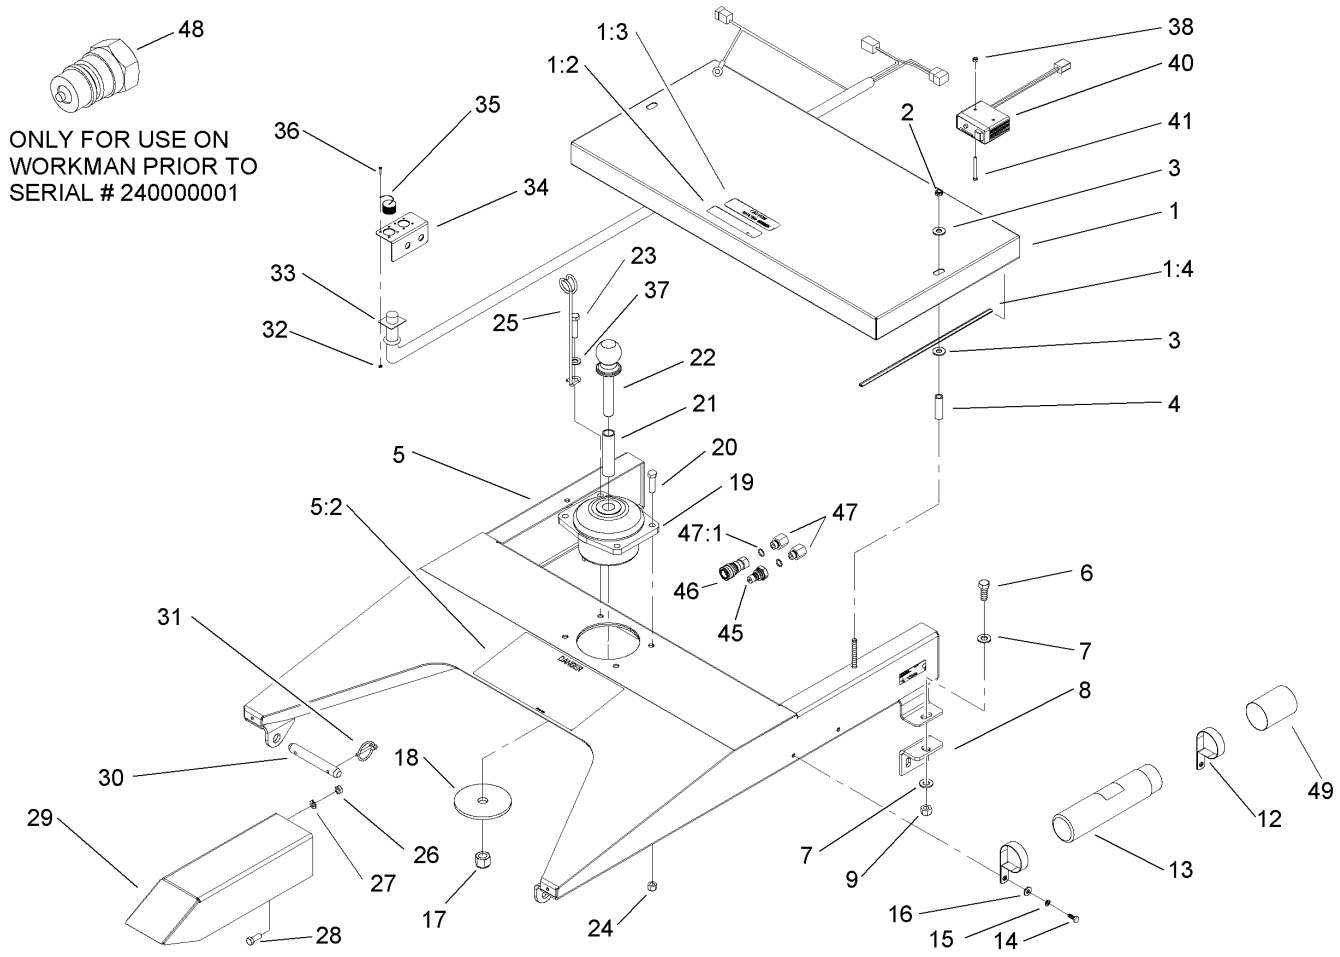


# Fifth Wheel Hitch Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 100-9382 | 1 | Access Lid ASM |
| 1:2 | 93-6689 | 1 | Decal-No Riders |
| 1:3 | 54-0890 | 1 | Decal-Rotating |
| 1:4 | 92-4527 | 1 | U-Channel, Lid |
| 2 | 3296-59 | 2 | Nut-Lock, NI |
| 3 | 3256-4 | 4 | Washer-Flat |
| 4 | 92-4528 | 2 | Spacer-Lid |
| 5 | 100-9383 | 1 | Frame ASM |
| 5:2 | 01-506-1300 | 1 | Decal-Danger |
| 6 | 325-5 | 2 | Screw-HH |
| 7 | 3256-26 | 4 | Washer-Flat |
| 8 | 92-2667-03 | 2 | Bracket-Attachment, Mount |
| 9 | 3296-25 | 2 | Nut-Lock, NI |
| 12 | 2412-133 | 2 | R-Clamp |
| 13 | 104-7050 | 1 | Housing-Manual |
| 14 | 321-4 | 2 | Screw-HH |
| 15 | 3253-3 | 2 | Washer-Lock |
| 16 | 3256-2 | 2 | Washer-Flat |
| 17 | 3296-51 | 1 | Nut-Lock, NI |
| 18 | 92-4508-03 | 1 | Washer-Rebound |
| 19 | 01-286-0740 | 1 | Isolator-Rubber |
| 20 | 324-6 | 3 | Screw-HH |
| 21 | 92-4523 | 1 | Spacer-Rebound |
| 22 | 92-4550 | 1 | Hitch Ball ASM |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 23 | 324-7 | 1 | Screw-HH |
| 24 | 3296-48 | 4 | Nut-Lock, NI |
| 25 | 92-4544 | 1 | Bracket-Wire |
| 26 | 3217-7 | 4 | Nut-Hex |
| 27 | 3253-5 | 4 | Washer-Lock |
| 28 | 323-6 | 4 | Screw-HH |
| 29 | 92-4509-03 | 1 | Anti-Tip Bar ASM |
| 30 | 92-1233 | 2 | Pin-Clevis |
| 31 | 92-1298 | 4 | Pin-Lynch |
| 32 | 3296-52 | 4 | Nut-Lock NI |
| 33 | 107-8001 | 1 | Harness-Wire, Electric Brake |
| 34 | 92-4524-03 | 1 | Bracket |
| 35 | 92-4541 | 1 | Plug-Cap, Wire |
| 36 | 3290-93 | 4 | Screw-Head, Pan |
| 37 | 3256-25 | 1 | Washer-Flat |
| 38 | 3296-2 | 2 | Nut-Lock |
| 40 | 108-3144 | 1 | Controler-Brake, Electric |
| 41 | 32105-20 | 2 | Screw-HH |
| 43 | 218-594 | 1 | Fuse-20 Amp (Not Illustrated) |
| 45 | 106-7969 | 1 | Coupler-Quick, Male |
| 46 | 106-7968 | 1 | Coupler-Quick, Female |
| 47 | 106-1381 | 2 | Fitting-Straight |
| 47:1 | 237-42 | 1 | O-Ring |
| 48 | 92-2672 | 2 | Coupling-HYD |

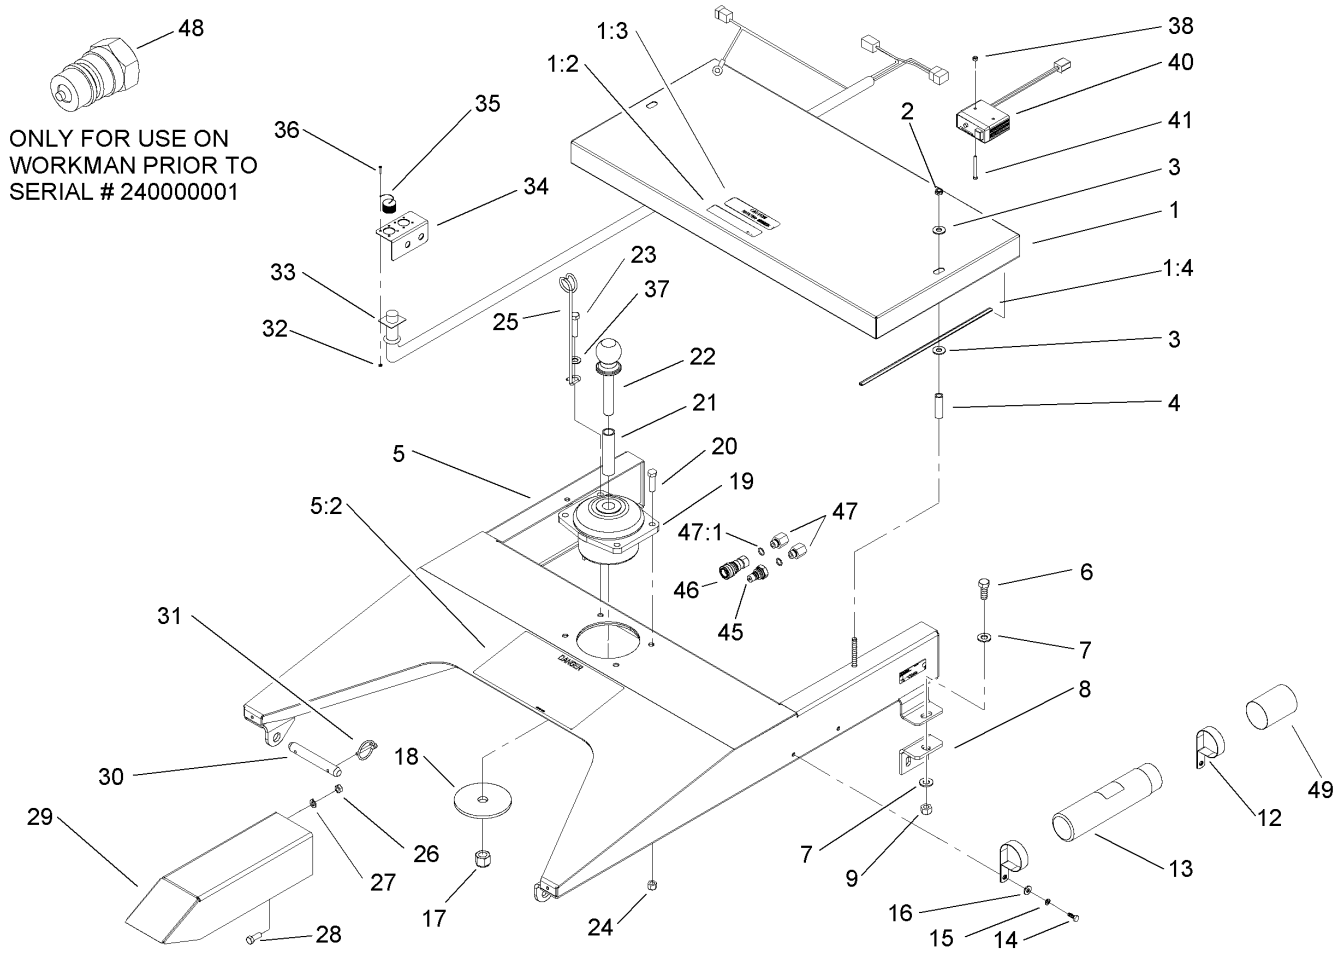


# Fifth Wheel Hitch Assembly (continued)

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 49 | 104-7048 | 1 | Cap-Housing |


TORO®