Form Number 3352-972

# 43cm Recycler® Mower

**Model No. 21012 - 240000001 and up.**

## Parts Catalog

**Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

# Contents


| Description | Page | Description | Page |
|---|---|---|---|
| Housing Assembly | . . . . . 3 | Engine Installation Assembly | . . . . . 6 |
| Rear Axle Assembly | . . . . . 4 | Grass Bag Assembly | . . . . . 7 |
| Blade Assembly | . . . . . 5 | Handle Assembly | . . . . . 8 |


# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PPH. . . . . phillips pan head
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
ROPS. . . . . roll over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard

# Footnotes

❶ Not serviced separately

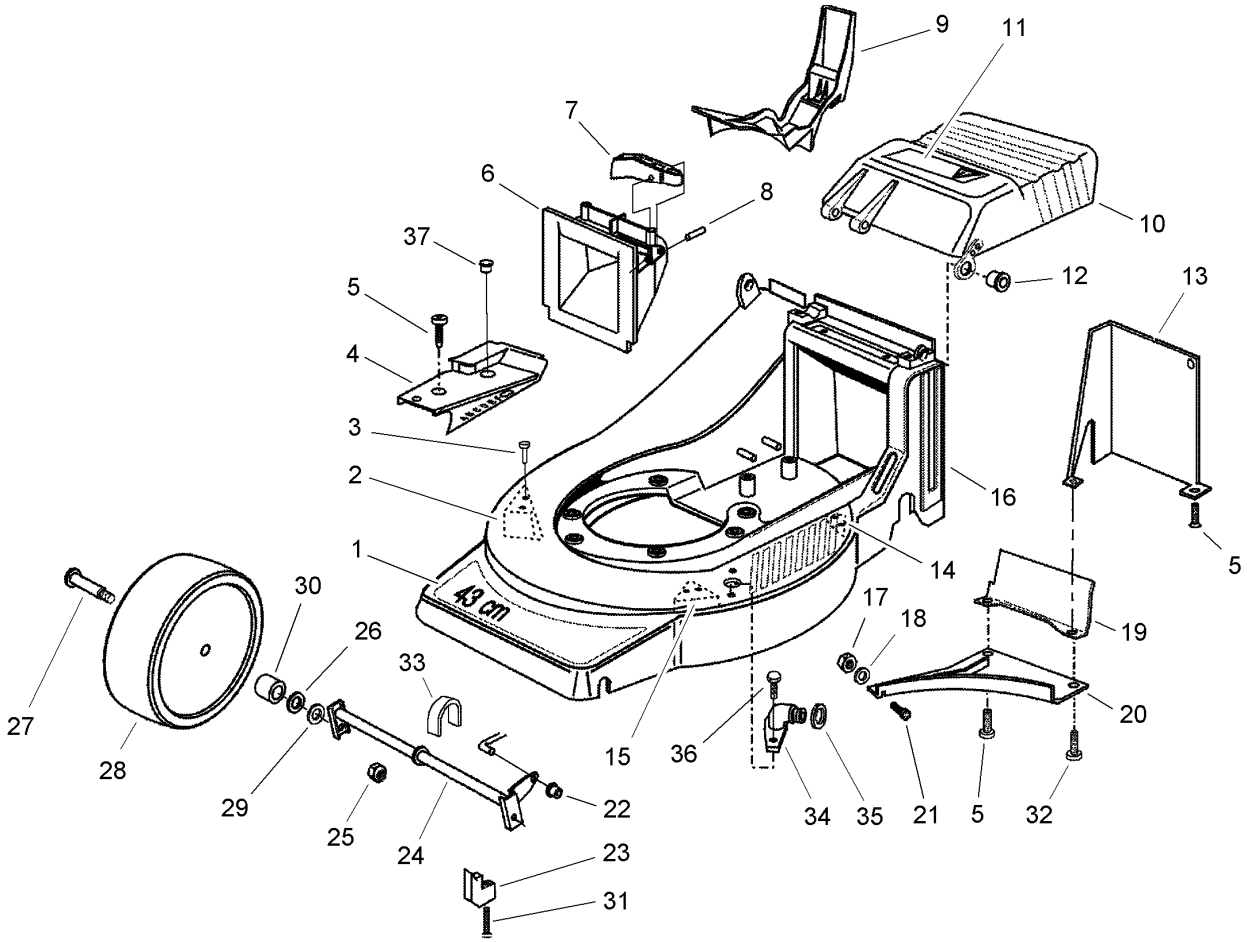


# Housing Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 95-6839 | 1 | Decal |
| 2 | 93-3730 | 1 | Kicker |
| 3 | 32144-111 | 6 | Screw-PPH |
| 4 | 106-4750 | 1 | Cover-Belt |
| 5 | 95-6941 | 4 | Screw |
| 6 | 93-4054 | 1 | Grip-Lower |
| 7 | 98-3236 | 1 | Trigger-Height Of Cut |
| 8 | 3284-5 | 1 | Pin-Spiral |
| 9 | 93-3790 | 1 | Plug |
| 10 | 99-1700 | 1 | Discharge Door ASM |
| 11 | 99-1708 | 1 | Decal-Danger |
| 12 | 93-3794 | 1 | Bushing-Door |
| 13 | 98-1429 | 1 | Cover-Shield |
| 14 | 93-3750 | 1 | Kicker |
| 15 | 93-3740 | 1 | Kicker |
| 16 | 106-4751 | 1 | Housing |
| 17 | 3296-2 | 1 | Nut-Lock |
| 18 | 3256-21 | 1 | Washer-Flat |
| 19 | 93-4110 | 1 | Baffle-Bagger, Rear |
| 20 | 93-3720 | 1 | Baffle |
| 21 | 3250-13 | 1 | Screw-PPH |
| 22 | 32112-11 | 1 | Nut-Push |
| 23 | 98-3216 | 2 | Retainer-Axle |
| 24 | 93-4080 | 1 | Axle-Front |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 25 | 99-1711 | 2 | Nut-Lock |
| 26 | 40-1940 | 4 | Washer |
| 27 | 99-1712 | 2 | Bolt-Wheel |
| 28 | 93-4081 | 2 | Wheel-Front |
| 29 | 99-1713 | 2 | Washer-Wave |
| 30 | 93-7024 | 4 | Bushing |
| 31 | 93-3793 | 2 | Screw-Retainer |
| 32 | 94-1864 | 1 | Screw-Baffle |
| 33 | 98-3222 | 2 | Cap-Axle, Front |
| 34 | 95-2747 | 1 | Fitting-Washout |
| 35 | 46-6290 | 1 | O-Ring |
| 36 | 46-6811 | 2 | Screw-HWH |
| 37 | 95-6908 | 2 | Cap-Cover |

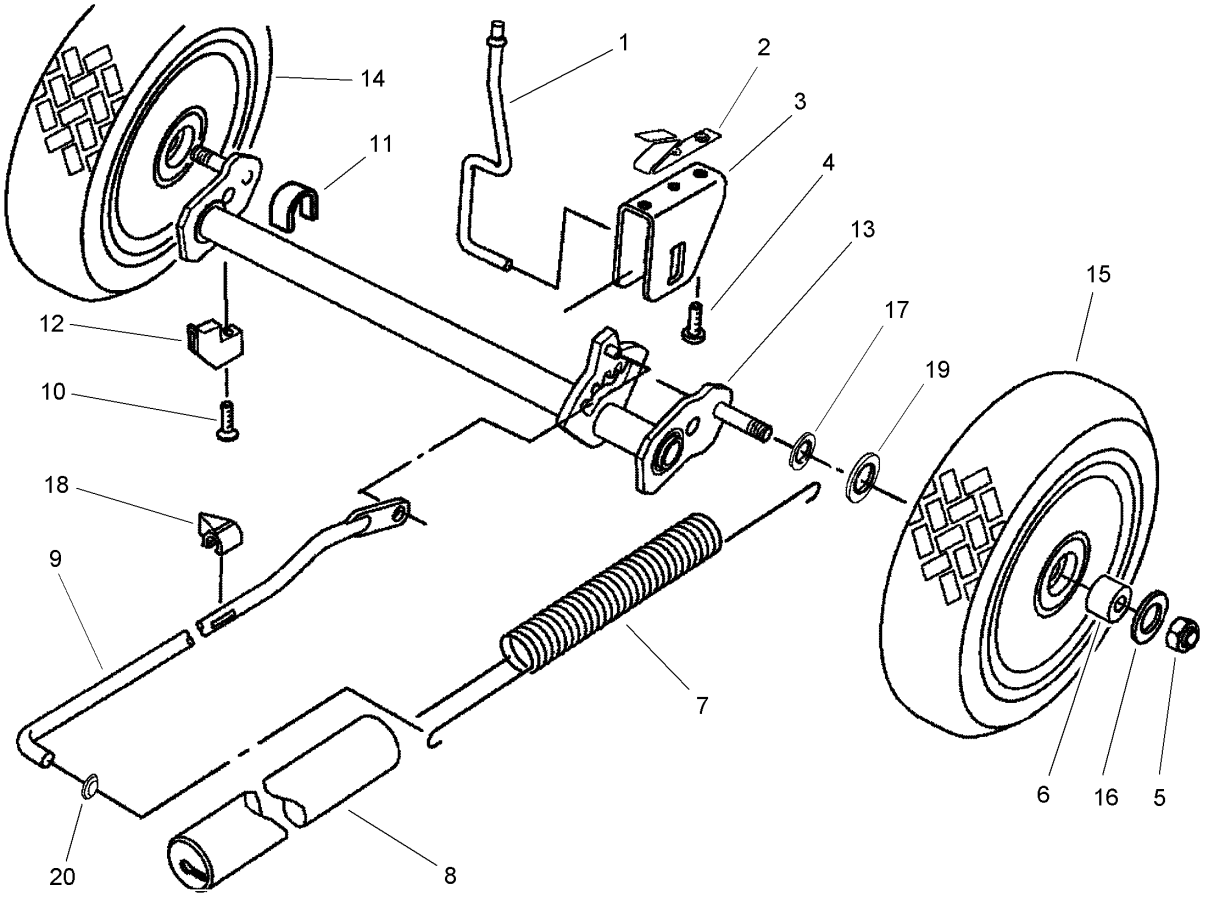


# Rear Axle Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 98-3232 | 1 | Rod-Trigger |
| 2 | 93-4062 | 1 | Spring-Return, Trigger |
| 3 | 93-4066 | 1 | Saddle-Height Of Cut |
| 4 | 93-4095 | 2 | Screw-Baffle |
| 5 | 93-4098 | 2 | Nut-Wheel |
| 6 | 93-7023 | 4 | Bushing |
| 7 | 71-7740 | 1 | Spring-Counterbalance |
| 8 | 71-8450 | 1 | Cover-Spring |
| 9 | 93-4065 | 1 | Rod-Link |
| 10 | 93-3793 | 2 | Screw-Retainer |
| 11 | 98-3226 | 2 | Cap-Axle, Rear |
| 12 | 98-3216 | 2 | Retainer-Axle |
| 13 | 93-4079 | 1 | Axle-Rear |
| 14 | 93-8492 | 1 | Wheel-Rear |
| 15 | 94-3313 | 2 | Wheel-Smart, Rear |
| 16 | 93-4097 | 2 | Washer-Wheel |
| 17 | 94-6723 | 2 | Cap-Axle, Rear |
| 18 | 71-7980 | 1 | Indicator-Height Of Cut |
| 19 | 94-6722 | 2 | Washer-Wave |
| 20 | 32112-11 | 1 | Nut-Push |

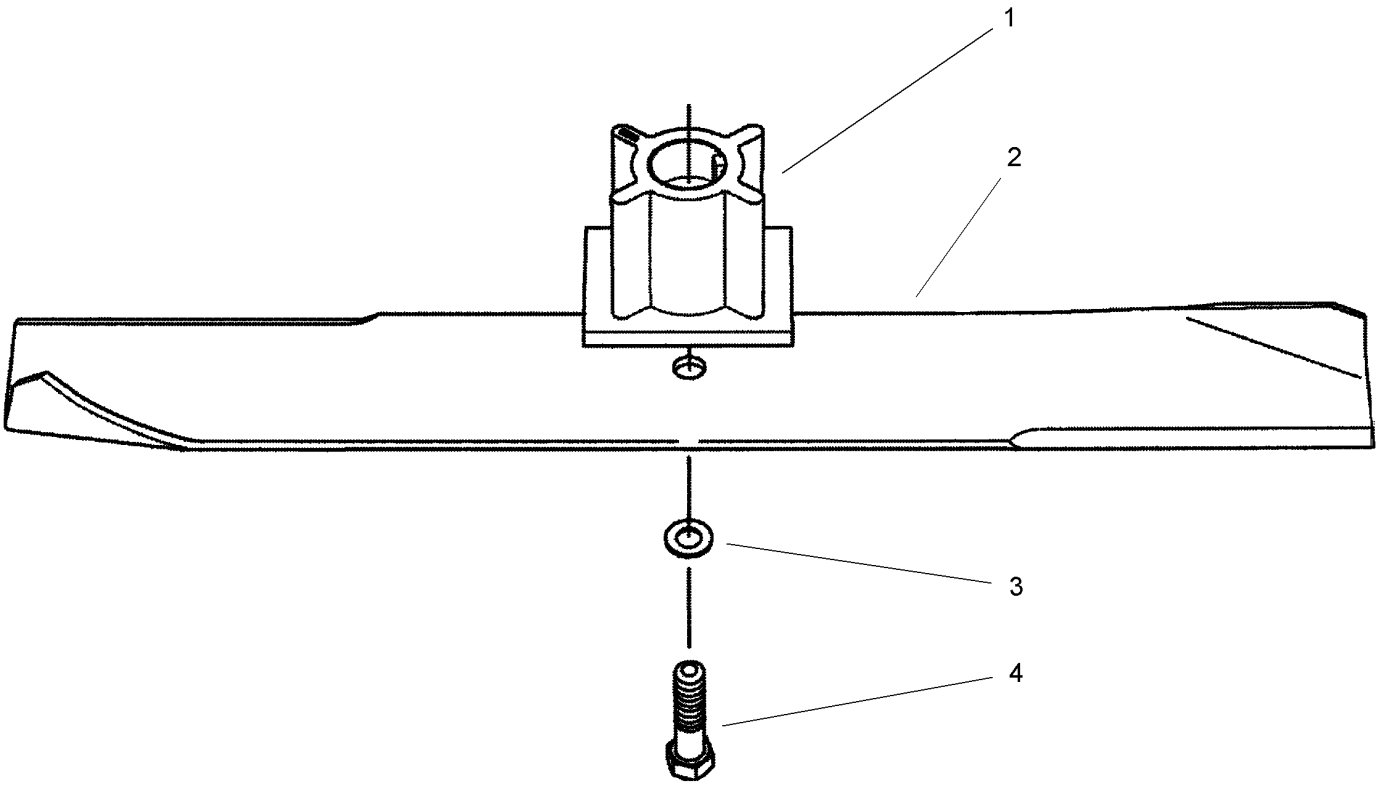


# Blade Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 93-4091 | 1 | Retainer-Blade |
| 2 | 98-1430 | 1 | Blade-Recyler |
| 3 | 3253-22 | 1 | Washer-Lock |
| 4 | 26-0672 | 1 | Bolt-Blade |

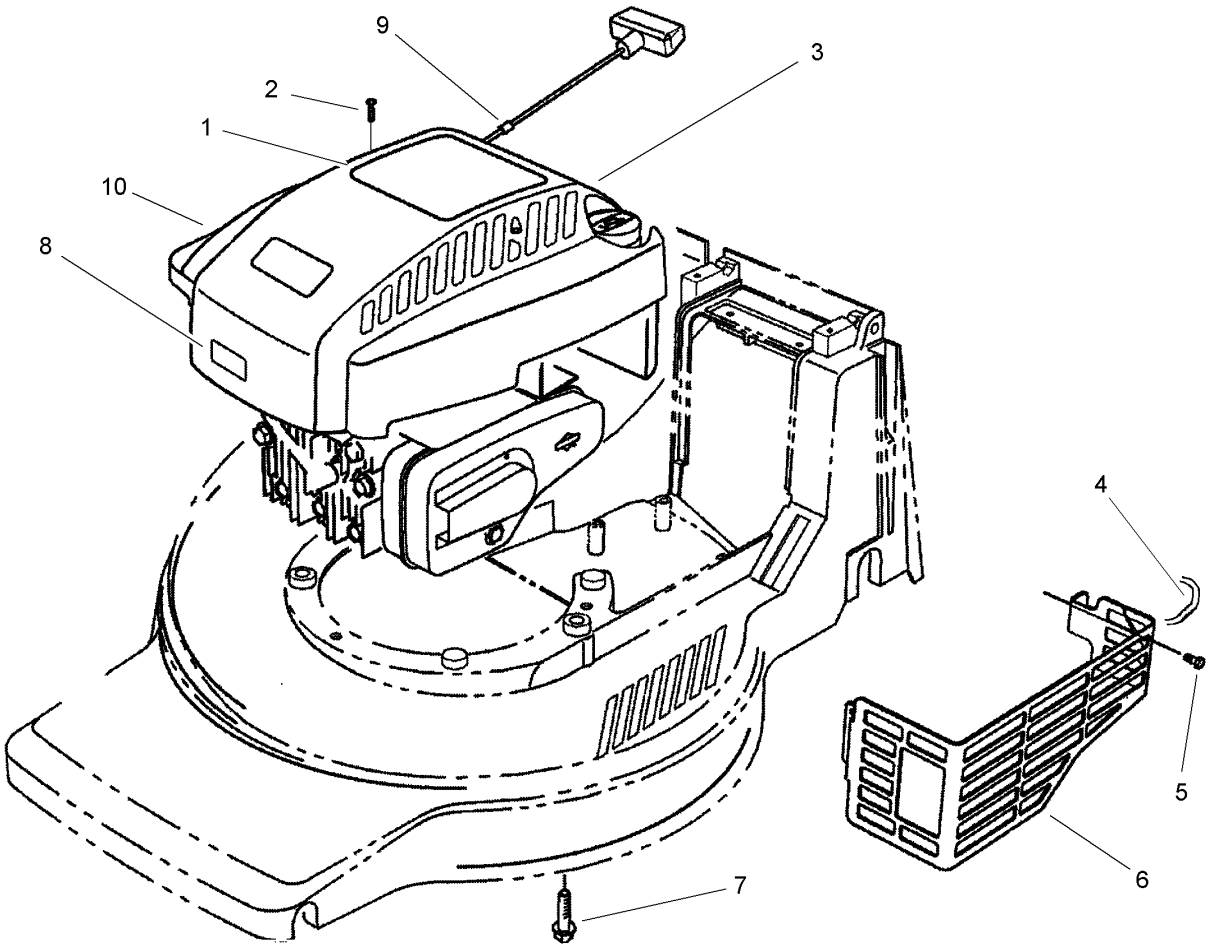


# Engine Installation Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 95-6838 | 1 | Decal-Shroud |
| 2 | 32144-121 | 2 | Screw-PPH |
| 3 | 93-0243 | 1 | Shroud-Engine |
| 4 | 3290-378 | 1 | Tie-Cable |
| 5 | 32144-73 | 1 | Screw-HWH |
| 6 | 82-8550 | 1 | Shield-Muffler |
| 7 | 32144-102 | 3 | Screw-HWH |
| 8 | 98-3206 | 1 | Decal |
| 9 | 2210-316 | 1 | Stop-Rope |
| ❶10 | | 1 | Engine |

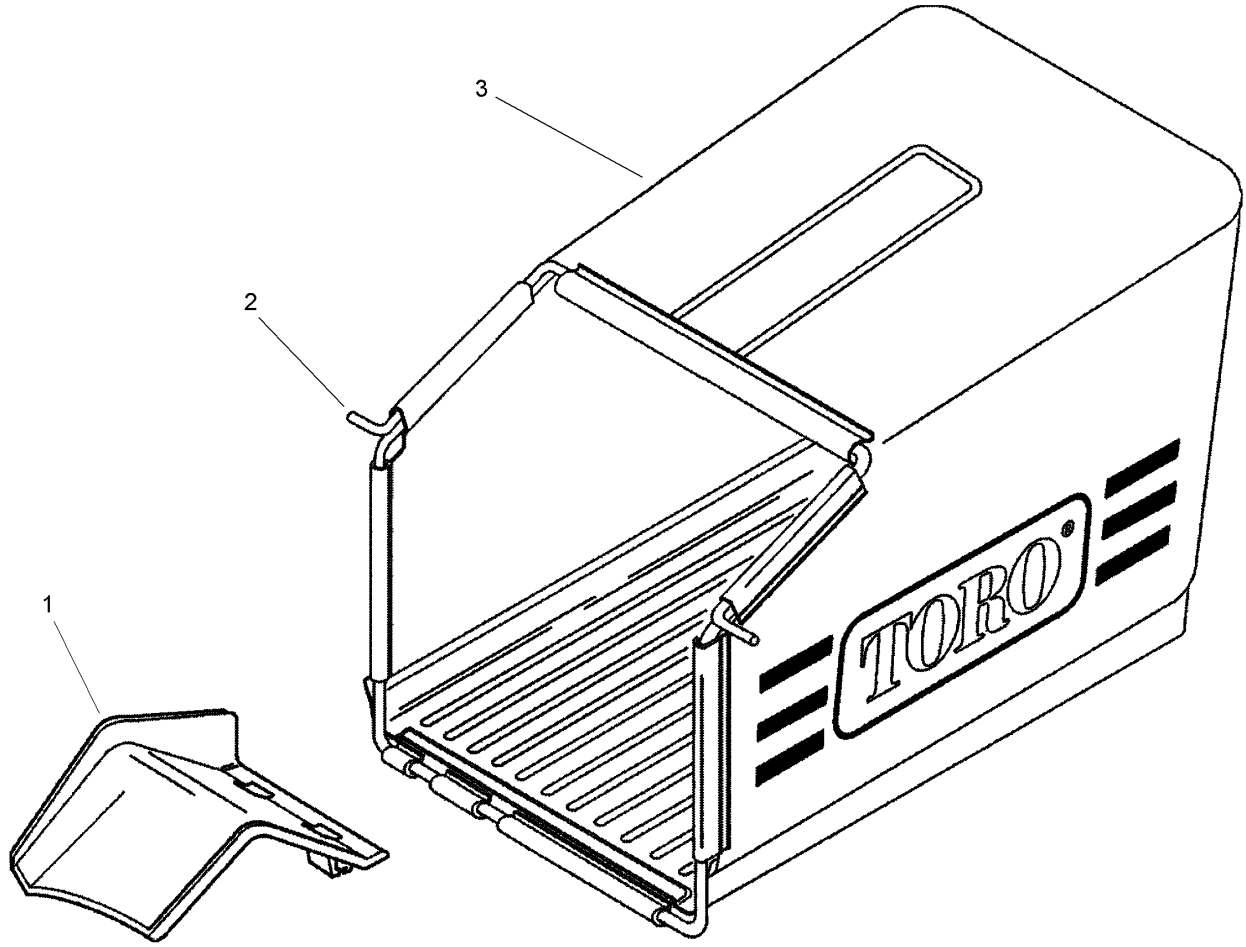


# Grass Bag Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 93-4087 | 1 | Remover-Bag, Grass |
| 2 | 93-4085 | 1 | Frame-Bag |
| 3 | 93-4086 | 1 | Bag-Grass |

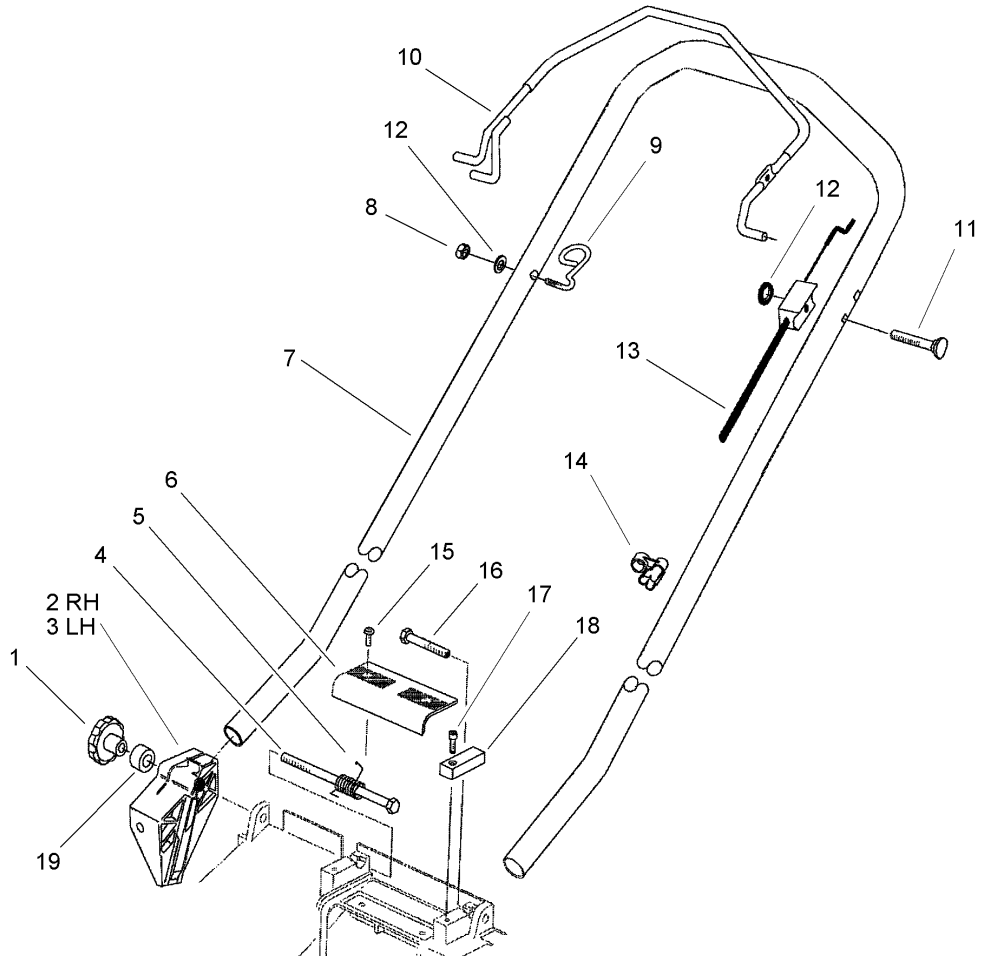


# Handle Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 19-4050 | 2 | Knob |
| 2 | 99-1710 | 1 | Mount-Handle, Right |
| 3 | 99-1705 | 1 | Mount-Handle, Left |
| 4 | 93-4058 | 1 | Bolt-Long |
| 5 | 93-4057 | 1 | Spring-Door |
| 6 | 71-7860 | 1 | Grip-Upper |
| 7 | 95-6946 | 1 | Handle |
| 8 | 3296-73 | 4 | Nut-Lock, NI |
| 9 | 95-4457 | 1 | Guide-Rope |
| 10 | 98-1431 | 1 | Bail-Brake |
| 11 | 95-6948 | 1 | Bolt |
| 12 | 3256-1 | 3 | Washer-Flat |
| 13 | 95-6947 | 1 | Cable-Brake |
| 14 | 93-4084 | 2 | Clamp-Cable |
| 15 | 32144-97 | 2 | Screw-Pph, Plastite |
| 16 | 93-4060 | 1 | Bolt-Short |
| 17 | 93-4094 | 2 | Screw-Cap, Hinge |
| 18 | 93-4056 | 2 | Cap-Bolt |
| 19 | 99-1717 | 2 | Spacer-Mount, Handle |

# NOTES

# NOTES

# NOTES

TORO®