Form Number 3354-365 Rev A

Super Recycler® Lawn Mower

Model No. 20057 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Register your product at www.Toro.com

© The Toro Company - 2006
All Rights Reserved

Contents

Description	Page
Housing Assembly	3
Housing Assembly No. 108-4750	4
Height-of-Cut Assembly	5
Transmission Assembly	6
Gear Case Assembly No. 108-8140	7
Engine Assembly	8
Handle Assembly	9
Handle Traction Assist Assembly	10
Rear Bag Assembly	11
Cylinder Assembly Briggs and Stratton 122672-0192-E1	12
Cylinder Head Assembly Briggs and Stratton 122672-0192-E1	13
Crankshaft Assembly Briggs and Stratton 122672-0192-E1	14
Crankcase Assembly Briggs and Stratton 122672-0192-E1	15
Carburetor Assembly Briggs and Stratton 122672-0192-E1	16
Air Cleaner Assembly Briggs and Stratton 122672-0192-E1	17
Governor Assembly Briggs and Stratton 122672-0192-E1	18
Muffler and Fuel Tank Assembly Briggs and Stratton 122672-0192-E1	19
Blower Housing Assembly Briggs and Stratton 122672-0192-E1	20
Starter Assembly Briggs and Stratton 122672-0192-E1	21
Valve and Engine Gasket Set Assemblies Briggs and Stratton 122672-0192-E1	22
Carburetor Overhaul Kit and Gasket Set Assemblies Briggs and Stratton 122672-0192-E1	23
Attachments and Accessories List	24

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over-protection-system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated

❷ Not serviced separately

❸ Obtain from your local Briggs & Stratton dealer

❹ For use only on Models with BBC

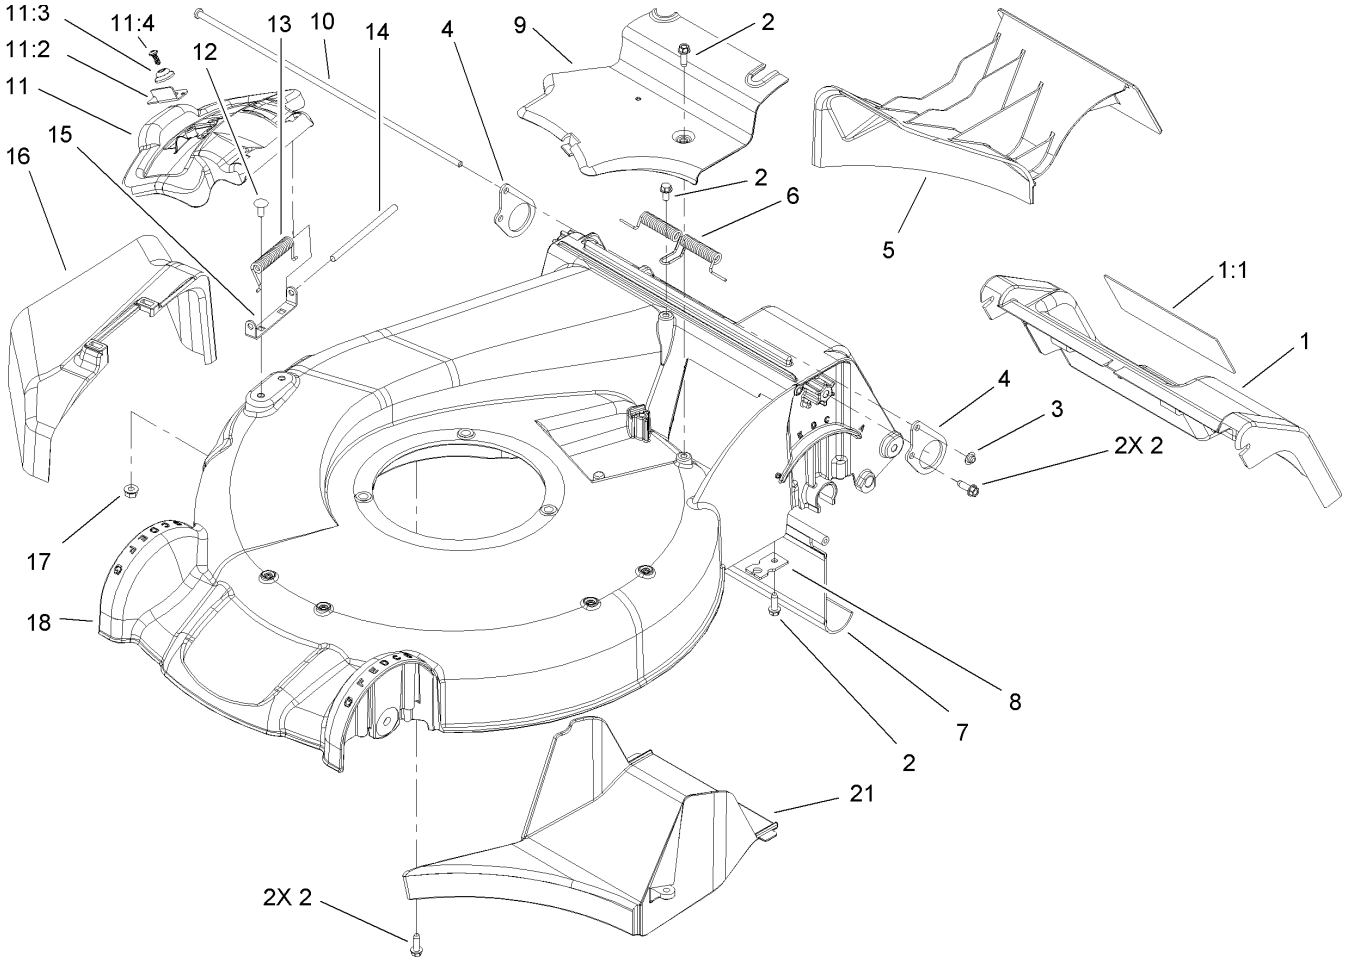

Housing Assembly

Ref	Part No.	Qty.	Description
1	108-8169	1	Door-Service
1:1	105-1295	1	Decal-Warning
2	49-2040	7	Screw-HWHTF
3	3290-337	1	Nut-Speed
4	107-7493	2	Plate-Support, Door
5	107-7490	1	Plug-Mulch
6	105-3032	1	Spring-Door, Rear
7	107-7496	1	Shield-Trailing
8	107-7497	1	Bracket-Cable, Traction
9	107-7494	1	Cover-Belt
10	107-7499	1	Rod-Support, Door
11	107-3717	1	Discharge Door ASM
11:2	107-0795	1	Latch-Door
11:3	107-7456	1	Cap-Door
11:4	107-7461	1	Screw-Plastite
12	3229-11	2	Screw-CARR
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	99-5292	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
17	32128-32	2	Nut-HHF
18	108-4750	1	Housing ASM
21	107-7495	1	Tunnel-Discharge

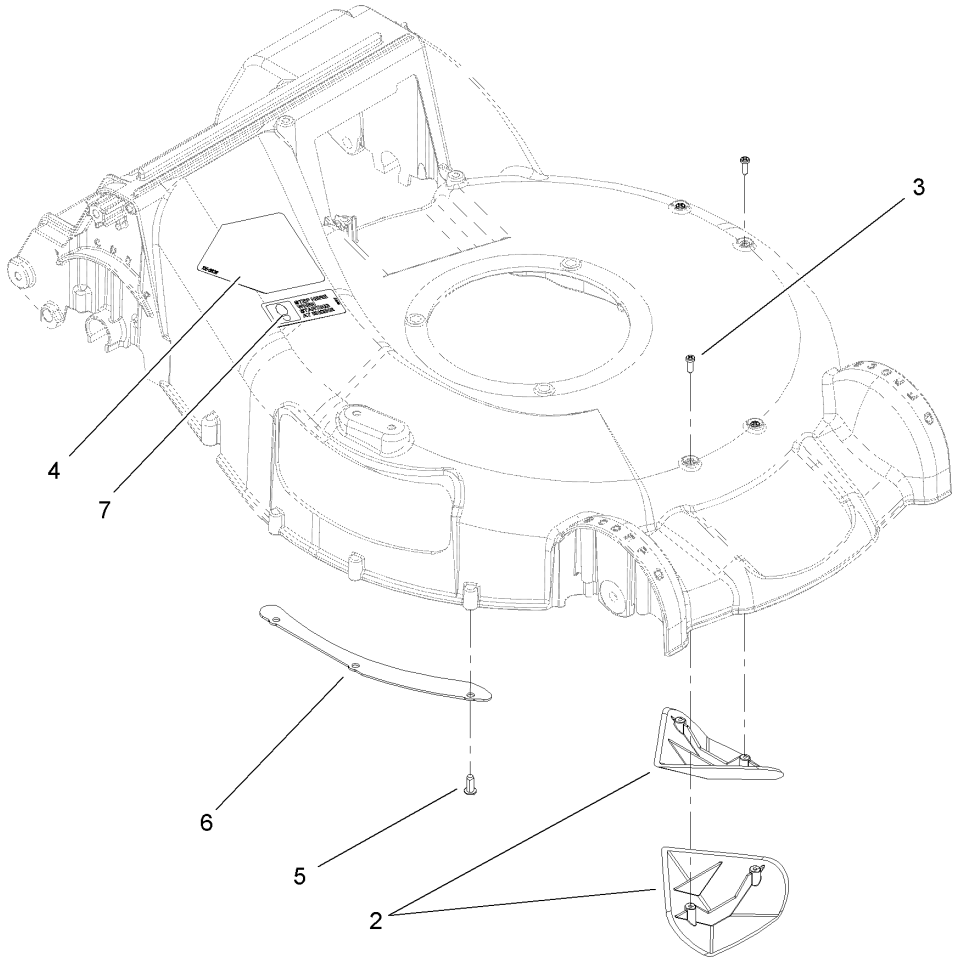

Housing Assembly No. 108-4750

Ref	Part No.	Qty.	Description
2	108-3798	2	Kicker-Housing
3	32144-111	4	Screw-PPH
4	105-6838	1	Decal-Danger
5	63-8590	3	Screw
6	105-1316-03	1	Sheet-Lip
❹7	108-8117	1	Decal-Placement, Foot

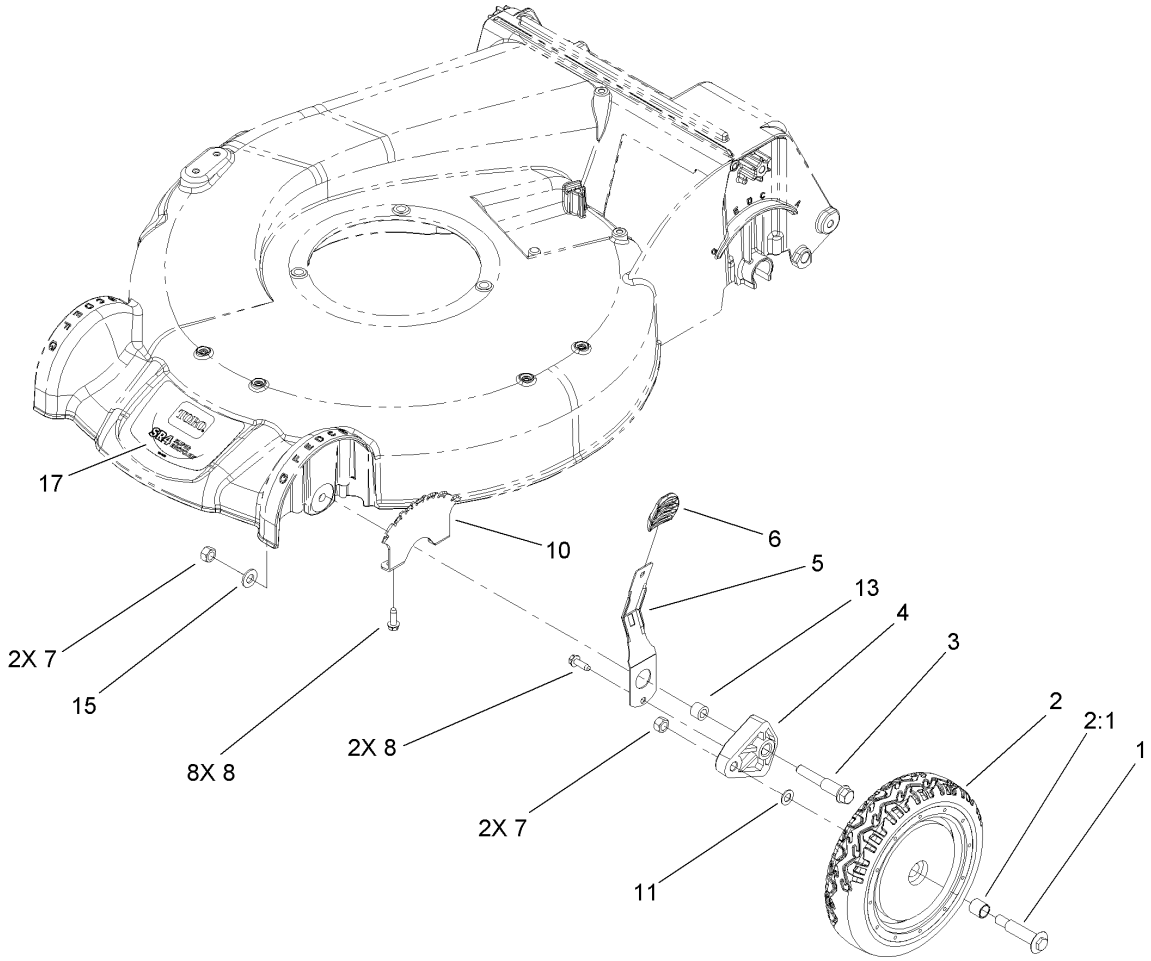

Height-of-Cut Assembly

Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3708	2	Wheel ASM
2:1	27-6250	2	Bushing
3	107-7498	2	Screw-Shoulder, HOC
4	107-7492	2	Arm-Pivot
5	107-7491	2	Spring Arm
6	105-3042	2	Knob-Lever, HOC
7	603773	4	Nut
8	49-2040	10	Screw-HWHTF
10	107-7478	4	Plate-HOC
11	40-1940	2	Washer
13	52-2480	2	Spacer-Wheel
15	3256-24	2	Washer-Flat
17	108-8168	1	Decal

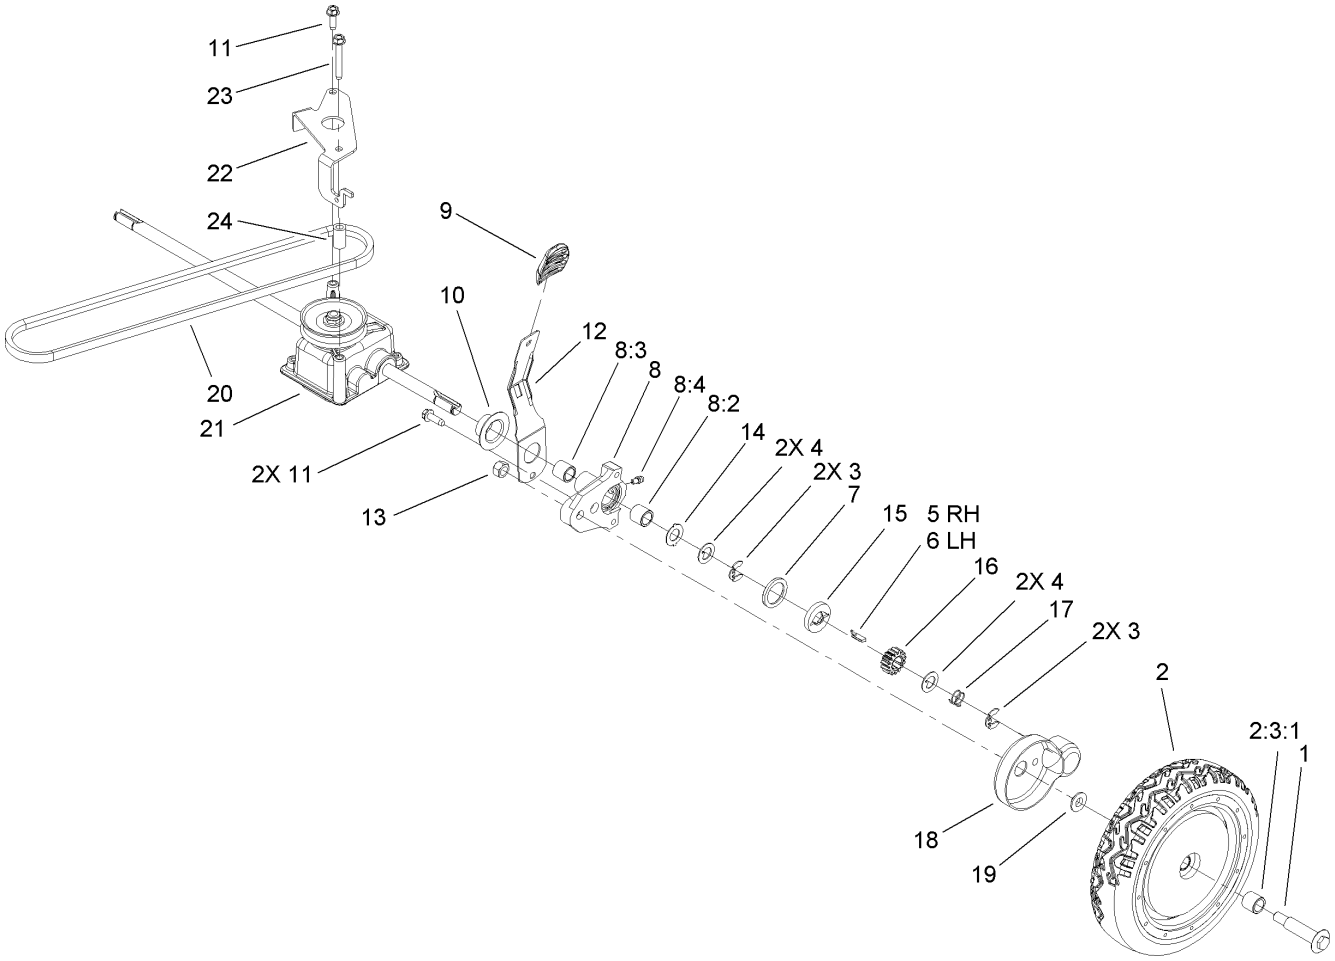

Transmission Assembly

Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3709	2	Wheel Gear ASM
❶❷2:3		1	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
❶5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	3	Screw-HWHTF
12	107-7491	2	Spring Arm
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel

Ref	Part No.	Qty.	Description
20	99-1597	1	V-Belt
21	108-8140	1	Gear Case ASM
22	107-7483-03	1	Bracket-Gearbox
23	92-1616	1	Screw-HWHTF
24	614673	1	Bushing-Plate, Actuator

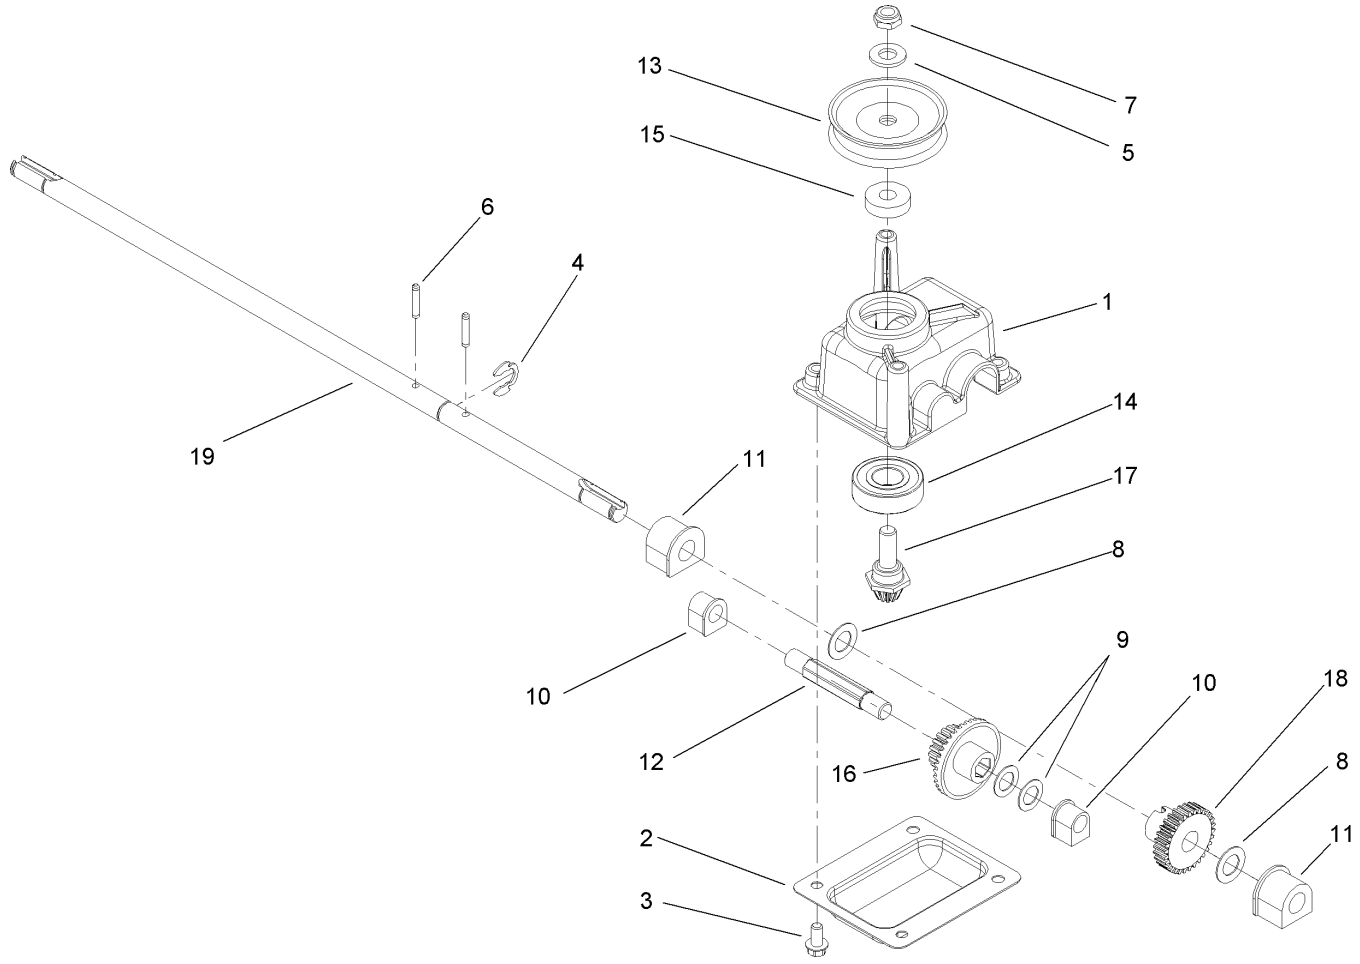

Gear Case Assembly No. 108-8140

Ref	Part No.	Qty.	Description
1	104-7619	1	Case-Gear
2	614668-03	1	Cover-Case, Gear
3	32144-4	4	Screw-HWH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock
8	36-4780	2	Washer
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing
12	614696	1	Shaft-Intermediate
13	100-1176	2	Pulley-Half
14	100-1048	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-1005	1	Gear-19T Spur, 37T Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	104-1004	1	Gear-30T
19	108-8141	1	Shaft-Output

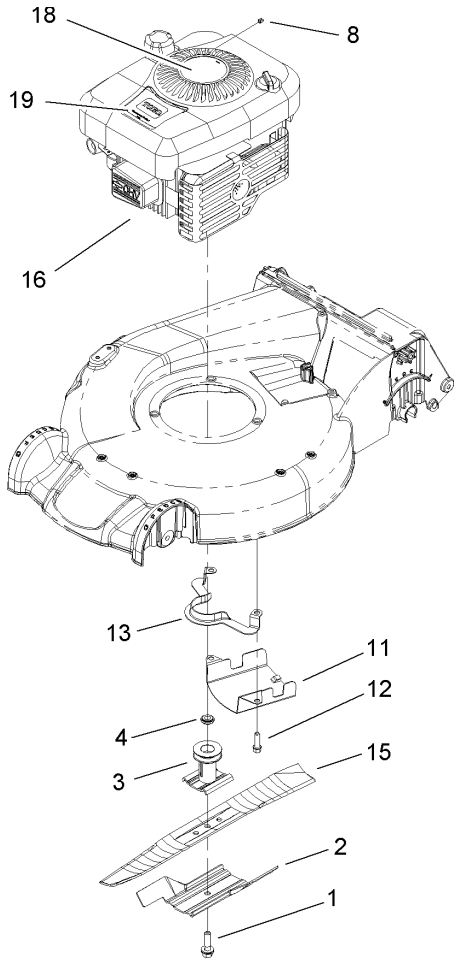

Engine Assembly

Ref	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade
2	105-6848-03	1	Accelerator-Blade
3	106-3987	1	Blade Driver ASM
4	106-3999	1	Spacer-Driver
8	2210-316	1	Stop-Rope
11	107-7489-03	1	Shield-Grass
12	95-1727	3	Screw-Taptite
13	108-8110-03	1	Guide-Belt
15	108-3762-03	1	Blade-Recycling
❷❸16		1	Engine-Briggs And Stratton, 122672-0192-E1
18	112-6406	1	Decal-Intek Recoil
19	108-8132	1	Decal

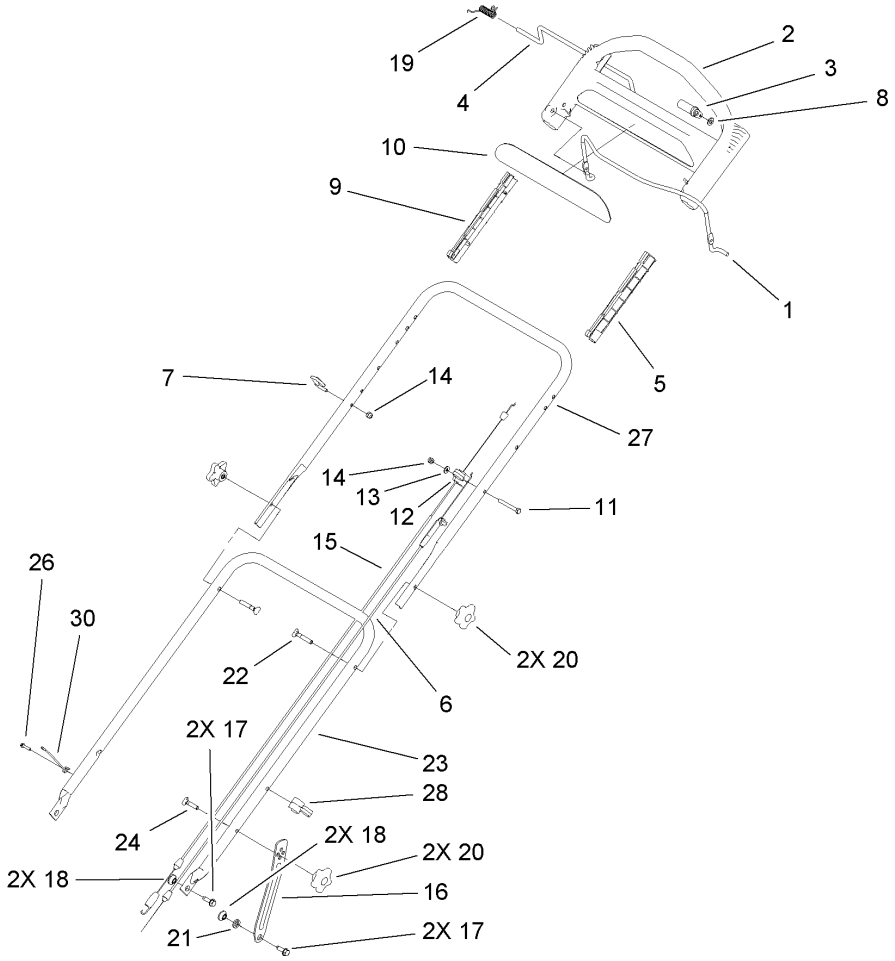

Handle Assembly

Ref	Part No.	Qty.	Description
1	104-8679-03	1	Bail-Brake
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
6	108-8157	1	Cable-Brake
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	108-8134	1	Decal-Handle
11	95-4453	1	Screw
12	99-5239	1	Anchor-Cable
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	108-8158	1	Cable-Traction
16	108-8145-03	2	Support-Handle
17	701243	4	Screw-HWHTF
18	27-6600	4	Spacer-Coupling
19	104-8690	1	Spring-Torsion
20	108-8162	4	Knob-Locking
21	55-9670	2	Washer
22	92-2260	2	Screw-Handle
23	107-7476-05	1	Handle-Lower
24	92-2260	2	Screw-Handle

Ref	Part No.	Qty.	Description
26	32144-53	1	Screw-SHWH
27	107-3783-05	1	Handle-Upper
28	106-6805	1	Guide-Cable
30	108-9452	1	Hook-Rope, Displacement

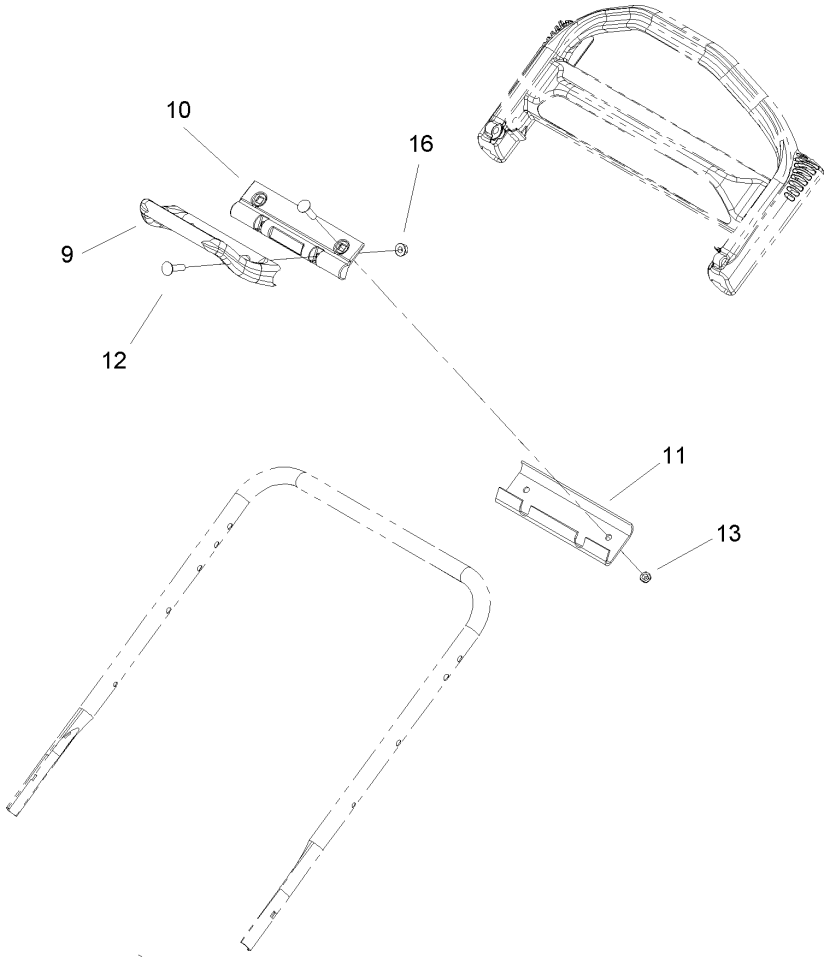

Handle Traction Assist Assembly

Ref	Part No.	Qty.	Description
9	104-7943	1	Handle-Traction Assist
10	108-3756-03	1	Bracket-Handle, Assist
11	108-3758-03	1	Bracket-Handle, Assist
12	3230-29	4	Screw-CARR
13	3296-72	2	Nut-Lock, NI
16	32128-20	2	Nut-HF

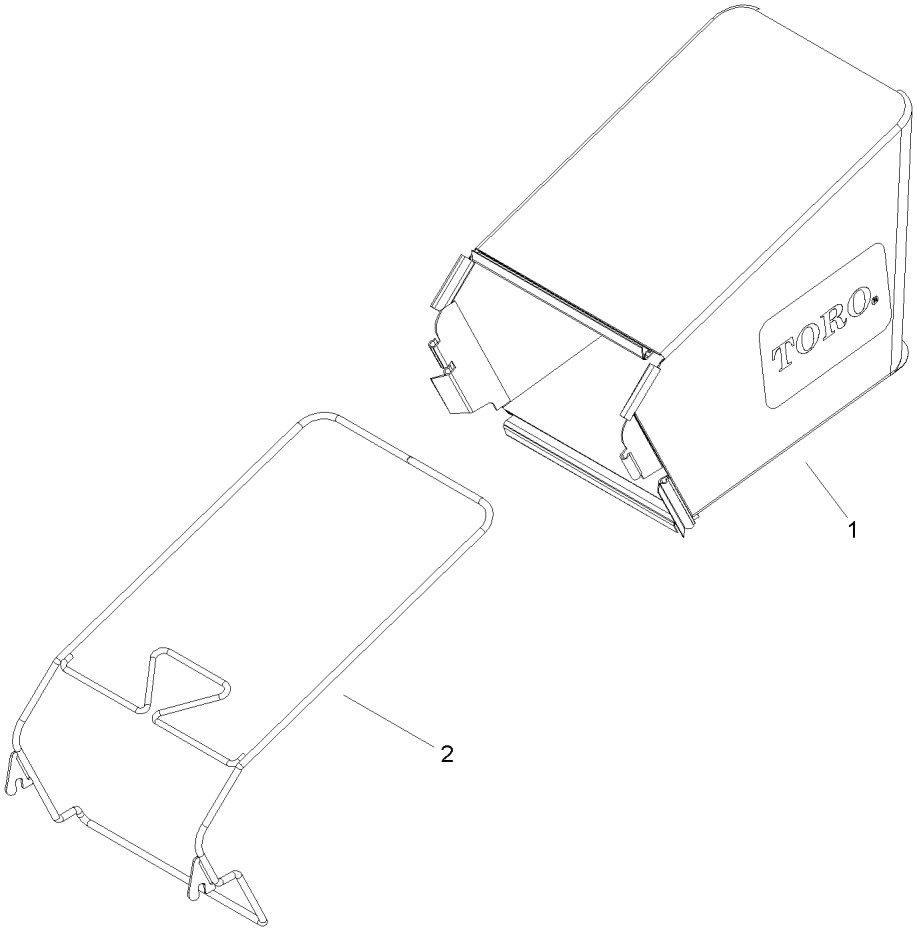

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	107-3789	1	Grass Bag ASM
2	107-3785-03	1	Bag Frame ASM

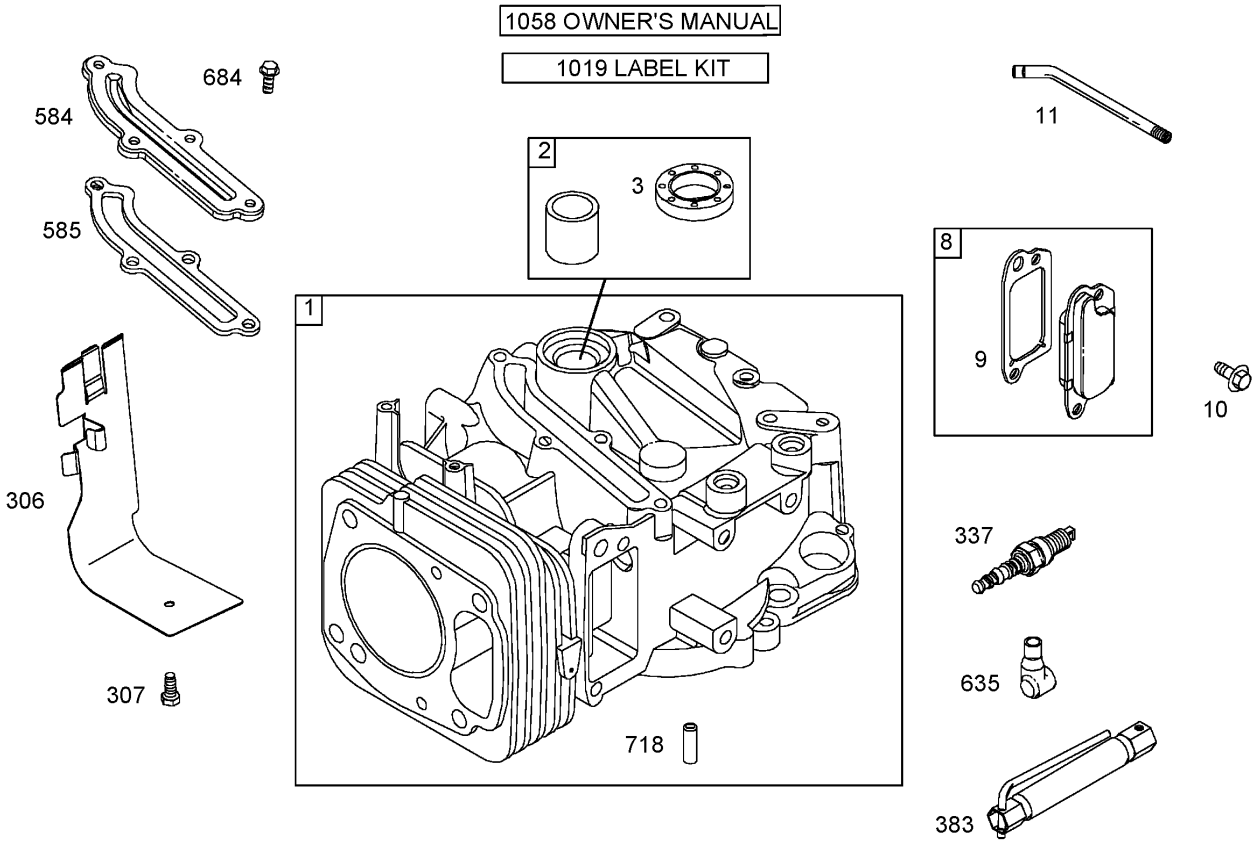

Cylinder Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description
❸1	790363	1	Cylinder ASM
❸2	399269	1	Bushing/Seal Kit (Magneto Side)
❸3	299819	1	Seal–Oil (Magneto Side)
❸8	495786	1	Breather ASM
❸9	699833	1	Gasket–Breather
❸10	691125	1	Screw (Breather ASM)
❸11	691260	1	Tube–Breather
❸306	691232	1	Shield–Cylinder
❸307	690345	1	Screw (Cylinder Shield)
❸337	692051	1	Sparkplug
❸383	19374	1	Wrench-Spark Plug
❸584	697734	1	Cover-Passage, Breather
❸585	691879	1	Gasket-Passage, Breather
❸635	66538	1	Boot-Plug, Spark
❸684	690345	1	Screw (Breather Passage Gasket)
❸718	690959	1	Pin-Locating
❸1019	695811	1	Label Kit
❸1058	274979	1	Manual-Owner's

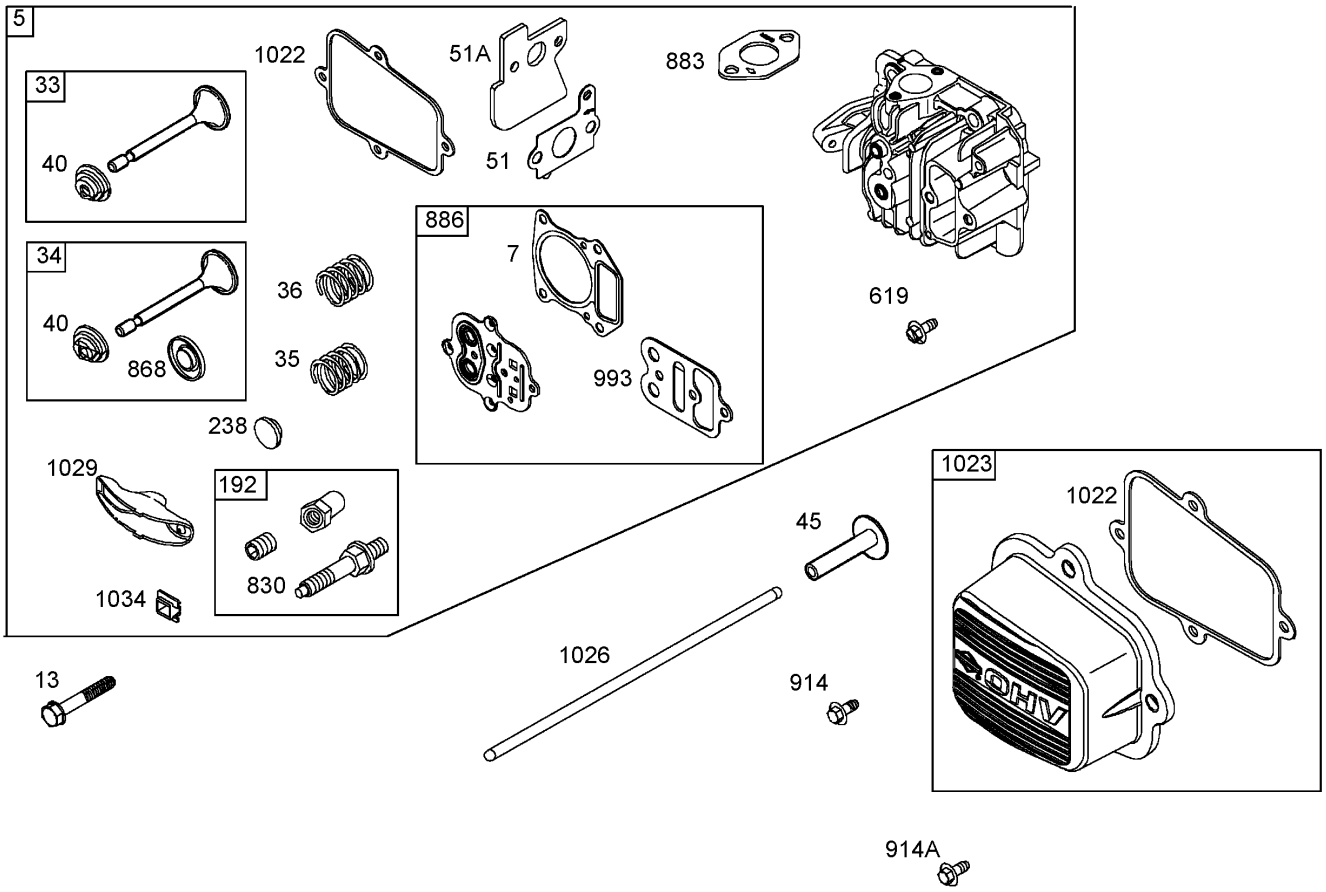

Cylinder Head Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description
❸5	695276	1	Head–Cylinder
❸7	697230	1	Gasket–Head, Cylinder
❸13	691137	1	Screw (Cylinder Head)
❸33	499642	1	Valve-Exhaust
❸34	499641	1	Valve-Intake
❸35	691304	1	Spring-Valve (Intake)
❸36	691304	1	Spring-Valve (Exhaust)
❸40	692194	1	Retainer-Valve
❸45	690977	1	Valve-Tappet
❸51	692668	1	Gasket-Intake
❸51A	692799	1	Gasket-Intake
❸192	694543	1	Adjuster-Arm, Rocker
❸238	691300	1	Cap-Valve
❸619	691108	1	Screw (Cylinder Head Plate)
❸830	694544	1	Stud-Arm, Rocker
❸868	692044	1	Seal-Valve
❸883	691893	1	Gasket-Exhaust
❸886	696268	1	Cylinder Head/Plate Gasket Kit
❸914	691127	1	Screw (Rocker Cover)
❸914A	691108	1	Screw (Rocker Cover)
❸993	694088	1	Gasket-Plate, Cylinder Head
❸1022	691890	1	Gasket-Cover, Rocker
❸1023	692694	1	Cover–Rocker
❸1026	692045	1	Rod–Push

Ref	Part No.	Qty.	Description
❸1029	691230	1	Arm-Rocker
❸1034	691343	1	Guide-Rod, Push

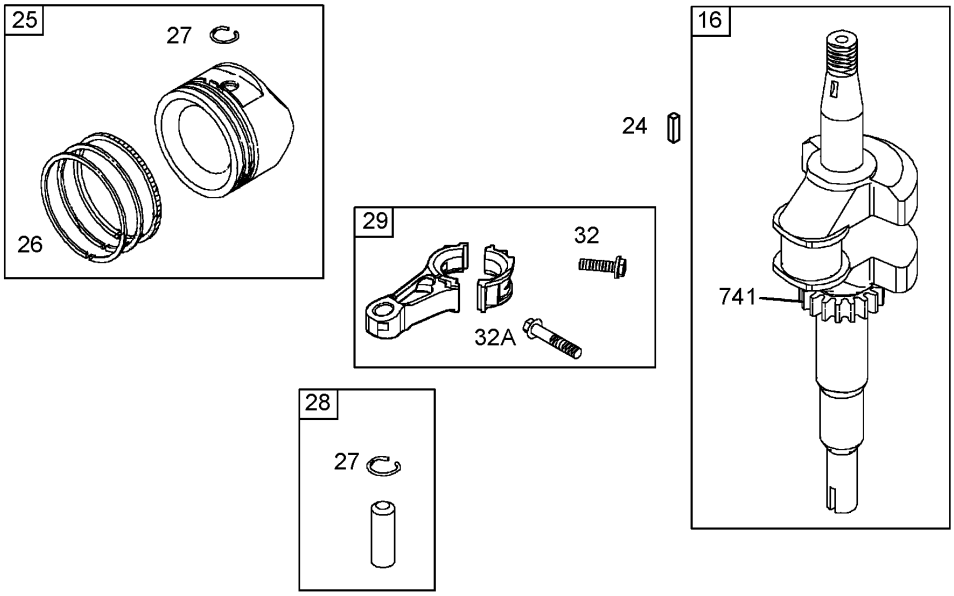

Crankshaft Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description
❸16	695950	1	Crankshaft
❸24	222698	1	Key
❸25	499627	1	Piston ASM (Standard)
❸25	692789	1	Piston ASM (.020In Oversize)
❸26	499631	1	Ring Set (Standard)
❸26	692786	1	Ring Set (.020In Oversize)
❸27	691866	1	Lock-Pin, Piston
❸28	499423	1	Pin-Piston (Standard)
❸29	499424	1	Rod-Connecting (Standard)
❸32	691664	1	Screw (Connecting Rod)
❸32A	695759	1	Screw (Connecting Rod)
❸741	790345	1	Gear-Timing

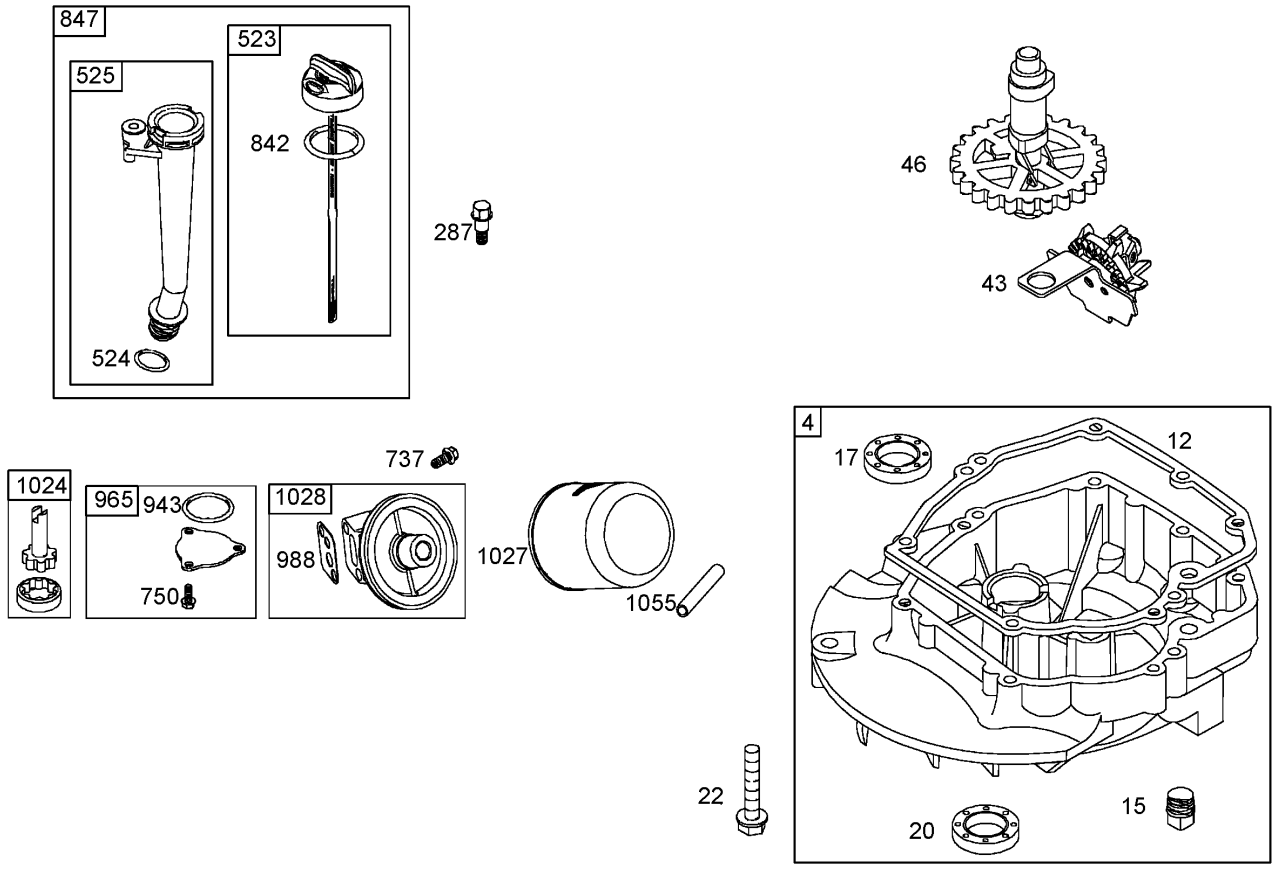

Crankcase Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description
❸4	692509	1	Sump–Engine
❸12	692232	1	Gasket-Crankcase (.015 Thick, Standard)
❸15	691680	1	Plug-Drain, Oil
❸17	692517	1	Bearing–Ball
❸20	399781	1	Seal–Oil (PTO Side)
❸22	691092	1	Screw (Engine Sump)
❸43	691997	1	Slinger-Governor/Oil
❸46	694039	1	Camshaft
❸287	690940	1	Screw (Dipstick Tube)
❸523	499621	1	Dipstick
❸524	692296	1	Seal-O Ring (Dipstick Tube)
❸525	495265	1	Tube-Dipstick
❸737	692511	1	Screw (Oil Filter Adapter)
❸750	691683	1	Screw (Oil Pump Cover)
❸842	691031	1	Seal-O Ring (Dipstick Tube)
❸847	692047	1	Dipstick/Tube ASM
❸943	692514	1	Seal-O Ring (Oil Pump Cover)
❸965	692507	1	Cover–Pump, Oil
❸988	692515	1	Gasket–Adapter, Oil
❸1024	692508	1	Tube–Pump, Oil
❸1027	692513	1	Filter–Oil
❸1028	692516	1	Adapter–Filter, Oil
❸1055	692623	1	Tube–Pump, Oil

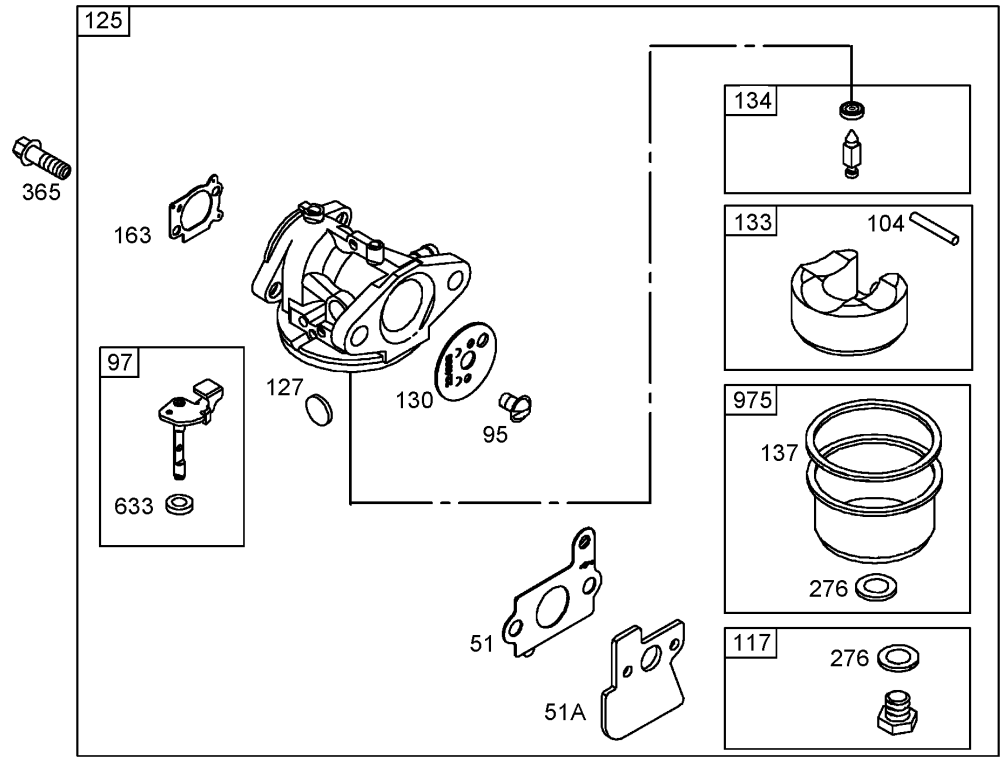

Carburetor Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description
❸51	692668	1	Gasket-Intake
❸51A	692799	1	Gasket-Intake
❸95	691636	1	Screw (Throttle Valve)
❸97	790121	1	Shaft–Throttle
❸104	691242	1	Pin-Hinge, Float
❸117	498978	1	Jet-Main (Standard)
❸125	790120	1	Carburetor
❸127	694468	1	Plug-Welch
❸130	696564	1	Valve-Throttle
❸133	398187	1	Float-Carburetor
❸134	398188	1	Needle/Seat Kit
❸137	693981	1	Gasket-Bowl, Float
❸163	691894	1	Gasket–Cleaner, Air
❸276	271716	1	Washer-Sealing
❸365	691136	1	Screw (Carburetor)
❸633	691321	1	Seal (Choke/Throttle Shaft)
❸975	493640	1	Bowl-Float

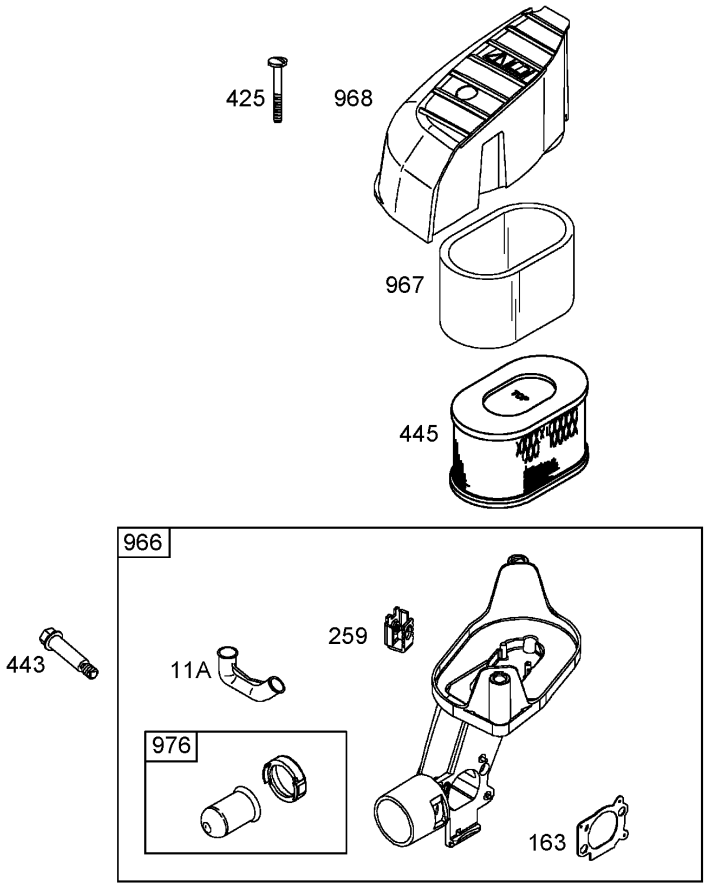

Air Cleaner Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description
❸11A	692937	1	Grommet
❸163	691894	1	Gasket–Cleaner, Air
❸259	691189	1	Bracket–Clamp, Casing
❸425	690244	1	Screw (Air Cleaner Cover)
❸443	690255	1	Screw (Air Cleaner Primer Bracket)
❸445	697029	1	Filter-Cartridge, Air Cleaner
❸966	690243	1	Base–Primer, Air Cleaner
❸967	273356	1	Filter-Pre Cleaner
❸968	692692	1	Cover–Cleaner, Air
❸976	694395	1	Primer-Carburetor

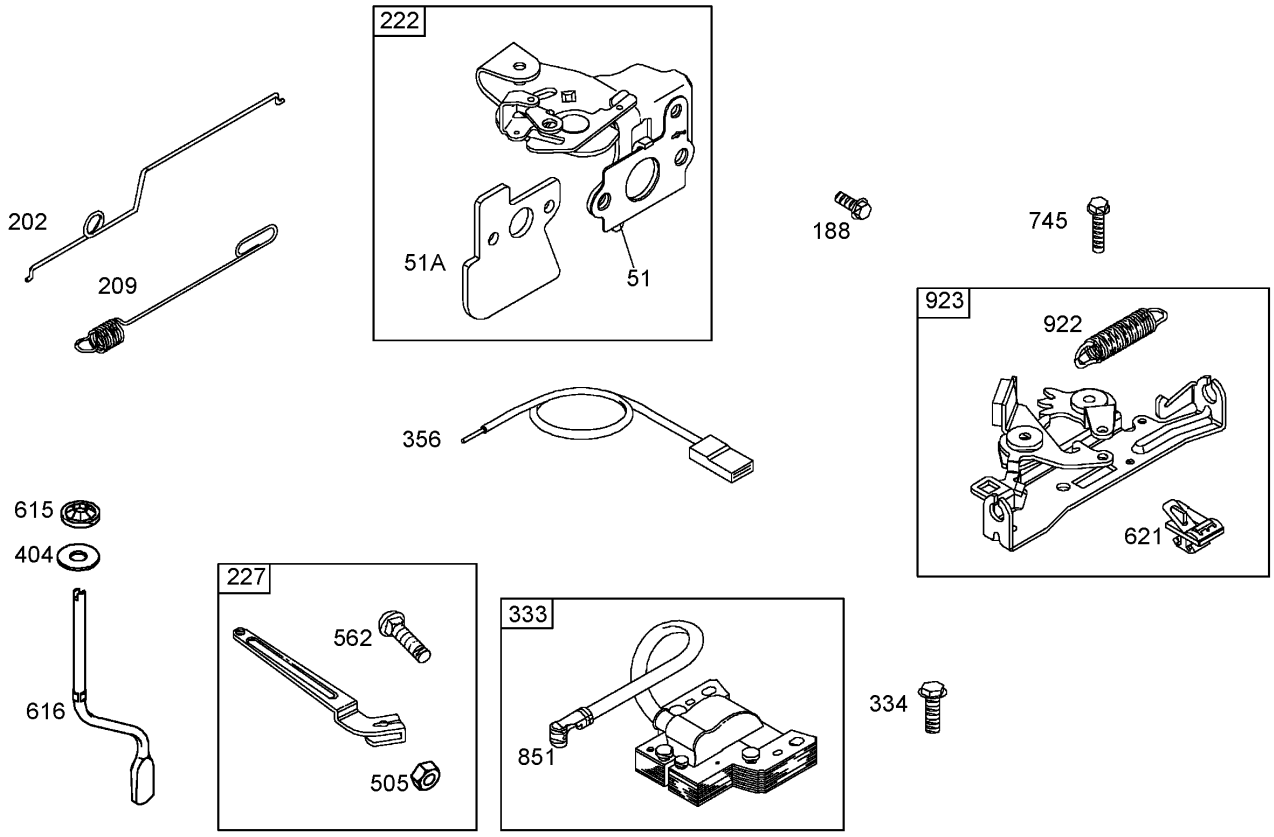

Governor Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description
❸51	692668	1	Gasket-Intake
❸51A	692799	1	Gasket-Intake
❸188	691147	1	Screw (Control Bracket)
❸202	691303	1	Link–Governor, Mechanical
❸209	690319	1	Spring-Governor
❸222	697614	1	Bracket–Control
❸227	690783	1	Lever-Control, Governor
❸333	802574	1	Armature-Magneto
❸334	691061	1	Screw (Magneto Armature)
❸356	692390	1	Wire-Stop
❸404	690272	1	Washer (Governor Crank)
❸505	691251	1	Nut (Governor Control Lever)
❸562	691119	1	Screw (Governor Control Lever)
❸615	690340	1	Retainer-Shaft, Governor
❸616	698801	1	Crank-Governor
❸621	692310	1	Switch-Stop
❸745	691648	1	Screw (Brake)
❸851	493880	1	Terminal-Spark Plug
❸922	691831	1	Spring-Brake
❸923	691994	1	Brake ASM

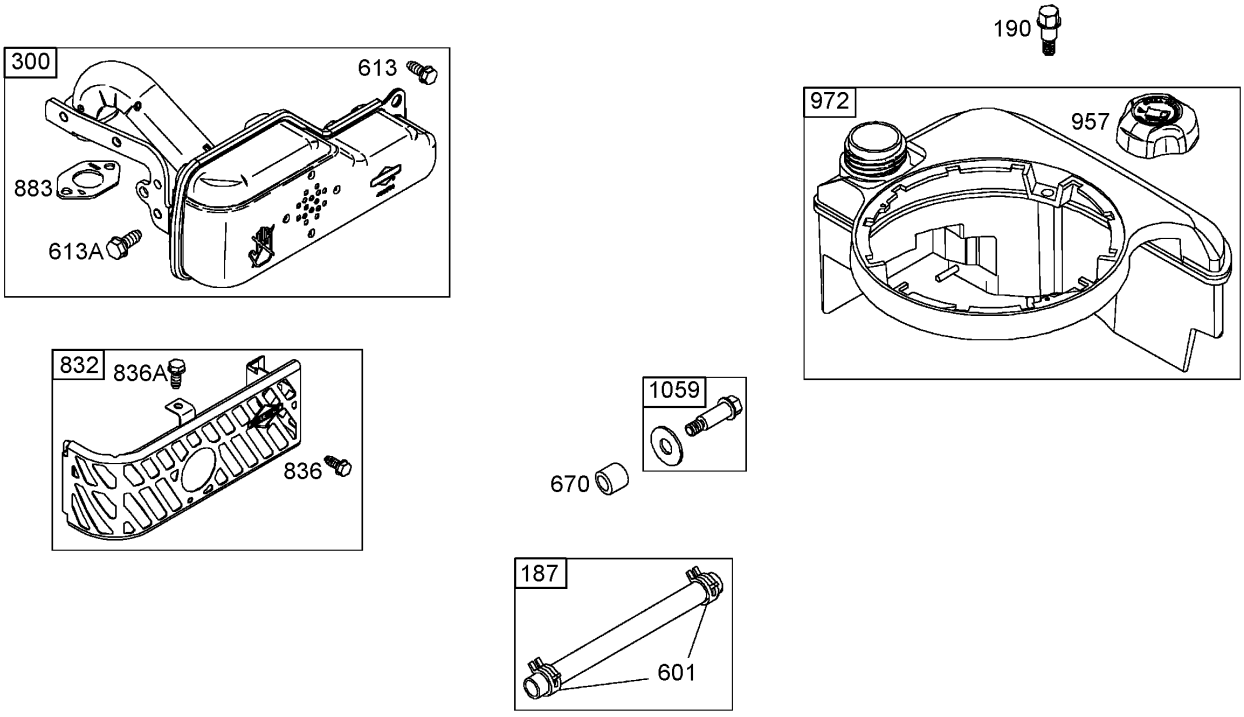

Muffler and Fuel Tank Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description
❸187	691050	1	Line-Fuel (Cut To Required Length)
❸190	690940	1	Screw (Fuel Tank)
❸300	694248	1	Muffler
❸601	95162	1	Clamp-Hose
❸613	691108	1	Screw (Muffler)
❸613A	691140	1	Screw (Muffler)
❸670	692294	1	Spacer-Tank, Fuel
❸832	691466	1	Guard–Muffler
❸836	697551	1	Screw (Muffler Guard)
❸836A	691147	1	Screw (Muffler Guard)
❸883	691893	1	Gasket-Exhaust
❸957	692046	1	Cap-Tank, Fuel
❸972	699374	1	Tank-Fuel
❸1059	692311	1	Screw/Washer Kit

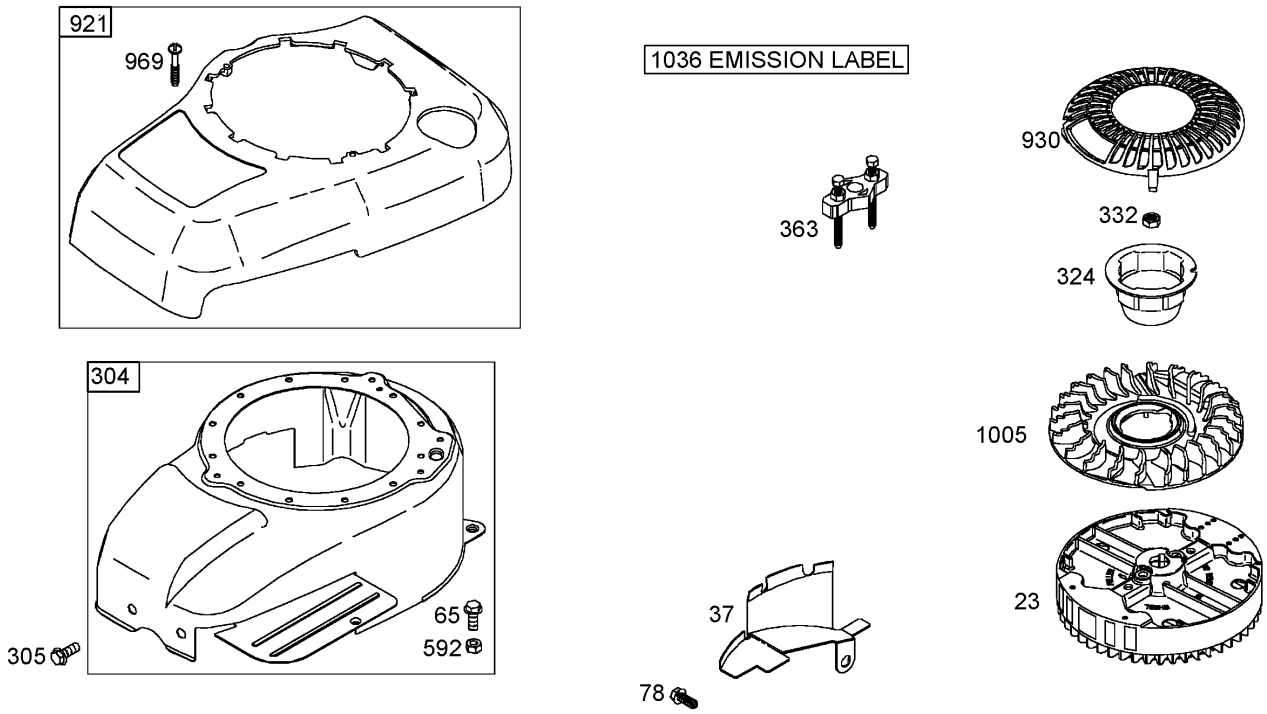

Blower Housing Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description
❸23	696569	1	Flywheel
❸37	694086	1	Guard-Flywheel
❸65	690837	1	Screw (Rewind Starter)
❸78	691108	1	Screw (Flywheel Guard)
❸304	499677	1	Housing–Blower
❸305	690960	1	Screw (Blower Housing)
❸324	695161	1	Cup/Screen ASM
❸332	690662	1	Nut (Flywheel)
❸363	19069	1	Puller-Flywheel
❸592	690800	1	Nut (Rewind Starter)
❸921	692699	1	Cover–Housing, Blower
❸930	692691	1	Guard–Rewind
❸969	691138	1	Screw (Blower Housing Cover)
❸1005	691346	1	Fan–Flywheel
❸1036	790635	1	Label–Emission

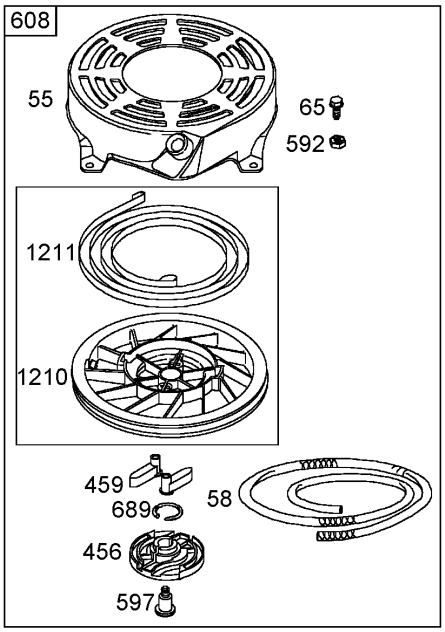

Starter Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description
❸55	691421	1	Housing-Starter, Rewind
❸58	791362	1	Rope–Starter (Cut To Required Length)
❸65	690837	1	Screw (Rewind Starter)
❸456	692299	1	Plate-Friction, Pawl
❸459	281505	1	Ratchet-Pawl
❸592	690800	1	Nut (Rewind Starter)
❸597	691696	1	Screw (Pawl Friction Plate)
❸608	791363	1	Starter–Rewind
❸689	691855	1	Spring-Friction
❸1210	498144	1	Pulley/Spring ASM (Pulley)
❸1211	498144	1	Pulley/Spring ASM (Spring)

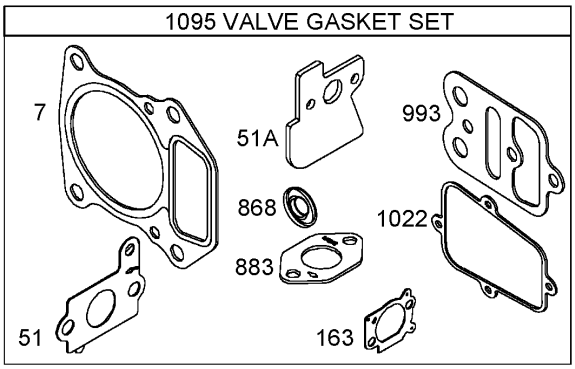

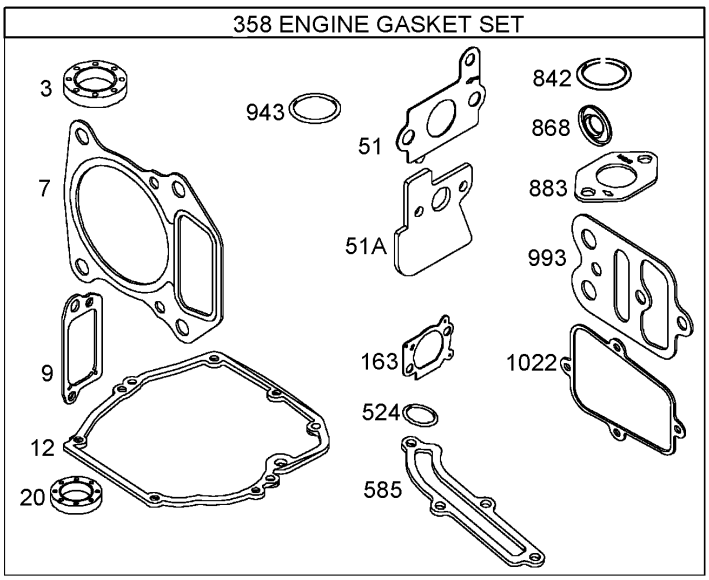

Valve and Engine Gasket Set Assemblies
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description
❸3	299819	1	Seal–Oil (Magneto Side)
❸7	695166	1	Cylinder Head Gasket
❸9	272481	1	Gasket–Breather
❸12	692232	1	Gasket-Crankcase (.015 Thick, Standard)
❸20	399781	1	Seal–Oil (PTO Side)
❸51	692668	1	Gasket-Intake
❸51A	692799	1	Gasket-Intake
❸163	691894	1	Gasket–Cleaner, Air
❸358	694090	1	Gasket Set–Engine
❸524	692296	1	Seal-O Ring (Dipstick Tube)
❸585	691879	1	Gasket-Passage, Breather
❸842	691031	1	Seal-O Ring (Dipstick)
❸868	692044	1	Seal-Valve
❸883	691893	1	Gasket-Exhaust
❸943	692514	1	Seal-O Ring (Oil Pump Cover)
❸993	694088	1	Gasket-Plate, Cylinder Head
❸1022	691890	1	Gasket-Cover, Rocker
❸1095	694091	1	Gasket Set–Valve

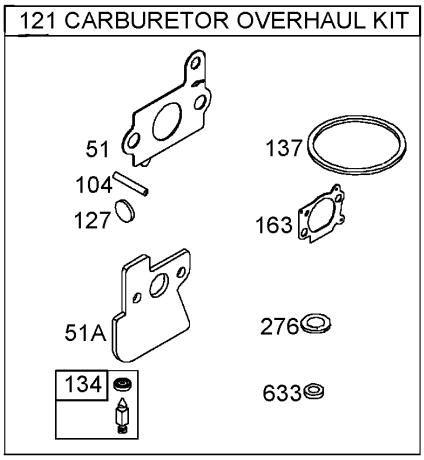

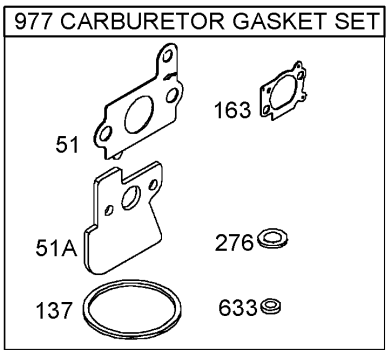

Carburetor Overhaul Kit and Gasket Set Assemblies
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description
❸51	692668	1	Gasket-Intake
❸51A	692799	1	Gasket-Intake
❸104	691242	1	Pin-Hinge, Float
❸121	692703	1	Carburetor Overhaul Kit
❸127	694468	1	Plug-Welch
❸134	398188	1	Needle/Seat Kit
❸137	693981	1	Gasket-Bowl, Float
❸163	691894	1	Gasket–Cleaner, Air
❸276	271716	1	Washer-Sealing
❸633	691321	1	Seal (Choke/Throttle Shaft)
❸977	692704	1	Gasket Set–Carburetor

Attachments and Accessories

For 20057 - Super Recycler Lawn Mower

Product Name	Model/Part
Bagging Blade	108-3759-03

NOTES

NOTES

NOTES

TORO®