Form Number 3354-537 Rev A

Pro Sweep 5200
Turf Sweeper

Model No. 07065 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts
To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers
Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers
Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Main Frame and Axle Assembly	3
Trailer Axle Assembly No. 107-1529	4
Pitch Frame and Cylinder Assembly	5
Hydraulic Cylinder Assembly No. 107-1310	6
Saddle Frame Assembly	7
Brush Housing Assembly	8
Brush, Motor and Shield Assembly	9
Hydraulic Motor Assembly No. 105-9455	10
Brush Assembly No. 107-1452	11
Roller Assembly	12
Hopper Assembly	13
Hopper Lid and Baffle Assembly	14
Hose Assembly	15
Manifold Block Assembly No. 107-1400	16
Tongue Assembly	17
Wire Harness Assembly	18
Remote Control Box Assembly	19
Hydraulic Fitting Assembly	20
Control Box Mounting Assembly	21
Windrow Assembly	22
Attachments and Accessories List	23

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over-protection-system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated

❷ Not serviced separately

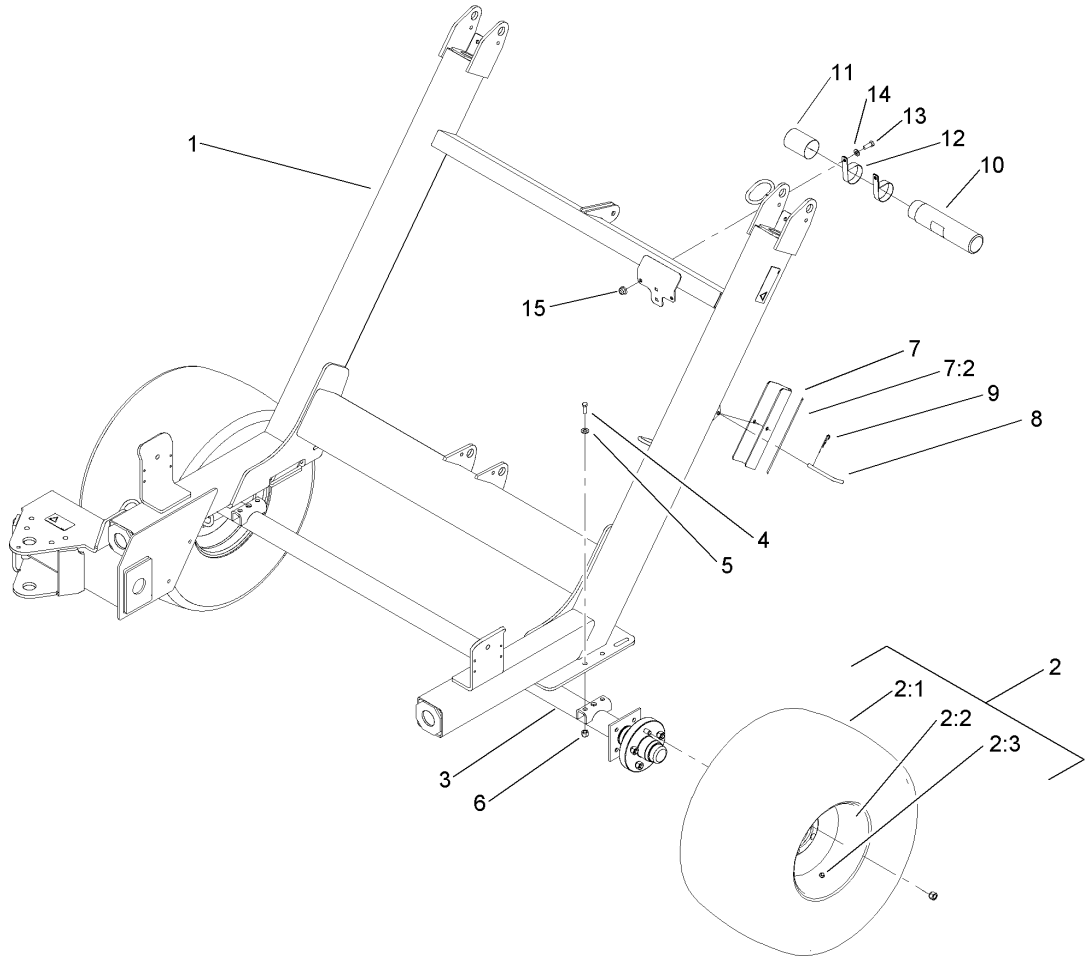

Main Frame and Axle Assembly

Ref	Part No.	Qty.	Description
1	108-0776	1	Frame-Main
2	107-1459	2	Wheel And Tire ASM
2:1	93-6152	1	Tire
2:2	107-1461	1	Rim
2:3	232-24	1	Stem-Valve
3	107-1529	1	Trailer Axle ASM
4	324-5	4	Screw-HH
5	3256-25	8	Washer-Flat
6	3296-48	4	Nut-Lock, NI
7	108-0777	1	Stop-Cylinder
7:2	93-9852	1	Decal-Warning
8	63-7880	1	Pin-Latch, Brake
9	3290-250	1	Pin-Hair
10	104-7050	1	Housing-Manual
11	104-7048	1	Cap-Housing
12	2412-133	2	R-Clamp
13	323-6	2	Screw-HH
14	3256-24	2	Washer-Flat
15	104-8301	2	Nut-Flange, NI

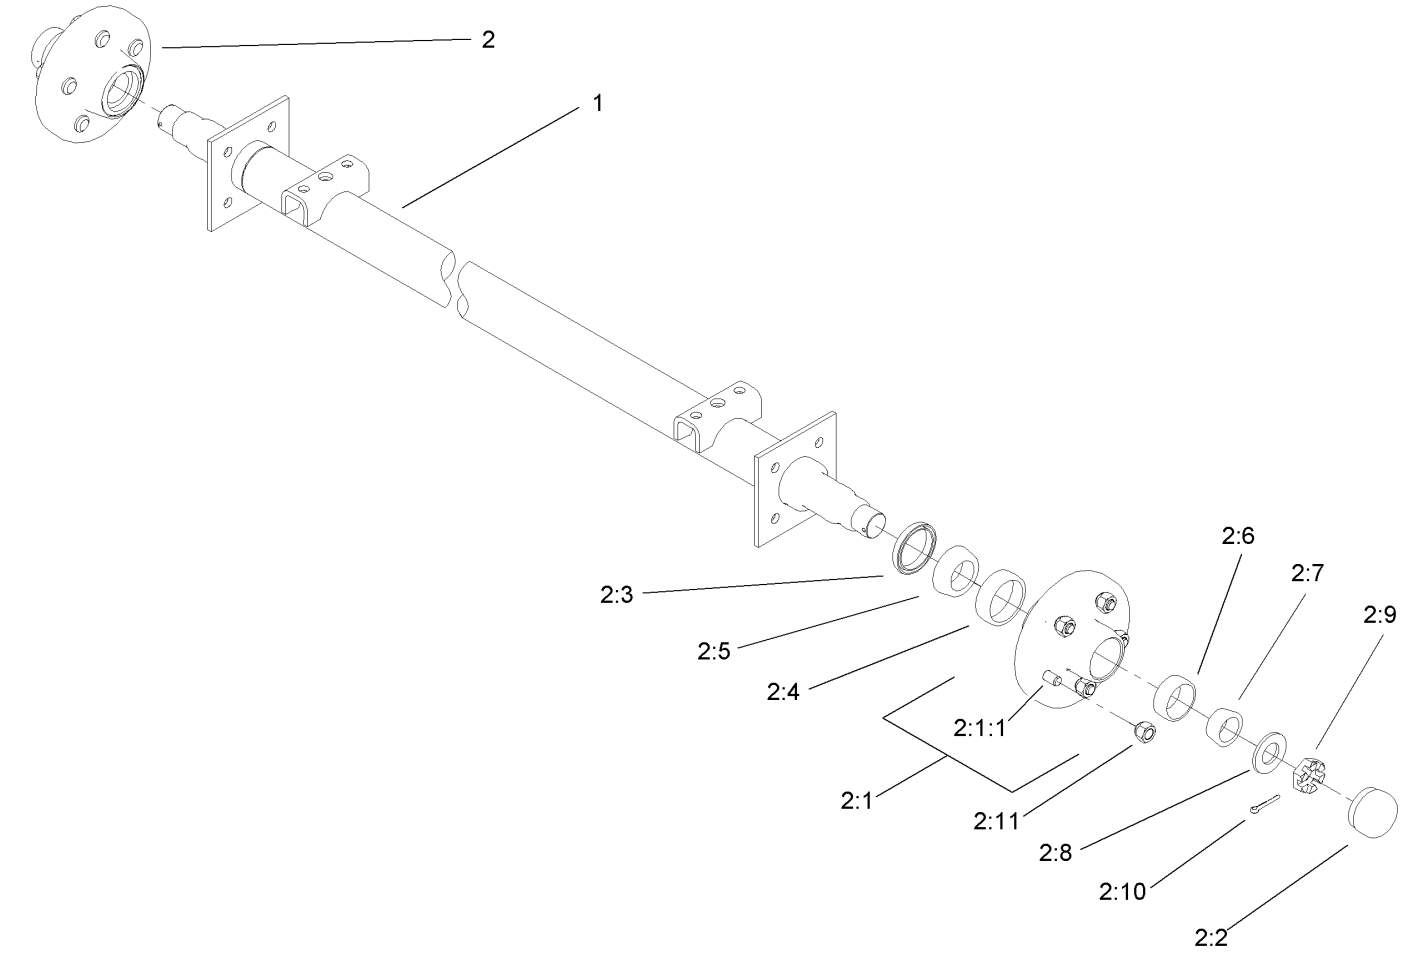

Trailer Axle Assembly No. 107-1529

Ref	Part No.	Qty.	Description
1	107-1300	1	Axle-Trailer
2	108-0689	2	Kit-Hub, Wheel
2:1	107-1528	1	Hub-Wheel
2:1:1	107-1503	5	Stud-Wheel
2:2	108-0693	1	Cap-Grease
2:3	108-0694	1	Seal-Grease
2:4	108-0695	1	Cup-Bearing, Inner
2:5	108-0696	1	Cone-Bearing, Inner
2:6	108-0697	1	Cup-Bearing, Outer
2:7	108-0698	1	Cone-Bearing, Outer
2:8	3256-62	1	Washer-Flat
2:9	99-4508	1	Nut-Castle
2:10	3272-22	1	Pin-Cotter
2:11	242-50	5	Nut-Lug

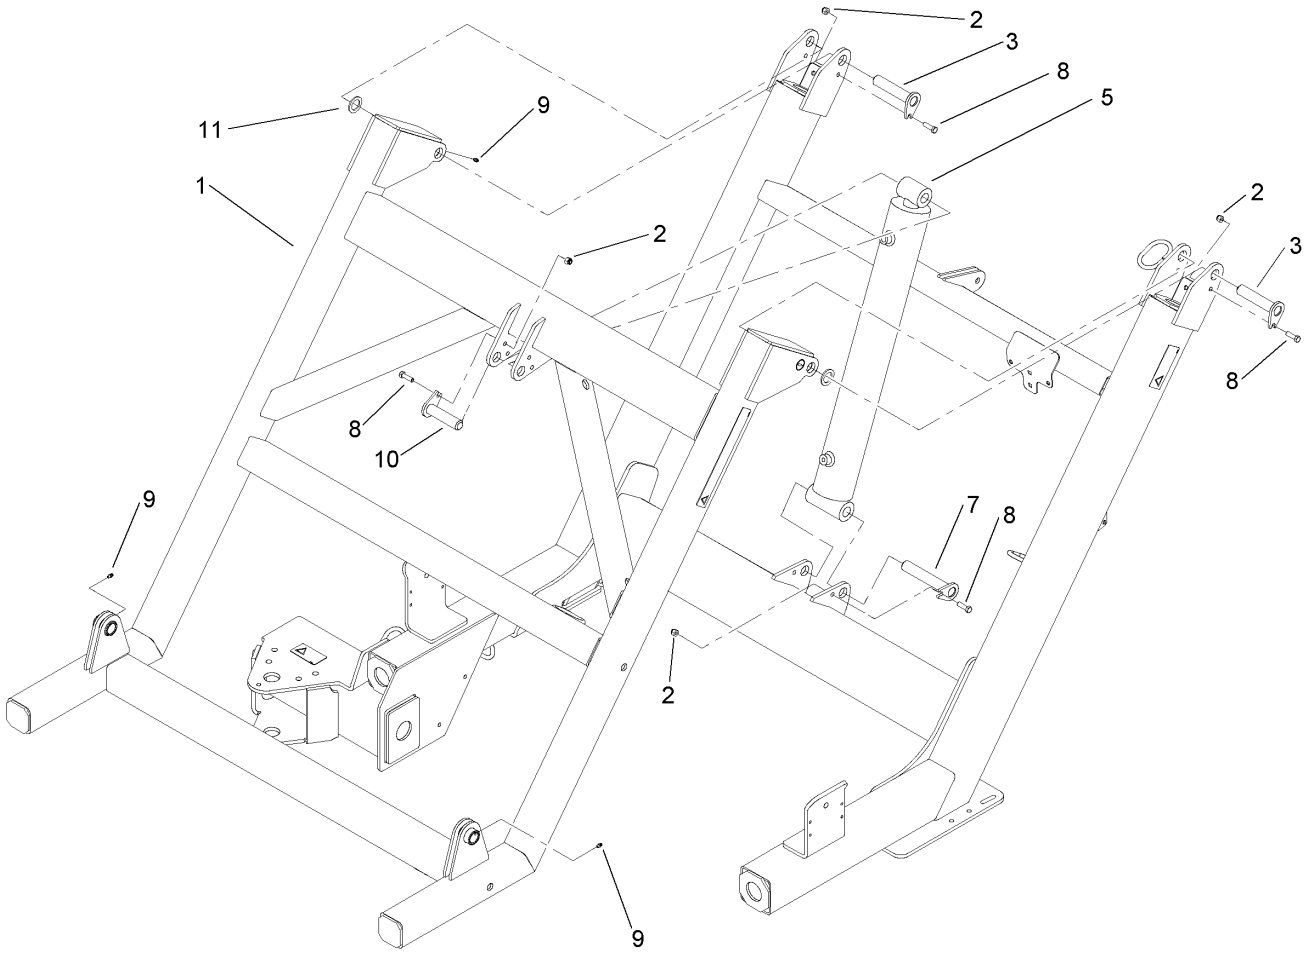

Pitch Frame and Cylinder Assembly

Ref	Part No.	Qty.	Description
1	108-0778	1	Frame-Pitch
2	104-8301	4	Nut-Flange, NI
3	107-1258	2	Pin-Flag
5	107-1310	1	Cylinder-Hydraulic
7	108-0669	1	Pin-Flag
8	323-7	4	Screw-HH
9	302-5	4	Fitting-Grease
10	108-0826	1	Pin-Flag
11	92-7845	2	Spacer-Hardened

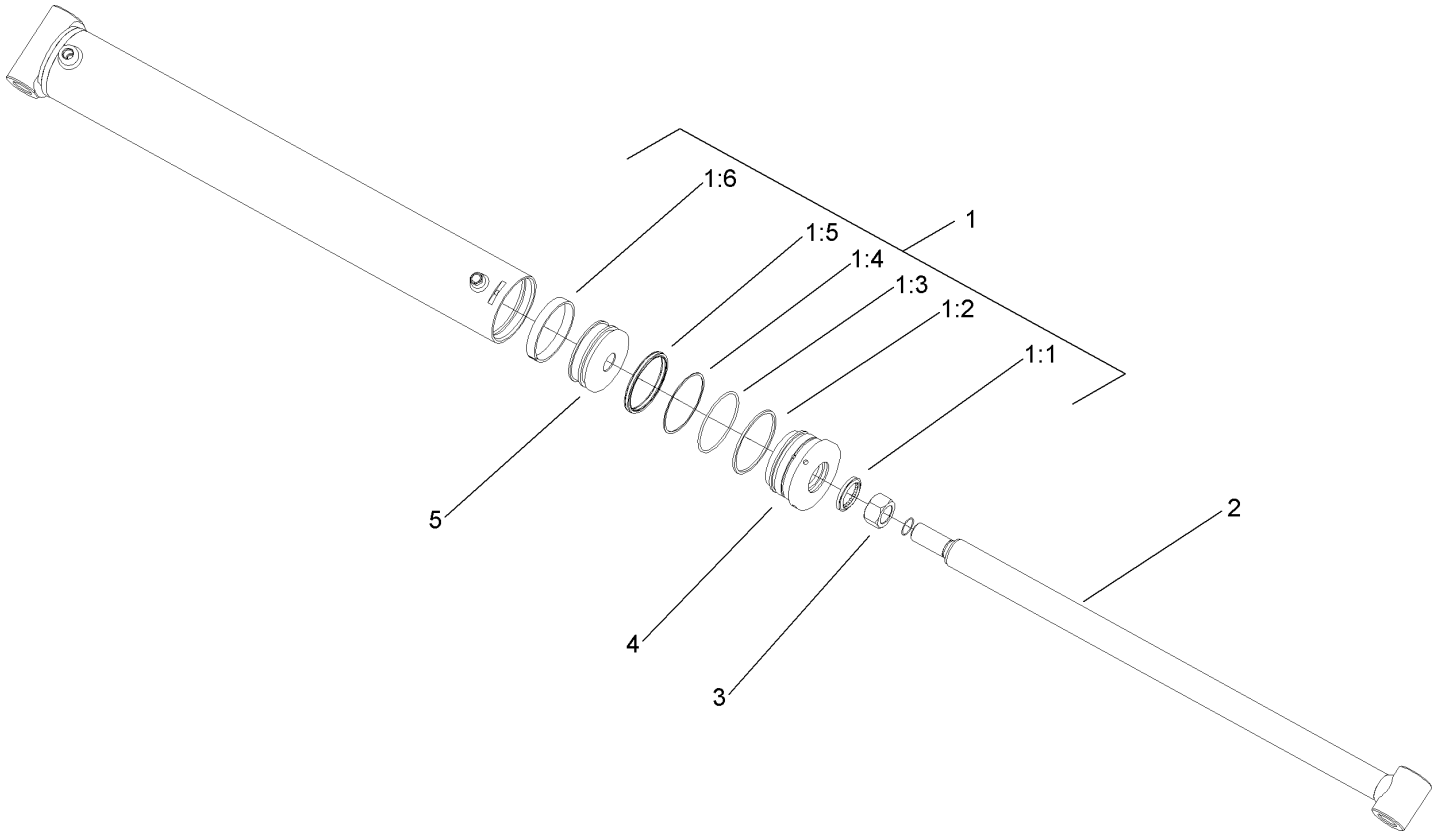

Hydraulic Cylinder Assembly No. 107-1310

Ref	Part No.	Qty.	Description
1	108-2439	1	Seal Kit
❷1:1		1	Wiper
❷1:2		1	O-Ring
❷1:3		1	O-Ring
❷1:4		1	Ring-Back Up
❷1:5		1	Seal
❷1:6		1	Ring-Wear
❷2		1	Rod ASM
❷3		1	Locknut
❷4		1	Head
❷5		1	Piston

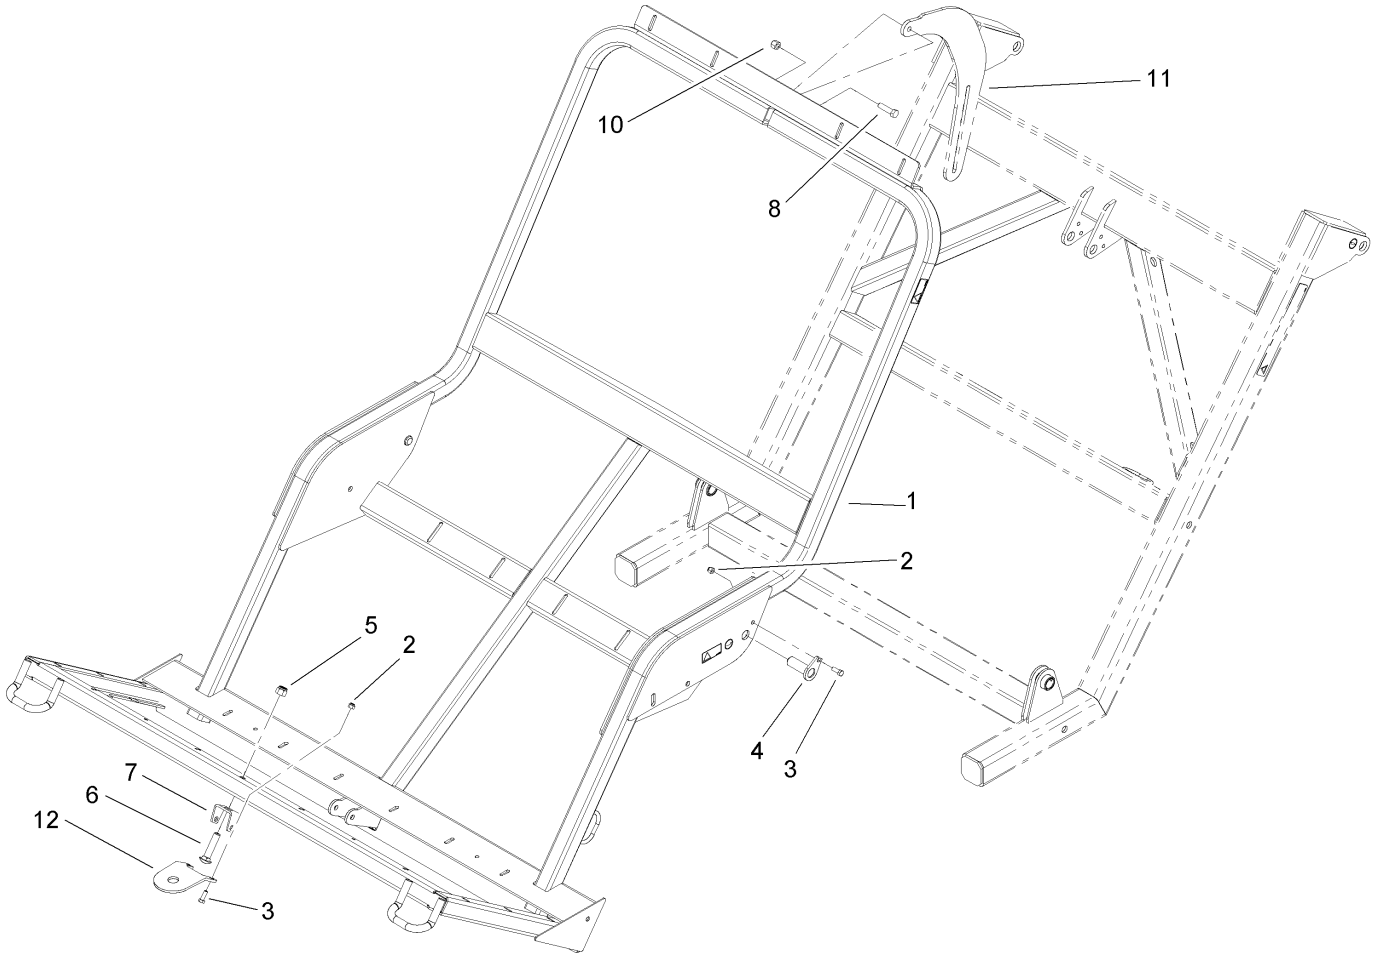

Saddle Frame Assembly

Ref	Part No.	Qty.	Description
1	108-0779	1	Saddle
2	104-8301	4	Nut-Flange, NI
3	323-6	4	Screw-HH
4	108-0657	2	Pin-Flag
5	3296-53	1	Nut-Lock, NI
6	3233-32	1	Bolt-Carriage
7	107-1458-03	1	Pivot-Saddle
8	325-7	2	Screw-HH
10	3296-23	2	Nut-Lock, NI
11	108-0759-01	1	Link
12	107-1327-03	1	Plate-Hook, Tow

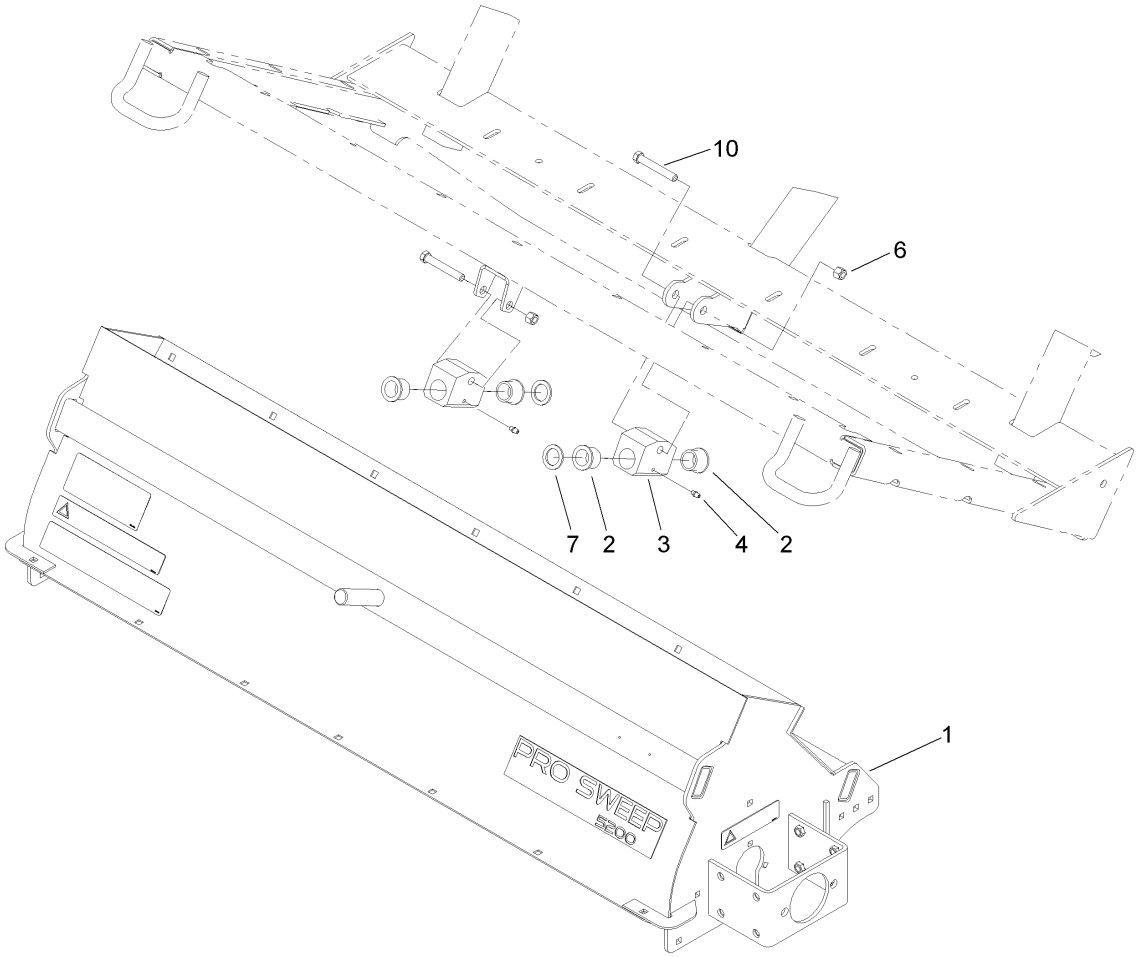

Brush Housing Assembly

Ref	Part No.	Qty.	Description
1	108-0780	1	Housing-Brush
2	94-8949	4	Bushing-Flange
3	107-1547	2	Mount-Pivot
4	302-5	2	Fitting-Grease
6	99-5107	2	Nut-Loc
7	3-8514	2	Washer-Thrust
10	325-14	2	Screw-HH

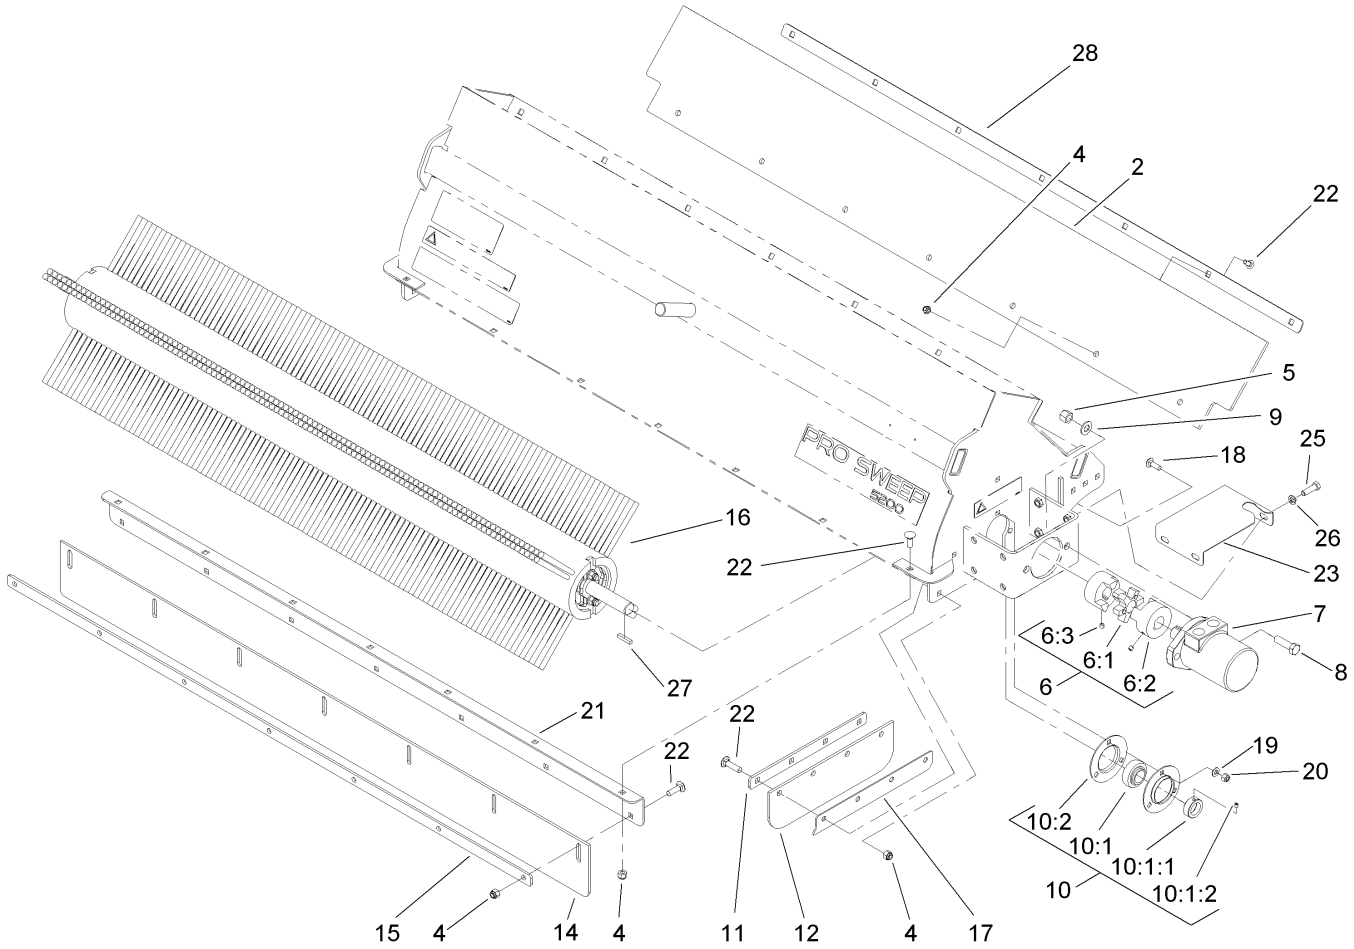

Brush, Motor and Shield Assembly

Ref	Part No.	Qty.	Description
2	108-0686	1	Shield-Rubber, Top
4	104-8301	29	Nut-Flange, NI
5	3296-23	2	Nut-Lock, NI
6	108-0760	1	Coupling-Jaw, Stock
6:1	108-0761	1	Spider-Coupling
6:2	108-0762	2	Coupling-Jaw
6:3	3246-2	4	Screw-Set, HSH
7	105-9455	1	Motor
8	325-7	2	Screw-HH
9	3256-26	2	Washer-Flat
10	107-1471	2	Bearing-Flange, 3-Bolt
10:1	107-1472	1	Bearing
10:1:1	251-77	1	Lockcollar-Bearing
10:1:2	3245-35	1	Screw-Set
10:2	107-1474	2	Flange-3 Bolt
11	108-0668-03	2	Plate-Skirt, Side
12	108-0683	2	Shield-Rubber, Side
14	107-1302	1	Shield-Rubber, Front
15	108-0667-03	1	Plate-Skirt, Front
16	107-1452	1	Brush ASM
17	107-1439-03	2	Plate-Angle
18	3230-2	6	Bolt-CARR
19	3256-23	6	Washer-Flat
20	3296-29	6	Nut-Lock, NI

Ref	Part No.	Qty.	Description
21	107-1280-01	1	Angle-Front
22	3231-25	29	Screw-CARR
23	108-0781	2	Cover-Coupler
25	323-6	8	Screw-HH
26	3253-21	8	Washer-Lock
27	13-2840	1	Key-Square
28	108-0844-03	1	Plate-Shield, Top

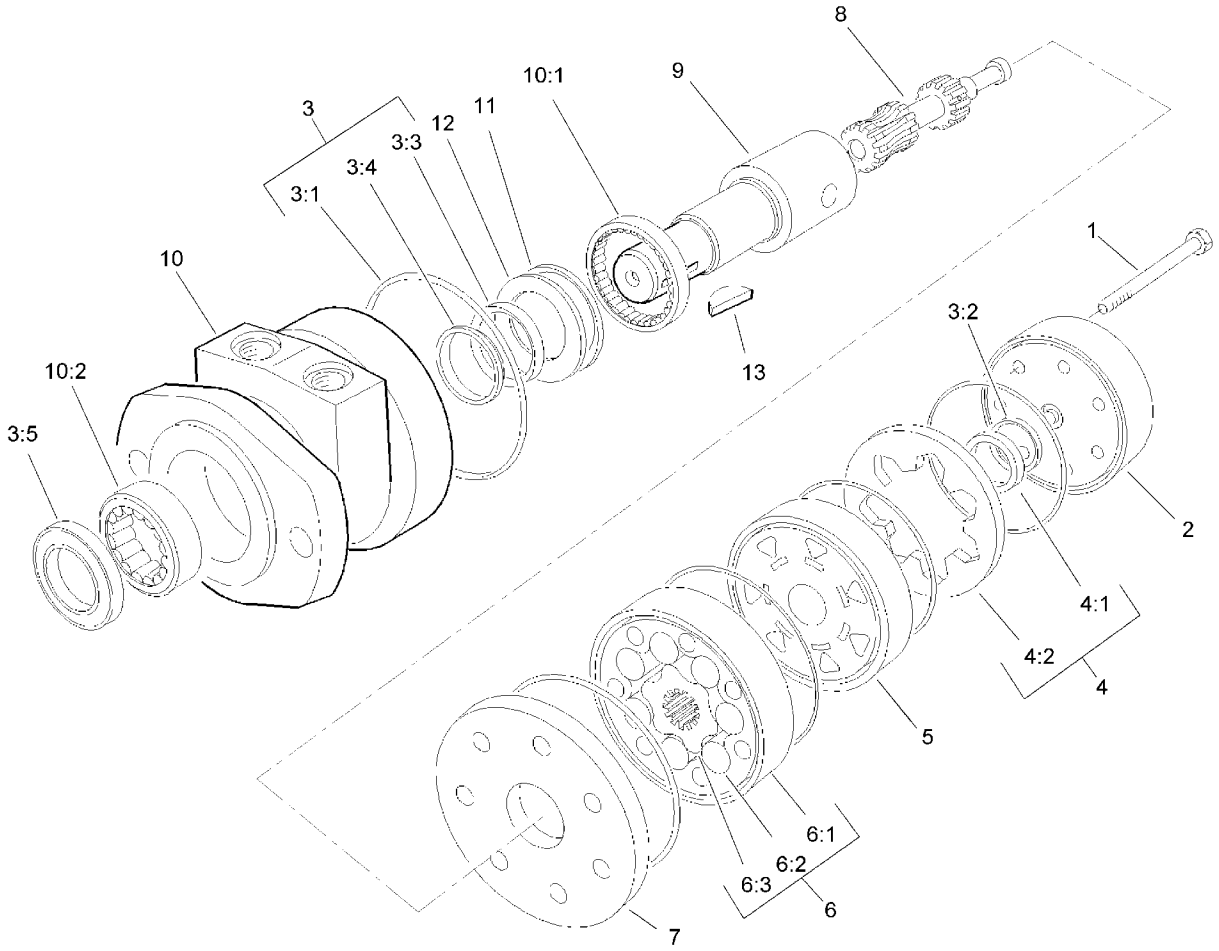

Hydraulic Motor Assembly No. 105-9455

Ref	Part No.	Qty.	Description
1	322-33	5	Screw-HH
2	106-1981	1	Cover-End
3	106-1989	1	Seal Kit
❷3:1		6	Seal-Ring
❷3:2		1	Seal-Commutator
❷3:3		1	Seal-Dirt And Water
❷3:4		1	Washer-Backup
❷3:5		1	Seal-Shaft
❶❷3:6		1	Ring-Back Up
4	106-1982	1	Commutator ASM
❷4:1		1	Commutator
❷4:2		1	Ring-Commutator
5	106-1983	1	Manifold
6	106-1984	1	Rotor Set
❷6:1		1	Stator
❷6:2		7	Vane
❷6:3		1	Rotor
7	106-1985	1	Plate-Wear
8	106-1986	1	Link-Drive
9	106-1987	1	Shaft-Coupling
10	106-1988	1	Housing ASM
❷10:1		1	Bearing
❷10:2		1	Bearing
❷11		1	Bearing-Thrust

Ref	Part No.	Qty.	Description
❷12		1	Washer-Thrust
13	106-1990	1	Key-Woodruff

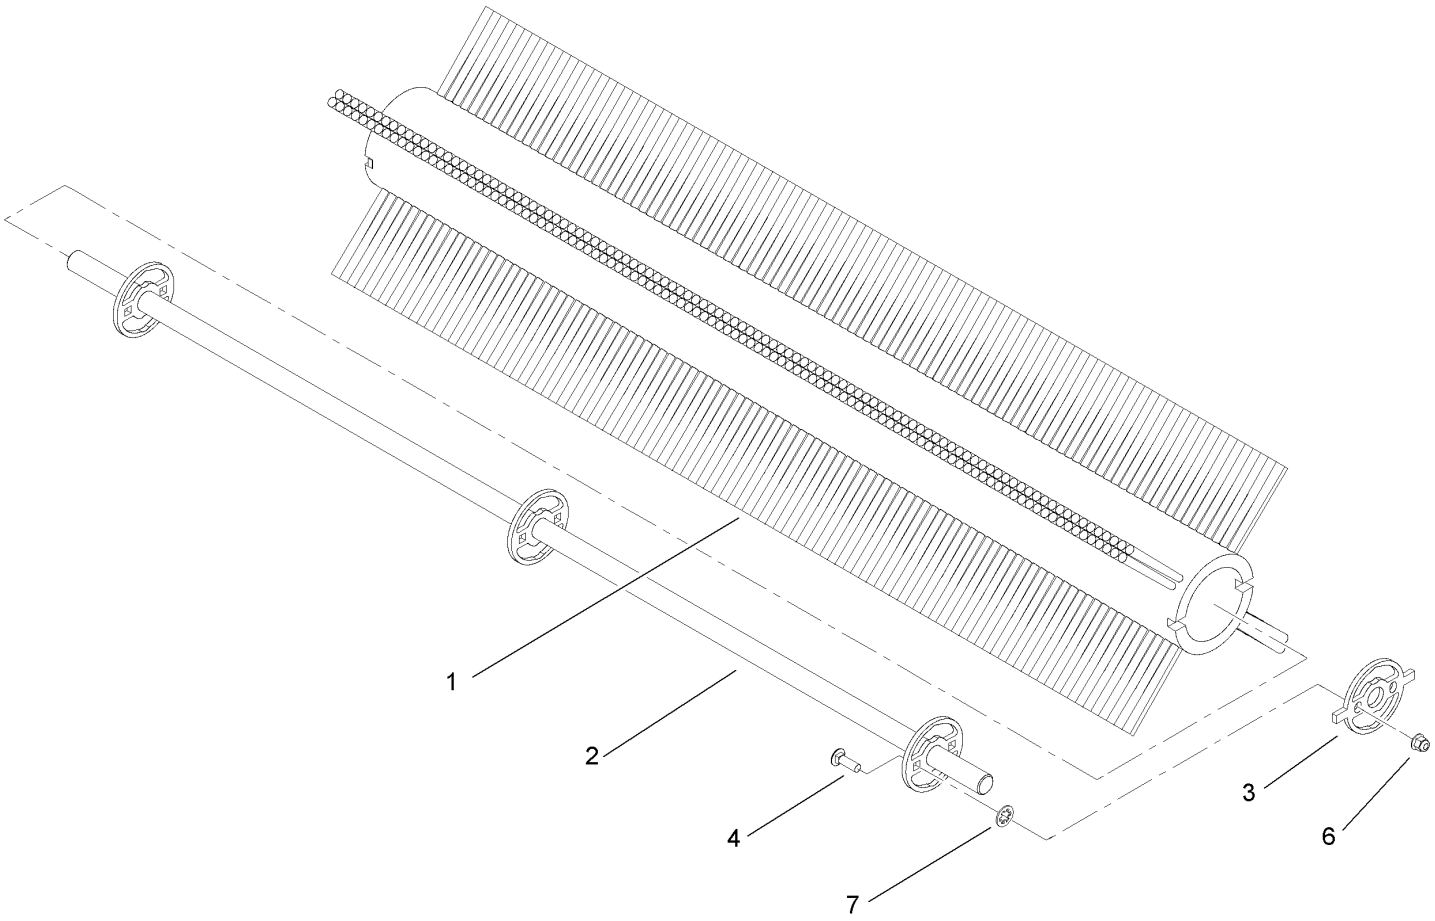

Brush Assembly No. 107-1452

Ref	Part No.	Qty.	Description
1	107-1448	1	Brush-Chevron
2	107-1451-03	1	Axle-Brush
3	107-1450-03	2	Drive-Brush
4	3231-25	4	Screw-CARR
6	104-8301	4	Nut-Flange, NI
7	32151-72	4	Ring-Retaining

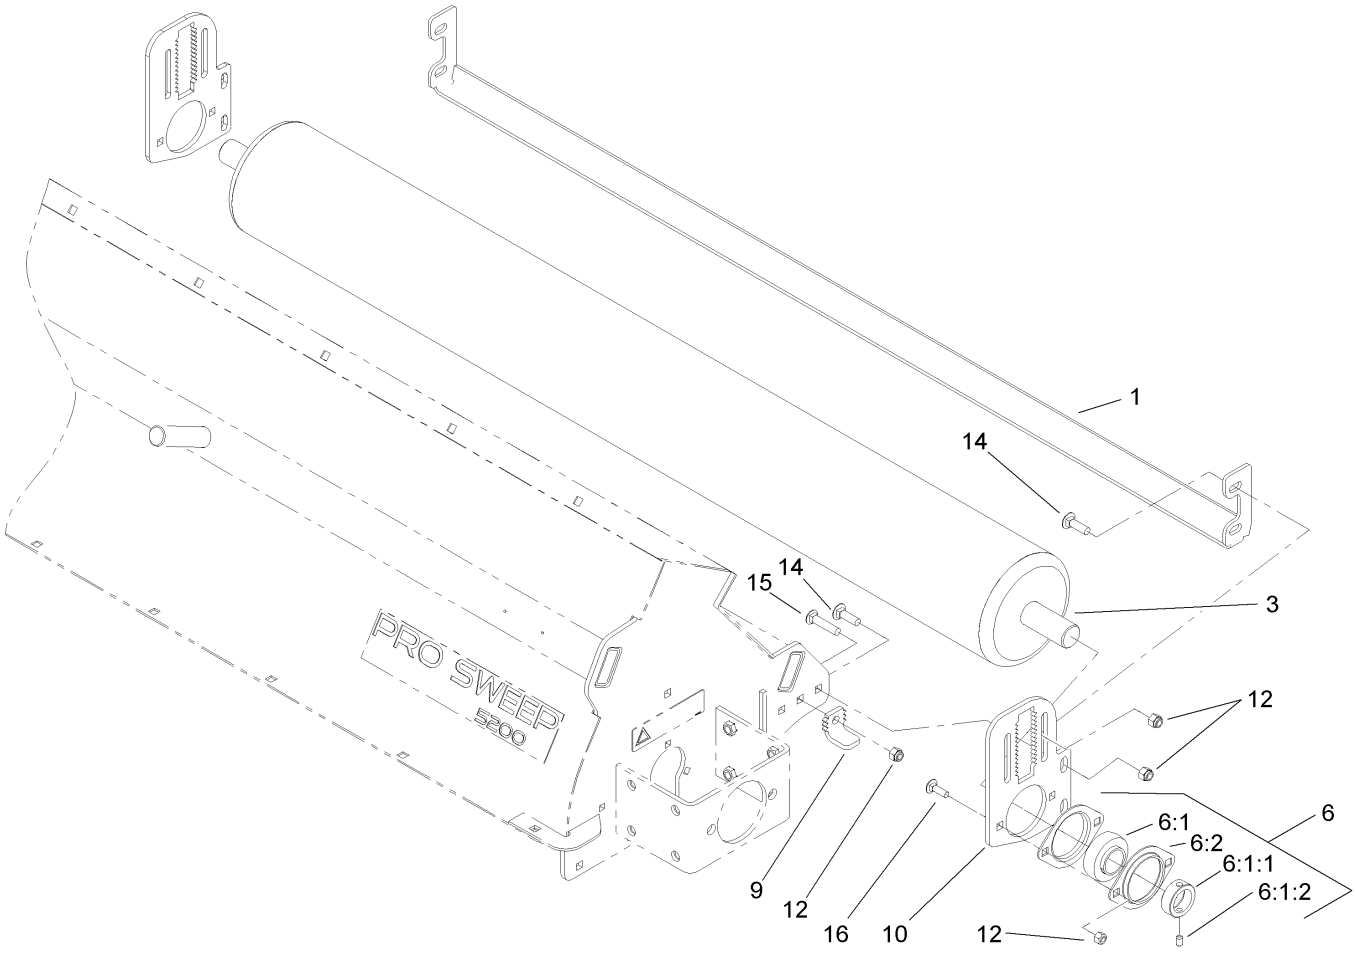

Roller Assembly

Ref	Part No.	Qty.	Description
1	107-1477-01	1	Angle-Scraper
3	107-1294-03	1	Roller ASM
6	107-1358	2	Bearing-Flange
6:1	107-1357	1	Bearing
6:1:1	251-246	1	Collar W/Set Screws
6:1:2	3246-17	1	Setscrew-HSH
6:2	107-1356	2	Flange-2 Bolt
9	107-1438	2	Key-Adjuster, Bent
10	107-1437-01	2	Plate-Adjuster
12	104-8301	14	Nut-Flange, NI
14	3231-25	8	Screw-CARR
15	3231-4	2	Screw-CARR
16	3231-2	4	Screw-CARR

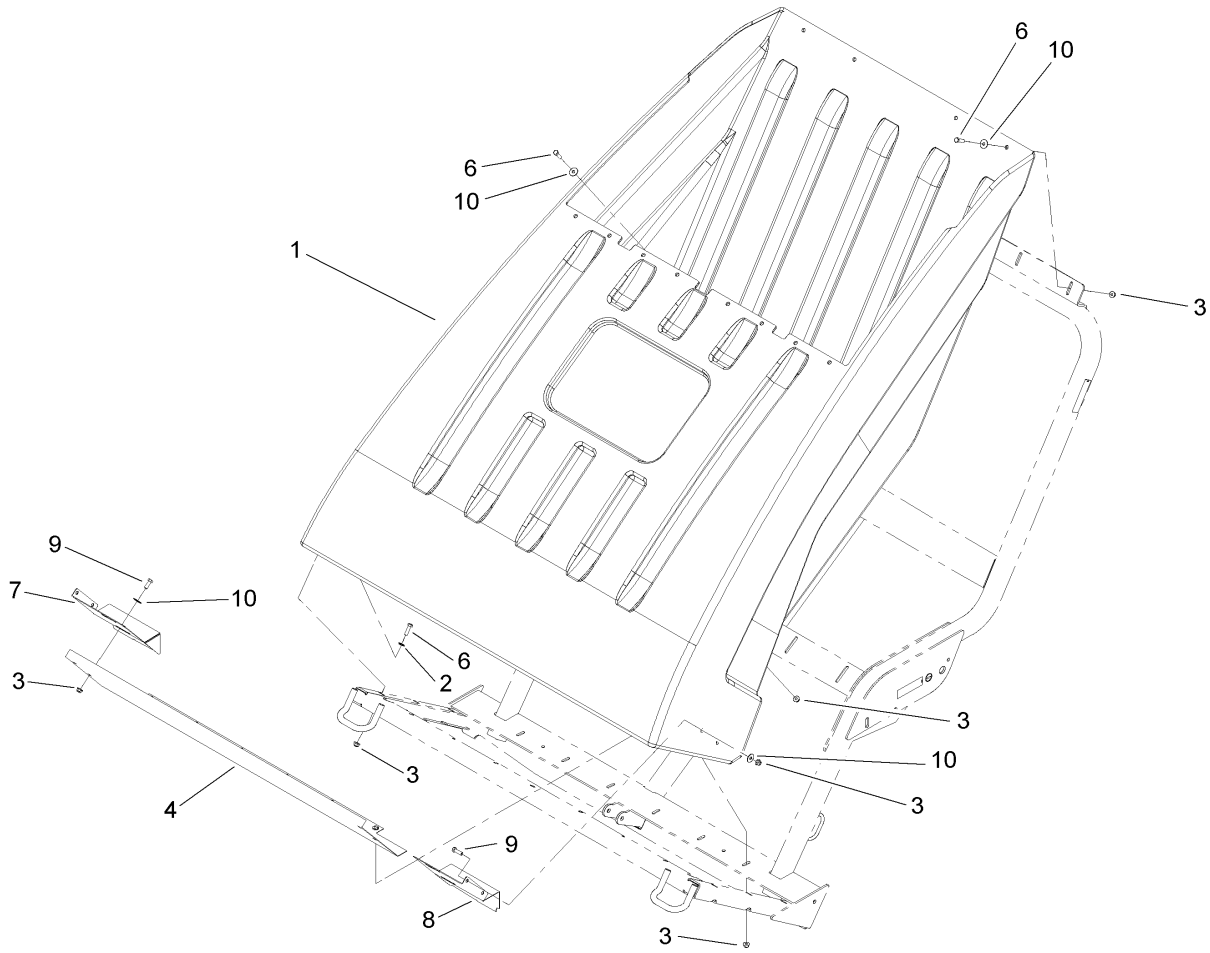

Hopper Assembly

Ref	Part No.	Qty.	Description
1	107-1272	1	Hopper-Dump
2	3256-24	13	Washer-Flat
3	104-8301	34	Nut-Flange, NI
4	107-1225-03	1	Baffle-Hopper
6	323-7	21	Screw-HH
7	107-1462-03	1	Plate-Side, Baffle LH
8	107-1442-03	1	Plate-Side, Baffle RH
9	323-6	8	Screw-HH
10	3256-35	13	Washer-Flat

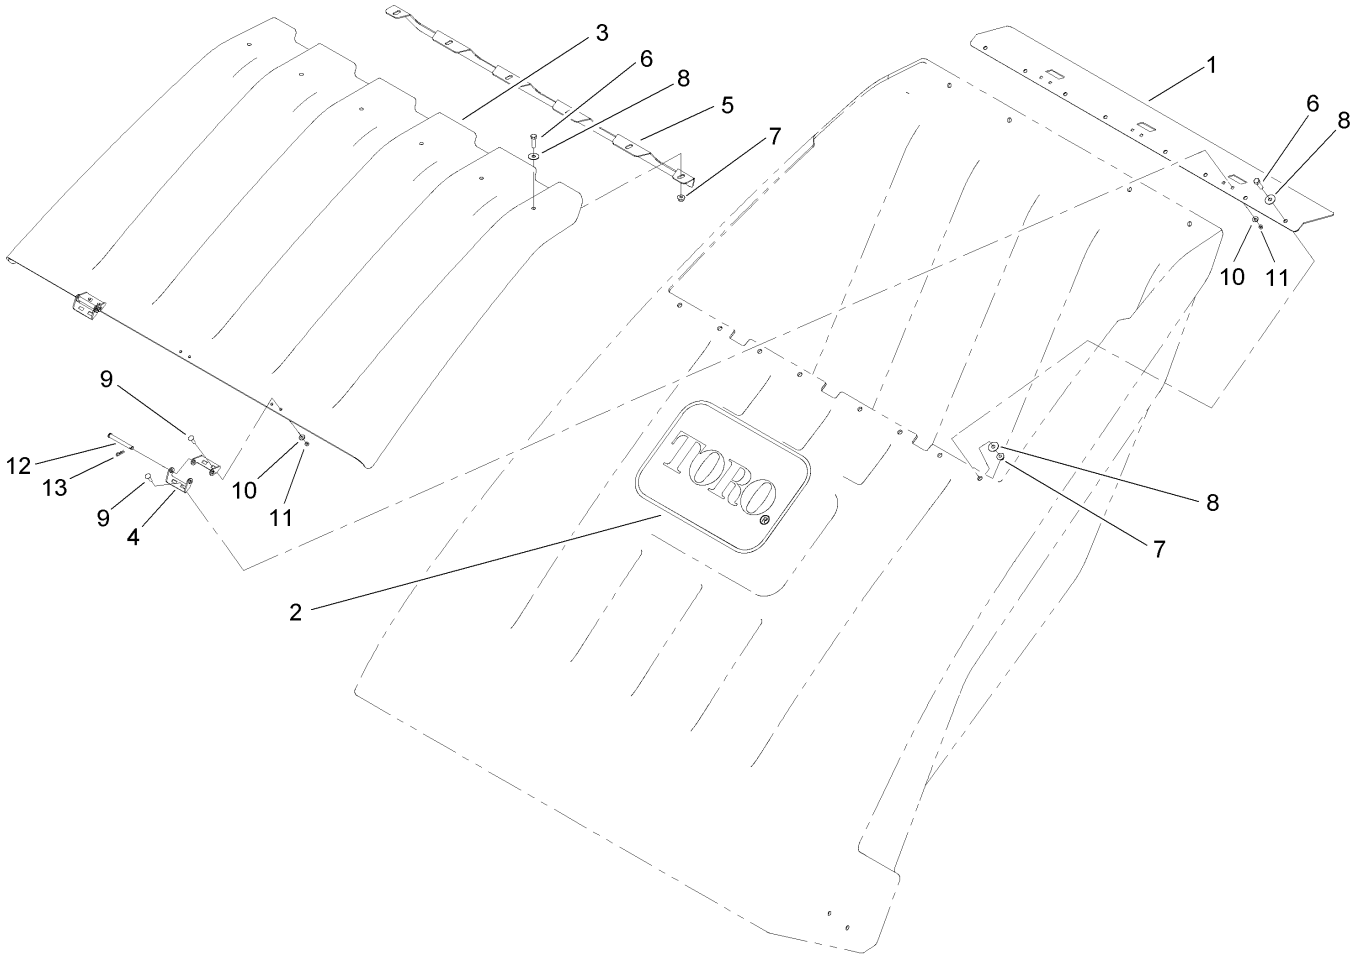

Hopper Lid and Baffle Assembly

Ref	Part No.	Qty.	Description
1	108-0678-03	1	Plate-Baffle, Hopper
2	107-1454	1	Decal
3	107-1273	1	Lid-Hopper
4	107-1549	6	Hinge-Half
5	107-1487-03	1	Door-Baffle
6	323-7	14	Screw-HH
7	104-8301	14	Nut-Flange, NI
8	3256-35	22	Washer-Flat
9	3229-2	12	Screw-CARR
10	3256-22	12	Washer-Flat
11	3296-42	12	Nut-Lock, NI
12	80-2570	3	Pin-Clevis
13	3290-307	3	Pin-Hair

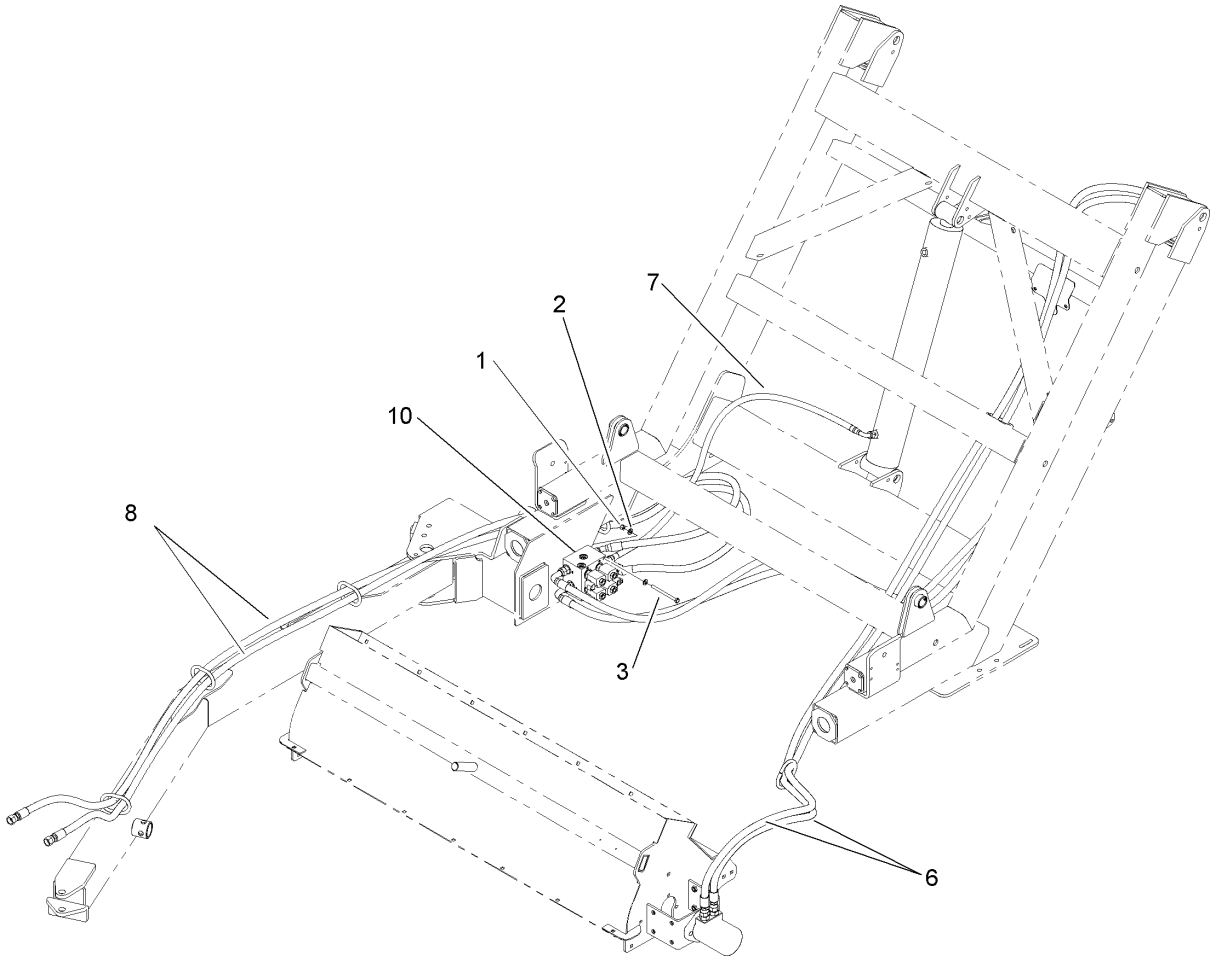

Hose Assembly

Ref	Part No.	Qty.	Description
1	3296-29	2	Nut-Lock, NI
2	3256-23	4	Washer-Flat
3	322-19	2	Screw-HH
6	107-1394	2	HYD Hose ASM
7	107-1396	1	HYD Hose ASM
8	107-1395	2	HYD Hose ASM
10	107-1400	1	Block-Manifold

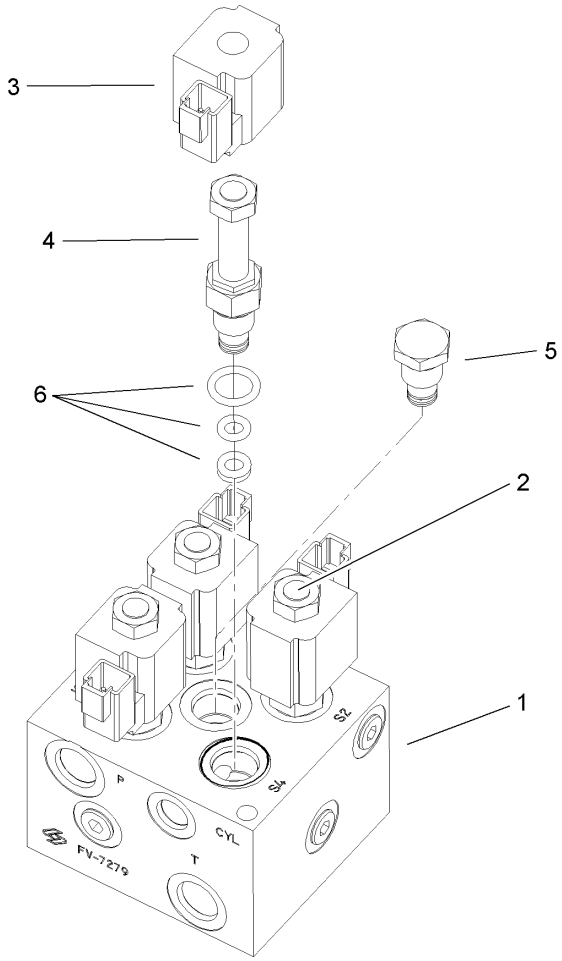

Manifold Block Assembly No. 107-1400

Ref	Part No.	Qty.	Description
❷1		1	Valve Body
2	108-2884	1	Valve-Solenoid
3	108-2885	4	Receptacle-Deutsch, 12 Vdc
4	108-2886	3	Valve-Solenoid
5	108-2887	1	Valve-Check
6	95-1232	4	Kit-Seal, Valve

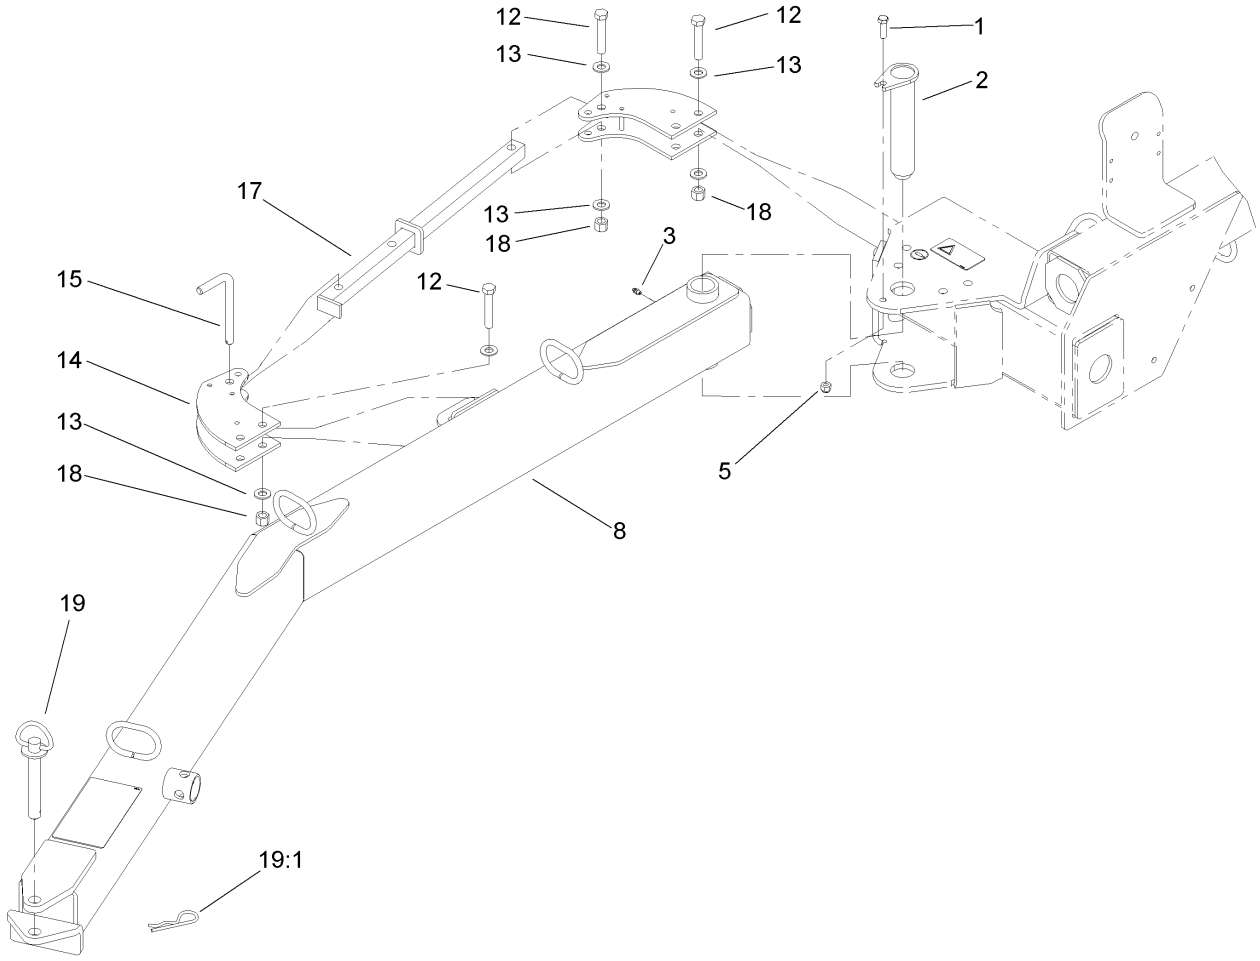

Tongue Assembly

Ref	Part No.	Qty.	Description
1	323-7	1	Screw-HH
2	107-1259	1	Pin-Hitch, Flag
3	302-5	1	Fitting-Grease
5	104-8301	1	Nut-Flange, NI
8	108-0782	1	Tongue-Hitch
12	325-11	5	Screw-HH
13	3256-26	10	Washer-Flat
14	107-1466-01	2	Tab-Actuator, Front
15	66-4060	1	Pin-Idler
17	108-0740-01	1	Bar-Link
18	3296-23	5	Nut-Lock, NI
19	13-6200	1	Pin-Hitch, Pointed
19:1	3290-343	1	Pin-Hair

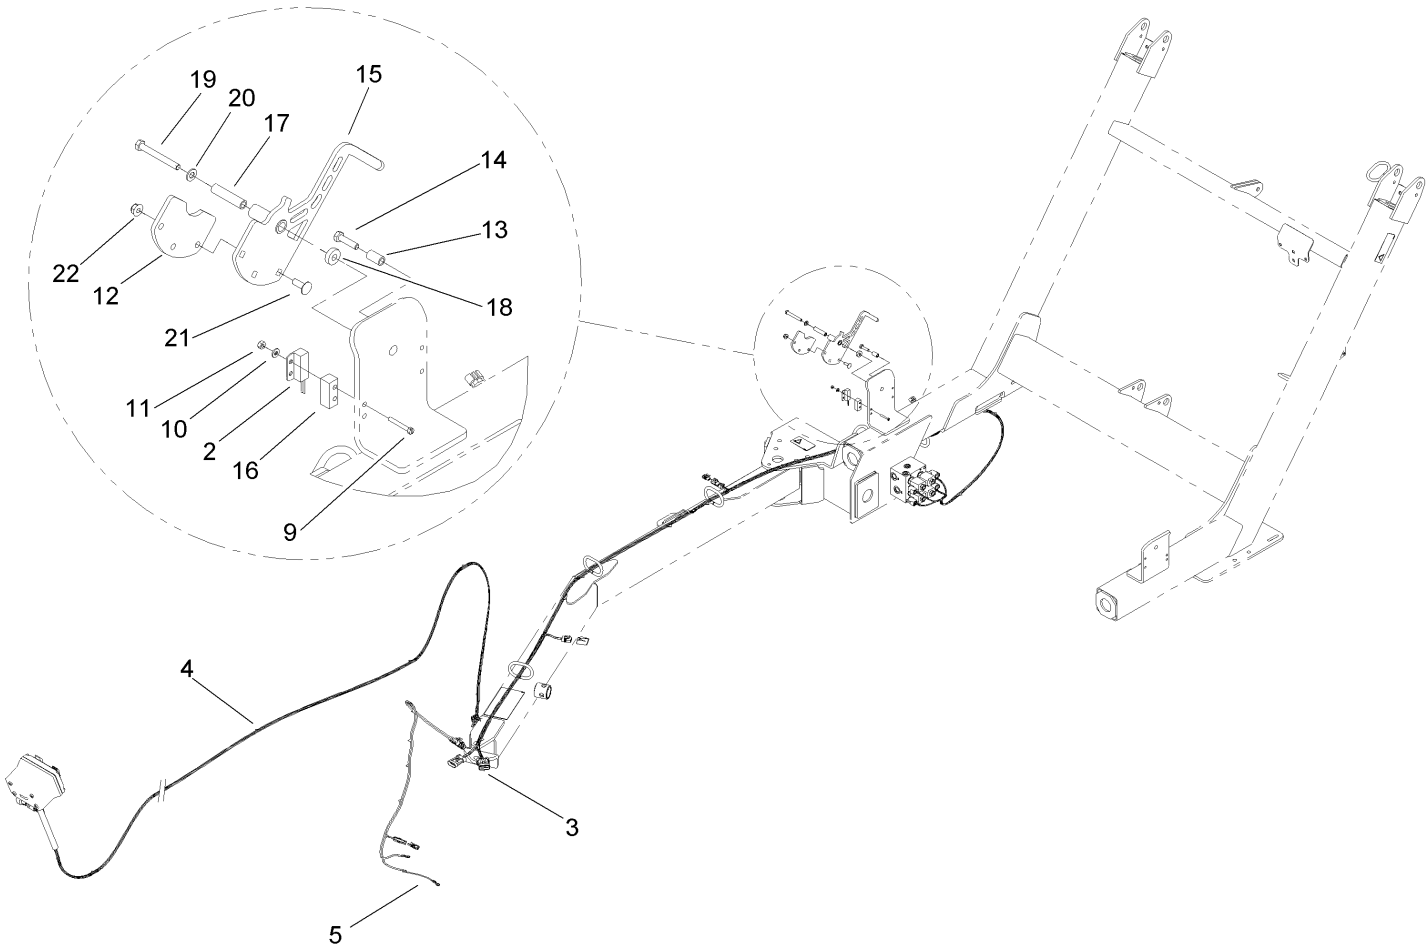

Wire Harness Assembly

Ref	Part No.	Qty.	Description
2	100-1270	1	Switch-Proximity
3	107-1420	1	Harness-Wire, Trailer
❶3:1	109101	1	Fuse-20 Amp
4	107-1382	1	Remote Control ASM
5	107-1419	1	Harness-Wire, Power
9	32105-5	2	Screw
10	3256-14	2	Washer-Flat
11	3296-2	2	Nut-Lock
12	108-0842-01	1	Weight-Arm, Switch
13	92-6999	1	Spacer-Yoke
14	322-6	1	Screw-HH
15	108-0848-01	1	Cam-Switch
16	105-0064	1	Spacer-Switch
17	108-0849	1	Spacer-Cam
18	26-4840	1	Spacer-Pin, Mounting
19	322-13	1	Screw-HH
20	3256-23	1	Washer-Flat
21	3230-10	3	Screw-CARR
22	104-8300	3	Nut-Flange, NI

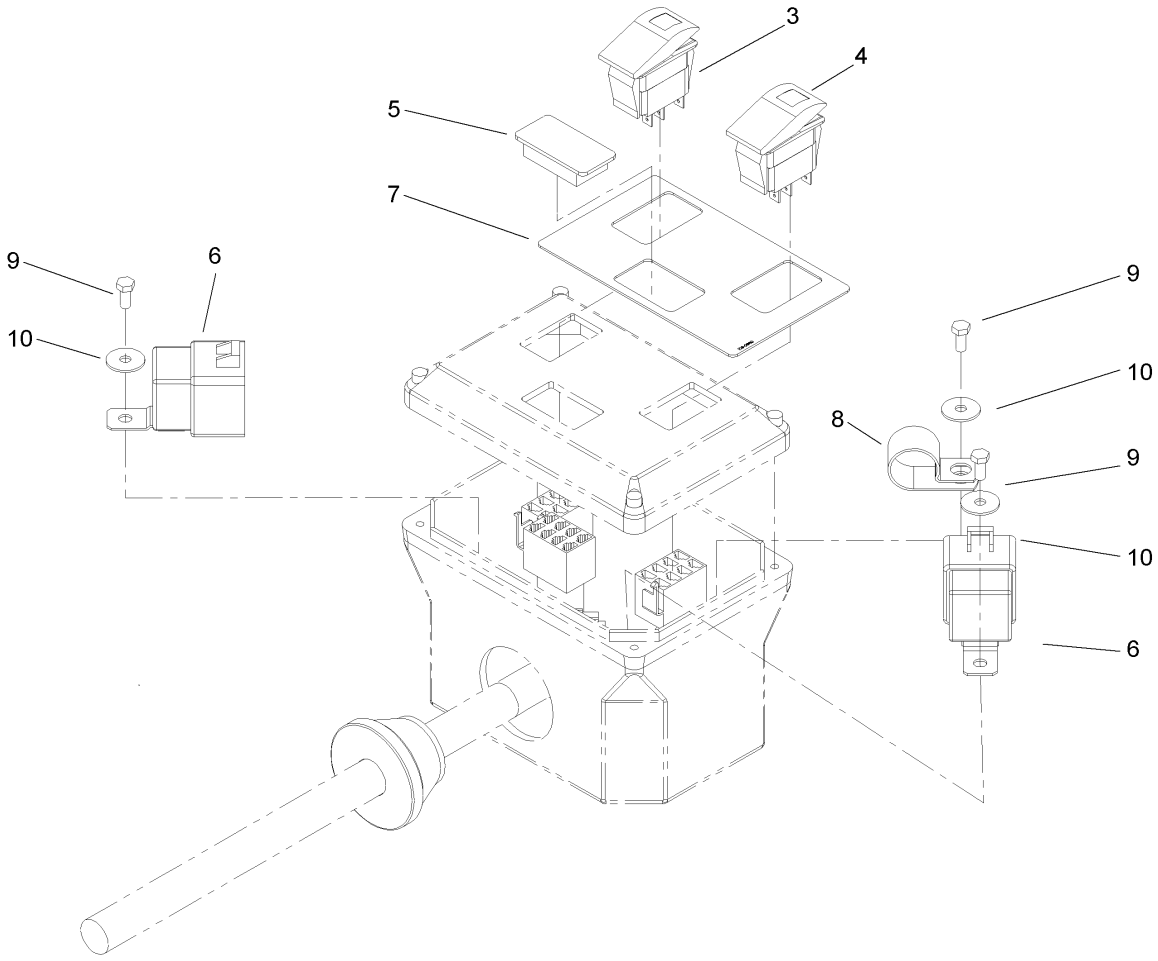

Remote Control Box Assembly

Ref	Part No.	Qty.	Description
3	108-0859	1	Switch
4	105-4232	1	Switch
5	99-7420	1	Plug-Hole
6	99-7430	2	Relay
7	108-0860	1	Decal-Electric Control Box
8	2412-41	1	Clamp
9	25-8640	2	Screw-HH
10	3256-61	2	Washer-Flat

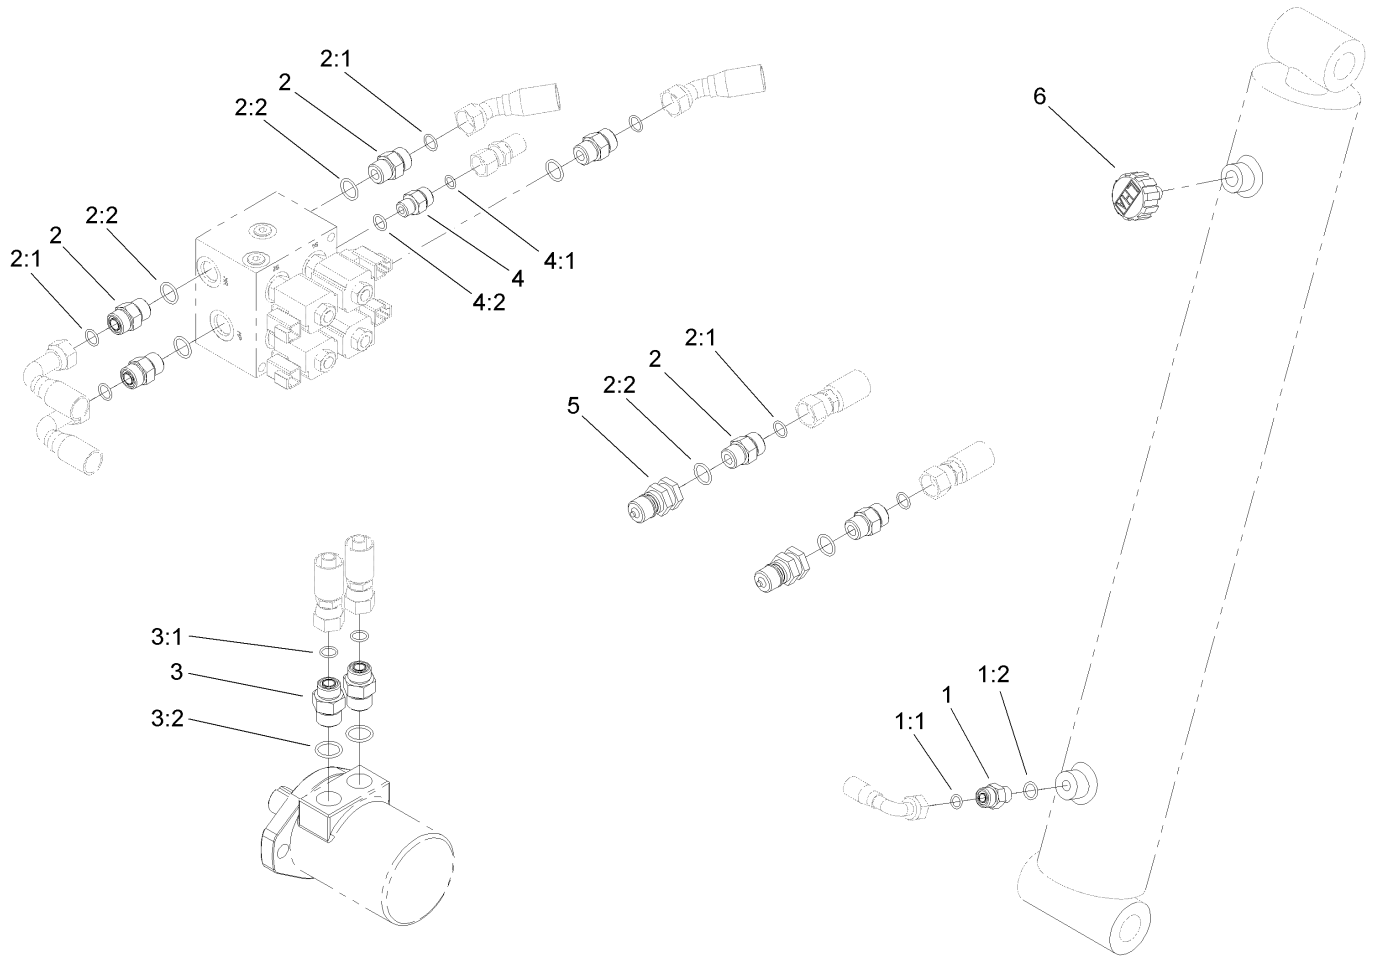

Hydraulic Fitting Assembly

Ref	Part No.	Qty.	Description
1	107-1463	1	Fitting-Valve, Check
1:1	237-22	1	O-Ring
1:2	237-42	1	O-Ring
2	340-4	6	Fitting-HYD, Straight
2:1	237-30	1	O-Ring
2:2	237-79	1	O-Ring
3	340-6	2	Fitting-HYD, Straight
3:1	237-30	1	O-Ring
3:2	237-80	1	O-Ring
4	340-2	1	Fitting-HYD, Straight
4:1	237-22	1	O-Ring
4:2	237-42	1	O-Ring
5	105-4170	2	Coupler-Male
6	68-6150	1	Breather

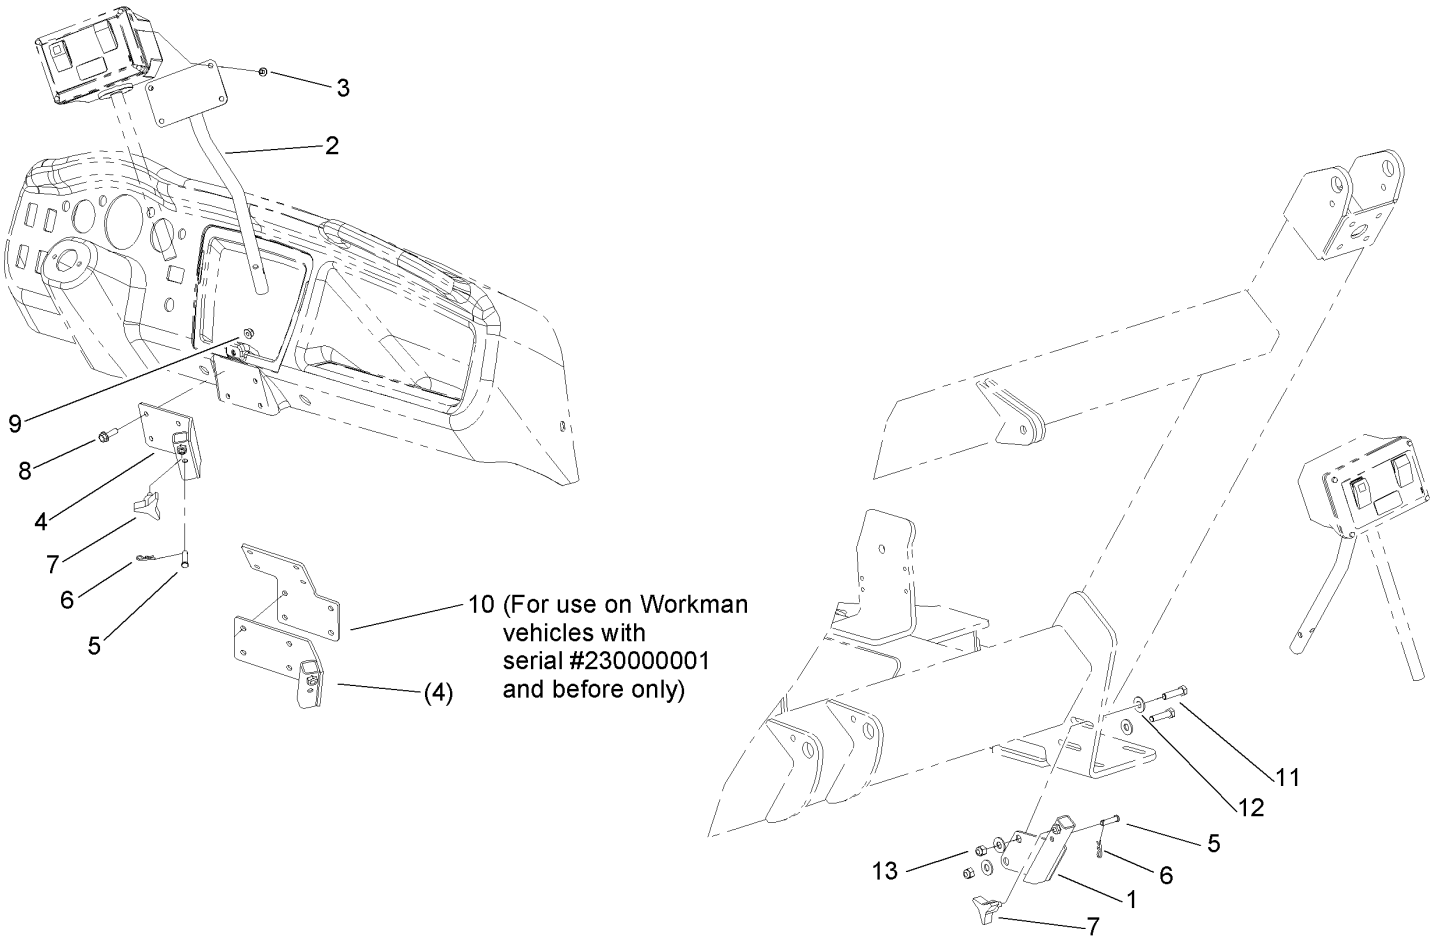

Control Box Mounting Assembly

Ref	Part No.	Qty.	Description
1	107-1365-01	1	Receiver ASM
2	108-0770-03	1	Control Box Mount ASM
3	3234-26	4	Screw
4	106-7992-03	1	Receiver ASM
5	283-6	2	Pin-Clevis
6	3290-307	2	Pin-Hair
7	92-9674	2	Knob
8	3234-17	4	Screw-HHF
9	104-8300	4	Nut-Flange, NI
10	107-2811-03	1	Bracket-Adapter, Control
11	323-8	2	Screw-HH
12	3256-4	2	Washer-Flat
13	104-8301	2	Nut-Flange, NI

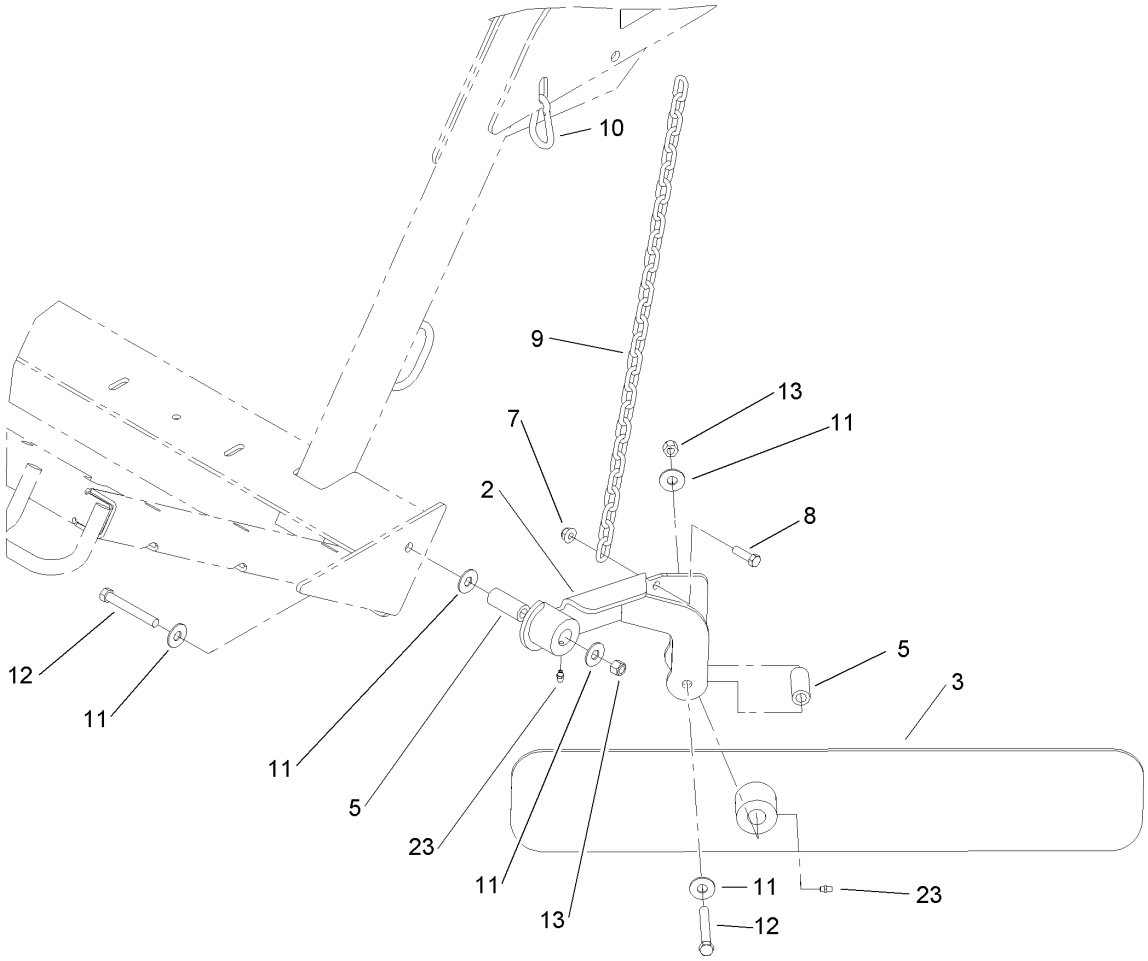

Windrow Assembly

Ref	Part No.	Qty.	Description
2	107-1506-01	1	Arm ASM
3	108-0836-01	1	Windrow Blade ASM
5	104-0958	2	Spacer-Windrow
7	104-8301	1	Nut-Flange, NI
8	323-7	1	Screw-HH
9	SV139-00	1	Chain-Link
10	107-1507	1	Link-Snap
11	3256-5	5	Washer-Flat
12	324-13	2	Screw-HH
13	3296-48	2	Nut-Lock, NI
23	302-5	2	Fitting-Grease

Attachments and Accessories

For 07065 - Pro Sweep 5200 Turf Sweeper

Product Name	Model/Part
Brake Kit	07086
Electric Offset Arm	07088
Jack ASM	106-9699
Wheel Scraper Kit	107-1370
Slow-Moving Vehicle Sign Kit	107-1372
Side Mirror Kit	107-8048
Pin-Hitch, Pointed	13-6200
Rear View Mirror Kit	92-2670

TORO®