Form Number 3354-891 Rev A

53cm Super Recycler®
Lawnmower

Model No. 20796 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2006
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Housing Assembly	3
Housing Assembly No. 108-8115	4
Height-of-Cut and Front Wheel Assembly	5
Transmission Assembly	6
Gear Case Assembly No. 108-8140	7
Engine Assembly	8
Handle Assembly	9
Electrical Assembly	10
Bag Assembly	11
Cylinder Assembly Briggs and Stratton 122607-0116-E1	12
Cylinder Head Assembly Briggs and Stratton 122607-0116-E1	13
Crankshaft Assembly Briggs and Stratton 122607-0116-E1	14
Crankcase Assembly Briggs and Stratton 122607-0116-E1	15
Carburetor Assembly Briggs and Stratton 122607-0116-E1	16
Air Cleaner Assembly Briggs and Stratton 122607-0116-E1	17
Governor Assembly Briggs and Stratton 122607-0116-E1	18
Muffler and Fuel Tank Assembly Briggs and Stratton 122607-0116-E1	19
Blower Housing Assembly Briggs and Stratton 122607-0116-E1	20
Recoil Starter Assembly Briggs and Stratton 122607-0116-E1	21
Starter Assembly Briggs and Stratton 122607-0116-E1	22
Gasket Assembly Briggs and Stratton 122607-0116-E1	23
Carburetor Overhaul Kit Assembly Briggs and Stratton 122607-0116-E1	24

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over-protection-system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Included in Engine Gasket Set-Ref. 358.
❹ Included in Carburetor Overhaul Kit-Ref. 121.
❺ Included in Carburetor Gasket Set-Ref. 977.
❻ Included in Valve Overhaul Gasket Set-Ref. 1095.
❼ Obtain from your local Briggs & Stratton dealer

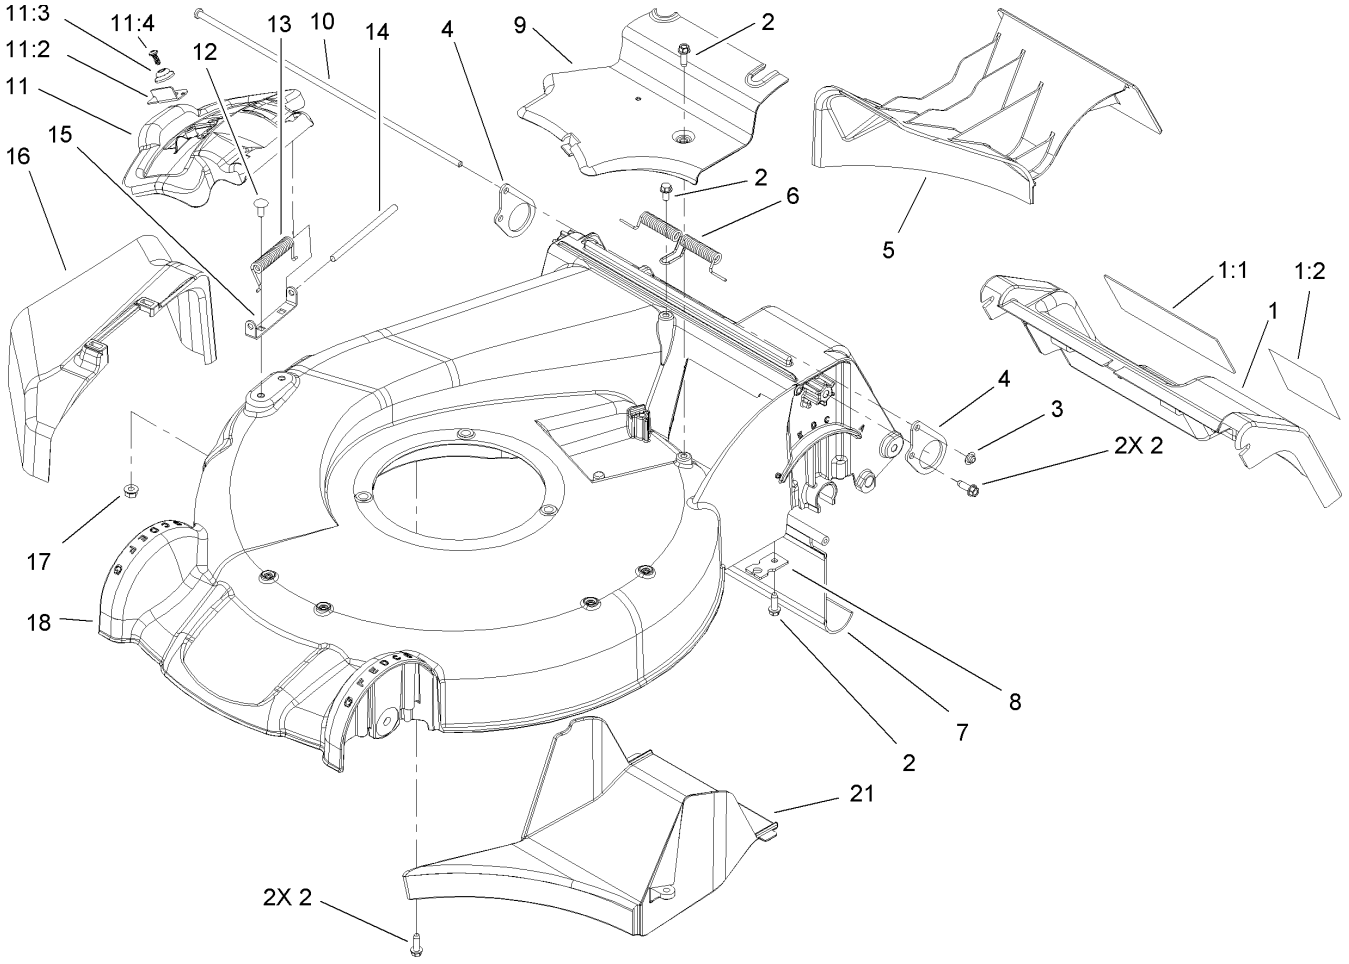

Housing Assembly

Ref	Part No.	Qty.	Description
1	108-8170	1	Door-Service
1:1	104-7909	1	Decal-Warning
1:2	104-7908	1	Decal-Warning
2	49-2040	7	Screw-HWHTF
3	3290-337	1	Nut-Speed
4	107-7493	2	Plate-Support, Door
5	107-7490	1	Plug-Mulch
6	105-3032	1	Spring-Door, Rear
7	107-7496	1	Shield-Trailing
8	107-7497	1	Bracket-Cable, Traction
9	107-7494	1	Cover-Belt
10	107-7499	1	Rod-Support, Door
11	107-3717	1	Discharge Door ASM
11:2	107-0795	1	Latch-Door
11:3	107-7456	1	Cap-Door
11:4	107-7461	1	Screw-Plastite
12	3229-11	2	Screw-CARR
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	99-5292	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
17	32128-32	2	Nut-HHF
18	108-8115	1	Housing ASM
21	107-7495	1	Tunnel-Discharge

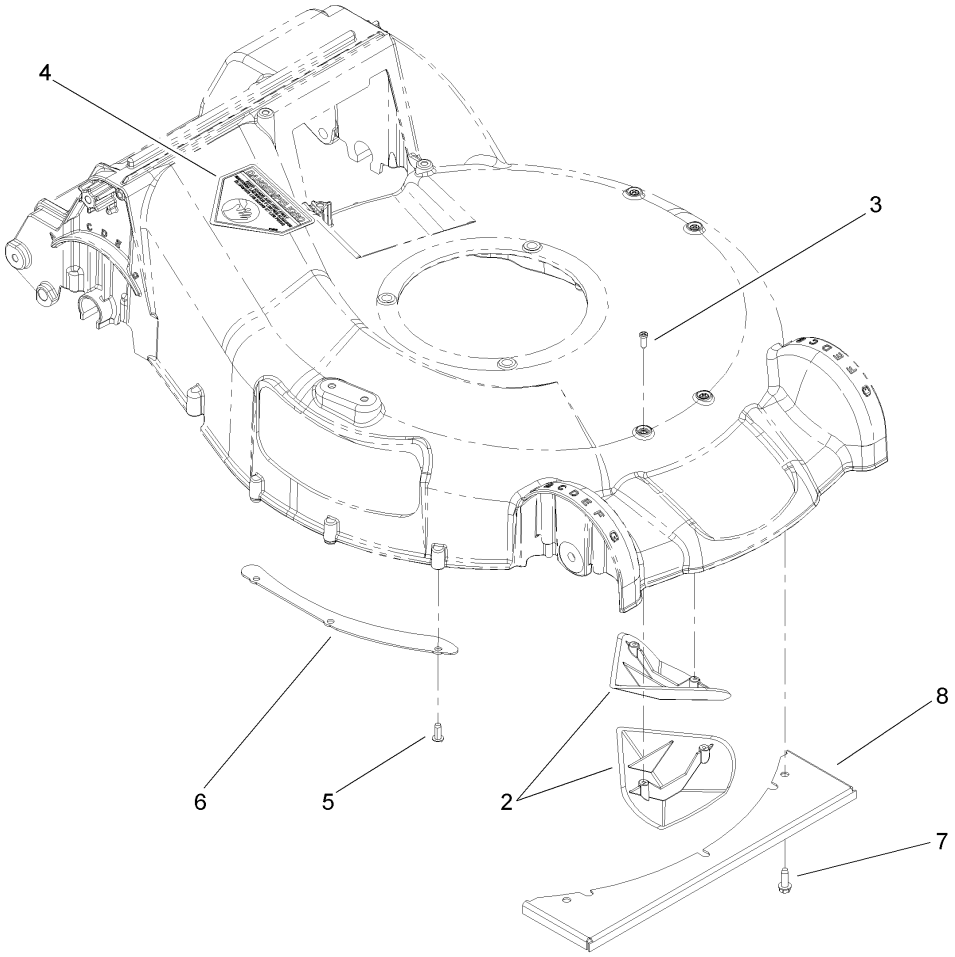

Housing Assembly No. 108-8115

Ref	Part No.	Qty.	Description
2	108-3798	2	Kicker-Housing
3	32144-111	4	Screw-PPH
4	94-8072	1	Decal-Danger
5	63-8590	3	Screw
6	105-1316-03	1	Sheet-Lip
7	49-2040	3	Screw-HWHTF
8	108-3797-03	1	Plate-Cover, Front

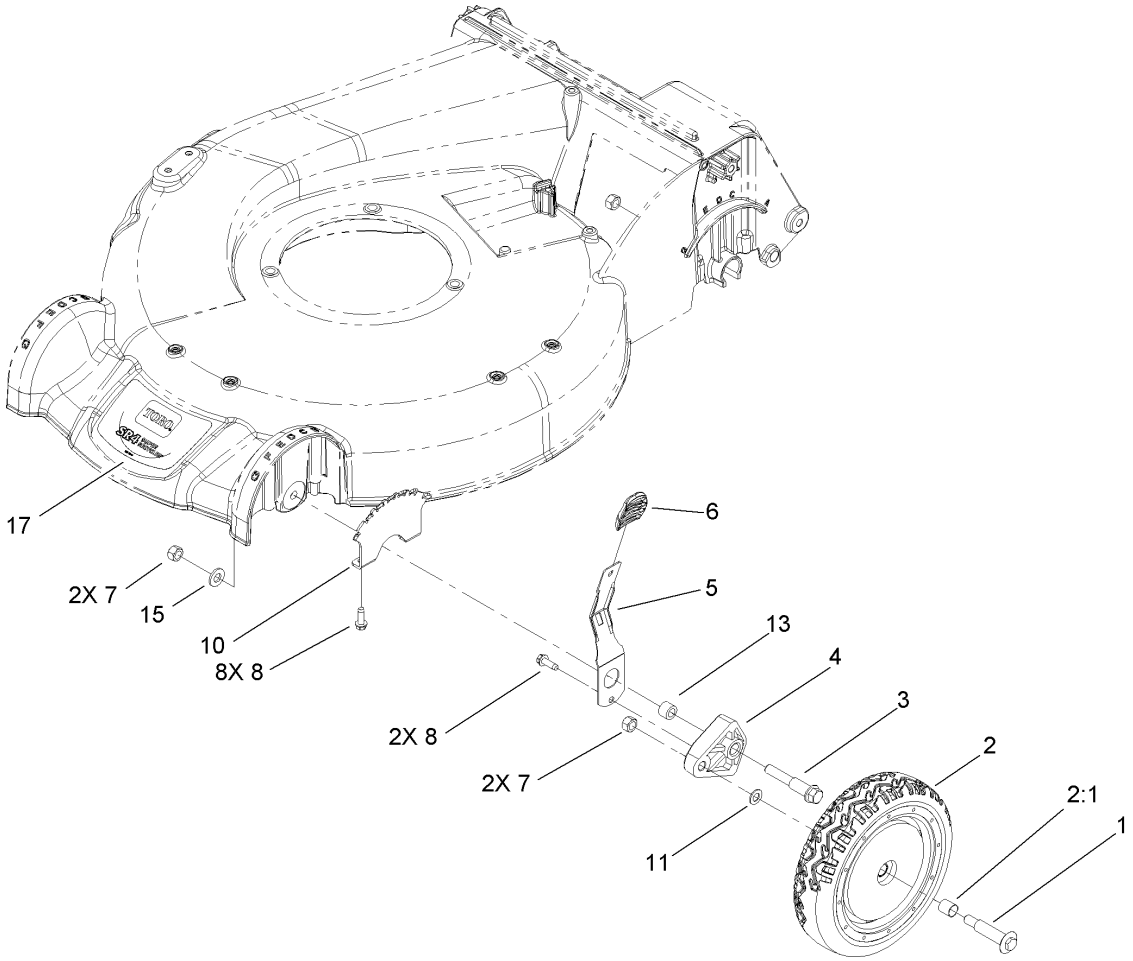

Height-of-Cut and Front Wheel Assembly

Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3706	2	8 Inch Wheel ASM
2:1	27-6250	2	Bushing
3	107-7498	2	Screw-Shoulder, HOC
4	107-7492	2	Arm-Pivot
5	107-7491	2	Spring Arm
6	105-3042	2	Knob-Lever, HOC
7	603773	4	Nut
8	49-2040	13	Screw-HWHTF
10	107-7478	4	Plate-HOC
11	40-1940	2	Washer
13	52-2480	2	Spacer-Wheel
15	3256-24	2	Washer-Flat
17	108-4840	1	Decal

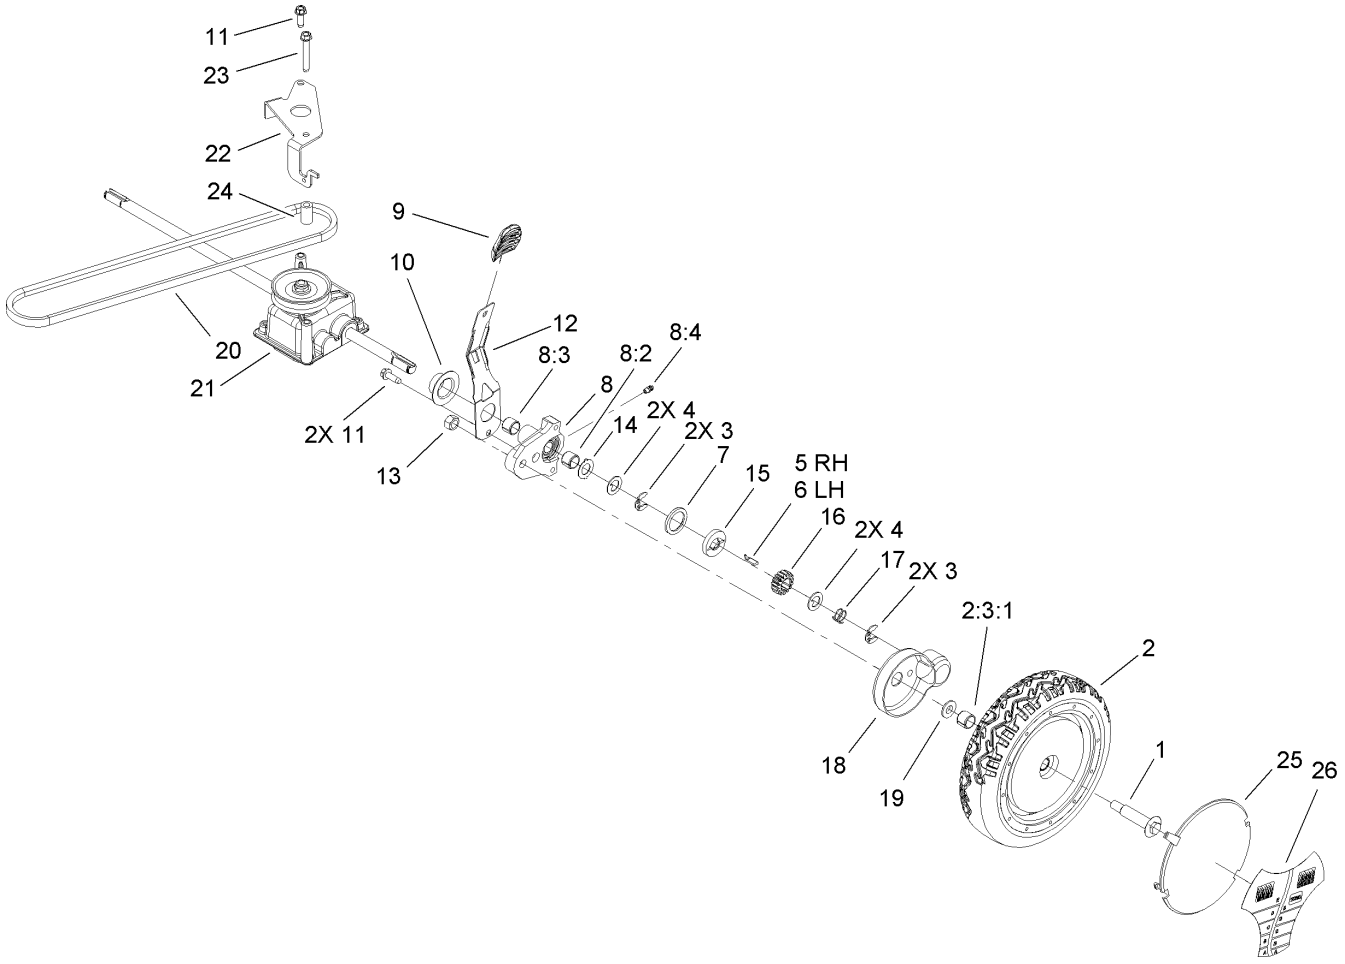

Transmission Assembly

Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3707	2	Wheel Gear ASM
❶❷2:3		1	8 Inch Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
❶5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	3	Screw-HWHTF
12	107-7491	2	Spring Arm
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel

Ref	Part No.	Qty.	Description
20	99-1597	1	V-Belt
21	108-8140	1	Gear Case ASM
22	107-7483-03	1	Bracket-Gearbox
23	92-1616	1	Screw-HWHTF
24	614673	1	Bushing-Plate, Actuator
25	100-6351	1	Cover-Wheel
26	100-1519	1	Label-Wheel, Smart

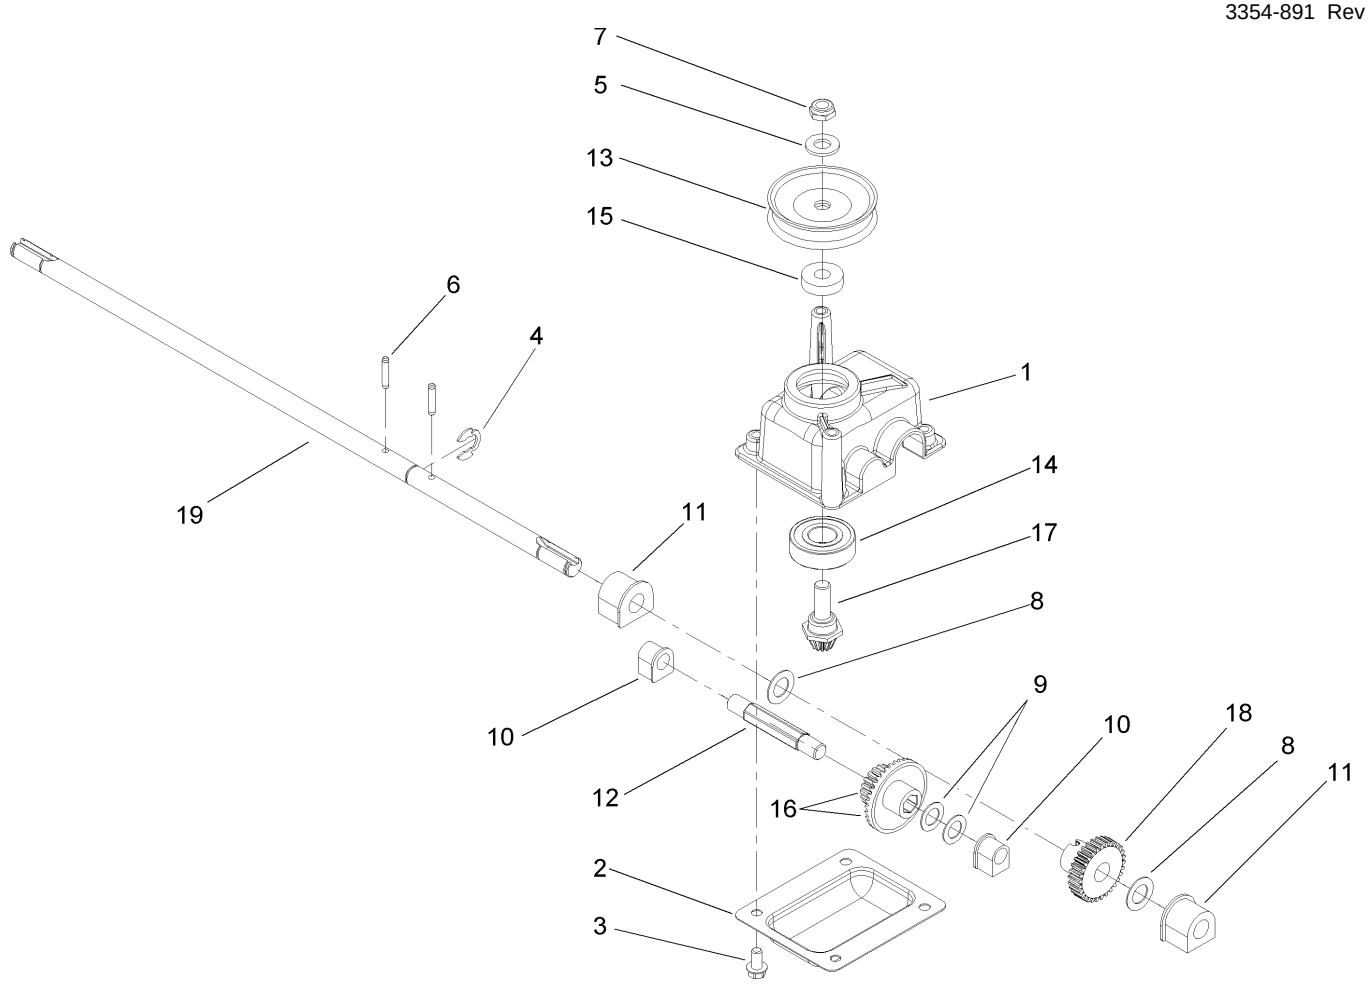

Gear Case Assembly No. 108-8140

Ref	Part No.	Qty.	Description
1	104-7619	1	Case-Gear
2	614668-03	1	Cover-Case, Gear
3	32144-4	4	Screw-HWH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock
8	36-4780	2	Washer
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing
12	614696	1	Shaft-Intermediate
13	100-1176	2	Pulley-Half
14	100-1048	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-1005	1	Gear-19T Spur, 37T Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	104-1004	1	Gear-30T
19	108-8141	1	Shaft-Output

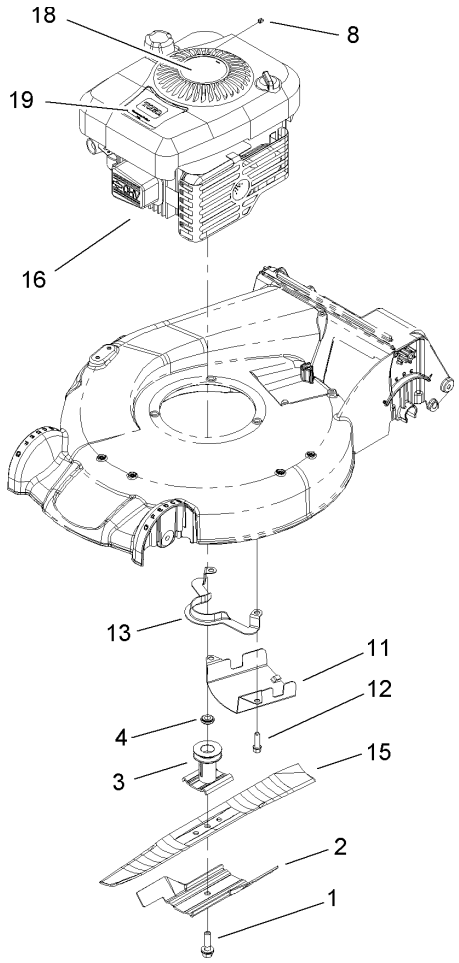

Engine Assembly

Ref	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade
2	105-6848-03	1	Accelerator-Blade
3	106-3987	1	Blade Driver ASM
4	106-3999	1	Spacer-Driver
8	2210-316	1	Stop-Rope Need Order
11	107-7489-03	1	Shield-Grass
12	95-1727	3	Screw-Taptite
13	108-8110-03	1	Guide-Belt
15	108-3762-03	1	Blade-Recycling
❷❼16		1	Engine-Briggs And Stratton, 122607-0116-E1
18	110-7492	1	Decal-Recoil
19	110-7493	1	Decal-Recoil

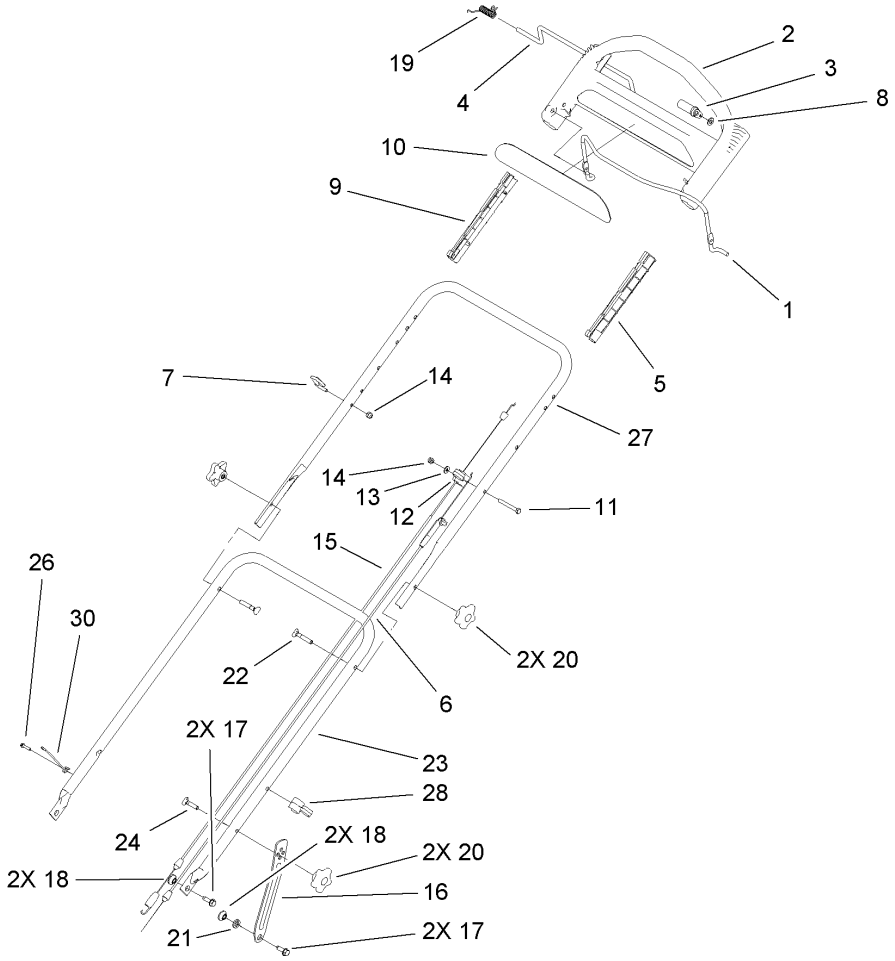

Handle Assembly

Ref	Part No.	Qty.	Description
1	104-8679-03	1	Bail-Brake
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
6	108-8157	1	Cable-Brake
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	108-8136	1	Decal-Handle
11	321-50	1	Screw-HH
12	99-5239	1	Anchor-Cable
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	108-8158	1	Cable-Traction
16	108-8145-03	2	Support-Handle
17	701243	4	Screw-HWHTF
18	27-6600	4	Spacer-Coupling
19	104-8690	1	Spring-Torsion
20	108-8162	4	Knob-Locking
21	55-9670	2	Washer
22	92-2260	2	Screw-Handle
23	107-7476-05	1	Handle-Lower
24	92-2260	2	Screw-Handle

Ref	Part No.	Qty.	Description
26	32144-53	1	Screw-SHWH
27	107-3783-05	1	Handle-Upper
28	106-6805	1	Guide-Cable
30	108-9452	1	Hook-Rope, Displacement

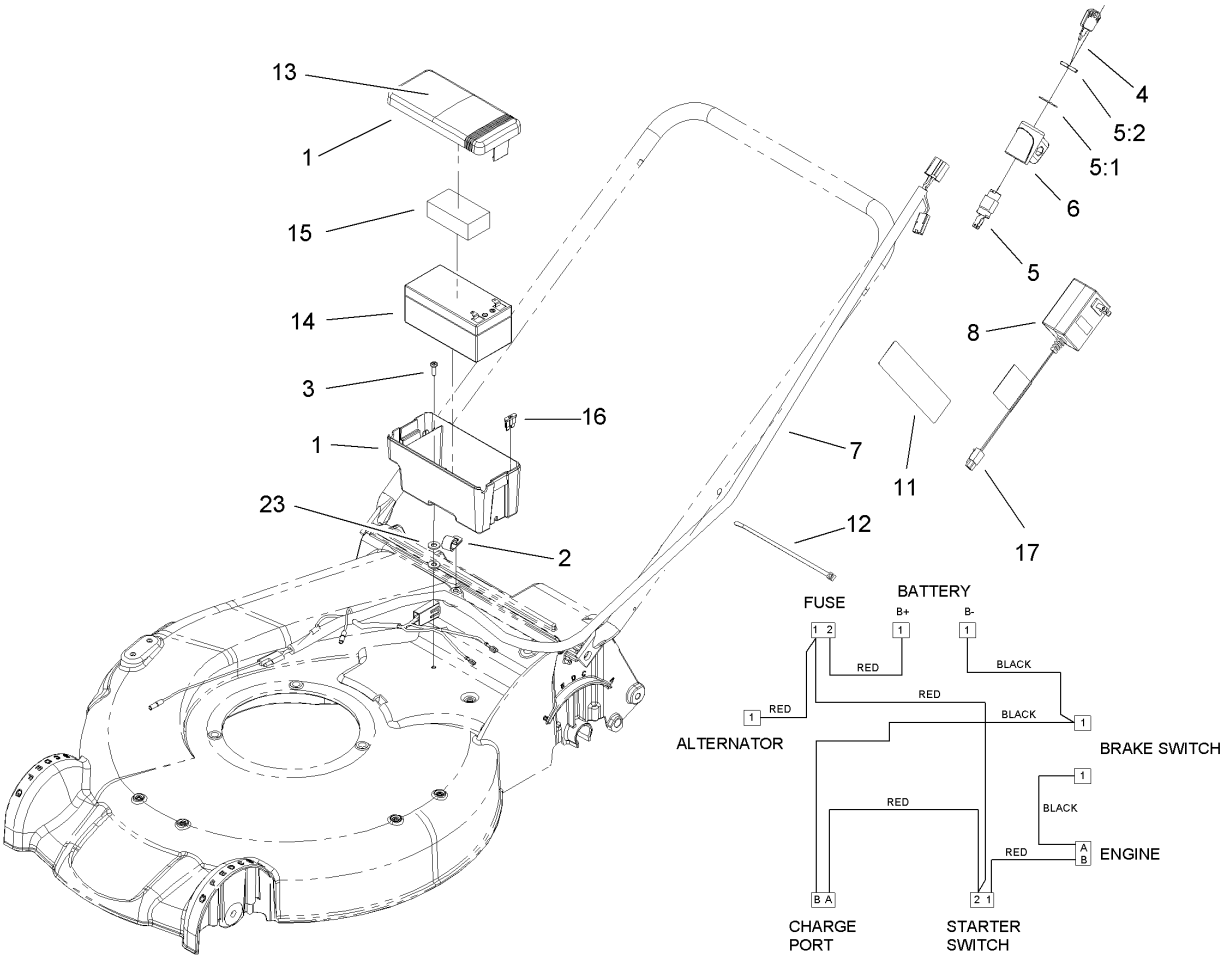

Electrical Assembly

Ref	Part No.	Qty.	Description
1	108-4844	1	Battery Box ASM
2	2412-73	1	Clamp-R
3	32144-32	1	Screw
4	700918	1	Key
5	46-5780	1	Switch-Starter
5:1	3254-5	1	Washer-Tooth
5:2	218-461	1	Nut-HH
6	108-9760	1	Mount-Switch
7	108-4792	1	Harness-Es
8	98-2391	1	Charger-European, 12V Dc
11	104-7953	1	Decal-Harness
12	614249	2	Strap-Tie
13	108-4791	1	Decal-Instructional
14	106-8397	1	Battery-12 Volt
15	107-3774	1	Foam-Battery, Top
16	99-6124	2	Fuse-40 Amp
17	107-3749	1	Adapter-Charger
23	3256-22	2	Washer-Flat

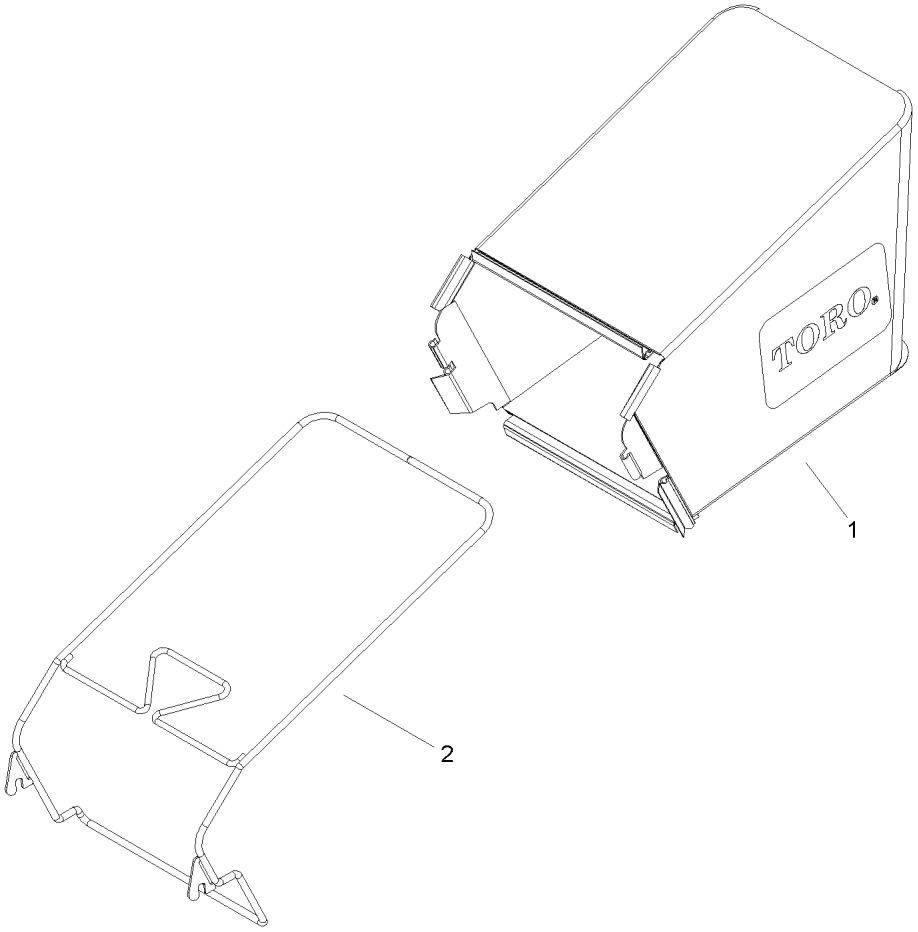

Bag Assembly

Ref	Part No.	Qty.	Description
1	107-3789	1	Grass Bag ASM
2	107-3785-03	1	Bag Frame ASM

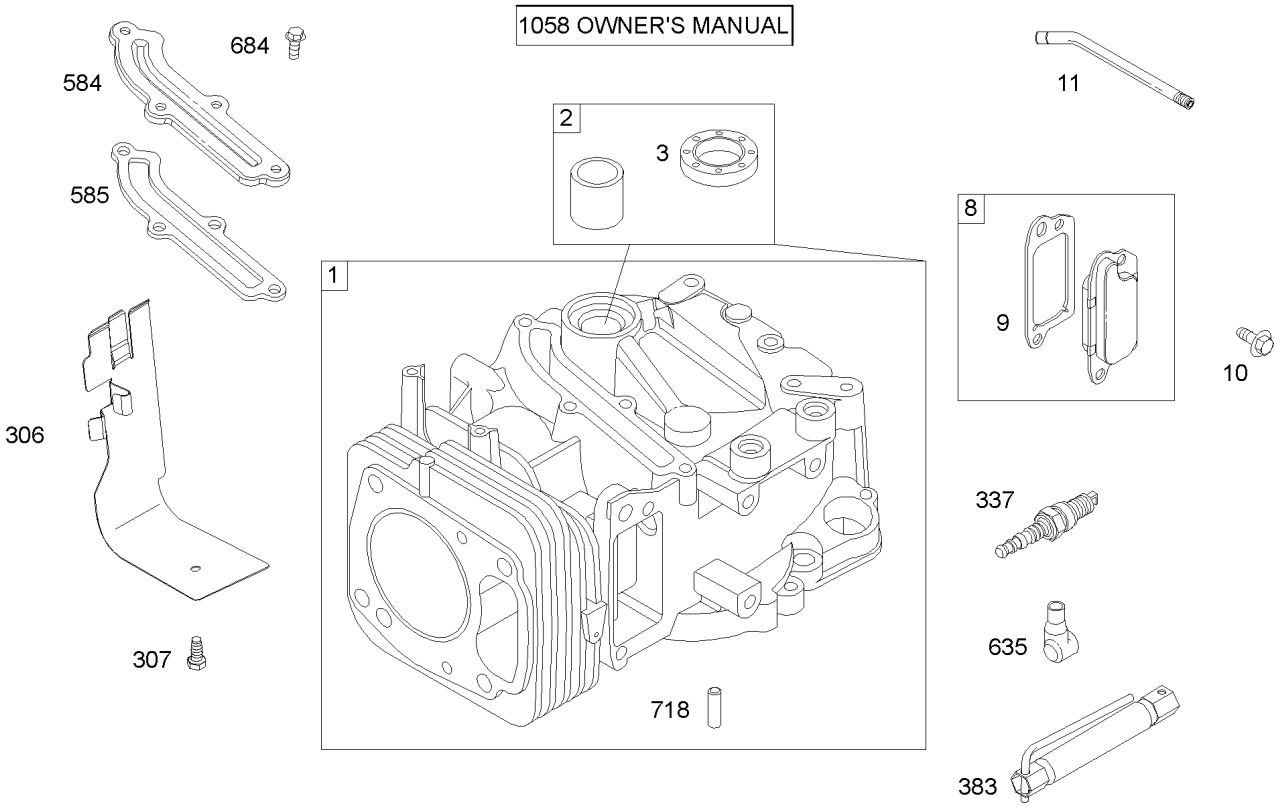

Assemblies include all parts shown in frames.

Cylinder Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❼1	499678	1	Cylinder Assembly
❼2	399269	1	Bushing/Seal Kit
❸❼3	299819	1	Seal–Oil
❼8	495786	1	Breather ASM
❸❻9 ❼	272481	1	Gasket–Breather
❼10	691125	1	Screw
❼11	691260	1	Tube–Breather
❼306	691232	1	Shield–Cylinder
❼307	690345	1	Screw
❼337	692051	1	Sparkplug
❼383	19374	1	Wrench-Spark Plug
❼584	692342	1	Cover–Breather Passage
❸❼585	691879	1	Gasket–Passage, Breather
❼635	66538	1	Boot–Plug, Spark
❼684	690345	1	Screw
❼718	690959	1	Pin-Locating
❼1058	274979	1	Manual-Owner's

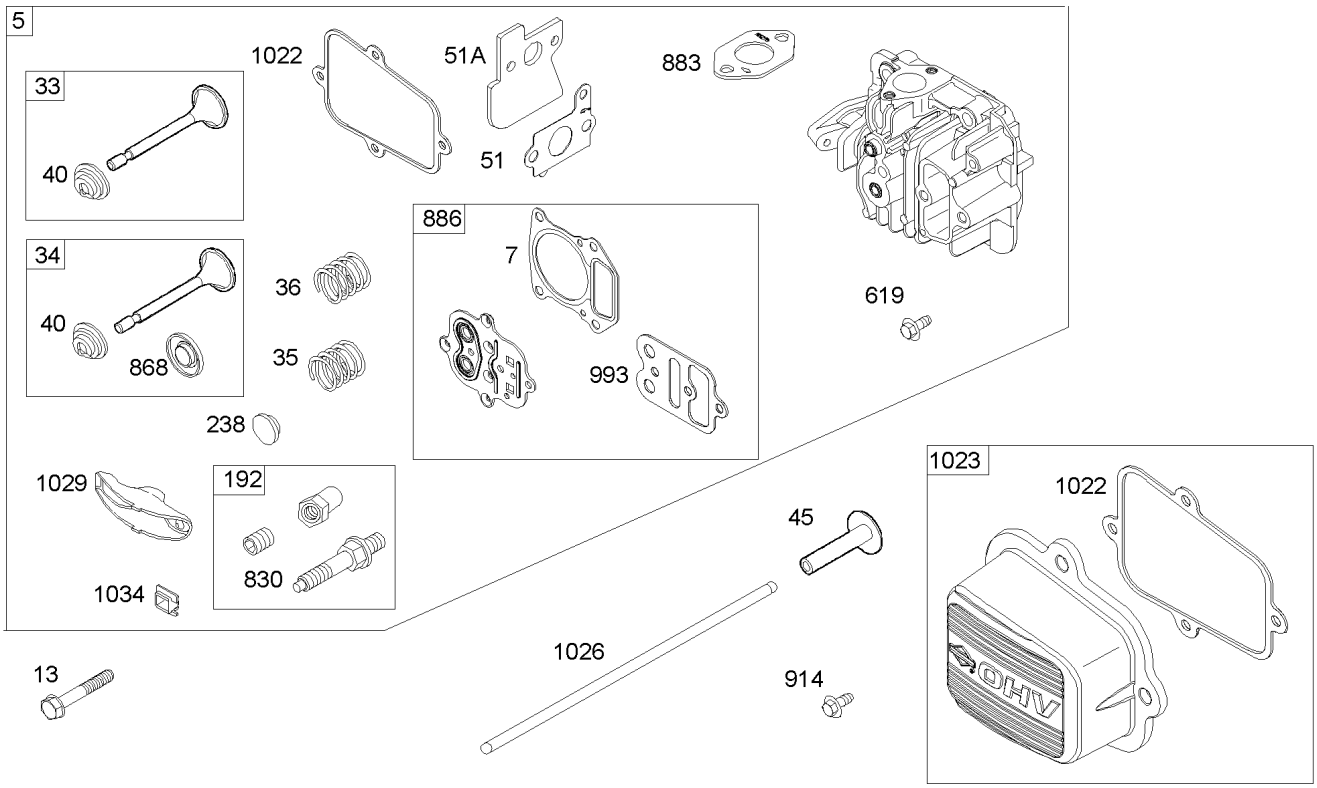

Assemblies include all parts shown in frames.

Cylinder Head Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❼5	695276	1	Head–Cylinder
❸❻7 ❼	695166	1	Cylinder Head Gasket
❼13	691137	1	Screw
❼33	499642	1	Valve-Exhaust
❼34	499641	1	Valve-Intake
❼35	691304	1	Spring-Valve
❼36	691304	1	Spring-Valve
❼40	692194	1	Retainer–Valve
❼45	690977	1	Valve-Tappet
❸❹51 ❻❼	692668	1	Gasket-Intake
❸❹51A ❻❼	692799	1	Gasket-Intake
❼192	694543	1	Adjuster-Arm, Rocker
❼238	691300	1	Cap-Valve
❼619	691108	1	Screw
❼830	694544	1	Stud-Arm, Rocker
❼868	692044	1	Seal-Valve
❼883	691893	1	Gasket-Exhaust
❼886	696268	1	Cylinder Head/Plate Gasket Kit
❼914	691127	1	Screw
❼993	694088	1	Gasket-Plate, Cylinder Head
❼1022	691890	1	Gasket-Cover, Rocker
❼1023	692694	1	Cover–Rocker

Ref	Part No.	Qty.	Description
❼1026	692045	1	Rod–Push
❼1029	691230	1	Arm-Rocker
❼1034	691343	1	Guide-Rod, Push

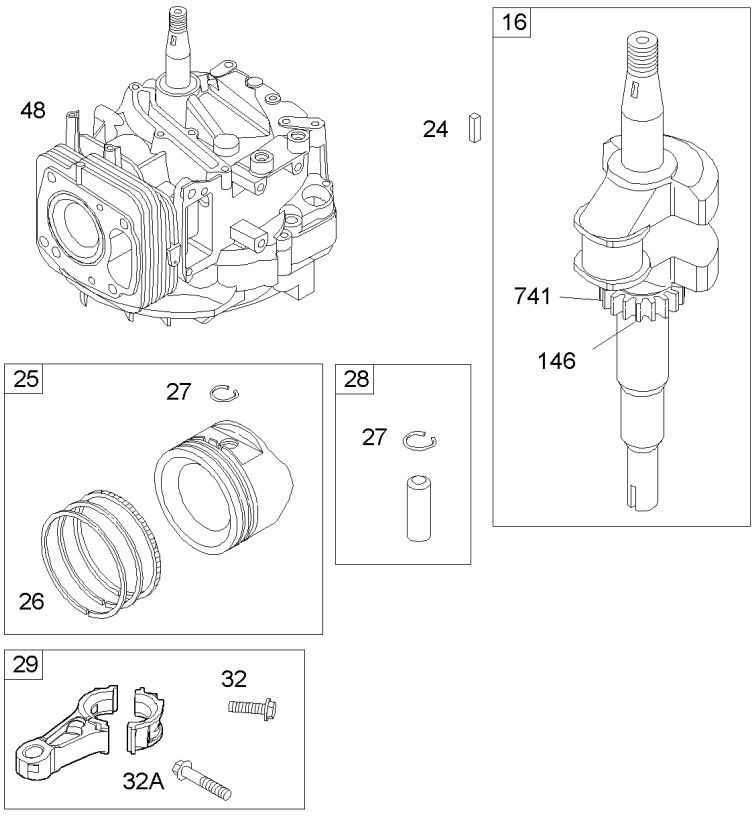

Assemblies include all parts shown in frames.

Crankshaft Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❼16	695950	1	Crankshaft
❼24	222698	1	Key
❼25	499627	1	Piston ASM (Standard)
❼	692788	1	Piston Assembly (.010 Oversize)
❼	692789	1	Piston ASM (.020In Oversize)
❼	692790	1	Piston Assembly (.030 Oversize)
❼26	499631	1	Ring Set (Standard)
❼	692785	1	Ring Set (.010In Oversize)
❼	692786	1	Ring Set (.020In Oversize)
❼	692787	1	Ring Set (.030In Oversize)
❼27	691866	1	Lock–Pin, Piston
❼28	499423	1	Pin-Piston (STD)
❼29	499424	1	Rod-Connecting
❼32	691664	1	Screw
❼32A	695759	1	Screw
❼48	694898	1	Short Block
❼146	690979	1	Key-Timing
❼741	691830	1	Gear–Timing

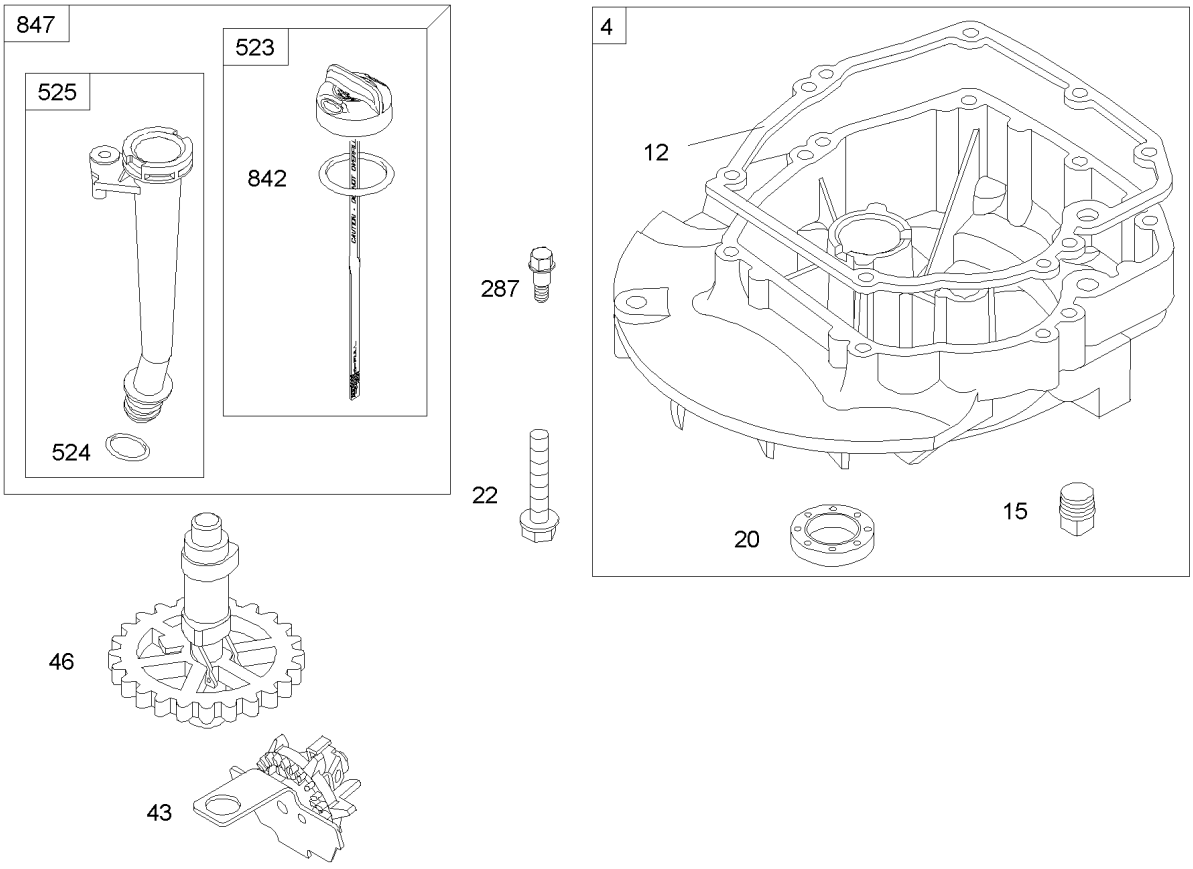

Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❼4	499619	1	Sump–Engine
❸❼12	692232	1	Gasket–Crankcase
❼15	691680	1	Plug–Drain, Oil
❸❼20	399781	1	Seal–Oil
❼22	691092	1	Screw
❼43	691997	1	Slinger–Governor/Oil
❼46	694039	1	Camshaft
❼287	690940	1	Screw
❼523	499621	1	Dipstick
❸❼524	692296	1	Seal-O Ring
❼525	495265	1	Tube-Dipstick
❸❼842	691031	1	Seal-O Ring
❼847	692047	1	Dipstick/Tube ASM

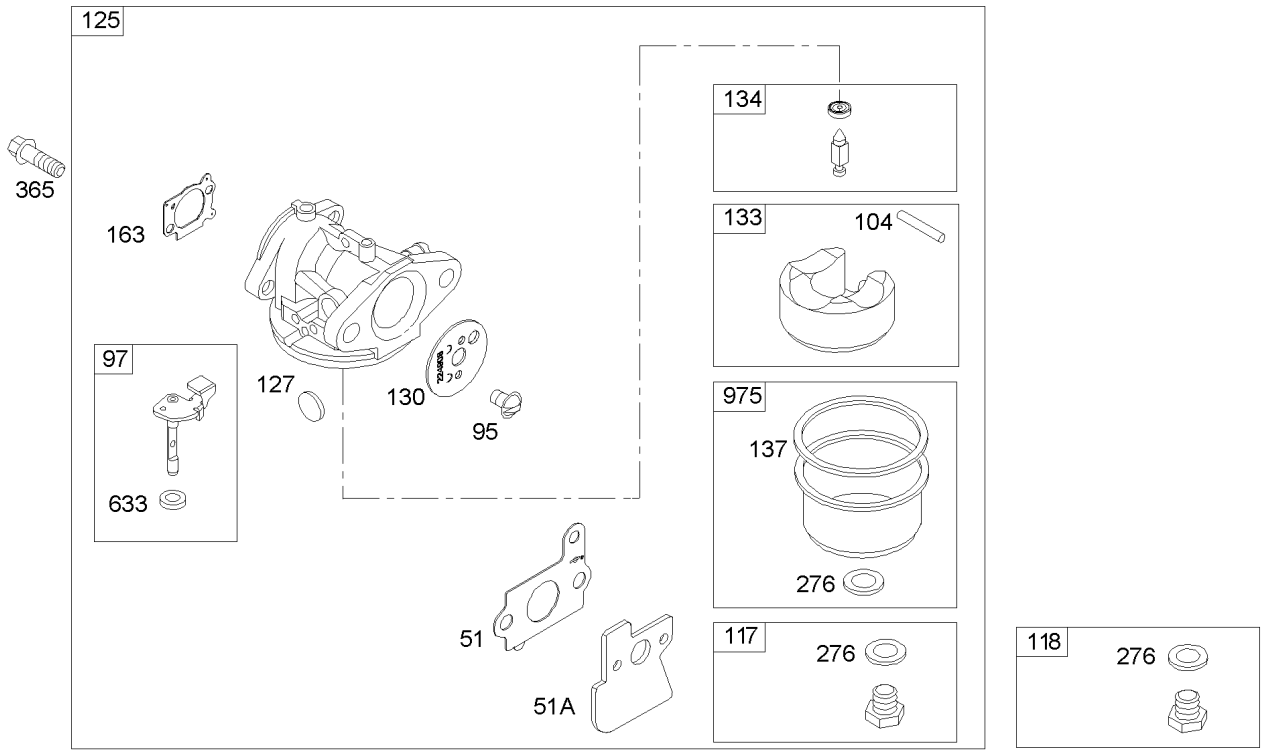

Assemblies include all parts shown in frames.

Carburetor Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❸❹51 ❻❼	692668	1	Gasket-Intake
❸❹51A ❻❼	692799	1	Gasket-Intake
❼95	691636	1	Screw
❼97	499682	1	Shaft–Throttle
❺❼104	691242	1	Pin–Hinge, Float
❼117	498978	1	Jet–Main (Standard)
❼118	498975	1	Jet–Main (High Altitude)
❼125	694202	1	Carburetor
❺❼127	694468	1	Plug–Welch
❼130	691203	1	Valve–Throttle
❼133	398187	1	Float–Carburetor
❼134	398188	1	Needle/Seat Kit
❹❺137 ❼	693981	1	Gasket–Bowl, Float
❸❹163 ❻❼	691894	1	Gasket–Cleaner, Air
❹❺276 ❼	271716	1	Washer–Sealing
❼365	691136	1	Screw
❹❺633 ❼	691321	1	Seal-Shaft, Choke/Throttle
❼975	493640	1	Bowl–Float

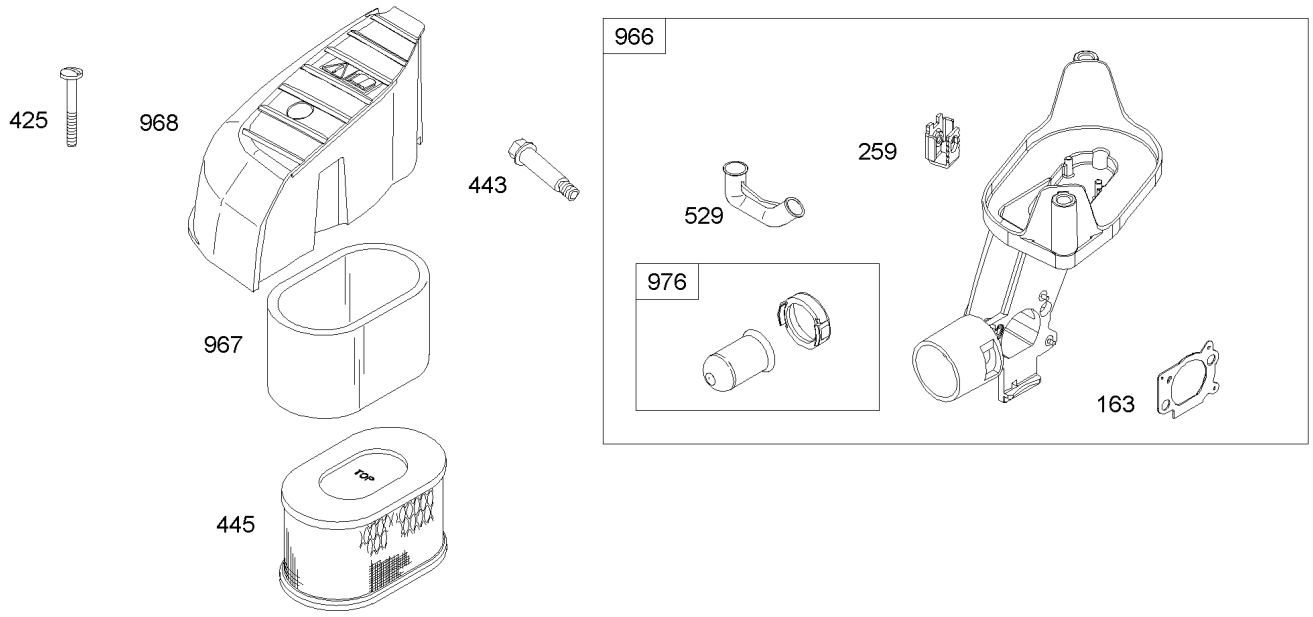

Assemblies include all parts shown in frames.

Air Cleaner Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❸❹163 ❻❼	691894	1	Gasket–Cleaner, Air
❼259	691189	1	Bracket–Clamp, Casing
❼425	690244	1	Screw
❼443	690255	1	Screw
❼445	690610	1	Filter–Air Cleaner Cartridge
❼529	692937	1	Grommet
❼966	690243	1	Base–Primer, Air Cleaner
❼967	273356	1	Filter-Pre Cleaner
❼968	692692	1	Cover–Cleaner, Air
❼976	694395	1	Primer–Carburetor

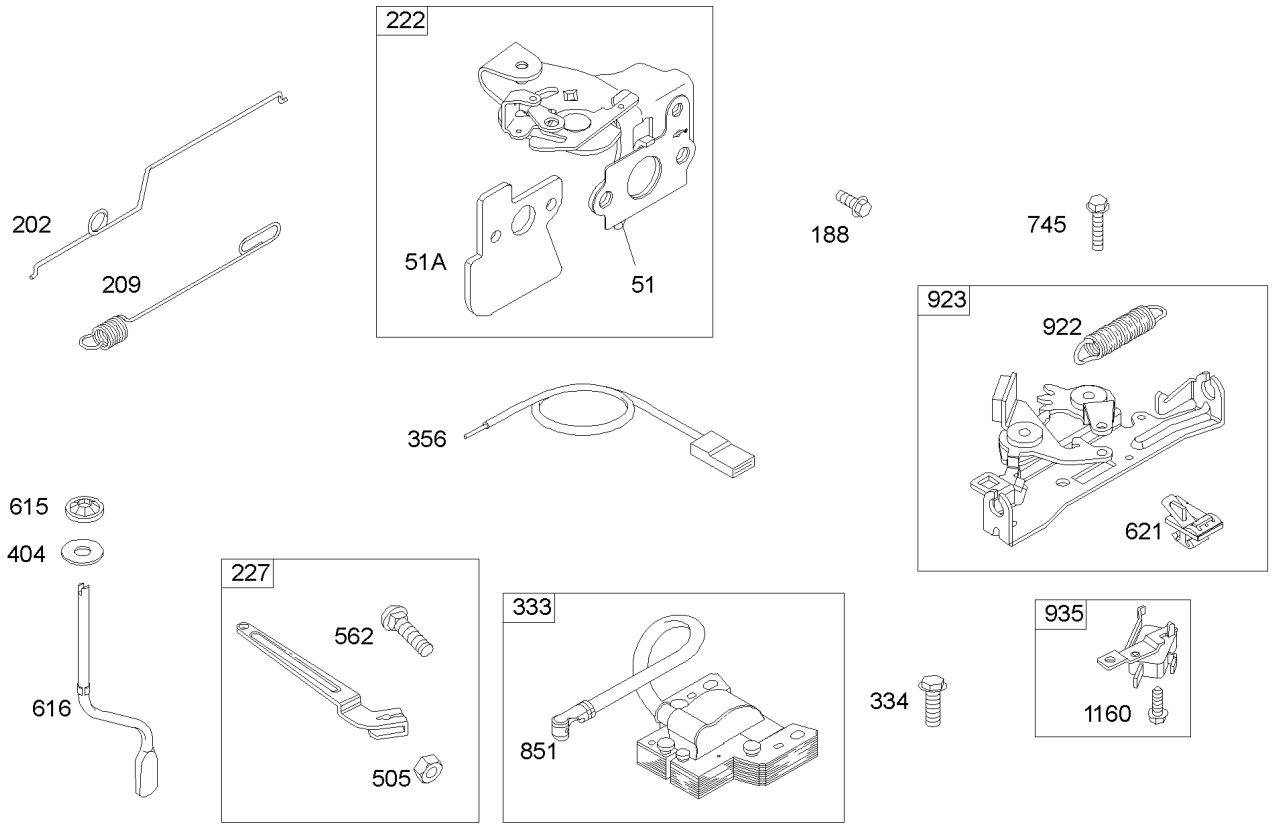

Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❸❹51 ❻❼	692668	1	Gasket-Intake
❸❹51A ❻❼	692799	1	Gasket-Intake
❼188	693168	1	Screw (Control Bracket)
❼202	691303	1	Link–Governor, Mechanical
❼209	691292	1	Spring–Governor
❼222	692723	1	Bracket–Control
❼227	691467	1	Lever–Governor Control
❼333	802574	1	Armature–Magneto
❼334	691061	1	Screw
❼356	692390	1	Wire-Stop
❼404	690272	1	Washer
❼505	231082	1	Nut (Governor Control Lever)
❼562	94852	1	Screw (Governor Control Lever)
❼615	690340	1	Retainer–Shaft, Governor
❼616	691308	1	Crank–Governor
❼621	692310	1	Switch-Stop
❼745	691648	1	Screw
❼851	493880	1	Terminal-Spark Plug
❼922	691831	1	Spring–Brake
❼923	691994	1	Brake ASM
❼935	499421	1	Switch–Interlock
❼1160	691627	1	Screw Interlock Switch)

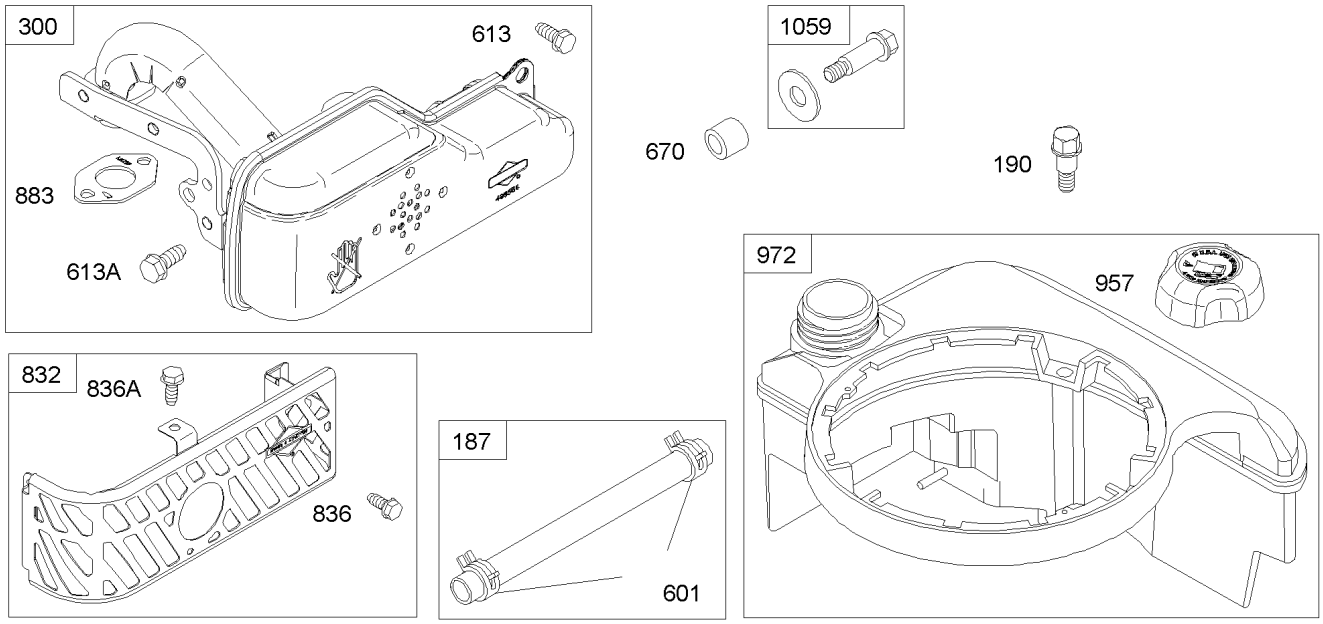

Assemblies include all parts shown in frames.

Muffler and Fuel Tank Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❼187	691050	1	Line-Fuel (Cut To Required Length)
❼190	690940	1	Screw
❼300	694248	1	Muffler
❼601	95162	1	Clamp-Hose
❼613	691108	1	Screw
❼613A	691140	1	Screw
❼670	692294	1	Spacer–Tank, Fuel
❼832	691466	1	Guard–Muffler
❼836	690960	1	Screw
❼836A	691147	1	Screw
❸❻❼883	691893	1	Gasket-Exhaust
❼957	692046	1	Cap–Tank, Fuel
❼972	499618	1	Tank–Fuel
❼1059	692311	1	Screw/Washer Kit

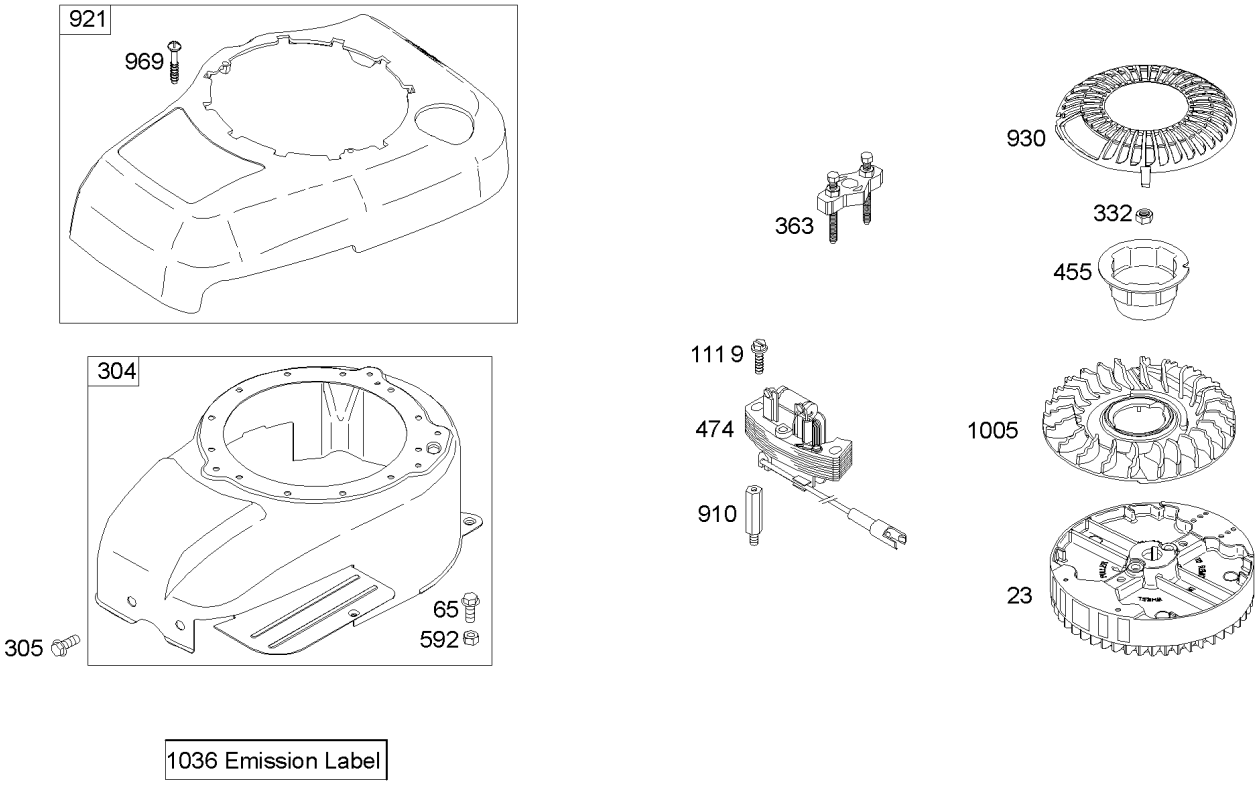

Assemblies include all parts shown in frames.

Blower Housing Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❼23	696569	1	Flywheel
❼65	690837	1	Screw
❼304	499677	1	Housing–Blower
❼305	690960	1	Screw
❼332	690662	1	Nut
❼363	19069	1	Puller–Flywheel
❼455	695161	1	Cup/Screen ASM
❼474	691991	1	Alternator
❼592	690800	1	Nut
❼910	691094	1	Stud
❼921	692699	1	Cover–Housing, Blower
❼930	692691	1	Guard–Rewind
❼969	691138	1	Screw
❼1005	691346	1	Fan–Flywheel
❼1036	696767	1	Label–Emission
❼1119	691648	1	Screw

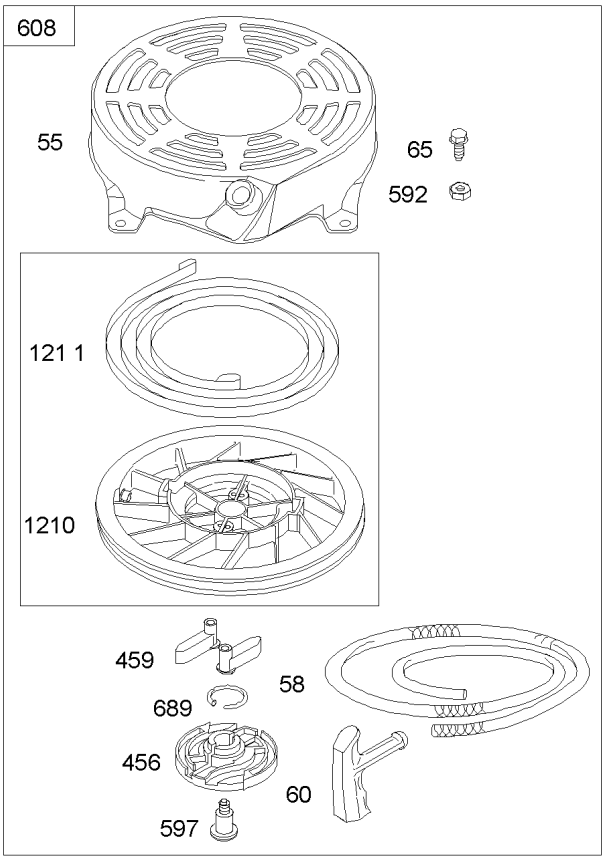

Assemblies include all parts shown in frames.

Recoil Starter Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❼55	691421	1	Housing–Starter, Rewind
❼58	280399	1	Rope–Starter (Cut To Required Length)
❼60	281434	1	Grip–Rope, Starter
❼65	690837	1	Screw
❼456	692299	1	Plate–Friction, Pawl
❼459	281505	1	Ratchet–Pawl
❼592	690800	1	Nut
❼597	691696	1	Screw
❼608	497680	1	Starter–Rewind
❼689	691855	1	Spring–Friction
❼1210	498144	1	Pulley/Spring ASM
❼1211	498144	1	Pulley/Spring ASM

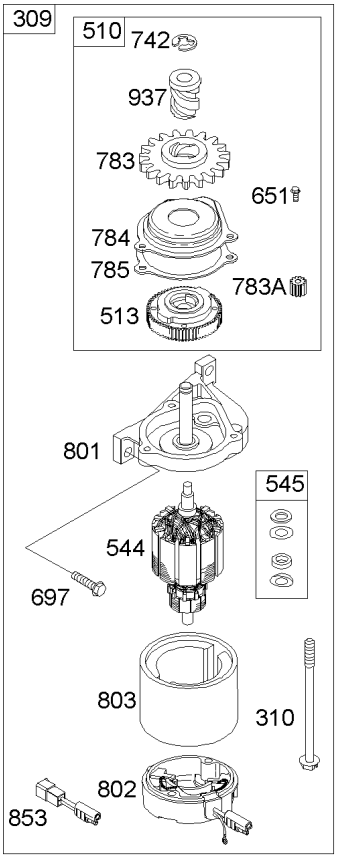

Assemblies include all parts shown in frames.

Starter Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❼309	695550	1	Motor–Starter
❼310	692327	1	Bolt
❼510	494147	1	Drive–Starter
❼513	692358	1	Clutch–Drive
❼544	690786	1	Armature–Starter
❼545	492919	1	Washer Set
❼651	690345	1	Screw
❼697	691127	1	Screw
❼742	93941	1	Retainer–E Ring
❼783	691918	1	Gear–Pinion
❼783A	691269	1	Gear–Pinion
❼784	692341	1	Cover–Gear, Starter
❼785	692352	1	Gasket–Cover, Starter
❼801	690782	1	Cap–Drive
❼802	695267	1	Cap–End
❼803	695266	1	Housing–Starter
❼853	695268	1	Adapter–Wire
❼937	691325	1	Spline–Starter

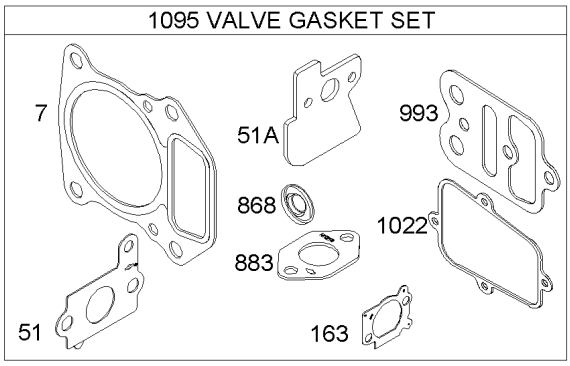

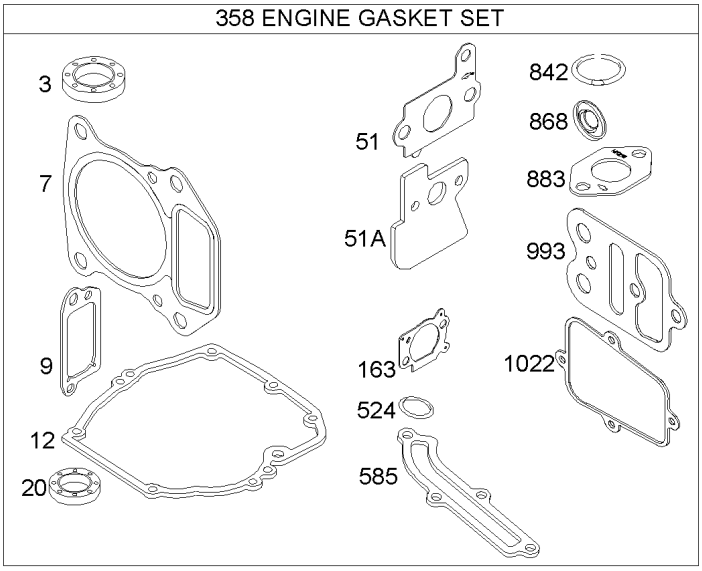

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❸❼3	299819	1	Seal–Oil
❸❻7 ❼	695166	1	Cylinder Head Gasket
❸❼9	272481	1	Gasket–Breather
❸❼12	692232	1	Gasket–Crankcase
❸❼20	399781	1	Seal–Oil
❸❹51 ❻❼	692668	1	Gasket-Intake
❸❹51A ❻❼	692799	1	Gasket-Intake
❸❹163 ❻❼	691894	1	Gasket–Cleaner, Air
❼358	694090	1	Gasket Set–Engine
❸❼524	692296	1	Seal-O Ring
❸❼585	691879	1	Gasket–Passage, Breather
❸❼842	691031	1	Seal-O Ring
❸❻868 ❼	692044	1	Seal-Valve
❸❻883 ❼	691893	1	Gasket-Exhaust
❸❻993 ❼	694088	1	Gasket-Plate, Cylinder Head
❸❻1022 ❼	691890	1	Gasket-Cover, Rocker
❼1095	694091	1	Gasket Set–Valve

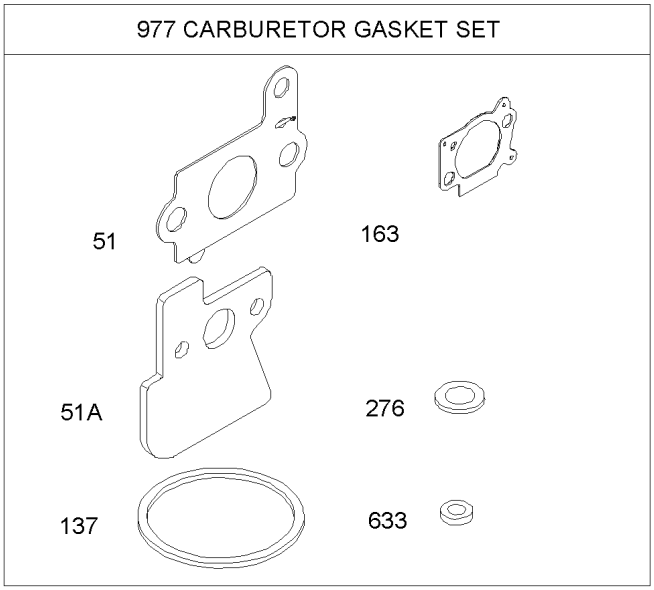

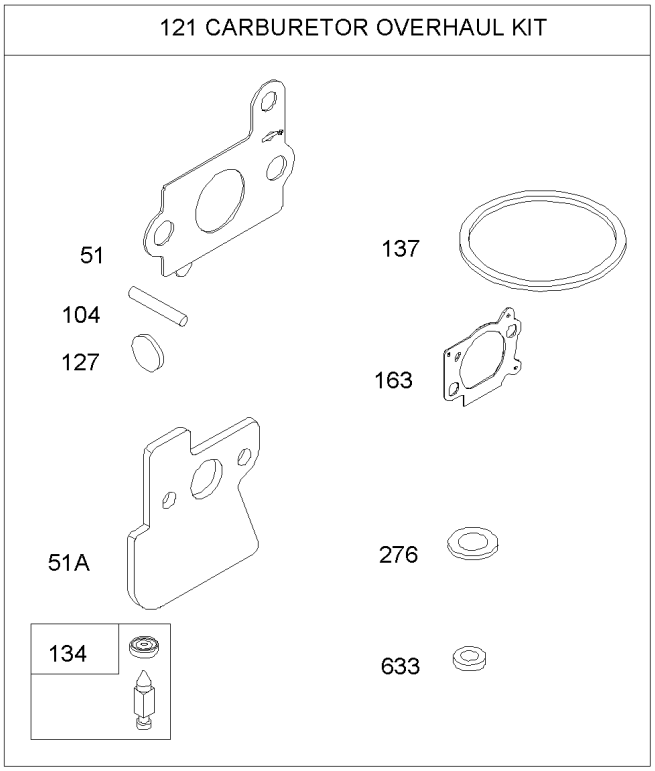

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton 122607-0116-E1

Ref	Part No.	Qty.	Description
❸❹51 ❻❼	692668	1	Gasket-Intake
❸❹51A ❻❼	692799	1	Gasket-Intake
❹❼104	691242	1	Pin–Hinge, Float
❼121	692703	1	Carburetor Overhaul Kit
❹❼127	694468	1	Plug–Welch
❹❼134	398188	1	Needle/Seat Kit
❹❺137 ❼	693981	1	Gasket–Bowl, Float
❸❹163 ❻❼	691894	1	Gasket–Cleaner, Air
❹❺276 ❼	271716	1	Washer–Sealing
❹❺633 ❼	691321	1	Seal-Shaft, Choke/Throttle
❼977	692704	1	Gasket Set–Carburetor

NOTES

NOTES

NOTES

TORO®