Form Number 3354-790 Rev B

# Snow Commander® Snowthrower

**Model No. 38600 - 220000001 and up.**
**Model No. 38601 - 220000001 and up.**
**Model No. 38602 - 220000001 and up.**
**Model No. 38603 - 220000001 and up.**

## Parts Catalog

**Ordering Replacement Parts**
To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**
Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**
Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

**Reference Numbers Indicating Quantity**
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2006
All Rights Reserved

Register your product at www.Toro.com

# Contents


| Description | Page |
|---|---|
| Upper Housing and Side Plate Assembly | 3 |
| Lower Housing Assembly | 4 |
| Impeller Drive Assembly | 5 |
| Chute Assembly | 6 |
| Impeller Assembly | 8 |
| Engine and Frame Assembly | 9 |
| Upper Shroud and Control Panel Assembly | 10 |
| Upper Handle Assembly | 11 |
| Lower Handle Assembly | 12 |
| Crankcase, Crankshaft, Cylinder Head, and Connecting Rod Assemblies Briggs and Stratton 084332-0130-E1 | 13 |
| Intake Manifold, Carburetor, and Muffler Assemblies Briggs and Stratton 084332-0130-E1 | 14 |
| Flywheel, Blower Housing, and Starter Assemblies Briggs and Stratton 084332-0130-E1 | 15 |
| Crankcase, Crankshaft, Cylinder Head, and Connecting Rod Assemblies Briggs and Stratton 084333-0199-E1 | 16 |
| Intake Manifold, Carburetor, and Muffler Assemblies Briggs and Stratton 084333-0199-E1 | 17 |
| Flywheel, Blower Housing, and Starter Assemblies Briggs and Stratton 084333-0199-E1 | 18 |


# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over-protection-system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

# Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Obtain from your local Briggs & Stratton dealer

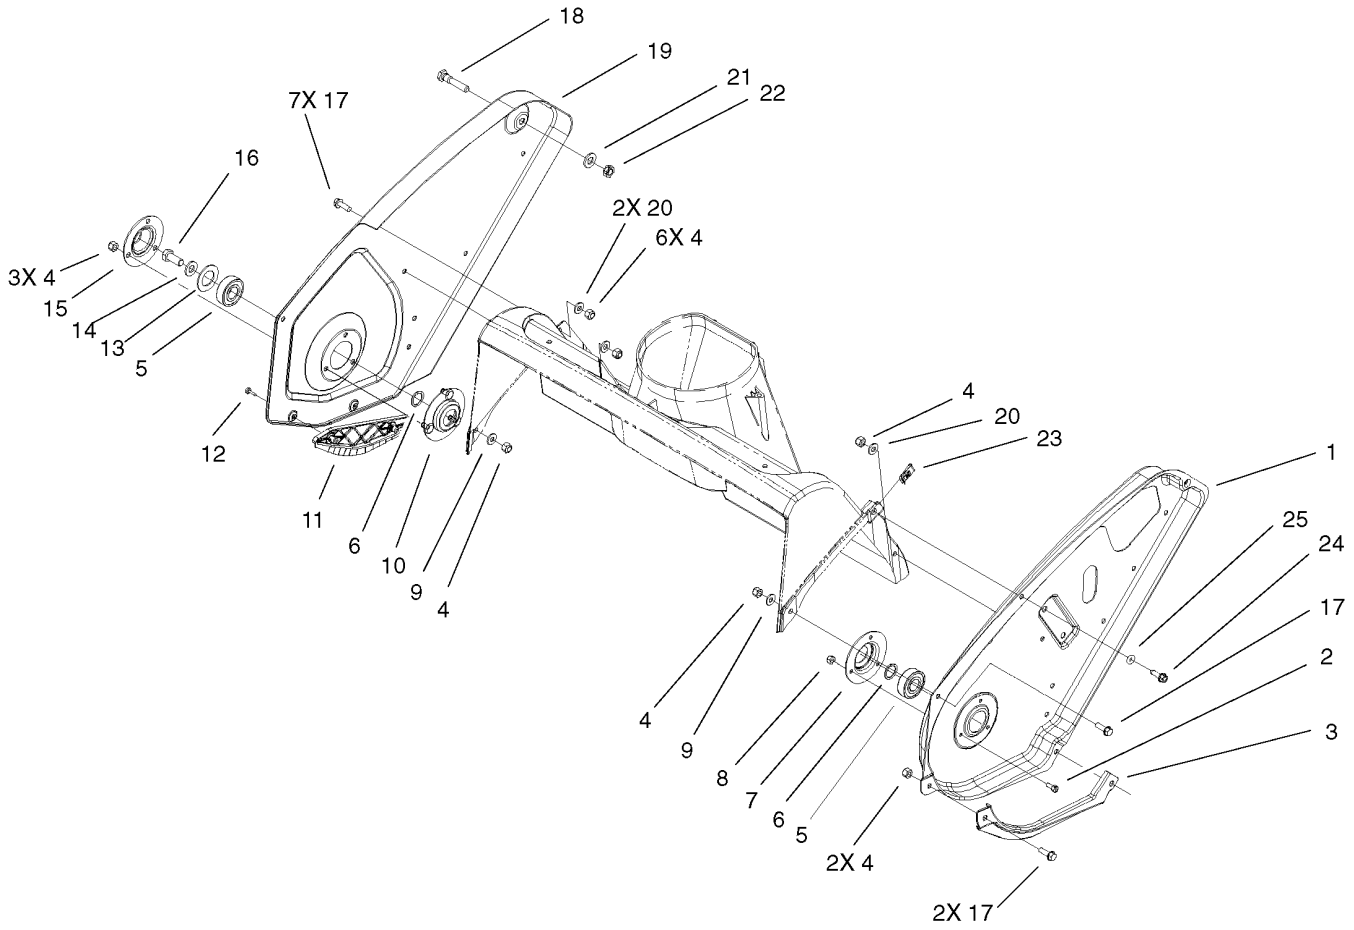


# Upper Housing and Side Plate Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 100-9865-03 | 1 | Sideplate-LH |
| 2 | 32105-8 | 3 | Screw-SHH |
| 3 | 104-0871 | 1 | Guard-Rotor, LH |
| 4 | 3296-42 | 14 | Nut-Lock, NI |
| 5 | 100-1048 | 2 | Bearing-Ball |
| 6 | 52-7280 | 2 | Washer-Thrust |
| 7 | 38-8620 | 1 | Flange-Bearing |
| 8 | 3296-2 | 3 | Nut-Lock |
| 9 | 3256-1 | 2 | Washer-Flat |
| 10 | 52-9110 | 1 | Flange-Bearing |
| 11 | 104-0872 | 1 | Guard-Rotor, RH |
| 12 | 95-4234 | 2 | Screw-PPH |
| 13 | 52-7270 | 1 | Washer-Rubber |
| 14 | 3256-24 | 1 | Washer-Flat |
| 15 | 52-7290-03 | 1 | Retainer-Bearing |
| 16 | 3234-25 | 1 | Screw-HHF |
| 17 | 32105-15 | 10 | Screw |
| 18 | 104-4144 | 1 | Pin-Tank |
| 19 | 100-9870-03 | 1 | Sideplate-RH |
| 20 | 3256-22 | 3 | Washer-Flat |
| 21 | 3256-24 | 1 | Washer-Flat |
| 22 | 32152-8 | 1 | Nut-Lock, Cone |
| 23 | 702552 | 1 | Nut-Speed |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 24 | 49-2040 | 1 | Screw-Tapping (Only On: 38600, 38601) |
| 25 | 104-8657 | 1 | O-Ring |

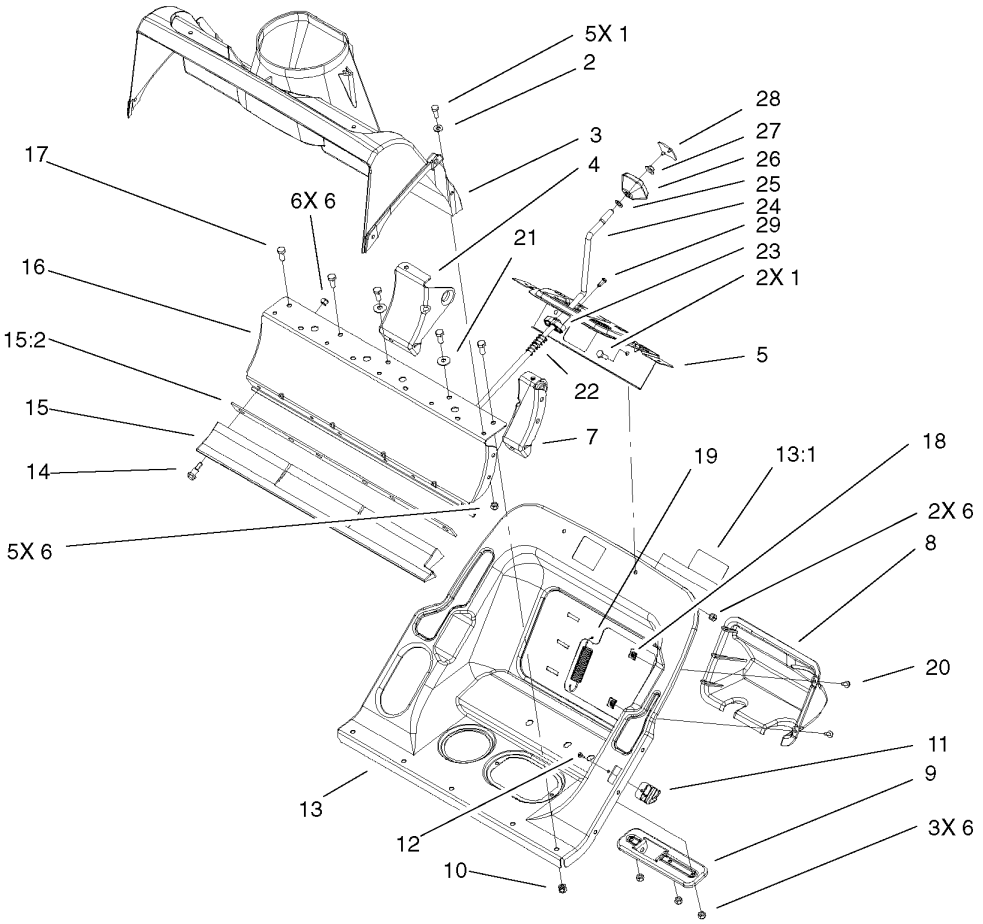


# Lower Housing Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 321-4 | 7 | Screw-HH |
| 2 | 3256-22 | 5 | Washer-Flat |
| 3 | 100-9894 | 1 | Housing-Rotor, Upper |
| 4 | 104-0865 | 1 | Bracket-Pivot, RH |
| 5 | 104-0887-03 | 1 | Control Panel Support ASM |
| 6 | 3296-42 | 16 | Nut-Lock, NI |
| 7 | 104-0864 | 1 | Bracket-Pivot, LH |
| 8 | 104-8663 | 1 | Cover-Carb Ce (Only On: 38601, 38603) |
| 8 | 104-0874 | 1 | Cover-Carb (Only On: 38600, 38602) |
| 9 | 100-9897 | 1 | Bracket-Pivot, Center |
| 10 | 3296-29 | 5 | Nut-Lock, NI |
| 11 | 104-0880 | 1 | Guide-Cable, Clutch |
| 12 | 95-4234 | 1 | Screw-PPH |
| 13 | 105-3516 | 1 | Housing-Lower W/Decal (Only On: 38602) |
| 13 | 105-3514-03 | 1 | Housing-Lower (Only On: 38600, 38601, 38603) |
| 13:1 | 61-4790 | 1 | Decal (Only On: 38602) |
| 14 | 104-0858 | 6 | Bolt-Shoulder |
| 15 | 104-4138 | 1 | Scraper ASM |
| 15:2 | 104-0879 | 1 | Foam-Scraper |
| 16 | 100-9893-03 | 1 | Housing-Rotor, Lower |
| 17 | 322-3 | 5 | Screw-HH |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 18 | 100-9889 | 2 | Nut-Speed |
| 19 | 104-4130 | 1 | Spring-Extension, Pivot |
| 20 | 32144-112 | 2 | Screw-HWH |
| 21 | 3290-456 | 2 | Washer-Belleville |
| 22 | 104-8664 | 1 | Spring-Compression (Only On: 38601, 38603) |
| 23 | 104-8659 | 1 | Bushing-Chute Crank (Only On: 38601, 38603) |
| 24 | 104-8658 | 1 | Rod-Chute Crank (Only On: 38601, 38603) |
| 25 | 104-8665 | 1 | Washer-Chute Crank (Only On: 38601, 38603) |
| 26 | 62-1320 | 1 | Knob-Control, Chute (Only On: 38601, 38603) |
| 27 | 3290-320 | 1 | Retainer-,Push On (Only On: 38601, 38603) |
| 28 | 62-1520 | 1 | Cover-Knob (Only On: 38601, 38603) |
| 29 | 94-6961 | 2 | Screw (Only On: 38603) |

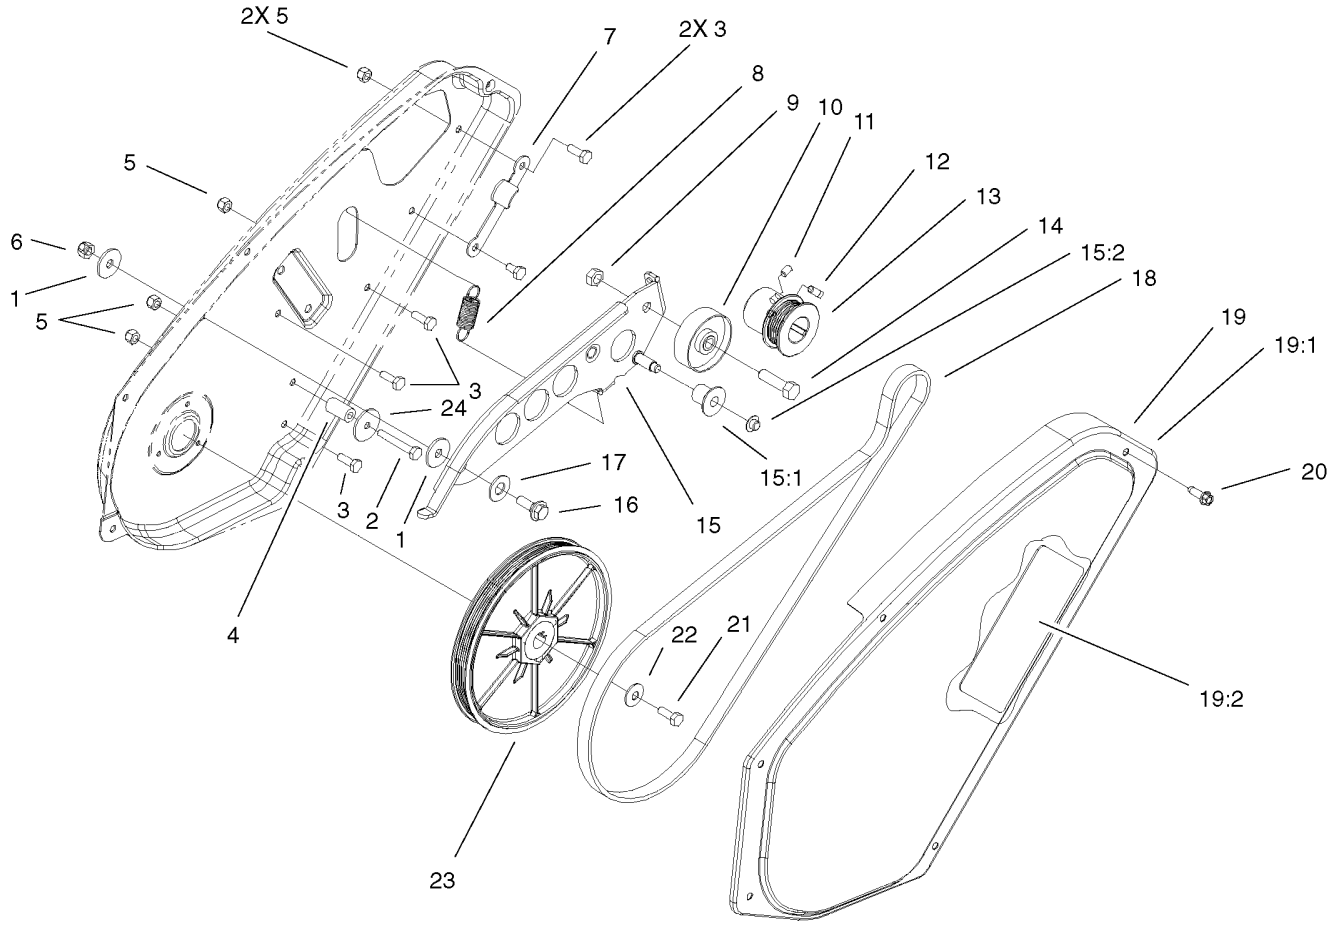


# Impeller Drive Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 5-4460 | 2 | Washer-Pivot |
| 2 | 321-10 | 1 | Screw-HH |
| 3 | 321-4 | 5 | Screw-HH |
| 4 | 55-9530 | 1 | Sleeve-Guide, Belt |
| 5 | 3296-42 | 5 | Nut-Lock, NI |
| 6 | 3296-29 | 1 | Nut-Lock, NI |
| 7 | 104-0868 | 1 | Belt-Guide |
| 8 | 104-0869 | 1 | Spring-Brake |
| 9 | 32152-2 | 1 | Nut-Lock, Cone |
| 10 | 55-9290 | 1 | Pulley-Idler |
| 11 | 3245-41 | 1 | Screw-HSH |
| 12 | 3241-7 | 1 | Screw-SQH |
| 13 | 104-4108 | 1 | Pulley |
| 14 | 323-29 | 1 | Screw-HH |
| 15 | 104-4113 | 1 | Brake-Arm |
| 15:1 | 104-4114 | 1 | Roller-Brake |
| 15:2 | 32112-11 | 1 | Nut-Push |
| 16 | 27-0410 | 1 | Screw-Shoulder |
| 17 | 25-5640 | 1 | Washer |
| 18 | 104-0851 | 1 | Belt-Drive |
| 19 | 104-4140 | 1 | Cover-Drive W/Decal (Only On: 38600, 38602) |
| 19 | 104-8669 | 1 | Cover-Drive W/Decal Ce (Only On: 38601, 38603) |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 19:1 | 104-2767 | 1 | Decal-Hot Surface (Only On: 38600, 38602) |
| 19:1 | 94-2561 | 1 | Decal-Hot (Only On: 38601, 38603) |
| 19:2 | 104-4125 | 1 | Decal-Belt Routing |
| 20 | 49-2040 | 1 | Screw-HWHTF |
| 21 | 321-30 | 1 | Screw-HH |
| 22 | 3290-456 | 1 | Washer-Belleville |
| 23 | 100-9871 | 1 | Pulley-Rotor |
| 24 | 3256-55 | 1 | Washer-Flat |

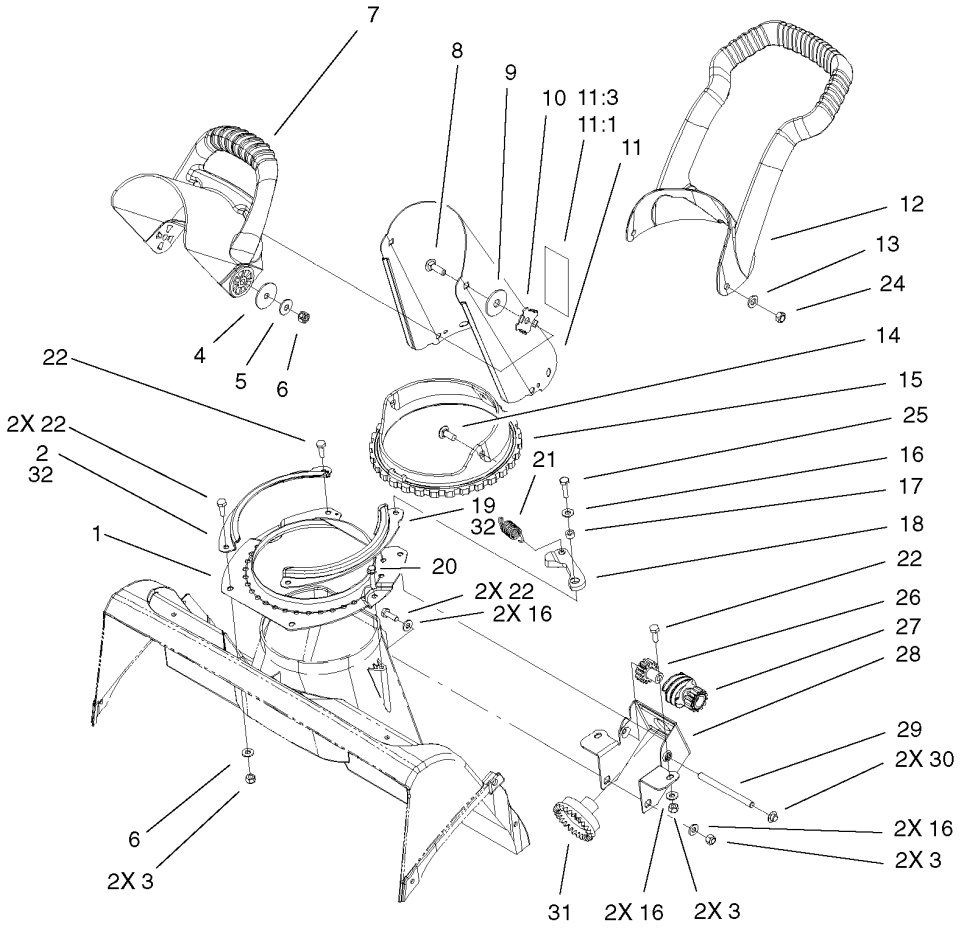


# Chute Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 55-8921-03 | 1 | Ring-Support, Chute |
| 2 | 71-4990-03 | 1 | Retaining-Ring,Chute RH (Only On: 38600, 38602) |
| 3 | 3296-42 | 6 | Nut-Lock, NI (Only On: 38601, 38603) |
| 4 | 3256-68 | 2 | Washer-Flat |
| 5 | 3290-456 | 2 | Washer-Belleville |
| 6 | 3296-29 | 2 | Nut-Lock, NI |
| 7 | 104-0882 | 1 | Chute-Deflector |
| 8 | 3230-22 | 2 | Screw-CARR |
| 9 | 20-4320 | 2 | Washer-Rubber |
| 10 | 55-8950 | 2 | Plate-Friction |
| 11 | 104-4115 | 1 | Chute-Discharge W/Decal (Only On: 38600, 38602) |
| 11 | 94-2791 | 1 | Chute ASM W/Decal (Only On: 38601, 38603) |
| 11:1 | 104-4135 | 1 | Decal-Danger (Only On: 38600, 38602) |
| 11:3 | 94-2901 | 1 | Decal-Danger Discharge (Only On: 38601, 38603) |
| 12 | 104-0884 | 1 | Handle-Chute Control (Only On: 38600, 38602) |
| 13 | 3256-70 | 3 | Washer-Flat |
| 14 | 100-5487 | 3 | Screw-Truss Hd, Phillips (Only On: 38600, 38602) |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 14 | 100-5486 | 3 | Screw-Truss Hd, Phillips (Only On: 38601, 38603) |
| 15 | 104-2763 | 1 | Ring-Chute (Only On: 38600, 38602) |
| 15 | 55-8720 | 1 | Ring-Gear, Chute (Only On: 38601, 38603) |
| 16 | 3256-22 | 8 | Washer-Flat (Only On: 38601, 38603) |
| 17 | 55-9370 | 1 | Spacer-Blade, Rotor |
| 18 | 80-4610 | 1 | Detent |
| 19 | 71-4980-03 | 1 | Ring-Chute Retainer LH (Only On: 38600, 38602) |
| 20 | 46-8092 | 2 | Screw-Plastite |
| 21 | 80-4600 | 1 | Spring-Extension |
| 22 | 321-4 | 6 | Screw-HH (Only On: 38601, 38603) |
| 24 | 3296-47 | 3 | Nut-Lock, NI |
| 25 | 321-6 | 1 | Screw-HH (Only On: 38600, 38602) |
| 26 | 55-8750 | 1 | Gear-Spur, Spacer (Only On: 38601, 38603) |
| 27 | 105-3512 | 1 | Gear-Spur/Worm (Only On: 38601, 38603) |
| 28 | 104-8660-03 | 1 | Bracket-Chute Gears (Only On: 38601, 38603) |
| 29 | 55-9150 | 1 | Shaft-Gear, Worm (Only On: 38601, 38603) |

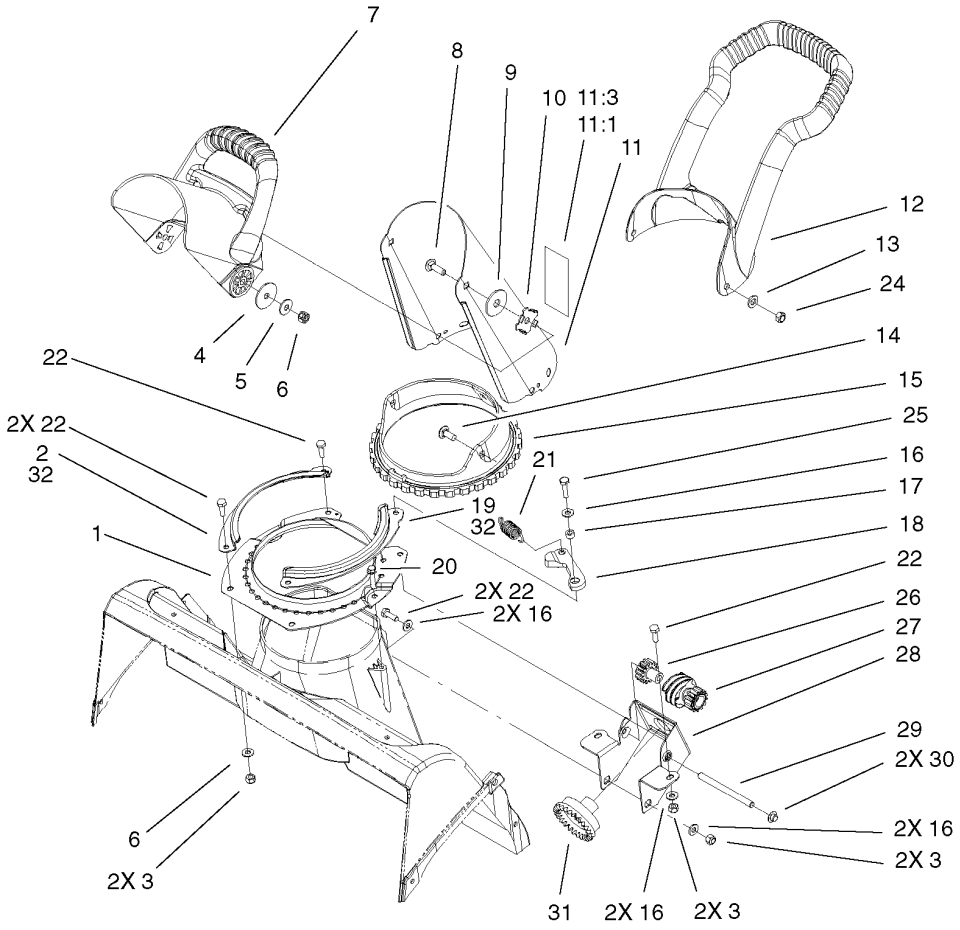


# Chute Assembly (continued)

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 30 | 32112-11 | 2 | Nut-Push (Only On: 38601, 38603) |
| 31 | 55-8740 | 1 | Gear-Face (Only On: 38601, 38603) |
| 32 | 55-8910-03 | 2 | Ring-Retainer, Chute (Only On: 38601, 38603) |

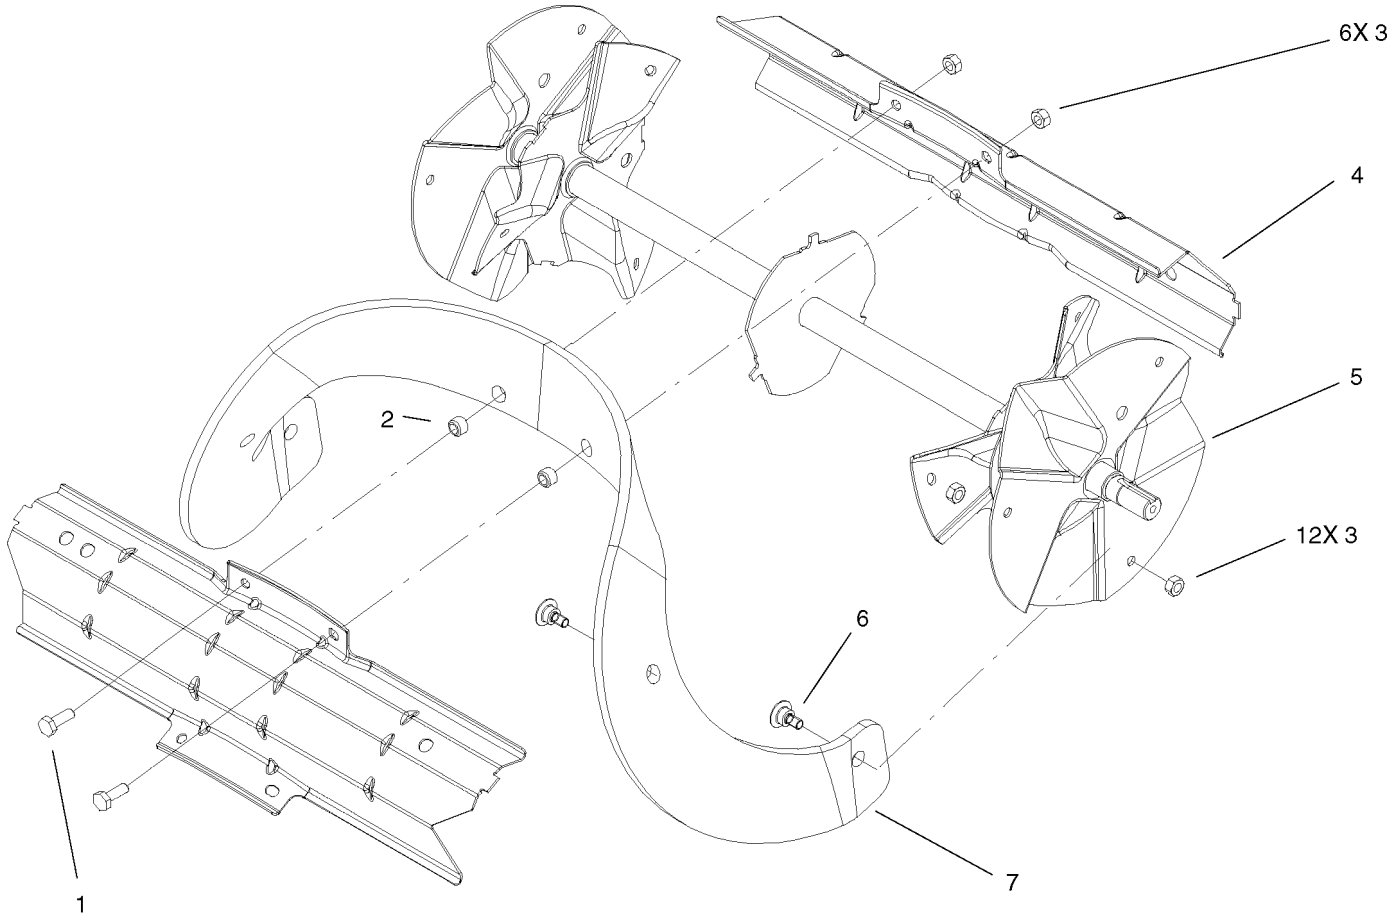


# Impeller Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 321-4 | 6 | Screw-HH |
| 2 | 55-9370 | 6 | Spacer-Blade, Rotor |
| 3 | 3296-56 | 18 | Nut-Lock, NI |
| 4 | 100-9856-03 | 3 | Drum-Rotor |
| 5 | 100-9877-03 | 1 | Rotor ASM |
| 6 | 84-1971 | 12 | Screw |
| 7 | 100-9872 | 3 | Blade-Rotor |

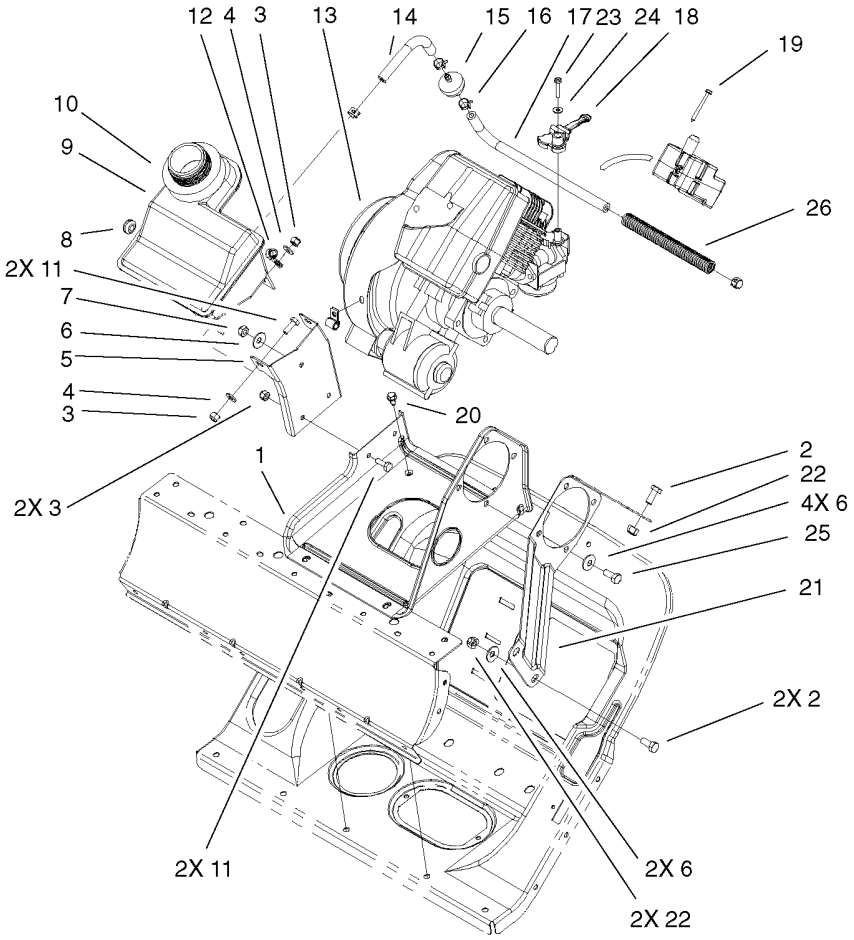


# Engine and Frame Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 105-3515-03 | 1 | Support-Engine |
| 2 | 322-3 | 3 | Screw-HH |
| 3 | 3296-42 | 4 | Nut-Lock, NI |
| 4 | 3256-22 | 2 | Washer-Flat |
| 5 | 100-9899-03 | 1 | Support-Recoil |
| 6 | 3290-456 | 7 | Washer-Belleville |
| 7 | 3296-42 | 1 | Nut-Lock, NI |
| 8 | 237-89 | 1 | Grommet-Rubber |
| 9 | 55-8831 | 1 | Tank-Gas |
| 10 | 55-9310 | 1 | Seal-Foam |
| 11 | 321-4 | 4 | Screw-HH |
| 12 | 2412-91 | 1 | Clamp (Only On: 38602, 38603) |
| ❷❸13 | | 1 | Engine-Briggs And Stratton, 084332-0130-E1 (Only On: 38600, 38601) |
| ❷❸13 | | 1 | Engine-Briggs And Stratton, 084333-0199-E1 (Only On: 38602, 38603) |
| 14 | 94-9932 | 1 | Hose-Fuel |
| 15 | 56-6360 | 1 | Filter-Fuel |
| 16 | 2412-98 | 4 | Clamp |
| 17 | 104-4119 | 1 | Hose - Gas |
| 18 | 104-0878 | 1 | Lever-Choke |
| 19 | 32144-27 | 3 | Screw-Plastite (Only On: 38602, 38603) |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 20 | 32144-44 | 3 | Screw-HWH |
| 21 | 104-0875-03 | 1 | Brace-Engine |
| 22 | 3296-29 | 3 | Nut-Lock, NI |
| 23 | 32144-97 | 1 | Screw-PPH, Plastite |
| 24 | 104-4143 | 1 | Washer |
| 25 | 322-4 | 4 | Screw-HH |
| 26 | 104-4149 | 1 | Conduit |
| ❶99 | 104-9705 | 1 | Cord-Electric (Only On: 38602) |

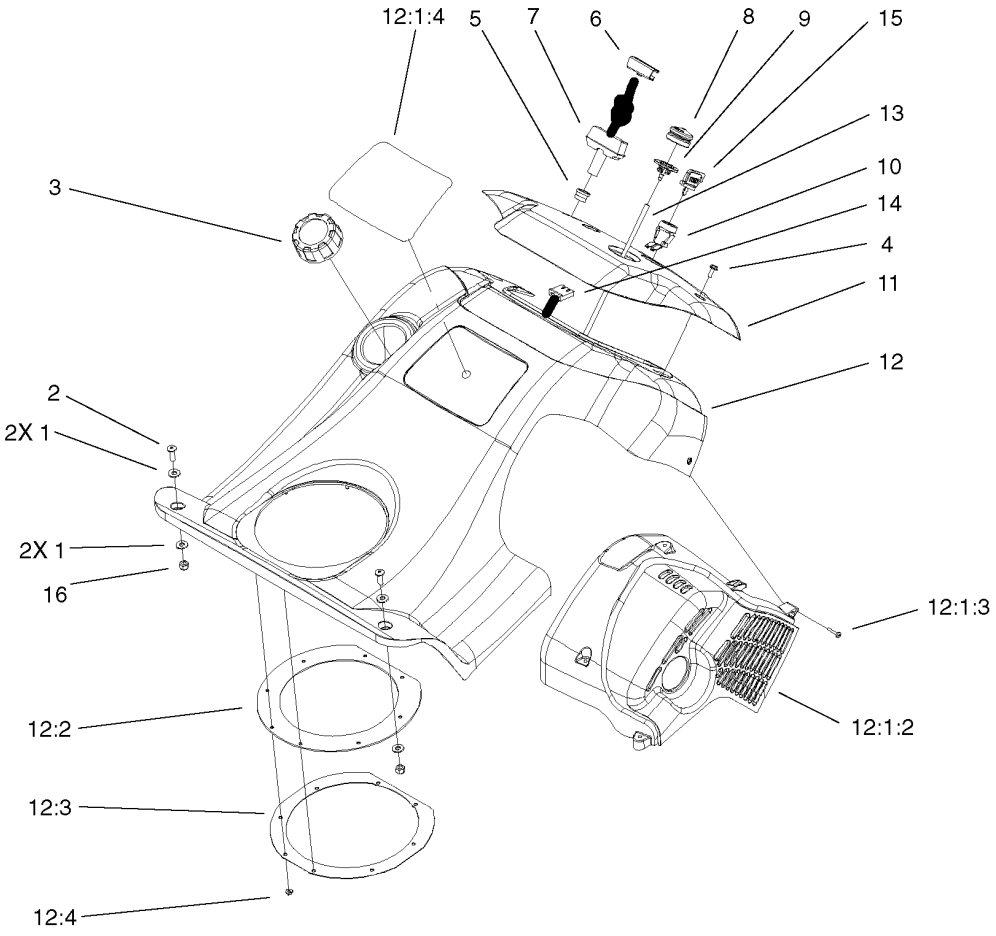


# Upper Shroud and Control Panel Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 3256-22 | 4 | Washer-Flat |
| 2 | 3250-32 | 2 | Screw-PPH |
| 3 | 104-4133 | 1 | Gas Cap ASM |
| 4 | 32144-112 | 2 | Screw-HWH |
| 5 | 55-9410 | 1 | Guide-Rope, Starter |
| 6 | 612824 | 1 | Clip-Starter |
| 7 | 612825 | 1 | Handle-Start |
| 8 | 66-7460 | 1 | Bulb-Primer |
| 9 | 44-2750 | 1 | Body-Primer |
| 10 | 40-5940 | 1 | Switch |
| 11 | 104-4106 | 1 | Panel-Control (Recoil)(Only On: 38600) |
| 11 | 104-8661 | 1 | Panel-Control Es,Ce (Only On: 38603) |
| 11 | 104-0863 | 1 | Panel-Control (Electric)(Only On: 38602) |
| 11 | 104-8662 | 1 | Panel-Control R, Ce (Only On: 38601) |
| 12 | 104-4147 | 1 | Es Upper Shroud ASM (Only On: 38602, 38603) |
| 12 | 104-4109 | 1 | Recoil Upper Shroud ASM (Only On: 38600, 38601) |
| ❷12:1 | | 1 | Recoil Upper Shroud ASM (Only On: 38600, 38601) |
| ❷12:1 | | 1 | Es Upper Shroud ASM (Only On: 38602, 38603) |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 12:1:2 | 104-0860 | 1 | Shield-Heat |
| 12:1:3 | 94-4496 | 5 | Screw-PPH |
| 12:1:4 | 104-4141 | 1 | Decal-Shroud Recoil (Only On: 38600, 38601) |
| 12:1:4 | 104-4146 | 1 | Decal-Shroud Es (Only On: 38602, 38603) |
| 12:2 | 55-9260 | 1 | Seal-Chute |
| 12:3 | 55-9540-03 | 1 | Retainer-Seal, Chute |
| 12:4 | 3290-474 | 8 | Palnut |
| 13 | 95-1861 | 1 | Hose-Primer |
| 15 | 63-8360 | 1 | Key-Ignition |
| 16 | 3296-42 | 2 | Nut-Lock, NI (Only On: 38602, 38603) |
| ❶ | 250-4 | 1 | Tie-Cable |

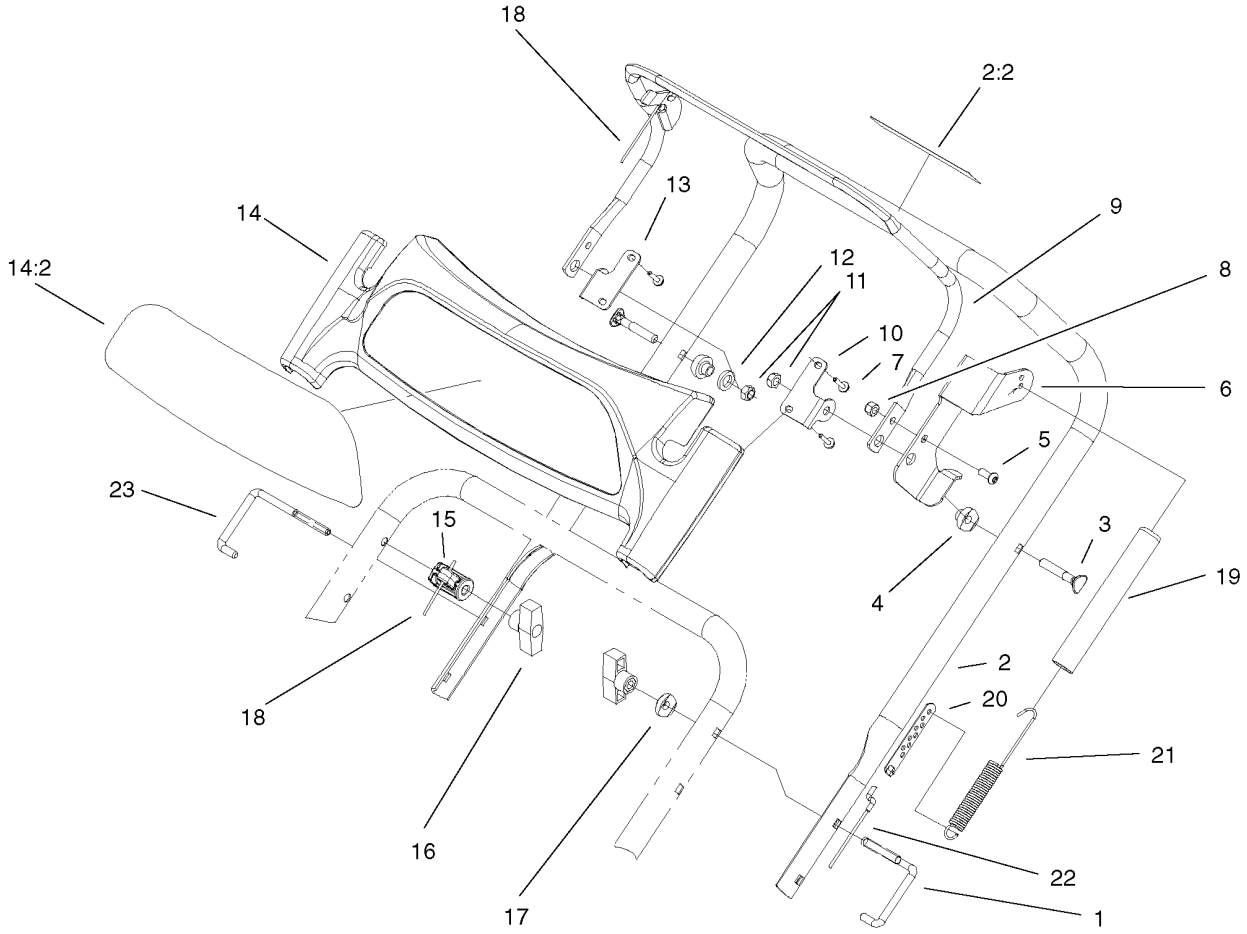


# Upper Handle Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 98-2266 | 1 | Lock-Handle |
| 2 | 104-4137 | 1 | Handle-Upper W/Decal (Only On: 38600, 38602) |
| 2 | 105-1991 | 1 | Handle-Upper W/Decal (Only On: 38601, 38603) |
| 2:2 | 104-2775 | 1 | Decal-Rotor Drive (Only On: 38600, 38602) |
| 2:2 | 94-2577 | 1 | Decal-Rotor Drive, (Ce)(Only On: 38601, 38603) |
| 3 | 92-2260 | 2 | Screw-Handle |
| 4 | 55-9340 | 2 | Spacer-Bar, Control |
| 5 | 3274-31 | 1 | Screw-HSBH |
| 6 | 100-9882-03 | 1 | Arm-Clutch, Handle |
| 7 | 98-1375 | 4 | Screw-HWH |
| 8 | 3296-42 | 1 | Nut-Lock, NI |
| 9 | 104-4104-03 | 1 | Bar-Control |
| 10 | 104-4100 | 1 | Bracket-Panel, LH |
| 11 | 3296-47 | 2 | Nut-Lock, NI |
| 12 | 55-9670 | 1 | Washer |
| 13 | 104-4101 | 1 | Bracket-Panel, RH |
| 14 | 104-4127 | 1 | Panel-Display Handle W/Decal |
| 14:2 | 104-4112 | 1 | Decal-Display Handle |
| 15 | 100-9868 | 1 | Guide-Pivot Cable |
| 16 | 98-7134 | 2 | Knob-Handle |
| 17 | 75-9130 | 1 | Washer-Curved |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 18 | 104-0895 | 1 | Cable-Pivot |
| 19 | 104-4145 | 1 | Cover-Spring |
| 20 | 71-5330 | 1 | Adjuster-Cable, Clutch |
| 21 | 104-0894 | 1 | Spring-Cable |
| 22 | 104-0896 | 1 | Cable-Clutch |
| 23 | 104-4126 | 1 | Lock-Handle, RH |

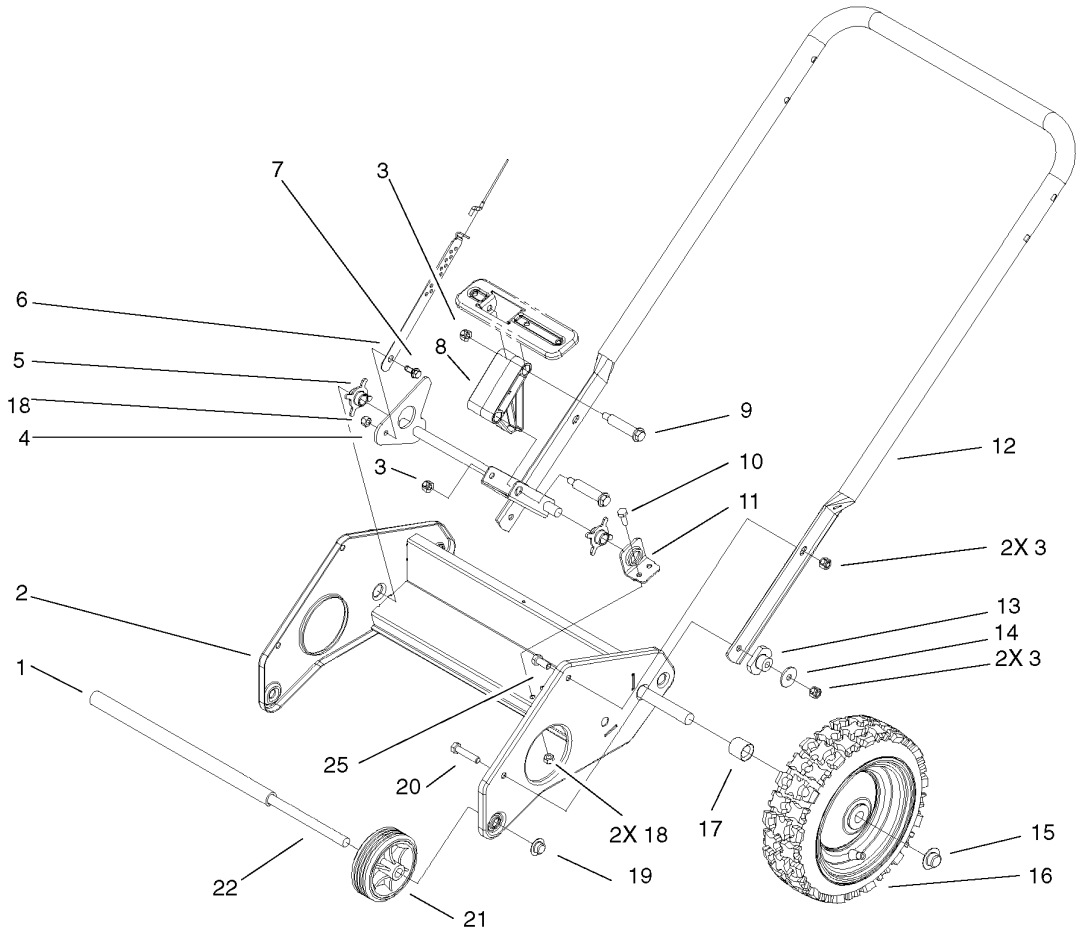


# Lower Handle Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 100-9878 | 1 | Spacer-Plastic |
| 2 | 100-9887-03 | 1 | Wheelframe ASM |
| 3 | 3296-29 | 6 | Nut-Lock, NI |
| 4 | 104-0853 | 1 | Pivot ASM |
| 5 | 104-0855 | 2 | Bushing-Rod, Pivot |
| 6 | 104-0899 | 1 | Adjuster-Cable, Pivot |
| 7 | 104-4102 | 1 | Screw-Shoulder |
| 8 | 100-9896 | 1 | Block-Pivot |
| 9 | 100-9880 | 2 | Bolt-Shoulder |
| 10 | 321-4 | 2 | Screw-HH |
| 11 | 100-9879 | 1 | Support-Rod, Pivot |
| 12 | 100-9890-03 | 1 | Handle-Lower |
| 13 | 100-9883 | 2 | Bushing-Pivot |
| 14 | 3256-82 | 2 | Washer-Flat |
| 15 | 104-4111 | 2 | Nut-Push |
| 16 | 100-9869 | 2 | 10" Tire & Wheel ASM |
| 17 | 104-0892 | 2 | Spacer-Axle, Rear |
| 18 | 3296-42 | 3 | Nut-Lock, NI |
| 19 | 32112-14 | 2 | Nut-Push |
| 20 | 322-7 | 2 | Screw-HH |
| 21 | 100-9864 | 2 | Tire And Wheel ASM |
| 22 | 100-9875 | 1 | Axle-Front |
| 25 | 322-3 | 2 | Screw-HH |

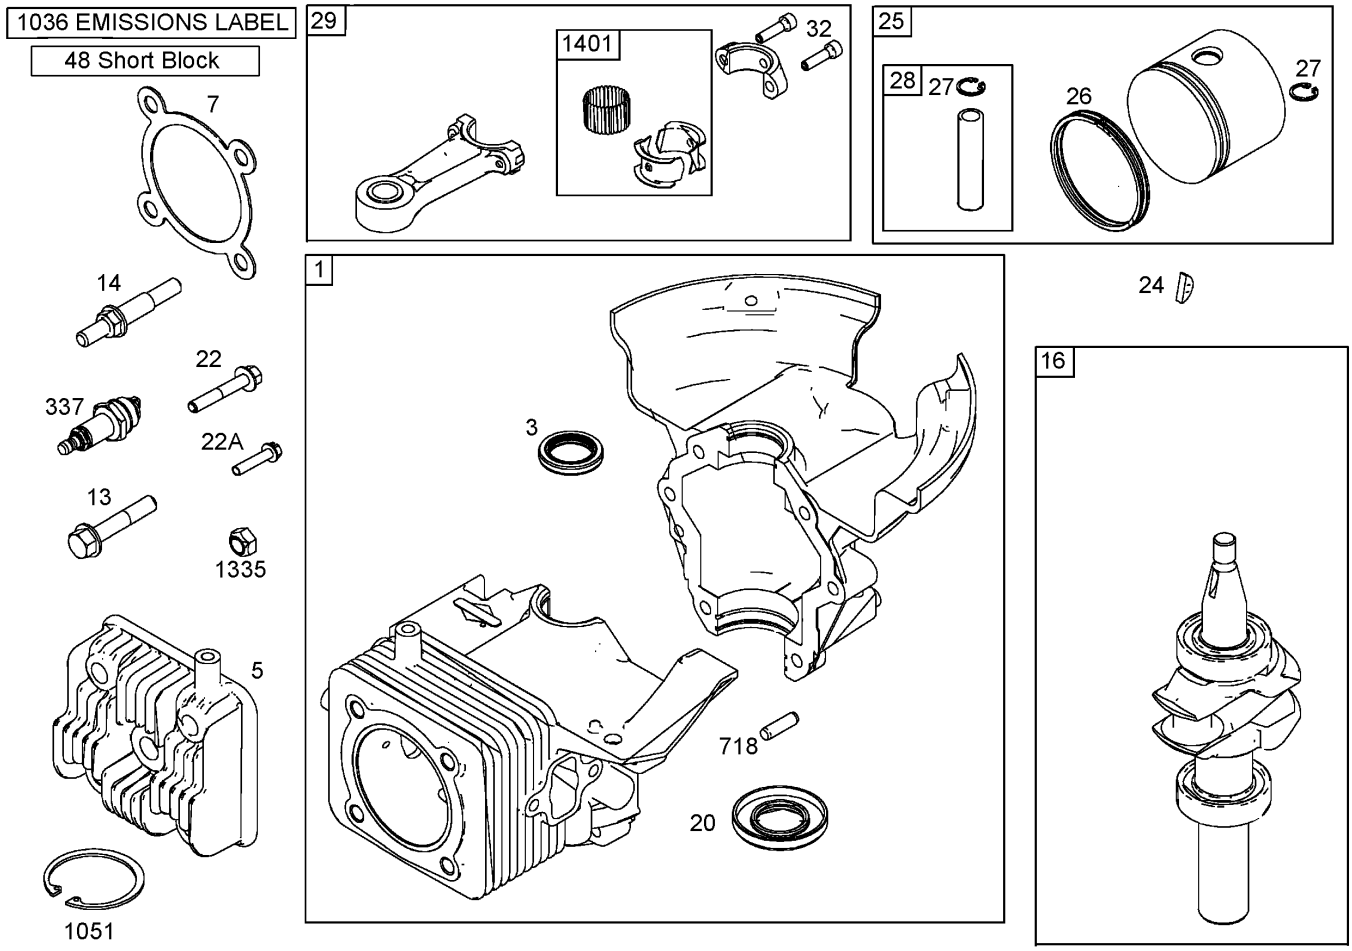


# Crankcase, Crankshaft, Cylinder Head, and Connecting Rod Assemblies Briggs and Stratton 084332-0130-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸1 | 801273 | 1 | Cylinder ASM |
| ❸3 | 801262 | 1 | Seal-Oil |
| ❸5 | 801283 | 1 | Head-Cylinder |
| ❸7 | 801263 | 1 | Gasket-Head, Cylinder |
| ❸13 | 801264 | 1 | Screw (Cylinder Head) |
| ❸14 | 801265 | 1 | Stud (Cylinder Head) |
| ❸16 | 801221 | 1 | Crankshaft |
| ❸20 | 801261 | 1 | Seal-Oil |
| ❸22 | 801266 | 1 | Screw (Crankcase Cover And Sump) |
| ❸22A | 801271 | 1 | Screw (Crankcase Cover And Sump) |
| ❸24 | 801234 | 1 | Key-Flywheel |
| ❸25 | 801281 | 1 | Piston ASM |
| ❸26 | 801282 | 1 | Ring Set |
| ❸27 | 801275 | 1 | Lock-Pin, Piston |
| ❸28 | 801276 | 1 | Pin-Piston |
| ❸29 | 801277 | 1 | Rod-Connecting |
| ❸32 | 801278 | 1 | Screw |
| ❸48 | 801286 | 1 | Short Block |
| ❸337 | 801254 | 1 | Plug-Spark |
| ❸718 | 690959 | 1 | Pin-Locating |
| ❸1036 | 801295 | 1 | Label-Emissions |
| ❸1051 | 801274 | 1 | Ring-Retaining |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸1335 | 801269 | 1 | Nut (Blower Housing) |
| ❸1401 | 801290 | 1 | Roller-Strip |

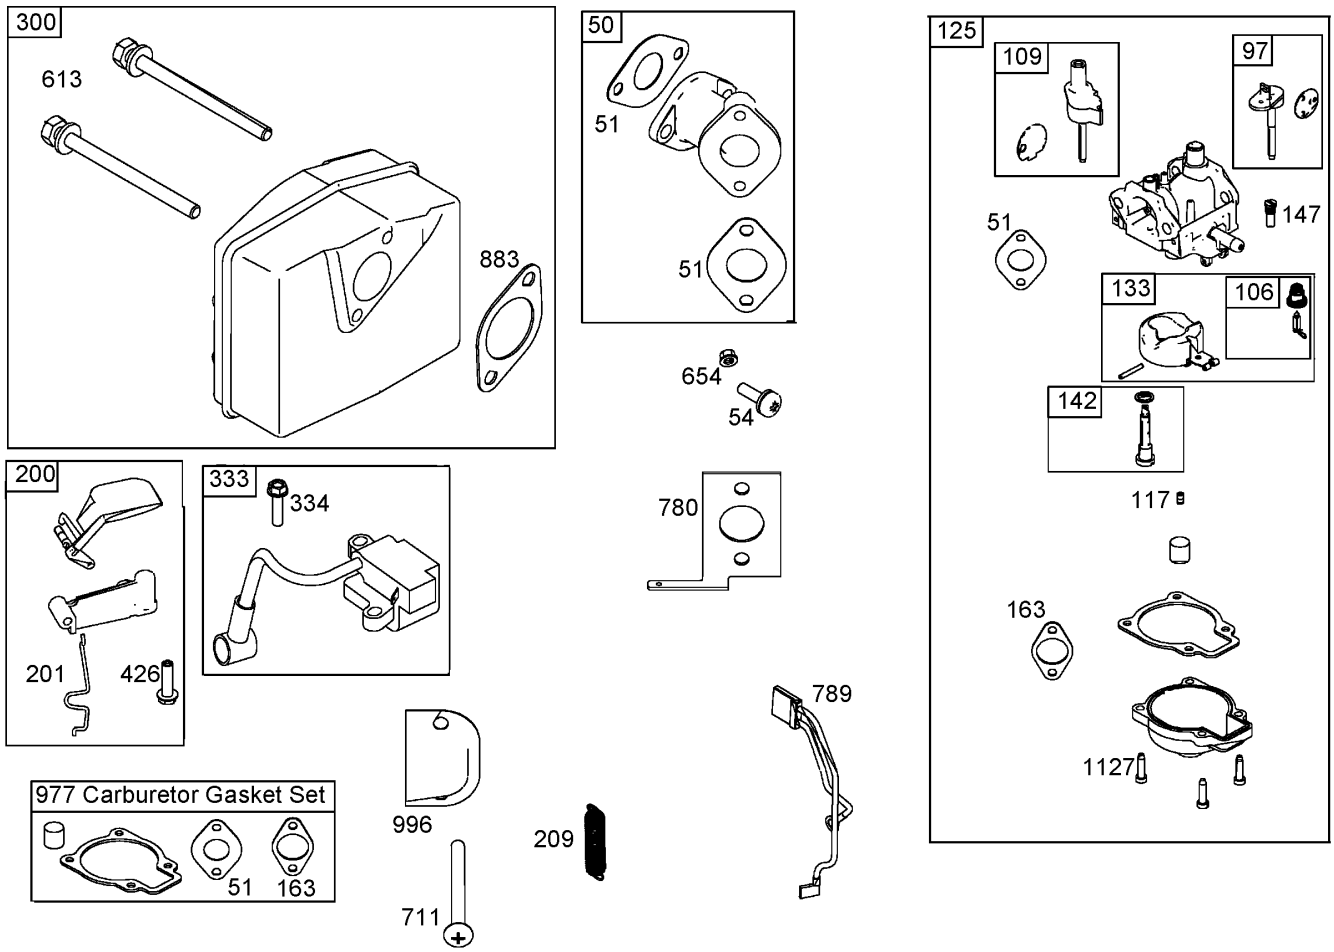


# Intake Manifold, Carburetor, and Muffler Assemblies
# Briggs and Stratton 084332-0130-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸50 | 801232 | 1 | Manifold-Intake |
| ❸51 | 801224 | 1 | Gasket-Intake |
| ❸54 | 801230 | 1 | Screw (Intake Manifold) |
| ❸97 | 801306 | 1 | Shaft-Throttle |
| ❸106 | 801317 | 1 | Seat-Inlet |
| ❸109 | 801307 | 1 | Shaft-Choke |
| ❸117 | 801311 | 1 | Jet-Main |
| ❸125 | 801255 | 1 | Carburetor |
| ❸133 | 801316 | 1 | Float-Carburetor |
| ❸142 | 801313 | 1 | Nozzle-Carburetor |
| ❸147 | 801309 | 1 | Jet-Pilot |
| ❸163 | 801227 | 1 | Gasket-Cleaner, Air |
| ❸200 | 801289 | 1 | Blade-Governor |
| ❸201 | 801225 | 1 | Link-Vane, Air |
| ❸209 | 801223 | 1 | Spring-Governor |
| ❸300 | 801250 | 1 | Muffler |
| ❸333 | 801268 | 1 | Armature-Magneto |
| ❸334 | 801267 | 1 | Screw |
| ❸426 | 801231 | 1 | Screw |
| ❸613 | 801251 | 1 | Screw |
| ❸654 | 801324 | 1 | Nut (Intake Manifold) (Used Before Engine Code Date 05042600) |
| ❸711 | 801229 | 1 | Screw |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸780 | 801228 | 1 | Anchor-Spring |
| ❸789 | 801253 | 1 | Wire ASM |
| ❸883 | 801252 | 1 | Gasket-Exhaust |
| ❸977 | 801312 | 1 | Gasket Set-Carburetor |
| ❸996 | 801226 | 1 | Shield-Carburetor |
| ❸1127 | 801318 | 1 | Screw |

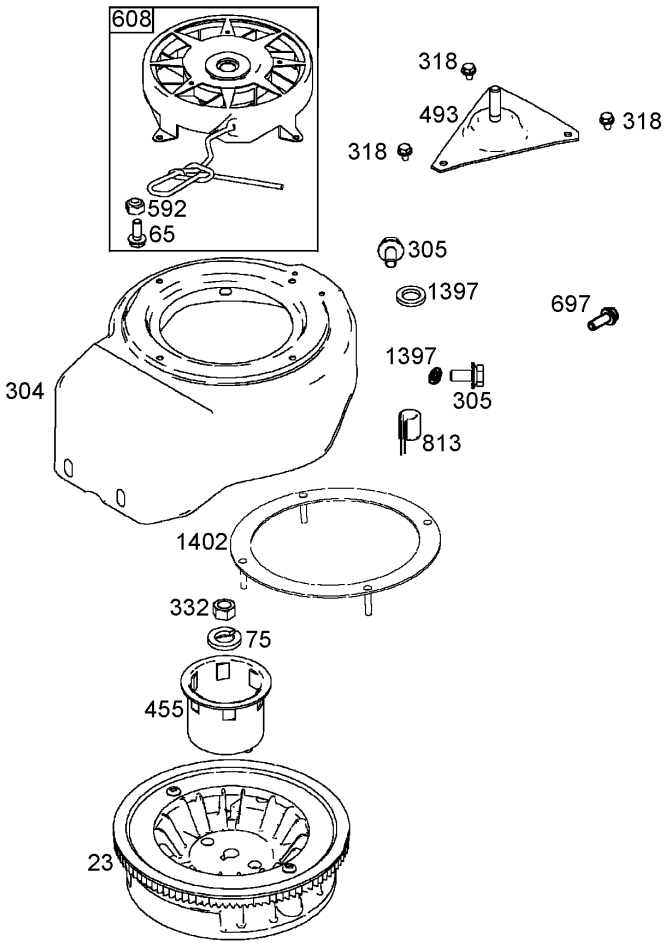


# Flywheel, Blower Housing, and Starter Assemblies
# Briggs and Stratton 084332-0130-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸23 | 801246 | 1 | Flywheel |
| ❸65 | 801243 | 1 | Screw |
| ❸75 | 801237 | 1 | Washer |
| ❸304 | 801257 | 1 | Housing-Blower |
| ❸305 | 801239 | 1 | Screw (Blower Housing) |
| ❸318 | 801241 | 1 | Screw |
| ❸332 | 801238 | 1 | Nut |
| ❸455 | 801235 | 1 | Cup-Flywheel |
| ❸493 | 801240 | 1 | Bracket-Mounting |
| ❸592 | 801244 | 1 | Nut |
| ❸608 | 801242 | 1 | Starter-Rewind |
| ❸697 | 801248 | 1 | Screw (Starter Motor) |
| ❸813 | 801249 | 1 | Clamp |
| ❸1397 | 801270 | 1 | Washer (Blower Housing) |
| ❸1402 | 801272 | 1 | Ring-Support |

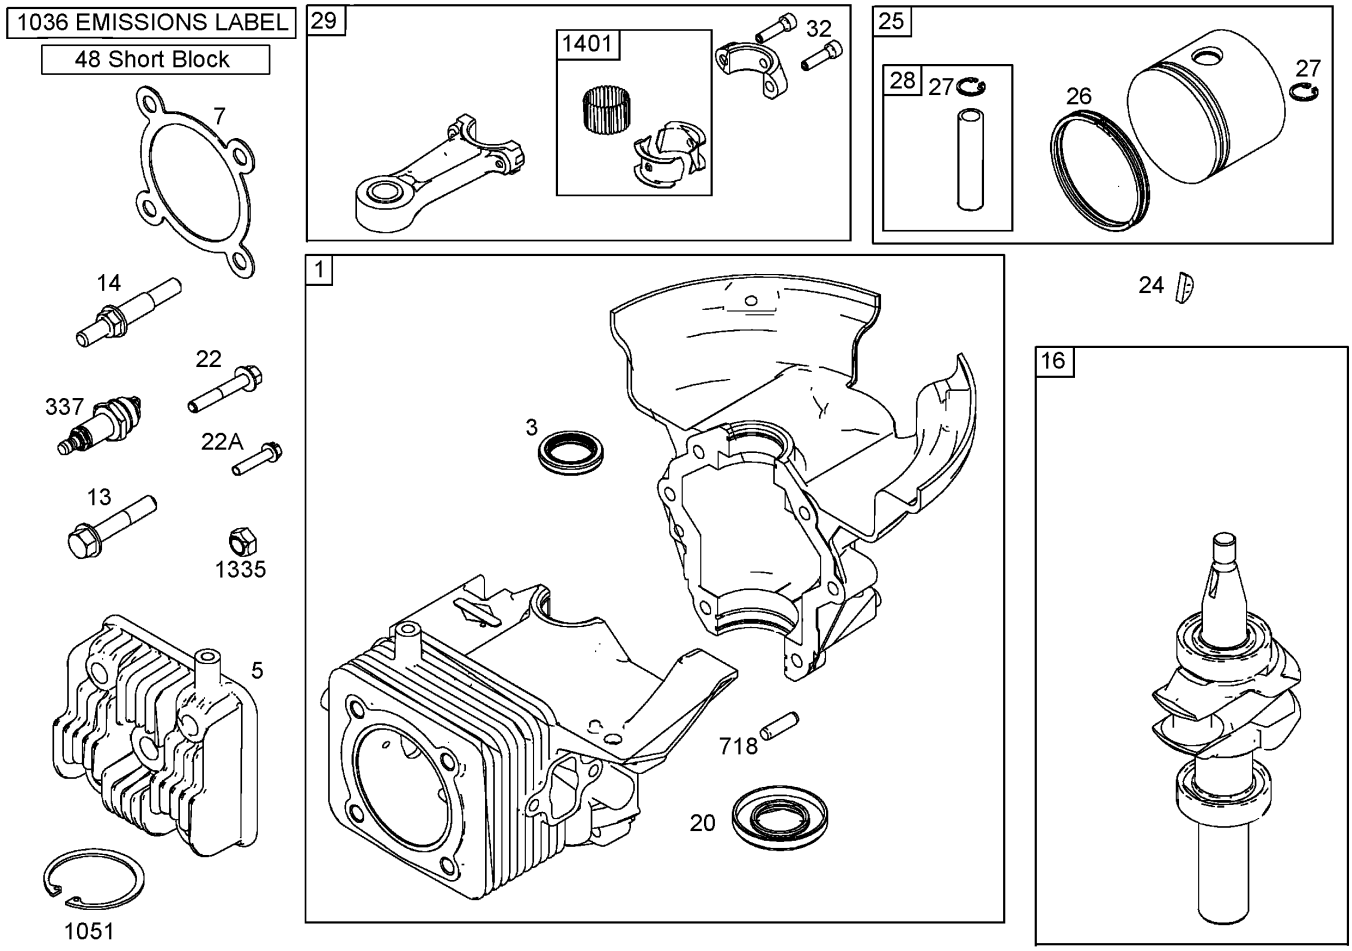


# Crankcase, Crankshaft, Cylinder Head, and Connecting Rod Assemblies Briggs and Stratton 084333-0199-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸1 | 801321 | 1 | Cylinder ASM |
| ❸3 | 801262 | 1 | Seal-Oil |
| ❸5 | 801283 | 1 | Head-Cylinder |
| ❸7 | 801263 | 1 | Gasket-Head, Cylinder |
| ❸13 | 801264 | 1 | Screw (Cylinder Head) |
| ❸14 | 801265 | 1 | Stud (Cylinder Head) |
| ❸16 | 801221 | 1 | Crankshaft |
| ❸20 | 801261 | 1 | Seal-Oil |
| ❸22 | 801266 | 1 | Screw (Crankcase Cover And Sump) |
| ❸22A | 801271 | 1 | Screw (Crankcase Cover And Sump) |
| ❸24 | 801234 | 1 | Key-Flywheel |
| ❸25 | 801281 | 1 | Piston ASM |
| ❸26 | 801282 | 1 | Ring Set |
| ❸27 | 801275 | 1 | Lock-Pin, Piston |
| ❸28 | 801276 | 1 | Pin-Piston |
| ❸29 | 801277 | 1 | Rod-Connecting |
| ❸32 | 801278 | 1 | Screw |
| ❸48 | 801287 | 1 | Short Block |
| ❸337 | 801254 | 1 | Plug-Spark |
| ❸718 | 690959 | 1 | Pin-Locating |
| ❸1036 | 801295 | 1 | Label-Emissions |
| ❸1051 | 801274 | 1 | Ring-Retaining |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸1335 | 801269 | 1 | Nut (Blower Housing) |
| ❸1401 | 801290 | 1 | Roller-Strip |

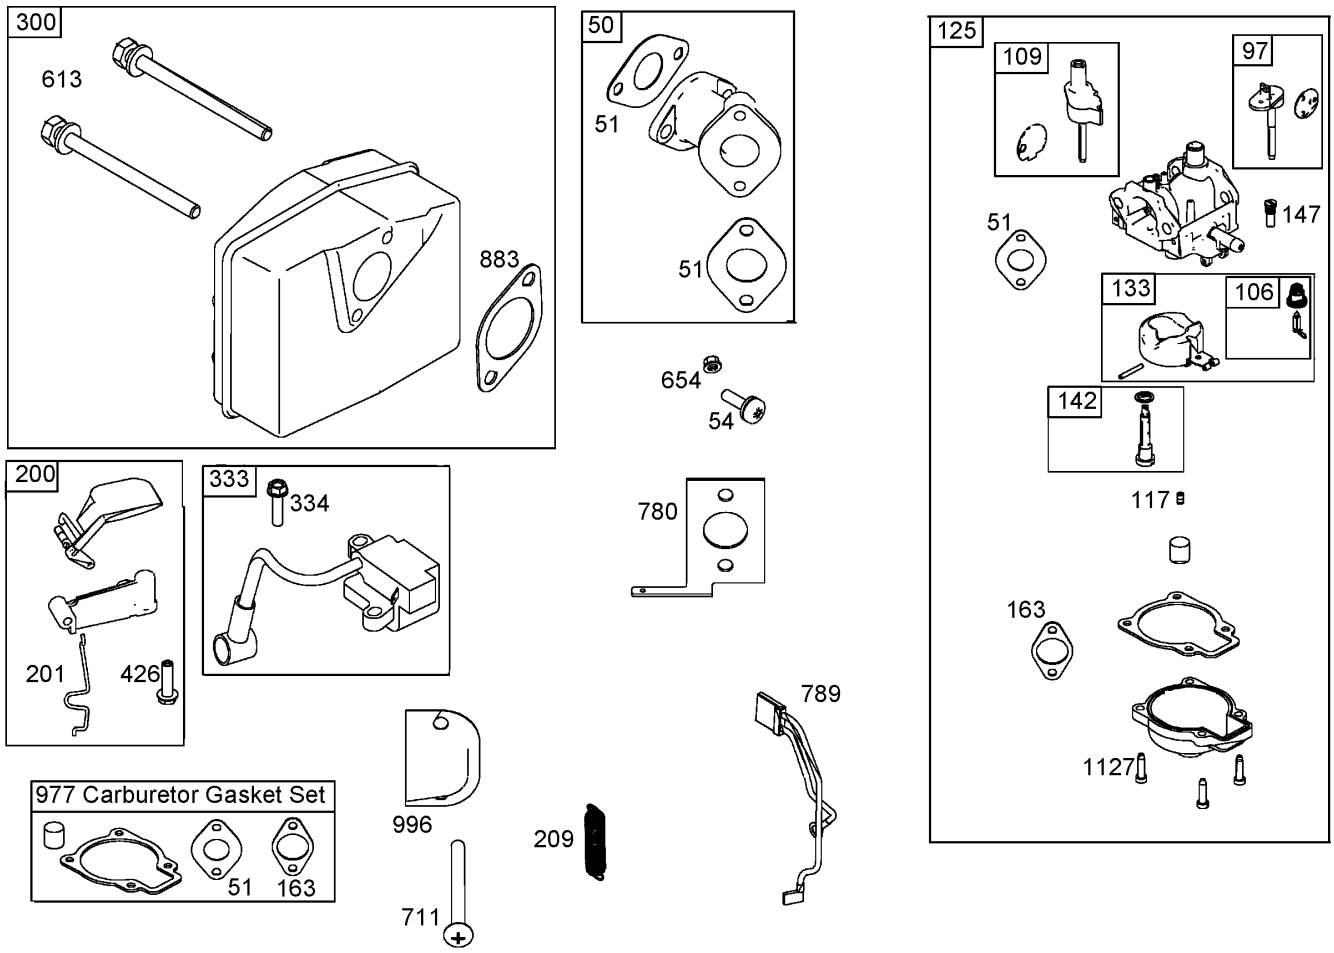


# Intake Manifold, Carburetor, and Muffler Assemblies
# Briggs and Stratton 084333-0199-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸50 | 801232 | 1 | Manifold-Intake |
| ❸51 | 801224 | 1 | Gasket-Intake |
| ❸54 | 801230 | 1 | Screw (Intake Manifold) |
| ❸97 | 801306 | 1 | Shaft-Throttle |
| ❸106 | 801317 | 1 | Seat-Inlet |
| ❸109 | 801307 | 1 | Shaft-Choke |
| ❸117 | 801311 | 1 | Jet-Main |
| ❸125 | 801255 | 1 | Carburetor |
| ❸133 | 801316 | 1 | Float-Carburetor |
| ❸142 | 801313 | 1 | Nozzle-Carburetor |
| ❸147 | 801309 | 1 | Jet-Pilot |
| ❸163 | 801227 | 1 | Gasket-Cleaner, Air |
| ❸200 | 801289 | 1 | Blade-Governor |
| ❸201 | 801225 | 1 | Link-Vane, Air |
| ❸209 | 801223 | 1 | Spring-Governor |
| ❸300 | 801250 | 1 | Muffler |
| ❸333 | 801268 | 1 | Armature-Magneto |
| ❸334 | 801267 | 1 | Screw |
| ❸426 | 801231 | 1 | Screw |
| ❸613 | 801251 | 1 | Screw |
| ❸654 | 801324 | 1 | Nut (Intake Manifold) (Used Before Engine Code Date 05042600) |
| ❸711 | 801229 | 1 | Screw |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸780 | 801228 | 1 | Anchor-Spring |
| ❸789 | 801253 | 1 | Wire ASM |
| ❸883 | 801252 | 1 | Gasket-Exhaust |
| ❸977 | 801312 | 1 | Gasket Set-Carburetor |
| ❸996 | 801226 | 1 | Shield-Carburetor |
| ❸1127 | 801318 | 1 | Screw |

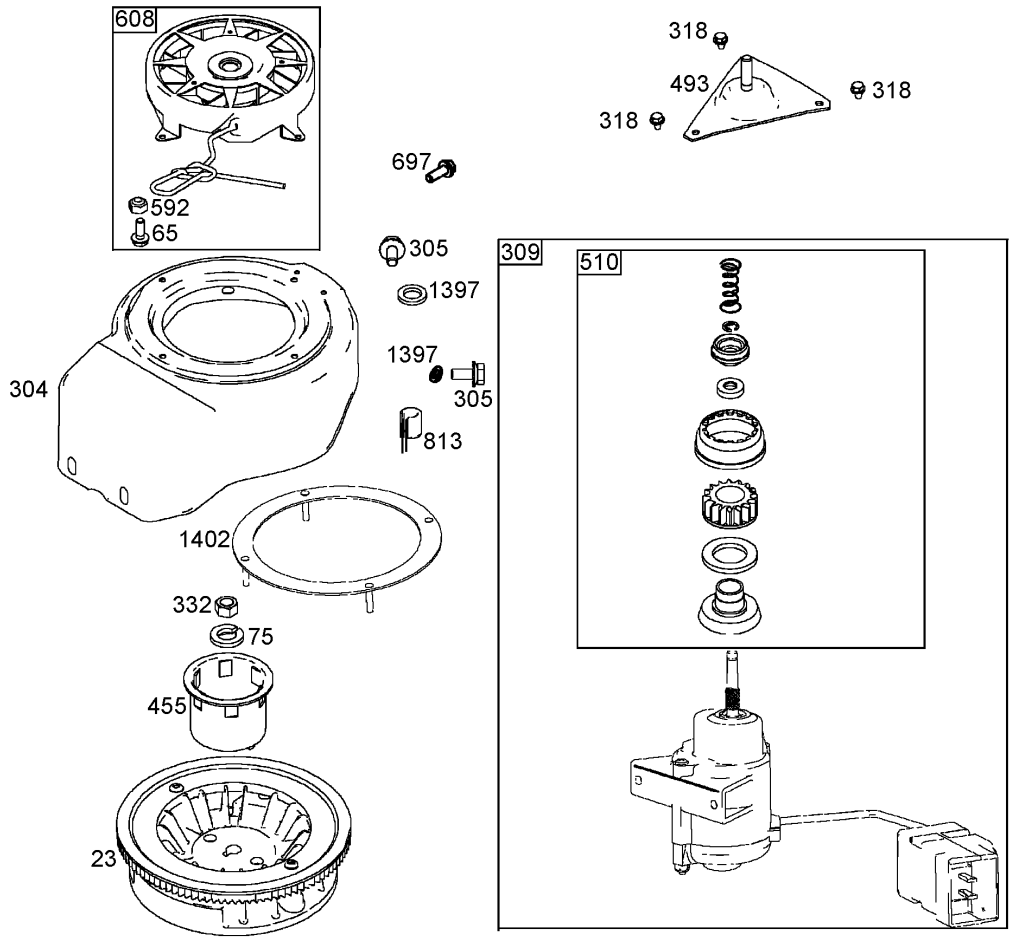


# Flywheel, Blower Housing, and Starter Assemblies
# Briggs and Stratton 084333-0199-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸23 | 801246 | 1 | Flywheel |
| ❸65 | 801243 | 1 | Screw |
| ❸75 | 801237 | 1 | Washer |
| ❸304 | 801236 | 1 | Housing-Blower |
| ❸305 | 801239 | 1 | Screw (Blower Housing) |
| ❸309 | 801247 | 1 | Motor-Starter |
| ❸318 | 801241 | 1 | Screw |
| ❸332 | 801238 | 1 | Nut |
| ❸455 | 801235 | 1 | Cup-Flywheel |
| ❸493 | 801240 | 1 | Bracket-Mounting |
| ❸510 | 801293 | 1 | Drive-Starter |
| ❸592 | 801244 | 1 | Nut |
| ❸608 | 801242 | 1 | Starter-Rewind |
| ❸697 | 801248 | 1 | Screw (Starter Motor) |
| ❸813 | 801249 | 1 | Clamp |
| ❸1397 | 801270 | 1 | Washer (Blower Housing) |
| ❸1402 | 801272 | 1 | Ring-Support |

# NOTES

TORO®