
FORM NO. 3313-850

TORO®

MODEL NO. 20910-0000001 & UP
MODEL NO. 20915-0000001 & UP

PARTS CATALOG

48cm H. P. & S. P. REAR BAGGER

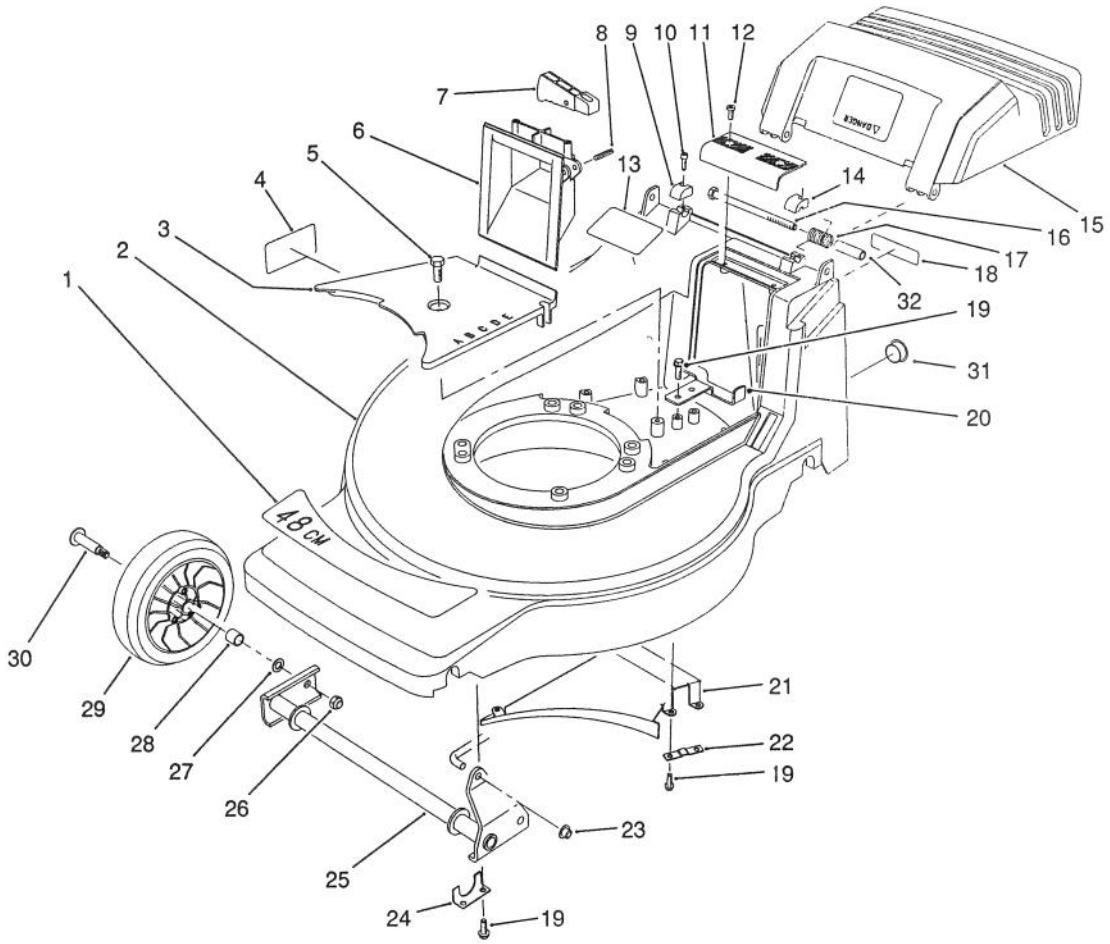

C-0361


HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-8290	Decal - 48cm	1
2	14-0049	Housing - 48cm	1
3	71-7920	Cover - Belt	1
4	62-3860	Decal - Danger	1
5	32144-70	Screw - Hex. Flange Hd.	1
6	71-7870	Grip - Lower	1
7	71-7930	Trigger - H.O.C.	1
8	3284-5	Pin - Roll	1
9	71-7910	Cap - Hinge Bolt R.H.	1
10	65-5210	Screw - Thread Forming	2
11	71-7860	Grip - Upper	1
12	32144-97	Screw - Thread Forming	2
13	66-1700	Decal - Noise Rating	1
14	71-7900	Cap - Hinge Bolt L.H.	1
15	71-8240	Door - Discharge (Model No. 20915)	1
*	71-8241	Door - Discharge Model No. 20910)	1

Ref. No.	Part No.	Description	No. Used
16	322-29	Screw - Cap Hex. Hd.	2
17	71-8300	Spring - Door	2
18	66-0680	Decal - French Regulation	1
19	49-2040	Screw - Thread Forming	10
20	71-7890	Guide - Belt Rear (Model No. 20915 Only)	1
21	71-7990	Ramp - Discharge	1
22	71-8220	Strap - Rear Suspension (Model No. 20915 Only)	1
23	32112-11	Nut - Push	1
24	71-7760	Plate - Suspension Front	2
25	71-7820	Pivot - Front	1
26	52-3620	Nut - Lock	2
27	40-1940	Washer - Wheel	2
28	27-6250	Bushing - Wheel	4
29	46-1113	Wheel & Tire Assembly (Incl. Ref. #28)	2
30	27-6230	Bolt - Wheel	2

* Not Illustrated

©The TORO Company - 1989

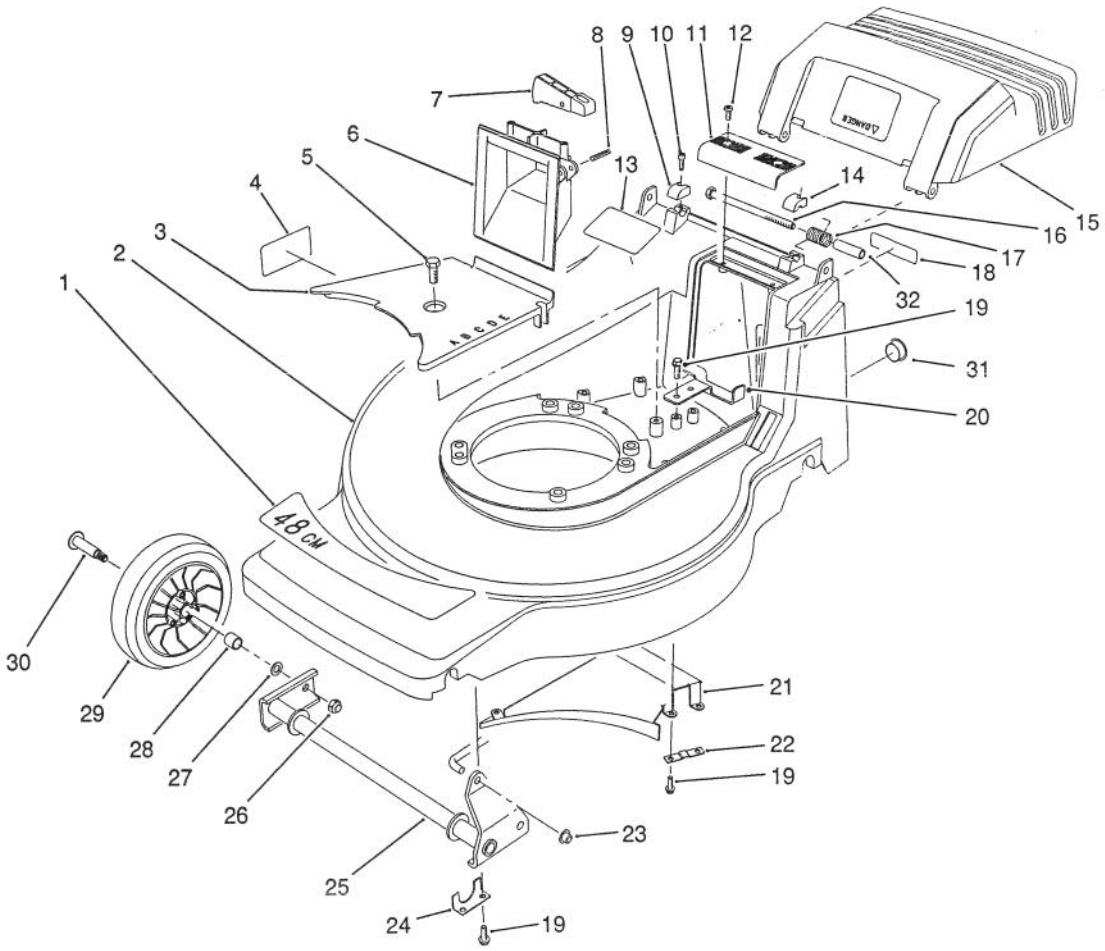


C-0361

HOUSING ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
31	2410-74	Plug - Hole (Model No. 20915 Only)	1

Ref. No.	Part No.	Description	No. Used
32	71-8580	Spacer - Door	2

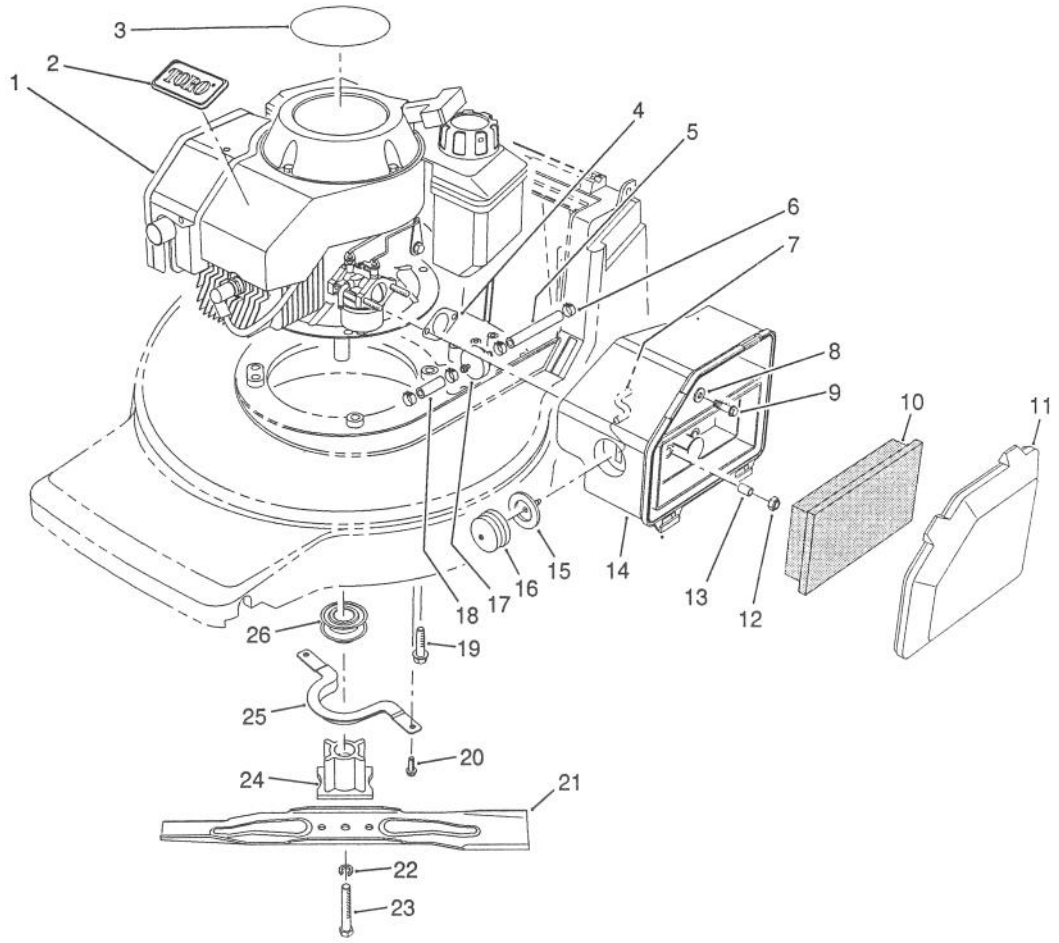


C-0362

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-5910	Engine - 2 Cycle	1
2	46-8290	Plate - TORO Logo	1
3	57-3110	Decal - Recoil	1
4	81-0090	Gasket - Air Cleaner	1
5	51-3215	Line - Fuel	1
6	2412-95	Clamp - Fuel Line	4
7	44-3172	Hose - Primer	1
8	3256-16	Washer - Flat	1
9	51-2690	Screw - Hex. Flange Hd.	1
10	63-9380	Element - Air Cleaner	1
11	63-9340	Cover - Air Cleaner	1
12	50-7180	Nut - Lock	2
13	62-3980	Spacer	2
14	63-9330	Body - Air Cleaner	1


Ref. No.	Part No.	Description	No. Used
15	44-2750	Body - Primer	1
16	66-7460	Bulb - Primer	1
17	56-6360	Filter - Fuel	1
18	51-3216	Line - Fuel	1
19	66-9302	Bolt - Engine	3
20	32144-4	Screw - Thread Forming	2
21	71-8210	Blade - 48cm	1
22	3253-22	Washer - Lock	1
23	26-0672	Bolt - Blade	1
24	71-7940	Retainer - Blade	1
25	71-7960	Guide - Belt Engine (Model No. 20915 Only)	1
26	62-7550	Pulley - Driver (Model No. 20915 Only)	1

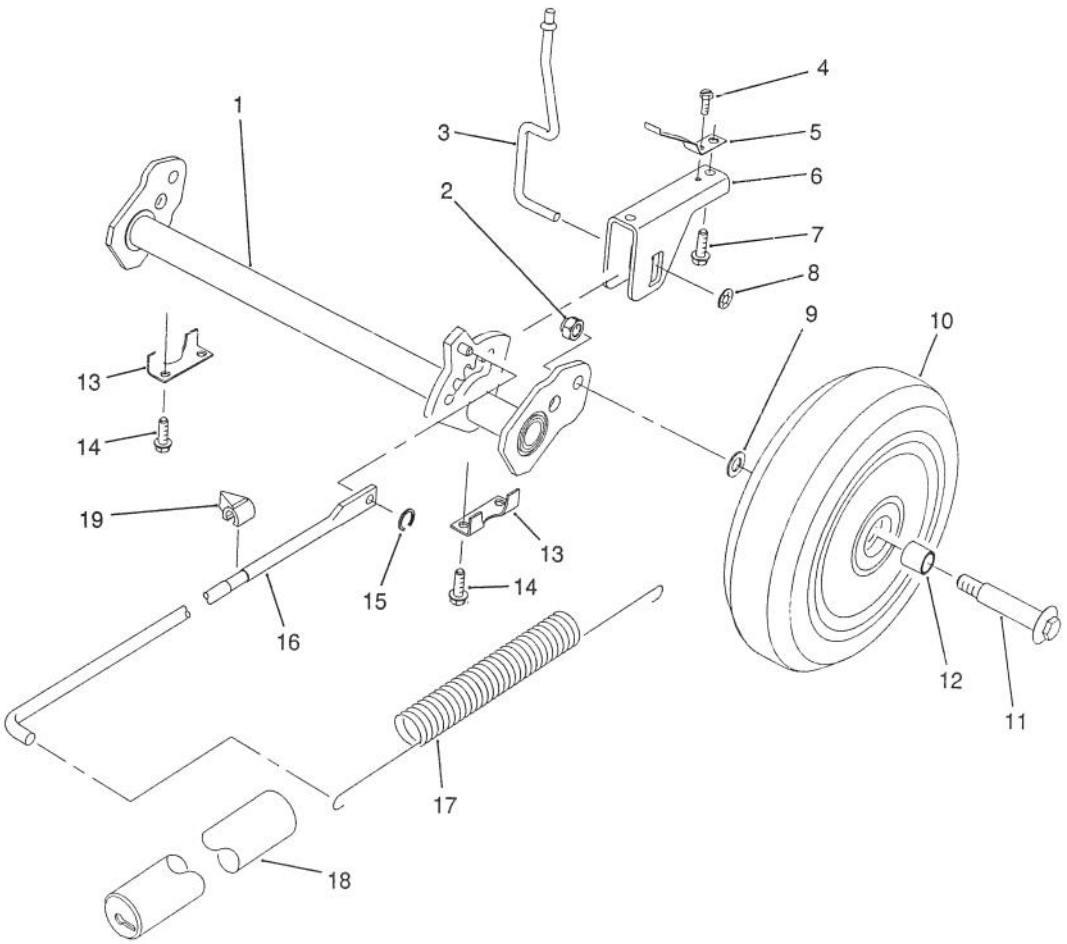

H. P. REAR AXLE ASSEMBLY (Model No. 20910 Only)

Ref. No.	Part No.	Description	No. Used
1	71-7800	Pivot - Rear H.P.	1
2	52-3620	Nut - Lock	2
3	71-7840	Rod - Trigger	1
4	32144-31	Screw - Thread Forming	1
5	71-8060	Spring - Trigger Return	1
6	71-8080	Saddle - H.O.C.	1
7	63-8590	Screw - Thread Forming	2
8	32112-13	Nut - Push	1
9	40-1940	Washer - Wheel	2
10	11-9509	Wheel & Tire Assembly (Incl. Ref. #12)	2

Ref. No.	Part No.	Description	No. Used
11	27-6230	Bolt - Wheel	2
12	27-6250	Bushing - Wheel	4
13	71-7770	Plate - Rear Suspension	2
14	49-2040	Screw - Thread Forming	4
15	32151-93	Ring - Grip	1
16	71-7970	Rod - Link	1
17	71-7740	Spring - Counterbalance	1
18	71-8450	Cover - Spring	1
19	71-7980	Indicator - H.O.C.	1

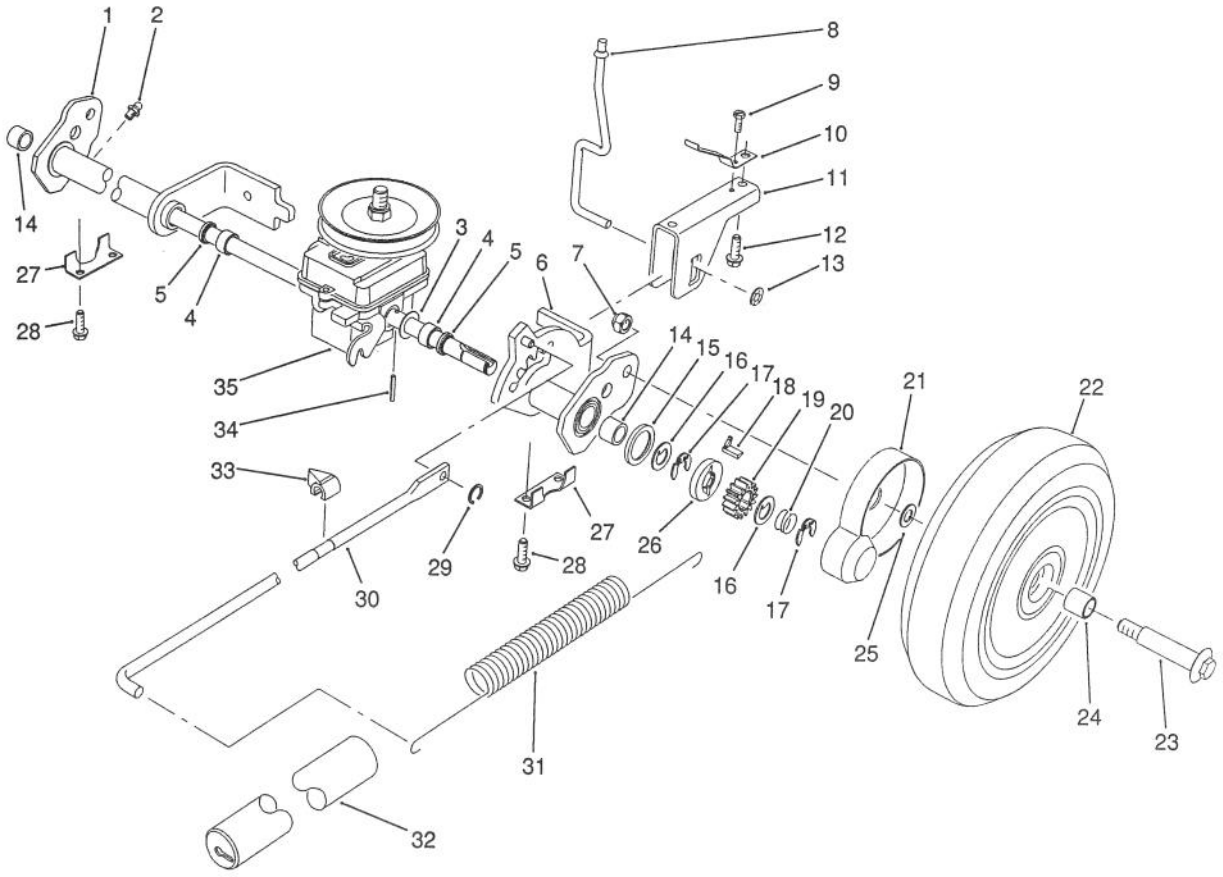


C-0364

S. P. REAR AXLE ASSEMBLY (Model No. 20915 Only)

Ref. No.	Part No.	Description	No. Used
1	71-8430	Rear Pivot Assembly R.H. (Incl. Ref. #2, 4, 5 & 14)	1
2	302-32	Fitting - Grease	2
3	36-4780	Washer	2
4	47-2890	Bushing - Sleeve	2
5	47-6730	Seal - Grease	2
6	71-8440	Rear Pivot Assembly L.H. (Incl. Ref. #2, 4, 5 & 14)	1
7	52-3620	Nut - Lock	2
8	71-7840	Rod - Trigger	1
9	32144-31	Screw - Thread Forming	1
10	71-8060	Spring - Trigger Return	1
11	71-8080	Saddle - H.O.C.	1
12	63-8590	Screw - Thread Forming	2
13	32112-13	Nut - Push	1
14	48-2060	Bearing - Needle	2
15	65-4710	Washer - Friction	2
16	65-4740	Washer - Keyed Thrust	4
17	65-2720	Ring - Retaining	4

Ref. No.	Part No.	Description	No. Used
18	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1
19	65-4750	Gear - Pinion	2
20	65-4720	Spring - Compression	2
21	74-1660	Cover - Wheel	2
22	11-9519	Wheel, Tire & Gear Assy. (Incl. Ref. #24)	2
23	27-6230	Bolt - Wheel	2
24	27-6250	Bushing - Wheel	4
25	74-1670	Spacer - Wheel	2
26	65-4760	Washer - Clutch	2
27	71-7770	Plate - Rear Suspension	2
28	49-2040	Screw - Thread Forming	4
29	32151-93	Ring - Grip	1
30	71-7970	Rod - Link	1
31	71-7740	Spring - Counterbalance	1
32	71-8450	Cover - Spring	1
33	71-7980	Indicator - H.O.C.	1
34	32121-88	Pin - Roll	2
35	71-8250	Gearbox Assembly	1

*Not Illustrated

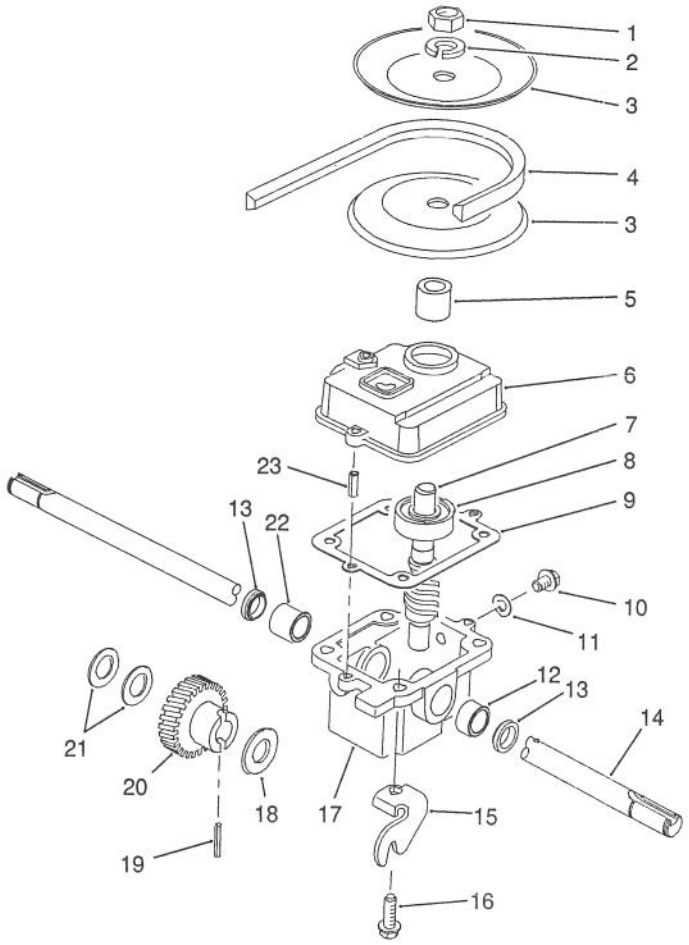


C-0365

GEARBOX ASSEMBLY NO. 71-8250 (Model No. 20915 Only)

Ref. No.	Part No.	Description	No. Used
1	3220-4	Nut - Jam	1
2	3253-6	Washer - Lock	1
3	71-7750	Pulley - Half	2
4	71-8500	Belt - V	1
5	71-7570	Spacer - Pulley	1
6	39-1103	Cover - Gearbox	1
7	71-8050	Shaft & Worm	1
8	47-7250	Bearing - Ball	1
9	36-1000	Gasket - Gearbox	1
10	28-1550	Screw - Drain	1
11	46-9640	Gasket - Drain Screw	1
12	47-2890	Bushing - Sleeve	1

Ref. No.	Part No.	Description	No. Used
13	47-6730	Seal - Oil	2
14	71-7880	Shaft - Output	1
15	71-8120	Bracket - Traction	1
16	49-2040	Screw - Thread Forming	4
17	33-2061	Case - Gearbox	1
18	3-0724	Washer - Thrust	1
19	32121-120	Pin - Roll	1
20	71-8140	Gear - Helical	1
21	36-4780	Washer - Thrust	2
22	47-2900	Bushing - Sleeve	1
23	32121-1	Pin - Roll	2

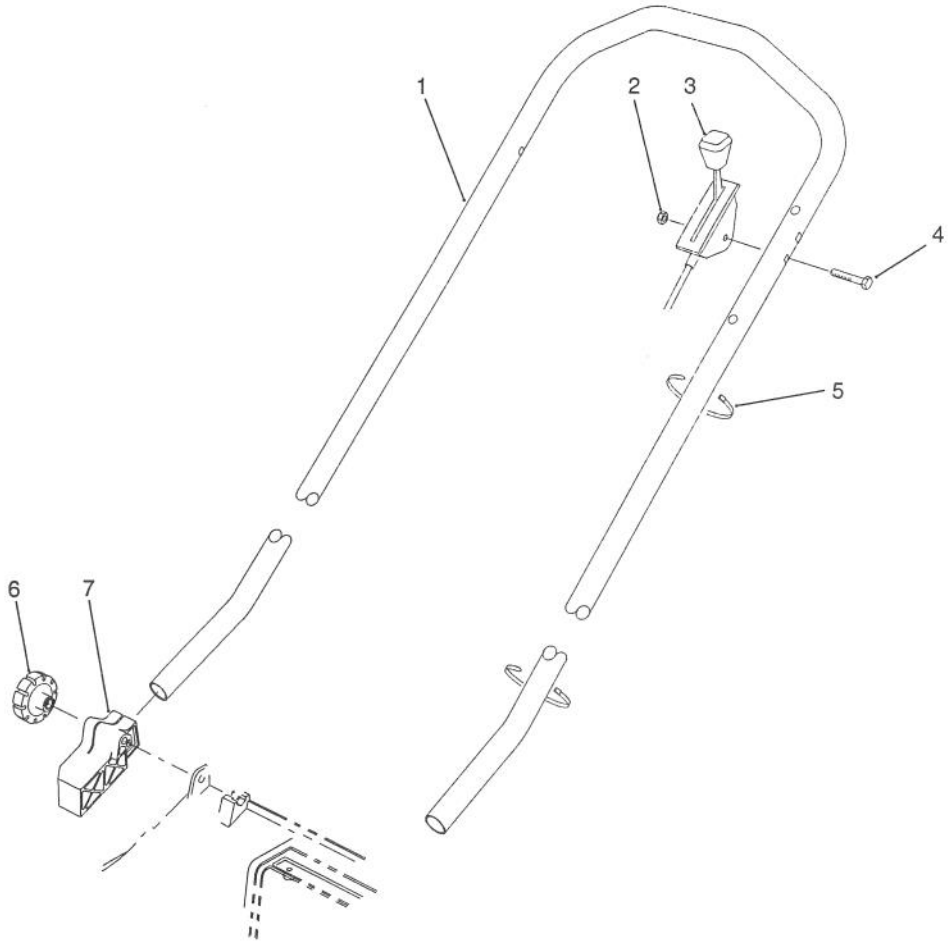


C-0366

H. P. HANDLE ASSEMBLY (Model No. 20910 Only)

Ref. No.	Part No.	Description	No. Used
1	71-8030	Handle	1
2	3296-56	Nut - Lock	1
3	71-8381	Control - Throttle Bend Type #2 Sheath Lg. 44.00 Wire Lg. 2.50	1

Ref. No.	Part No.	Description	No. Used
4	46-6430	Screw - Cap Hex. Hd.	1
5	3290-378	Tie - Cable	2
6	19-4050	Knob - Handle	2
7	71-8090	Mount - Handle L.H.	1
*	71-8100	Mount - Handle R.H.	1

*Not Illustrated

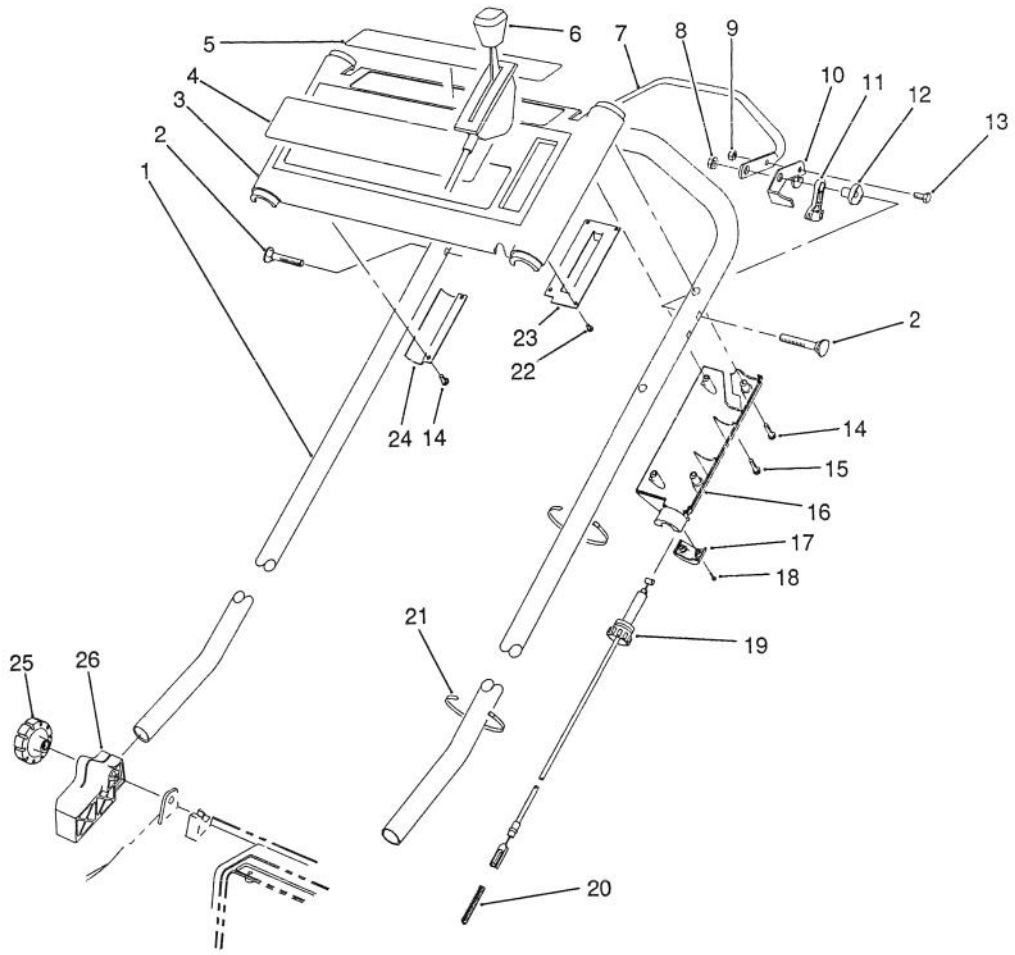


C–0367

S. P. HANDLE ASSEMBLY (Model No. 20915 Only)

Ref. No.	Part No.	Description	No. Used
1	71–8030	Handle	1
2	17–9426	Screw – Handle	2
3	14–0039	Panel – Control	1
4	71–8330	Decal – TORO Logo	1
5	71–8320	Decal – Danger	1
6	49–4186	Control – Throttle Bend Type #2 Sheath Lg. 42.00 Wire Lg. 2.50	1
7	46–9900	Bar – Control	1
8	3296–29	Nut – Flange Lock	2
9	3296–42	Nut – Lock	1
10	46–8800	Lever – Control	1
11	46–5520	Lever – Traction	1
12	66–0330	Support – Spacer	2

Ref. No.	Part No.	Description	No. Used
13	321–3	Screw – Cap Hex. Hd.	1
14	32144–97	Screw – Thread Forming	5
15	32104–121	Screw – Thread Forming	1
16	71–7680	Cover – Throttle Lower	1
17	71–7630	Cap – Throttle Lower	1
18	32144–99	Screw – Thread Forming	2
19	71–8110	Cable – Traction	1
20	71–8310	Spring – Gearbox Return	1
21	3290–378	Tie – Cable	2
22	32144–98	Screw – Thread Forming	4
23	71–8040	Plate – Throttle	1
24	71–8130	Bracket – Panel	1
25	19–4050	Knob – Handle	2
26	71–8090	Mount – Handle L.H.	1
*	71–8100	Mount – Handle R.H.	1

*Not Illustrated

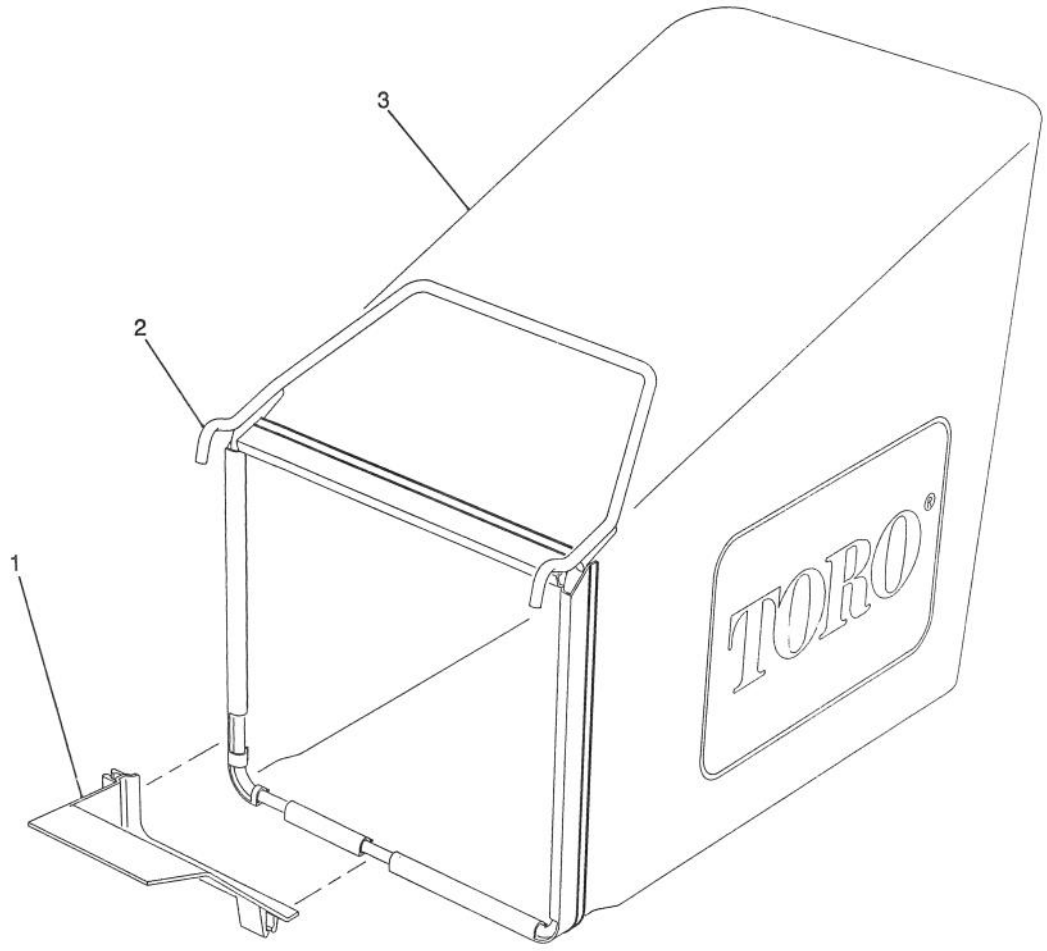


C-0368

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-3750	Ramp - Grass Bag	1
2	71-8180	Frame - Grass Bag	1

Ref. No.	Part No.	Description	No. Used
3	71-8270	Bag - Grass	1

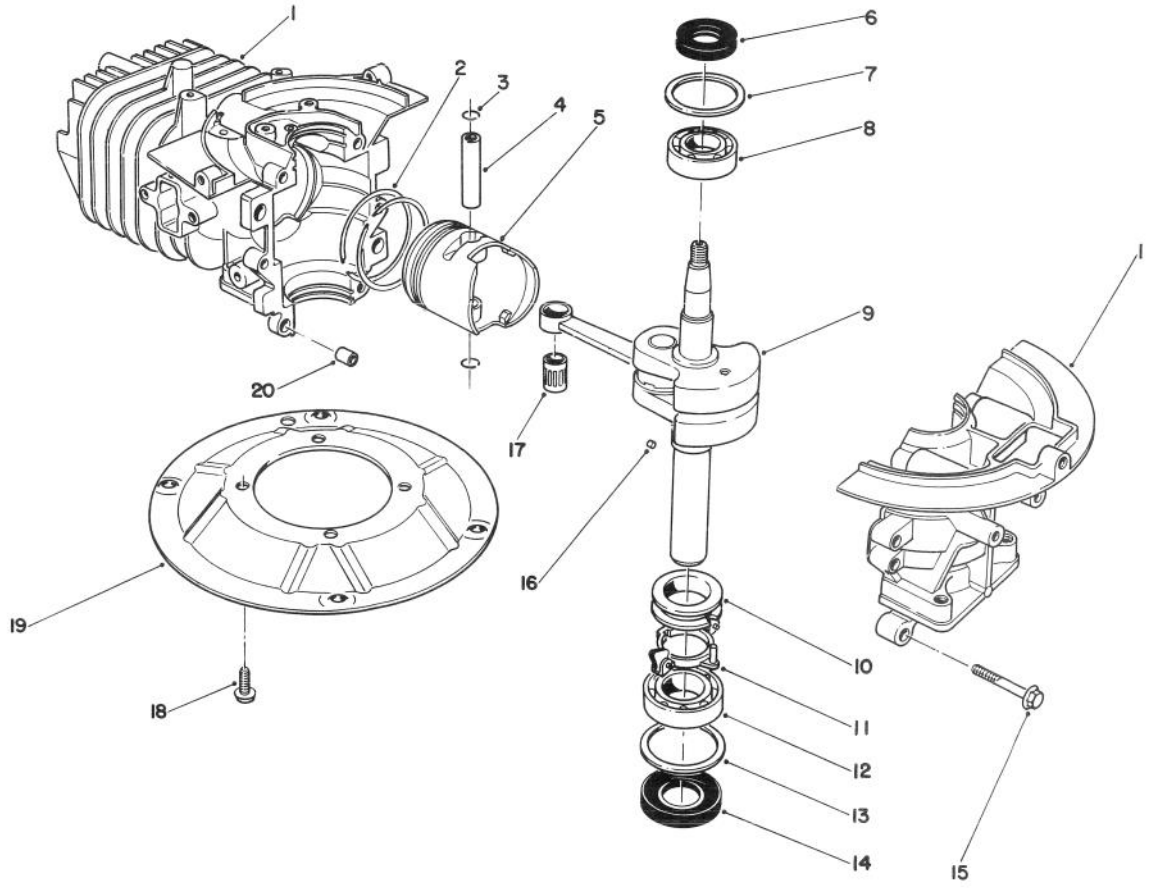


T-0663

CRANKSHAFT ASSEMBLY
(Engine No. 47PK9)

Ref. No.	Part No.	Description	No. Used
1	81-2800	Crankcase/Cylinder Assy.	1
2	81-0590	Piston Ring Set	1
3	81-0620	Circlip	2
4	81-0600	Pin – Wrist	1
5	81-0580	Piston – 58mm	1
6	81-0720	Seal – Oil Upper	1
7	81-0710	Washer – Thrust Upper	1
8	81-0690	Bearing – Upper 20mm	1
9	81-4600	Crankshaft/Connecting Rod Assembly	1
10	81-0770	Spacer – Governor	1

Ref. No.	Part No.	Description	No. Used
11	81-0750	Bracket – Governor Arm	1
12	81-0700	Bearing – Lower 25mm	1
13	81-0730	Washer – Thrust Lower	1
14	81-0740	Seal – Oil Lower	1
15	81-0540	Bolt	5
16	81-0760	Pin – Crankshaft	1
17	81-0610	Bearing – Wrist Pin	1
18	81-0570	Bolt	4
19	81-0560	Plate – Mounting	1
20	81-0520	Pin – Crankcase	2
*	12-7699	Short Block Assembly	1

*Not Illustrated

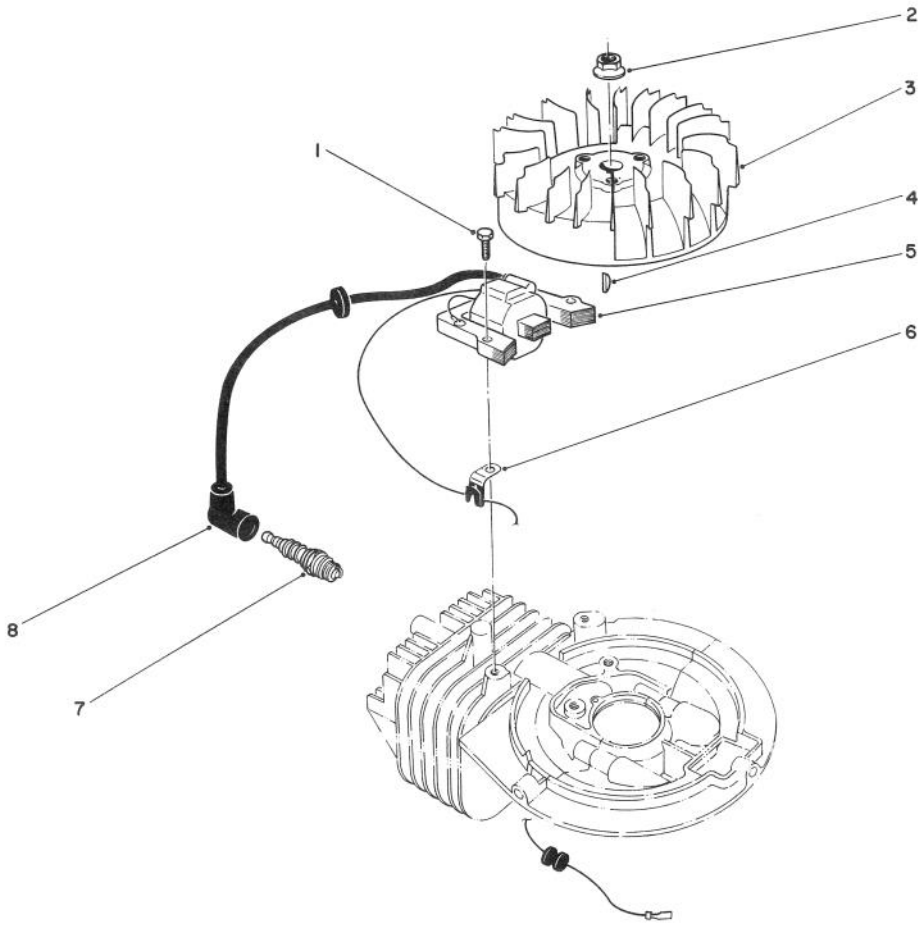


C-0176

FLYWHEEL & MAGNETO ASSEMBLY (Engine Model No. 47PK9)

Ref. No.	Part No.	Description	No. Used
1	81-5670	Screw - Cap Hex. Hd	2
2	81-1330	Nut	1
3	81-2810	Flywheel - Magneto	1
4	81-2370	Key - Flywheel	1
5	81-2820	Coil/Ignition Assembly	1

Ref. No.	Part No.	Description	No. Used
6	81-1480	Clamp	1
7	81-0181	Spark - Plug	1
8	81-1500	Cover - Spark Plug	1
*	41-7650	Puller - Flywheel	1

*Not Illustrated

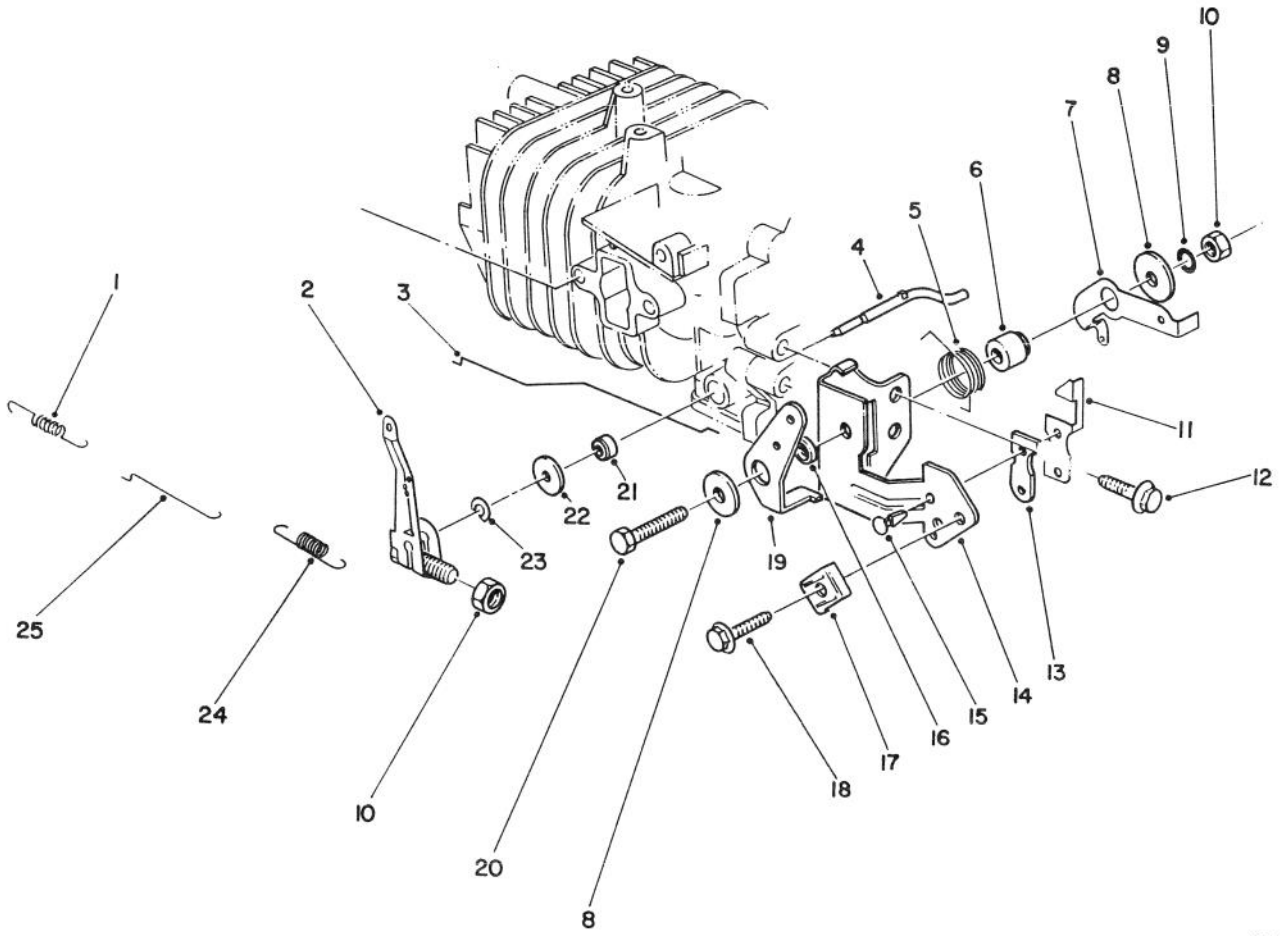


C-0177

GOVERNOR ASSEMBLY
(Engine No. 47PK9)

Ref. No.	Part No.	Description	No. Used
1	81-0920	Spring - Carburetor Rod	1
2	81-5420	Governor Arm/Bolt Assy.	1
3	81-5410	Rod - Choke	1
4	81-0840	Shaft - Governor	1
5	81-2460	Spring - Choke Lever	1
6	81-1770	Spacer - Governor Lever	1
7	81-2850	Lever - Governor	1
8	81-1750	Washer - Choke Lever	2
9	81-1450	Washer - Lock	1
10	81-0900	Nut	2
11	81-1840	Terminal - Kill Switch	1
12	81-0540	Bolt - Self Tapping	1
13	81-1830	Insulator - Kill Switch	1

Ref. No.	Part No.	Description	No. Used
14	81-2420	Bracket - Throttle	1
15	81-1850	Rivet - Kill Switch	2
16	81-2470	Spacer - Choke Lever	1
17	81-2430	Clamp - Cable	1
18	50-0130	Bolt - Cable Clamp	1
19	81-1710	Lever - Choke	1
20	81-1730	Bolt - Throttle Bracket	1
21	81-0850	Seal - Governor Shaft	1
22	81-0860	Washer	1
23	81-0870	Ring - Retaining	1
24	81-2830	Spring - Governor	1
25	81-0910	Rod - Carburetor	1

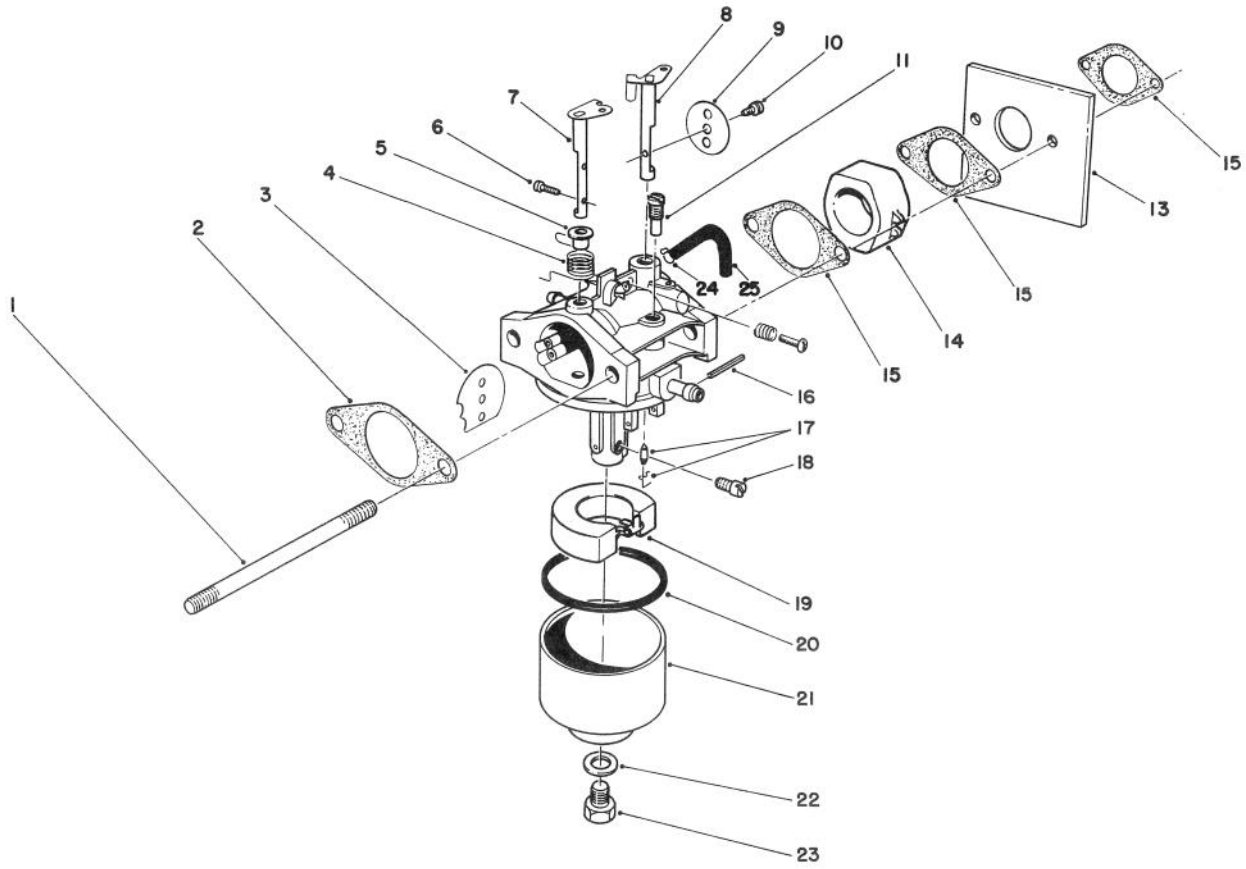


T-0665

CARBURETOR ASSEMBLY (Engine No. 47PK9)

Ref. No.	Part No.	Description	No. Used
1	81-5450	Stud - Carburetor Bolt	2
2	81-0090	Gasket - Air Cleaner	1
3	81-0240	Valve - Choke	1
4	81-0230	Spring - Choke	1
5	81-0220	Bushing - Choke Valve	1
6	81-2160	Screw	2
7	81-1950	Shaft - Choke	1
8	81-0250	Shaft - Throttle	1
9	81-0260	Valve - Throttle	1
10	81-0270	Screw - Throttle Valve	1
11	81-1030	Jet - Pilot (#40)	1
13	81-5490	Shield - Carburetor	1
14	81-5440	Insulator - Carburetor	1
15	81-0780	Gasket	3
16	81-5600	Pin	1

Ref. No.	Part No.	Description	No. Used
17	81-4910	Needle Valve/Spring Wire	1
18	81-1060	Jet - Main (#75)	1
*	81-2340	Jet - Main (#72.5) High Alt. (Above 6000 ft.) Optional	1
19	81-0970	Float	1
20	81-1010	Gasket - Float Bowl	1
21	81-5660	Bowl - Float	1
22	81-5720	Gasket - Float Bowl Drain	1
23	81-5670	Screw - Float Bowl Drain	1
24	81-5460	Clamp - Vent Tube	1
25	81-5470	Tube - Vent	1
*	12-6379	Carburetor Kit (Incl. Ref. #2, 15, 17, 20 & 22)	1
*	81-5430	Carburetor Assy. Complete	1

*Not Illustrated

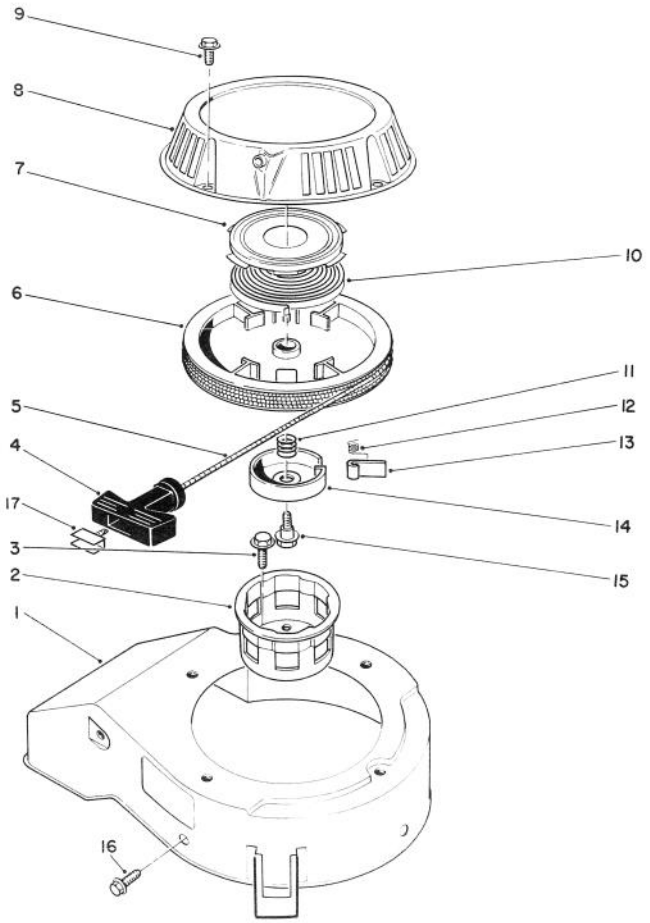


T-0668

RECOIL ASSEMBLY
(Engine Model No. 47PK9)

Ref. No.	Part No.	Description	No. Used
1	81-2070	Cover - Cooling Fan	1
2	81-1290	Cup - Starter Pulley	1
3	81-1300	Bolt	3
4	81-1630	Handle - Recoil	1
5	81-1270	Rope	1
6	81-1210	Reel - Rope Pulley	1
7		Retainer - Recoil Spring	1
8	81-2090	Case - Recoil	1
9	81-1280	Bolt	4
10		Spring - Recoil	1
11	81-1240	Spring - Compression	1
12	81-1220	Spring - Dog	1

Ref. No.	Part No.	Description	No. Used
13	81-1230	Dog	1
14	81-1250	Retainer - Dog	1
15	81-1260	Bolt - Shoulder	1
16	81-1170	Bolt - Self Tapping	3
17	81-5760	Insert - Recoil Handle	1
*	81-2041	Recoil Starter Assembly (Incl. Ref. #4-8 & 10-17)	1
*	81-2300	Spring & Retainer Assembly (Incl. Ref. #7 & 10)	1
*	81-5480	Starter Assembly (Incl. Ref. #4-8 & 10-15)	1

*Not Illustrated

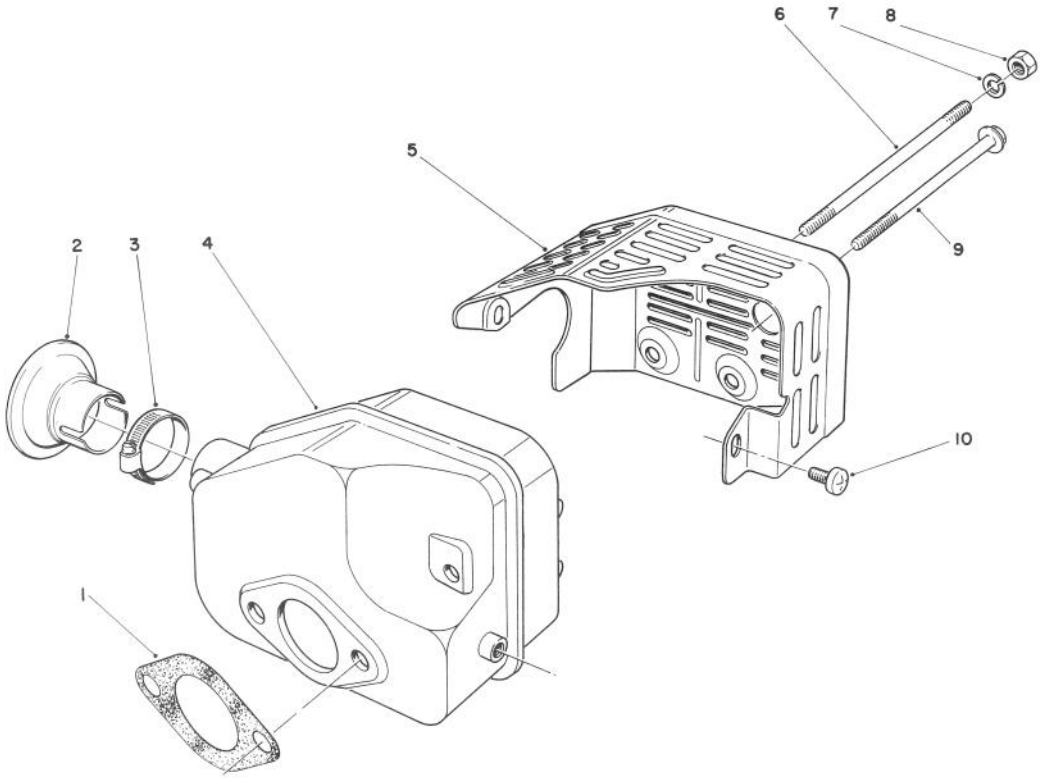

T-0667

MUFFLER ASSEMBLY
(Engine No. 47PK9)

Ref. No.	Part No.	Description	No. Used
1	81-1080	Gasket - Muffler	1
2	81-0200	Spark Arrester (Optional)	1
3		Clamp	1
4	81-5690	Muffler	1
5	81-2450	Cover - Muffler	1

Ref. No.	Part No.	Description	No. Used
6	81-1100	Bolt	2
7	81-1120	Washer - Lock	2
8	81-1110	Nut	2
9	81-1150	Bolt - Self Tapping	1
10	81-1140	Screw - Phillips Hd	2

†Obtain Locally

Compliance with Radio Interference Regulations Certified.

Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Lawnmower has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the rear of the housing. In any correspondence concerning the lawnmower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the lawnmower.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.