FORM NO. 3314-143


TORO®

MODEL NO. 26680-0000001 & UP
MODEL NO. 26680WG-0000001 & UP

PARTS CATALOG

53cm REAR BAGGER

ONLY COPY
DO NOT REMOVE
Tech. Publications

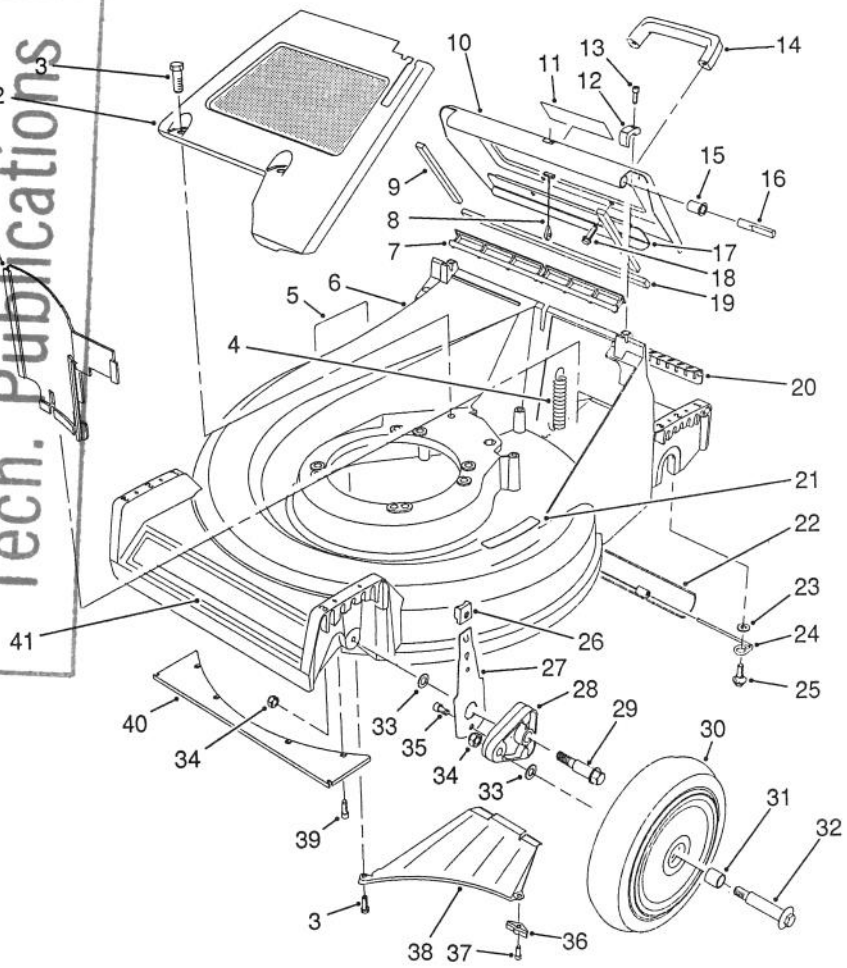


C-0491

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-0020	Panel - Vertical	1
2	65-5660	Panel - Screen	1
3	32144-70	Screw - Cap Hex. Hd.	3
4	65-5360	Spring - Extension	1
5	62-3860	Decal - Danger	1
6	13-5869	Housing - 53cm (Incl. Ref. #5 & 21) (Model 26680 Only)	1
*	13-5879	Housing - 53cm (Incl. Ref. #5 & 21) (Model 26680WG Only)	1
7	65-5160	Seal - Door	1
8	65-5370	Cable - Door	1
9	65-5480	Seal - Door Side	2
10	13-5889	Door - Discharge (Incl. Ref. #9, 11, 17 & 19)	1
11	71-8370	Decal - Danger	1
12	65-5140	Clamp - Hinge	2
13	65-5210	Screw - Hex. Socket Hd.	2
14	65-5100	Handle - Door	1
15	65-5460	Bushing - Door	2
16	65-5290	Pin - Hinge	2
17	66-0610	Brace - Door	1
18	46-8091	Screw - Handle	2
19	65-5490	Seal - Door (End)	1
20	65-5150	Cover - Access	1
21	62-3950	Decal - Step Pad	1
22	65-5350	Shield - Trailing	1
23	3256-23	Washer - Flat	2
24	76-1980	Hanger - Shield	2
25	5-2490	Screw - Shoulder	2
26	25-7740	Knob - Spring Arm	2
27	66-0540	Arm - Front Spring	2
28	66-0580	Arm - Front Pivot	2

*Not Illustrated

©The TORO Company - 1989

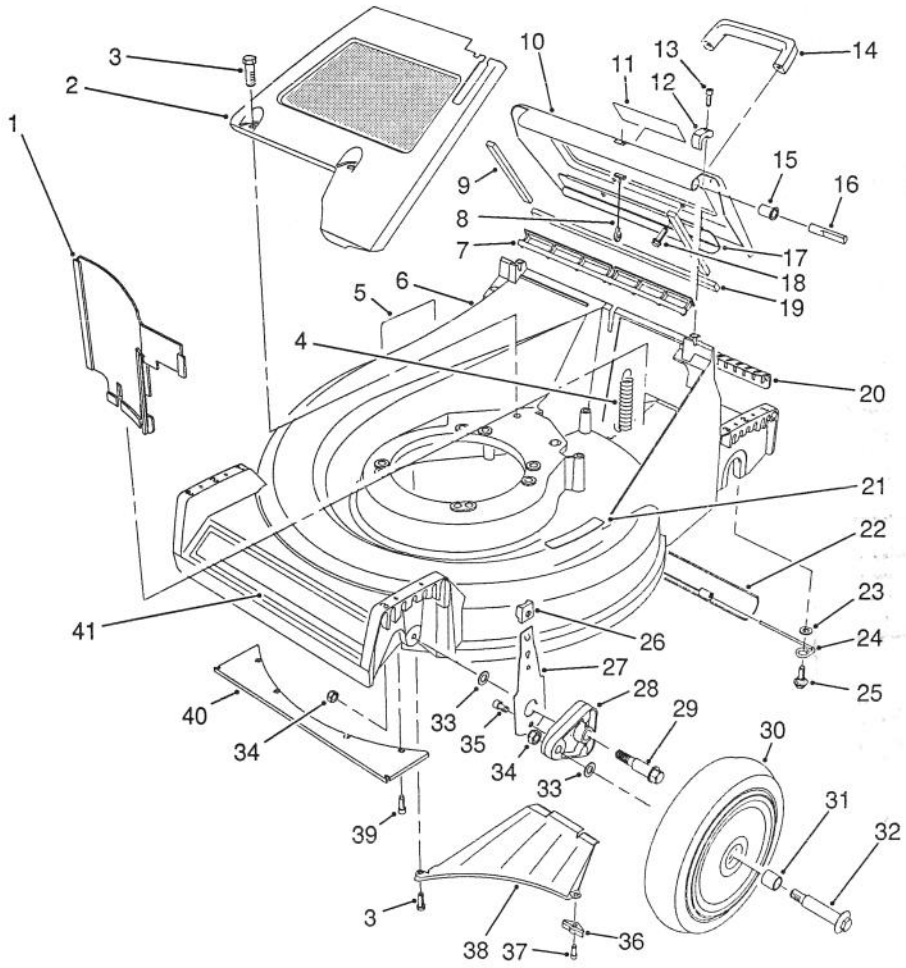


C-0491

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29	66-0560	Screw - Shoulder	2
30	11-9509	Wheel & Tire Assembly (Incl. Ref. #31)	2
31	27-6250	Bushing - Wheel	4
32	27-6231	Bolt - Wheel	2
33	40-1940	Washer - Wheel	4
34	3296-6	Nut - Lock	4
35	65-5220	Screw - Cap Socket Hd.	2

Ref. No.	Part No.	Description	No. Used
36	66-0640	Bracket - Discharge	1
37	65-5221	Screw - Bracket	1
38	65-5010	Ramp - Discharge	1
39	32144-4	Screw - Self Tapping (Model 26680WG Only)	4
40	70-7030	Guard - Front (Model 26680WG Only)	1
41	70-7590	Decal - 53cm	1

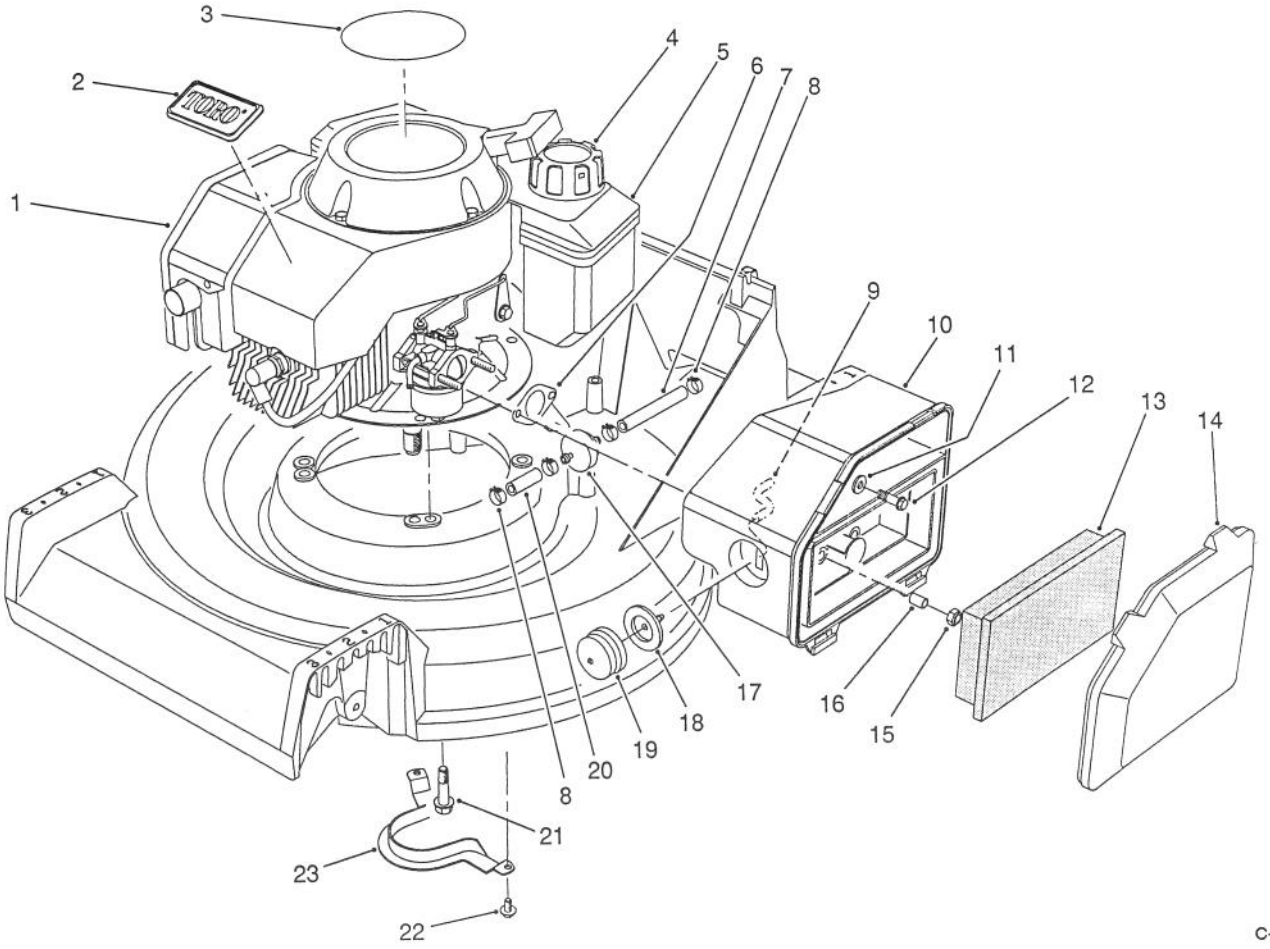


C-0175

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	81-5910	Engine – 2 Cycle	1
2	46-8290	Plate – TORO Logo	1
3	57-3110	Decal – Recoil (Model 26680 Only)	1
*	57-9870	Decal – Recoil (Model 26680WG Only)	1
4	55-3575	Cap – Gas	1
5	81-0162	Tank – Fuel	1
6	81-0090	Gasket – Air Cleaner	1
7	51-3215	Line – Fuel	1
8	2412-95	Clamp – Fuel Line	4
9	44-3172	Hose – Primer	1
10	63-9330	Body – Air Cleaner	1
11	3256-16	Washer – Flat	1
12	51-2690	Screw – Hex. Flange Hd.	1

Ref. No.	Part No.	Description	No. Used
13	63-9380	Element – Air Cleaner	1
14	63-9340	Cover – Air Cleaner	1
15	50-7180	Nut – Lock	2
16	62-3980	Spacer	2
17	56-6360	Filter – Fuel	1
18	44-2750	Body – Primer	1
19	66-7460	Bulb – Primer	1
20	51-3216	Line – Fuel	1
21	66-9300	Screw – Cap Hex. Hd.	3
22	32144-70	Screw – Cap Hex. Hd.	2
23	66-0570	Guide – Belt	1
*	46-1930	Wrench	1
*	46-1040	Wrench – Spark Plug	1
*	46-1041	Pin – Spark Plug Wrench	1

*Not Illustrated

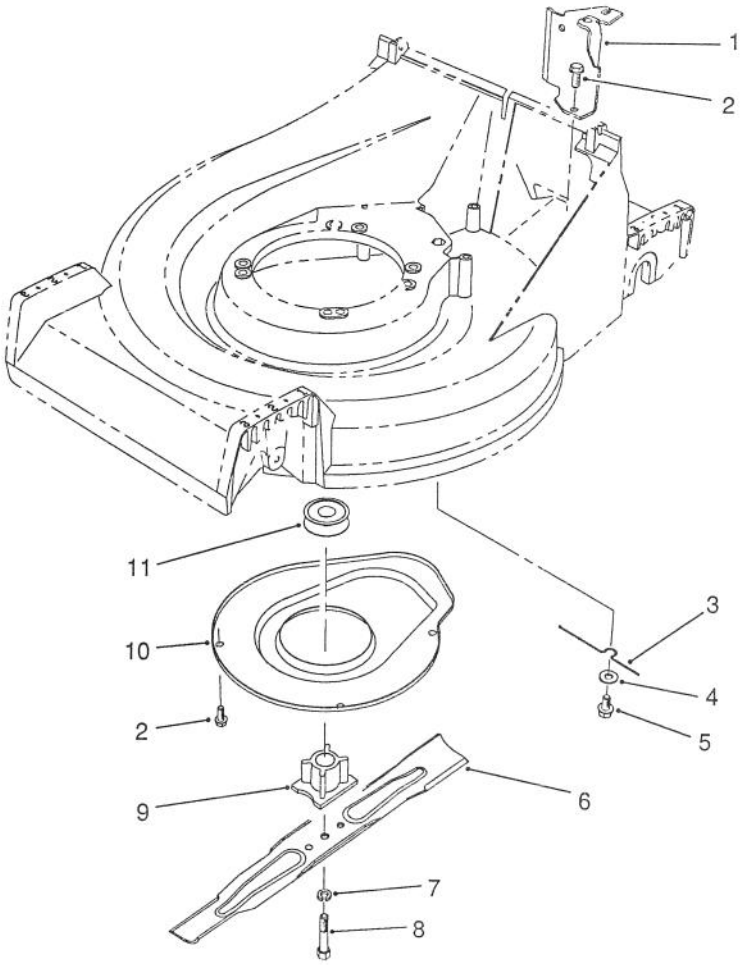


C-0172

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-0030	Bracket - Cable Support	1
2	32144-70	Screw - Cap Hex. Hd.	5
3	66-0620	Retainer - Belt	1
4	3256-24	Washer - Flat	1
5	32144-15	Screw - Hex. Flange Hd.	1
6	62-7700	Blade - 21"	1

Ref. No.	Part No.	Description	No. Used
7	3253-22	Washer - Lock	1
8	26-0670	Bolt - Blade	1
9	62-7540	Retainer - Blade	1
10	65-5200	Cover	1
11	62-7550	Pulley - Engine	1

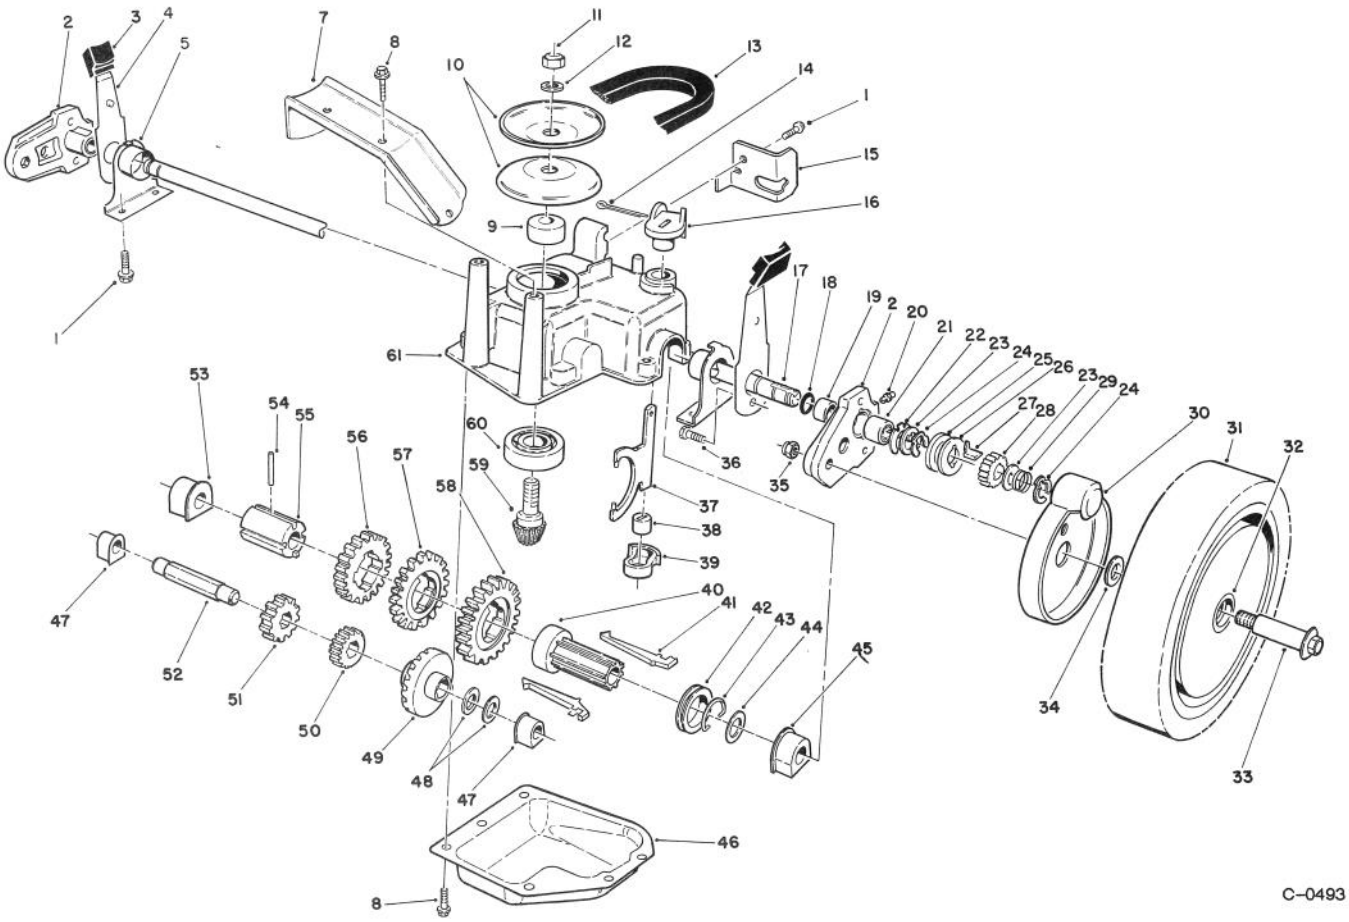


GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	3
2	65-5042	Pivot Arm Assembly (Incl. Ref. #19-21)	2
3	25-7740	Knob - Arm	2
4	65-5440	Spring Arm Assembly	2
5	66-0360	Cap - End	2
7	65-5190	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Nut - Lock	1
12	3256-24	Washer - Flat	1
13	66-0210	V-Belt	1
14	3272-5	Pin - Cotter	1
15	76-2930	Retainer - Cable	1
16	76-0920	Lever - Shift	1
17	65-4770	Shaft - Output	1
18	237-153	Seal - O-Ring	2
19	70-9760	Bushing - Sleeve	2
20	302-56	Fitting - Grease	2
21	48-2060	Bearing -Needle	2
22	65-4730	Washer - Thrust (Inner)	2
23	65-4740	Washer - Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2
26	65-4760	Washer -Clutch	2
27	66-6050	Key - Rocking (L.H.)	1
*	66-6040	Key - Rocking (R.H.)	1
28	65-4750	Pinion	2
29	65-4720	Spring - Compression	2
30	74-1660	Cover - Wheel	2
31	11-9519	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27-6250	Bushing - Wheel	4
33	27-6231	Bolt - Wheel	2
34	74-1670	Spacer - Wheel Cover	2
35	3296-6	Nut - Lock	2
36	65-5220	Screw - Cap Socket Hd.	2
37	60-8870	Yoke - Shift	1
38	29-9570	Bushing - Yoke	1
39	60-8810	Retainer - Shift Fork	1
40	76-0780	Sleeve - Shift Key	1
41	76-0760	Key - Shift	2
42	76-0770	Collar - Shift	1
43	65-5250	Clip - Spring	1
44	36-4780	Washer - Thrust	1

*Not Illustrated

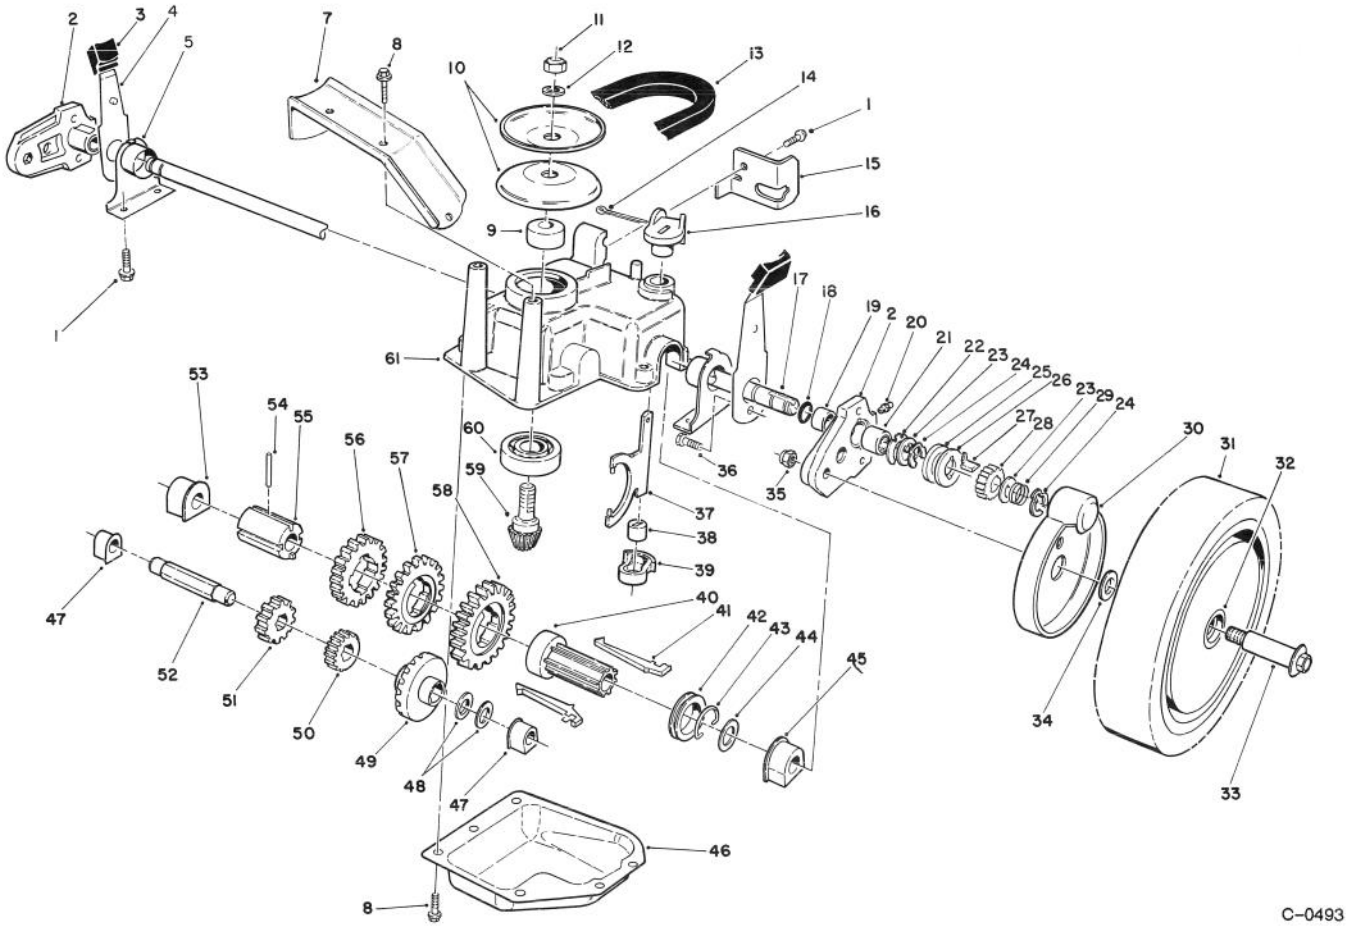


GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing - Output Shaft	1
46	60-8730	Cover - Gear Case	1
47	60-8750	Bushing - Intrmdt. Shaft	2
48	36-4791	Washer - Thrust	2
49	55-3760	Gear - Pinion 15T	1
50	55-3780	Gear - Pinion 20T	1
51	55-3800	Gear - Pinion 25T	1
52	60-8800	Shaft - Intermediate	1
53	60-8850	Bushing - Output Shaft	1

Ref. No.	Part No.	Description	No. Used
54	32121-120	Pin - Coil	1
55	60-8790	Sleeve - Gear	1
56	55-3810	Gear - 39T (3rd Gear)	1
57	55-3790	Gear - 44T (2nd Gear)	1
58	55-3770	Gear - 49T (1st Gear)	1
59	60-8890	Pinion - Bevel	1
60	38-7820	Bearing - Ball	1
61	60-8710	Case - Gear (Upper)	1
*	62-6673	Gear Case Assy. Complete	1

*Not Illustrated

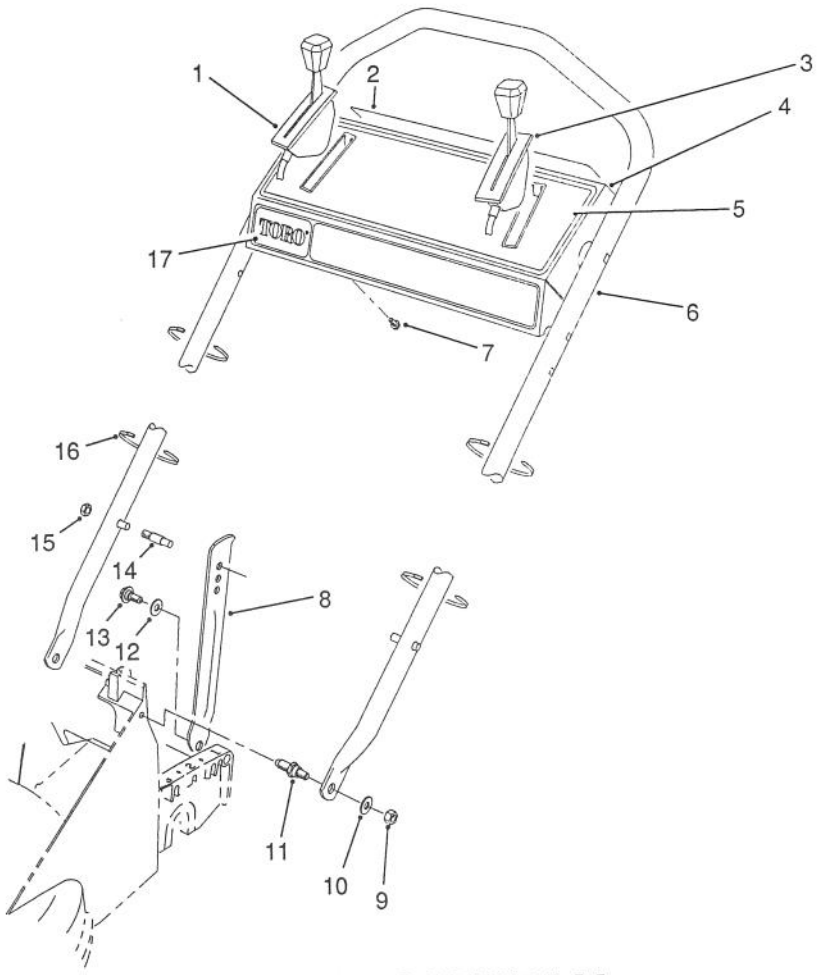


C-0512

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-2710	Control - Ground Speed Bend Type #6 Sheath Lg. 51" Wire Lg. 3-1/16"	1
2	66-1790	Decal - Danger (Model 26680 Only)	1
*	72-8030	Decal - Danger (Model 26680WG Only)	1
3	66-0231	Control - Throttle Bend Type #1 Sheath Lg. 43-3/4" Wire Lg. 2-5/8"	1
4	13-6019	Panel - Control (Model 26680 Only) (Incl. Ref. #2 & 5)	1
*	13-9799	Control Panel Assembly (Model 26680WG Only)	1

Ref. No.	Part No.	Description	No. Used
5	66-0290	Decal - Instruction	1
6	66-0320	Handle	1
7	32104-76	Screw - Self Tapping	5
8	65-5730	Latch - Handle	2
9	3296-29	Nut - Lock	2
10	3256-23	Washer - Flat	2
11	66-0450	Screw - Shoulder Stud	2
12	256-313	Washer - Nylon	2
13	5-2490	Screw - Shoulder	2
†14	49-2750	Pin - Handle	2
†15	3296-47	Nut - Lock	2
16	3290-378	Tie - Cable	4
17	66-1770	Decal - TORO	1

*Not Illustrated
†Service Replacement Parts

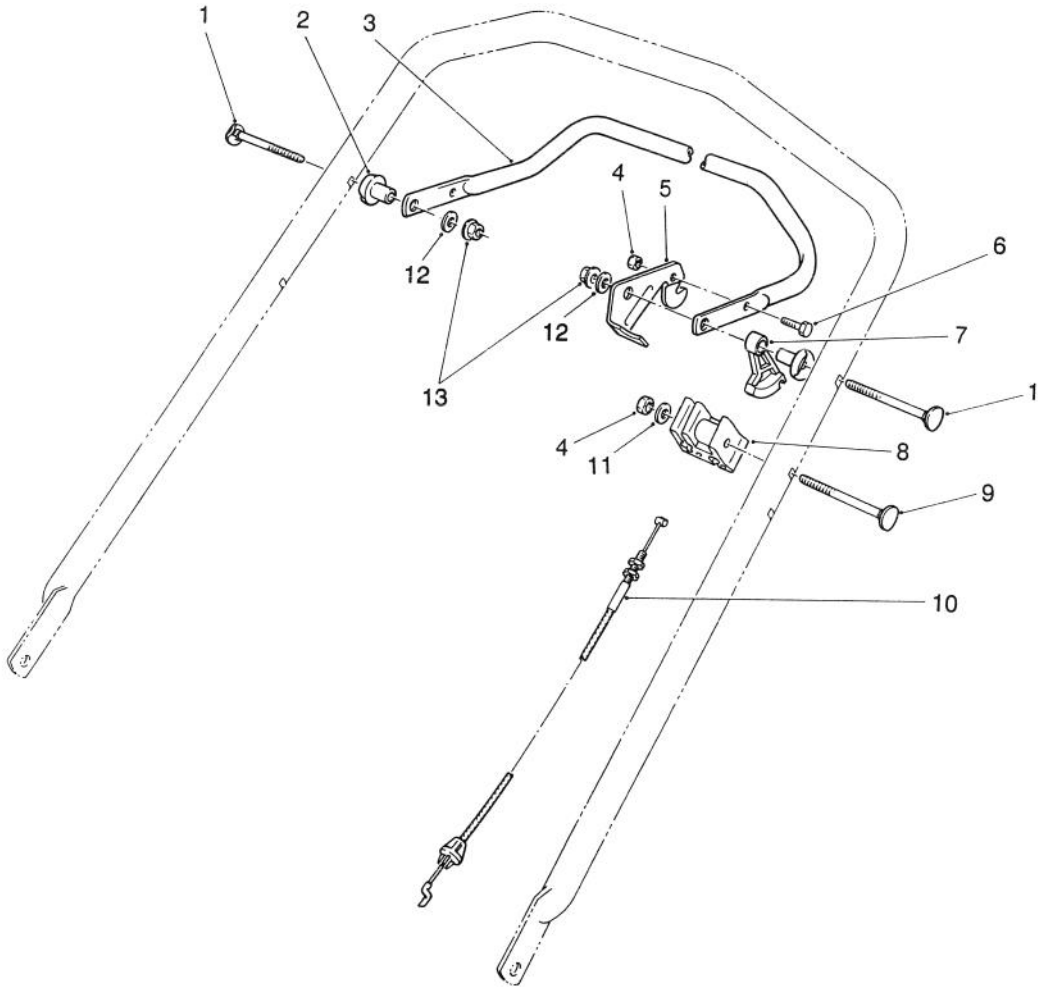


C-0495

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17-9426	Screw - Handle	2
2	66-0330	Support - Spacer	2
3	52-7430	Control Bar Assembly	1
4	3296-42	Nut - Lock	2
5	46-8800	Lever - Control	1
6	321-3	Screw - Cap Hex. Hd.	1
7	46-5520	Lever - Traction	1

Ref. No.	Part No.	Description	No. Used
8	71-0960	Support - Cable	1
9	46-6432	Screw - Handle	1
10	71-0620	Cable - Traction	1
11	3256-22	Washer - Flat	1
12	3256-23	Washer - Flat	2
13	3296-29	Nut - Lock	2

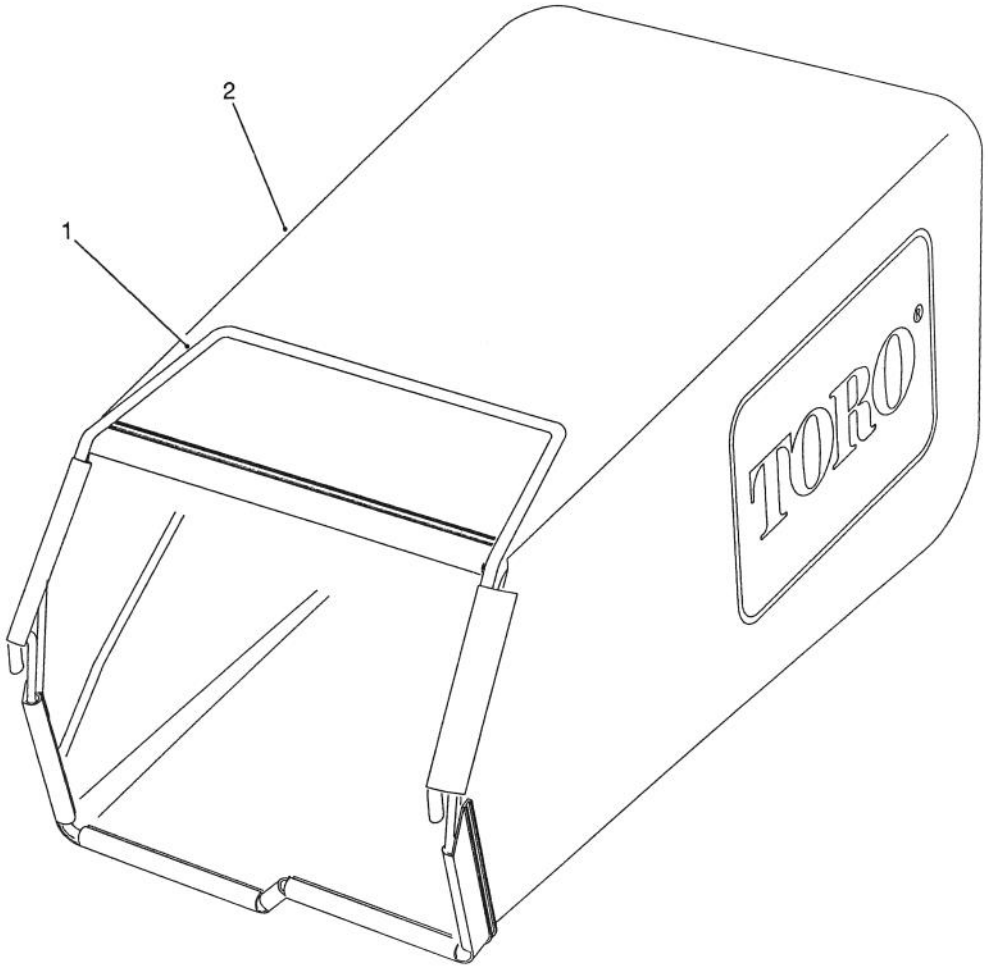


C-0168

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-1790	Frame - Grass Bag	1

Ref. No.	Part No.	Description	No. Used
2	66-0010	Bag	1

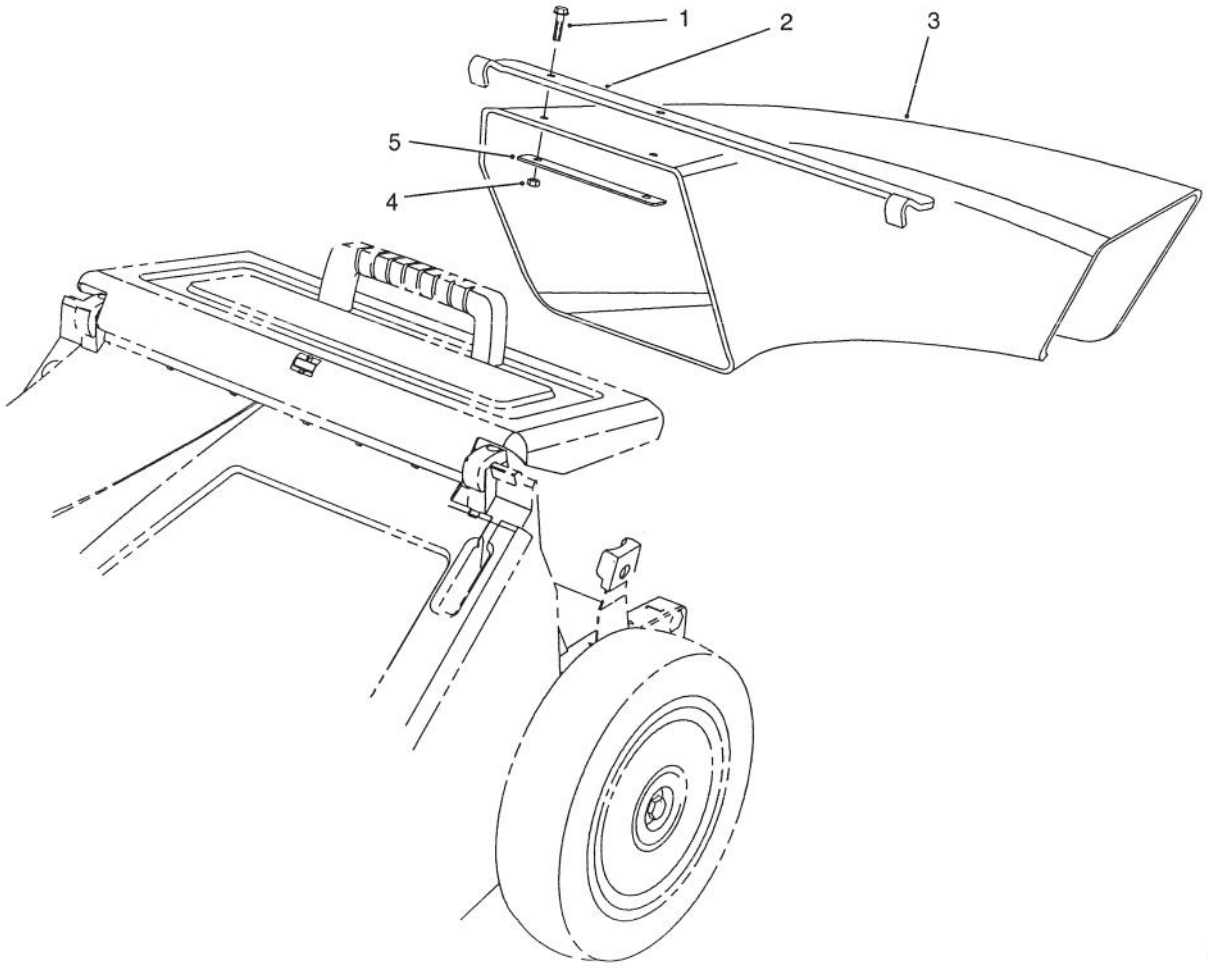


C-0169

SIDE DISCHARGE CHUTE MODEL NO. 59112 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3290-126	Screw - Hex. Washer Hd.	2
2	66-0070	Bracket - Chute Hanger	1
3	65-5240	Chute - Discharge	1

Ref. No.	Part No.	Description	No. Used
4	3296-12	Nut - Lock	2
5	66-0060	Plate - Stress	1

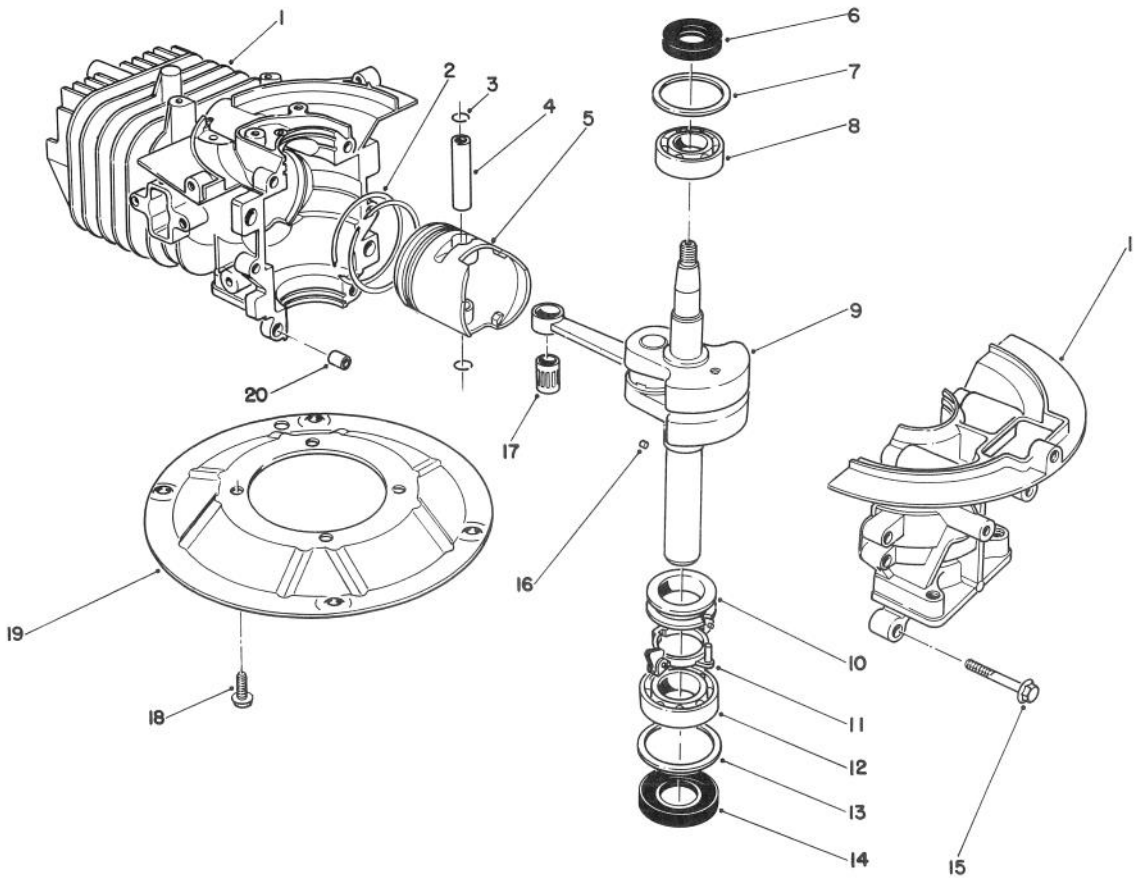


T-0663

CRANKSHAFT ASSEMBLY
(Engine No. 47PK9)

Ref. No.	Part No.	Description	No. Used
1	81-2800	Crankcase/Cylinder Assy.	1
2	81-0590	Piston Ring Set	1
3	81-0620	Circlip	2
4	81-0600	Pin - Wrist	1
5	81-0580	Piston - 58mm	1
6	81-0720	Seal - Oil Upper	1
7	81-0710	Washer - Thrust Upper	1
8	81-0690	Bearing - Upper 20mm	1
9	81-4600	Crankshaft/Connecting Rod Assembly	1
10	81-0770	Spacer - Governor	1

Ref. No.	Part No.	Description	No. Used
11	81-0750	Bracket - Governor Arm	1
12	81-0700	Bearing - Lower 25mm	1
13	81-0730	Washer - Thrust Lower	1
14	81-0740	Seal - Oil Lower	1
15	81-0540	Bolt	5
16	81-0760	Pin - Crankshaft	1
17	81-0610	Bearing - Wrist Pin	1
18	81-0570	Bolt	4
19	81-0560	Plate - Mounting	1
20	81-0520	Pin - Crankcase	2
*	12-7699	Short Block Assembly	1

*Not Illustrated

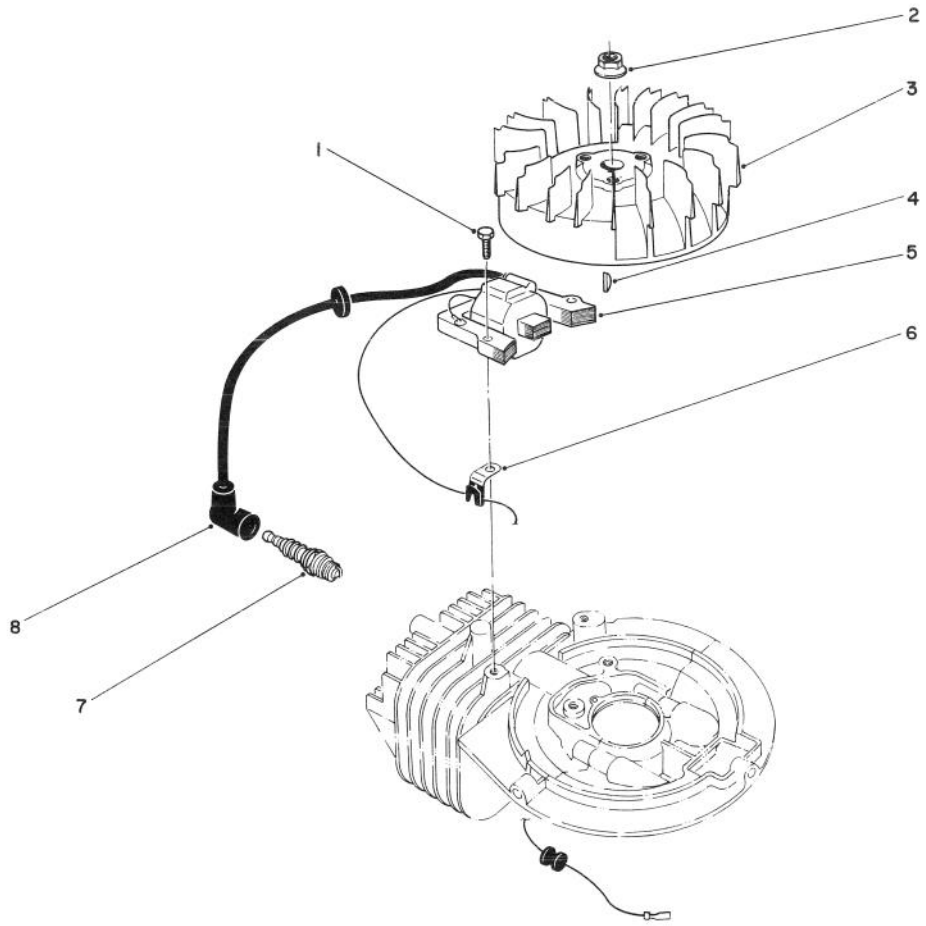


C-0176

FLYWHEEL & MAGNETO ASSEMBLY
(Engine Model No. 47PK9)

Ref. No.	Part No.	Description	No. Used
1	81-5670	Screw - Cap Hex. Hd	2
2	81-1330	Nut	1
3	81-2810	Flywheel - Magneto	1
4	81-2370	Key - Flywheel	1
5	81-2820	Coil/Ignition Assembly	1

Ref. No.	Part No.	Description	No. Used
6	81-1480	Clamp	1
7	81-0181	Spark - Plug	1
8	81-1500	Cover - Spark Plug	1
*	41-7650	Puller - Flywheel	1

*Not Illustrated

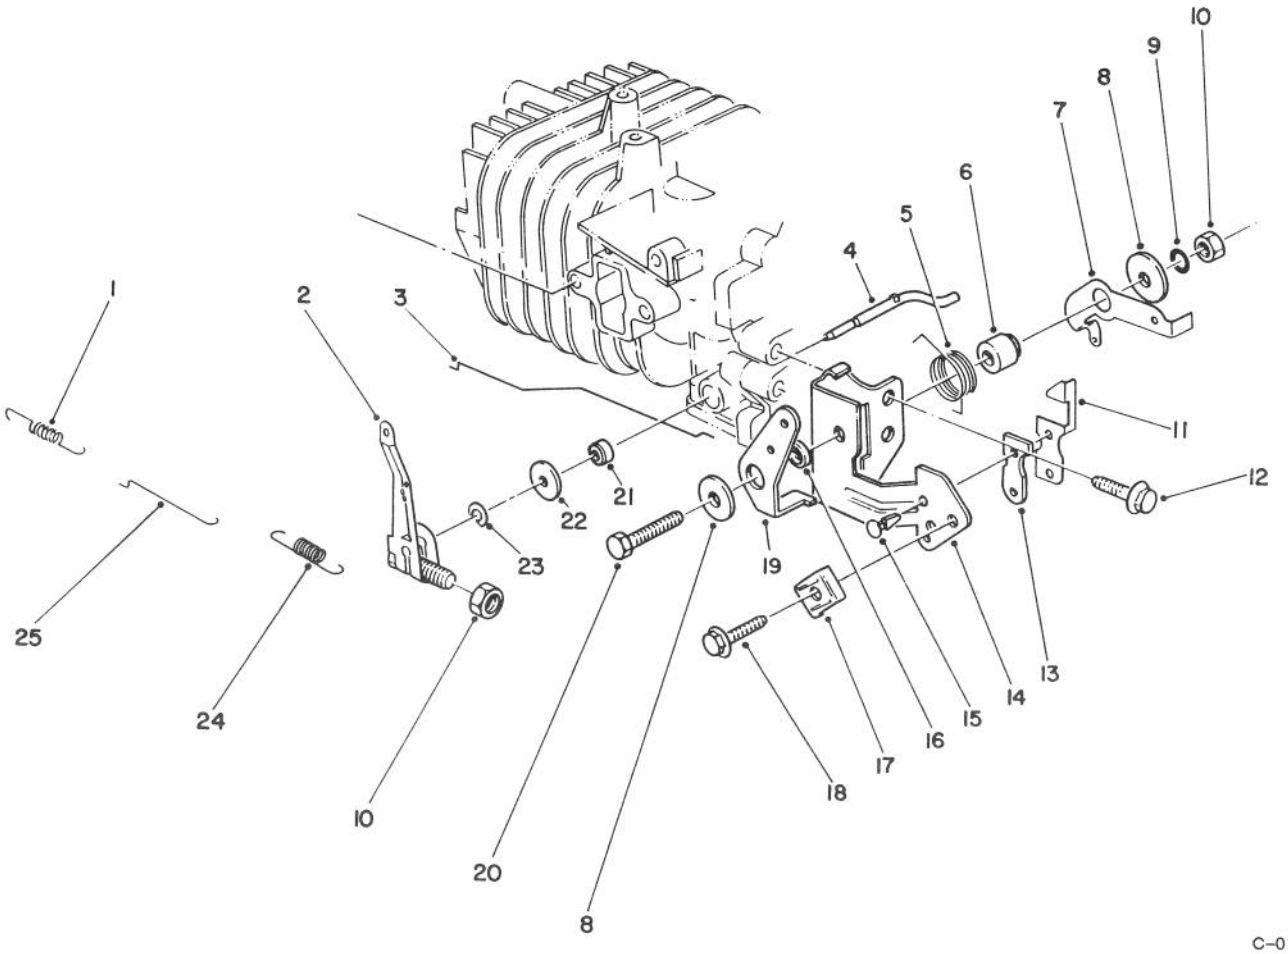


C-0177

GOVERNOR ASSEMBLY
(Engine No. 47PK9)

Ref. No.	Part No.	Description	No. Used
1	81-0920	Spring - Carburetor Rod	1
2	81-5420	Governor Arm/Bolt Assy.	1
3	81-5410	Rod - Choke	1
4	81-0840	Shaft - Governor	1
5	81-2460	Spring - Choke Lever	1
6	81-1770	Spacer - Governor Lever	1
7	81-2850	Lever - Governor	1
8	81-1750	Washer - Choke Lever	2
9	81-1450	Washer - Lock	1
10	81-0900	Nut	2
11	81-1840	Terminal - Kill Switch	1
12	81-0540	Bolt - Self Tapping	1
13	81-1830	Insulator - Kill Switch	1

Ref. No.	Part No.	Description	No. Used
14	81-2420	Bracket - Throttle	1
15	81-1850	Rivet - Kill Switch	2
16	81-2470	Spacer - Choke Lever	1
17	81-2430	Clamp - Cable	1
18	50-0130	Bolt - Cable Clamp	1
19	81-1710	Lever - Choke	1
20	81-1730	Bolt - Throttle Bracket	1
21	81-0850	Seal - Governor Shaft	1
22	81-0860	Washer	1
23	81-0870	Ring - Retaining	1
24	81-2830	Spring - Governor	1
25	81-0910	Rod - Carburetor	1

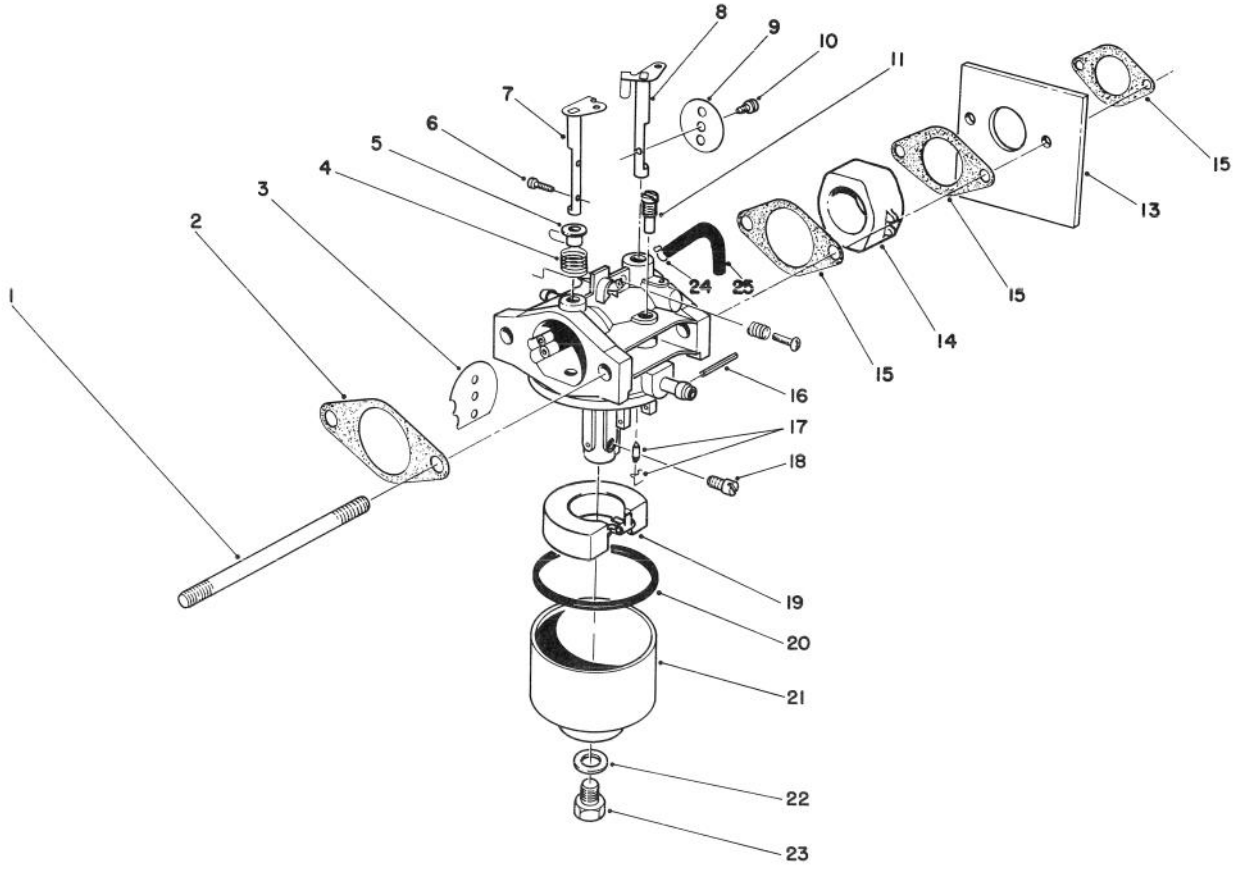


T-0665

CARBURETOR ASSEMBLY (Engine No. 47PK9)

Ref. No.	Part No.	Description	No. Used
1	81-5450	Stud - Carburetor Bolt	2
2	81-0090	Gasket - Air Cleaner	1
3	81-0240	Valve - Choke	1
4	81-0230	Spring - Choke	1
5	81-0220	Bushing - Choke Valve	1
6	81-2160	Screw	2
7	81-1950	Shaft - Choke	1
8	81-0250	Shaft - Throttle	1
9	81-0260	Valve - Throttle	1
10	81-0270	Screw - Throttle Valve	1
11	81-1030	Jet - Pilot (#40)	1
13	81-5490	Shield - Carburetor	1
14	81-5440	Insulator - Carburetor	1
15	81-0780	Gasket	3
16	81-5600	Pin	1

Ref. No.	Part No.	Description	No. Used
17	81-4910	Needle Valve/Spring Wire	1
18	81-1060	Jet - Main (#75)	1
*	81-2340	Jet - Main (#72.5) High Alt. (Above 6000 ft.) Optional	1
19	81-0970	Float	1
20	81-1010	Gasket - Float Bowl	1
21	81-5660	Bowl - Float	1
22	81-5720	Gasket - Float Bowl Drain	1
23	81-5670	Screw - Float Bowl Drain	1
24	81-5460	Clamp - Vent Tube	1
25	81-5470	Tube - Vent	1
*	12-6379	Carburetor Kit (Incl. Ref. #2, 15, 17, 20 & 22)	1
*	81-5430	Carburetor Assy. Complete	1

*Not Illustrated

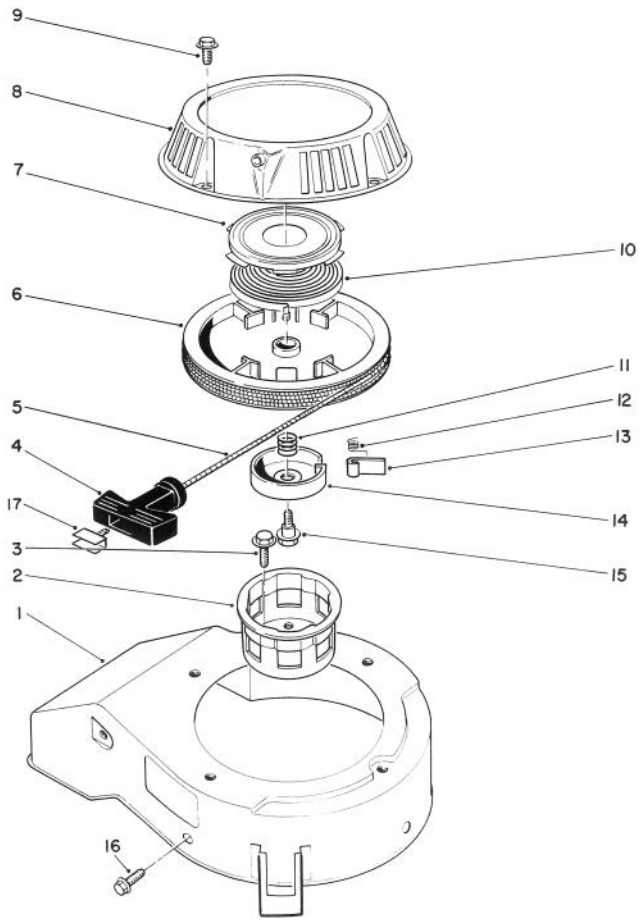


T-0668

RECOIL ASSEMBLY
(Engine Model No. 47PK9)

Ref. No.	Part No.	Description	No. Used
1	81-2070	Cover - Cooling Fan	1
2	81-1290	Cup - Starter Pulley	1
3	81-1300	Bolt	3
4	81-1630	Handle - Recoil	1
5	81-1270	Rope	1
6	81-1210	Reel - Rope Pulley	1
7		Retainer - Recoil Spring	1
8	81-2090	Case - Recoil	1
9	81-1280	Bolt	4
10		Spring - Recoil	1
11	81-1240	Spring - Compression	1
12	81-1220	Spring - Dog	1

Ref. No.	Part No.	Description	No. Used
13	81-1230	Dog	1
14	81-1250	Retainer - Dog	1
15	81-1260	Bolt - Shoulder	1
16	81-1170	Bolt - Self Tapping	3
17	81-5760	Insert - Recoil Handle	1
*	81-2041	Recoil Starter Assembly (Incl. Ref. #4-8 & 10-17)	1
*	81-2300	Spring & Retainer Assembly (Incl. Ref. #7 & 10)	1
*	81-5480	Starter Assembly (Incl. Ref. #4-8 & 10-15)	1

*Not Illustrated

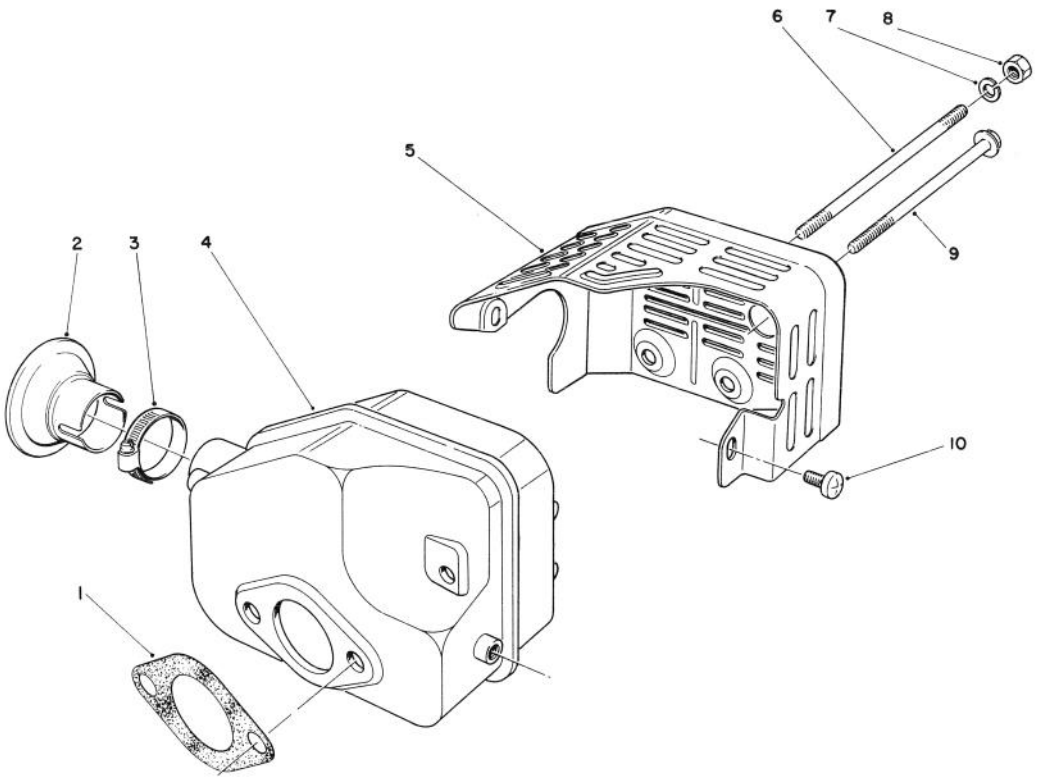

T-0667

MUFFLER ASSEMBLY (Engine No. 47PK9)

Ref. No.	Part No.	Description	No. Used
1	81-1080	Gasket - Muffler	1
2	81-0200	Spark Arrester (Optional)	1
3		Clamp	1
4	81-5690	Muffler	1
5	81-2450	Cover - Muffler	1
6	81-1100	Bolt	2
7	81-1120	Washer - Lock	2
8	81-1110	Nut	2
9	81-1150	Bolt - Self Tapping	1
10	81-1140	Screw - Phillips Hd	2

†Obtain Locally

Compliance with Radio Interference Regulations Certified.

Certifie Conforme au Reglement sur le Brouillage Radioelectrique.