Form No. 3358–546 Rev A

Reel Hose Drive Kit

Reelmaster® 5500–D

Part No. 104–9314

Installation Instructions

⚠ Warning ⚠

Hydraulic fluid escaping under pressure can penetrate skin and cause injury.

- **Make sure all hydraulic fluid hoses and lines are in good condition and all hydraulic connections and fittings are tight before applying pressure to the hydraulic system.**
- **Keep your body and hands away from pin hole leaks or nozzles that eject high pressure hydraulic fluid.**
- **Use cardboard or paper to find hydraulic leaks.**
- **Safely relieve all pressure in the hydraulic system before performing any work on the hydraulic system.**
- **Get immediate medical help if fluid is injected into skin.**

1. Using the diagram below, locate and remove the hoses to be replaced.

Note: When removing the old hoses, remember how they were routed through components in the machine.

2. Replace the old hoses and O–rings with the appropriate new ones. The part number of each new hose is shown on the diagram.

Important Before installing any hydraulic hoses, make sure the correct O–rings are in position and lubricated with hydraulic oil.

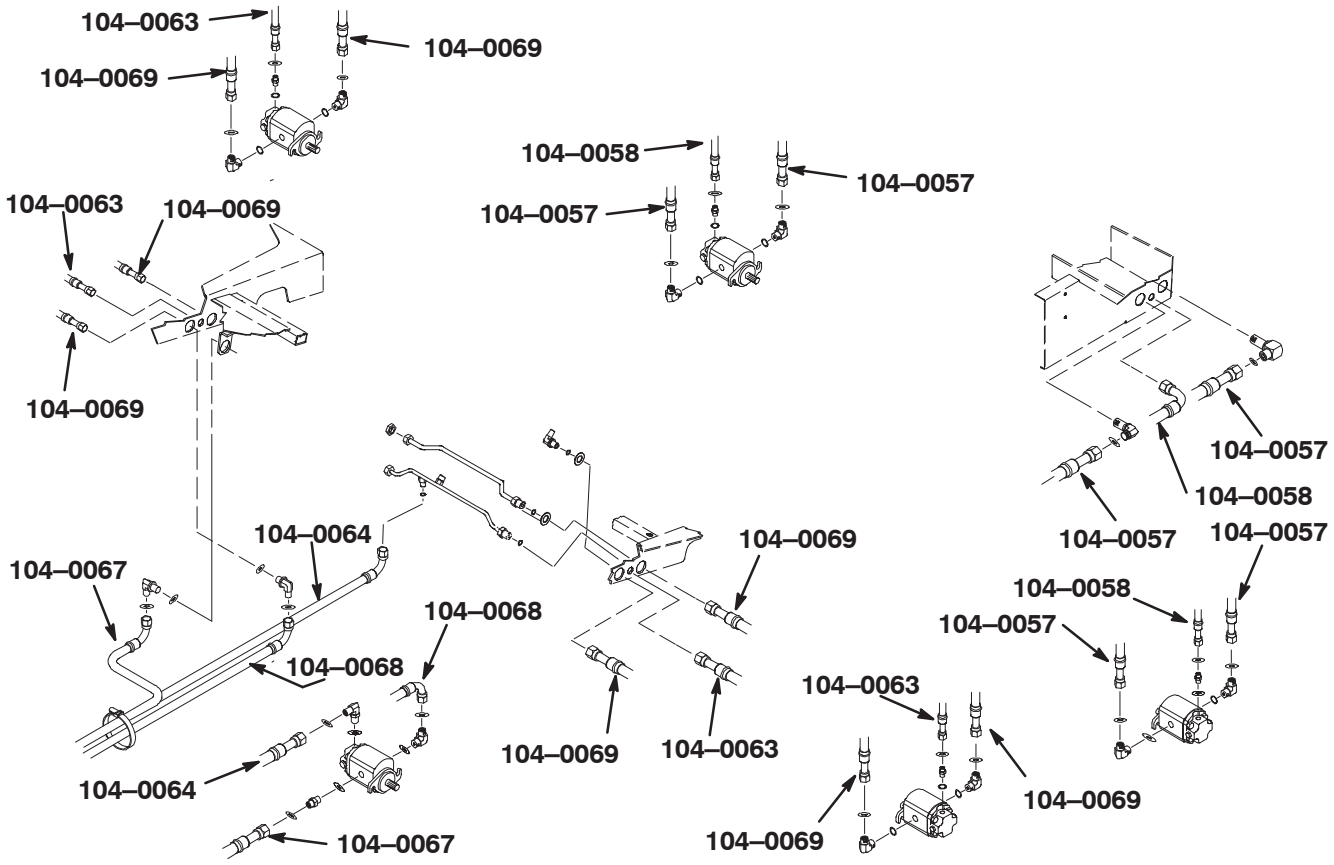

Figure 1

© 2007 by The Toro Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196

All Rights Reserved
Printed in the USA