Form Number 3358-591 Rev A

Power Max 1128OXE
Snowthrower

Model No. 38651 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2007
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Auger and Housing Assembly	3
28 Inch Auger Gearcase Assembly No. 108-7329	4
Chute Assembly	5
Frame Assembly	6
Handle and Control Assembly	8
Handle Assembly	9
Lever Chute Control Assembly	10
Engine Assembly	11
Wheel Clutch Assembly	12
Wheel Clutch Sprocket Assembly	13
Engine Assembly No. 1 Tecumseh OH318SA-221847B	14
Engine Assembly No. 2 Tecumseh OH318SA-221847B	16
Carburetor Assembly No. 640169 Tecumseh OH318SA-221847B	18
Rewind Starter No. 590749 Tecumseh OH318SA-221847B	19
Electric Starter Assembly No. 37102 Tecumseh OH318SA-221847B	20
Attachments and Accessories List	21

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Obtain from your local Tecumseh dealer

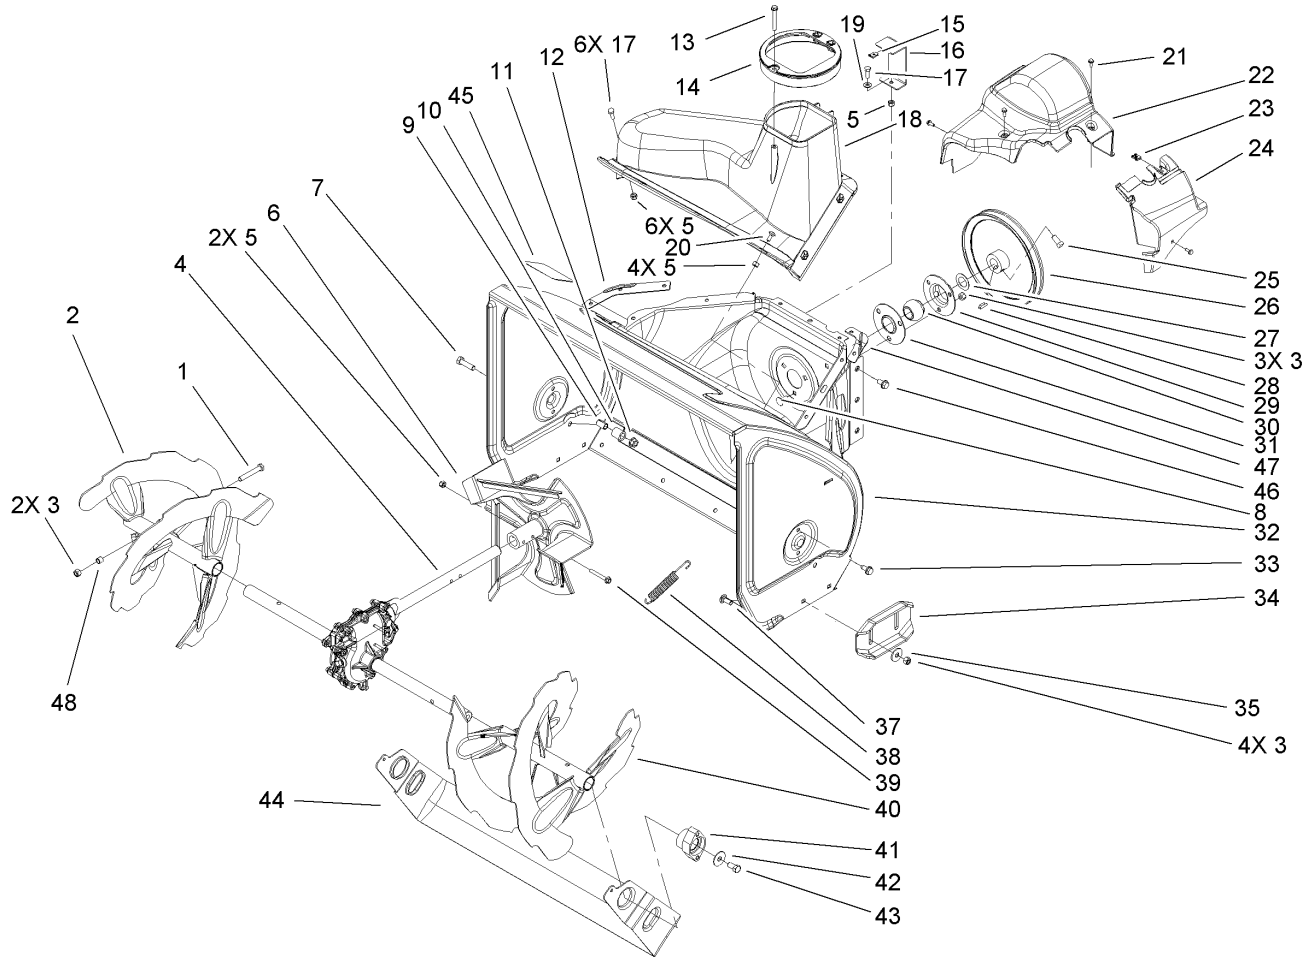

Auger and Housing Assembly

Ref	Part No.	Qty.	Description
1	322-11	2	Screw-HH
2	106-7291-03	1	Auger-RH
3	3296-29	9	Nut-Lock, NI
4	108-7329	1	28 Inch Auger Gearcase ASM
5	3296-42	13	Nut-Lock, NI
6	106-4576-03	1	Impeller ASM
7	323-29	2	Screw-HH
8	3230-23	3	Screw-CARR
9	106-4501	2	Spacer-Scraper, Stop
10	106-7318	2	Cushion-Scraper, Stop
11	32128-21	2	Nut-HF
12	107-1017-03	1	Seal-Flange, Cover
13	107-3003	1	Screw-Plastite
14	107-3006	1	Guide-Chute
15	107-1013	1	Nut-Speed, U-Type
16	107-1014-03	1	Bracket-Cover, Clip Nut
17	321-4	7	Screw-HH
18	108-0017	1	Cover
19	3256-22	1	Washer-Flat
20	3229-1	4	Screw-CARR
21	32144-112	4	Screw-HWH
22	107-1001	1	Cover-Belt
23	701493	1	Nut-Speed
24	107-1016	1	Cover-Extension, Belt

Ref	Part No.	Qty.	Description
25	3242-4	2	Screw-Set, SQH
26	62-1300	1	Pulley-Impeller
27	252-80	1	Washer-Thrust
28	3257-23	1	Key-Woodruff
29	26-6110	1	Flange-Cup, Bearing
30	63-3450	1	Bearing-Ball
31	26-6120	1	Flange-Cup, Bearing
32	107-3824	1	Housing- Auger, 28 Inch
33	32144-70	4	Screw-HWHTF
34	106-4588-01	2	Skid
35	52-2861	4	Washer
37	3230-16	4	Screw-CARR
38	106-4502	2	Spring-Scraper
39	321-44	2	Screw-HHF
40	106-7301-03	1	LH Auger ASM
41	106-4570	2	Auger-Bearing
42	3-0750	2	Washer
43	323-4	2	Screw-HH
44	106-4590-01	1	Scraper-28 Inch, Pivoting
45	107-3040	1	Decal-Danger, Auger
46	32144-14	6	Screw-HWHTF
47	108-0039-03	1	Seal
48	1-633545	2	Spacer

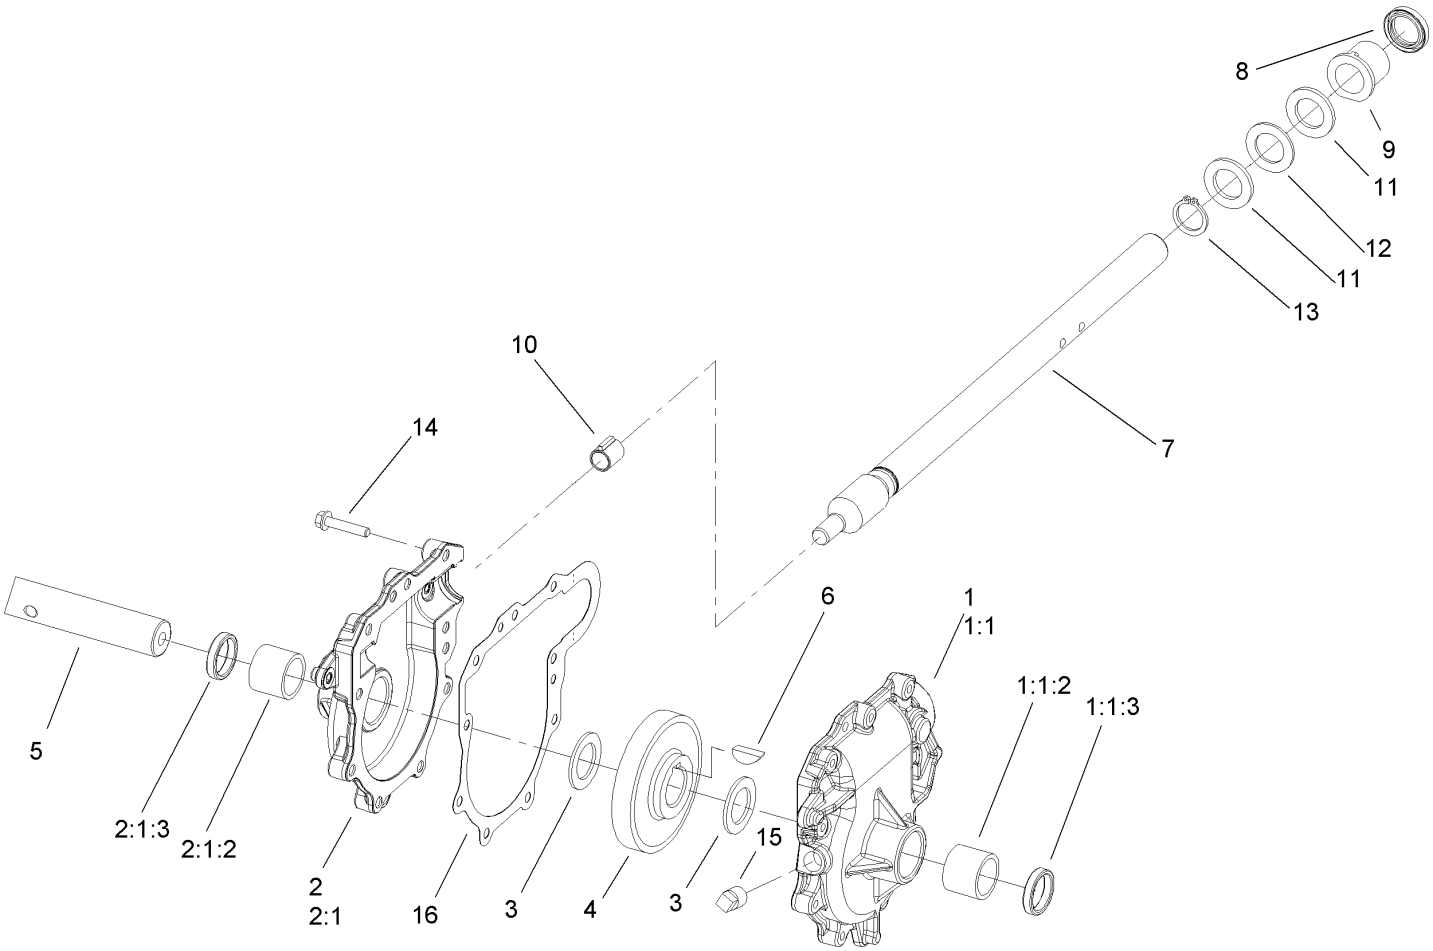

28 Inch Auger Gearcase Assembly No. 108-7329

Ref	Part No.	Qty.	Description
1	108-7325	1	LH Auger Gearcase ASM
❷1:1		1	Gearcase-Auger, LH
1:1:2	112-6635	1	Bushing-Sleeve
1:1:3	7-0045	1	Seal-Oil
2	108-7327	1	RH Auger Gearcase ASM
❷2:1		1	Gearcase-Auger, RH
2:1:2	112-6635	1	Bushing-Sleeve
2:1:3	7-0045	1	Seal-Oil
3	252-71	2	Washer-Thrust
4	62-0120	1	Gear-Helical
5	106-4421	1	Shaft-Auger
6	3257-10	1	Key-Woodruff
7	66-7811	1	Shaft-Impeller
8	253-149	1	Seal-Oil
9	37-6560	1	Bushing-Input
10	62-1150	1	Bushing-Worm
11	252-78	2	Bearing-Thrust
12	252-76	1	Bearing-Thrust
13	32151-33	1	Ring-Retaining, EXT
14	108-4862	9	Screw-HWHTF
15	281-1	1	Plug-Pipe, SQH
16	108-7330	1	Gasket-Gearcase, Auger

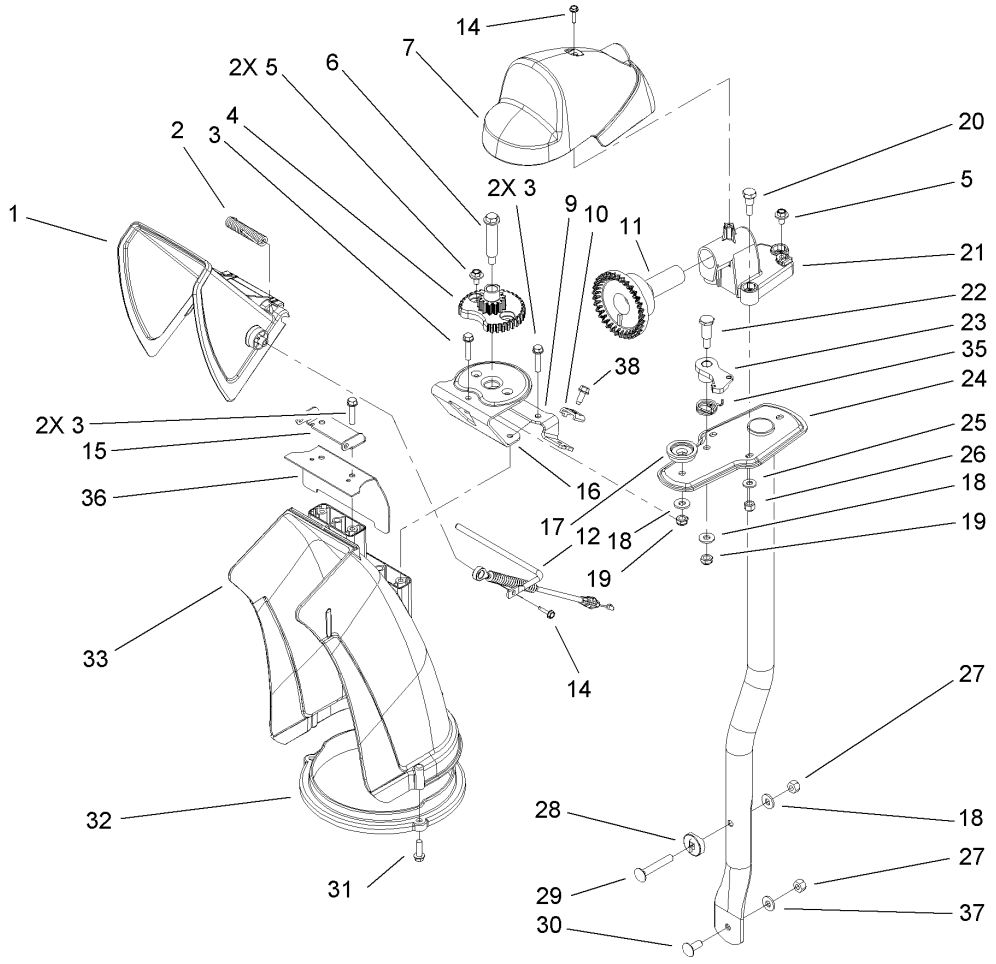

Chute Assembly

Ref	Part No.	Qty.	Description
1	112-6629	1	Deflector-Chute, Ce
2	106-4594	1	Spring-Torsion
3	46-8092	5	Screw-Plastite
4	106-4472	1	Gear-Chute
5	46-6810	3	Screw And Washer ASM
6	100-9880	1	Bolt-Shoulder
7	106-4585	1	Cover-Gear, Chute
9	106-7296	1	Bracket-Cable, Clamp
10	106-7297	1	Clamp-Cable
11	106-4471	1	Gear-Face
12	107-1021	1	Rod-Deflector
14	98-1375	2	Screw-HWH
15	106-7266	1	Bracket-Deflector
16	106-4582-03	1	Bracket-Support, Chute
17	106-4422	1	Spacer-Chute
18	3256-2	3	Washer-Flat
19	3296-47	2	Nut-Lock, NI
20	106-7276	3	Screw-Shoulder
21	106-7257	1	Mount-Gear, Face
22	63-2650	1	Screw-Shoulder
23	106-4476	1	Latch-Chute
24	106-7253-03	1	Tube-Support
25	3256-22	3	Washer-Flat
26	3296-42	3	Nut-Lock, NI

Ref	Part No.	Qty.	Description
27	3296-29	2	Nut-Lock, NI
28	106-7260	1	Washer-Curved
29	3230-5	1	Screw-CARR
30	3230-23	1	Screw-CARR
31	46-8091	3	Screw-HWH
32	105-9991	1	Ring-Chute
33	106-4440	1	Chute-Discharge
35	108-7315	1	Spring-Torsion
36	108-5052	1	Seal-Chute
37	3290-456	1	Washer-Belleville
38	32144-10	1	Screw-HWH

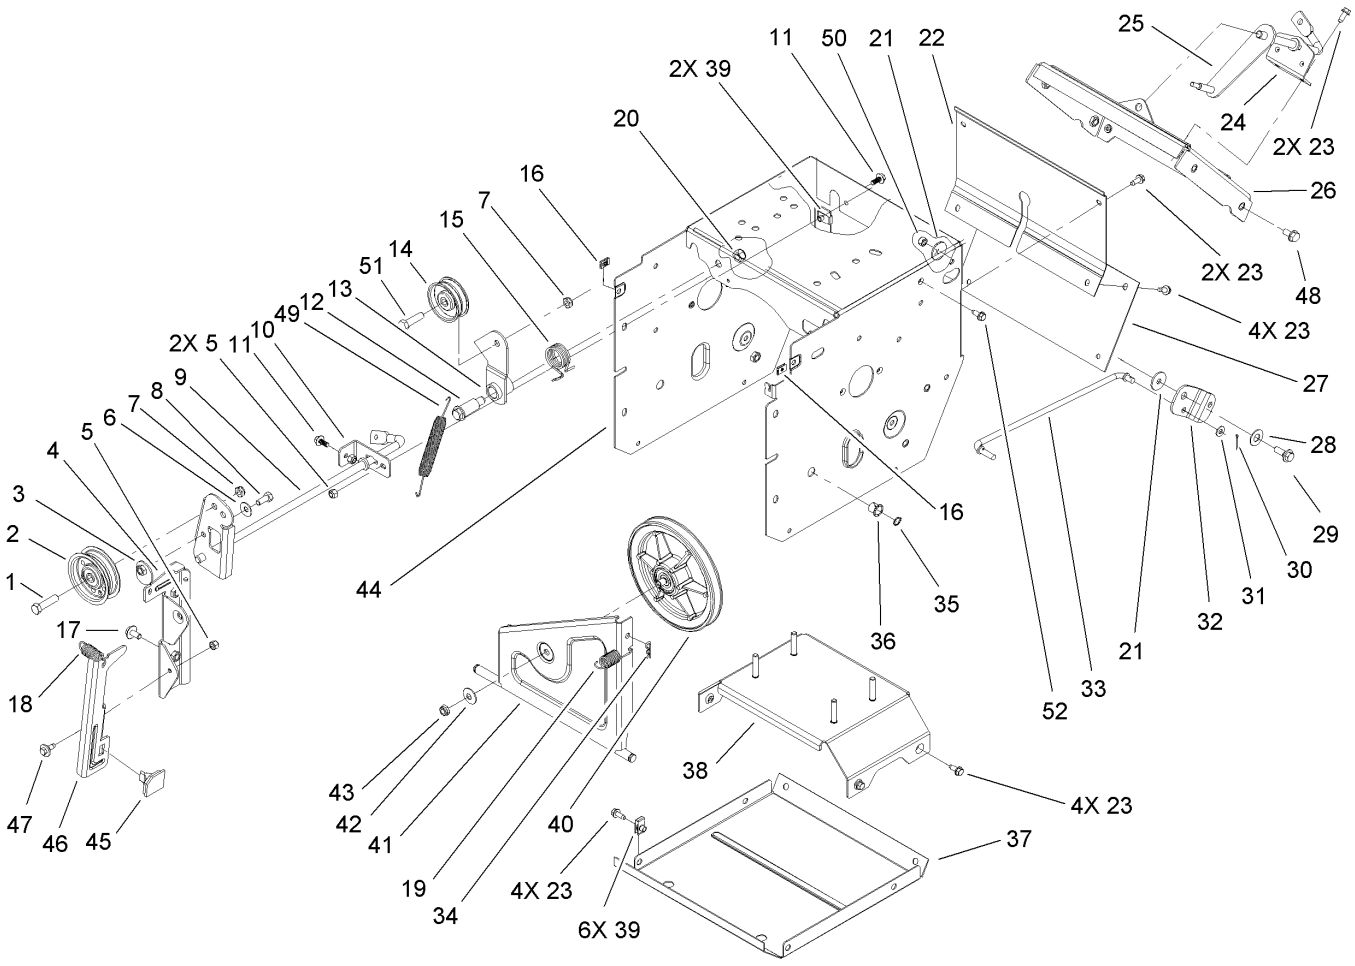

Frame Assembly

Ref	Part No.	Qty.	Description
1	323-8	1	Screw-HH
2	92-7104	1	Pulley-Idler
3	107-1047	1	Nut
4	107-1039	1	Bracket-Idler, Impeller
5	3296-42	3	Nut-Lock, NI
6	3290-456	1	Washer-Belleville
7	3296-59	2	Nut-Lock, NI
8	322-3	1	Screw-HH
9	107-3838-03	1	Impeller Clutch ASM
10	106-7341	1	Bracket-Rear, Clutch
11	99-6810	2	Screw-HH
12	108-5056	1	Bolt-Shoulder
13	108-5058	1	Arm-Idler, Traction
14	3-4244	1	Pulley-Idler
15	108-7332	1	Spring-Torsion
16	107-1013	2	Nut-Speed, U-Type
17	3234-7	2	Screw-HHF
18	107-3829	1	Spring-Extension
19	107-1003	1	Spring-Extension
20	3296-76	1	Nut-Lock, NI
21	5-4460	2	Washer-Pivot
22	108-0022-01	1	Cover-Upper
23	32144-10	16	Screw-HWH
24	108-0036	1	Bracket-Rod, Shift

Ref	Part No.	Qty.	Description
25	106-7268	1	Lever-Control, Traction
26	108-0026-01	1	Shift Plate ASM
27	106-7345-01	1	Cover-Lower
28	25-5640	1	Washer
29	27-0410	1	Screw-Shoulder
30	3272-4	1	Pin-Cotter
31	3256-23	1	Washer-Flat
32	107-1011	1	Bellcrank-Drive
33	106-4467	1	Link-Control, Speed
34	3290-307	1	Pin-Hair
35	32151-61	2	Ring-Retaining
36	256-257	2	Bushing-Nyliner
37	106-7330-01	1	Pan-Bottom
38	106-7315	1	Brace Frame ASM
39	107069	8	Clip
40	108-0031	1	Traction Pulley ASM
41	108-7307	1	Friction Wheel Bracket ASM
42	3290-340	1	Washer-Belleville
43	3296-5	1	Nut-Lock
44	114-9259-01	1	Traction Frame ASM
45	66-8060	1	Pad-Brake
46	107-1000	1	Arm-Brake
47	92-9698	1	Screw-Shoulder
48	32144-14	4	Screw-HWHTF

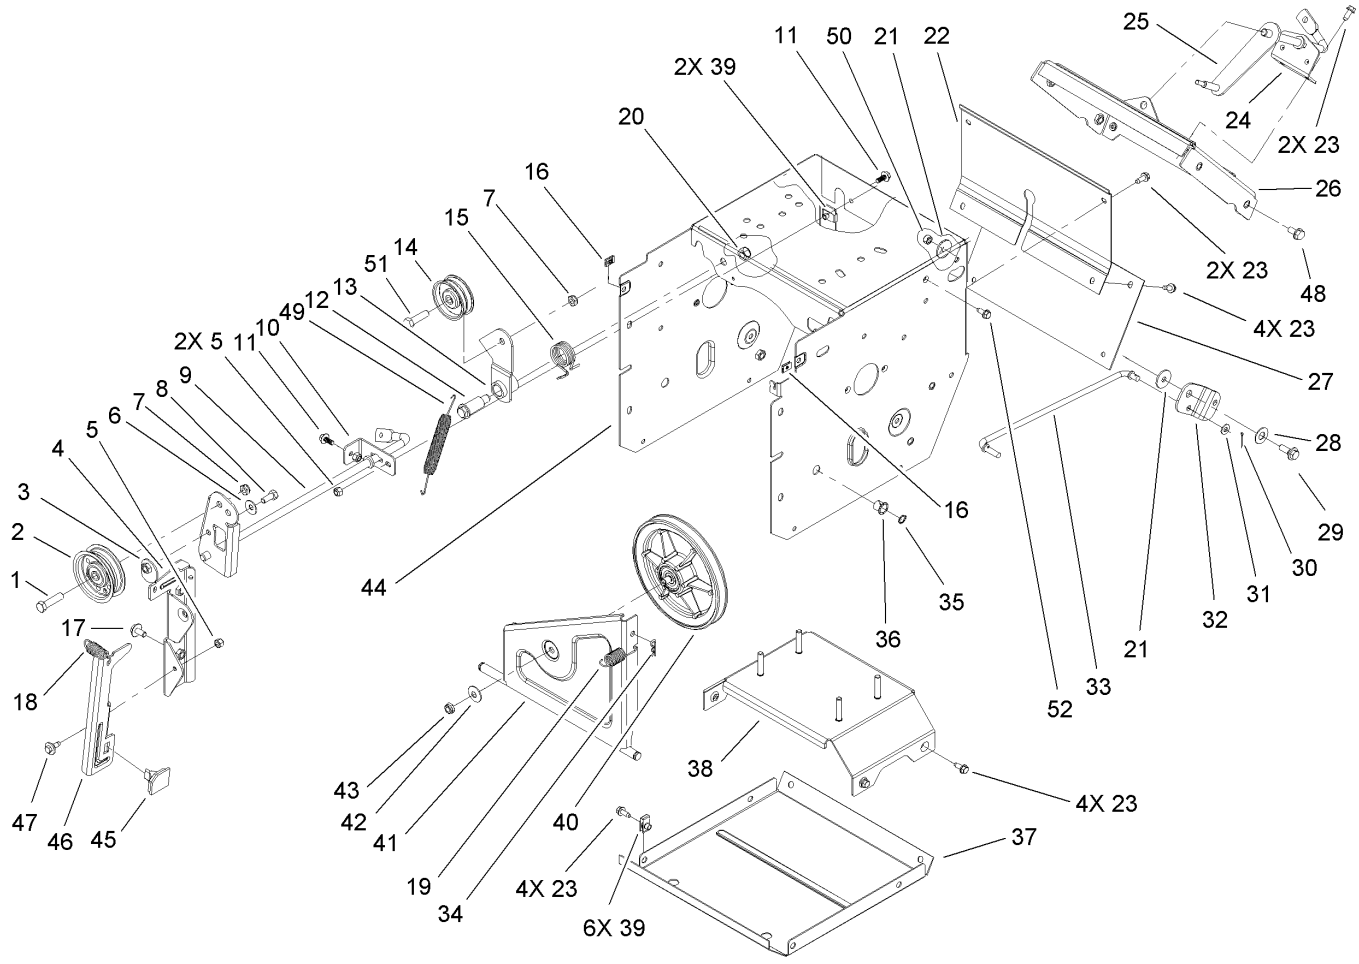

Frame Assembly (continued)

Ref	Part No.	Qty.	Description
49	108-2976	1	Spring-Extension
50	3296-29	1	Nut-Lock, NI
51	323-29	1	Screw-HH
52	32144-4	1	Screw-HWH

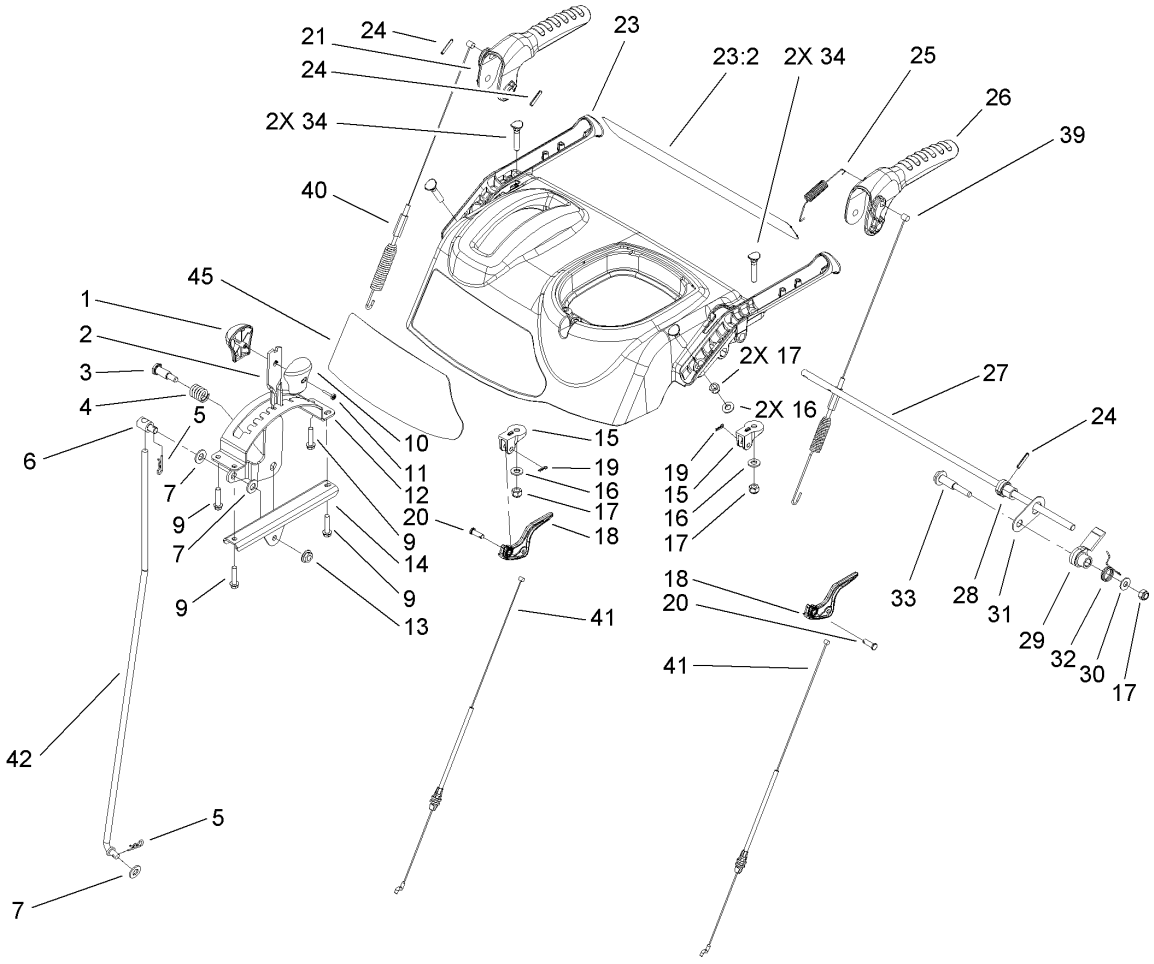

Handle and Control Assembly

Ref	Part No.	Qty.	Description
1	106-4423	1	Knob-Shift, RH
2	106-7278-03	1	Selector-Speed
3	63-2650	1	Screw-Shoulder
4	108-7313	1	Spring-Compression
5	3290-307	2	Pin-Hair
6	110-3446	1	Trunion-Rod
7	3256-24	3	Washer-Flat
9	46-8092	4	Screw-Plastite
10	105-9999	1	Knob-Shift, LH
11	94-4496	1	Screw-PPH
12	106-7277-03	1	Guide-Selector, Speed
13	32128-13	1	Nut-HF
14	106-7279-03	1	Mount-Selector, Speed
15	105-9980	2	Mount-Clutch, Lever
16	3256-70	4	Washer-Flat
17	3296-72	5	Nut-Lock, NI
18	106-4505	2	Lever-Clutch
19	108-2992	2	Pin-Hair
20	1-808265	2	Pin-Clevis
21	106-4413	1	Lever-Auger
23	112-6633	1	Panel-Control
23:2	112-6627	1	Decal-Back, Control Panel
24	32121-125	3	Pin-Spring
25	107-3001	1	Spring-Tension

Ref	Part No.	Qty.	Description
26	106-4410	1	Lever-Traction
27	105-9996	1	Rod-Lockout
28	107-1043	1	Cam-Lockout
29	108-0023	1	Latch-Lockout
30	98-3499	1	Washer-Flat
31	107-3000	1	Link-Lockout
32	108-0024	1	Spring-Torsion
33	106-4412	1	Screw-Shoulder
34	107-3018	4	Screw-Handle
39	106-4563	1	Cable-Traction
40	107-3830	1	Cable-Auger
41	107-8896	2	Cable-Clutch
42	107-1005	1	Rod-Shift
45	112-8126	1	Decal-Control Panel

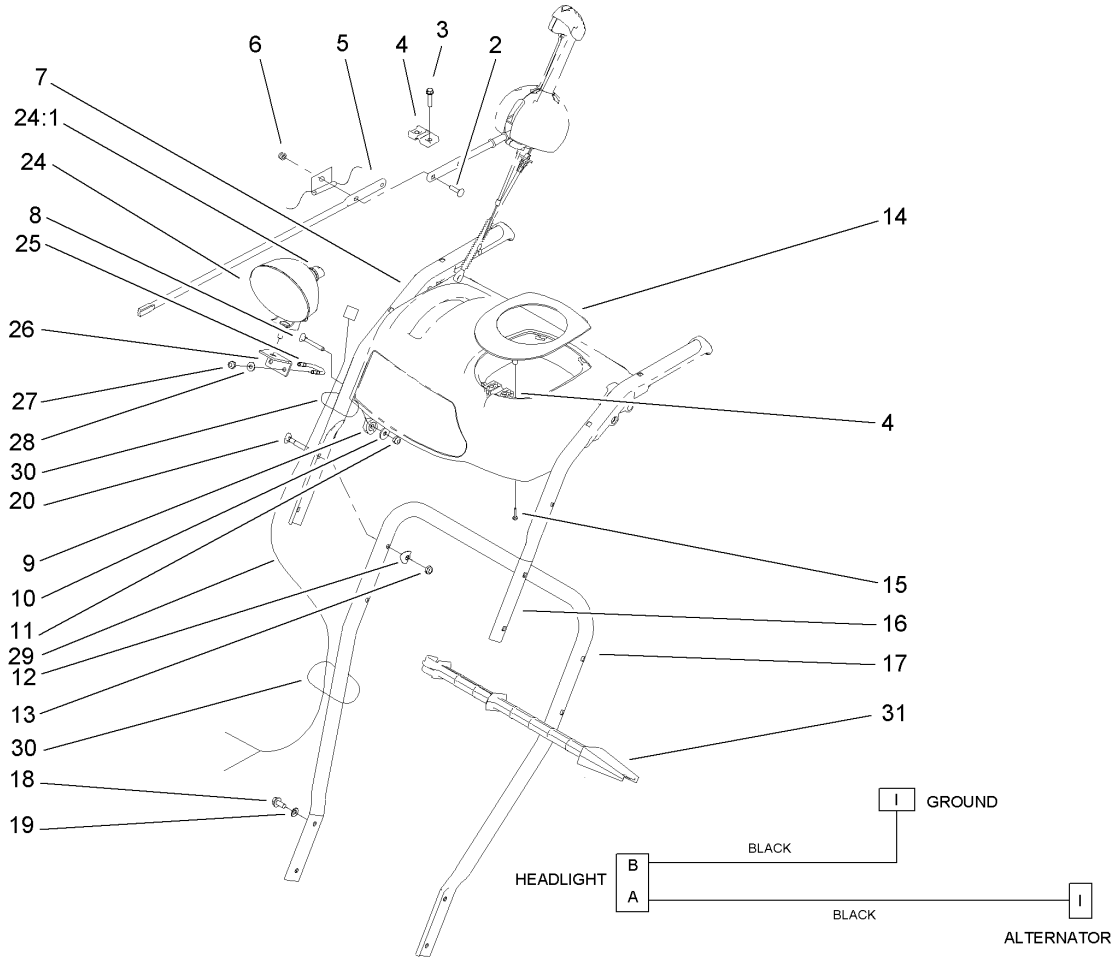

Handle Assembly

Ref	Part No.	Qty.	Description
2	3229-30	2	Screw-CARR
3	46-8092	2	Screw-Plastite
4	105-9987	2	Support-Rod
5	106-7283	1	Rod-Chute, Front
6	3296-73	2	Nut-Lock, NI
7	108-0038-03	1	Handle-Upper, RH
8	95-4453	2	Screw
9	106-4509	2	Clamp-Cable
10	87-6630	2	Washer-Plain
11	3296-73	2	Nut-Lock, NI
12	107-3844	4	Washer
13	3296-72	4	Nut-Lock, NI
14	106-4586	1	Cover-Panel, Control
15	94-4496	2	Screw-PPH
16	108-0037-03	1	Handle-Upper, LH
17	105-9981-03	1	Handle-Lower
18	32144-14	4	Screw-HWHTF
19	3290-475	4	Washer-Belleville
20	92-2260	4	Screw-Handle
24	106-4510	1	Headlamp ASM
24:1	108-0008	1	Lamp-12 Volt
25	107-3024	1	Clamp-Light
26	107-1020-03	1	Bracket-Light
27	3296-73	2	Nut-Lock, NI

Ref	Part No.	Qty.	Description
28	3256-1	2	Washer-Flat
29	106-4511	1	Harness-Wire
30	614249	2	Strap-Tie
31	110-3408	1	Stick-Cleanout

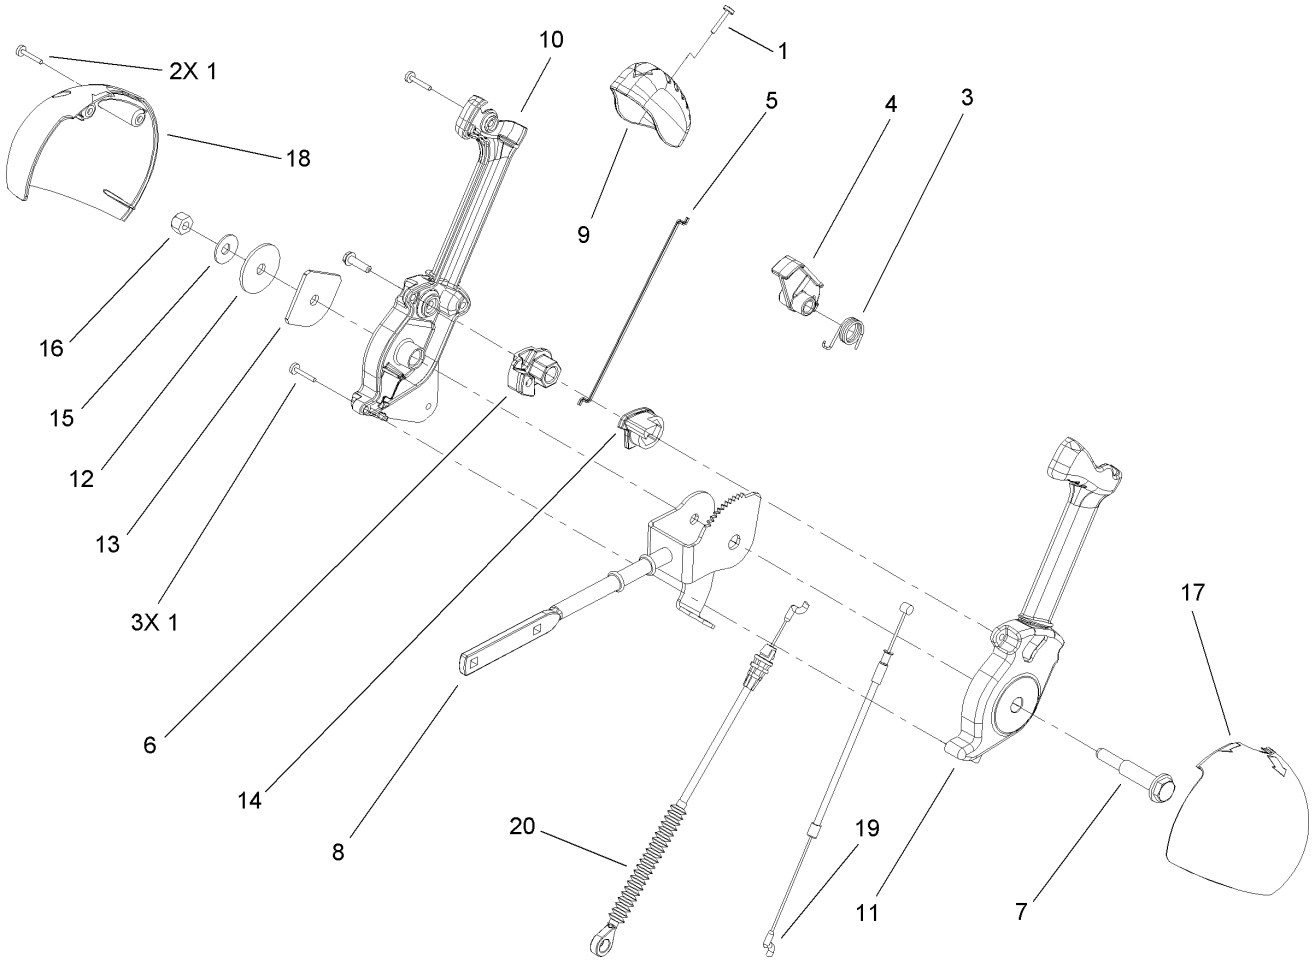

Lever Chute Control Assembly

Ref	Part No.	Qty.	Description
1	94-4496	6	Screw-PPH
3	105-9982	1	Spring-Torsion
4	105-9984	1	Trigger-Latch
5	105-9985	1	Link-Latch
6	105-9988	1	Lever-Cable, Deflector
7	105-9995	1	Screw-Shoulder
8	106-4479	1	Rod-Control, Chute
9	106-7280	1	Cap-Lever
10	106-7281	1	Lever-Chute Control, RH
11	106-7282	1	Lever-Chute Control, LH
12	107-3002	1	Washer-Nylon
13	106-7295	1	Plate-Friction
14	106-7310	1	Pawl-Latch
15	3290-456	1	Washer-Belleville
16	3296-29	1	Nut-Lock, NI
17	105-9986	1	Cover-Chute Lever, LH
18	106-7292	1	Cover-Chute Lever, RH
19	105-9989	1	Cable-Release, Chute
20	105-9990	1	Cable-Control, Deflector

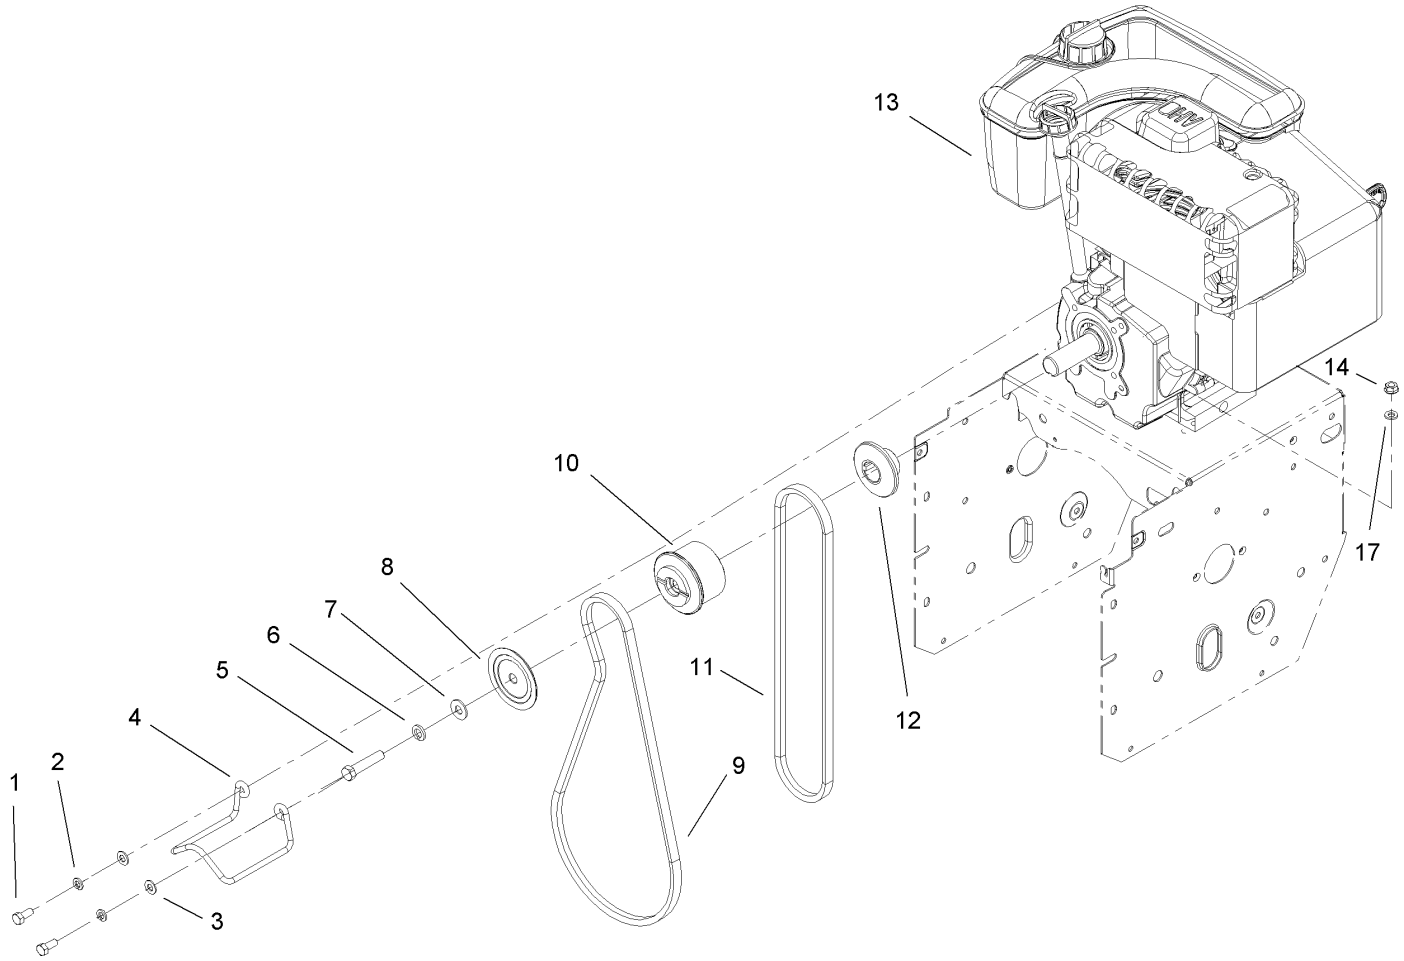

Engine Assembly

Ref	Part No.	Qty.	Description
1	3210-3	2	Screw-HH
2	3253-4	2	Washer-Lock
3	3256-23	2	Washer-Flat
4	107-3835	1	Guide-Belt
5	3212-8	1	Screw-HH
6	3253-6	1	Washer-Lock
7	3256-4	1	Washer-Flat
8	62-0940	1	Sheave-Half, Impeller
9	106-4498	1	Belt-V
10	106-7333	1	Pulley-Engine, Center
11	94-8812	1	V Belt-Traction
12	106-7334	1	Sheave-Half, Traction
❷❸13		1	Engine-Tecumseh, Oh318Sa-221847B
14	32128-20	4	Nut-HF
17	3256-2	1	Washer-Flat

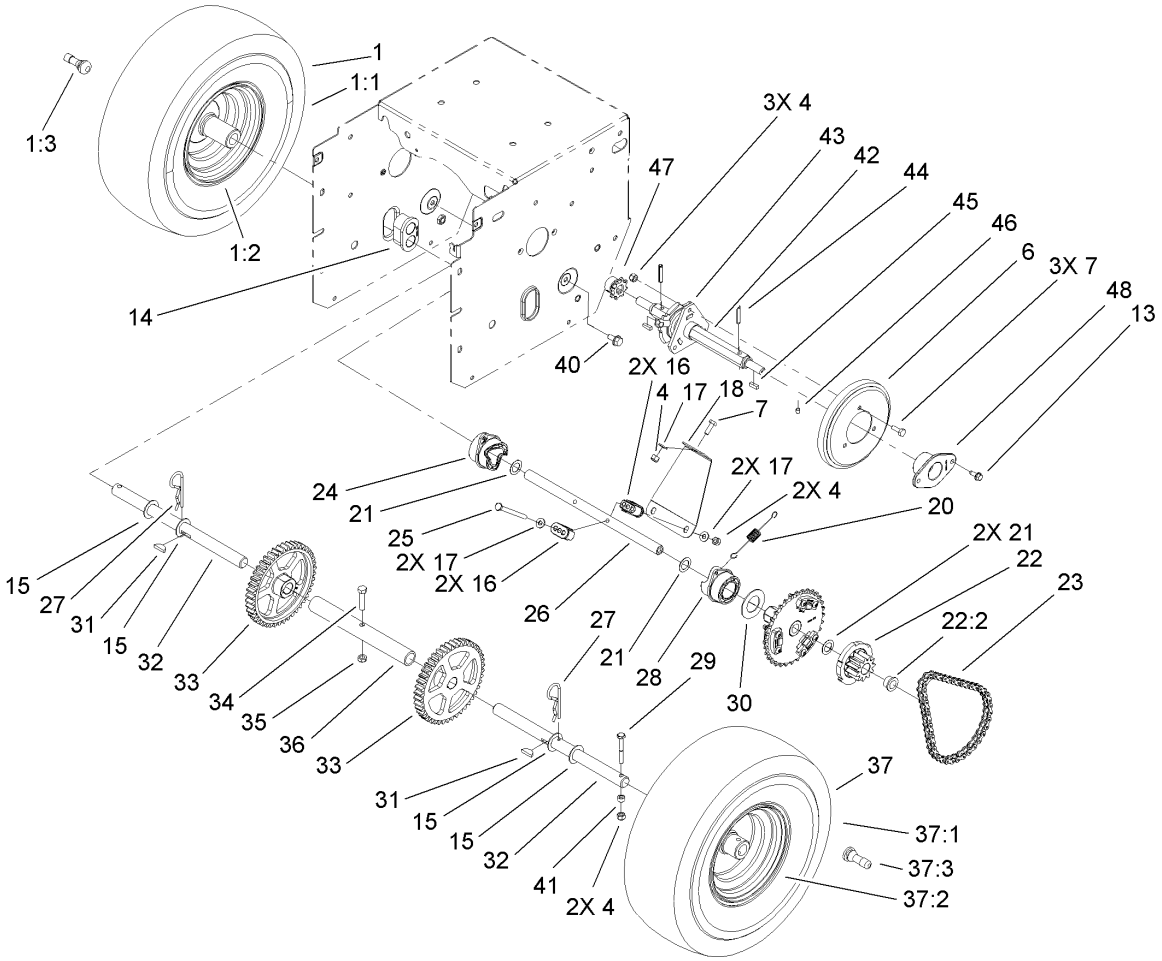

Wheel Clutch Assembly

Ref	Part No.	Qty.	Description
❷1		1	RH Wheel And Tire ASM
1:1	107-3042	1	Tire
1:2	107-3043	1	Rim-Tire
1:3	232-27	1	Stem-Valve
4	3296-42	8	Nut-Lock, NI
6	106-4480	1	Wheel-Friction
7	321-4	4	Screw-HH
13	32144-10	4	Screw-HWH
14	106-4558	2	Bearing-Axle
15	3-8664	4	Washer-Thrust
16	107-8889	4	Guide-Collar
17	3256-22	5	Washer-Flat
18	107-8892-03	1	Brace-Collar, Shift
20	107-8893	2	Spring-Extension
21	108-0015	4	Washer-Flat
22	107-8894	2	11T Gear ASM
22:2	108-2973	2	Bushing-Flange
23	108-0016	2	Chain-Roller
23	2710-6	2	Link-Connecting
24	107-8888	1	Collar-Shift, RH
25	321-23	2	Screw-HH
26	107-8883	1	Shaft-Intermediate
27	3290-343	2	Pin-Hair
28	107-8887	1	Collar-Shift, LH

Ref	Part No.	Qty.	Description
29	108-2975	2	Screw-HH
30	107-8891	2	Washer-Thrust
31	3257-7	2	Key-Woodruff
32	107-8898	2	Shaft-Axle
33	106-4572	2	Gear-Axle, 44 Tooth
34	322-17	1	Screw-HH
35	3296-47	1	Nut-Lock, NI
36	106-7259	1	Tube-Axle
❷37		1	LH Wheel And Tire ASM
37:1	107-3042	1	Tire
37:2	107-3043	1	Rim-Tire
37:3	232-27	1	Stem-Valve
40	32144-14	2	Screw-HWHTF
41	55-9370	2	Spacer-Blade, Rotor
42	108-7314	1	Shaft-Hex
43	106-4434	1	Trunion-Hex
44	32121-9	2	Pin-Roll, Slotted
45	94-8850	2	Key-Square
46	3245-32	4	Screw-HSH
47	106-7317	2	Sprocket-8 Tooth
48	108-7319	2	Retainer-Bearing

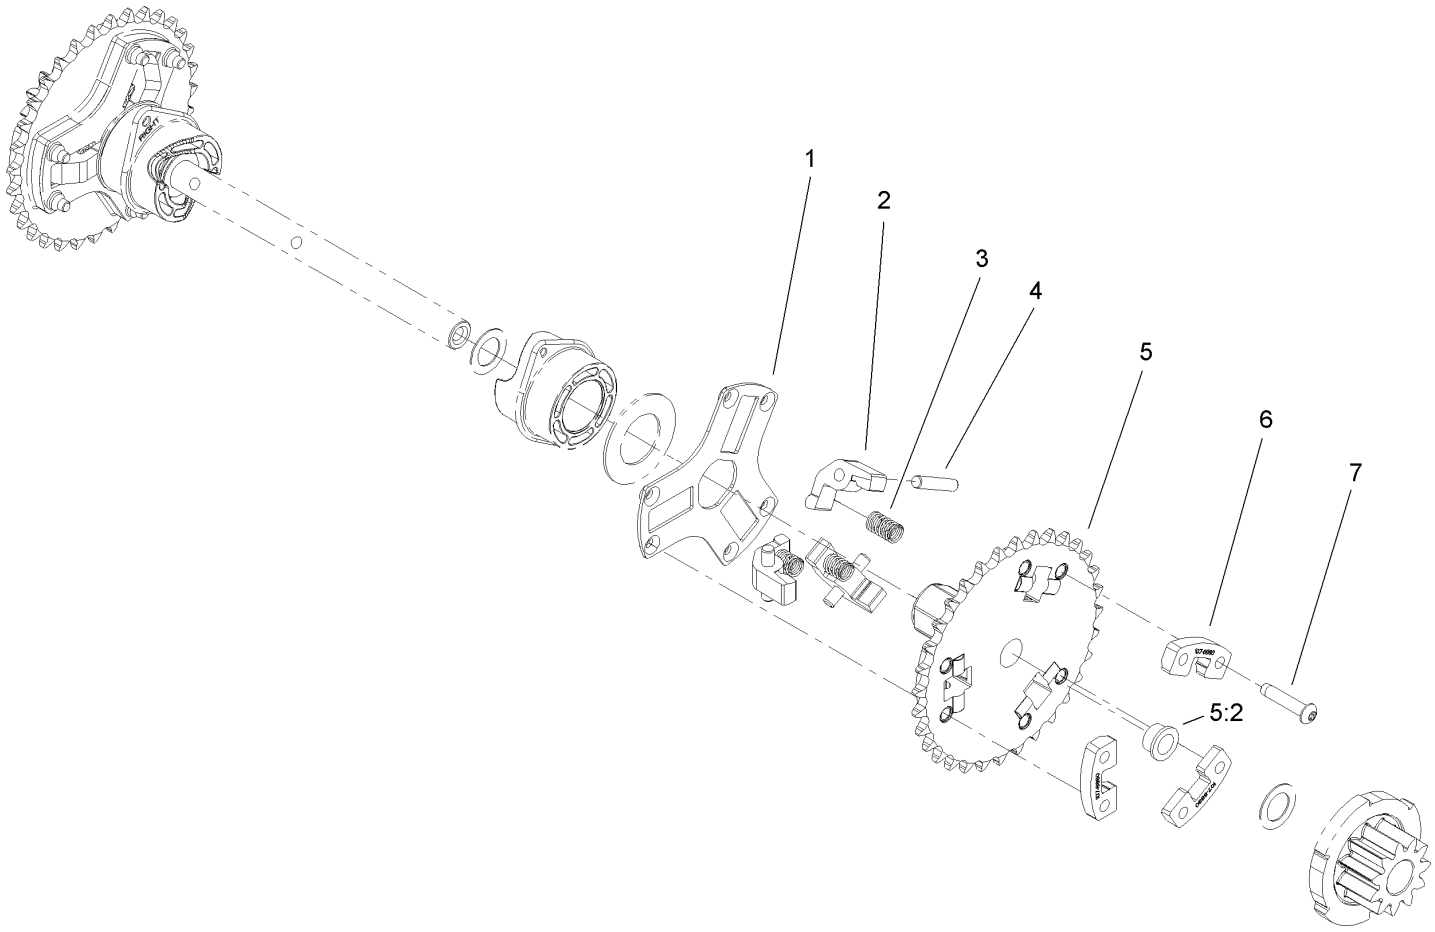

Wheel Clutch Sprocket Assembly

Ref	Part No.	Qty.	Description
1	107-8886	2	Retainer-Pawl Pin
2	107-8879	6	Pawl-Clutch
3	107-8885	6	Spring-Compression
4	107-8899	6	Pin-Dowel
5	107-8895	2	32T Sprocket ASM
5:2	108-2973	2	Bushing-Flange
6	107-8880	6	Support-Pawl
7	108-0035	12	Screw-Torx Button Head

Engine Assembly No. 1
Tecumseh OH318SA-221847B

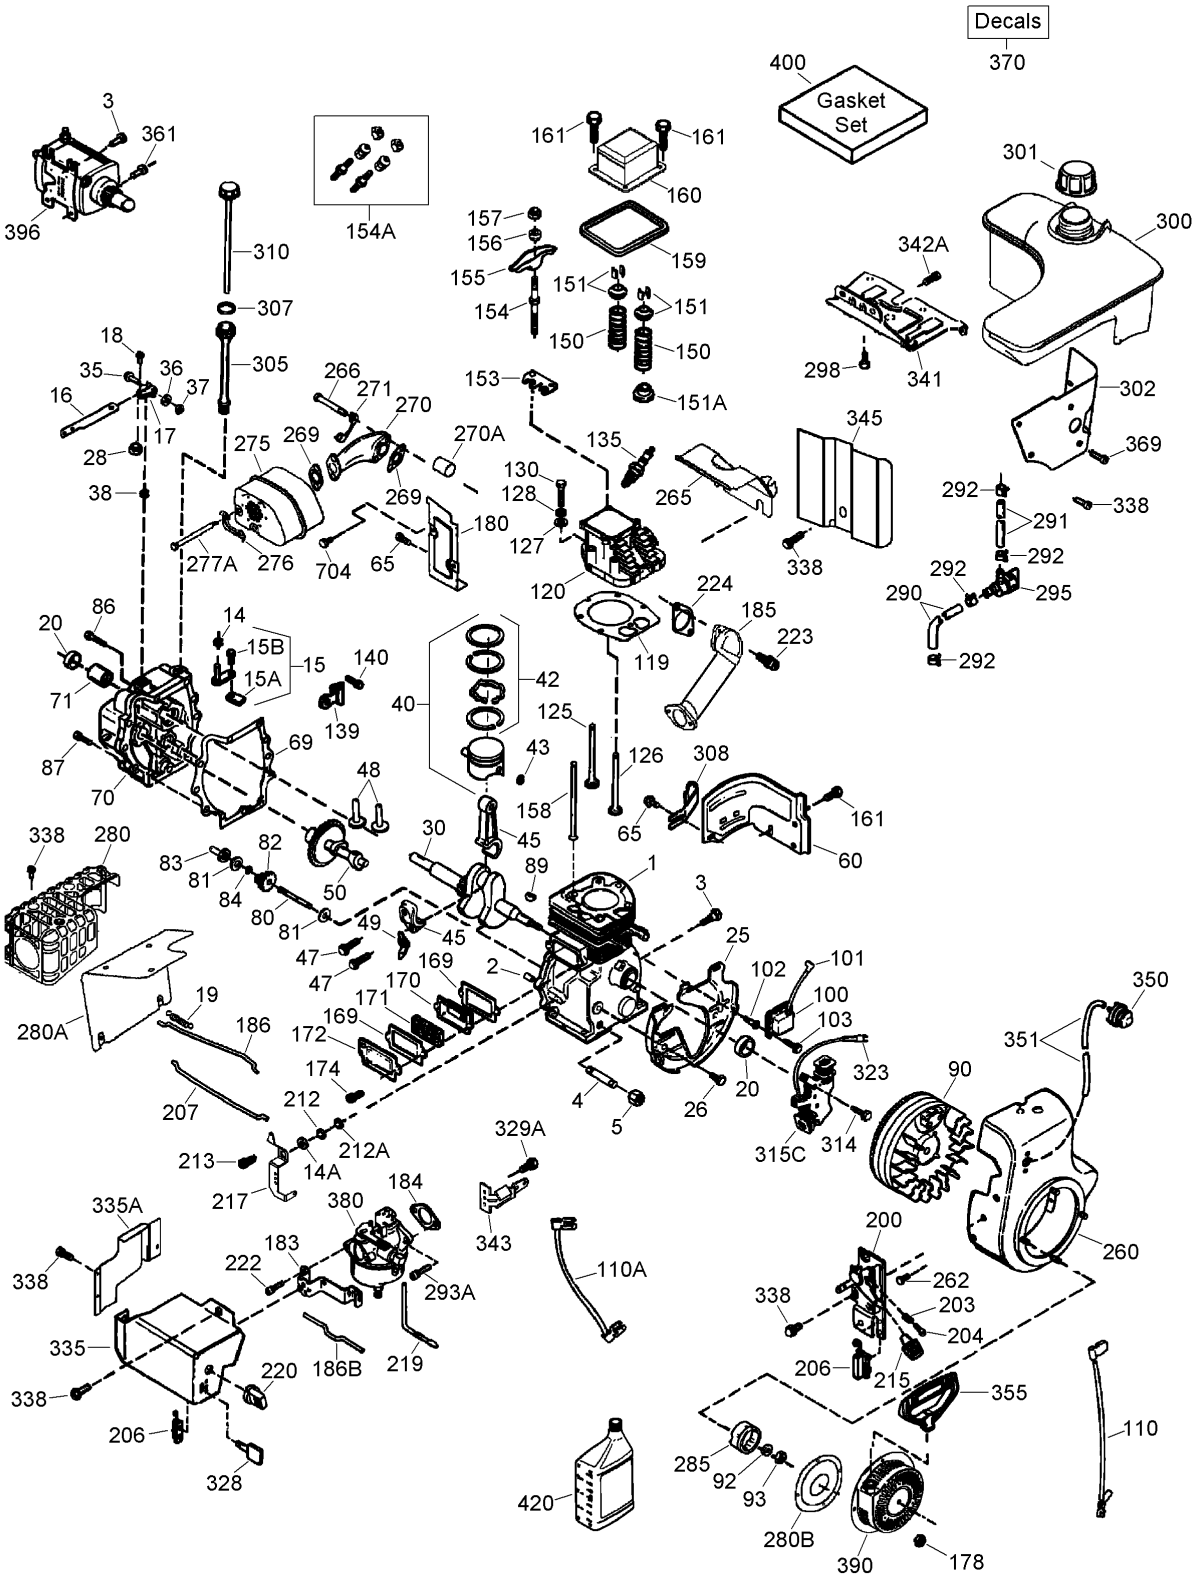

Engine Assembly No. 1
Tecumseh OH318SA-221847B

Ref	Part No.	Qty.	Description
❸1	37251	1	Cylinder (3-1/8 Bore) (Includes 2, 20)
❸2	27652	2	Pin-Dowel
❸3	650820	2	Screw-Shoulder (1/4-20 X 1/2) (Upper Mounting Screws)
❸4	34171	1	Extension-Drain, Oil (5-1/2 Inch) (1/4-18 Npt)
❸5	30969	1	Cap-Extension (1/4-18 Npt)
❸14	28277	1	Washer-Flat
❸14A	651057	1	Washer
❸15	30699C	1	Rod-Governor
❸15A	30700	1	Yoke-Governor
❸15B	650494	1	Screw (6-40X5/16)
❸16	37255A	1	Lever-Governor
❸17	29916	1	Clamp-Lever, Governor
❸18	651028	1	Screw (T-15, 8-32X7/16)
❸19	36281	1	Spring-Extension (Governor)
❸20	35319	2	Seal-Oil
❸25	37853	1	Baffle-Housing, Blower
❸26	650561	3	Screw (1/4-20X19/32)
❸28	30322	1	Nut-Lock (8-32)
❸30	37272	1	Crankshaft
❸35	29826	1	Screw (10-32X3/4)
❸36	29918	1	Washer-Lock (8)
❸37	29216	1	Nut-Lock (10-32)
❸38	29642	1	Ring-Retaining
❸40	40049	1	Piston, Pin And Ring Set (STD) (Includes 41, 42, 43)
❸40	40050	1	Piston, Pin And Ring Set (.010 O S) (Includes 41, 42, 43)
❸42	40013	1	Ring Set (STD)
❸42	40014	1	Ring Set (.010 O S)
❸43	27888	2	Ring-Retaining, Piston Pin
❸45	36897A	1	Connecting Rod ASM (Includes 47, 49)
❸47	651033A	2	Bolt-Rod, Connecting (1/4-20 X 1-5/16)
❸48	35313A	2	Lifter-Valve
❸49	36896	1	Dipper-Oil
❸50	37517	1	Camshaft (Mcr)
❸60	35316A	1	Extension-Housing, Blower
❸65	30200	3	Screw (10-24 X 9/16)
❸69	37342	1	Gasket-Cover, Cylinder
❸70	37847	1	Cover, Cylinder (Includes 20, 71, 80-84)
❸71	35377	1	Bushing-Crankshaft
❸80	37587	1	Shaft-Governor
❸81	651080	1	Washer
❸82	37588	1	Governor Gear ASM (Includes 81)
❸83	30588A	1	Spool-Governor
❸84	29193	1	Ring-Retaining
❸86	650833	7	Screw (1/4-20X1-3/16)
❸87	650832	1	Screw (1/4-20X1-11/16)
❸89	32589	1	Key-Flywheel

Ref	Part No.	Qty.	Description
❸90	611093	1	Flywheel ASM (3 Amp With Ring Gear)
❸92	650880	1	Washer-Belleville
❸93	650881	1	Nut-Flywheel (5/8-18)
❸100	35135A	1	Ignition-Solid State (Includes 101)
❸101	610118	1	Cover-Spark Plug
❸102	651024	2	Stud-Mounting, Solid State
❸103	651007	2	Screw (T-15, 10-24 X 15/16)
❸110	35187	1	Wire-Ground (13.65 Lg)
❸110A	37047	1	Wire-Ground (10.50 Lg)
❸119	37256	1	Gasket-Head, Cylinder
❸120	37516	1	Head-Cylinder (Includes 151A, 270A)
❸125	36934	1	Valve-Exhaust (STD)
❸126	36935	1	Valve-Intake (STD)
❸126	36937	1	Intake Valve (1/32)
❸127	650691	6	Washer-Flat
❸128	650690	6	Washer-Belleville
❸130	650697A	6	Screw (5/16-18 X 2-1/2)
❸135	34645	1	Spark Plug-Resistor (R N 4C)
❸139	33369	1	Bracket-Gear, Governor
❸140	650836	2	Screw (10-24X1/2)
❸150	33507	2	Spring-Valve
❸151	33508	2	Keeper-Spring, Valve
❸151A	35862	1	Cap-Spring, Valve
❸153	35949	1	Guide-Rod, Push
❸154	651105	2	Stud-Arm, Rocker
❸154A	730636A	1	Rocker Arm Stud And Bearing Kit (Includes 154, 156, 157)
❸155	35950	2	Arm-Rocker
❸156	37843	2	Bearing-Arm, Rocker
❸157	650586	2	Nut-Jam (5/16-24)
❸158	35466	2	Rod-Push
❸159	35952	1	Gasket-Cover, Rocker Arm
❸160	35953A	1	Cover-Arm, Rocker
❸161	30063	5	Screw (T-30, 1/4-20X1/2)
❸169	27896A	1	Gasket-Cover, Valve
❸170	28423	1	Body-Breather
❸171	28424	1	Element-Breather
❸172	38014	1	Cover-Valve
❸174	650128	1	Screw (10-24X1/2)

Engine Assembly No. 2
Tecumseh OH318SA-221847B

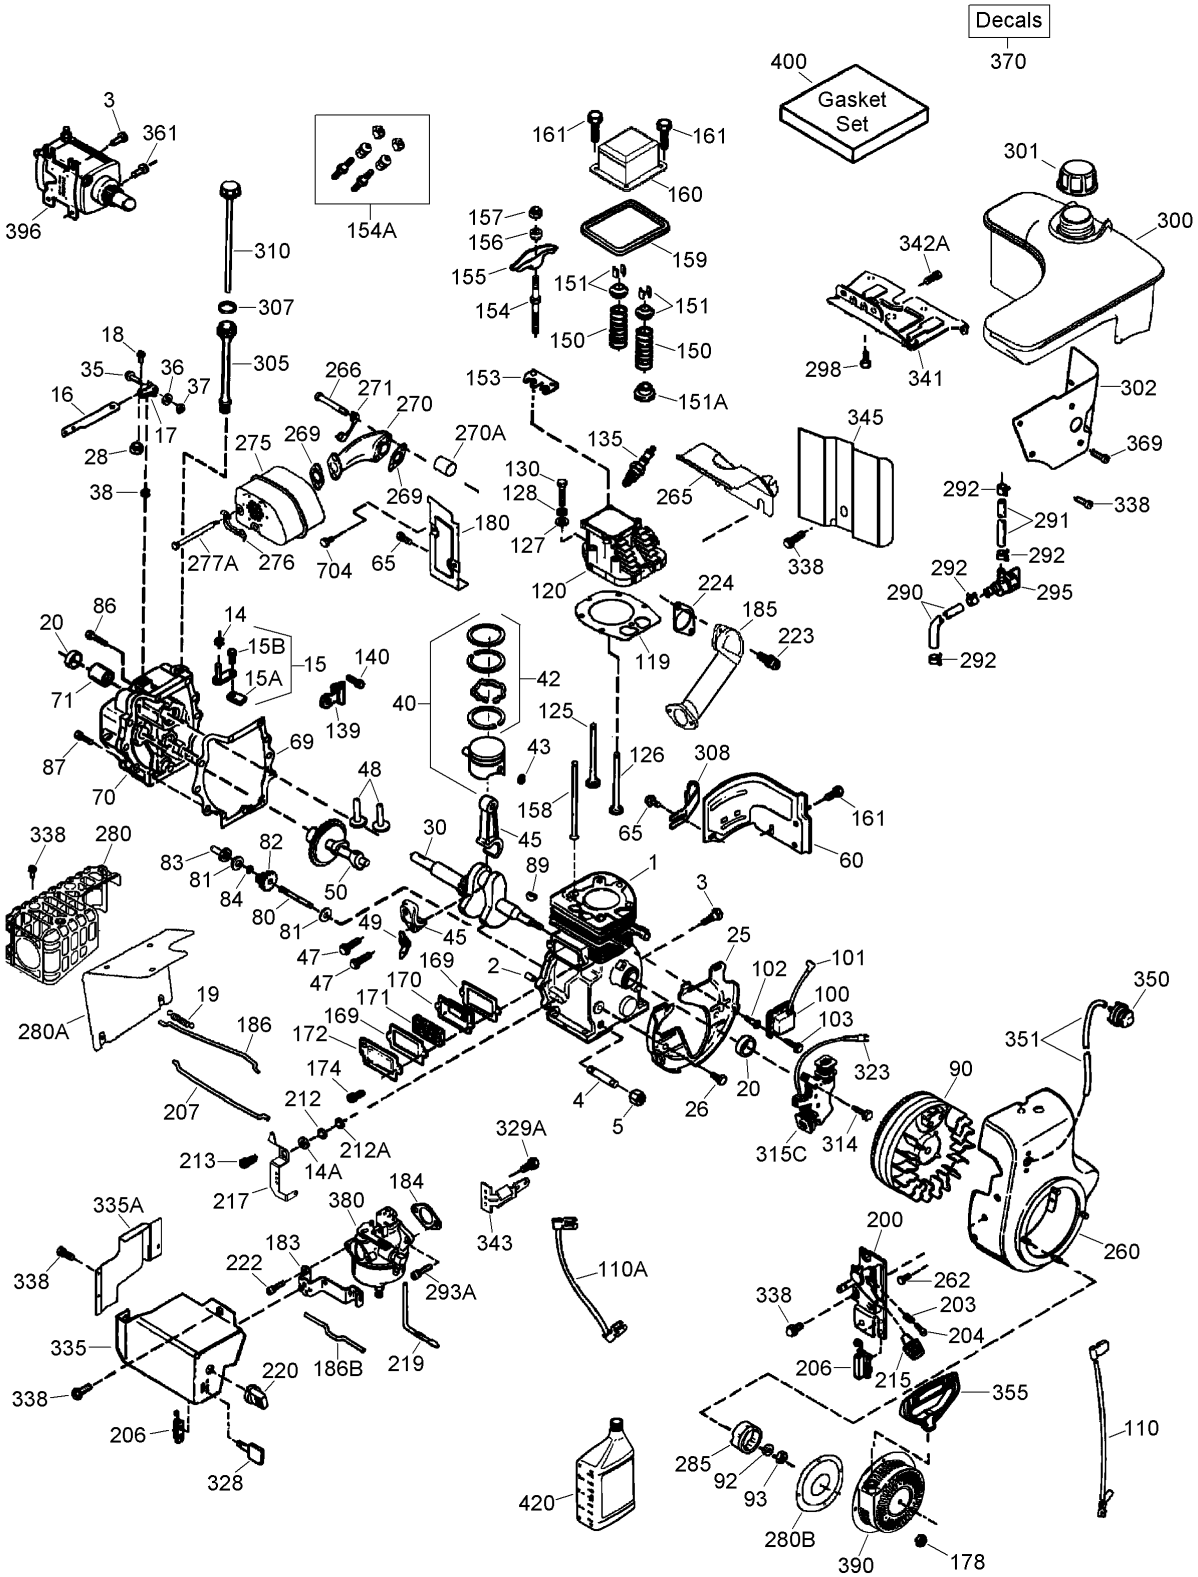

Engine Assembly No. 2
Tecumseh OH318SA-221847B

Ref	Part No.	Qty.	Description
❸178	29752	4	Nut And Lock Washer (1/4-28)
❸180	37101	1	Extension-Housing, Blower
❸183	34583A	1	Bracket-Choke
❸184	33263	1	Gasket-Carburetor To Intake Pipe
❸185	37085	1	Pipe-Intake
❸186	37860	1	Link-Governor
❸186B	36653	1	Spring-Choke
❸200	35702	1	Bracket-Control
❸203	31342	1	Spring-Compression
❸204	651029	1	Screw (T-10, 5-40X7/16)
❸206	610973	2	Terminal (Shorting On-Off)
❸207	37262	1	Link-Throttle
❸212	30773A	1	Bushing
❸212A	651017	1	Washer
❸213	651056	1	Screw (10-24 X 29/32)
❸215	35440	1	Knob-Control, Speed
❸217	37260	1	Lever-Bellcrank
❸219	35689	1	Rod-Choke
❸220	35438	1	Knob-Control, Choke
❸222	651081	2	Screw (10-32 X 15/32)
❸223	650971	2	Screw (T-30, 5/16-18 X 7/8)
❸224	33515A	1	Gasket-Pipe, Intake
❸260	37092A	1	Housing-Blower
❸262	651084	2	Screw (5/16-18X9/16)
❸265	37086	1	Cover-Head, Cylinder
❸266	650876	2	Screw (5/16-18 X 1-9/32) (Manifold)
❸269	35762	2	Gasket-Manifold, Exhaust
❸270	37263	1	Manifold, Exhaust
❸270A	35829A	1	Liner-Port, Exhaust
❸271	35293	1	Plate-Locking (Manifold)
❸275	37264	1	Muffler (With Mounting Brackets)
❸276	35348	1	Plate-Locking
❸277A	650877	2	Screw (5/16-18 X 4-1/2) (Muffler)
❸280	37265	1	Shield-Heat (Must Have Muffler 37264)
❸280A	37106	1	Shield-Heat, Radiation
❸280B	37879	1	Baffle-Restrictor, Air
❸285	35985C	1	Cup-Starter
❸290	37964	1	Line-Fuel, Low Permeation (32.0 Length)
❸291	37962	1	Line-Fuel, Low Permeation (8.62)
❸292	26460	4	Clamp-Line, Fuel
❸293A	650517	2	Screw (T-30, 1/4-20 X 27-32)
❸295	35857	1	Valve-Shut Off, Fuel (Includes 292)
❸298	650665	1	Screw (1/4-15X7/8)
❸300	37099A	1	Tank-Fuel (Includes 292, 301)
❸301	37844	1	Cap-Fuel (Black) (1-1/2 I D)
❸302	37098	1	Extension-Tank, Fuel
❸305	35574	1	Tube-Fill, Oil
❸307	35499	1	O-Ring
❸308	35539	1	Clip-Tube, Fill

Ref	Part No.	Qty.	Description
❸310	35700	1	Dipstick
❸314	650873	1	Screw (1/4-20 X 3/4)
❸315C	611111	1	Coil-Alternator, 18 Watt
❸323	611118	1	Terminal (Single Pin)
❸328	35062	1	Key-Ignition
❸329A	651060	1	Screw (8-32 X 23/64)
❸335	37096A	1	Cover-Carburetor (Front)
❸335A	37087	1	Cover-Carburetor (Side)
❸338	650821	15	Screw (10-32 X 1/2)
❸341	37093	1	Bracket-Tank, Fuel (Lower)
❸342A	792028	2	Screw (5/16-18 X 7/8)
❸343	35079A	1	Bracket-Switch, Key (Includes 329A)
❸345	37097	1	Baffle-Heat
❸350	570682A	1	Primer ASM (Vented Snap-In)
❸351	32180C	1	Line-Primer
❸355	590574	1	Handle-Starter, Mitten Grip
❸361	650990	2	Screw (T-30, 1/4-20X15/32)
❸369	651032	2	Screw (12-16 X 5/8)
❸370	36501	1	Decal-Primer, International Symbol
❸370	36534A	1	Instruction Decal-Caution, Read Owner Manual
❸370	36695	1	Decal-Tecumseh Logo For Top Of Recoil Starter
❸370	37226	1	Decal-Choke
❸370	37433	1	Decal-Start Button, Electric
❸370	37948	1	Decal-Hot Surfaces
❸380	640169	1	Carburetor ASM (Includes 184)
❸390	590749	1	Starter-Rewind
❸396	37102	1	Electric Starter Motor ASM (220 Volt)
❸400	37257A	1	Gasket Set
❸420	730226A	1	Oil-Engine, S A E 5W30
❸704	650738	1	Screw (1/4-20 X 5/8)
❶❸999	730286	1	Winter Maintenance Kit
❶❸	911306D	1	Engine-Replacement
❶❸	756339C	1	Short Block-Replacement

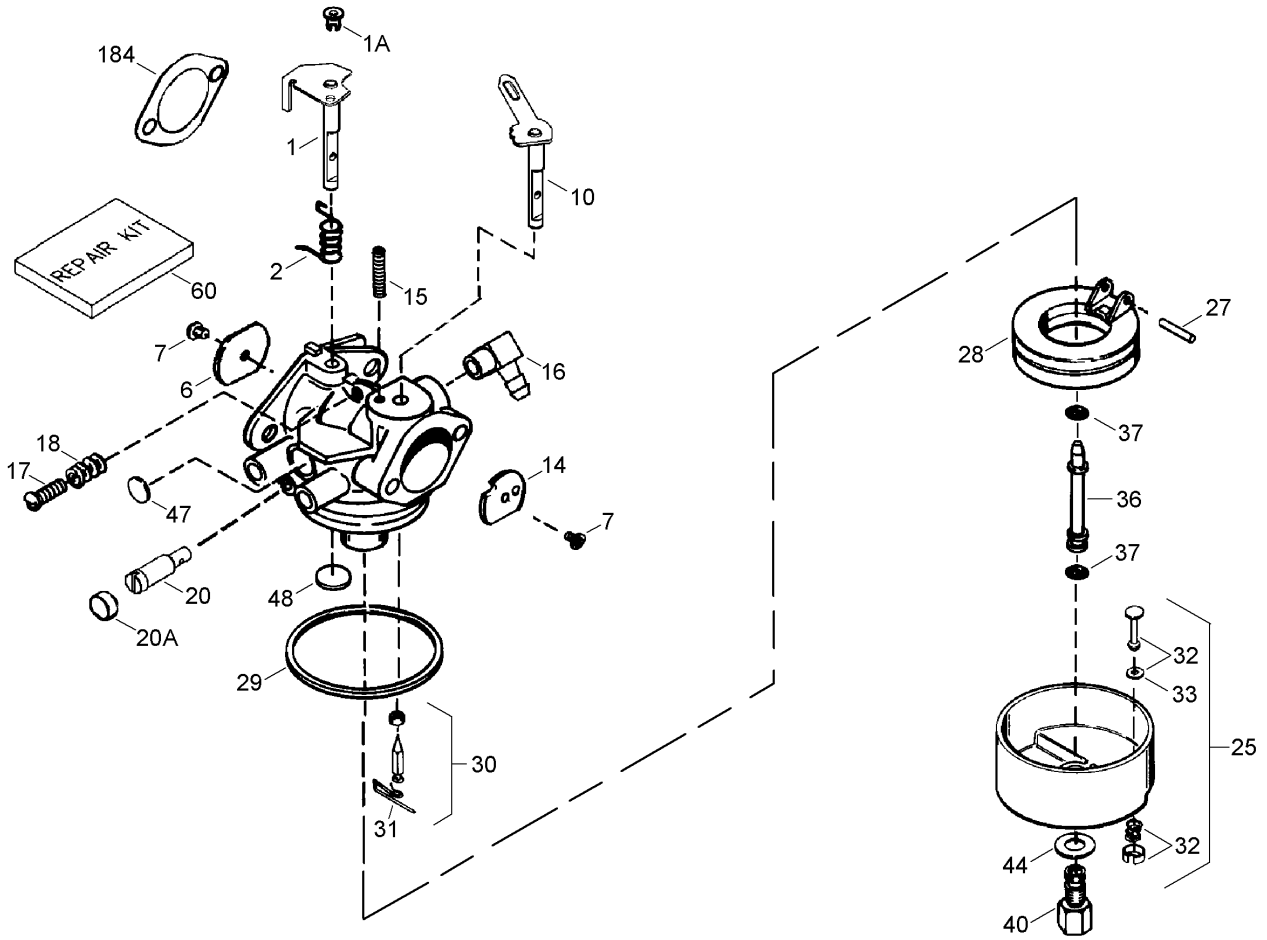

Carburetor Assembly No. 640169
Tecumseh OH318SA-221847B

Ref	Part No.	Qty.	Description
❸1	632777	1	Throttle Shaft And Lever ASM
❸1A	36288	1	Bushing
❸2	631970	1	Spring-Return, Throttle
❸6	640109	1	Shutter-Throttle
❸7	650506	2	Screw-Shutter
❸10	632778	1	Choke Shaft And Lever ASM
❸14	632189	1	Shutter-Choke
❸15	630735	1	Spring-Positioning, Choke
❸16	632527	1	Fitting-Fuel
❸17	651025	1	Screw-Throttle Crack And Idle Speed
❸18	630766	1	Spring-Tension
❸20	640027	1	Screw-Restrictor, Idle
❸20A	640053	1	Cap-Screw, Idle Restrictor
❸25	632594A	1	Float Bowl ASM (Includes 32, 33)
❸27	631024	1	Shaft-Float
❸28	632802	1	Float (Plastic)
❸29	631028	1	O Ring-Bowl, Float
❸30	631021	1	Seat And Clip-Inlet Needle (Includes 31)
❸31	631022	1	Clip-Spring
❸32	27136A	1	Bowl Drain ASM
❸33	27554	1	Gasket-Plunger, Drain
❸36	640013	1	Tube-Nozzle, Main

Ref	Part No.	Qty.	Description
❸37	632547	2	O Ring-Nozzle Tube, Main
❸40	640170	1	Nut-Bowl, High Speed
❸44	27110A	1	Washer-Nut, Bowl
❸47	630748	1	Plug-Welch, Idle Mixture Well
❸48	631027	1	Plug-Welch, Atmospheric Vent
❸60	632760	1	Repair Kit (Includes 7, 27, 29, 30, 37, 47, 48)
❸184	33263	1	Gasket-Carburetor To Intake Pipe

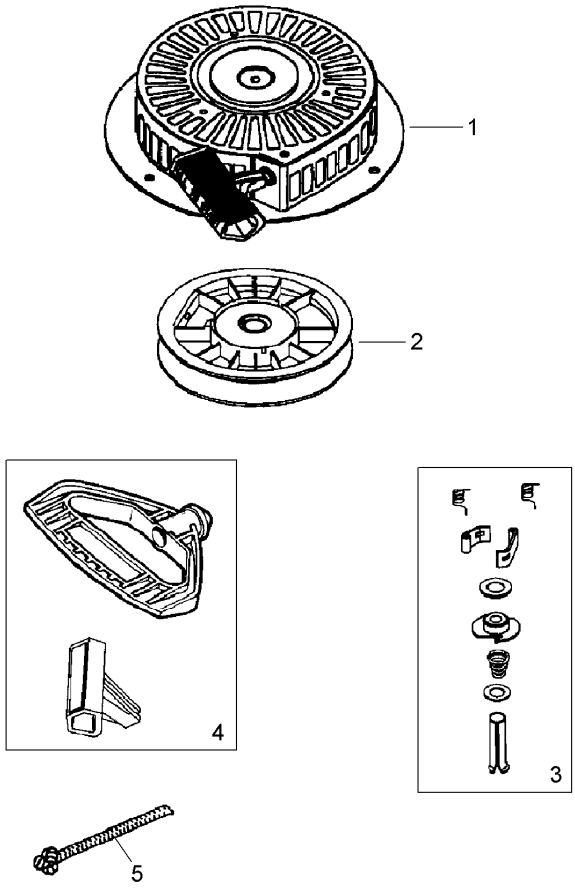

This illustration may not depict actual equipment and is for reference purposes only

Rewind Starter No. 590749
Tecumseh OH318SA-221847B

Ref	Part No.	Qty.	Description
❸1	590749	1	Starter-Rewind
❸2	590682	1	Pulley And Rewind Spring ASM
❸3	590773	1	Repair Kit
❸4	590574	1	Handle-Starter, Mitten Grip
❸5	590535	1	Rope-Starter (98 Cut To Length)

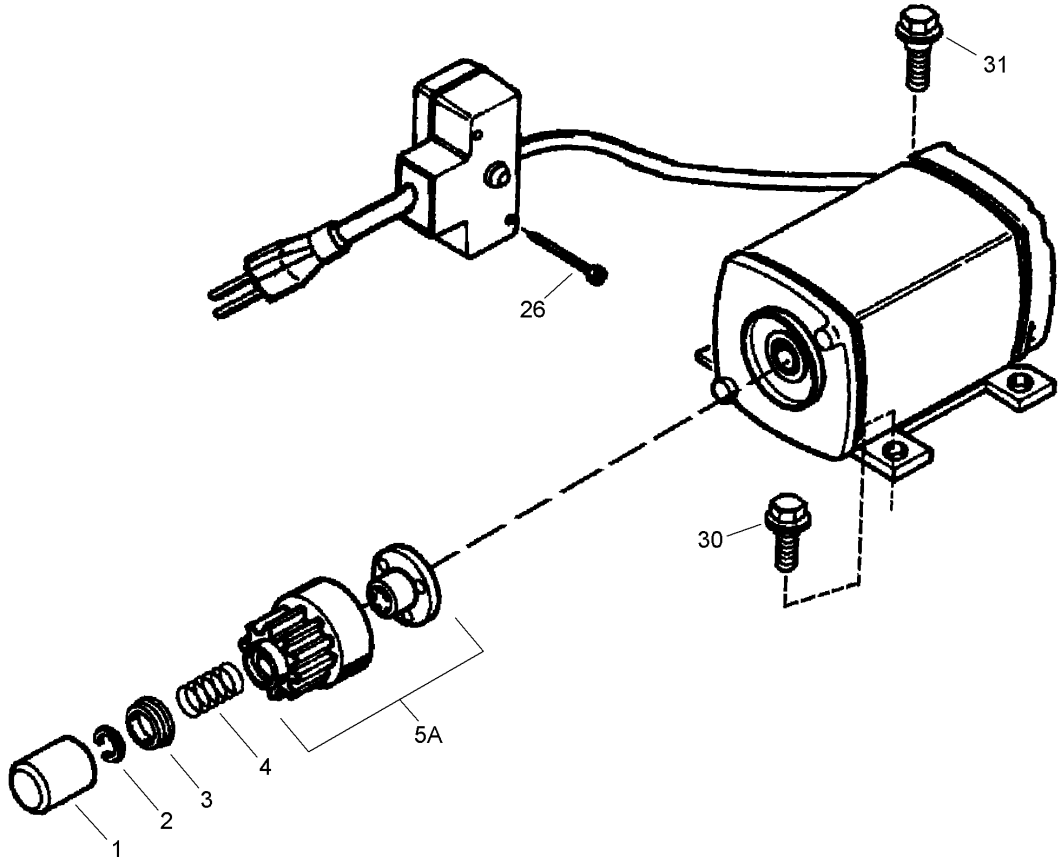

Electric Starter Assembly No. 37102
Tecumseh OH318SA-221847B

Ref	Part No.	Qty.	Description
❸	37102	1	Electric Starter Motor ASM (220 Volt)
❸1	33451	1	Cover-Dust
❸2	33842	1	Ring-Retainer
❸3	33430	1	Retainer-Spring
❸4	33431	1	Spring-Anti Drift
❸5A	37050	1	Gear And Nut (Includes 2)
❸26	650819	2	Screw (6-32X2-1/2)
❸26	651032	2	Screw (12-16 X 5/8)
❸30	30063	2	Screw (T-30, 1/4-20X1/2)
❸31	650820	2	Screw (1/4-20X1/2)

Attachments and Accessories

For 38651 - Power Max 1128OXE Snowthrower

Product Name	Model/Part
Tire Chain Kit	107-3813
Snow Cab	107-3814
Weight Kit	107-3815
28 Inch Drift Breaker	107-3817

NOTES

NOTES

TORO®