FORM NO. 3315–188


TORO®

MODEL NO. R538SL02–2000001 & UP

PARTS CATALOG

WHEEL HORSE®

38" Rotary Cutting Unit

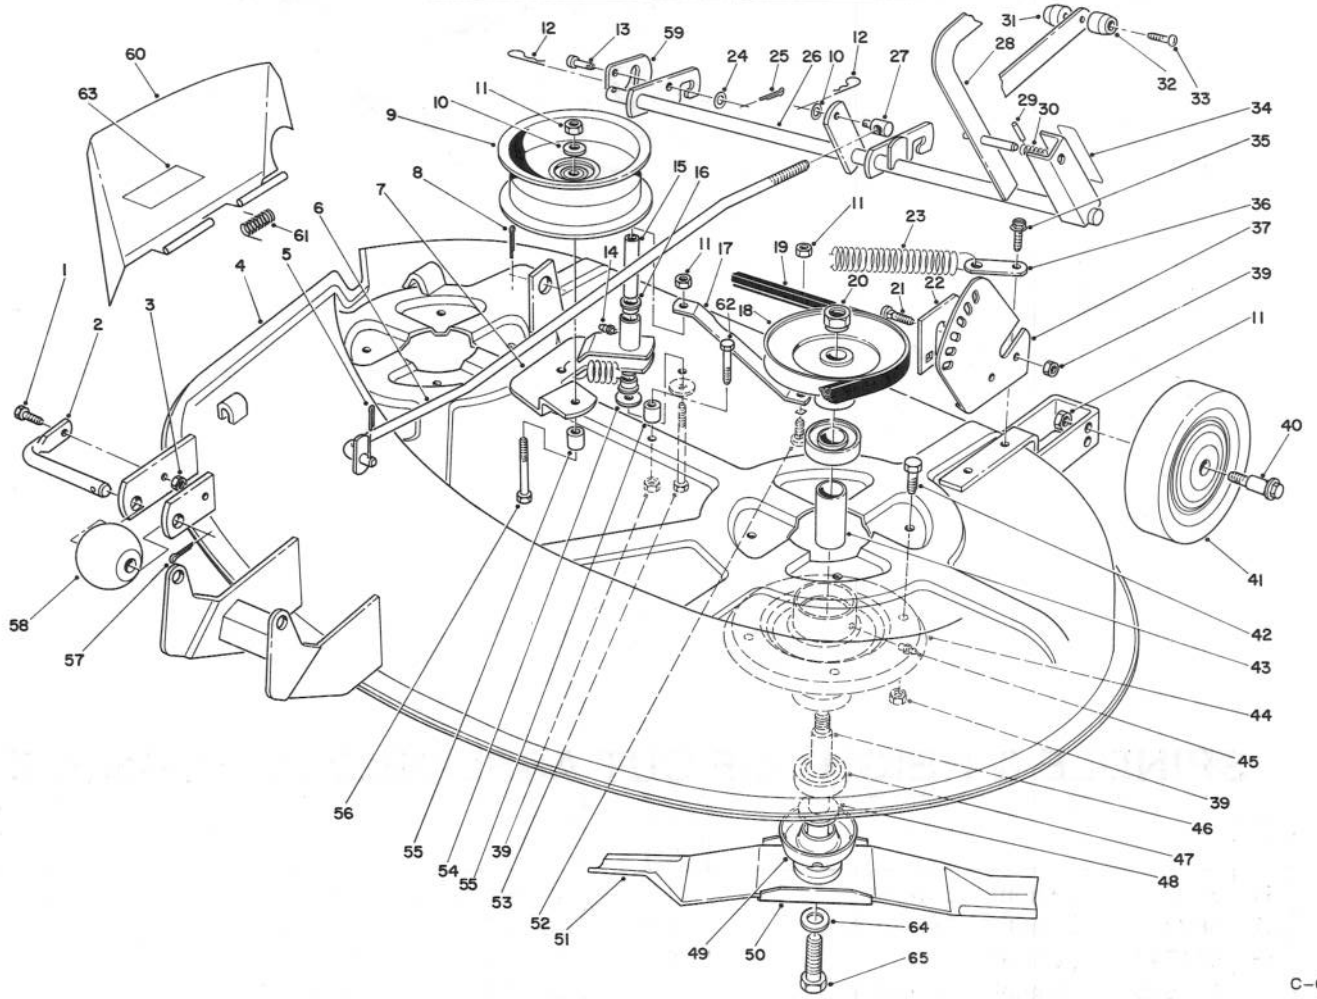

SPINDLE & HEIGHT OF CUT ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	321–4	Screw – Hex. Hd.	2
2	118960	Shaft – Roller	1
3	3296–42	Nut	2
4	14–7219	Deck	1
5	32121–103	Pin – Cotter	1
6	120551	Rod – Height Adj.	1
7	78–5860	Arm – Idler	1
8	3272–17	Pin – Cotter	1
9	109450	Pulley – Idler	1
10	3256–24	Washer – Flat	2
11	3296–39	Nut	4
12	933505	Cotter – Hairpin	3
13	932960	Pin – Clevis	2
14	302–26	Fitting – Grease	1
15	109950	Spacer	1

Ref. No.	Part No.	Description	No. Used
16	109859	Bushing	2
17	78–5850	Brace	1
18	79–3810	Pulley – Spindle	2
19	121330	V–Belt	1
20	915007	Nut – Lock	2
21	3230–1	Bolt – Carriage	2
22	116790	Plate – Retaining	1
23	78–6210	Spring – Extension	1
24	920237	Washer – Flat	2
25	3272–6	Pin – Cotter	2
26	120671	Height Adjustment	1
27	7736	Stud – Trunnion	1
28	78–8321	Lever –Lift	1
29	933190	Pin – Spirol	1
30	101853	Spring – Compression	1

TPS

© The TORO Company –1992

3315–188

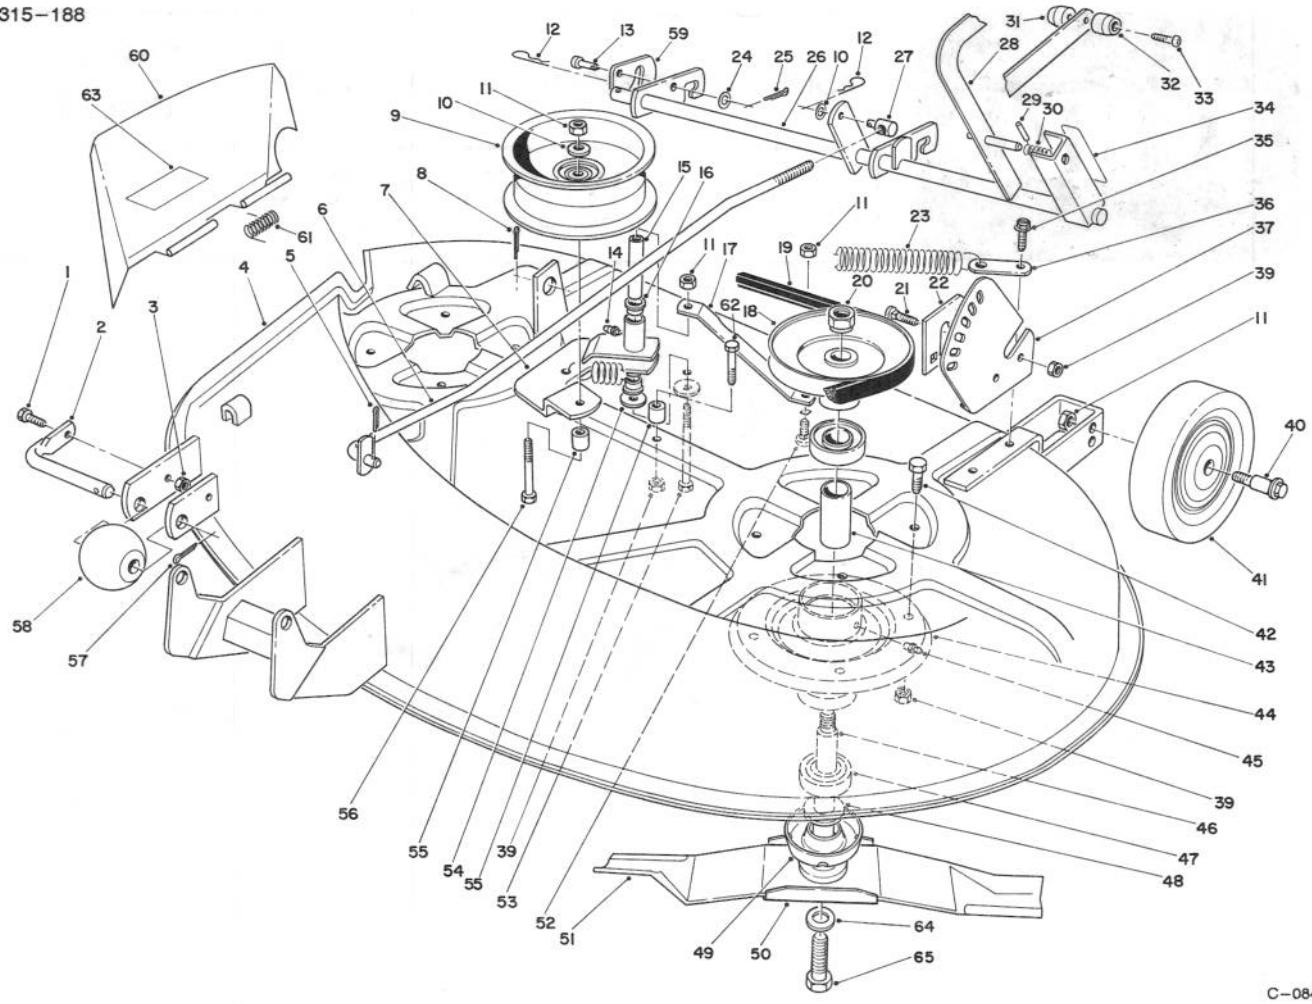


C–0840

SPINDLE & HEIGHT OF CUT ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
31	8722	Knob – Control	1
32	8693	Knob – Control Arm	1
33	911747	Screw	2
34	111655	Decal – Height of Cut	1
35	926715	Screw	1
36	106318	Lever	1
37	78–1980	Quadrant	1
39	3296–29	Nut	11
40	56–6590	Bolt – Wheel	1
41	61–9760	Wheel	1
42	322–3	Screw – Hex Hd.	8
43	79–2780	Spacer – Bearing	2
44	79–1050	Housing – Spindle	2
45	302–16	Fitting – Grease	2
46	80–4350	Shaft – Spindle	2
47	79–1090	Bearing – Ball	4
48	80–4390	Spacer	2

Ref. No.	Part No.	Description	No. Used
49	80–4370	Shield – Bearing	2
50	47–0110	Spacer – Spindle	2
51	79–3061	Blade	2
52	3231–2	Bolt – Carriage	1
53	323–16	Screw – Hex Hd.	1
54	2844	Washer – Flat	2
55	110369	Spacer	2
56	323–13	Screw – Hex Hd.	1
57	3272–21	Pin – Cotter	1
58	29–4820	Roller	1
59	120610	Latch	2
60	14–7229	Deflector	1
61	119691	Spring – Torsion	1
62	322–6	Screw – Hex Hd.	1
63	66–1340	Decal – Danger	1
64	3290–465	Washer – Blade	2
65	26–0671	Bolt – Blade	2

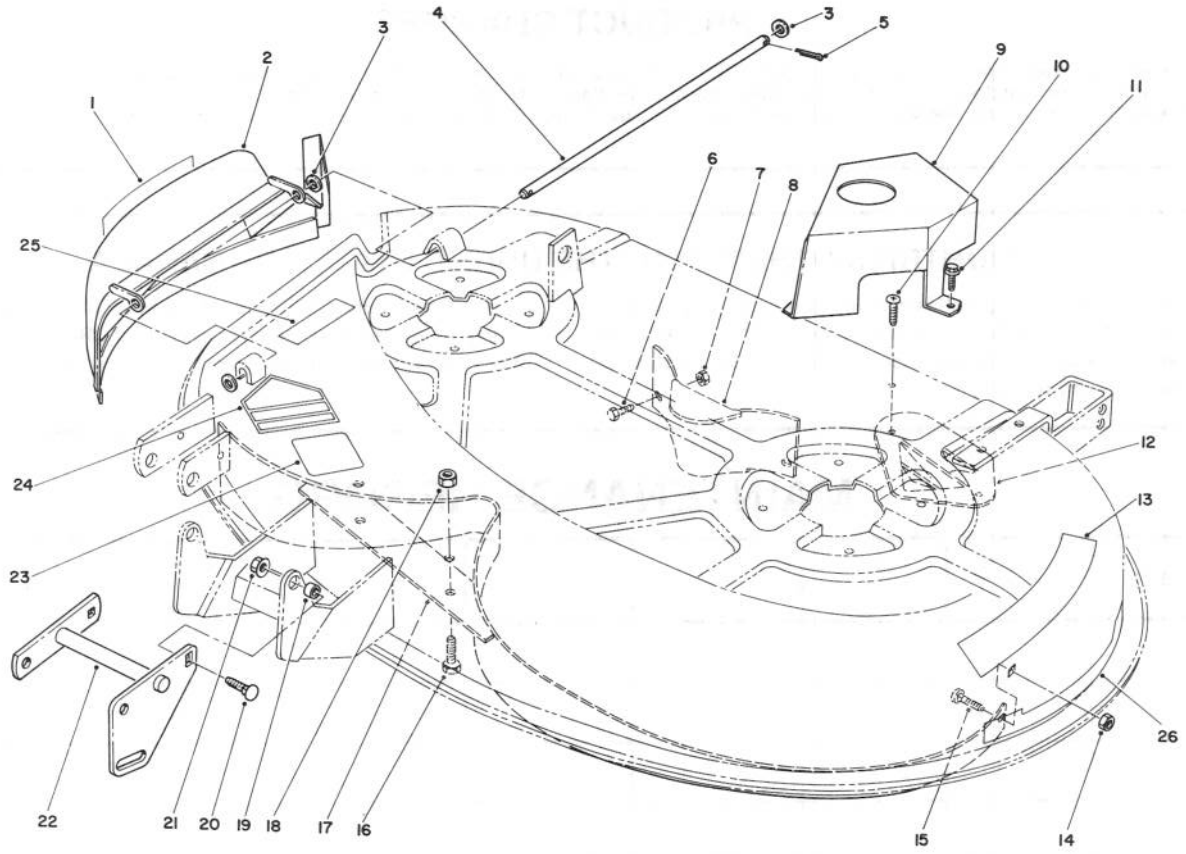

C–0841

BAFFLE & COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66–1340	Decal – Danger	1
2	79–1680	Recycler Chute Ass'y	1
3	920008	Washer – Flat	3
4	78–0820	Rod – Hinge	1
5	932008	Pin – Cotter	2
6	908002	Screw – Hex Hd.	2
7	915661	Nut – Hex	2
8	79–1640	Baffle – Rear	1
9	78–0830	Cover – Belt	2
10	32104–130	Screw – Pan Hd.	8
11	32104–76	Screw – Pan Hd.	6
12	76–2160	Plate – Kicker	4
13	79–3140	Decal – Danger	1

Ref. No.	Part No.	Description	No. Used
14	915662	Nut – Hex	1
15	900037	Bolt – Carriage	1
16	908033	Screw – Hex Hd.	2
17	79–1600	Baffle – Front	1
18	915663	Nut – Hex	2
19	102704	Spacer	2
20	900234	Bolt – Carriage	2
21	10280	Nut – Hex Flange Lock	2
22	114837	Front Lift Arm Assembly	1
23	117137	Decal – Belt Guide	1
24	54–9220	Decal – Danger	1
25	66–6380	Decal – Danger	1
26	79–1311	Decal – Recycler	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

AL-916230

Litho in U.S.A.