Form Number 3356-644 Rev B

60 Inch Side Discharge Mower
Groundsmaster® 3320 and 3280-D

Model No. 30366 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Deck, Roller, Belt and Pulley Assembly	3
Deck Assembly No. 107-7271	4
Caster Arm Assembly	5
Spindle and Blade Assembly	6
Spindle Assembly No. 108-1957	7
Cover, Gearbox, Drive Shaft and Baffle Assembly	8
Rubber Deflector Assembly No. 108-2792	9
Lever Assembly No. 107-1664	10
Gearbox Assembly No. 108-1370	11
Drive Shaft Assembly No. 110-4704	12
Lift Arm and Rear Height-of-Cut Assembly	13
LH Lift Arm Assembly No. 108-1948	14
RH Lift Arm Assembly No. 108-1947	15
Attachments and Accessories List	16

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

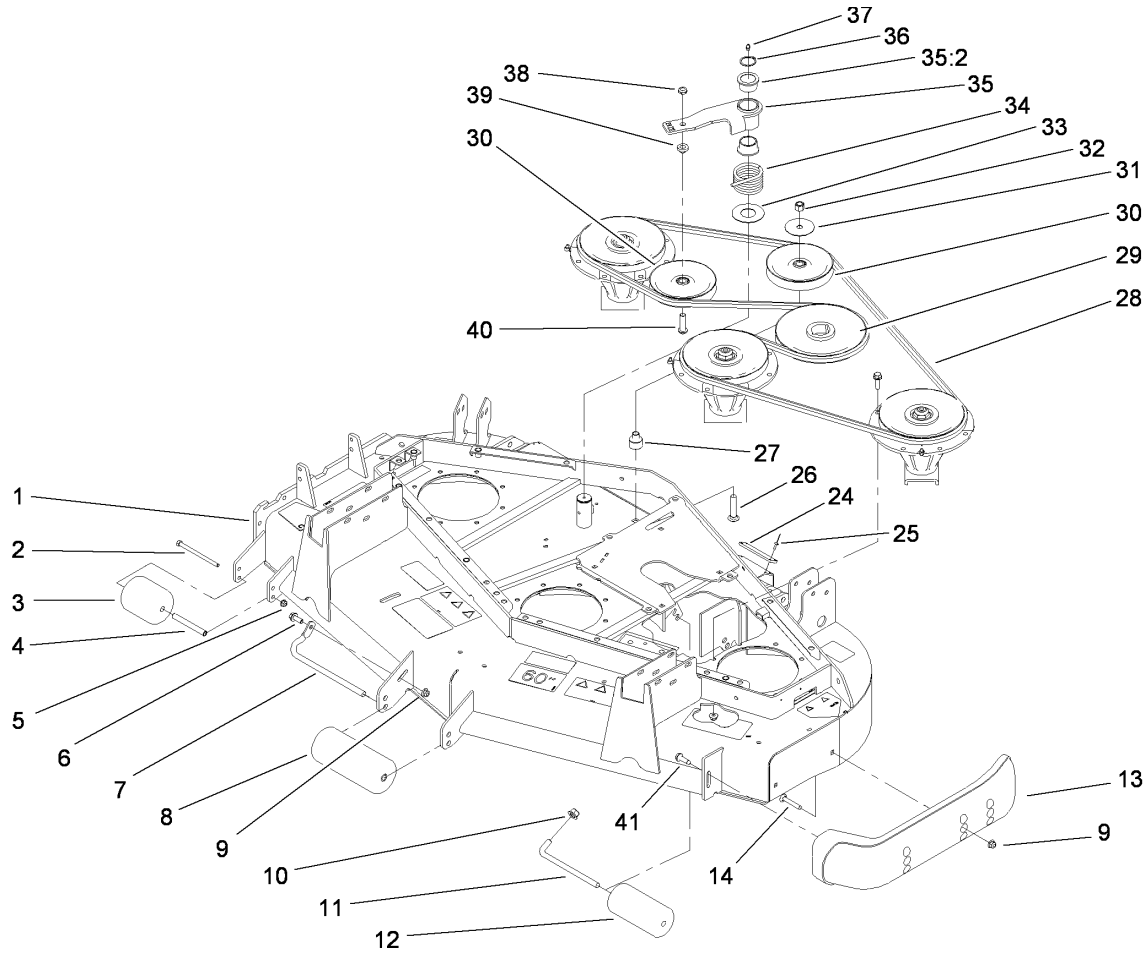

Deck, Roller, Belt and Pulley Assembly

Ref	Part No.	Qty.	Description
1	107-7271	1	Deck ASM
2	322-29	1	Screw-HH
3	93-4803	1	Roller-Deck
4	105-4549	1	Spacer-Roller
5	104-8300	1	Nut-Flange, NI
6	3234-42	1	Screw-HHF
7	68-6840	1	Shaft-Roller
8	68-6710	1	Roller
9	104-8301	3	Nut-Flange, NI
10	99-5107	2	Nut-Lock
11	110-9683	2	Shaft-Rear Roller
12	36-1740	2	Roller-Deck
13	112-1479	1	Skid-Bumper, Deck
14	3231-33	2	Screw-CARR
24	108-1914	2	Pad-Bumper
25	3269-24	8	Rivet
26	3233-34	1	Screw-CARR
27	108-1908	1	Spacer-Idler
28	108-4391	1	Belt-Hex
29	108-1950	1	Pulley
30	01-268-0160	2	Pulley-Idler
31	100-3102	1	Washer-Flat
32	3296-23	1	Nut-Lock, NI
33	108-1926	1	Washer

Ref	Part No.	Qty.	Description
34	108-1921	1	Spring-Torsion
35	108-1930	1	Idler Arm ASM
35:2	93-4510	2	Bushing-Caster
36	32120-84	1	Ring-Snap, External
37	302-5	1	Fitting-Grease
38	3296-45	1	Nut-Lock, NI
39	108-1924	1	Spacer-Idler
40	108-1993	1	Screw-HSBH
41	9136144	1	Screw-HWHTF

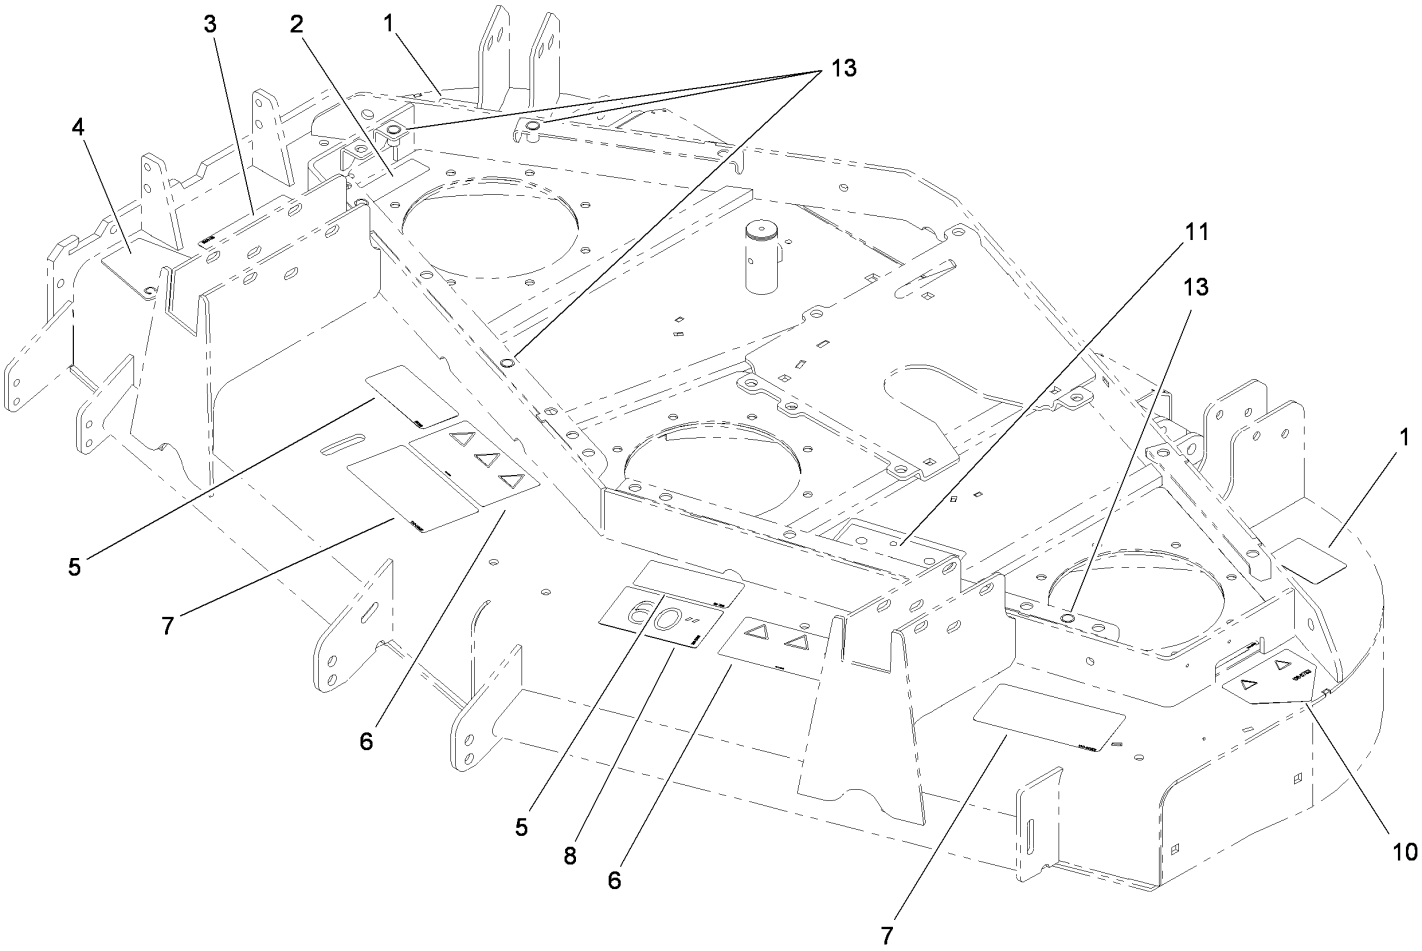

Deck Assembly No. 107-7271

Ref	Part No.	Qty.	Description
1	108-1986	2	Decal-HOC, Rear
2	100-6578	4	Decal-Danger
3	107-2916	1	Decal-Warning
4	107-1622	1	Decal-Adjustment, Baffle
5	93-7818	2	Decal-Torque, Blade Bolt
6	107-2908	2	Decal-Danger, Combination
7	100-5622	2	Decal-HOC
8	108-1990	1	Decal
10	106-6753	1	Decal-Danger, Ce
11	108-1988	1	Decal-Routing, Belt
13	32148-9	6	Insert-Nut

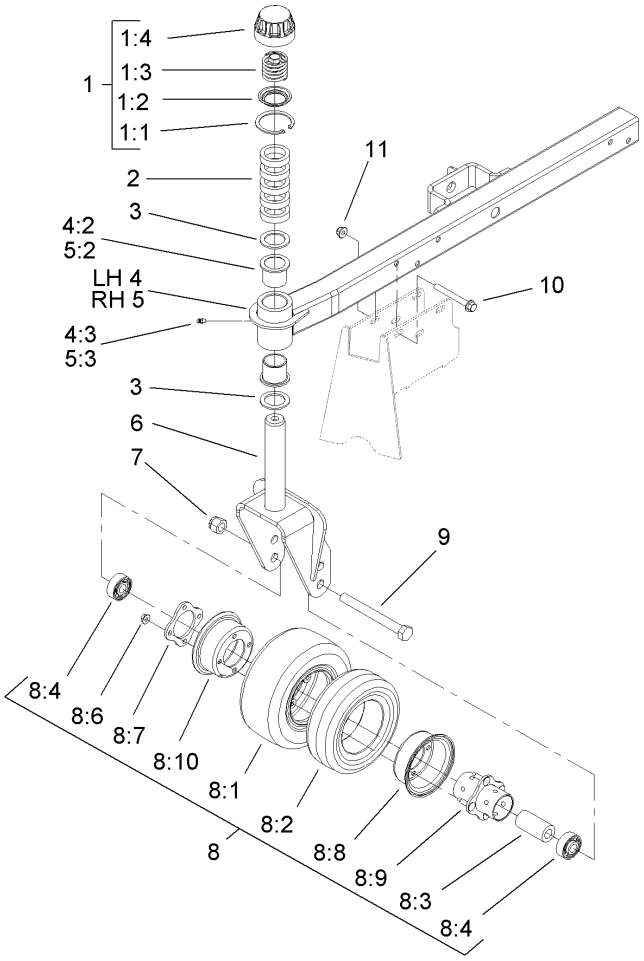

Caster Arm Assembly

Ref	Part No.	Qty.	Description
1	92-9727	2	HOC Cap ASM
1:1	92-5581	1	Ring-Retaining
1:2	92-5583	1	Washer-Cap
1:3	92-9726	1	Spring-Compression
1:4	92-8861	1	Cap-HOC
2	69-1510	10	Spacer-Caster
3	69-6860	4	Washer-Thrust
4	108-5744	1	LH Caster Arm ASM
4:2	69-6470	2	Bushing-Caster
4:3	302-5	1	Fitting-Grease
5	108-5745	1	RH Caster Arm ASM
5:2	69-6470	2	Bushing-Caster
5:3	302-5	1	Fitting-Grease
6	104-0762-01	2	Caster Fork ASM
7	3296-53	2	Nut-Lock, NI
8	93-9938	2	8 Inch Wheel ASM
8:1	93-9939	1	Tire
8:2	68-8950	1	Tube-Inner (W/Valve)
8:3	93-4241	1	Spacer-Bearing, Inner
8:4	93-4237	2	Bearing
8:6	32128-16	4	Nut-HHF
8:7	93-4242	1	Plate
8:8	93-4239	1	Rim-Wheel, Half
8:9	93-5980	1	Hub

Ref	Part No.	Qty.	Description
8:10	95-2741	1	Rim-Wheel, Half
9	327-24	2	Screw-HH
10	3234-41	10	Screw-HHF
11	104-8301	10	Nut-Flange, NI

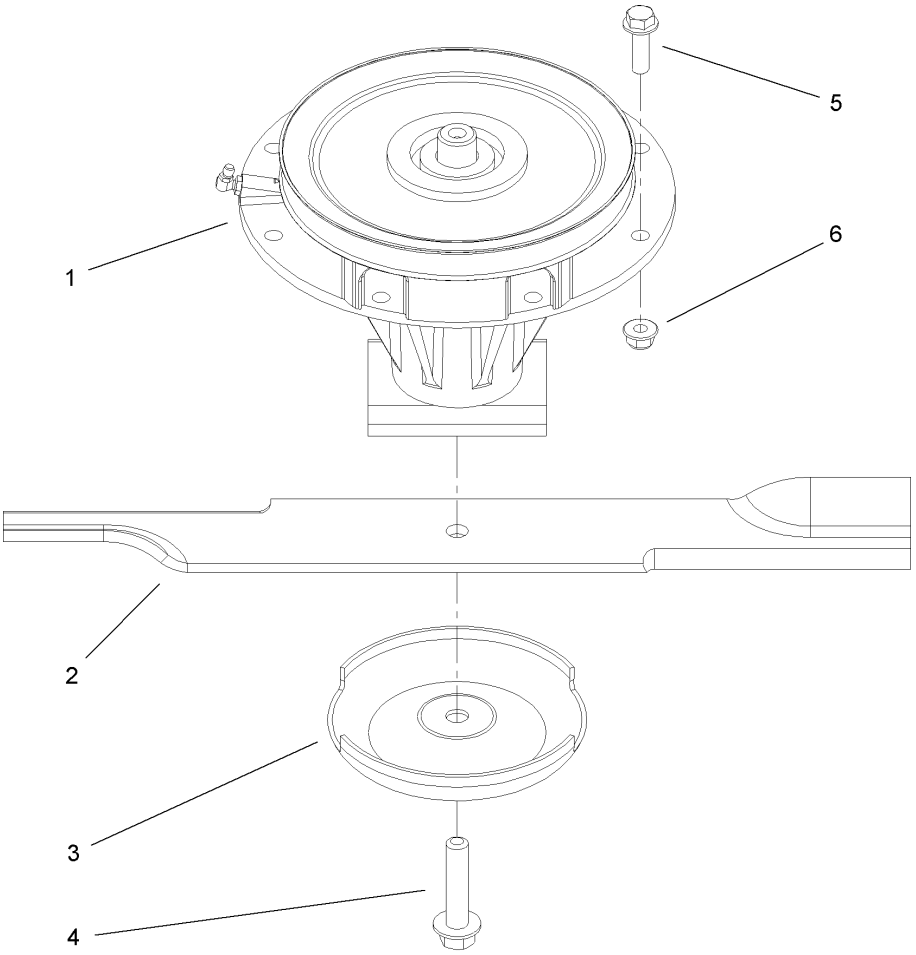

Spindle and Blade Assembly

Ref	Part No.	Qty.	Description
1	108-1957	3	Spindle ASM
2	110-4701	3	Blade-Rotary, 20.5 Med Flow
3	72-9361	3	Cup-Scalp, Anti
4	92-5816	3	Bolt-Blade
5	3234-24	24	Screw-HHF
6	104-8301	24	Nut-Flange, NI

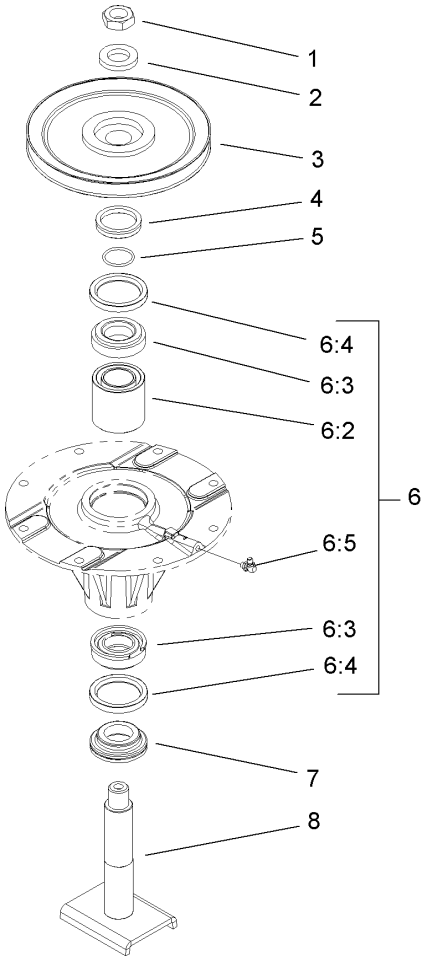

Spindle Assembly No. 108-1957

Ref	Part No.	Qty.	Description
1	3296-60	1	Nut-Lock, NI
2	104-8322	1	Washer-Hardened
3	104-3546	1	Pulley-Driven, Low
4	104-3564	1	Seal-V Ring
5	106-7159	1	O-Ring
6	108-1991	1	Spindle Housing ASM
6:2	108-1954	1	Spacer Set-Bearing
6:3	26-1830	1	Bearing Kit (Matched Set)
6:4	253-154	2	Seal-Oil
6:5	302-60	1	Fitting-Grease, 90 DEG
7	69-6950	1	Spacer-Shaft, Spindle
8	108-1956	1	Shaft ASM

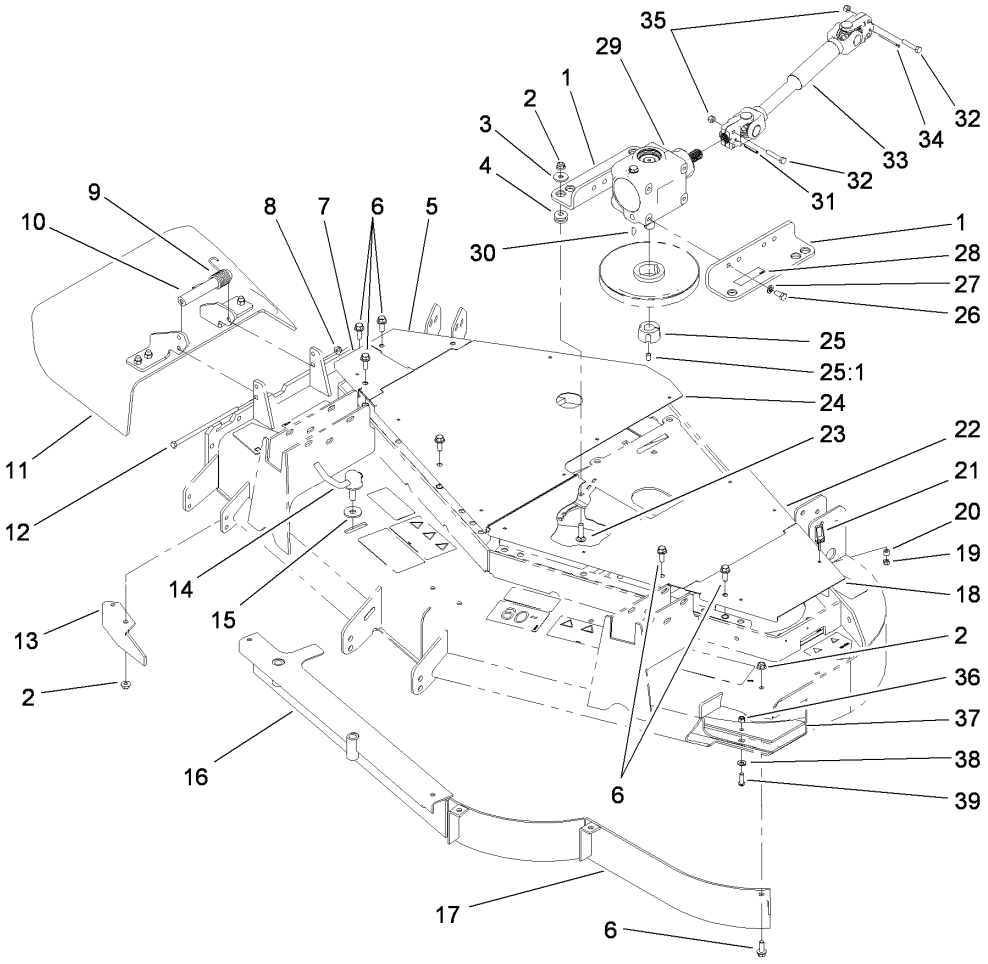

Cover, Gearbox, Drive Shaft and Baffle Assembly

Ref	Part No.	Qty.	Description
1	108-4376-03	2	Bracket-Gearbox
2	104-8301	10	Nut-Flange, NI
3	63-8410	4	Washer
4	63-9750	4	Mount
5	108-6064-03	1	Cover-Outside, Rear (RH)
6	3234-42	12	Screw-HHF
7	108-6065-03	1	Cover-Outside, Front (RH)
8	104-8300	1	Nut-Flange, NI
9	108-4052	1	Spring-Torsion
10	105-4622	1	Spacer
11	108-2792	1	Rubber Deflector ASM
12	322-50	1	Screw-HH
13	106-3216-01	1	Baffle-Discharge
14	107-1664	2	Lever ASM
15	105-7697	2	Washer-Plastic
16	105-7669-01	1	Baffle ASM
17	105-7657-01	1	Baffle ASM
18	108-6068-03	1	Cover-Outside, LH
19	1-804254	16	Nut
20	106-6778	16	Bushing-Latch, Swell
21	106-6777	16	Handle-Latch, Swell
22	108-6067-03	1	Cover-Middle, LH
23	3231-26	4	Screw-CARR
24	108-6066-03	1	Cover-Middle, RH

Ref	Part No.	Qty.	Description
25	23-1640	1	Bushing-Taperlock
25:1	3247-4	2	Screw-Set
26	323-4	4	Screw-HH
27	3253-21	4	Washer-Lock
28	93-6697	1	Decal-Lube
29	108-1370	1	Gearbox Replacement Kit
30	3257-5	1	Key-Woodruff
31	32121-34	1	Pin-Roll
32	322-9	4	Screw-HH
33	110-4704	1	PTO Drive Shaft ASM
34	3272-15	1	Pin-Cotter
35	3296-29	4	Nut-Lock, NI
36	3296-29	2	Nut-Lock, NI
37	107-3137	1	Plate-Turbo
38	1-303334	2	Washer-Spring
39	3274-104	2	Screw-HSBH

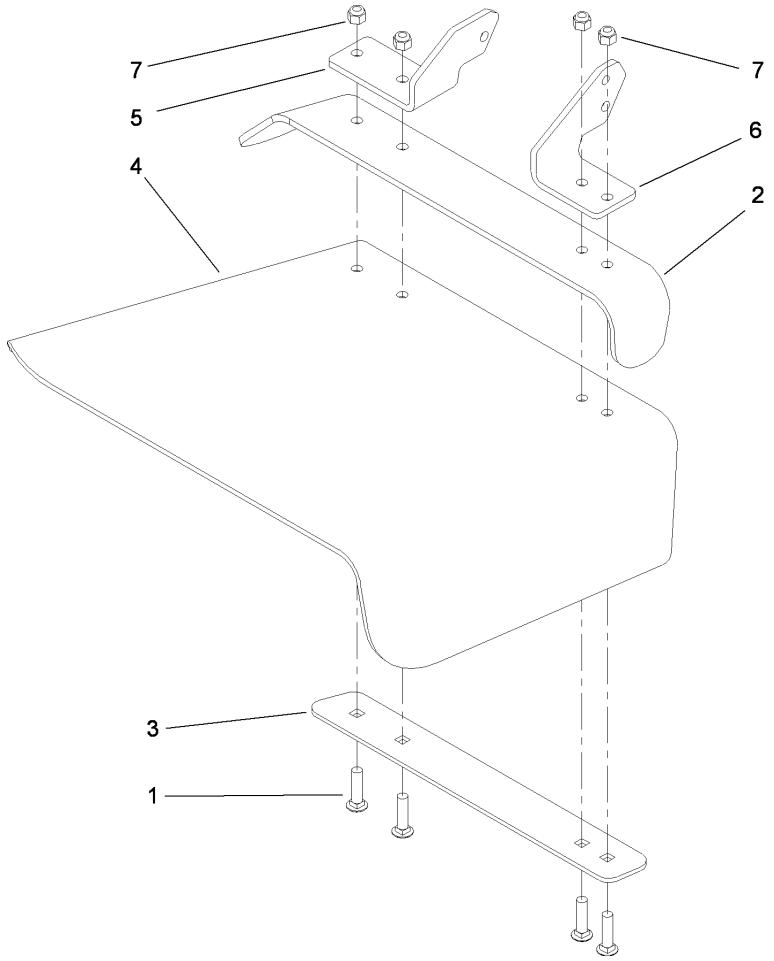

Rubber Deflector Assembly No. 108-2792

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	3296-39	4	Nut-Lock, NI

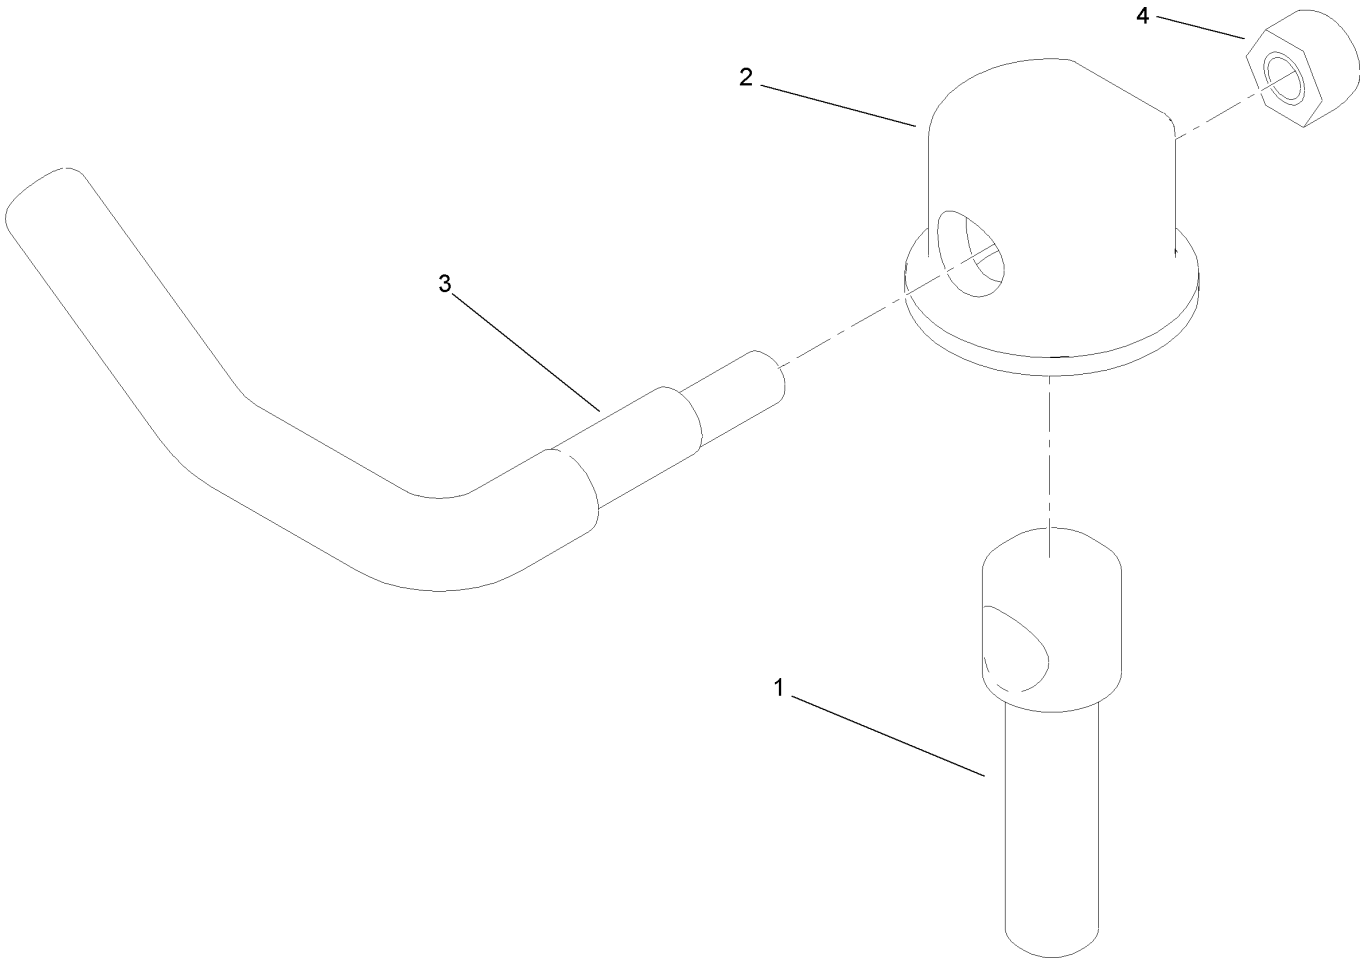

Lever Assembly No. 107-1664

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

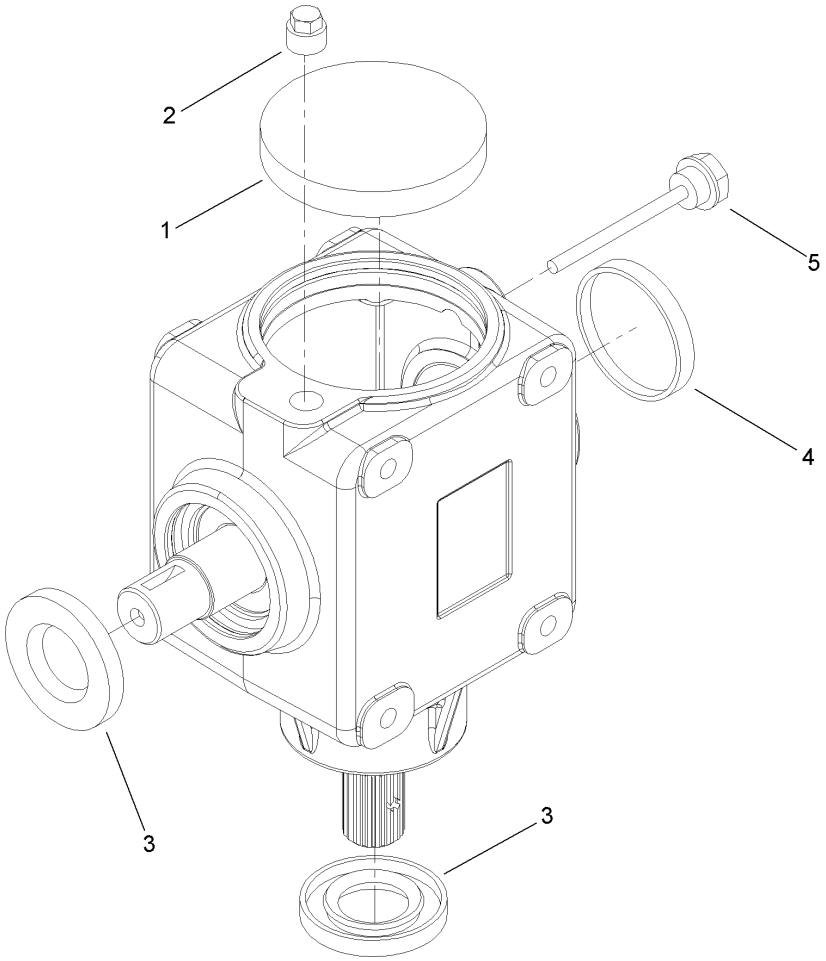

Gearbox Assembly No. 108-1370

Ref	Part No.	Qty.	Description
1	107-2932	1	Cap-Oil
2	107-2933	1	Plug
3	107-2934	2	Seal-Oil
4	107-2935	1	Cap-Oil
5	107-2936	1	Plug-Filler, Dipstick

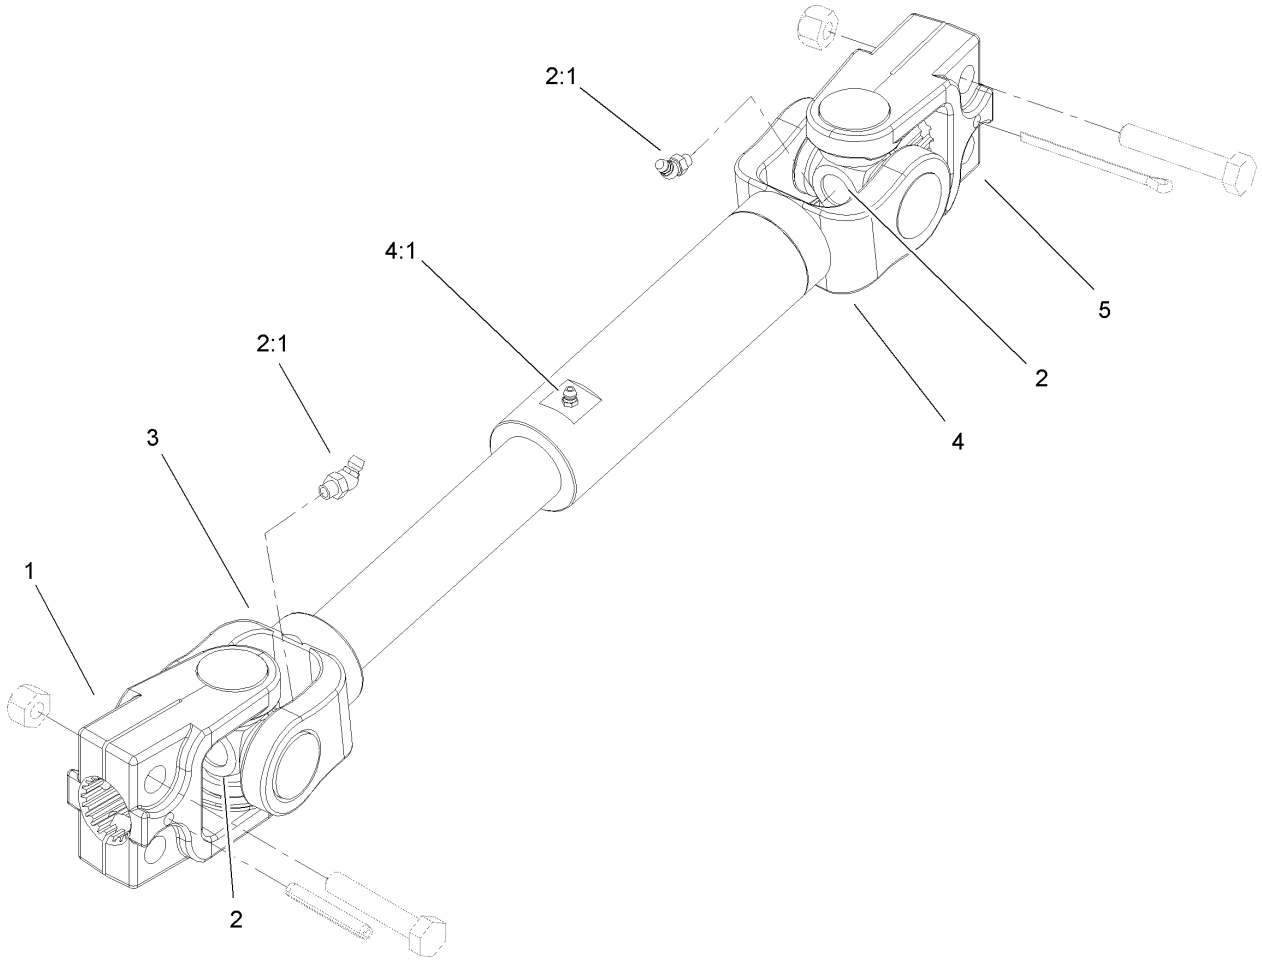

Drive Shaft Assembly No. 110-4704

Ref	Part No.	Qty.	Description
1	54-9040	1	Yoke-End
2	54-9180	2	U-Joint Kit
2:1	62-3820	1	Fitting-Grease
3	110-4705	1	Shaft-Yoke, Slip
4	110-4706	1	Tube-Yoke, Slip
4:1	302-58	1	Fitting-Straight
5	54-9090	1	Yoke-End

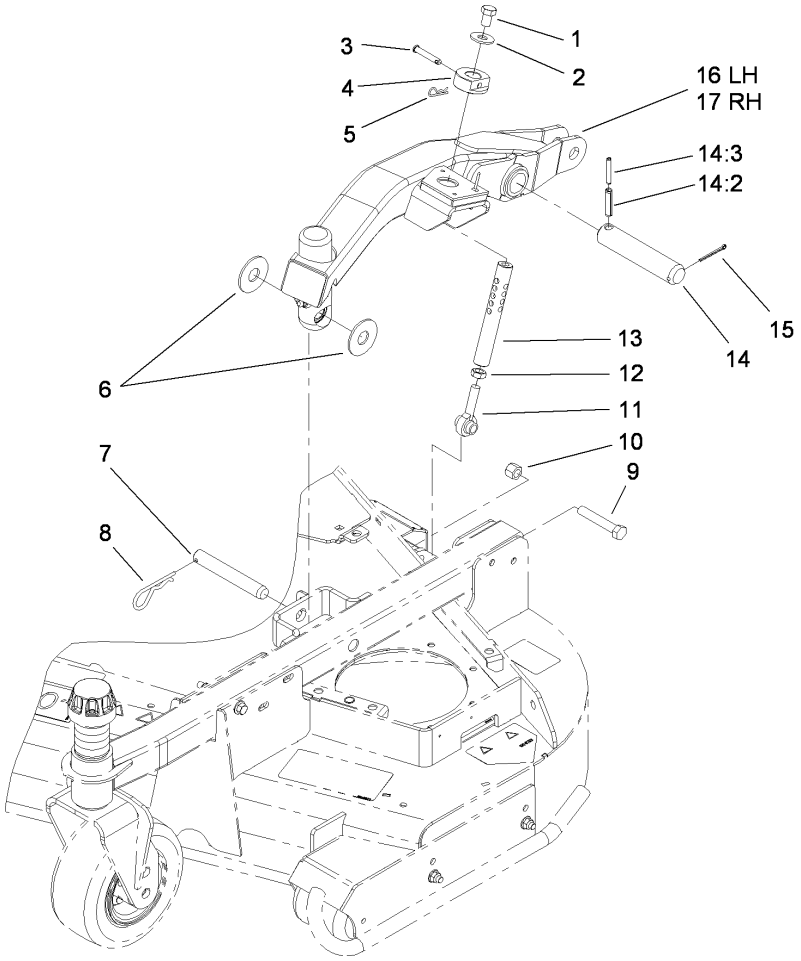

Lift Arm and Rear Height-of-Cut Assembly

Ref	Part No.	Qty.	Description
1	3213-20	2	Screw-HH
2	3256-6	2	Washer-Flat
3	107-3457	2	Pin-Clevis
4	110-0641	2	Collar-HOC
5	3290-467	2	Pin-Hair
6	107-7915	4	Washer-Thrust
7	107-7904	2	Pin-Clevis
8	3290-256	2	Pin-Hair
9	325-12	2	Screw-HH
10	3296-45	2	Nut-Lock, NI
11	105-2808	2	End-Rod
12	3220-5	2	Nut-Jam
13	107-7284	2	Tube-HOC
14	98-2330	2	Pivot Pin ASM
14:2	32121-67	1	Pin-Roll
14:3	32121-61	1	Pin-Roll
15	3272-24	2	Pin-Cotter
16	108-1948	1	LH Lift Arm ASM
17	108-1947	1	RH Lift Arm ASM

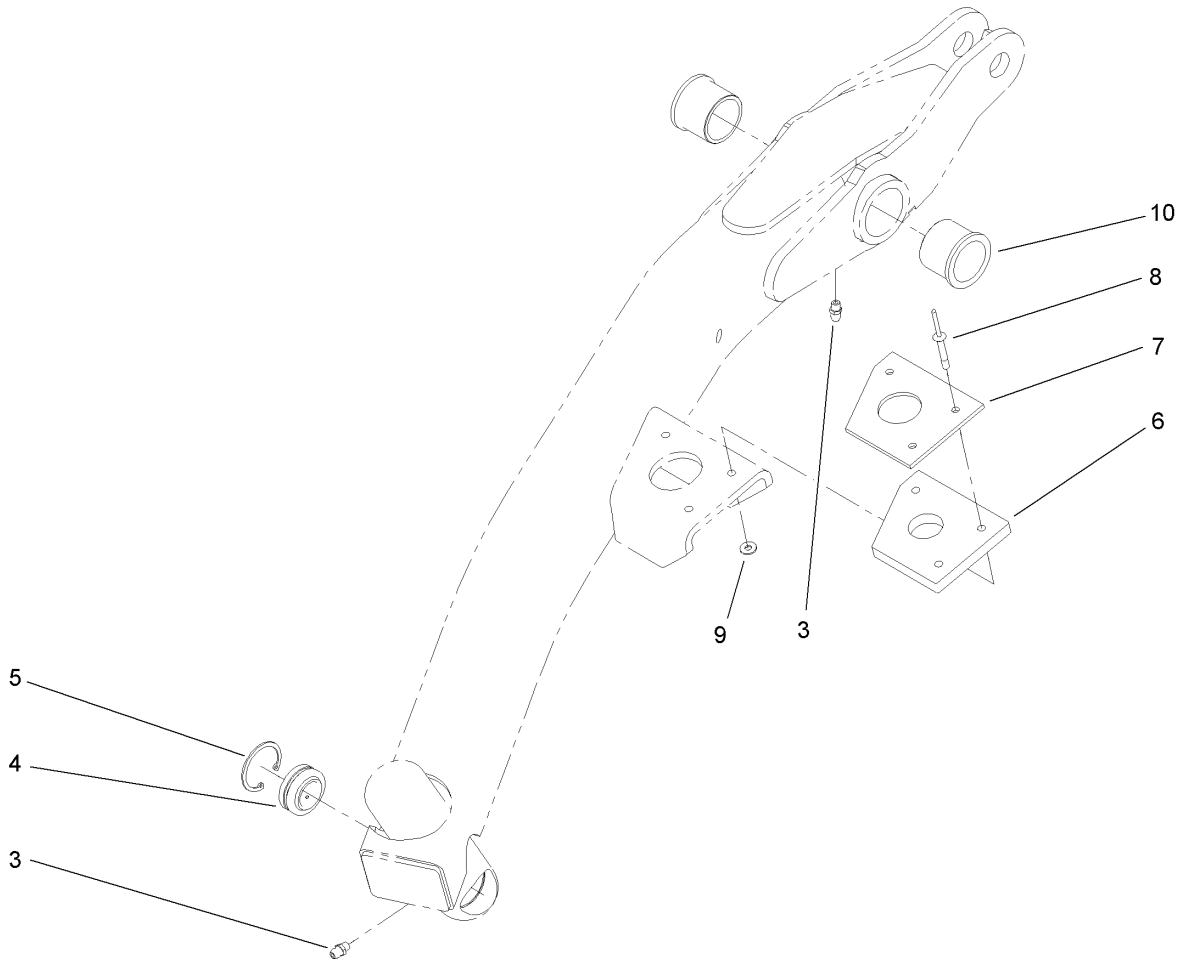

LH Lift Arm Assembly No. 108-1948

Ref	Part No.	Qty.	Description
3	302-5	2	Fitting-Grease
4	105-7441	1	Bearing-Spherical
5	32151-34	1	Ring-Retaining
6	108-5298	1	Pad-Rubber, Rear HOC
7	110-0602	1	Pad-Plastic, Rear HOC
8	110-0606	3	Rivet-Blind
9	3269-26	3	Washer-Flat
10	256-268	2	Bushing

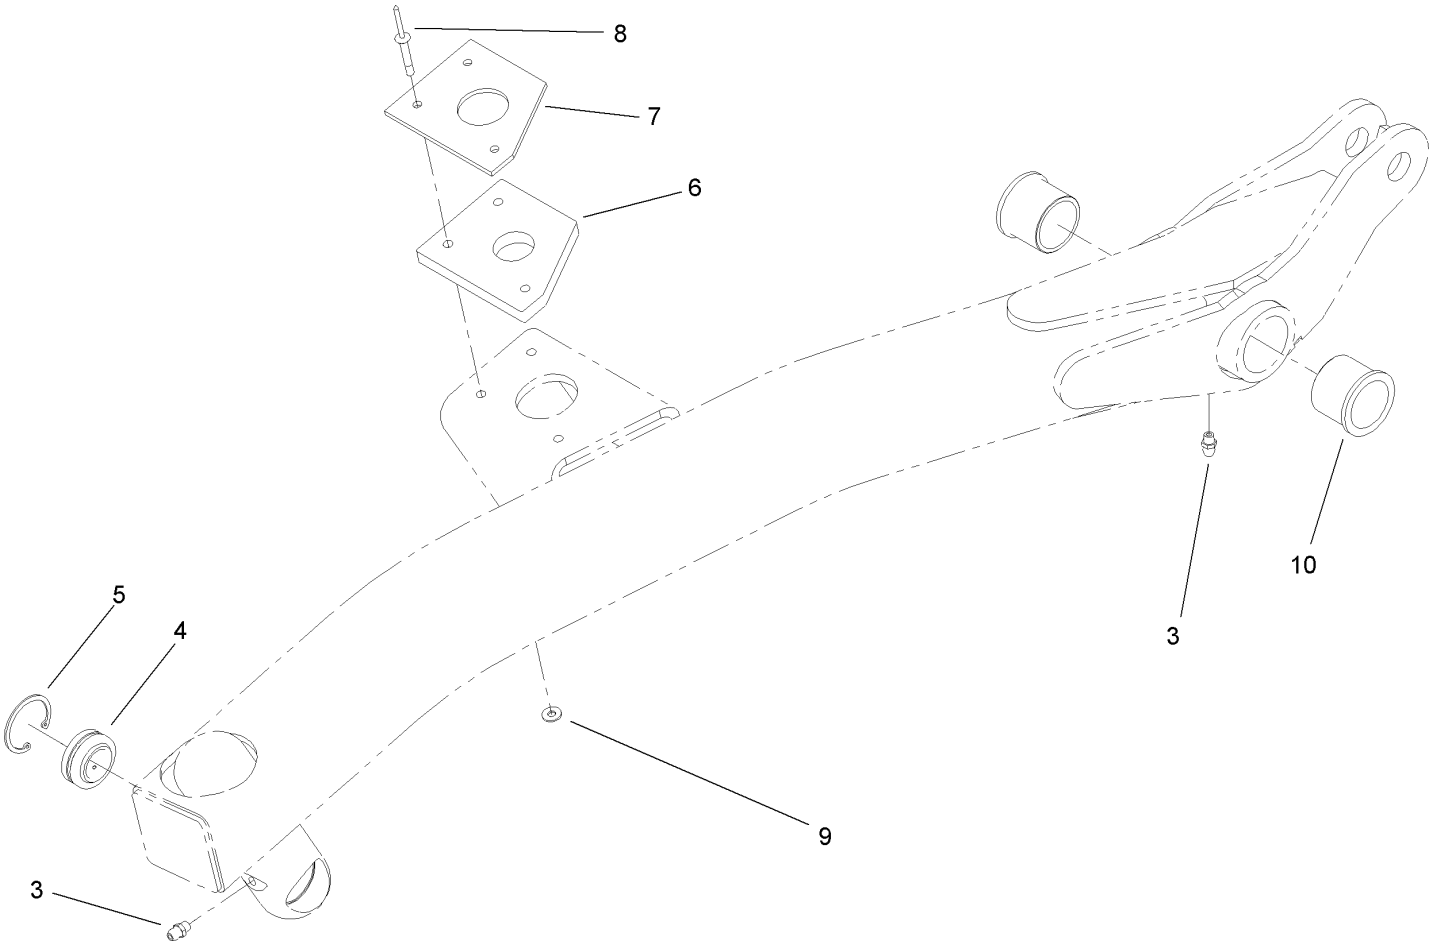

RH Lift Arm Assembly No. 108-1947

Ref	Part No.	Qty.	Description
3	302-5	2	Fitting-Grease
4	105-7441	1	Bearing-Spherical
5	32151-34	1	Ring-Retaining
6	108-5298	1	Pad-Rubber, Rear HOC
7	110-0602	1	Pad-Plastic, Rear HOC
8	110-0606	3	Rivet-Blind
9	3269-26	3	Washer-Flat
10	256-268	2	Bushing

Attachments and Accessories

For 30366 - 60in Side Discharge Mower, Groundsmaster 3320 and 3280-D

Product Name	Model/Part
High-Speed Blade Tip Kit	108-1960
Leaf Mulching Kit	108-5272
Blade-Rotary, 20.5 High Flow	110-4702-03
Blade-Rotary, 20.5 Atomic	110-4703-03
Castor Wheel ASM Kit	110-4767
60 Inch SDD Blade And Belt Kit	110-4770
8 Inch Foam Filled Wheel ASM	93-5974

NOTES

NOTES

NOTES

TORO®