Form Number 3360-868 Rev A

22in Recycler® Lawn Mower

Model No. 20332C - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Deck, Side Chute and Rear Door Assembly	3
Front Axle Assembly	4
Engine and Blade Assembly	5
Rear Axle and Transmission Assembly	6
Handle Assembly	7
Rear Bag Assembly	8
Cylinder Assembly Briggs and Stratton 126T02-0216-B1	9
Crankshaft Assembly Briggs and Stratton 126T02-0216-B1	10
Crankcase Assembly Briggs and Stratton 126T02-0216-B1	11
Carburetor Assembly Briggs and Stratton 126T02-0216-B1	12
Air Cleaner Assembly Briggs and Stratton 126T02-0216-B1	13
Governor Assembly Briggs and Stratton 126T02-0216-B1	14
Muffler and Fuel Tank Assembly Briggs and Stratton 126T02-0216-B1	15
Blower Housing Assembly Briggs and Stratton 126T02-0216-B1	16
Starter Assembly Briggs and Stratton 126T02-0216-B1	17
Engine Gasket Set Briggs and Stratton 126T02-0216-B1	18
Carburetor Overhaul Kit Briggs and Stratton 126T02-0216-B1	19
Attachments and Accessories List	20

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Obtain from your local Briggs & Stratton dealer
❹ Included in Carburetor Overhaul Kit (Ref. No. 121)
❺ Included in Engine Gasket Set (Ref. No. 358)
❻ Included in Carburetor Gasket Set (Ref. No. 977)

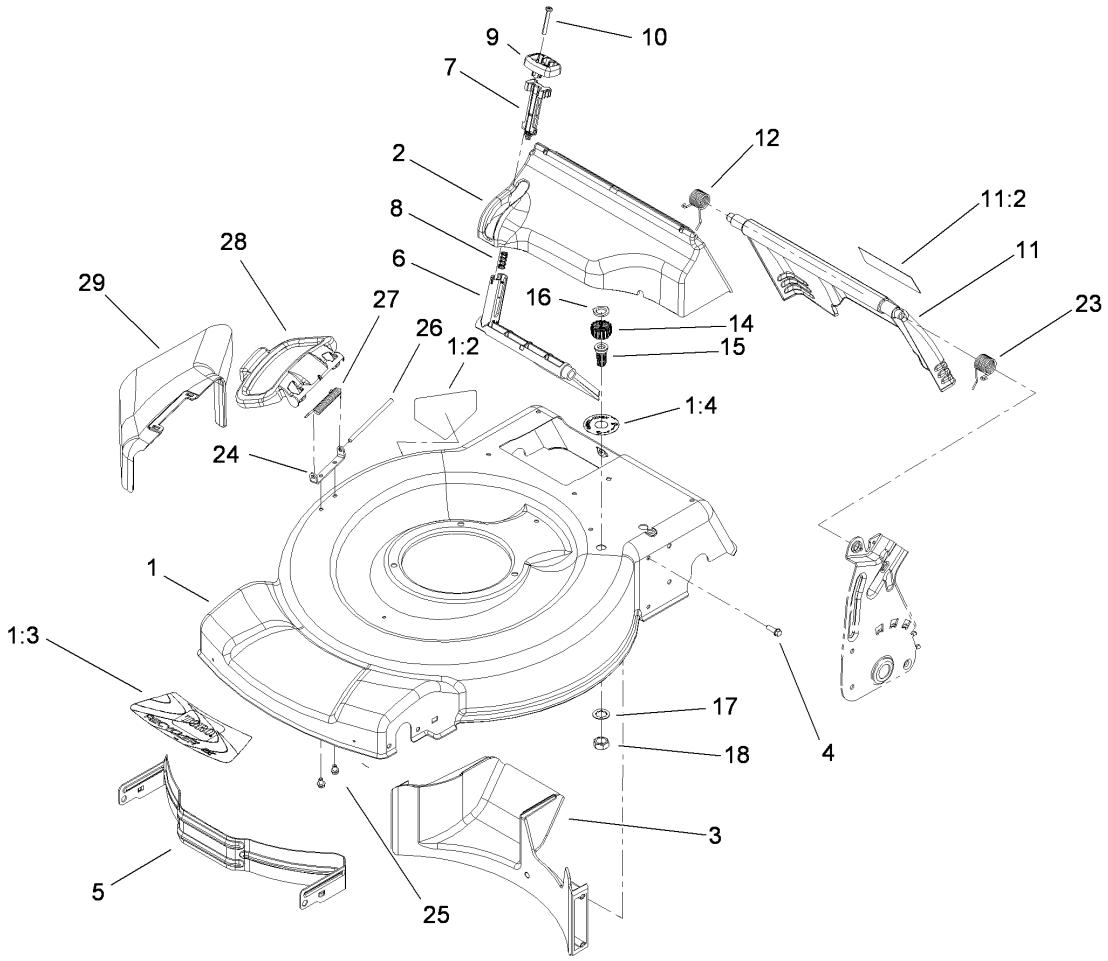

Deck, Side Chute and Rear Door Assembly

Ref	Part No.	Qty.	Description
1	117-1084	1	Housing ASM
1:2	94-8072	1	Decal-Danger
1:3	115-4676	1	Decal-Recycler
1:4	112-8867	1	Decal
2	115-4677	1	Chute-Recycle
3	114-7961	1	Baffle-Rear
4	46-8091	9	Screw-HWH
5	114-7963-01	1	Baffle-Front
6	114-7960	1	Deflector-Recycle
7	114-7959	1	Latch-Recycle
8	117-1031	1	Spring-Compression
9	114-7958	1	Knob-Recycle
10	32104-120	2	Screw-PPH
11	114-7992	1	Rear Door ASM
11:2	114-7982	1	Decal-Warning
12	114-7924	1	Spring-Torsion
14	112-6401	1	Coupling-Hose, Washout Port
15	112-6400	1	Port-Washout
16	112-6438	1	Washer-Seal, Washout Port
17	3254-5	1	Washer-Tooth
18	3218-6	1	Nut-Jam
23	115-2859	1	Spring-Torsion
24	112-6416	1	Bracket-Cover
25	99-8445	2	Screw-HWH

Ref	Part No.	Qty.	Description
26	99-5291	1	Rod-Cover
27	99-5293	1	Spring-Torsion
28	115-8449	1	Deflector-Side
29	115-8447	1	Chute-Discharge, Side

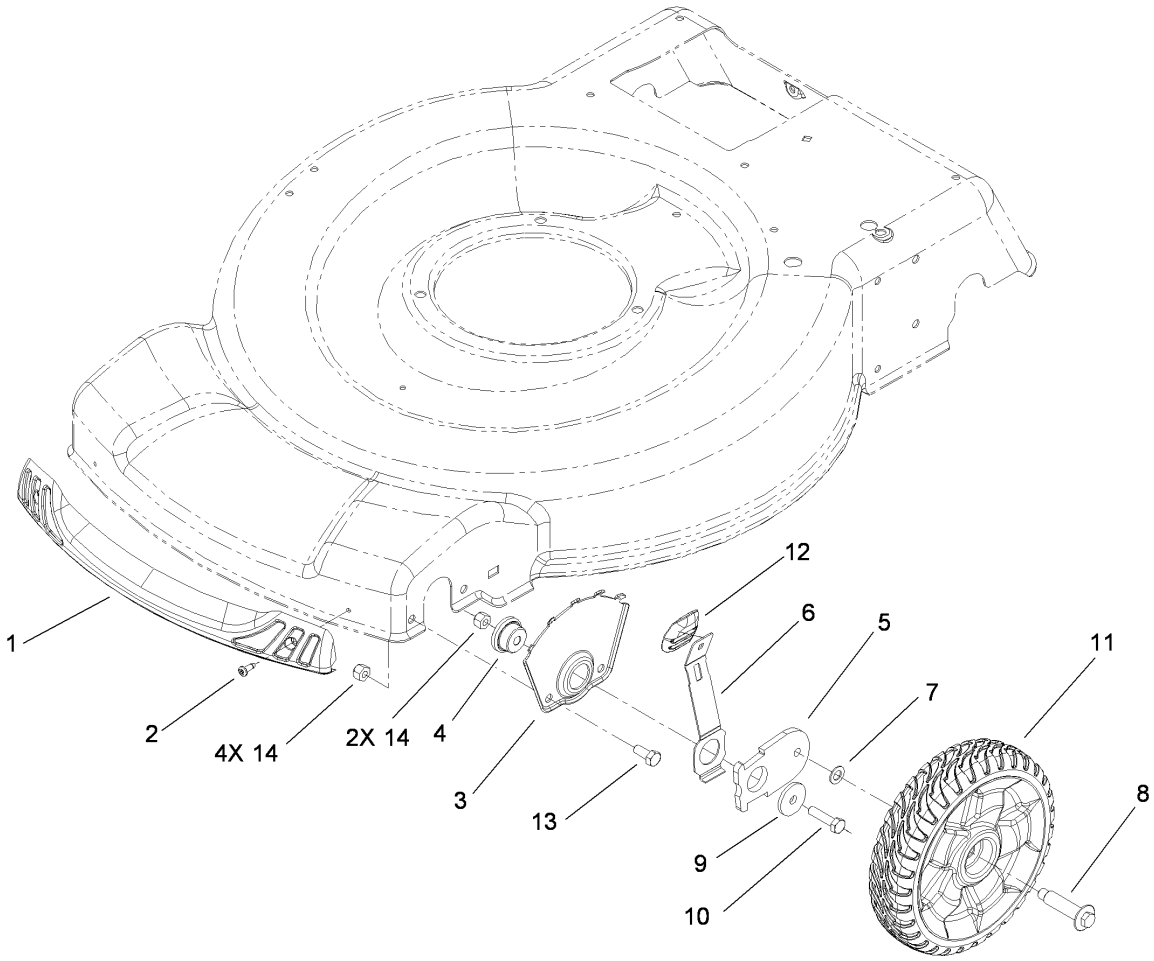

Front Axle Assembly

Ref	Part No.	Qty.	Description
1	114-7987	1	Bumper
2	105-6849	2	Screw-Thread Forming
3	115-1956-03	2	Plate-HOC, Front
4	105-1818	2	Bushing-Mount, HOC
5	105-1807	2	Arm-Pivot, Front
6	105-1809	2	Arm-Spring
7	40-1940	2	Washer
8	614650	2	Bolt-Shoulder
9	105-3048	2	Washer-Flat
10	322-6	2	Screw-HH
11	115-2894	2	8In Wheel ASM
12	105-3042	2	Knob-Lever, HOC
13	322-3	4	Screw-HH
14	3296-29	6	Nut-Lock, NI

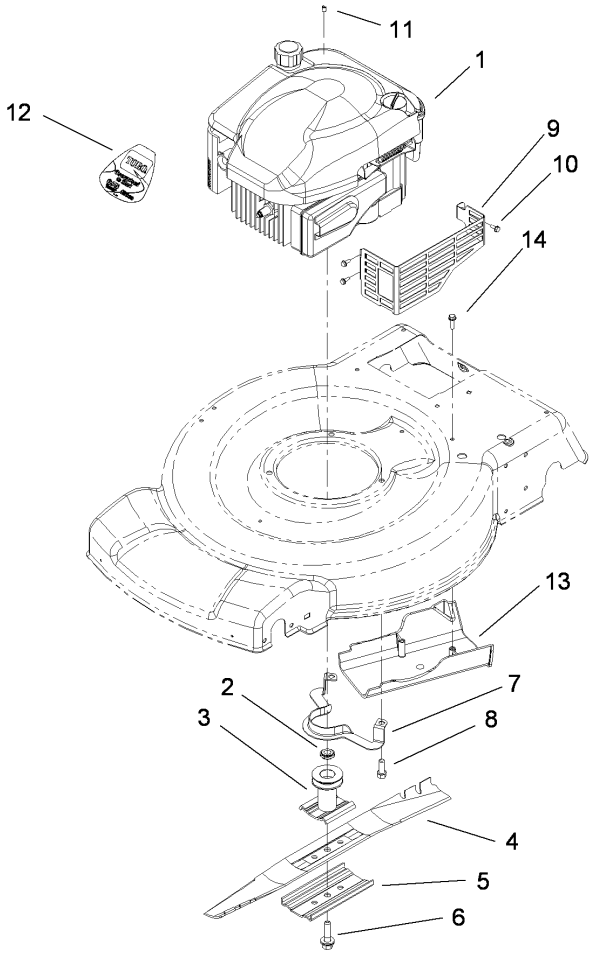

Engine and Blade Assembly

Ref	Part No.	Qty.	Description
❷❸1		1	Engine-Briggs, 126T02-0216-B1
2	106-3999	1	Spacer-Driver
3	106-3987	1	Blade Driver ASM
4	108-9764-03	1	Blade-22 Inch
5	108-3766-03	1	Support-Blade
6	105-8579	1	Bolt-Blade
7	105-3030-03	1	Guide-Belt
8	95-1726	3	Screw-Taptite
9	104-7577-03	1	Shield-Muffler
10	32144-1	3	Screw-Taptite
11	2210-316	1	Stop-Rope
12	117-1017	1	Decal
13	114-7937	1	Cover-Belt
14	46-8091	2	Screw-HWH

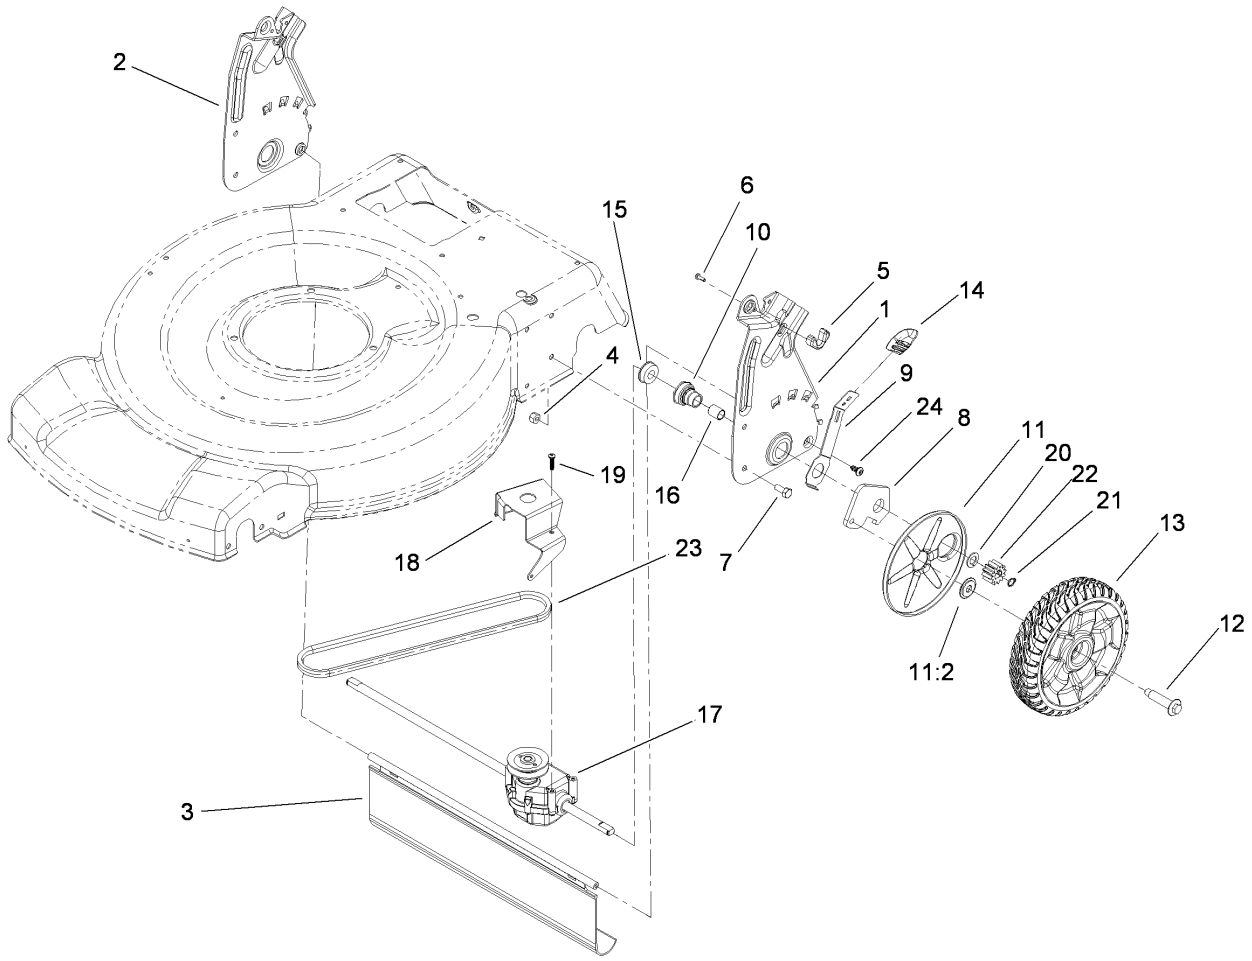

Rear Axle and Transmission Assembly

Ref	Part No.	Qty.	Description
1	114-7955-03	1	Plate-LH, Rear HOC
2	114-7956-03	1	Plate-RH, Rear HOC
3	115-2893	1	Shield-Trailing
4	3296-29	4	Nut-Lock, NI
5	115-8406	2	Anchor-Bag (Rwd)
6	105-9437	2	Screw-PPH
7	322-3	4	Screw-HH
8	108-9781	2	Arm-Pivot, Rear
9	108-9780	2	Arm-Spring
10	108-9779	2	Retainer-Bushing, HOC
11	110-1792	2	Wheel Cover ASM
❶❷11:1		1	Cover-Wheel
11:2	614426	1	Washer-Stepped
12	614650	2	Bolt-Shoulder
13	115-4695	2	Wheel Gear ASM
14	105-3042	2	Knob-Lever, HOC
15	104-8699	2	Bearing-Ball
16	108-9782	2	Bushing-Sleeve
17	115-4652	1	Transmission (4.5/1)
18	114-7977-03	1	Bracket-Transmission
19	108-7476	3	Screw-Plastite
20	110-7191	2	Washer-Thrust
21	32151-61	2	Ring-Retaining
22	115-4668	2	Gear-Pinion, 12T

Ref	Part No.	Qty.	Description
23	115-4669	1	V-Belt
24	117-1092	2	Screw-PPH

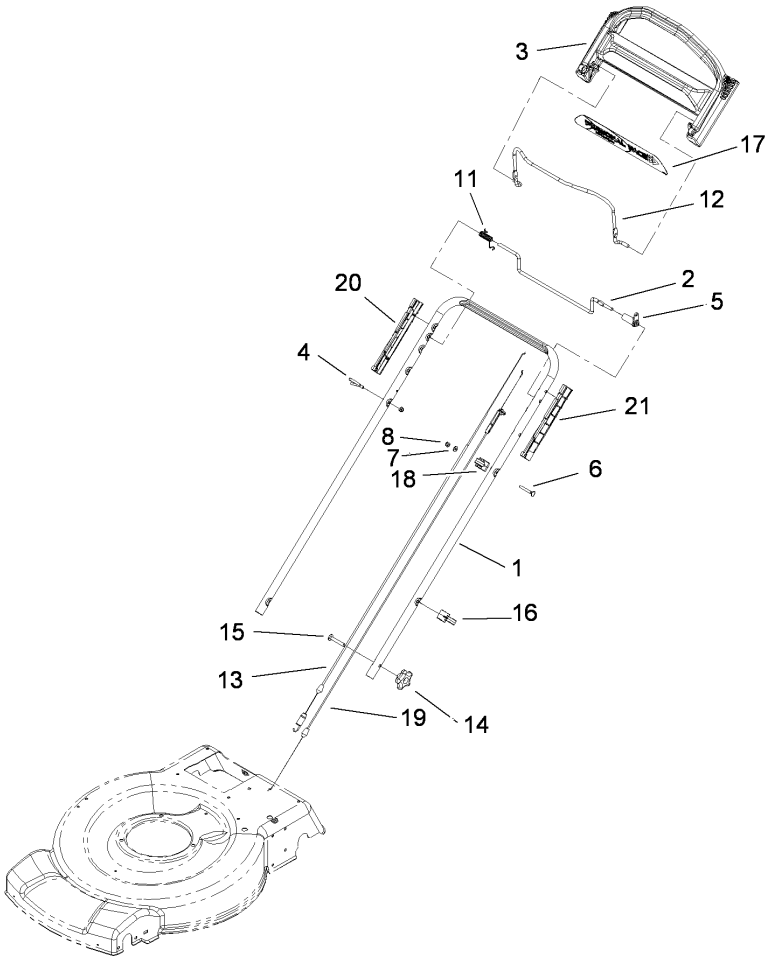

Handle Assembly

Ref	Part No.	Qty.	Description
1	114-0333-05	1	Handle
2	99-1588	1	Bar-Control, Traction
3	104-8678	1	Handle-Control
4	86-9671	1	Guide-Rope
5	99-1589	1	Lever-Traction
6	95-4453	1	Screw
7	3256-1	1	Washer-Flat
8	3296-73	2	Nut-Lock, NI
11	104-8690	1	Spring-Torsion
12	104-8679-03	1	Bail-Brake
13	115-8435	1	Cable-Traction
14	108-8162	2	Knob-Locking
15	3230-6	2	Screw-CARR
16	106-6805	1	Guide-Cable
17	117-1019	1	Decal
18	99-5239	1	Anchor-Cable
19	115-8437	1	Cable-Brake
20	105-6841	1	Guide-RH
21	105-6842	1	Guide-LH

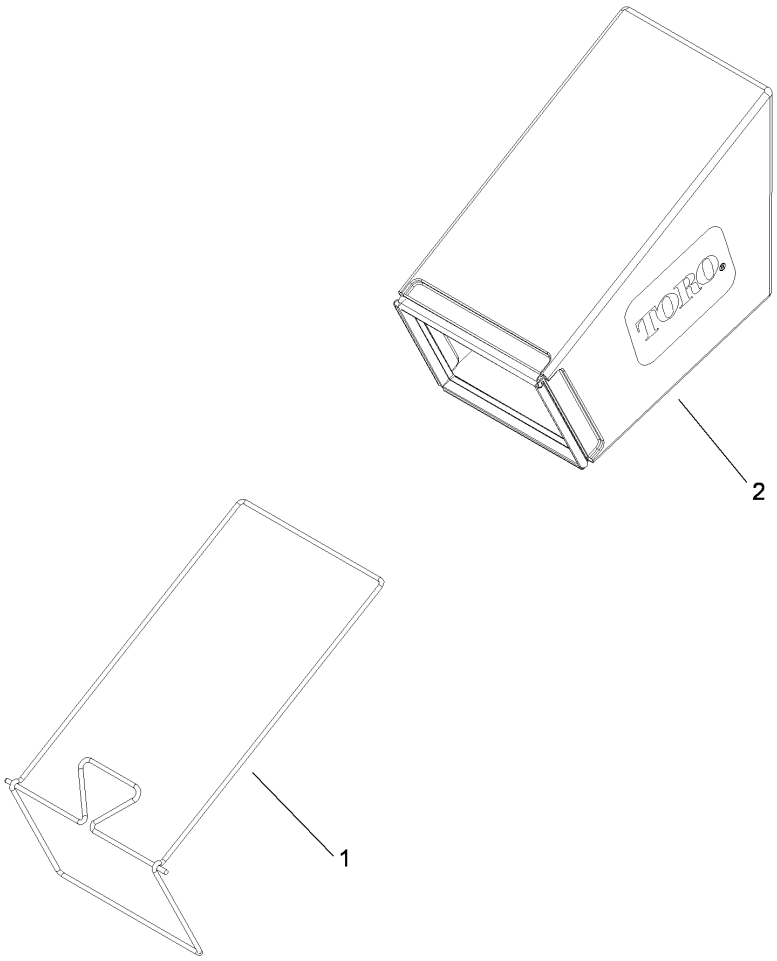

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	114-2679-03	1	Bag Frame ASM
2	115-4673	1	Grass Bag ASM

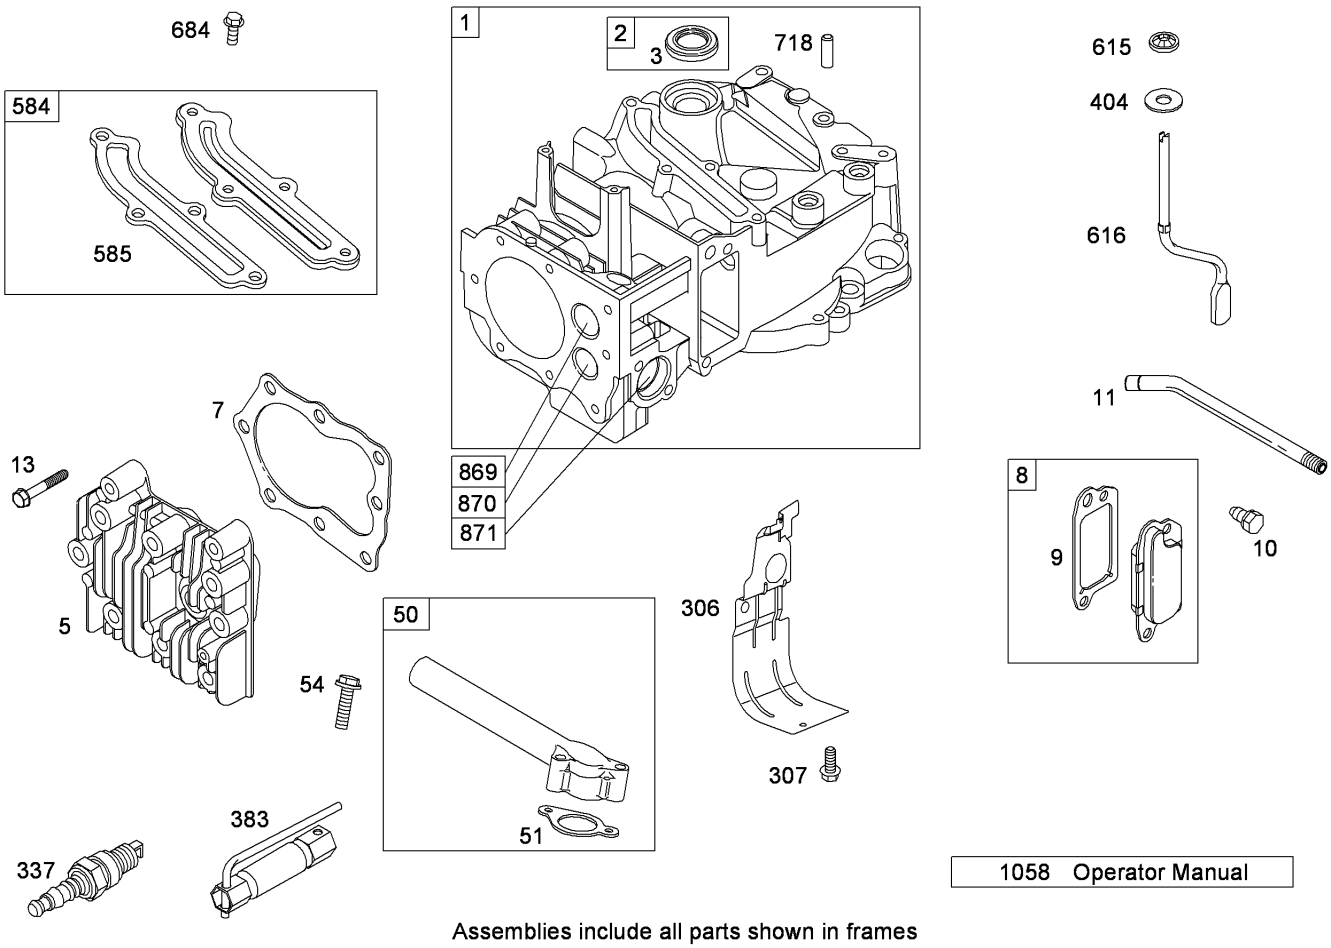

Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
❸1	697322	1	Cylinder ASM
❸2	399269	1	Bushing And Seal Kit
❸❺3	299819s	1	Seal-Oil (Magneto Side)
❸5	691160	1	Head-Cylinder
❸❺7	692249	1	Gasket-Head, Cylinder
❸8	695250	1	Breather ASM
❸9	696125	1	Gasket-Breather
❸10	691125	1	Screw (Breather ASM)
❸11	691781	1	Tube-Breather
❸13	690912	1	Screw (Cylinder Head)
❸50	794305	1	Manifold-Intake
❸❺51	794306	1	Gasket-Intake
❸54	691650	1	Screw (Intake Manifold)
❸306	790836	1	Shield-Cylinder
❸307	690345	1	Screw (Cylinder Shield)
❸337	802592s	1	Plug-Spark
❸383	89838s	1	Wrench-Spark Plug
❸404	690272	1	Washer (Governor Crank)
❸584	697734	1	Cover-Passage, Breather
❸❺585	691879	1	Gasket-Passage, Breather
❸615	690340	1	Retainer-Shaft, Governor
❸616	698801	1	Crank-Governor
❸684	690345	1	Screw (Breather Passage Cover)
❸718	690959	1	Pin-Locating

Ref	Part No.	Qty.	Description
❸869	691155	1	Seat-Valve (Intake)
❸870	690380	1	Seat-Valve (Exhaust)
❸871	262001	1	Bushing-Guide (Exhaust)
❸871	63709	1	Bushing-Guide (Intake)
❸1058	277039TRI	1	Operator Manual

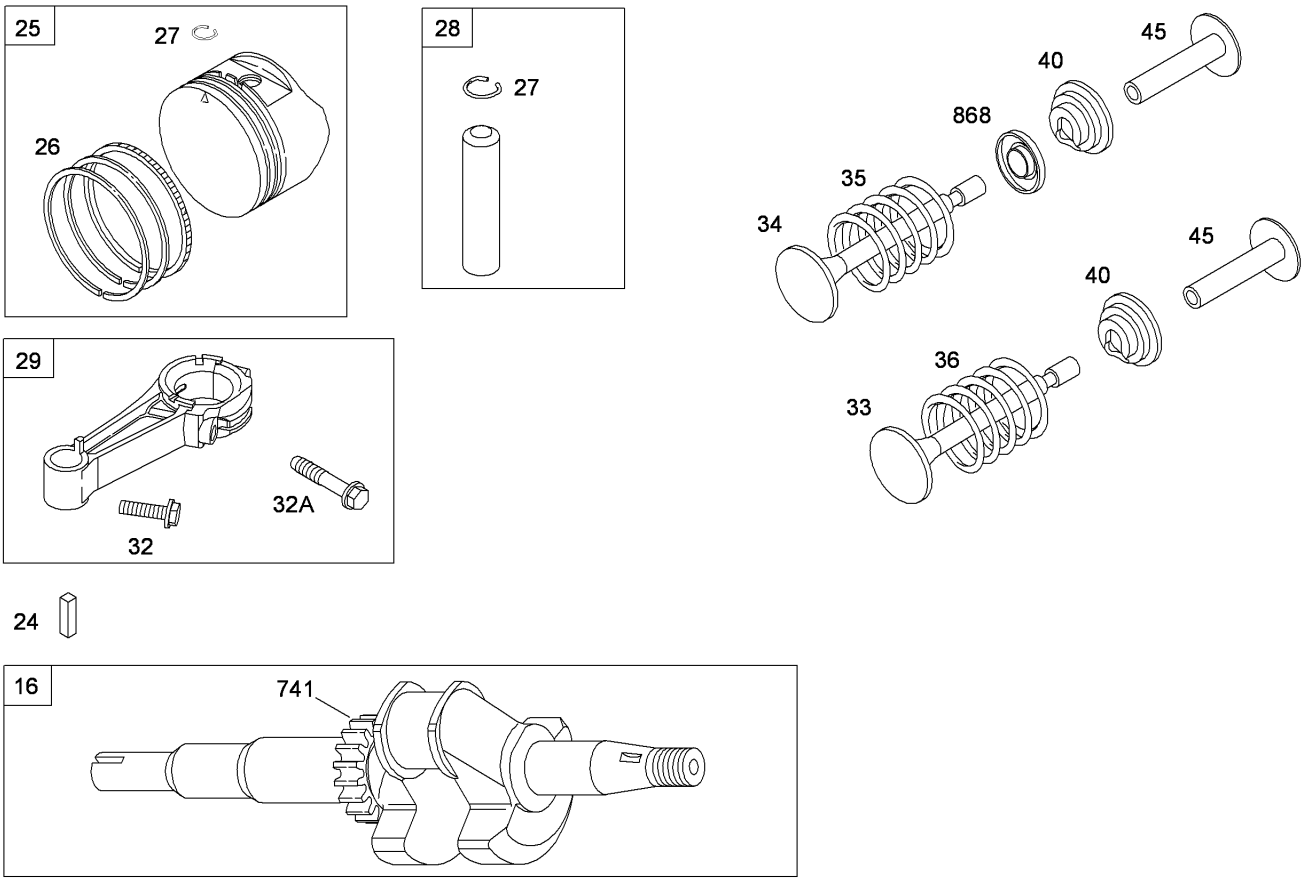

Assemblies include all parts shown in frames

Crankshaft Assembly
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
❸16	696009	1	Crankshaft
❸24	222698s	1	Key-Flywheel
❸25	795429	1	Piston ASM (STD)
❸25	795430	1	Piston ASM (.020 Oversize)
❸26	795431	1	Ring Set (STD)
❸26	795432	1	Ring Set (.020 Oversize)
❸27	691866	1	Lock-Pin, Piston
❸28	499423	1	Pin-Piston (STD)
❸29	499424	1	Rod-Connecting
❸32	691664	1	Screw (Connecting Rod)
❸32A	695759	1	Screw (Connecting Rod)
❸33	262651s	1	Valve-Exhaust
❸34	262652s	1	Valve-Intake
❸35	691270	1	Spring-Valve (Intake)
❸36	691270	1	Spring-Valve (Exhaust)
❸40	692194	1	Retainer-Valve
❸45	690548	1	Tappet-Valve
❸741	790345	1	Gear-Timing
❸868	697338	1	Seal-Valve

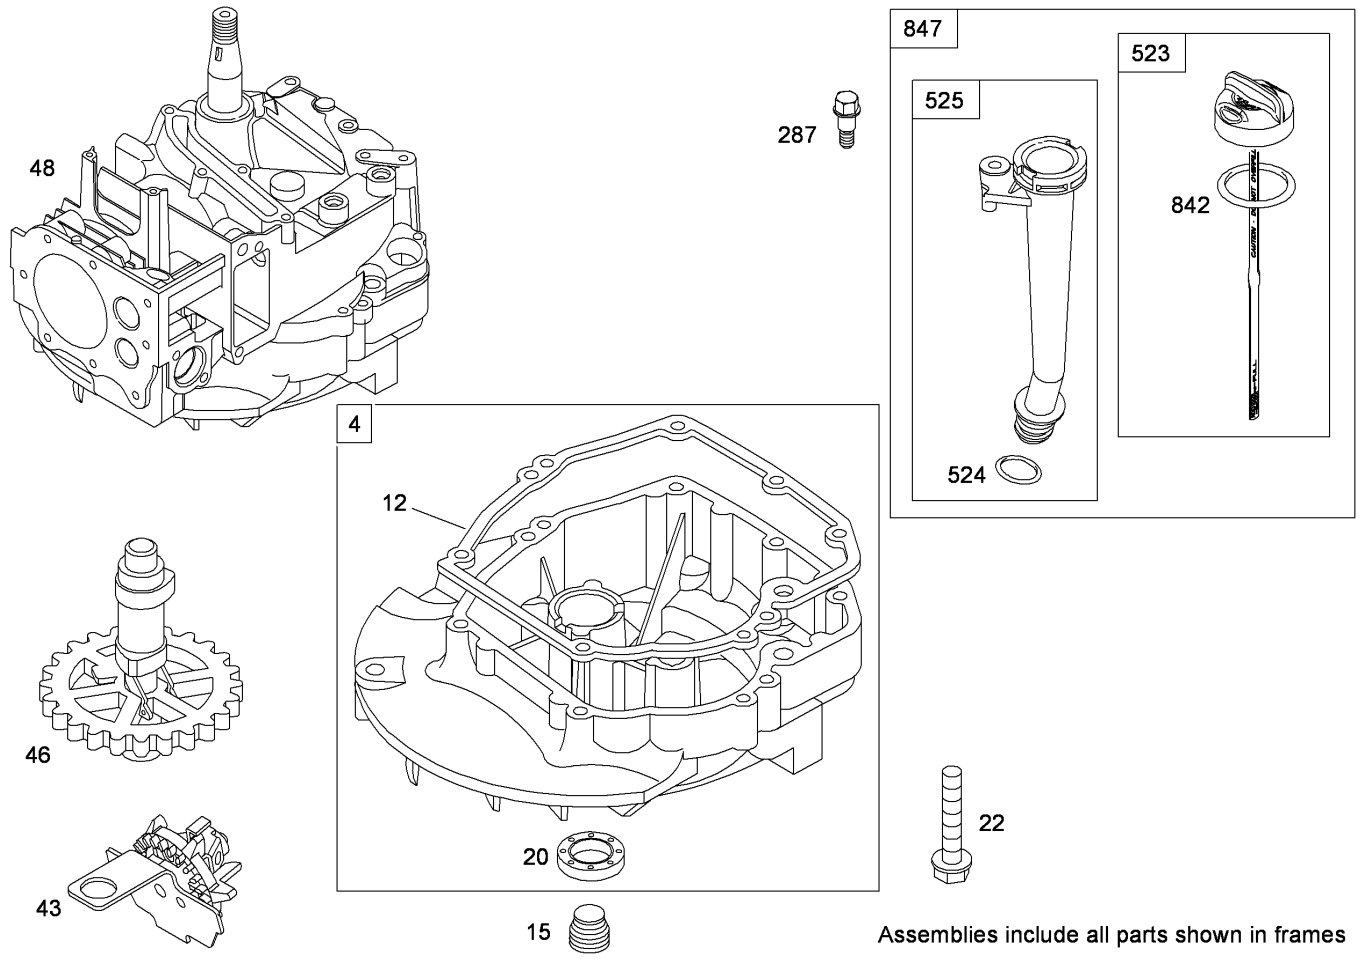

Assemblies include all parts shown in frames

Crankcase Assembly
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
❸4	493279	1	Sump-Engine
❸❺12	692232	1	Gasket-Crankcase (.015 STD)
❸15	691680	1	Plug-Drain, Oil
❸❺20	399781s	1	Seal-Oil (PTO Side)
❸22	691092	1	Screw (Engine Sump)
❸43	691997	1	Slinger-Oil, Governor
❸46	691449	1	Camshaft
❸48	792742	1	Block-Short
❸287	690940	1	Screw (Dipstick Tube)
❸523	499621	1	Dipstick
❸❺524	692296	1	Seal-O Ring (Dipstick Tube)
❸525	495265	1	Tube-Dipstick
❸❺842	691031	1	Seal-O Ring (Dipstick Tube)
❸847	692047	1	Dipstick Tube ASM

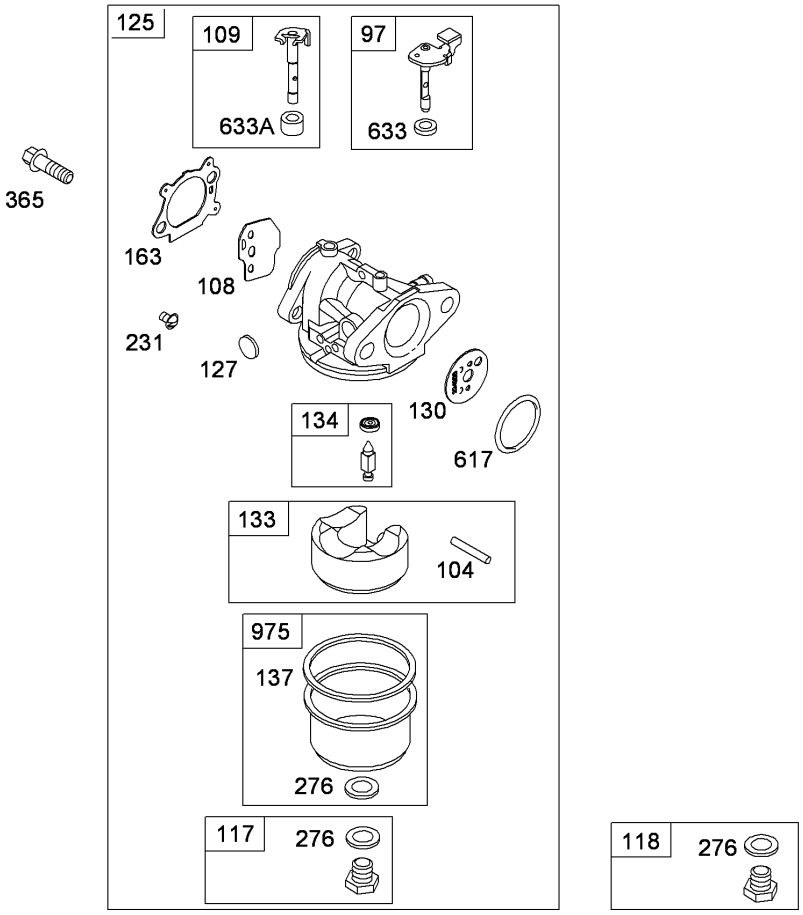

Assemblies include all parts shown in frames

Carburetor Assembly
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
❸97	696565	1	Shaft-Throttle
❸❹104	691242	1	Pin-Hinge, Float
❸108	790844	1	Valve-Choke
❸109	790843	1	Shaft-Choke
❸117	691428	1	Jet-Main (Standard)
❸118	498977	1	Jet-Main (High Altitude)
❸125	794304	1	Carburetor
❸❹127	694468	1	Plug-Welch
❸130	696564	1	Valve-Throttle
❸133	398187	1	Float-Carburetor
❸❹134	398188	1	Needle And Seat Kit
❸❹137 ❻	693981	1	Gasket-Bowl, Float
❸❹163 ❺❻	272653s	1	Gasket-Cleaner, Air
❸231	691636	1	Screw (Choke Valve)
❸❹276 ❻	271716	1	Washer-Sealing
❸365	692524	1	Screw (Carburetor)
❸❹617 ❻	270344s	1	Seal-O Ring (Intake Manifold)
❸❹633 ❻	691321	1	Seal-Shaft, Choke Throttle
❸❹633A ❻	693867	1	Seal-Shaft, Choke Throttle
❸975	493640	1	Bowl-Float

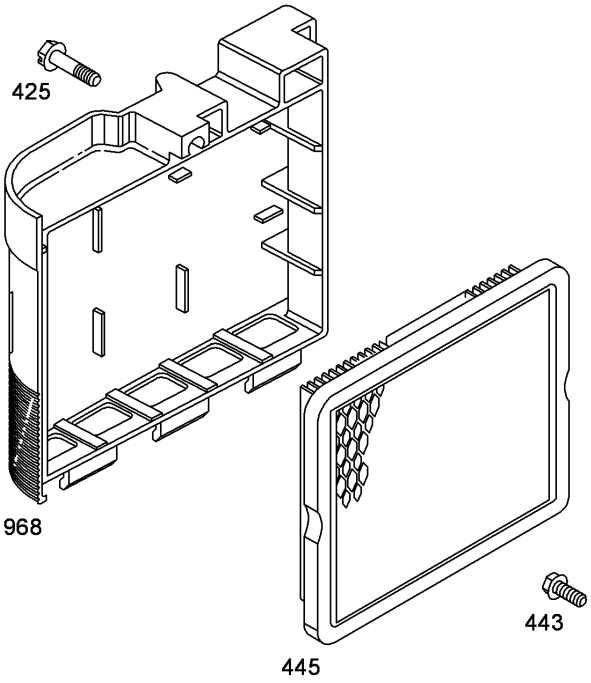

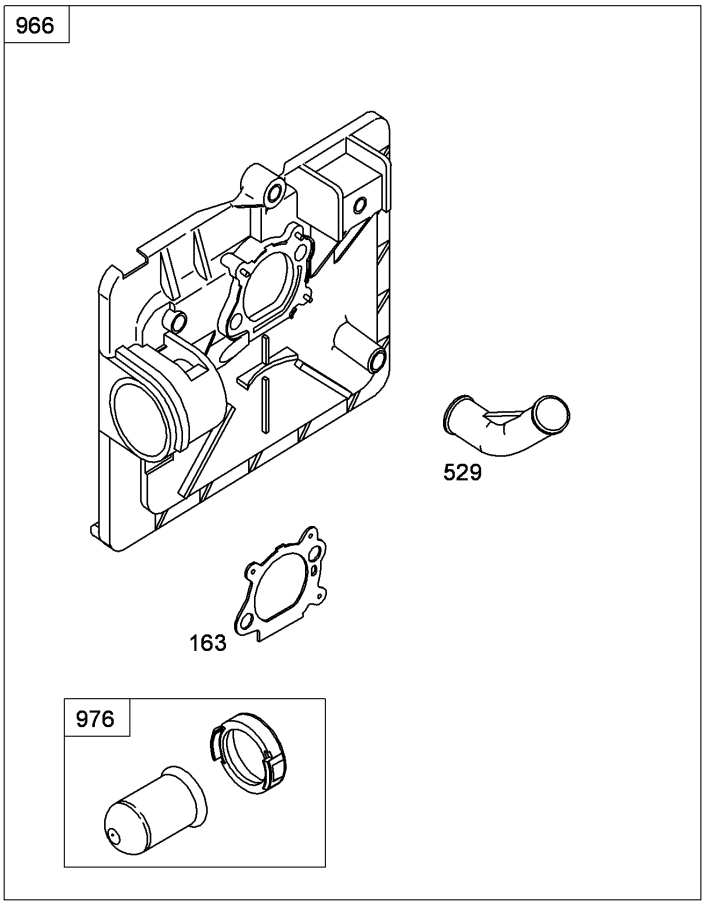

Assemblies include all parts shown in frames

Air Cleaner Assembly
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
❸❹163 ❺❻	272653s	1	Gasket-Cleaner, Air
❸425	690670	1	Screw (Air Cleaner Cover)
❸443	692523	1	Screw (Air Cleaner Primer Base)
❸445	491588s	1	Filter-Cartridge, Air Cleaner
❸529	691923	1	Grommet
❸966	792040	1	Base-Primer, Air Cleaner
❸968	692298	1	Cover-Cleaner, Air
❸976	694395	1	Primer-Carburetor

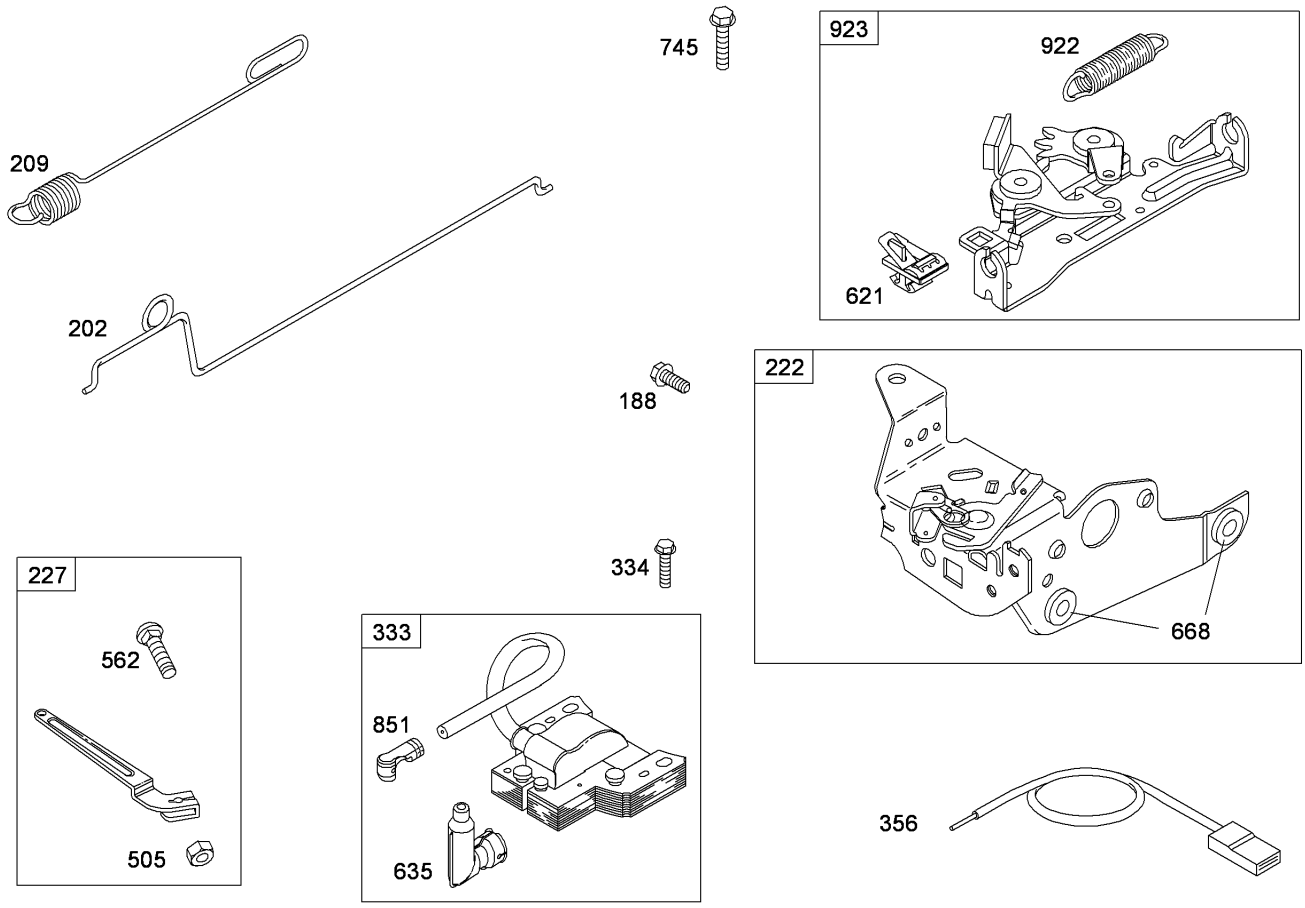

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
❸188	693399	1	Screw (Control Bracket)
❸202	691829	1	Link-Governor, Mechanical
❸209	691292	1	Spring-Governor
❸222	793754	1	Bracket-Control
❸227	690783	1	Lever-Control, Governor
❸333	793353	1	Armature-Magneto
❸334	691061	1	Screw (Magneto Armature)
❸356	692390	1	Wire-Stop
❸505	691251	1	Nut (Governor Control Lever)
❸562	691119	1	Bolt (Governor Control Lever)
❸621	692310	1	Switch-Stop
❸635	793351	1	Boot-Spark Plug
❸❺668	493823	1	Spacer
❸745	691648	1	Screw (Brake)
❸851	692424	1	Terminal–Spark Plug
❸922	691831	1	Spring-Brake
❸923	691994	1	Brake ASM

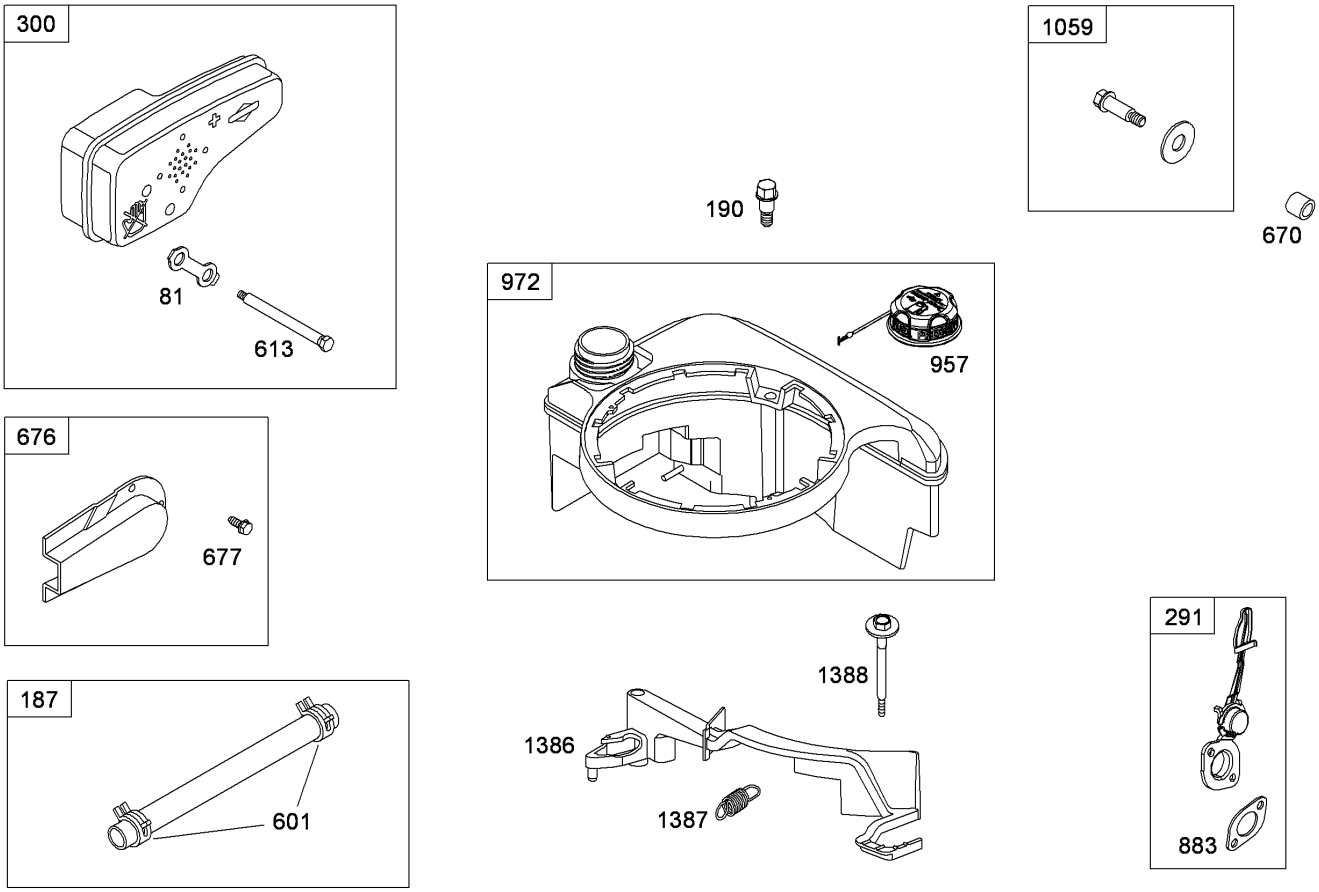

Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
❸81	691740	1	Lock-Screw, Muffler
❸187	791766	1	Line-Fuel (Cut To Required Length)
❸190	690940	1	Screw (Fuel Tank)
❸291	790830	1	Thermostat
❸300	692038	1	Muffler
❸601	791850	1	Clamp-Hose
❸613	691340	1	Screw (Muffler)
❸670	692294	1	Spacer-Tank, Fuel
❸676	493871	1	Deflector-Muffler
❸677	690661	1	Screw (Muffler Deflector)
❸883	691881	1	Gasket-Exhaust
❸957	699985	1	Cap-Tank, Fuel
❸972	699374	1	Tank-Fuel
❸1059	692311	1	Screw And Washer Kit
❸1386	790848	1	Vane-Air
❸1387	790849	1	Spring-Vane, Air
❸1388	790850	1	Screw (Air Vane)

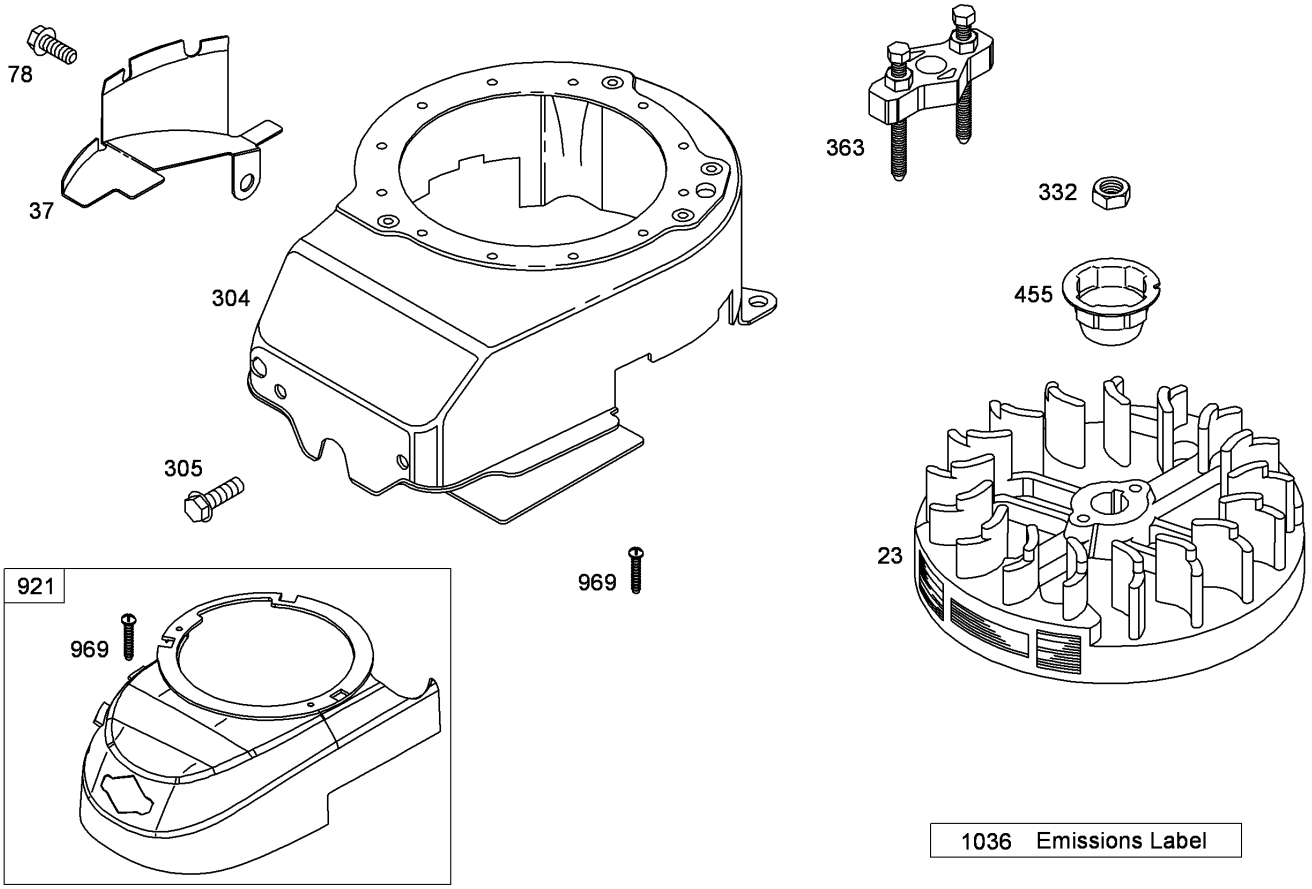

Assemblies include all parts shown in frames

Blower Housing Assembly
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
❸23	691987	1	Flywheel
❸37	694086	1	Guard-Flywheel
❸78	691108	1	Screw (Flywheel Guard)
❸304	790983	1	Housing-Blower
❸305	691108	1	Screw (Blower Housing)
❸332	690662	1	Nut (Flywheel)
❸363	19069	1	Puller-Flywheel
❸455	791760	1	Cup-Flywheel
❸921	790036	1	Cover-Housing, Blower
❸969	691138	1	Screw (Blower Housing Cover)
❸1036		1	Label-Emissions

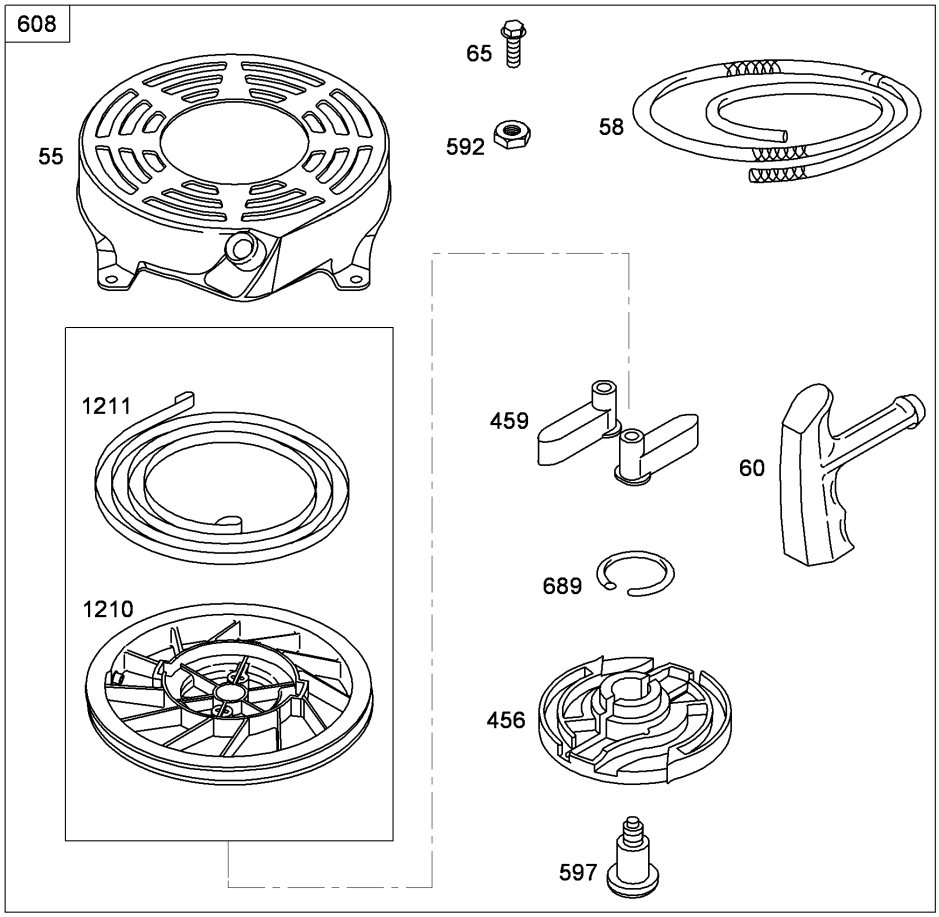

Assemblies include all parts shown in frames

Starter Assembly
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
❸55	691421	1	Housing-Starter, Rewind
❸58	697316	1	Rope-Starter (Cut To Required Length)
❸60	281434s	1	Grip-Rope, Starter
❸65	690837	1	Screw (Rewind Starter)
❸456	692299	1	Plate-Friction, Pawl
❸459	281505s	1	Ratchet-Pawl
❸592	690800	1	Nut (Rewind Starter)
❸597	691696	1	Screw (Pawl Friction Plate)
❸608	497680	1	Starter-Rewind
❸689	691855	1	Spring-Friction
❸1210	498144	1	Pulley And Spring ASM (Pulley)
❸1211	498144	1	Pulley And Spring ASM (Spring)

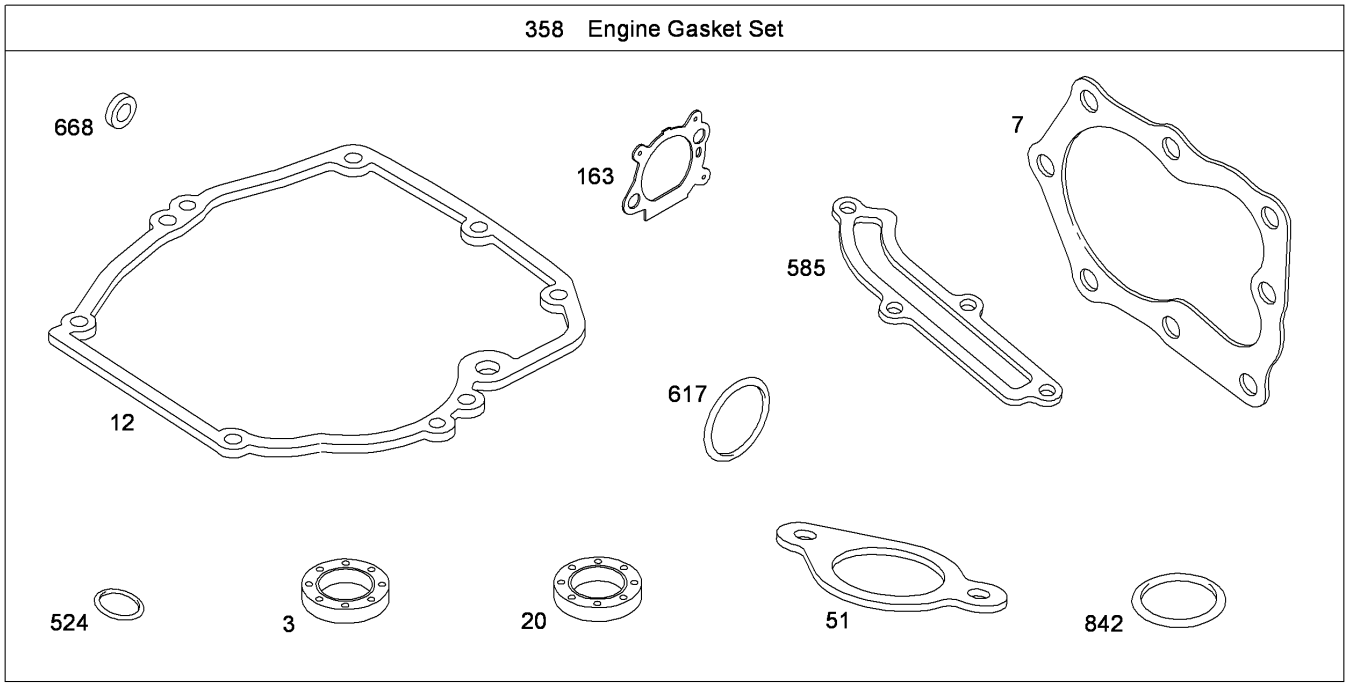

Assemblies include all parts shown in frames

Engine Gasket Set
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
3 5 3	299819s	1	Seal-Oil (Magneto Side)
3 5 7	692249	1	Gasket-Head, Cylinder
3 5 12	692232	1	Gasket-Crankcase (.015 STD)
3 5 20	399781s	1	Seal-Oil (PTO Side)
3 5 51	794306	1	Gasket-Intake
3 4 163	272653s	1	Gasket-Cleaner, Air
5 6			
3 358	794307	1	Engine Gasket Set
3 5 524	692296	1	Seal-O Ring (Dipstick Tube)
3 5 585	691879	1	Gasket-Passage, Breather
3 4 617	270344s	1	Seal-O Ring (Intake Manifold)
5 6			
3 5 668	493823	1	Spacer
3 5 842	691031	1	Seal-O Ring (Dipstick)

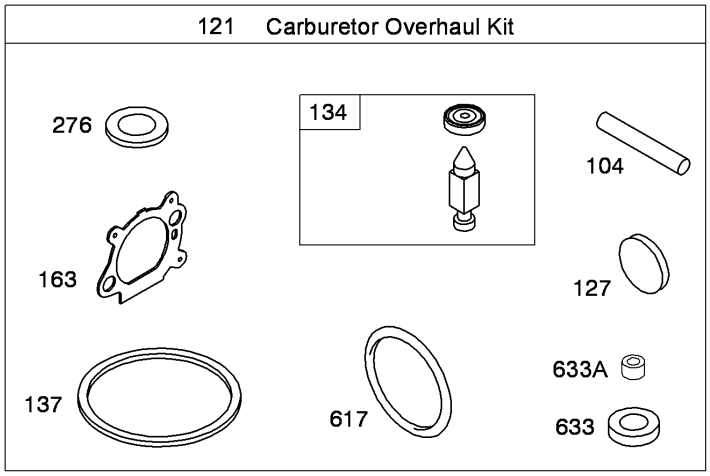

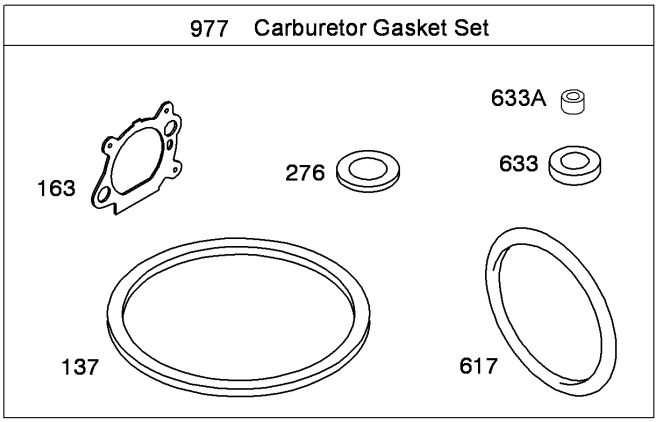

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton 126T02-0216-B1

Ref	Part No.	Qty.	Description
❸❹104	691242	1	Pin-Hinge, Float
❸121	498260	1	Carburetor Overhaul Kit
❸❹127	694468	1	Plug-Welch
❸❹134	398188	1	Needle And Seat Kit
❸❹137 ❻	693981	1	Gasket-Bowl, Float
❸❹163 ❺❻	272653s	1	Gasket-Cleaner, Air
❸❹276 ❻	271716	1	Washer-Sealing
❸❹617 ❺❻	270344s	1	Seal-O Ring (Intake Manifold)
❸❹633 ❻	691321	1	Seal-Shaft, Choke Throttle
❸❹633A ❻	693867	1	Seal-Shaft, Choke Throttle
❸977	498261	1	Carburetor Gasket Set

Attachments and Accessories

For 20332C - 22in Recycler Lawn Mower

Product Name	Model/Part
Traction Assist Handle Kit	108-8120
Loose Parts Kit	117-4133
Replacement Bag	59310
Replacement Bag Kit	59312
22 Inch Blade Kit	59534

NOTES

NOTES

NOTES

TORO®