Form Number 3359-175 Rev B

Super Recycler® Lawn Mower

Model No. 20095 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Housing Assembly	3
Housing Assembly No. 115-2854	4
Discharge Door Assembly No. 107-3717	5
Height-of-Cut Assembly	6
Transmission Assembly	7
Gear Case Assembly No. 108-8140	8
Engine Assembly	9
Handle Assembly	10
Electrical Assembly	11
Bag Assembly	12
Cylinder Assembly Briggs and Stratton 126T07-0226-B1	13
Crankshaft Assembly Briggs and Stratton 126T07-0226-B1	14
Crankcase Assembly Briggs and Stratton 126T07-0226-B1	15
Carburetor Assembly Briggs and Stratton 126T07-0226-B1	16
Air Cleaner Assembly Briggs and Stratton 126T07-0226-B1	17
Governor Assembly Briggs and Stratton 126T07-0226-B1	18
Muffler and Fuel Tank Assembly Briggs and Stratton 126T07-0226-B1	19
Blower Housing Assembly Briggs and Stratton 126T07-0226-B1	20
Starter Assembly Briggs and Stratton 126T07-0226-B1	21
Electric Starter Assembly Briggs and Stratton 126T07-0226-B1	22
Engine Gasket Set Briggs and Stratton 126T07-0226-B1	23
Carburetor Overhaul Kit Briggs and Stratton 126T07-0226-B1	24
Attachments and Accessories List	25

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated

❷ Not serviced separately

❸ Obtain from your local Briggs & Stratton dealer

❹ Included in Carburetor Overhaul Kit (Ref. No. 121)

❺ Included in Engine Gasket Set (Ref. No. 358)

❻ Included in Carburetor Gasket Set (Ref. No. 977)

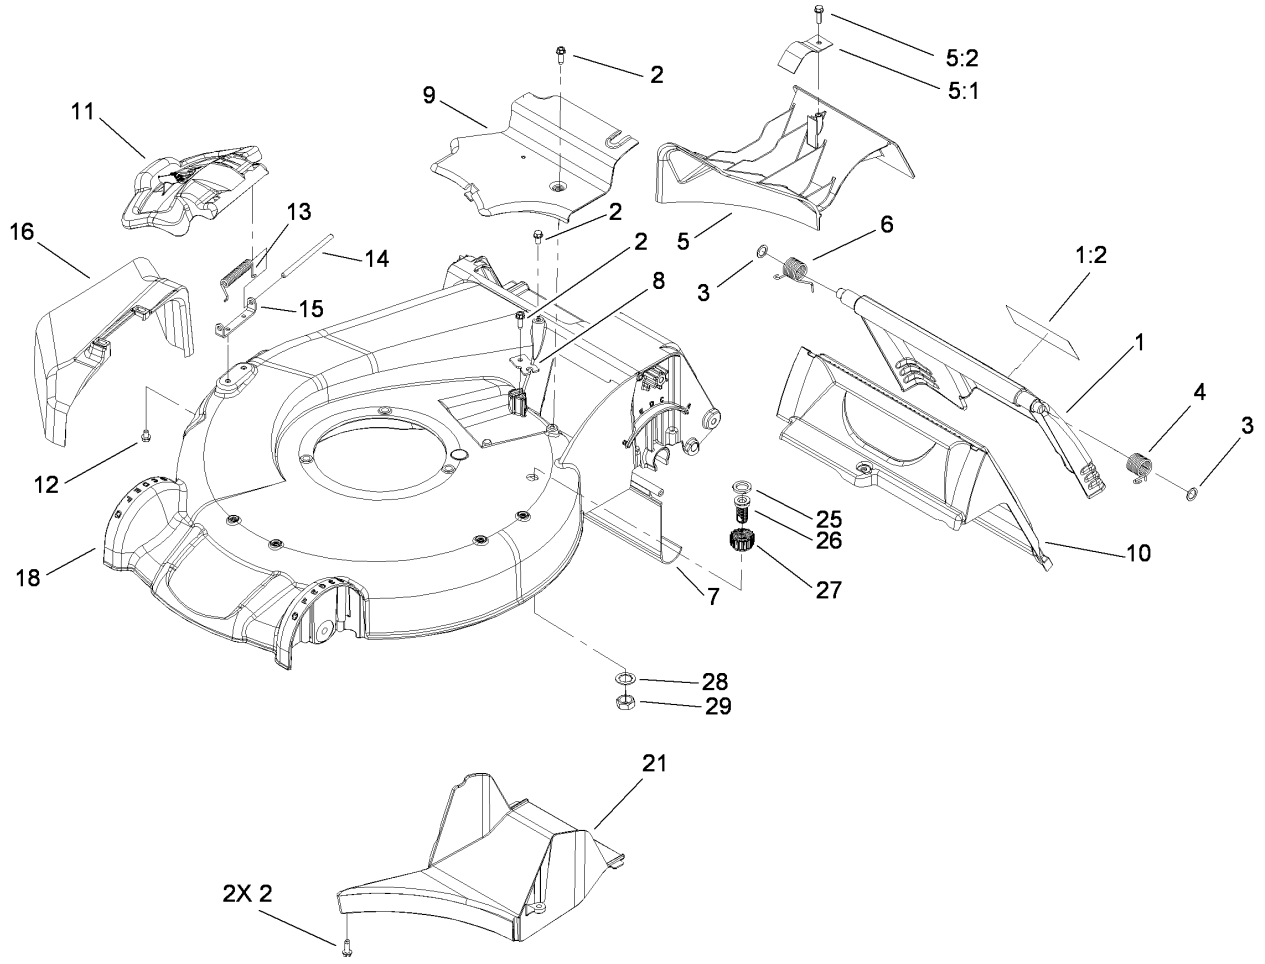

Housing Assembly

Ref	Part No.	Qty.	Description
❷1		1	Rear Door ASM
1:2	114-7982	1	Decal-Warning
2	49-2040	5	Screw-HWHTF
3	94-8196	2	Washer-Nylon
4	115-2859	1	Spring-Torsion
5	115-4656	1	Plug-Mulch ASM
5:1	115-4655	1	Tab-Spring
5:2	46-8091	1	Screw-HWH
6	114-7924	1	Spring-Torsion
7	114-1586	1	Shield-Trailing
8	107-7497	1	Bracket-Cable, Traction
9	107-7494	1	Cover-Belt
10	114-2668	1	Chute
11	107-3717	1	Discharge Door ASM
12	99-8445	2	Screw-HWH
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	112-6416	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
18	115-2854	1	Housing ASM
21	107-7495	1	Tunnel-Discharge
25	112-6438	1	Washer-Seal, Washout Port
26	112-6400	1	Port-Washout
27	112-6401	1	Coupling-Hose, Washout Port

Ref	Part No.	Qty.	Description
28	3254-5	1	Washer-Tooth
29	3218-6	1	Nut-Jam

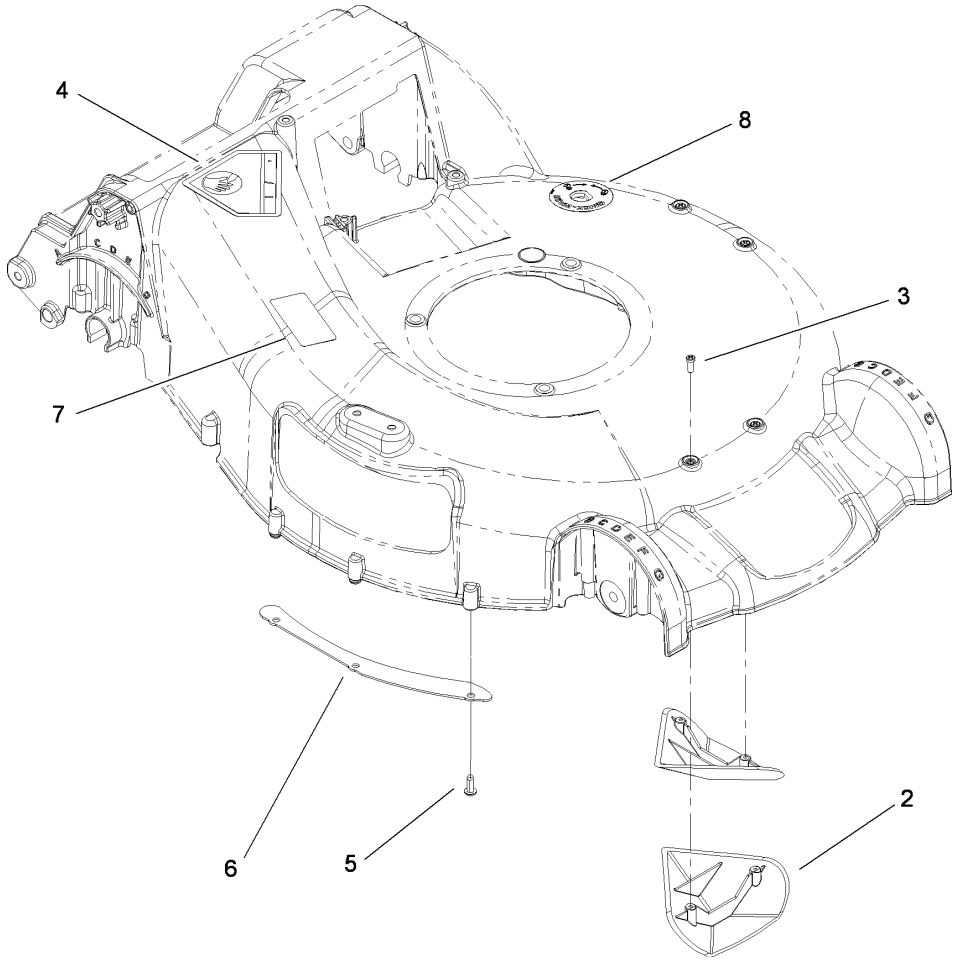

Housing Assembly No. 115-2854

Ref	Part No.	Qty.	Description
2	108-3798	2	Kicker-Housing
3	32144-111	4	Screw-PPH
4	94-8072	1	Decal-Danger
5	63-8590	3	Screw
6	105-1316-03	1	Sheet-Lip
7	108-8117	1	Decal
8	112-8867	1	Decal

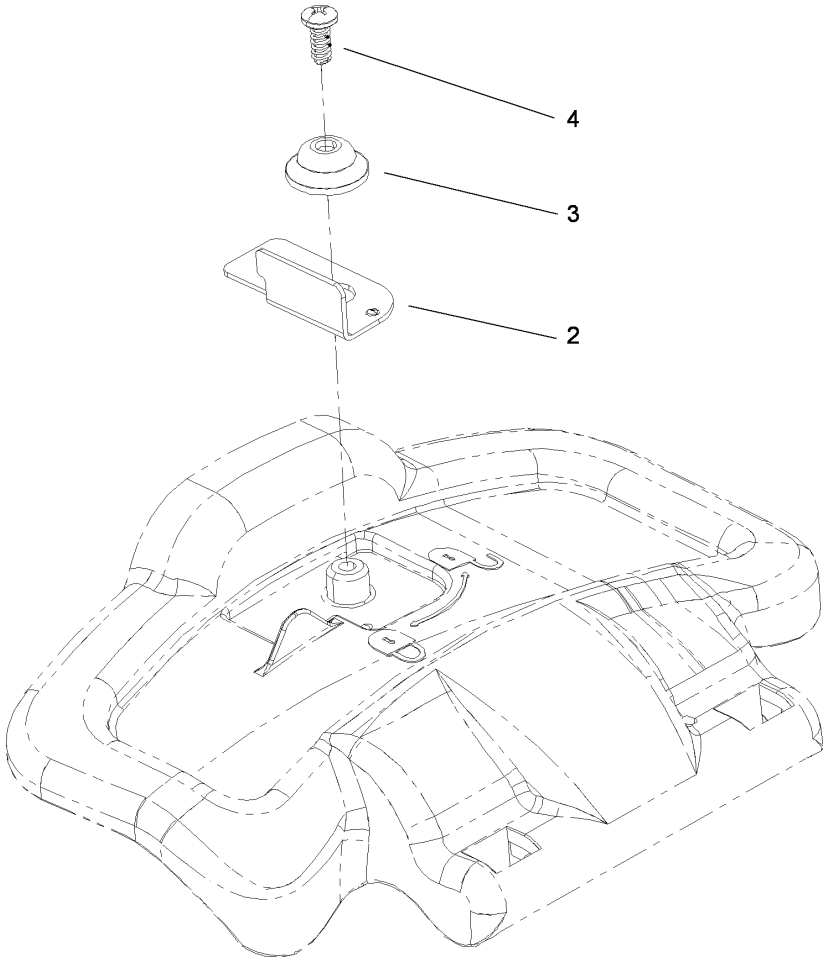

Discharge Door Assembly No. 107-3717

Ref	Part No.	Qty.	Description
2	107-0795	1	Latch-Door
3	107-7456	1	Cap-Door
4	107-7461	1	Screw-Plastite

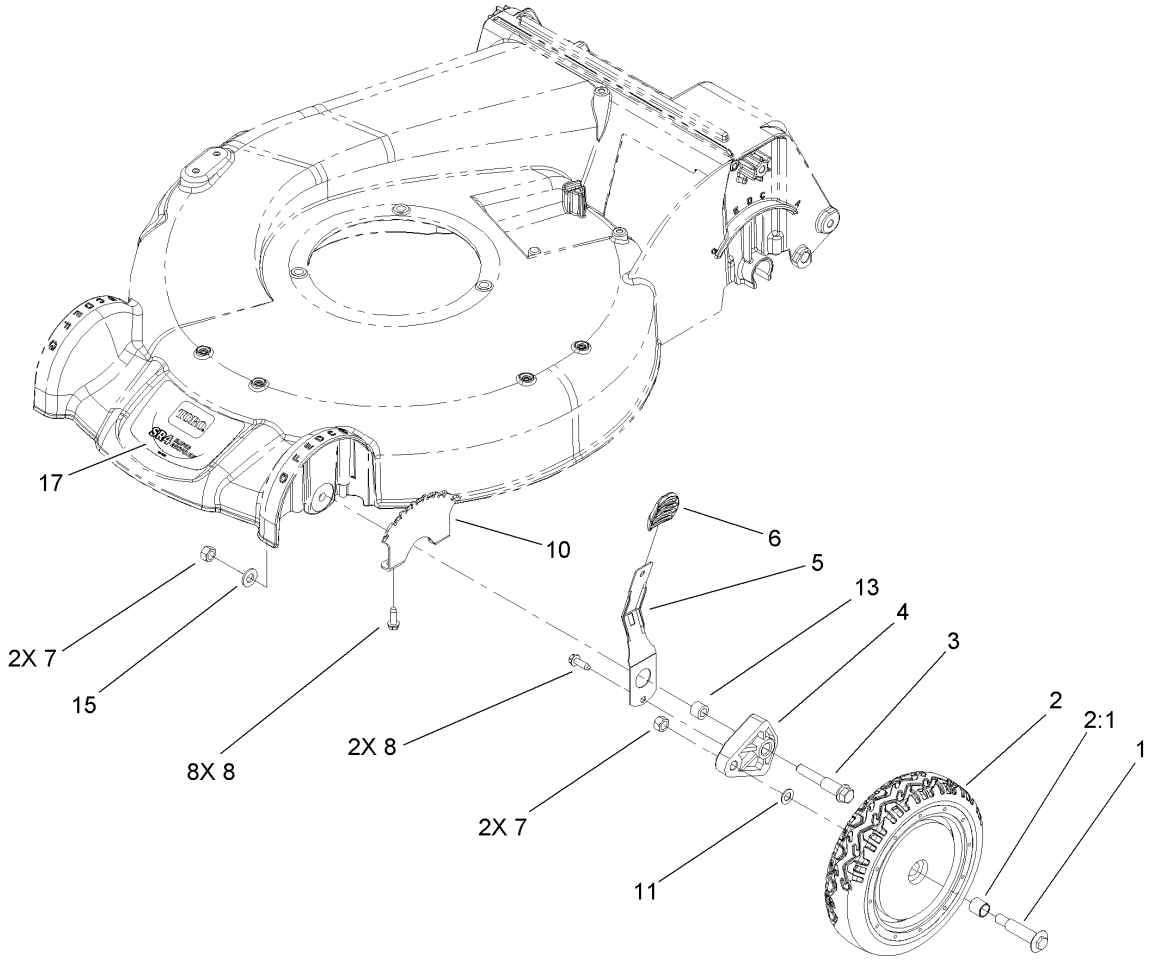

Height-of-Cut Assembly

Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3708	2	Wheel ASM
2:1	27-6250	2	Bushing
3	107-7498	2	Screw-Shoulder, HOC
4	107-7492	2	Arm-Pivot
5	107-7491	2	Arm-Spring
6	105-3042	2	Knob-Lever, HOC
7	603773	4	Nut
8	49-2040	10	Screw-HWHTF
10	107-7478	4	Plate-HOC
11	40-1940	2	Washer
13	52-2480	2	Spacer-Wheel
15	3256-24	2	Washer-Flat
17	108-8168	1	Decal

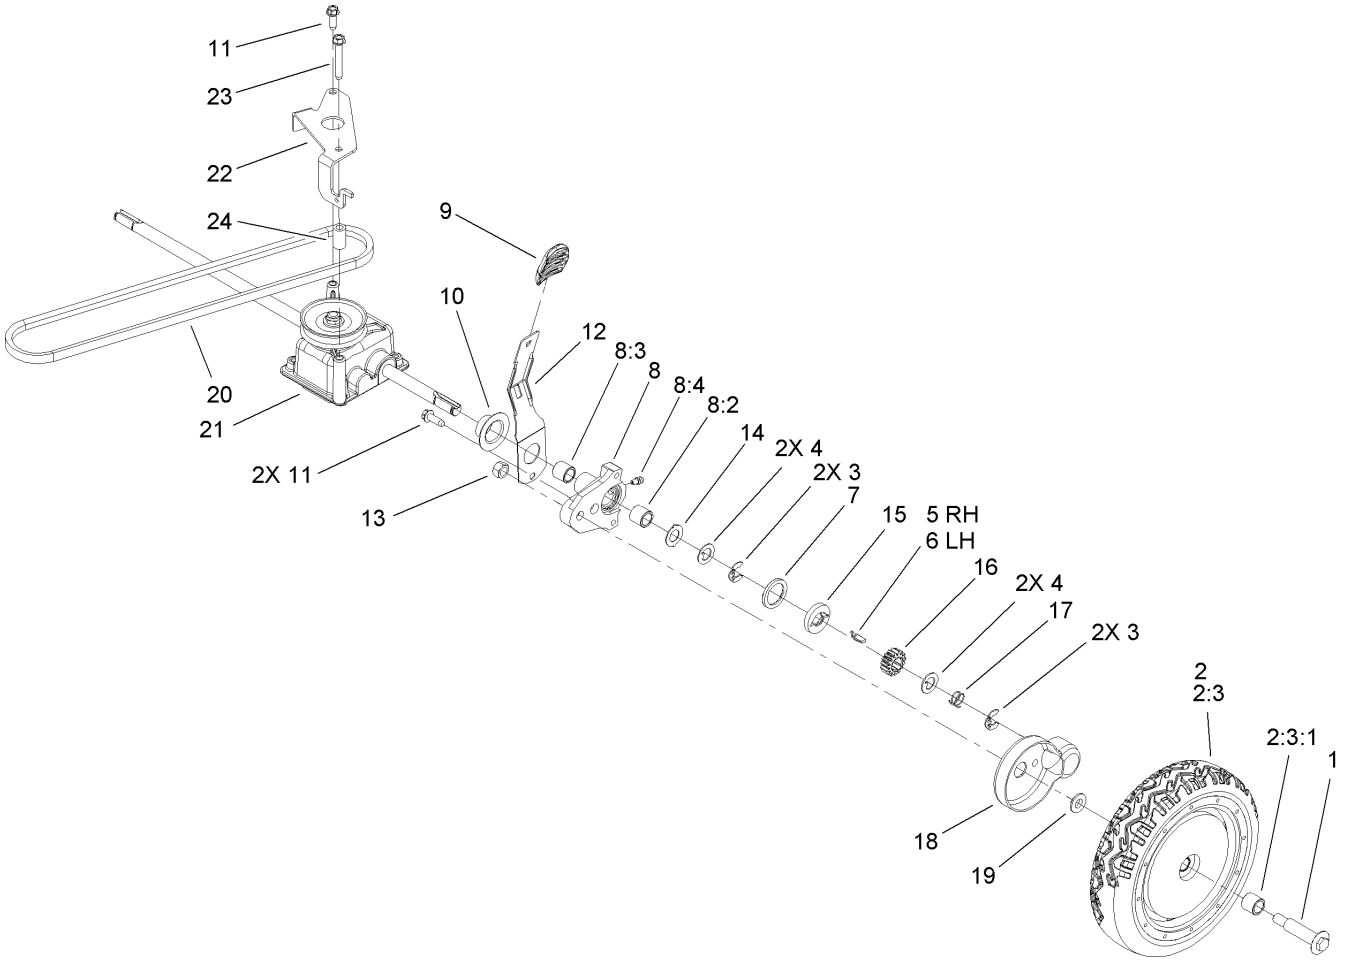

Transmission Assembly

Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3709	2	Wheel Gear ASM
❷2:3		1	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Ring-Clip, Locking
4	65-4740	4	Washer-Thrust, Keyed
❶5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	3	Screw-HWHTF
12	107-7491	2	Arm-Spring
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel

Ref	Part No.	Qty.	Description
20	99-1597	1	V-Belt
21	108-8140	1	Gear Case ASM
22	107-7483-03	1	Bracket-Gearbox
23	92-1616	1	Screw-HWHTF
24	614673	1	Bushing-Plate, Actuator

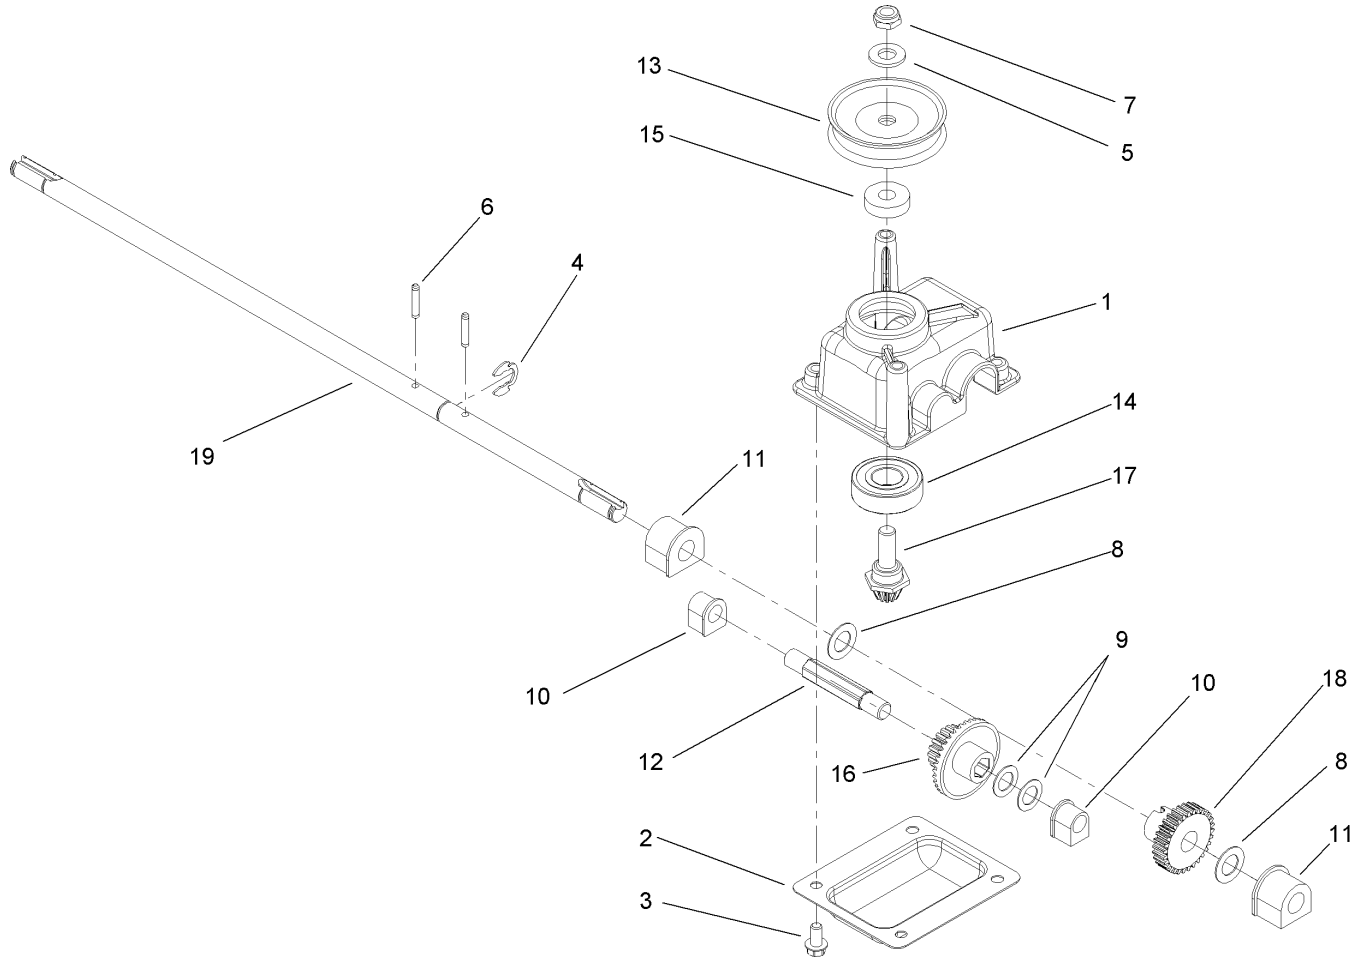

Gear Case Assembly No. 108-8140

Ref	Part No.	Qty.	Description
1	104-7619	1	Case-Gear
2	614668-03	1	Cover-Case, Gear
3	32144-4	4	Screw-HWH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock
8	36-4780	2	Washer-Plain
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing
12	614696	1	Shaft-Intermediate
13	100-1176	2	Pulley-Half
14	100-1048	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-1005	1	Gear-19T Spur, 37T Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	104-1004	1	Gear-30T
19	108-8141	1	Shaft-Output

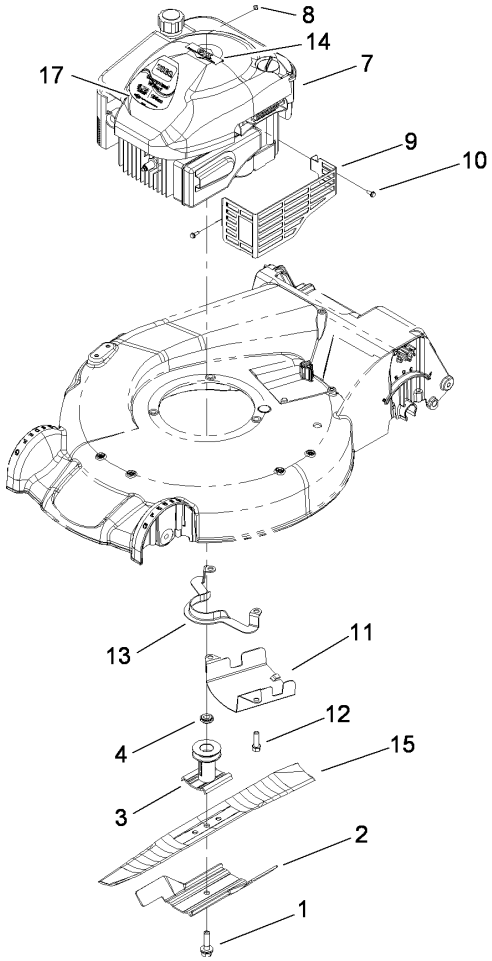

Engine Assembly

Ref	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade
2	105-6848-03	1	Accelerator-Blade
3	106-3987	1	Blade Driver ASM
4	106-3999	1	Spacer-Driver
❷❸7		1	Engine-Briggs And Stratton, 126T07-0226-B1
8	2210-316	1	Stop-Rope
9	104-7577-03	1	Shield-Muffler
10	32144-1	3	Screw-Taptite
11	107-7489-03	1	Shield-Grass
12	95-1727	3	Screw-Taptite
13	108-8110-03	1	Guide-Belt
14	108-8130	1	Decal-Recoil
15	108-3762-03	1	Blade-Recycling
17	114-0339	1	Decal-Engine

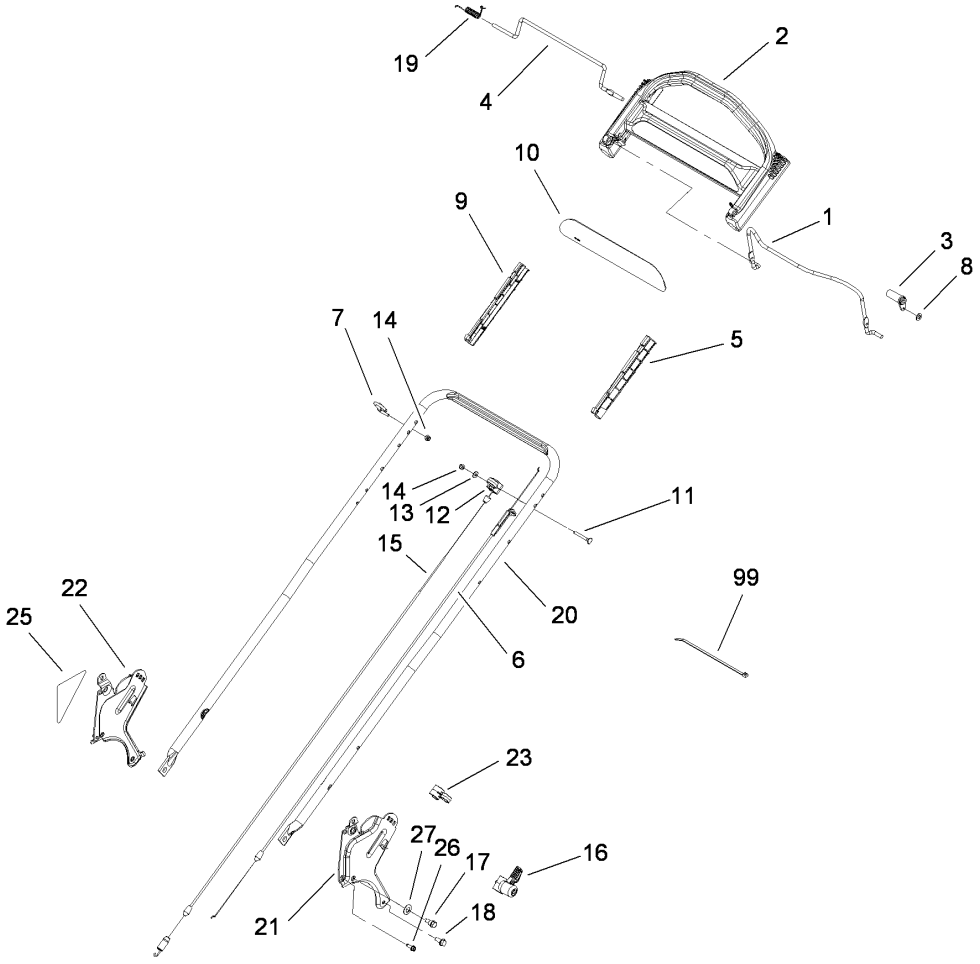

Handle Assembly

Ref	Part No.	Qty.	Description
1	104-8679-03	1	Bail-Brake
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
6	108-8157	1	Cable-Brake
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	108-8134	1	Decal-Handle
11	321-50	1	Screw-HH
12	99-5239	1	Anchor-Cable
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	108-8158	1	Cable-Traction
16	115-2860	2	Quick Release ASM
17	115-1958	2	Bolt-Shoulder
18	32144-11	2	Screw-HWHTF
19	104-8690	1	Spring-Torsion
20	115-1300-05	1	Handle
21	114-2671-03	1	Bracket-Handle, LH
22	114-2672-03	1	Bracket-Handle, RH
23	106-6805	1	Guide-Cable
25	115-2884	1	Decal-Instruction

Ref	Part No.	Qty.	Description
26	49-2040	2	Screw-HWHTF
27	112-9972	2	Washer-Conical, Spring
99	614249	3	Strap-Tie

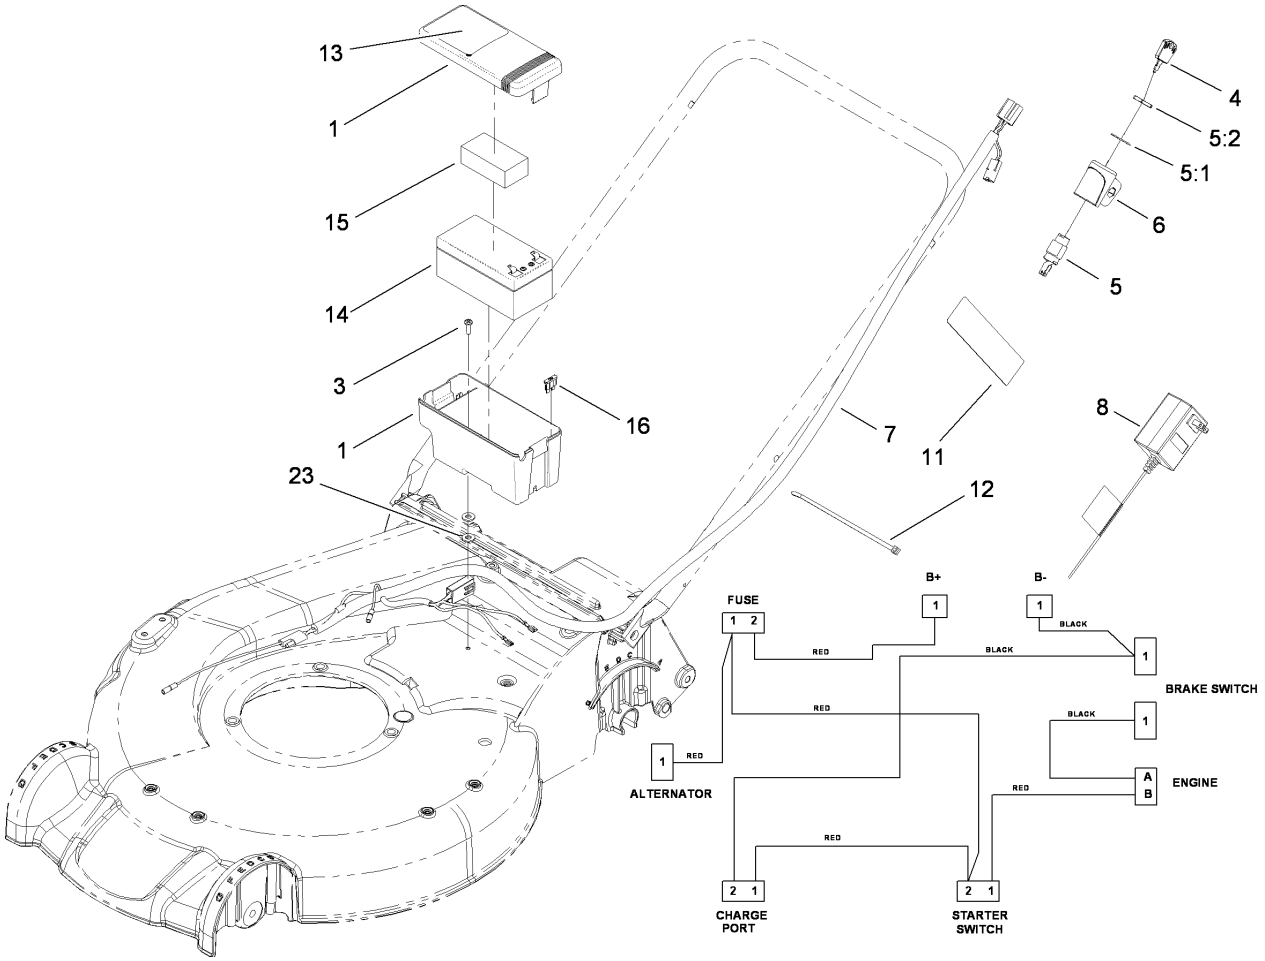

Electrical Assembly

Ref	Part No.	Qty.	Description
1	108-4844	1	Battery Box ASM
3	32144-32	1	Screw
4	700918	1	Key
5	46-5780	1	Switch-Starter
5:1	3254-5	1	Washer-Tooth
5:2	218-461	1	Nut-HH
6	108-9760	1	Mount-Switch
7	114-2625	1	Harness-Wire
8	104-7401	1	Charger-12 Volt
11	104-7953	1	Decal-Harness
12	614249	2	Strap-Tie
13	108-4791	1	Decal-Instructional
14	106-8397	1	Battery-12 Volt
15	107-3774	1	Foam-Battery, Top
16	99-6124	2	Fuse-40 Amp
23	3256-22	2	Washer-Flat

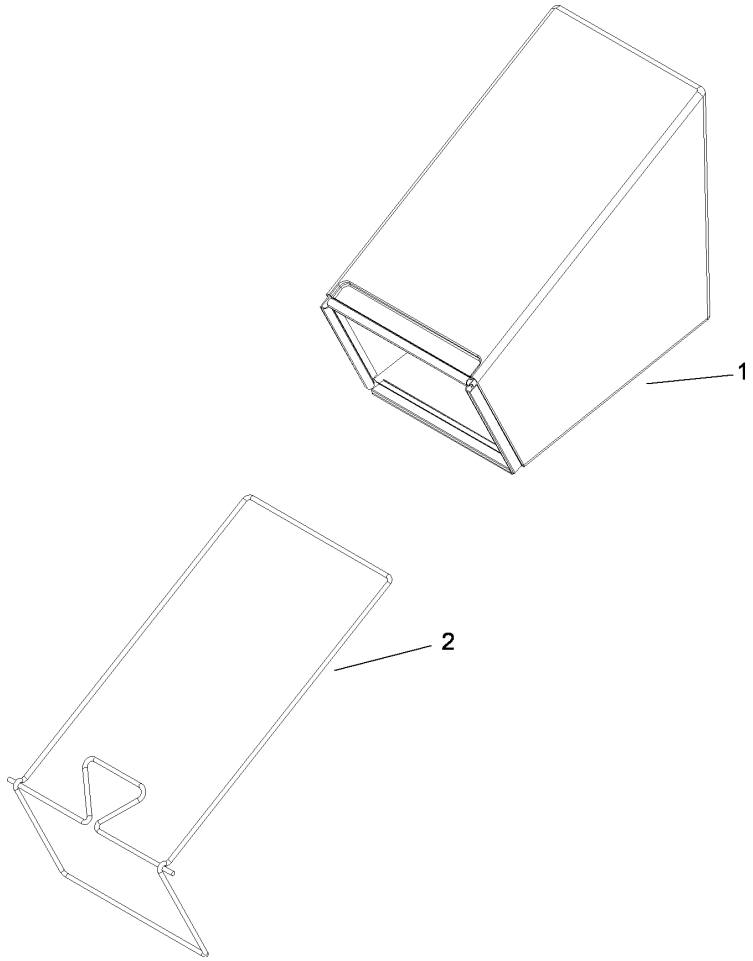

Bag Assembly

Ref	Part No.	Qty.	Description
1	114-2664	1	Grass Bag ASM
2	114-2679-03	1	Bag Frame ASM

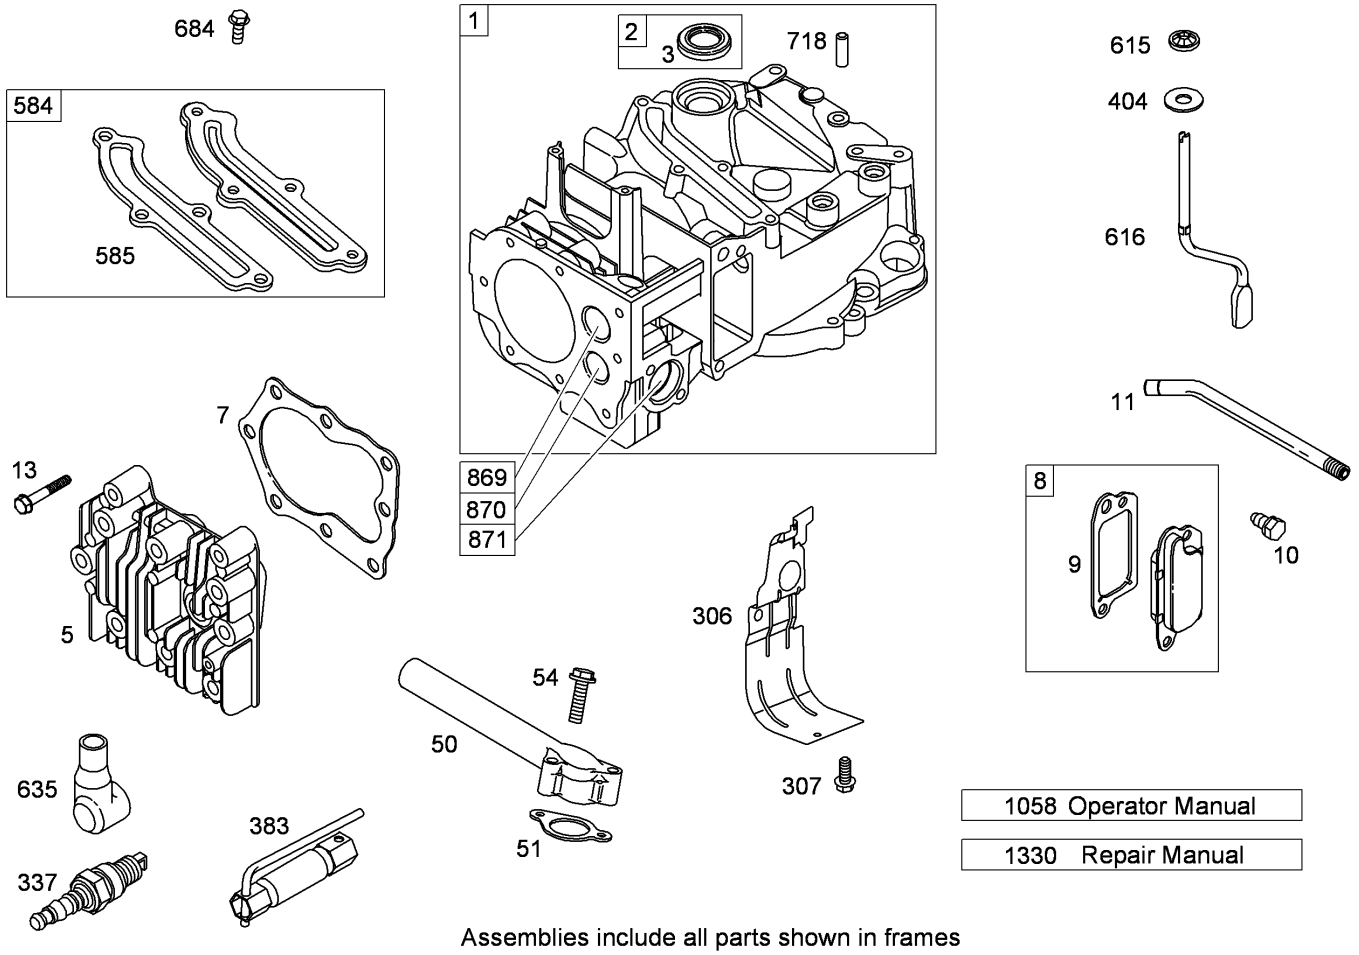

Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 126T07-0226-B1

Ref	Part No.	Qty.	Description
❸1	697322	1	Cylinder ASM
❸2	399269	1	Bushing And Seal Kit
❸❺3	299819s	1	Seal-Oil (Magneto Side)
❸5	691160	1	Head-Cylinder
❸❺7	692249	1	Gasket-Head, Cylinder
❸8	695250	1	Breather ASM
❸9	699472	1	Gasket-Breather
❸10	691125	1	Screw (Breather ASM)
❸11	691781	1	Tube-Breather
❸13	690912	1	Screw (Cylinder Head)
❸50	794305	1	Manifold-Intake
❸❺51	794306	1	Gasket-Intake
❸54	691650	1	Screw (Intake Manifold)
❸306	790836	1	Shield-Cylinder
❸307	690345	1	Screw
❸337	802592s	1	Plug-Spark
❸383	89838s	1	Wrench-Spark Plug
❸404	690272	1	Washer (Governor Crank)
❸584	697734	1	Cover-Passage, Breather
❸❺585	691879	1	Gasket-Passage, Breather
❸615	690340	1	Retainer-Shaft, Governor
❸616	698801	1	Crank-Governor
❸635	66538s	1	Boot-Spark Plug
❸684	690345	1	Screw (Breather Passage Cover)

Ref	Part No.	Qty.	Description
❸718	690959	1	Pin-Locating
❸869	691155	1	Seat-Valve (Intake)
❸870	690380	1	Seat-Valve (Exhaust)
❸871	262001	1	Bushing-Guide (Exhaust)
❸871	63709	1	Bushing-Guide (Intake)
❸1058	277039TRI	1	Operator Manual
❸1330	270962	1	Repair Manual

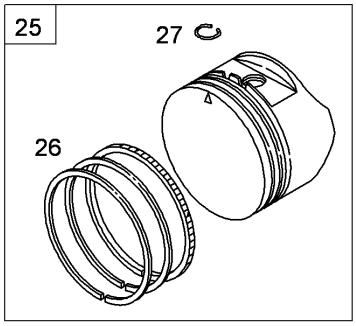

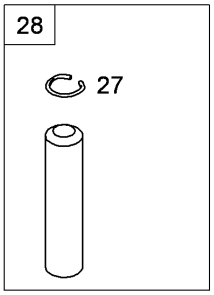

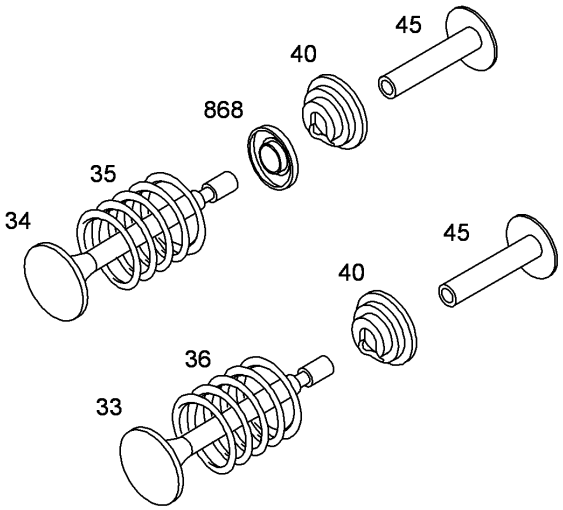

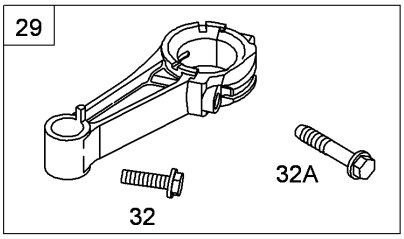

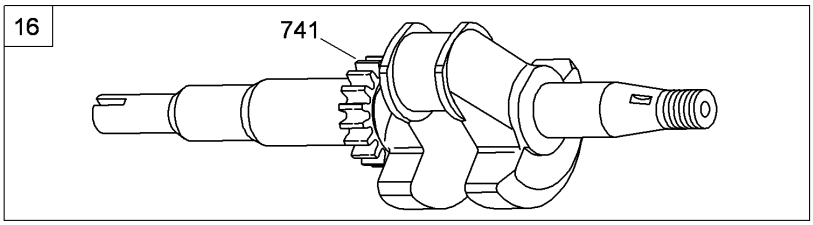

Assemblies include all parts shown in frames

Crankshaft Assembly
Briggs and Stratton 126T07-0226-B1

Ref	Part No.	Qty.	Description
❸16	696009	1	Crankshaft
❸24	222698s	1	Key-Flywheel
❸25	795429	1	Piston ASM (Standard)
❸25	795430	1	Piston ASM (.020 Oversize)
❸26	795431	1	Ring Set (Standard)
❸26	795432	1	Ring Set (.020 Oversize)
❸27	691866	1	Lock-Pin, Piston
❸28	499423	1	Piston Pin (Standard)
❸29	499424	1	Connecting Rod (Standard)
❸32	691664	1	Screw (Connecting Rod)
❸32A	695759	1	Screw (Connecting Rod)
❸33	262651s	1	Valve-Exhaust
❸34	262652s	1	Valve-Intake
❸35	691270	1	Spring-Valve (Intake)
❸36	691270	1	Spring-Valve (Exhaust)
❸40	692194	1	Retainer-Valve
❸45	690548	1	Tappet-Valve
❸741	795755	1	Gear-Timing
❸868	697338	1	Seal-Valve

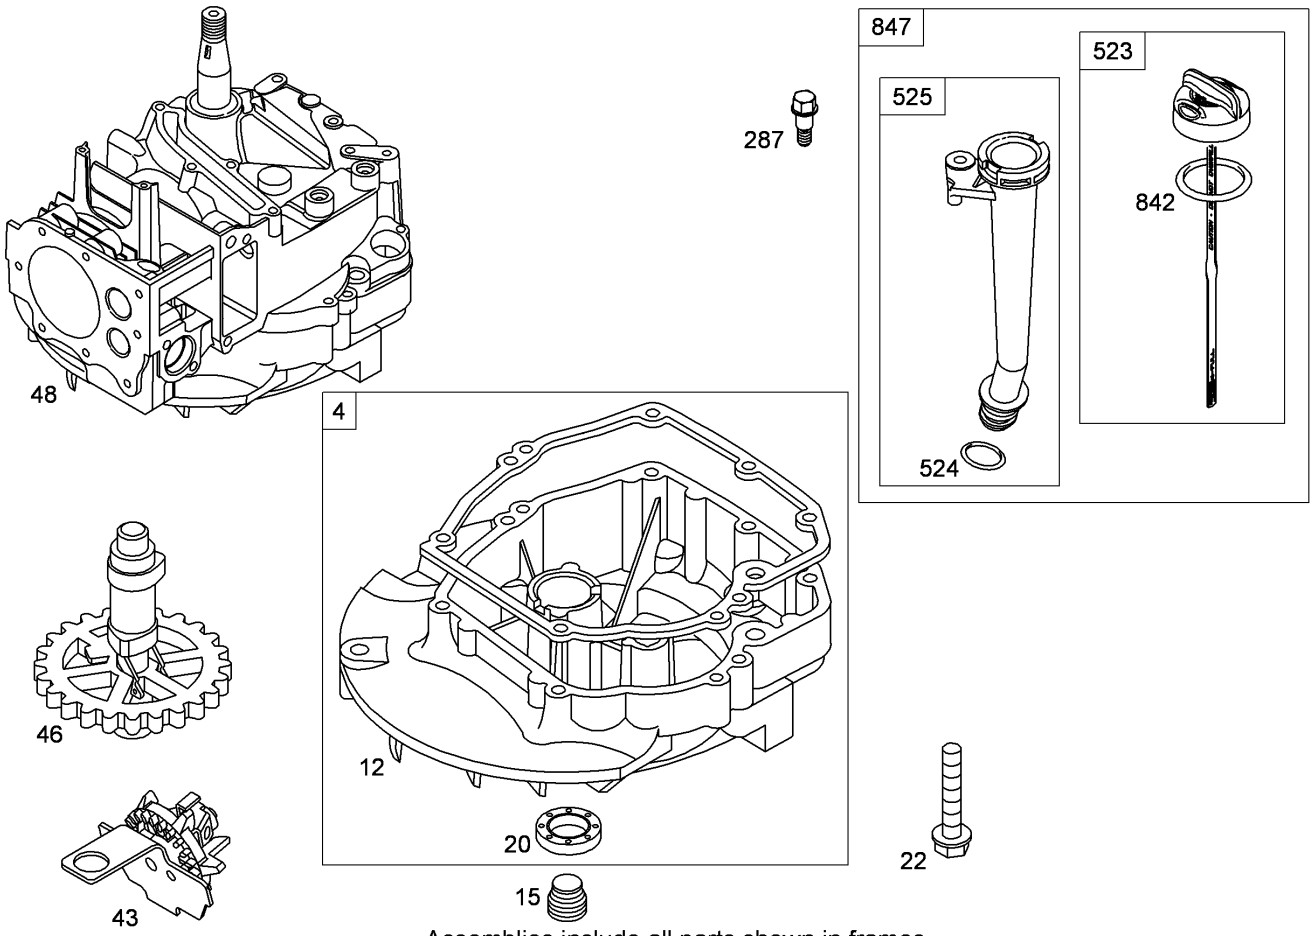

Assemblies include all parts shown in frames

Crankcase Assembly
Briggs and Stratton 126T07-0226-B1

Ref	Part No.	Qty.	Description
❸4	493279	1	Sump-Engine
❸❺12	692232	1	Gasket-Crankcase (.015 STD)
❸15	691680	1	Plug-Drain, Oil
❸❺20	399781s	1	Seal-Oil (PTO Side)
❸22	691092	1	Screw (Engine Sump)
❸43	691997	1	Slinger-Oil, Governor
❸46	691449	1	Camshaft
❸48	792742	1	Block-Short
❸287	690940	1	Screw (Dipstick Tube)
❸523	499621	1	Dipstick
❸❺524	692296	1	Seal-O Ring (Dipstick Tube)
❸525	495265	1	Tube-Dipstick
❸❺842	691031	1	Seal-O Ring (Dipstick Tube)
❸847	692047	1	Dipstick Tube ASM

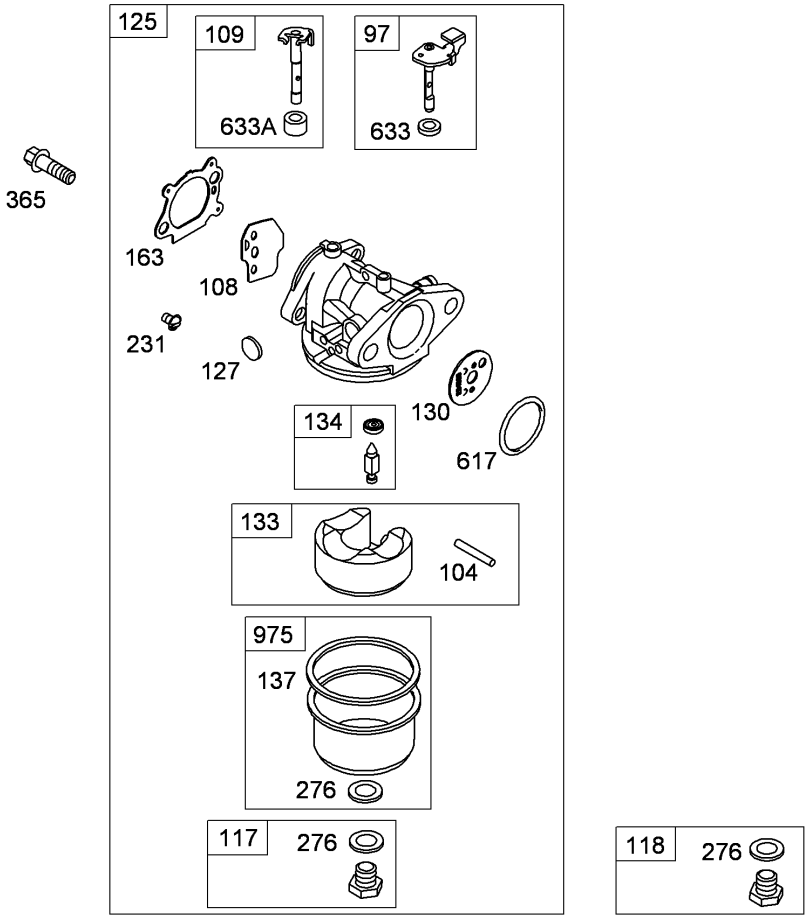

Assemblies include all parts shown in frames

Carburetor Assembly
Briggs and Stratton 126T07-0226-B1

Ref	Part No.	Qty.	Description
❸97	696565	1	Shaft-Throttle
❸❹104	691242	1	Pin-Hinge, Float
❸108	790844	1	Valve-Choke
❸109	790843	1	Shaft-Choke
❸117	691428	1	Jet-Main (Standard)
❸118	498977	1	Jet-Main (High Altitude)
❸125	794304	1	Carburetor
❸❹127	694468	1	Plug-Welch
❸130	696564	1	Valve-Throttle
❸133	398187	1	Float-Carburetor
❸❹134	398188	1	Needle And Seat Kit
❸❹137 ❻	693981	1	Gasket-Bowl, Float
❸❹163 ❺❻	272653s	1	Gasket-Cleaner, Air
❸231	691636	1	Screw (Choke Valve)
❸❹276 ❻	271716	1	Washer-Sealing
❸365	692524	1	Screw (Carburetor)
❸❹617 ❻	270344s	1	Seal-O Ring (Intake Manifold)
❸❹633 ❻	691321	1	Seal-Shaft, Choke Throttle
❸❹633A ❻	693867	1	Seal-Shaft, Choke Throttle
❸975	493640	1	Bowl-Float

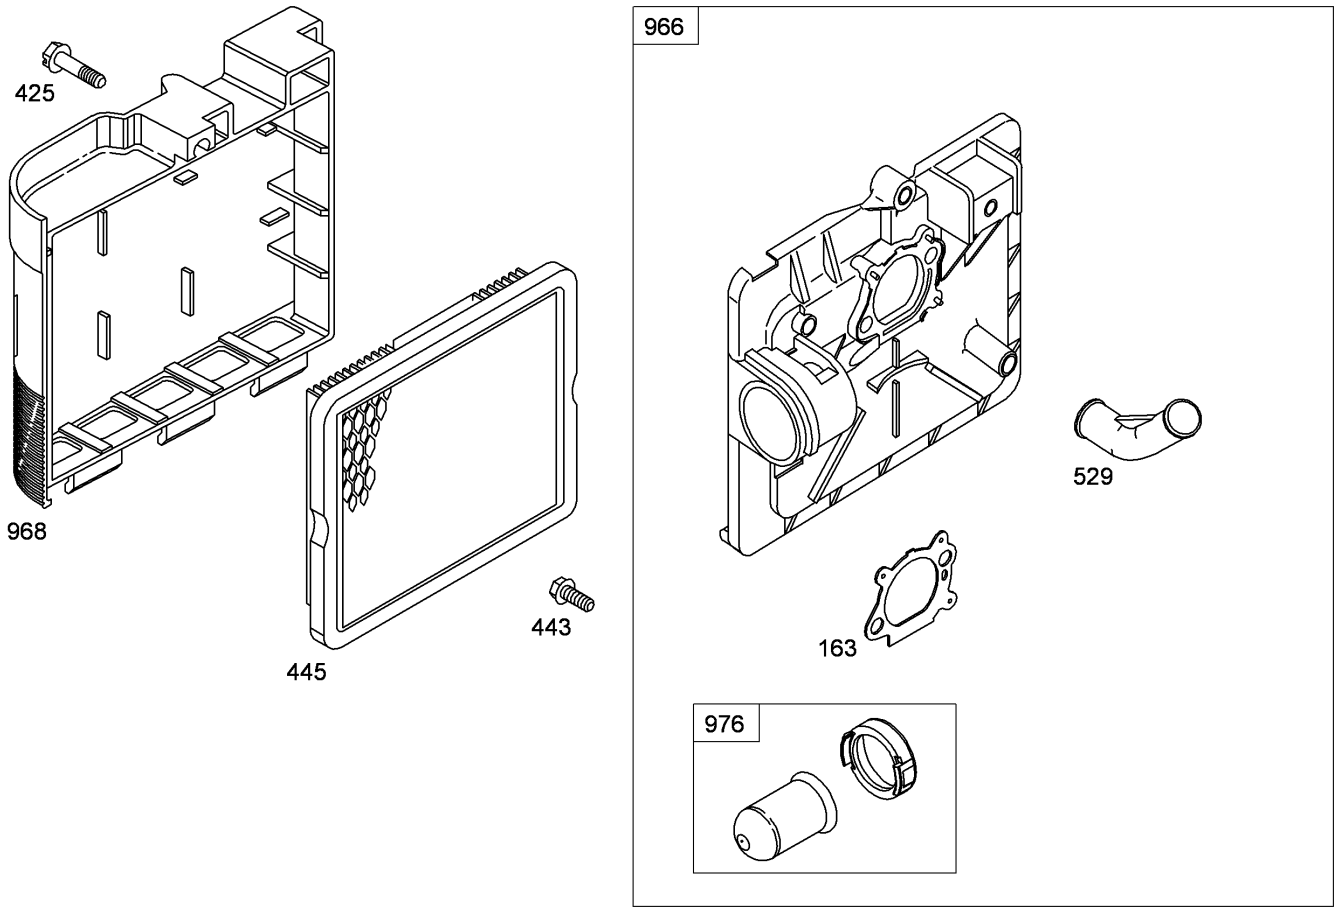

Assemblies include all parts shown in frames

Air Cleaner Assembly
Briggs and Stratton 126T07-0226-B1

Ref	Part No.	Qty.	Description
❸❹163 ❻	272653s	1	Gasket-Cleaner, Air
❸425	690670	1	Screw (Air Cleaner Cover)
❸443	692523	1	Screw (Air Cleaner Primer Base)
❸445	491588s	1	Filter-Cartridge, Air Cleaner
❸529	691923	1	Grommet
❸966	792040	1	Base-Primer, Air Cleaner
❸968	692298	1	Cover-Cleaner, Air
❸976	694395	1	Primer-Carburetor

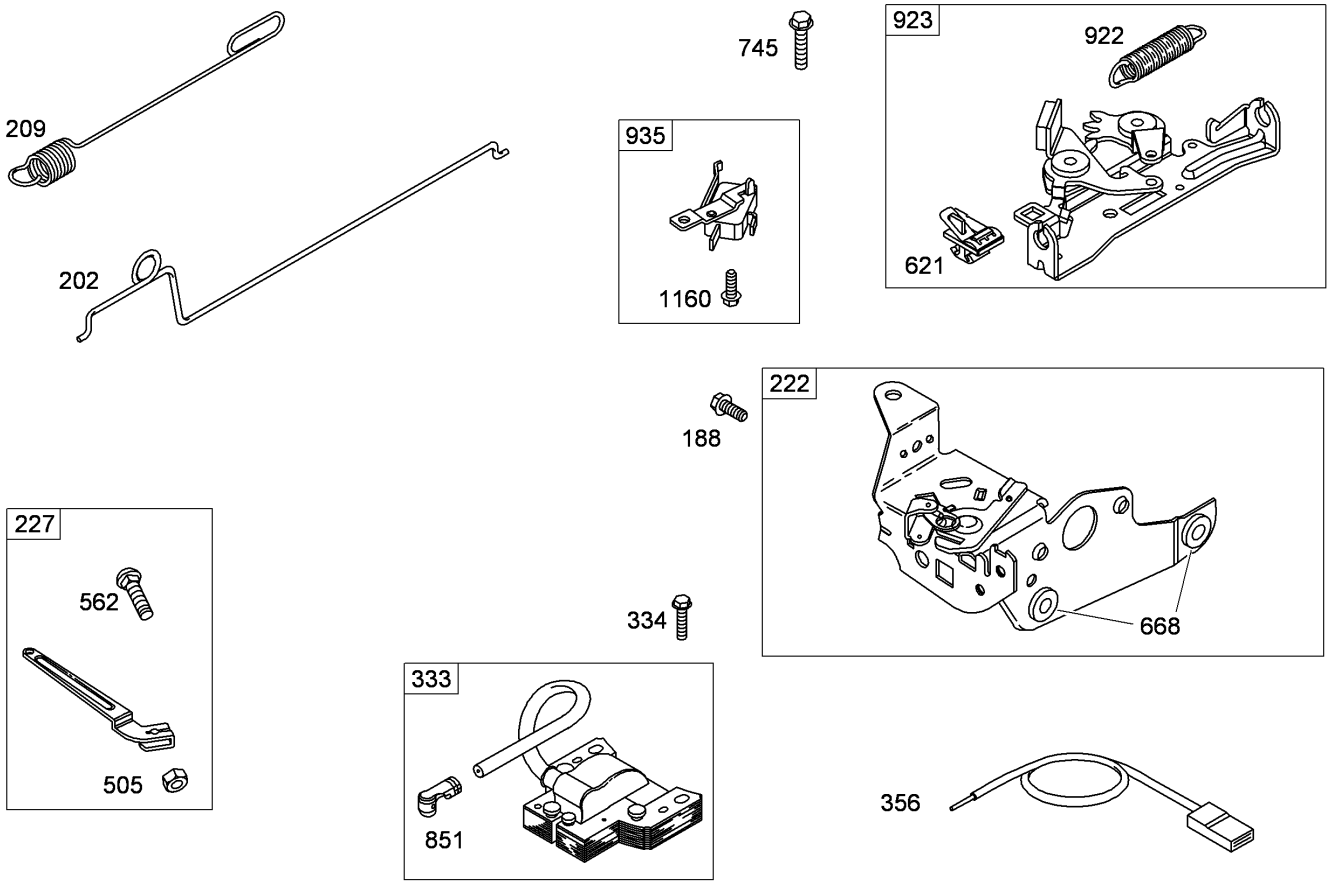

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 126T07-0226-B1

Ref	Part No.	Qty.	Description
❸188	693399	1	Screw (Control Bracket)
❸202	691829	1	Link-Governor, Mechanical
❸209	691292	1	Spring-Governor
❸222	793754	1	Bracket-Control
❸227	690783	1	Lever-Control, Governor
❸333	802574	1	Armature-Magneto
❸334	691061	1	Screw (Magneto Armature)
❸356	692390	1	Wire-Stop
❸505	691251	1	Nut (Governor Control Lever)
❸562	691119	1	Screw (Governor Control Lever)
❸621	692310	1	Switch-Stop
❸❺668	493823	1	Spacer
❸745	691648	1	Screw (Brake)
❸851	493880s	1	Terminal-Spark Plug
❸922	691831	1	Spring-Brake
❸923	691994	1	Brake ASM
❸935	499421	1	Switch-Interlock
❸1160	691627	1	Screw (Interlock Switch)

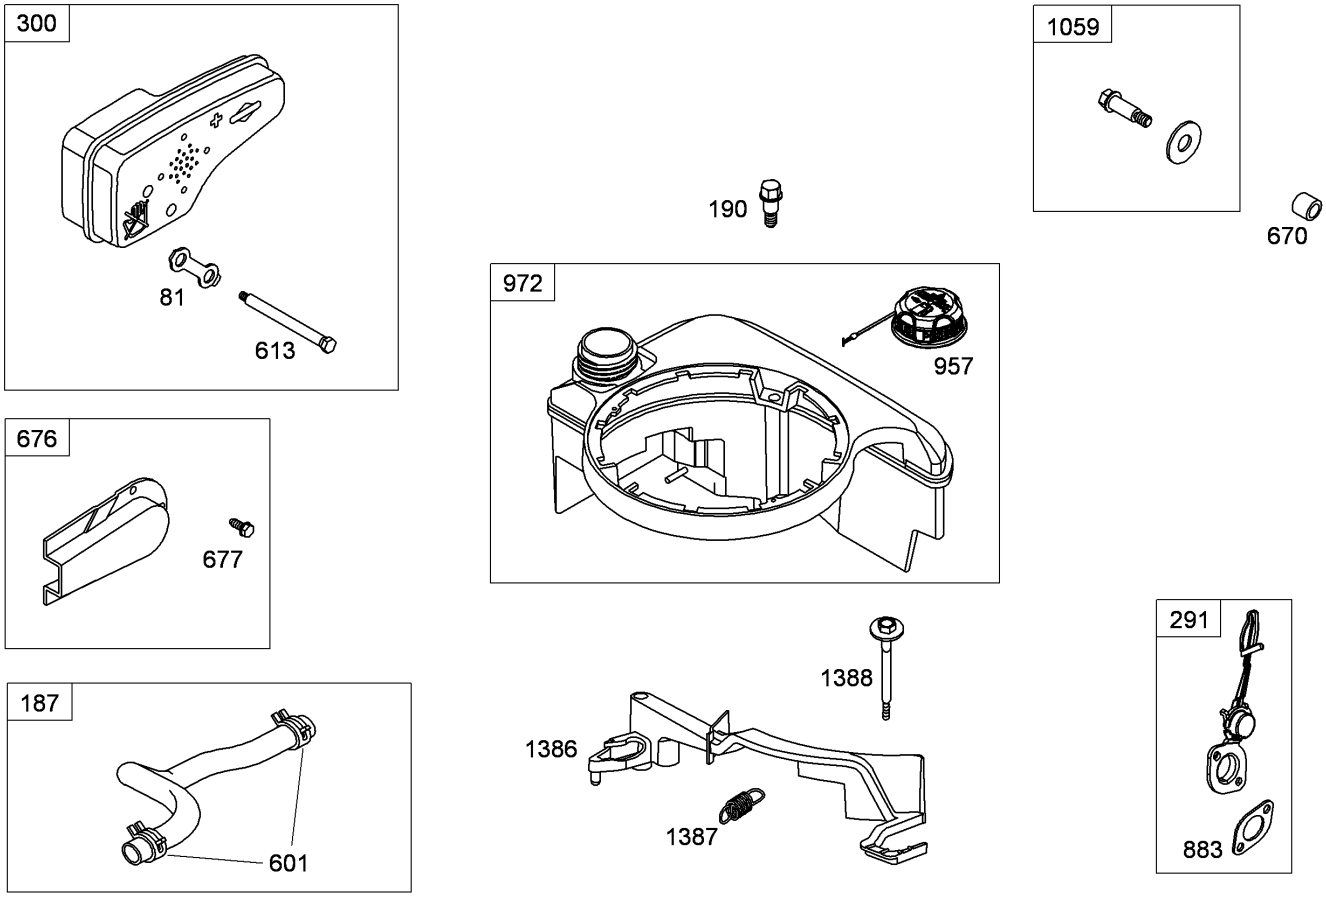

Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly
Briggs and Stratton 126T07-0226-B1

Ref	Part No.	Qty.	Description
❸81	691740	1	Lock-Screw, Muffler
❸187	791873	1	Line-Fuel (Molded)
❸190	690940	1	Screw (Fuel Tank)
❸291	790830	1	Thermostat
❸300	790828	1	Muffler
❸601	791850	1	Clamp-Hose
❸613	790833	1	Screw (Muffler)
❸670	692294	1	Spacer-Tank, Fuel
❸676	493871	1	Deflector-Muffler
❸677	690661	1	Screw (Muffler Deflector)
❸❸883	691881	1	Gasket-Exhaust
❸957	699985	1	Cap-Tank, Fuel
❸972	699374	1	Tank-Fuel
❸1059	692311	1	Screw And Washer Kit
❸1386	790848	1	Vane-Air
❸1387	790849	1	Spring-Vane, Air
❸1388	790850	1	Screw (Air Vane)

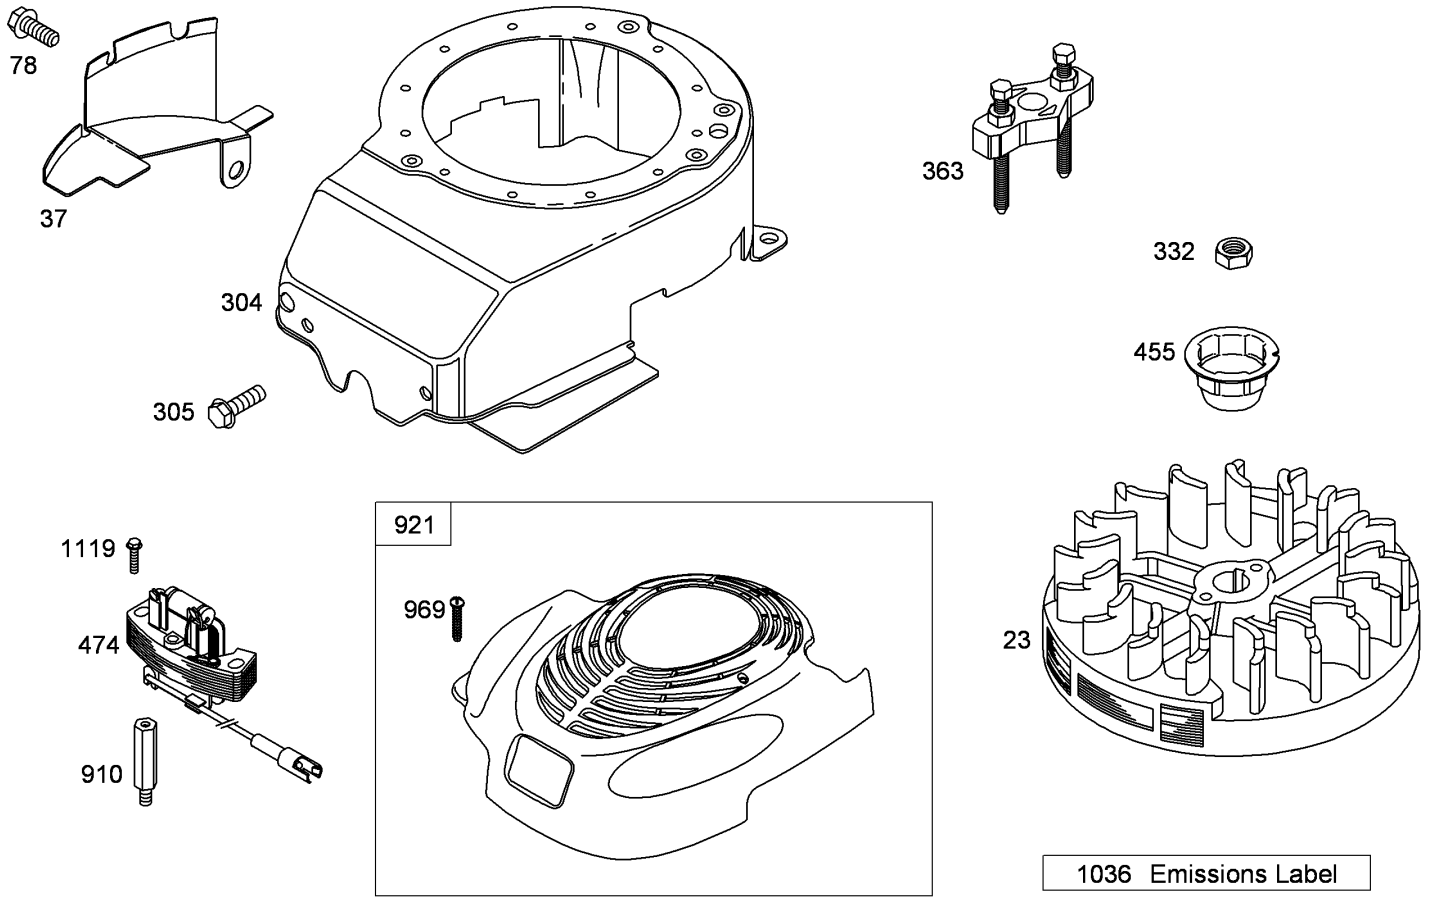

Assemblies include all parts shown in frames

Blower Housing Assembly
Briggs and Stratton 126T07-0226-B1

Ref	Part No.	Qty.	Description
❸23	691987	1	Flywheel
❸37	694086	1	Guard-Flywheel
❸78	691108	1	Screw (Flywheel Guard)
❸304	791135	1	Housing-Blower
❸305	691108	1	Screw (Blower Housing)
❸332	690662	1	Nut (Flywheel)
❸363	19069	1	Puller-Flywheel
❸455	791960	1	Cup-Flywheel
❸474	691991	1	Alternator
❸910	691094	1	Stud (Alternator)
❸921	790036	1	Cover-Housing, Blower
❸969	691138	1	Screw (Blower Housing Cover)
❸1036		1	Label-Emissions
❸1119	692979	1	Screw (Alternator)

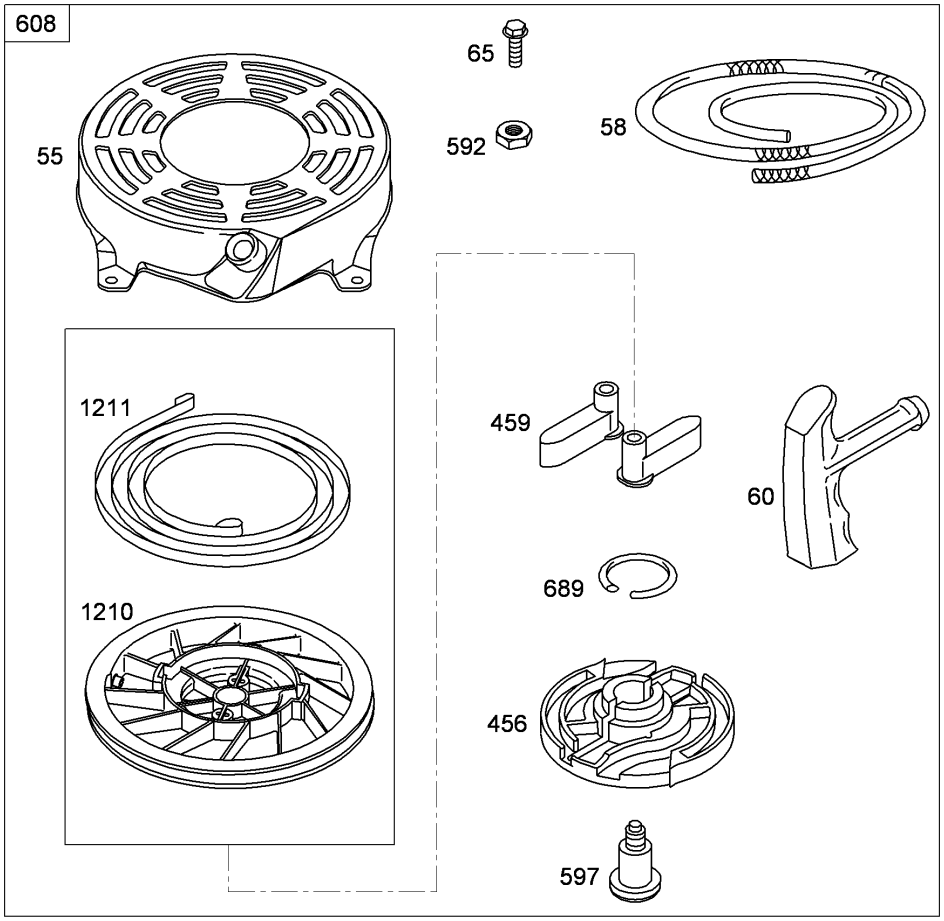

Assemblies include all parts shown in frames

Starter Assembly
Briggs and Stratton 126T07-0226-B1

Ref	Part No.	Qty.	Description
❸55	691421	1	Housing-Starter, Rewind
❸58	697316	1	Rope-Starter (Cut To Required Length)
❸60	281434s	1	Grip-Rope, Starter
❸65	690837	1	Screw (Rewind Starter)
❸456	692299	1	Plate-Friction, Pawl
❸459	281505s	1	Ratchet-Pawl
❸592	690800	1	Nut (Rewind Starter)
❸597	691696	1	Screw (Pawl Friction Plate)
❸608	497680	1	Starter-Rewind
❸689	691855	1	Spring-Friction
❸1210	498144	1	Pulley And Spring ASM (Pulley)
❸1211	498144	1	Pulley And Spring ASM (Spring)

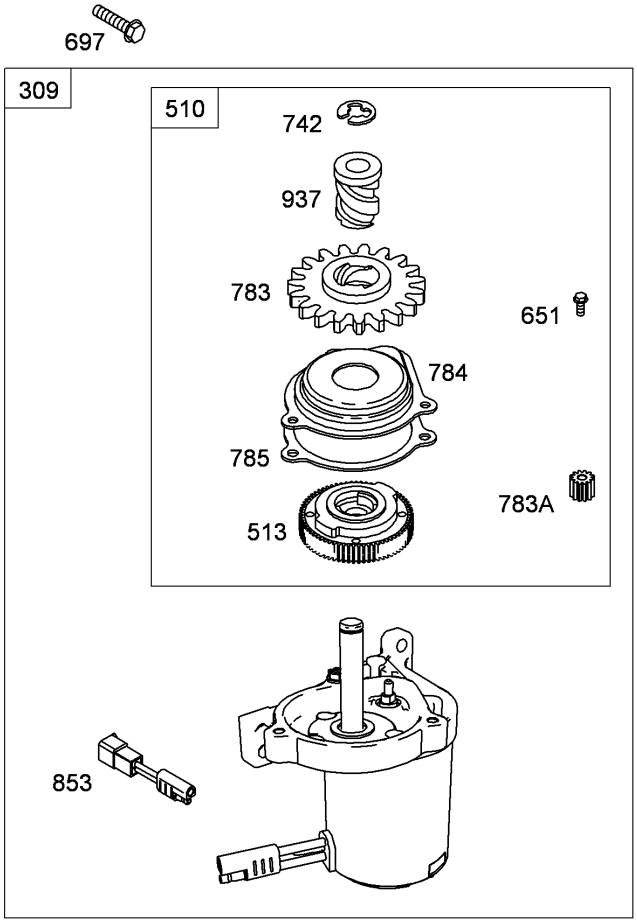

Assemblies include all parts shown in frames

Electric Starter Assembly
Briggs and Stratton 126T07-0226-B1

Ref	Part No.	Qty.	Description
❸309	795092	1	Motor-Starter
❸510	795093	1	Drive-Starter
❸513	795100	1	Clutch-Drive
❸651	691660	1	Screw (Starter Gear Cover)
❸697	691127	1	Screw (Starter Motor)
❸742	795094	1	Retainer-E Ring
❸783	795096	1	Gear-Pinion
❸783A	795099	1	Gear-Pinion
❸784	795095	1	Cover-Starter Gear
❸785	795097	1	Gasket-Starter Cover
❸853	695268	1	Adapter-Wire
❸937	795098	1	Spline-Starter

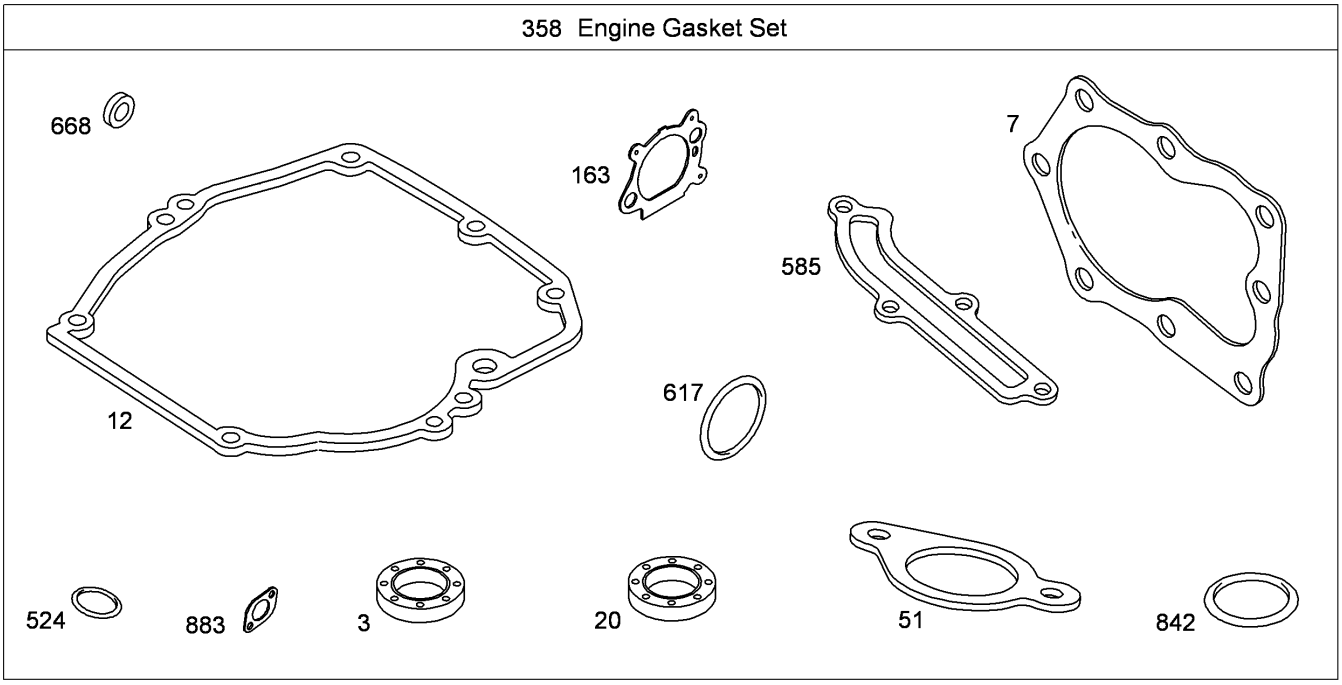

Assemblies include all parts shown in frames

Engine Gasket Set
Briggs and Stratton 126T07-0226-B1

Ref	Part No.	Qty.	Description
❸❺3	299819s	1	Seal-Oil (Magneto Side)
❸❺7	692249	1	Gasket-Head, Cylinder
❸❺12	692232	1	Gasket-Crankcase
❸❺20	399781s	1	Seal-Oil (PTO Side)
❸❺51	794306	1	Gasket-Intake
❸❹163	272653s	1	Gasket-Cleaner, Air
❺❻			
❸358	794307	1	Engine Gasket Set
❸❺524	692296	1	Seal-O Ring (Dipstick Tube)
❸❺585	691879	1	Gasket-Passage, Breather
❸❹617	270344s	1	Seal-O Ring (Intake Manifold)
❺❻			
❸❺668	493823	1	Spacer
❸❺842	691031	1	Seal-O Ring (Dipstick)
❸❺883	691881	1	Gasket-Exhaust

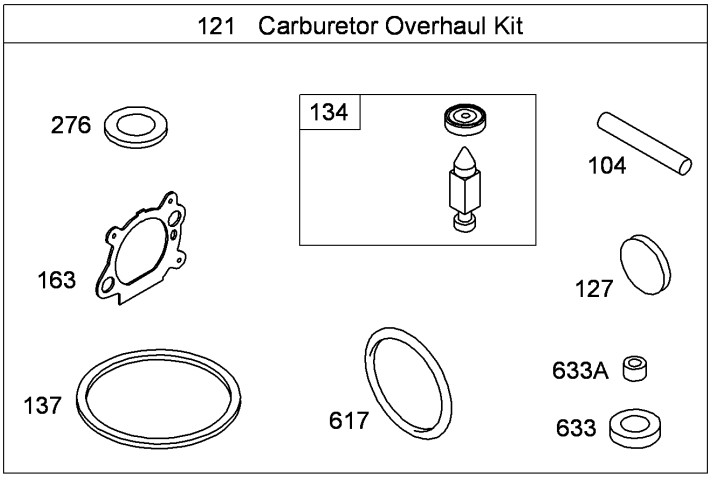

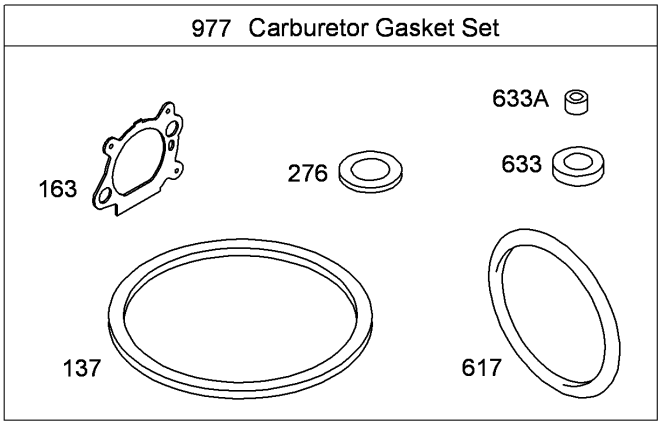

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton 126T07-0226-B1

Ref	Part No.	Qty.	Description
❸❹104	691242	1	Pin-Hinge, Float
❸121	498260	1	Carburetor Overhaul Kit
❸❹127	694468	1	Plug-Welch
❸❹134	398188	1	Needle And Seat Kit
❸❹137 ❻	693981	1	Gasket-Bowl, Float
❸❹163 ❺❻	272653s	1	Gasket-Cleaner, Air
❸❹276 ❻	271716	1	Washer-Sealing
❸❹617 ❺❻	270344s	1	Seal-O Ring (Intake Manifold)
❸❹633 ❻	691321	1	Seal-Shaft, Choke Throttle
❸❹633A ❻	693867	1	Seal-Shaft, Choke Throttle
❸977	498261	1	Carburetor Gasket Set

Attachments and Accessories

For 20095 - Super Recycler Lawn Mower

Product Name	Model/Part
Bagging Blade	108-3759-03
Traction Assist Handle Kit	108-8120
Toro Walk Mower Cover	490-7462
Plain Walk Mower Cover	490-7463
Dethatcher Kit	59131

NOTES

NOTES

TORO®