Form Number 3360-197 Rev B

Titan Z4800 Zero-Turn-Radius
Riding Mower

Model No. 74812 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Frame Assembly	3
Motion Control and Brake Assembly	5
Seat Assembly	6
Fuel Tank Assembly	7
Engine Assembly	8
Transmission Assembly	9
LH Hydro Transmission Assembly No. 109-3372	10
RH Hydro Transmission Assembly No. 109-3371	12
48 Inch Deck Assembly	14
48 Inch Deck Assembly No. 109-6253	15
48 Inch Deck and Discharge Assembly	16
Anti-Scalp Roller Assembly No. 109-6388	17
Cutter Housing Assembly No. 109-8744	18
Washout Port Assembly No. 109-6393	19
Rubber Deflector Assembly No. 114-1651	20
Electrical Assembly	21
Cylinder Assembly Briggs and Stratton 44K777-0125-G1	22
Head Assembly Briggs and Stratton 44K777-0125-G1	23
Crankshaft Assembly Briggs and Stratton 44K777-0125-G1	24
Crankcase Assembly Briggs and Stratton 44K777-0125-G1	25
Fuel Pump Assembly Briggs and Stratton 44K777-0125-G1	26
Carburetor Assembly Briggs and Stratton 44K777-0125-G1	27
Air Cleaner Assembly Briggs and Stratton 44K777-0125-G1	28
Governor Assembly Briggs and Stratton 44K777-0125-G1	29
Flywheel Assembly Briggs and Stratton 44K777-0125-G1	30
Starter Assembly Briggs and Stratton 44K777-0125-G1	31
Engine Gaskets and Carburetor Overhaul Kit Briggs and Stratton 44K777-0125-G1	32
Attachments and Accessories List	33

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated

❷ Not serviced separately

❸ Obtain from your local Briggs & Stratton dealer

❹ Included in Carburetor Overhaul Kit (Ref. No. 121)

❺ Included in Engine Gasket Set (Ref. No. 358)

❻ Included in Valve Gasket Set (Ref. No. 1095)

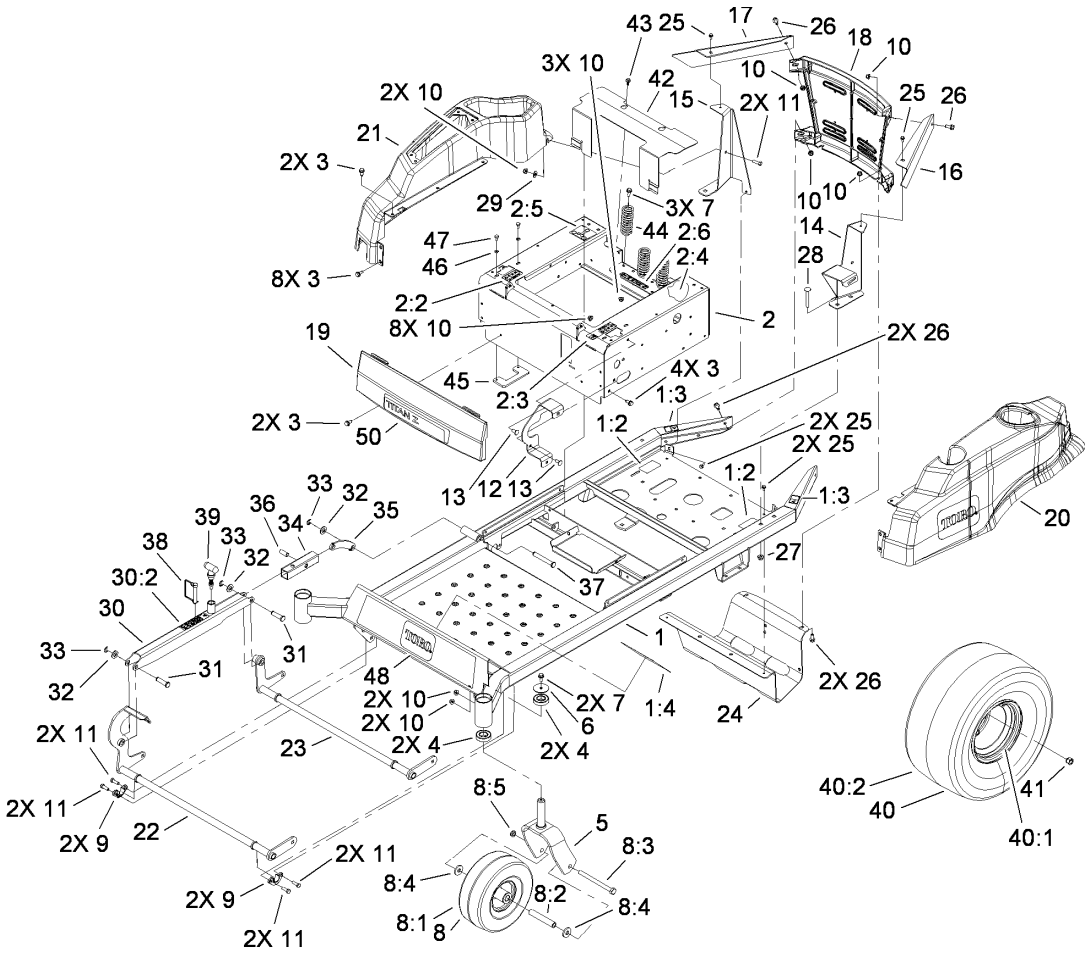

Frame Assembly

Ref	Part No.	Qty.	Description
1	109-8825	1	Frame ASM
1:2	109-6008	2	Decal-Drive Release
1:3	106-5517	2	Decal-Surface, Hot
1:4	109-8965	1	Decal-Safety
2	109-8845	1	Seat Box ASM
2:2	109-9182	1	Decal-Motion Control
2:3	109-9173	1	Decal-Control Brake
2:4	109-9120	1	Decal-Fuse Block
2:5	109-6014	1	Decal-Belt Routing
2:6	109-6210	1	Decal-Danger
3	32144-70	16	Screw-HWHTF
4	109-3678	4	Bearing-Ball
5	109-6218-01	2	Caster Fork ASM
6	109-3724	2	Washer
7	3234-47	5	Screw-HHF
8	109-6405	2	Caster Wheel ASM
8:1	105-1863	1	Wheel-Caster
8:2	104-3667	1	Spanner-Wheel
8:3	325-20	1	Screw-HH
8:4	92-2651	2	Washer
8:5	3296-45	1	Nut-Lock, NI
9	109-3667	4	Bearing-Flange
10	104-8300	21	Nut-Flange, NI
11	322-5	10	Screw-HH

Ref	Part No.	Qty.	Description
12	109-6045-03	1	Bracket-Tank Mount
13	3230-23	2	Screw-CARR
14	109-6867-03	1	Bracket-Rear Tank, LH
15	109-3406-03	1	Bracket-Rear Console, RH
16	109-3381-03	1	Guard-Engine, LH
17	109-3391-03	1	Guard-Engine, RH
18	109-5444-03	1	Casting-Rear
19	109-5432	1	Panel-Front
20	109-5441	1	Fender-LH
21	109-5442	1	Fender-RH
22	109-8870-03	1	Front Shaft ASM
23	109-8871-03	1	Rear Shaft ASM
24	114-1658-03	1	Guard-Muffler
25	9266714	6	Screw-HWH
26	3234-5	6	Screw-HHF
27	104-8301	4	Nut-Flange, NI
28	3231-9	4	Screw-CARR
29	3256-3	2	Washer-Flat
30	109-8758	1	Height Adjustment ASM
30:2	109-8759	1	Decal-Cut Height
31	109-5819	2	Pin-Clevis
32	3256-26	3	Washer-Flat
33	32120-47	3	Ring-Retaining, External
34	109-8755	1	Stop-Height Adjust

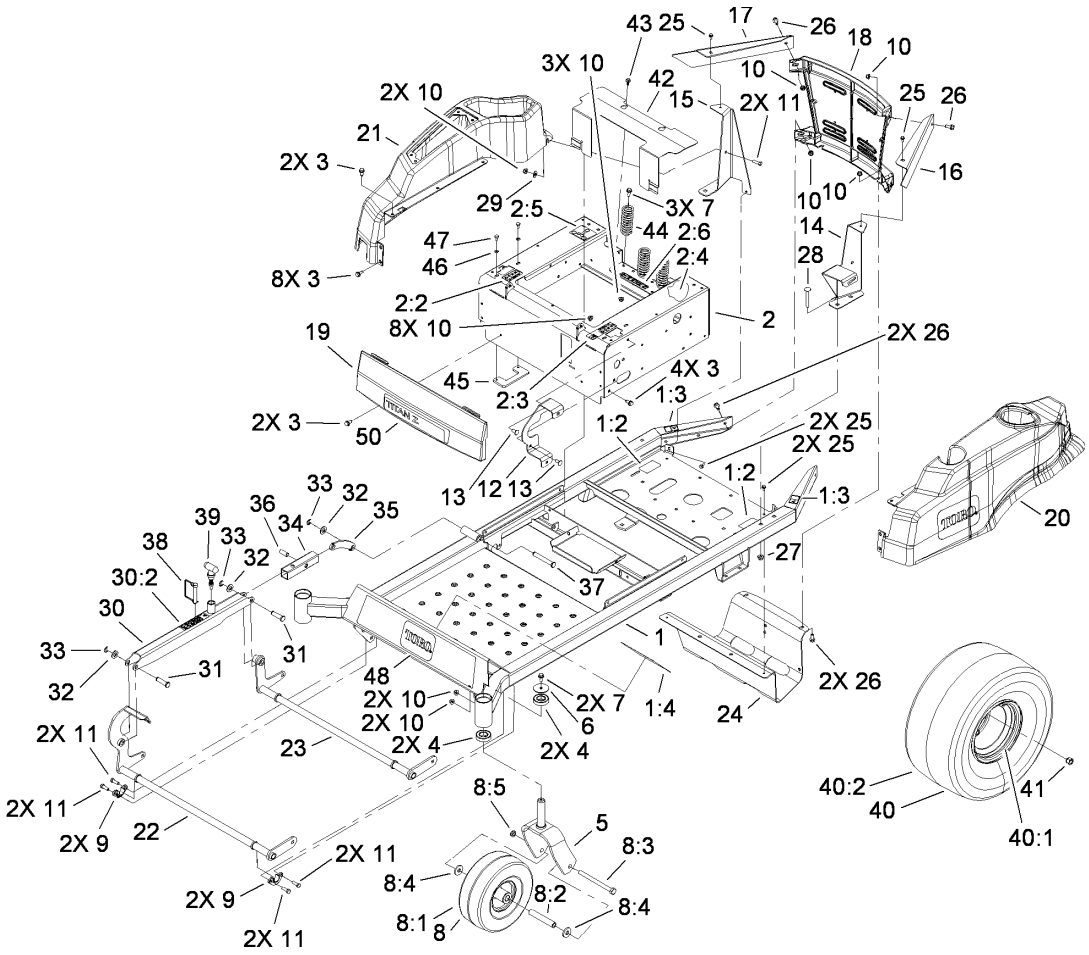

Frame Assembly (continued)

Ref	Part No.	Qty.	Description
35	109-5814	1	Arm-Float Link
36	109-5818	1	Pin-Pivot
37	109-6172	1	Pin-Clevis
38	93-4696	1	Pin-Hitch
39	109-6177	1	Pin-Spring
40	109-5486	2	Wheel And Tire ASM
40:1	109-5487	1	Wheel
40:2	109-5488	1	Tire
41	242-50	8	Nut-Lug
42	109-6190-03	1	Cover-Hydro Fan
43	99-6810	2	Screw-HH
44	92-7054	3	Spring-Compression
45	109-6214	2	Stop-Motion Control
46	1-303435	4	Washer-Spring
47	321-2	4	Screw-HH
48	109-9142	1	Decal-Front Panel
50	109-5866	1	Decal

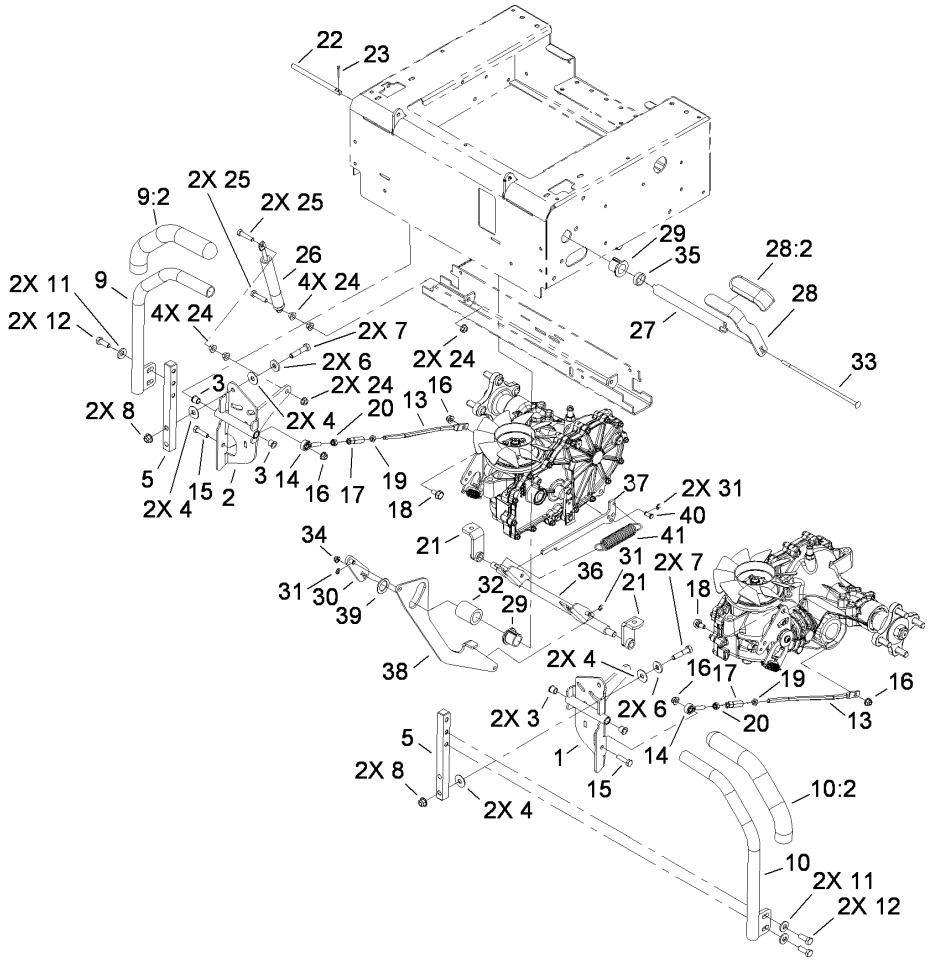

Motion Control and Brake Assembly

Ref	Part No.	Qty.	Description
1	109-6915	1	LH Motion Control Pivot ASM
2	109-6914	1	RH Motion Control Pivot ASM
3	103-9928	4	Bearing
4	52-2900	8	Washer-Plastic
5	109-3689	2	Post-Lever Mount
6	5-0838	4	Washer
7	323-9	4	Screw-HH
8	104-8301	4	Nut-Flange, NI
9	109-7098	1	RH Lever And Grip ASM
9:2	109-5192	1	Grip-Control Lever
10	109-7099	1	LH Lever And Grip ASM
10:2	109-5192	1	Grip-Control Lever
11	98-5975	4	Washer-Belleville
12	323-6	4	Screw-HH
13	109-3414	2	Rod-Steering
14	2411-53	2	Bearing-Rod End, LH
15	322-6	2	Screw-HH
16	104-8300	4	Nut-Flange, NI
17	109-3728	2	Nut-Rod Adjustment
18	37-8771	2	Bolt-Shoulder
19	3220-2	2	Nut-Jam
20	3220-20	2	Nut-Jam
21	109-6220	2	Brake Pivot ASM
22	109-3705	2	Pin-Control Pivot

Ref	Part No.	Qty.	Description
23	3272-10	2	Pin-Cotter
24	32128-20	12	Nut-HF
25	1-403180	4	Screw-HH
26	109-5957	2	Damper-Motion Control
27	109-5825	1	Tube-Brake Pivot
28	109-5918	1	Lever ASM
28:2	1-633268	1	Grip-Lever, Brake
29	107-7581	2	Bushing-Flange, Keyed
30	109-5824	1	Bellcrank ASM
31	701197	4	E-Ring
32	109-5834	1	Spacer
33	109-5868	1	Bolt-CARR
34	104-7201	1	Nut-HF
35	109-5914	1	Spacer
36	109-8765	1	Brake Shaft ASM
37	109-6907	2	Link-Brake Actuation
38	109-5833	1	Arm-Brake
39	99-4958	1	Spacer
40	109-6887	2	Pin-Clevis
41	1-603693	2	Spring-Extension

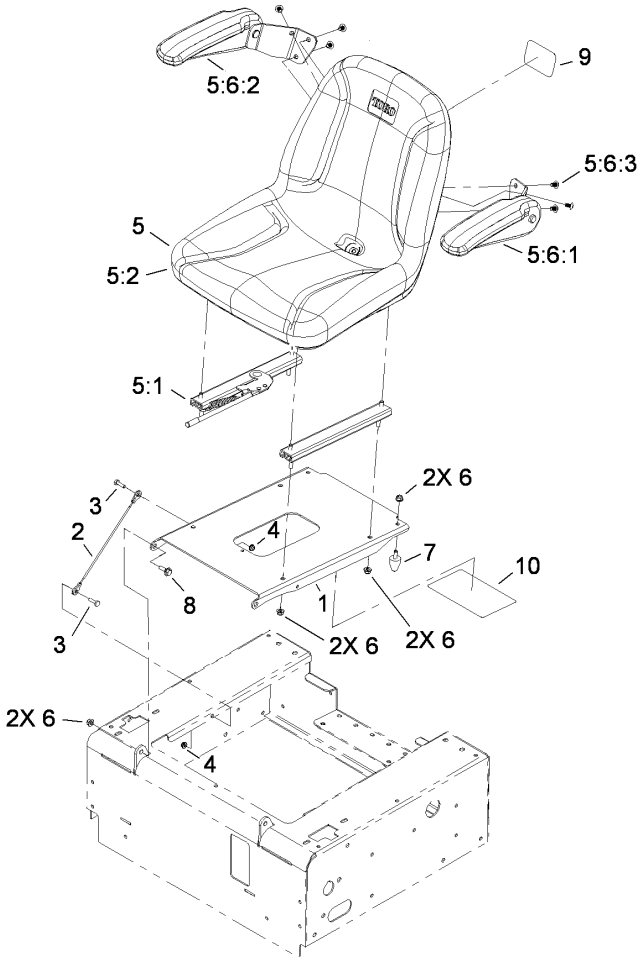

Seat Assembly

Ref	Part No.	Qty.	Description
1	109-6916	1	Seat Plate ASM
2	109-2628	1	Cable-Stop, Seat
3	321-5	2	Screw-HH
4	104-7201	2	Nut-HF
5	109-6184	1	Seat ASM
5:1	107-1880	1	Seat Track Kit
5:2	109-6381	1	Seat
❶❷5:6		1	Armrest Kit
5:6:1	110-6569	1	LH Armrest Kit
5:6:2	110-6570	1	RH Armrest Kit
5:6:3	108-6179	6	Screw-HSBH
6	104-8300	8	Nut-Flange, NI
7	103-9376	2	Bumper-Seat
8	27-0410	2	Screw-Shoulder
9	99-2385	1	Decal
10	109-6016	1	Decal-Service Aid

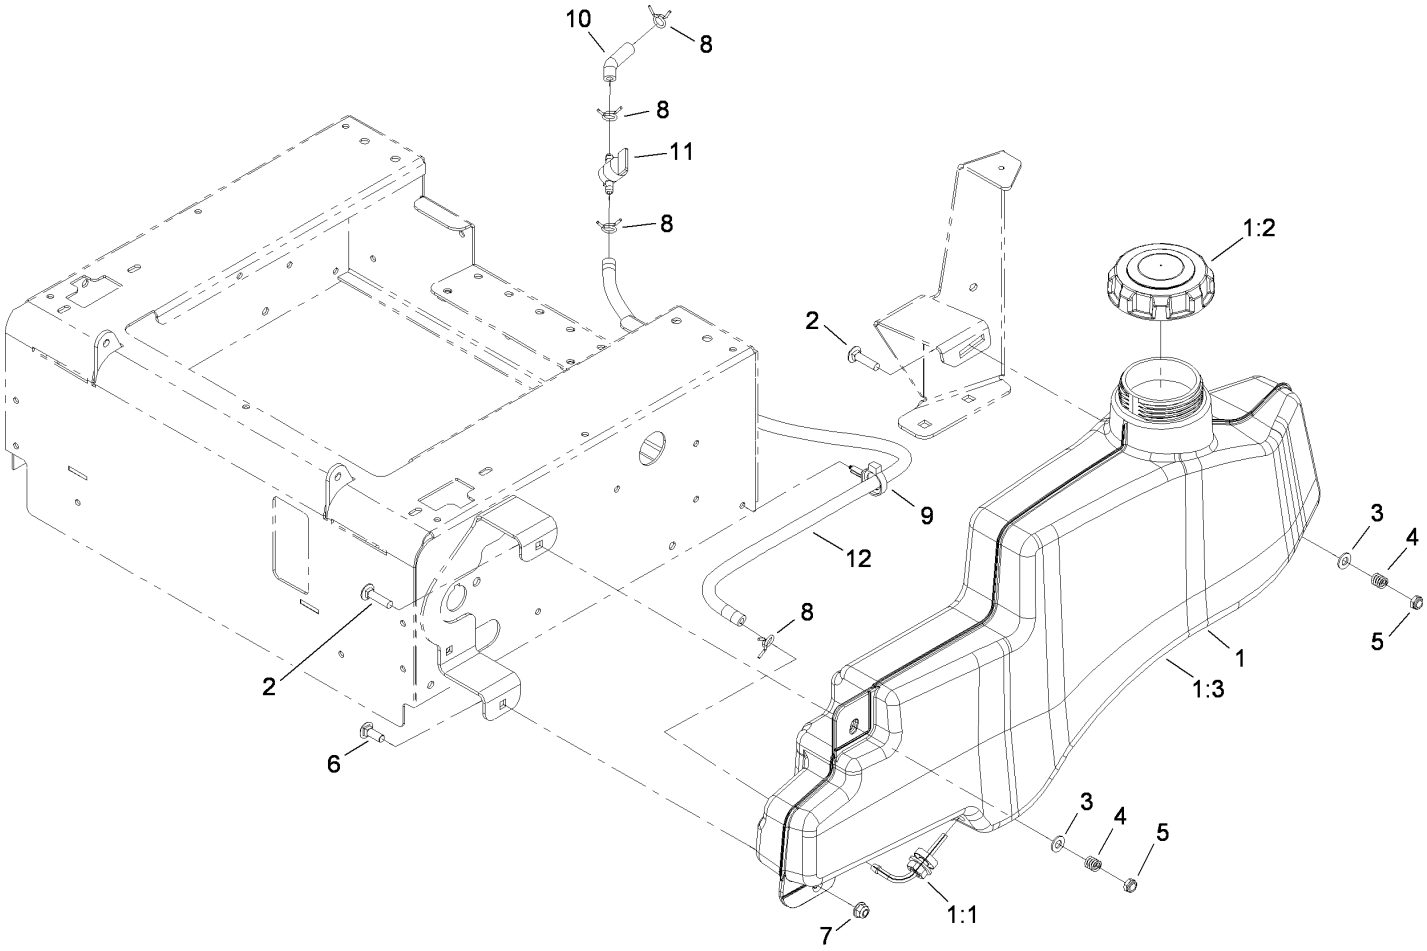

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	109-5510	1	Fuel Tank ASM
1:1	103-2605	1	Fitting-Fuel, Bulkhead
1:2	109-0346	1	Cap-Fuel, Gas
1:3	109-3412	1	Tank-Fuel
2	3230-3	2	Screw-CARR
3	3256-23	2	Washer-Flat
4	1-633349	2	Spring-Tank, Fuel
5	3296-47	2	Nut-Lock, NI
6	3230-16	1	Screw-CARR
7	104-8300	1	Nut-Flange, NI
8	1-303077	4	Clamp
9	105-1853	1	Clamp-Hose
10	109-0304	1	Hose-Fuel
11	1-603770	1	Valve-Fuel
12	109-0286	1	Hose-Fuel

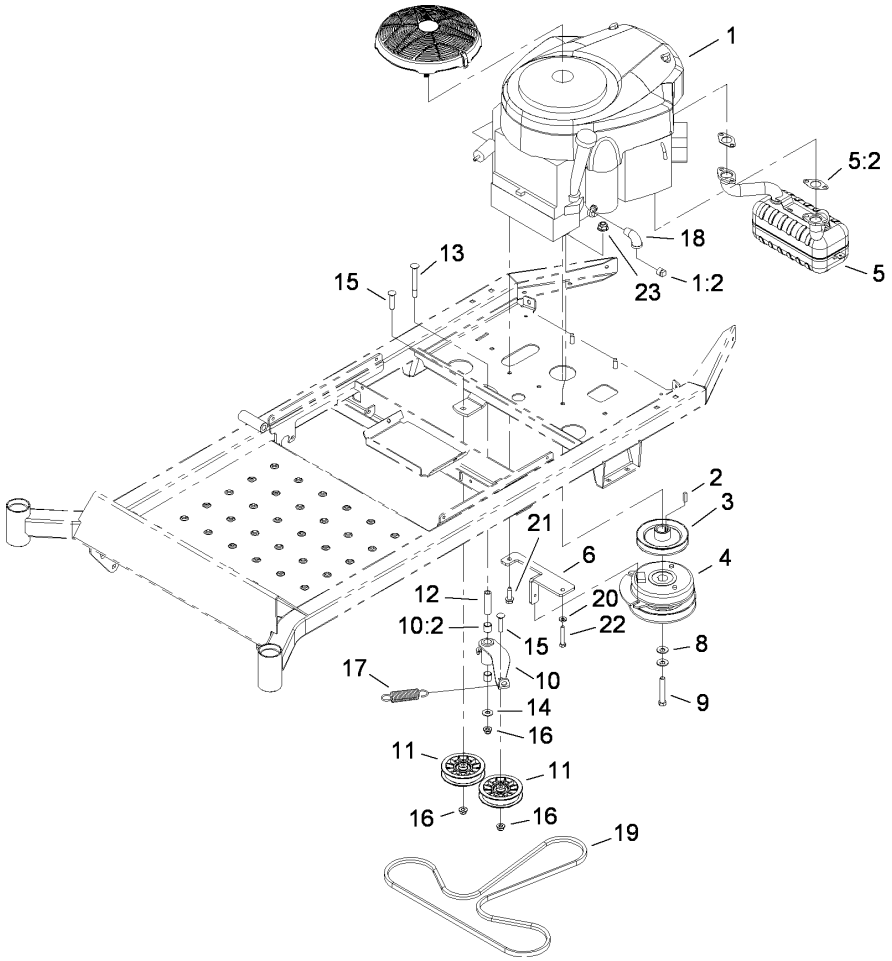

Engine Assembly

Ref	Part No.	Qty.	Description
❷❸1		1	Engine-Briggs And Stratton, 44K777-0125-G1
1:2	281-2	1	Plug-Pipe, SQH
2	5-7280	1	Key
3	109-3386	1	Sheave-Split Steel
4	110-6766	1	Clutch-Electric, PTO
5	109-8851	1	Muffler ASM
5:2	104-3226	2	Gasket-Exhaust
6	109-8855-03	1	Anchor-Clutch
8	1-603610	2	Washer-Spring
9	3212-11	1	Screw-HH
10	109-9162	1	Idler Arm ASM
10:2	1-513034	2	Sleeve-Bearing
11	109-3397	2	Pulley-Flat Idler
12	1-603384	1	Bushing-Pivot, Idler
13	3231-11	1	Screw-CARR
14	3256-4	1	Washer-Flat
15	3231-5	2	Screw-CARR
16	104-8301	3	Nut-Flange, NI
17	1-603402	1	Spring-Extension
18	1-403124	1	Elbow-90 DEG
19	109-3388	1	Belt
20	1-303334	1	Washer-Spring
21	32144-109	3	Screw

Ref	Part No.	Qty.	Description
22	322-10	1	Screw-HH
23	104-8300	1	Nut-Flange, NI

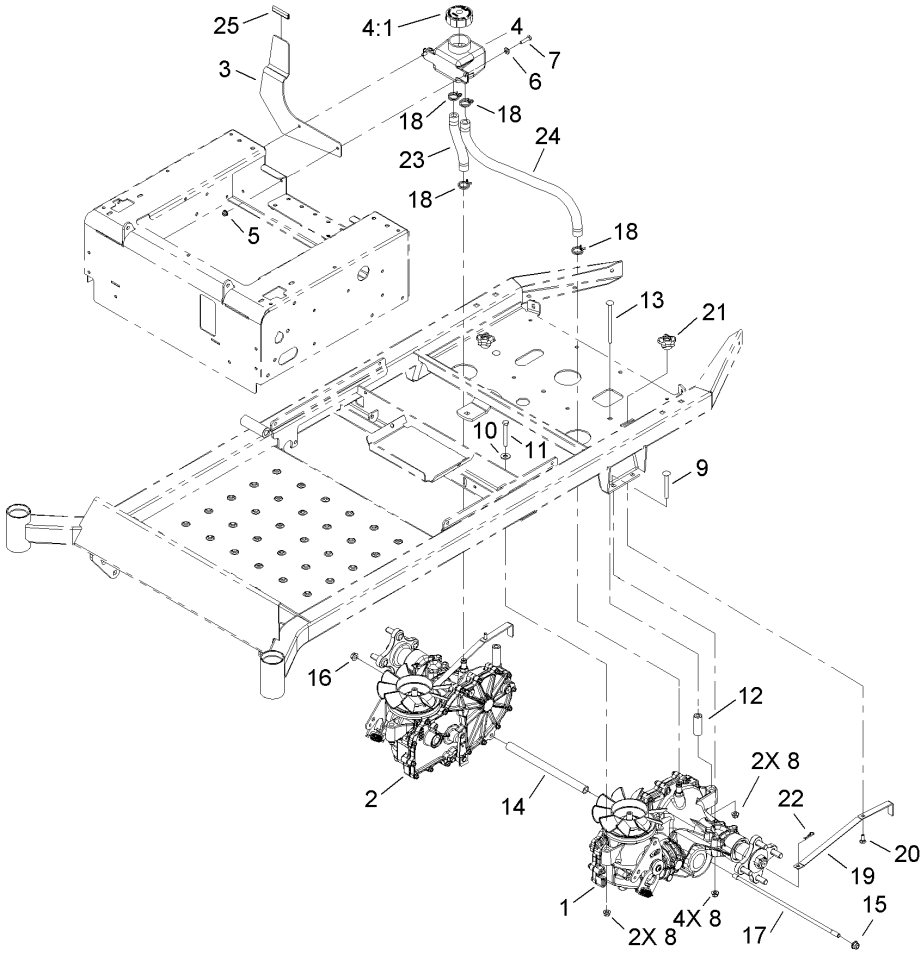

Transmission Assembly

Ref	Part No.	Qty.	Description
1	109-3372	1	Transmission-LH
2	109-3371	1	Transmission-RH
3	109-6570-03	1	Bracket-Fender Support
4	109-2250	1	Vent-Tank, Hydro
4:1	109-3320	1	Cap-Reservoir, Hydraulic
5	104-7201	2	Nut-HF
6	3256-22	2	Washer-Flat
7	321-6	2	Screw-HH
8	104-8300	8	Nut-Flange, NI
9	3230-9	4	Screw-CARR
10	3256-3	2	Washer-Flat
11	322-12	2	Screw-HH
12	109-3652	2	Spacer-Hydro
13	3230-30	2	Screw-CARR
14	109-3710	1	Tube-Spacer
15	104-8301	1	Nut-Flange, NI
16	3290-357	1	Nut-HHF, Whiz
17	109-3711	1	Rod-Tension
18	109-3322	4	Clamp-Hose
19	109-5395	2	Arm-Hydro Bypass
20	3229-1	2	Screw-CARR
21	108-6402	2	Knob-Handle
22	1-806003	2	Pin-Hair
23	109-5577	1	Hose-Hydraulic
24	109-5578	1	Hose-Hydraulic
25	109-2985	1	Trim

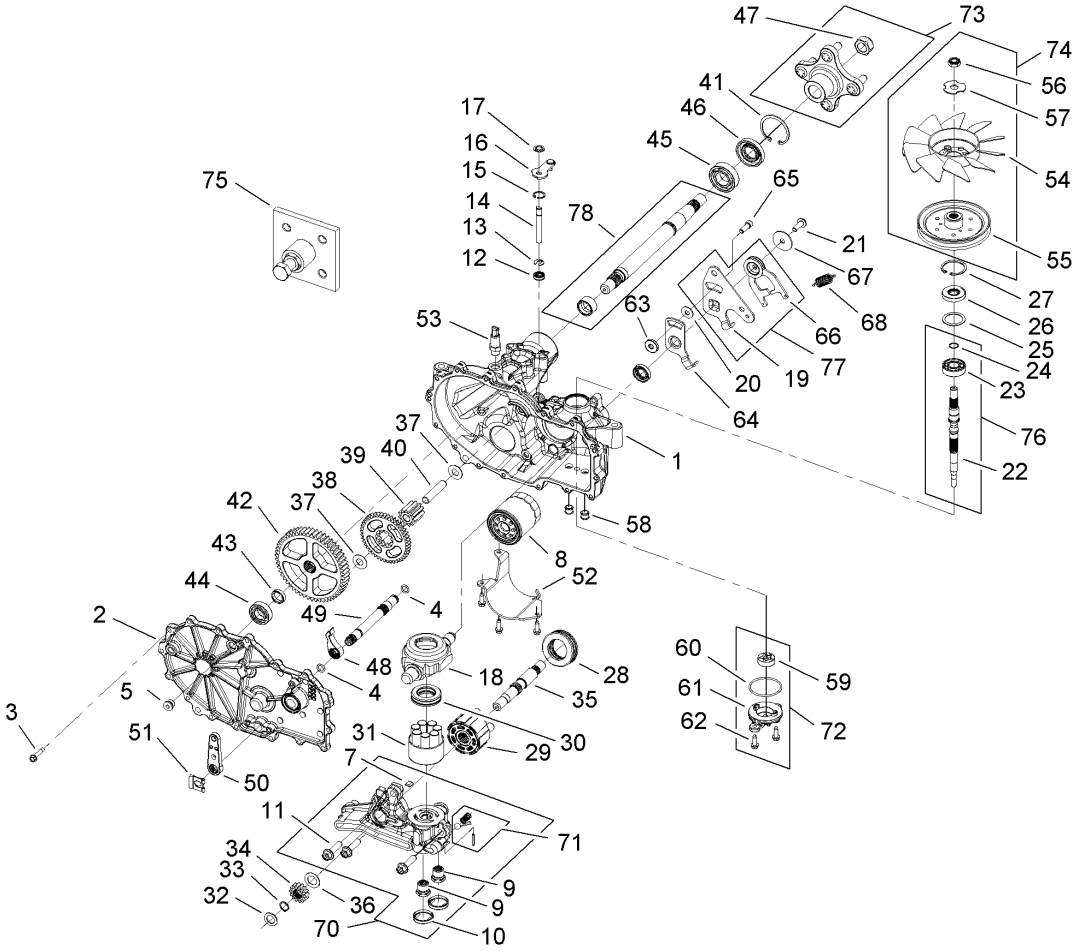

LH Hydro Transmission Assembly
No. 109-3372

Ref	Part No.	Qty.	Description
1	114-8471	1	LH Main Housing Kit
2	114-8472	1	LH Side Cover Kit
3	104-5305	16	Screw-HHF
4	114-1678	1	O-Ring
5	112-9850	1	Plug
❶6	114-1679	1	Loctite 590-Gasket Material
7	114-1680	1	Plate-Bypass
8	109-3321	1	Element-Oil Filter, HYD
9	114-1682	1	Check Plug
10	114-1683	2	Seal-Plug
11	114-1684	3	Screw-Hfhc
12	106-8676	1	Seal-Lip
13	106-8677	1	Ring-Retaining, EXT
14	114-1685	1	Rod-Bypass
15	106-8679	1	Ring-Retaining, Int
16	107-2490	1	Arm-Bypass
17	106-8681	1	Ring-Retaining, EXT
18	104-5304	1	Swashplate-Trunnion
19	114-1686	1	Arm-Control, RH
20	114-8491	1	Washer
21	107-2488	1	Screw
22	114-1687	1	Shaft-Input
23	103-7441	1	Bearing-Shaft, Input
24	104-5307	1	Ring-Retaining

Ref	Part No.	Qty.	Description
25	104-5308	1	Spacer
26	104-5310	1	Seal-Lip
27	104-5309	1	Ring-Retaining
28	114-1688	1	Bearing-Thrust
29	114-1689	1	Motor Cylinder Block Kit
30	94-6922	1	Bearing-Thrust
31	110-8561	1	Pump Block ASM
32	104-5339	1	Washer-Flat
33	104-5340	1	Ring-Retaining
34	114-1690	1	Gear-14T
35	114-1691	1	Shaft-Motor
36	104-5360	1	Washer-Shaft, Motor
37	94-1933	1	Washer
38	114-1692	1	Gear-45T
39	114-1693	1	Gear-11T
40	104-5329	1	Pin-Jackshaft
41	104-2169	1	Ring-Retaining
42	114-1694	1	Gear-54T
43	114-1695	1	Spacer
44	114-1696	1	Bearing-Ball
45	104-2143	1	Bearing-Ball
46	104-2144	1	Seal
47	105-1895	1	Nut
48	114-1697	1	Pawl-Brake

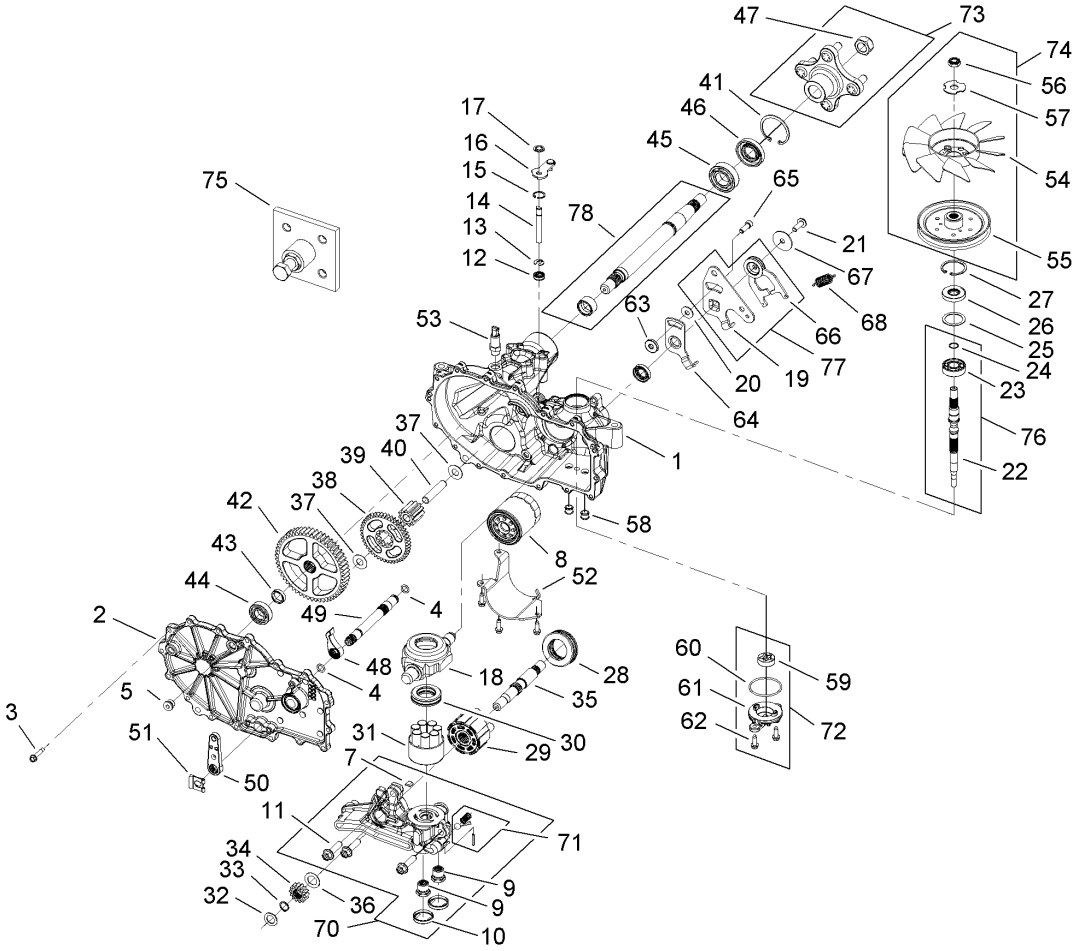

LH Hydro Transmission Assembly No. 109-3372 (continued)

Ref	Part No.	Qty.	Description
49	114-1698	1	Shaft-Inboard Brake
50	114-1699	1	Handle-Brake
51	114-8450	1	Clip-Retaining
52	114-8473	1	Guard-Filter, LH
53	109-3278	1	Adapter-Straight
❶53:1	1-603921	1	O-Ring
54	114-8453	1	Fan-7.0
55	114-8454	1	Pulley-5.0 Inch
56	105-1875	1	Nut-Lock
57	107-9122	1	Washer-Slotted
58	114-8455	1	Tube-Connecting
59	104-2122	1	Gerotor ASM
60	109-3540	1	O-Ring-Seal
61	114-8457	1	Cover-Charge Pump
62	104-2120	1	Screw
63	114-8458	1	Spacer
64	114-8474	1	Arm-Neutral, Left
65	106-8682	1	Screw-Sh
66	114-8475	1	Rtn Ccw ASM
67	114-8478	1	Washer
68	109-5592	1	Spring-Extension
69	109-3537	1	Complete Seal Kit
70	114-8476	1	LH Center Section Kit
71	114-8464	1	Charge Relief Kit

Ref	Part No.	Qty.	Description
72	114-8465	1	Charge Kit
73	109-5939	1	Hub Kit
❷73:2		1	Hub W/Studs
74	109-5938	1	Fan And Pulley Kit
❷74:2		1	Pulley
❷74:3		1	Locknut,Hex
❷74:4		1	Washer
75	114-8467	1	Hub-Puller, 4 Bolt
76	114-8468	1	Input Shaft Kit
77	114-8477	1	Rtn Ccw Kit
78	114-8470	1	Axle Shaft Kit

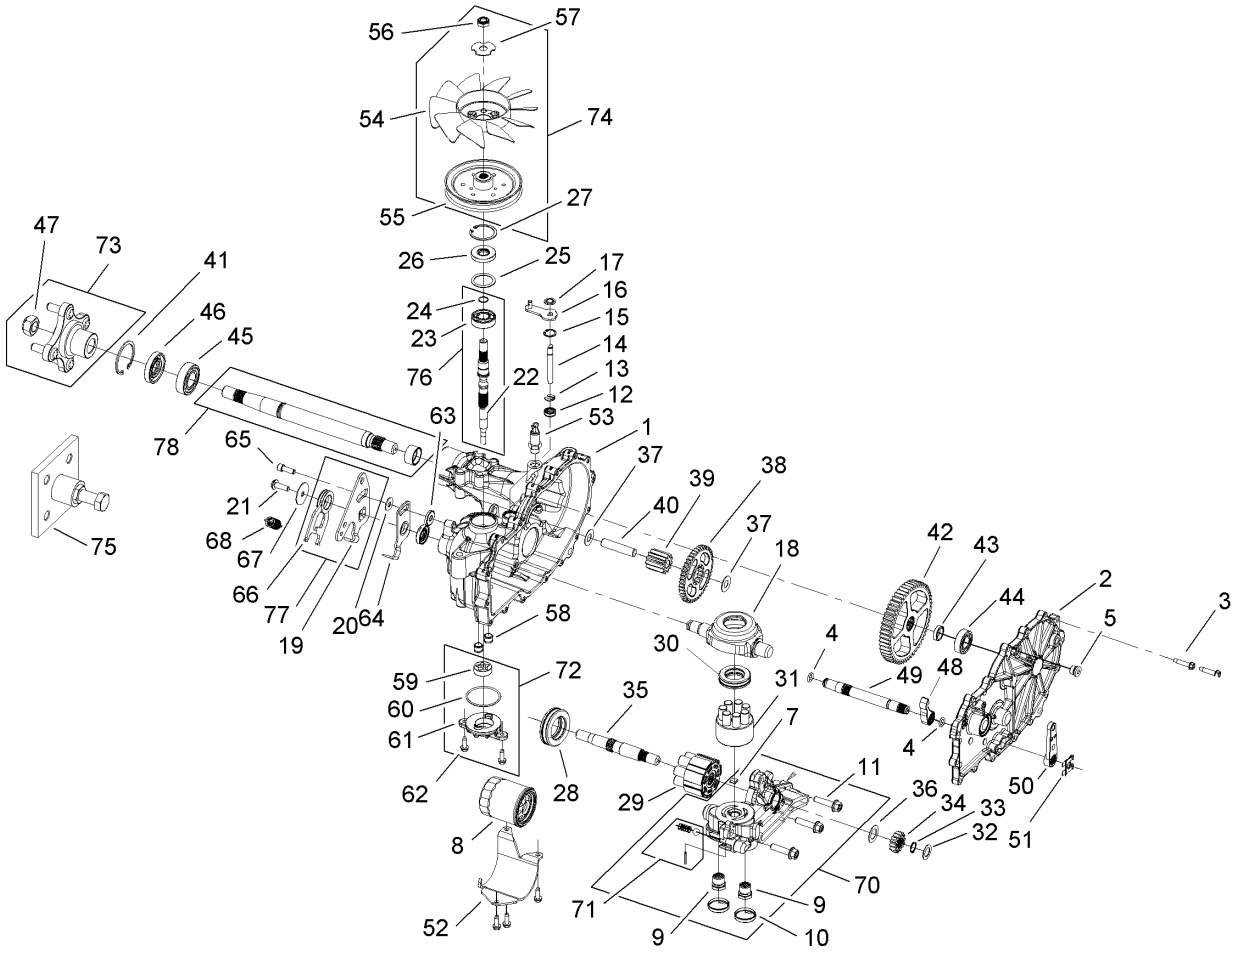

RH Hydro Transmission Assembly
No. 109-3371

Ref	Part No.	Qty.	Description
1	114-1676	1	RH Main Housing Kit
2	114-1677	1	RH Side Cover Kit
3	104-5305	16	Screw-HHF
4	114-1678	2	O-Ring
5	112-9850	1	Plug
❶6	114-1679	1	Loctite 590-Gasket Material
7	114-1680	1	Plate-Bypass
8	109-3321	1	Element-Oil Filter, HYD
9	114-1682	1	Check Plug
10	114-1683	2	Seal-Plug
11	114-1684	3	Screw-Hfhc
12	106-8676	1	Seal-Lip
13	106-8677	1	Ring-Retaining, EXT
14	114-1685	1	Rod-Bypass
15	106-8679	1	Ring-Retaining, Int
16	107-2490	1	Arm-Bypass
17	106-8681	1	Ring-Retaining, EXT
18	104-5304	1	Swashplate-Trunnion
19	114-1686	1	Arm-Control, RH
20	114-8491	1	Washer
21	107-2488	1	Screw
22	114-1687	1	Shaft-Input
23	103-7441	1	Bearing-Shaft, Input
24	104-5307	1	Ring-Retaining

Ref	Part No.	Qty.	Description
25	104-5308	1	Spacer
26	104-5310	1	Seal-Lip
27	104-5309	1	Ring-Retaining
28	114-1688	1	Bearing-Thrust
29	114-1689	1	Motor Cylinder Block Kit
30	94-6922	1	Bearing-Thrust
31	110-8561	1	Pump Block ASM
32	104-5339	1	Washer-Flat
33	104-5340	1	Ring-Retaining
34	114-1690	1	Gear-14T
35	114-1691	1	Shaft-Motor
36	104-5360	1	Washer-Shaft, Motor
37	94-1933	2	Washer
38	114-1692	1	Gear-45T
39	114-1693	1	Gear-11T
40	104-5329	1	Pin-Jackshaft
41	104-2169	1	Ring-Retaining
42	114-1694	1	Gear-54T
43	114-1695	1	Spacer
44	114-1696	1	Bearing-Ball
45	104-2143	1	Bearing-Ball
46	104-2144	1	Seal
47	105-1895	1	Nut
48	114-1697	1	Pawl-Brake

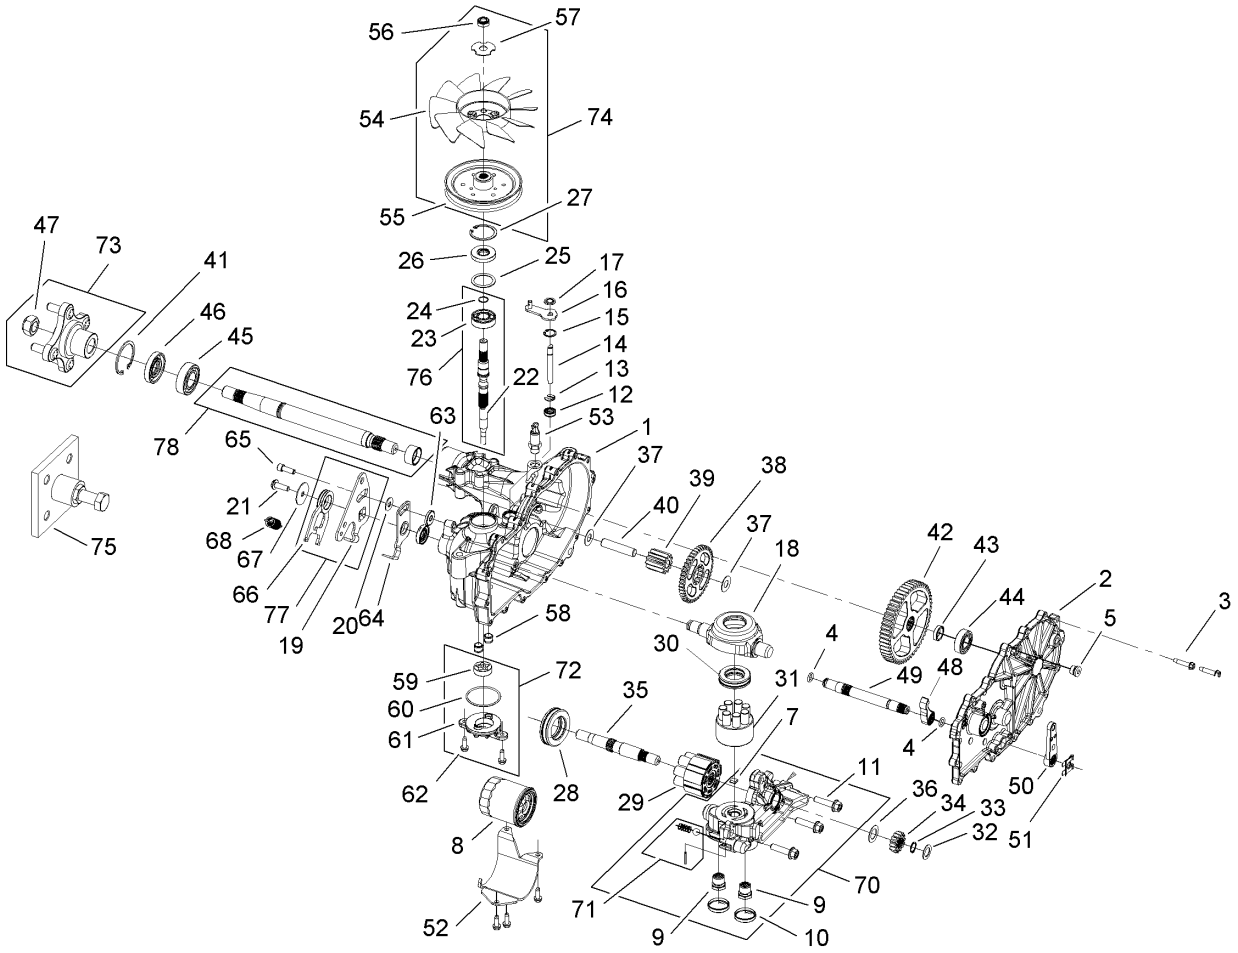

RH Hydro Transmission Assembly No. 109-3371 (continued)

Ref	Part No.	Qty.	Description
49	114-1698	1	Shaft-Inboard Brake
50	114-1699	1	Handle-Brake
51	114-8450	1	Clip-Retaining
52	114-8451	1	Guard-Filter, RH
53	109-3278	1	Adapter-Straight
❶53:1	1-603921	1	O-Ring
54	114-8453	1	Fan-7.0
55	114-8454	1	Pulley-5.0 Inch
56	105-1875	1	Nut-Lock
57	107-9122	1	Washer-Slotted
58	114-8455	2	Tube-Connecting
59	104-2122	1	Gerotor ASM
60	109-3540	1	O-Ring-Seal
61	114-8457	1	Cover-Charge Pump
62	104-2120	2	Screw
63	114-8458	1	Spacer
64	114-8459	1	Arm-Neutral, Right
65	106-8682	1	Screw-Sh
66	114-8460	1	Cw Rtn ASM
67	114-8478	1	Washer
68	109-5592	1	Spring-Extension
❶69	109-3537	1	Complete Seal Kit
70	114-8463	1	RH Center Section Kit
71	114-8464	1	Charge Relief Kit

Ref	Part No.	Qty.	Description
72	114-8465	1	Charge Kit
73	109-5939	1	Hub Kit
❷73:2		1	Hub W/Studs
74	109-5938	1	Fan And Pulley Kit
❷74:2		1	Pulley
❷74:3		1	Locknut,Hex
❷74:4		1	Washer
75	114-8467	1	Hub-Puller, 4 Bolt
76	114-8468	1	Input Shaft Kit
77	114-8469	1	Rtn Cw Kit
78	114-8470	1	Axle Shaft Kit

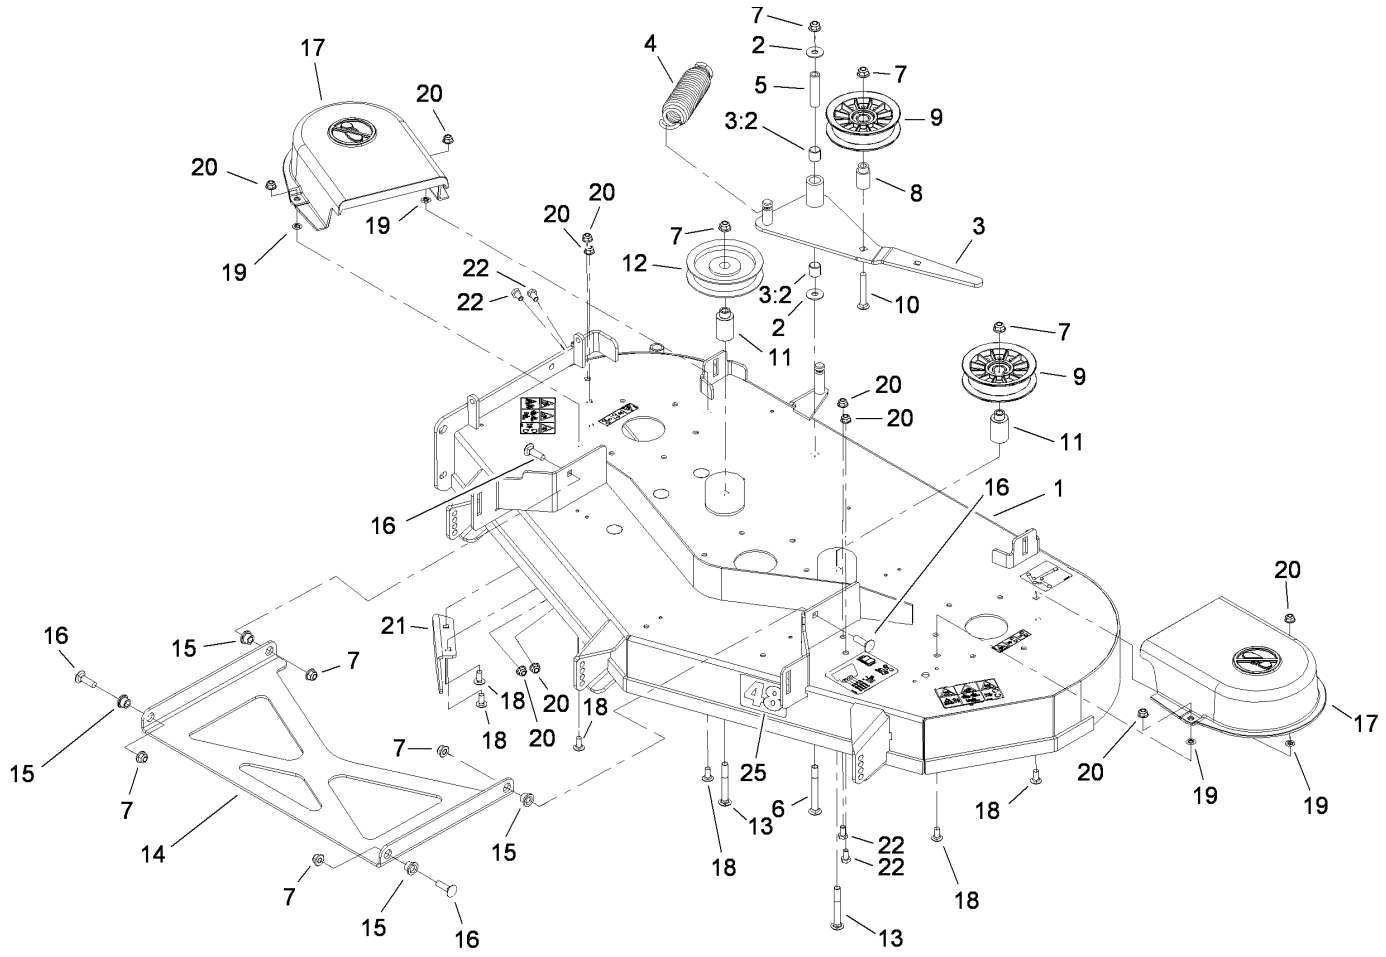

48 Inch Deck Assembly

Ref	Part No.	Qty.	Description
1	109-6253	1	48 Inch Deck ASM
2	52-2860	2	Washer
3	109-9158	1	Idler Arm ASM
3:2	1-513034	2	Sleeve-Bearing
4	103-3330	1	Spring-Extension
5	1-603384	1	Bushing-Pivot, Idler
6	3231-11	1	Screw-CARR
7	104-8301	8	Nut-Flange, NI
8	1-413113	1	Bushing-Idler
9	109-8891	2	Sheave And Bearing ASM
10	3231-31	1	Screw-CARR
11	109-6572	2	Bushing-Idler
12	1-603843	1	Pulley-Idler
13	109-6868	2	Bolt-Carriage
14	109-3723-01	1	Strut-Deck
15	109-8788	4	Bushing-Flanged
16	3231-25	4	Screw-CARR
17	109-3449	2	Shield-Belt
18	3230-23	6	Screw-CARR
19	109-5667	4	Ring-Retaining, Bolt
20	104-8300	10	Nut-Flange, NI
21	109-5498-03	1	Baffle-Discharge
22	322-2	4	Screw-HH
25	109-9145	1	Decal-Titan, 48 Inch Deck

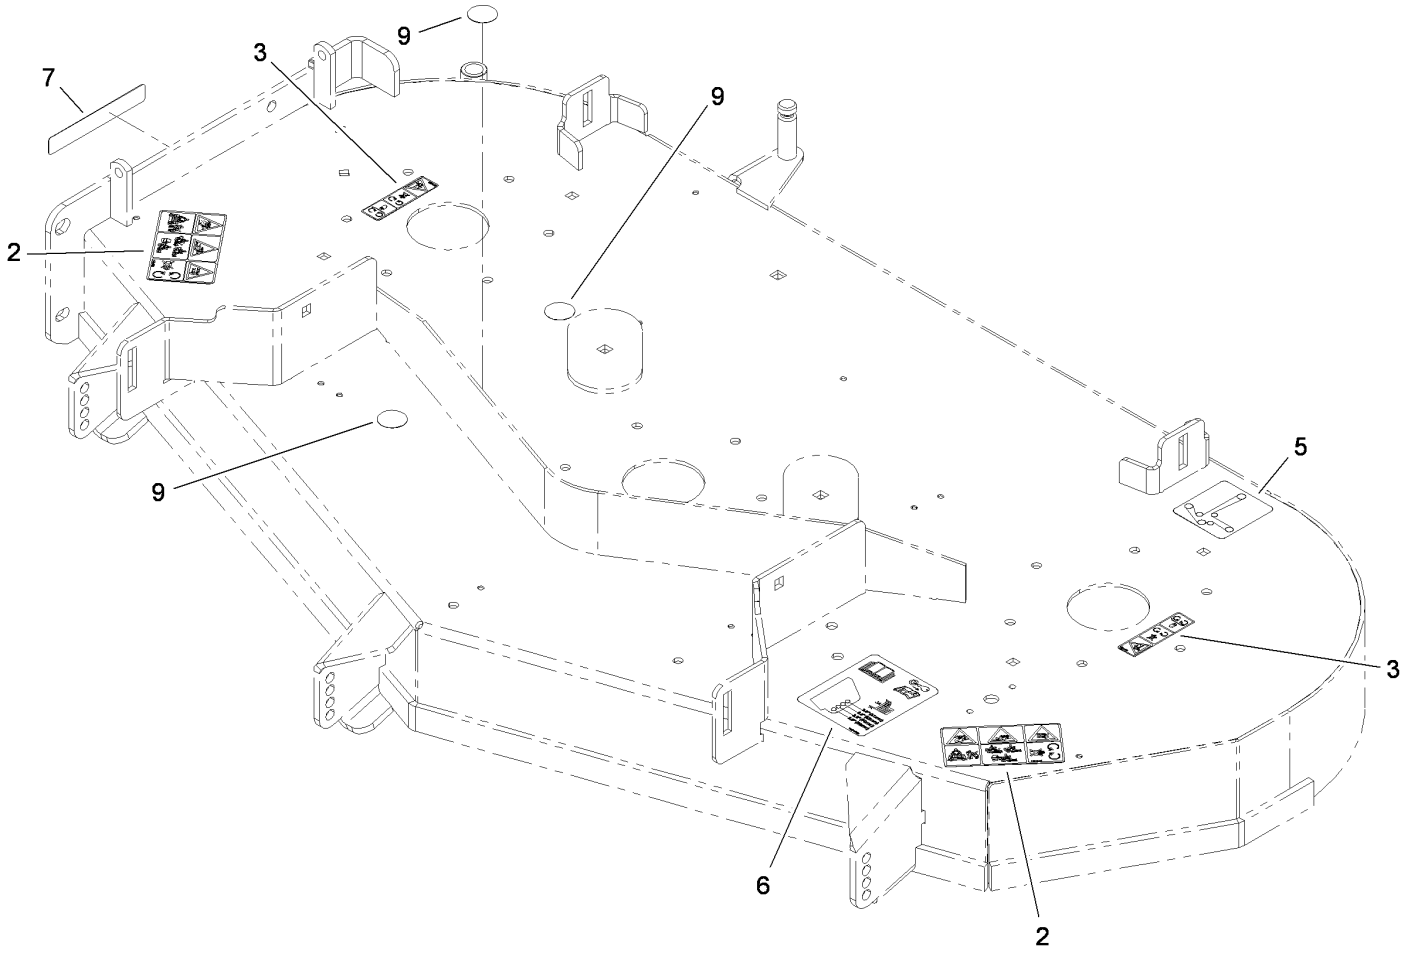

48 Inch Deck Assembly No. 109-6253

Ref	Part No.	Qty.	Description
2	110-6691	2	Decal-Danger
3	109-6459	2	Decal-Warning, Belt Shield
5	109-6035	1	Decal-Belt Routing
6	109-6036	1	Decal-Roller, Anti-Scalp
7	93-7009	1	Decal-Danger, Deflector
9	109-6625	3	Decal-Cover, Hole

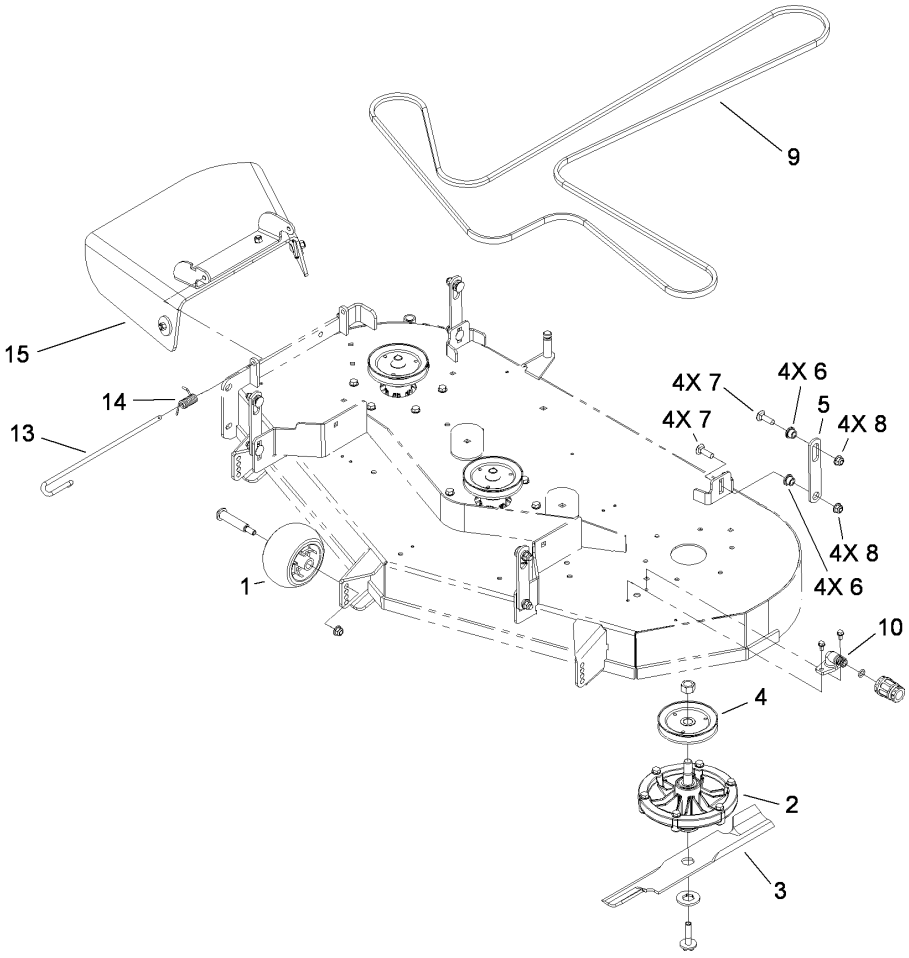

48 Inch Deck and Discharge Assembly

Ref	Part No.	Qty.	Description
1	109-6388	3	Anti-Scalp Roller Kit
2	109-8744	3	Complete Cutter Housing ASM
3	109-6872	3	Blade-Notched
4	109-3747	3	Pulley-Drive, Blade
5	109-3410	4	Hanger-Deck
6	109-8788	8	Bushing-Flanged
7	3231-25	8	Screw-CARR
8	104-8301	8	Nut-Flange, NI
9	109-5364	1	Belt
10	109-6393	1	Washout Port Kit
13	109-8854	1	Pin-Chute
14	57-6950	1	Spring
15	114-1651	1	Rubber Deflector ASM

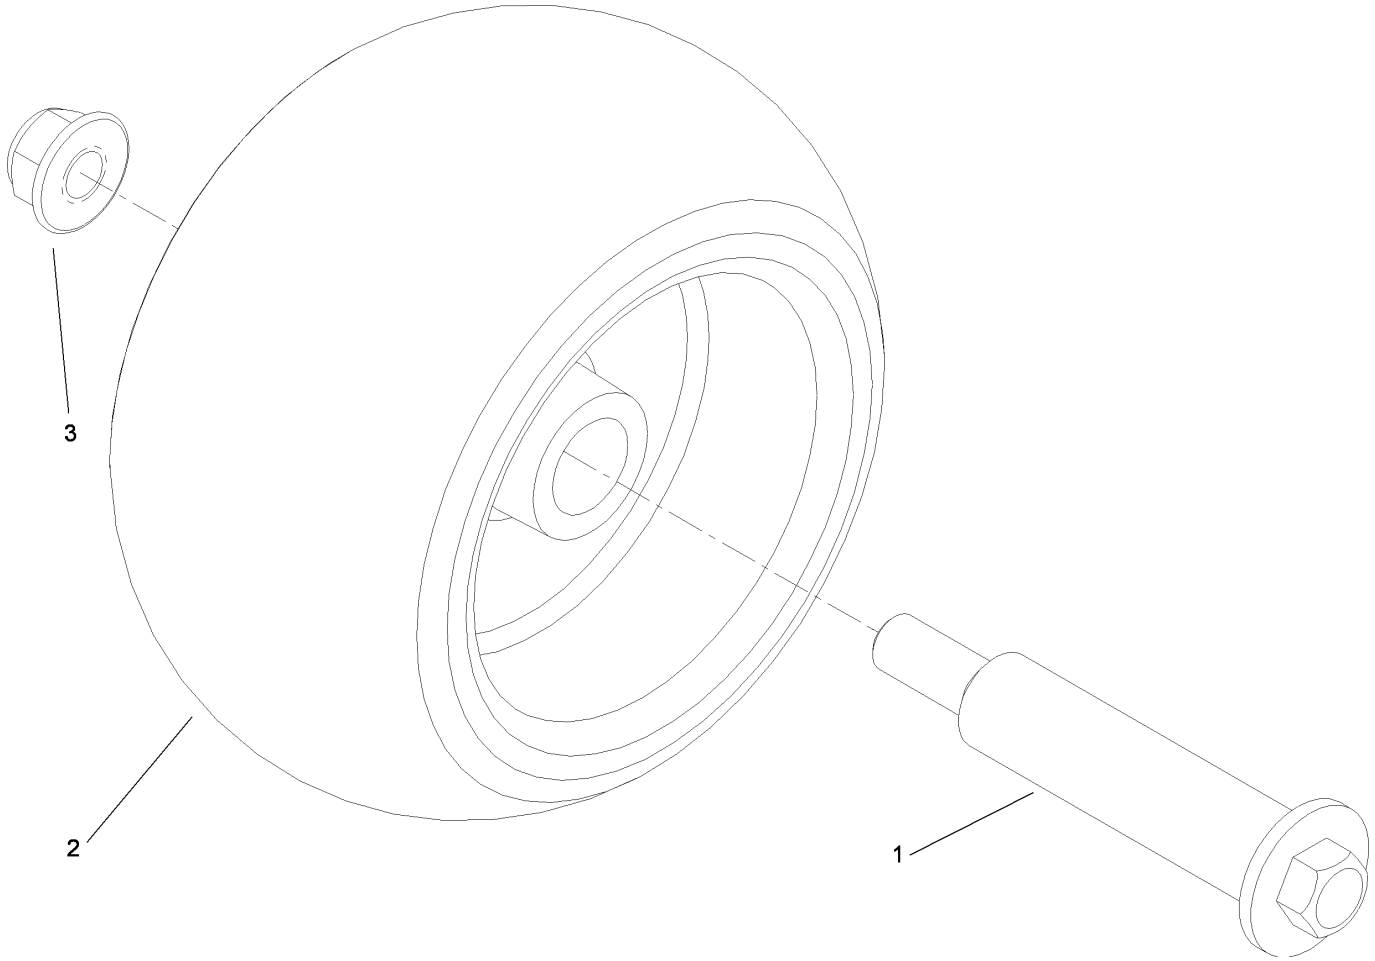

Anti-Scalp Roller Assembly No. 109-6388

Ref	Part No.	Qty.	Description
1	112-3977	1	Bolt-Shoulder
2	1-603299	1	Roller-Scalp, Anti
3	104-8301	1	Nut-Flange, NI

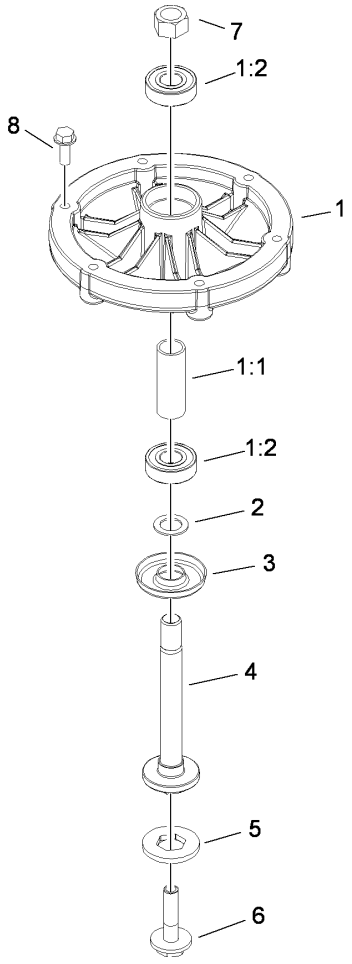

Cutter Housing Assembly No. 109-8744

Ref	Part No.	Qty.	Description
1	109-9380	1	Cutter Housing ASM
1:1	62-3661	1	Spacer
1:2	109-9379	2	Bearing-Ball
2	80-4380	1	Spacer
3	80-4360	1	Shield-Bearing
4	109-7431	1	Spindle-Hex Pilot
5	109-7429	1	Washer-Blade Drive
6	109-7452	1	Bolt-Sems, Blade
7	3219-6	1	Nut-Hex
8	32144-41	6	Screw-Taptite

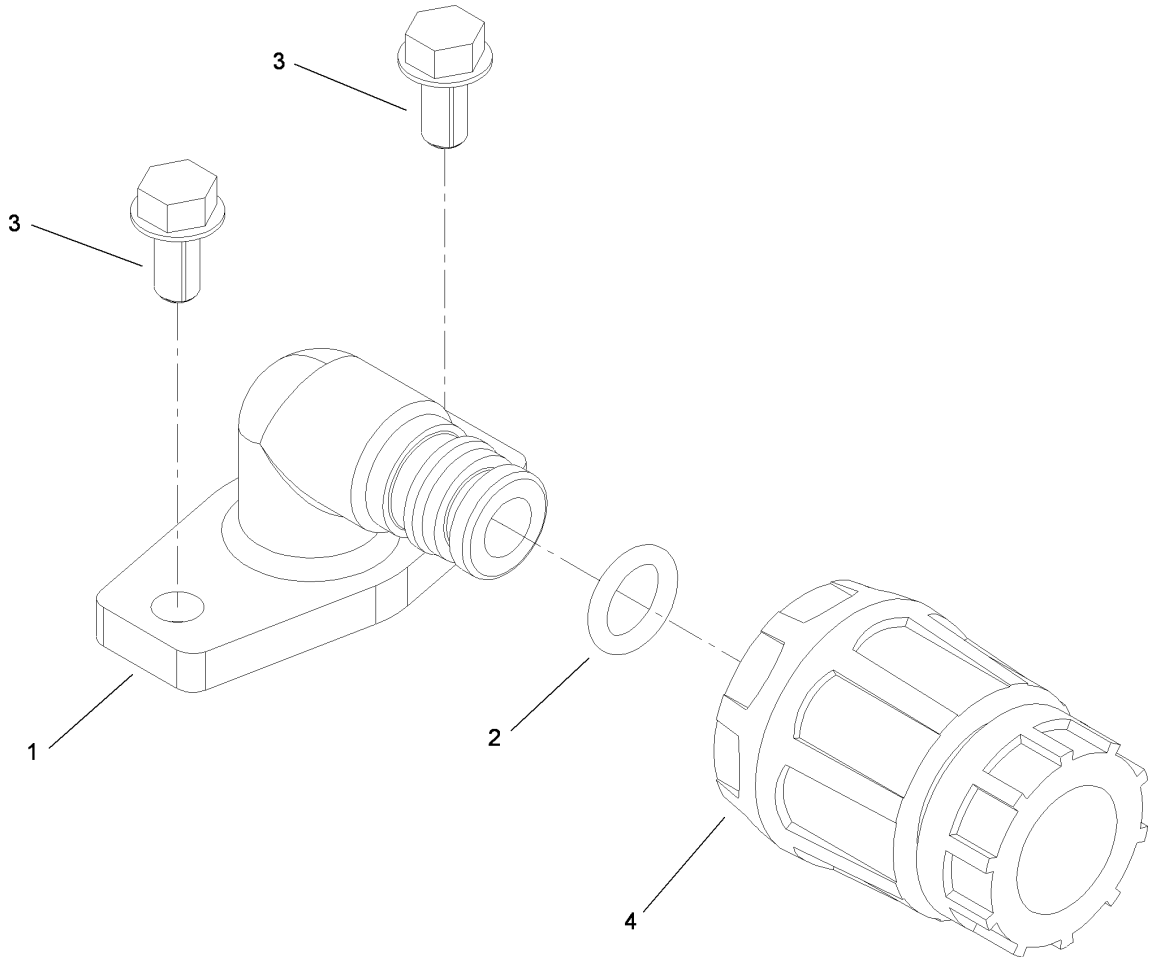

Washout Port Assembly No. 109-6393

Ref	Part No.	Qty.	Description
1	95-2747	1	Fitting-Washout
2	46-6290	1	O-Ring Seal
3	93-6083	2	Screw-HWH
4	95-3270	1	Connector-Hose

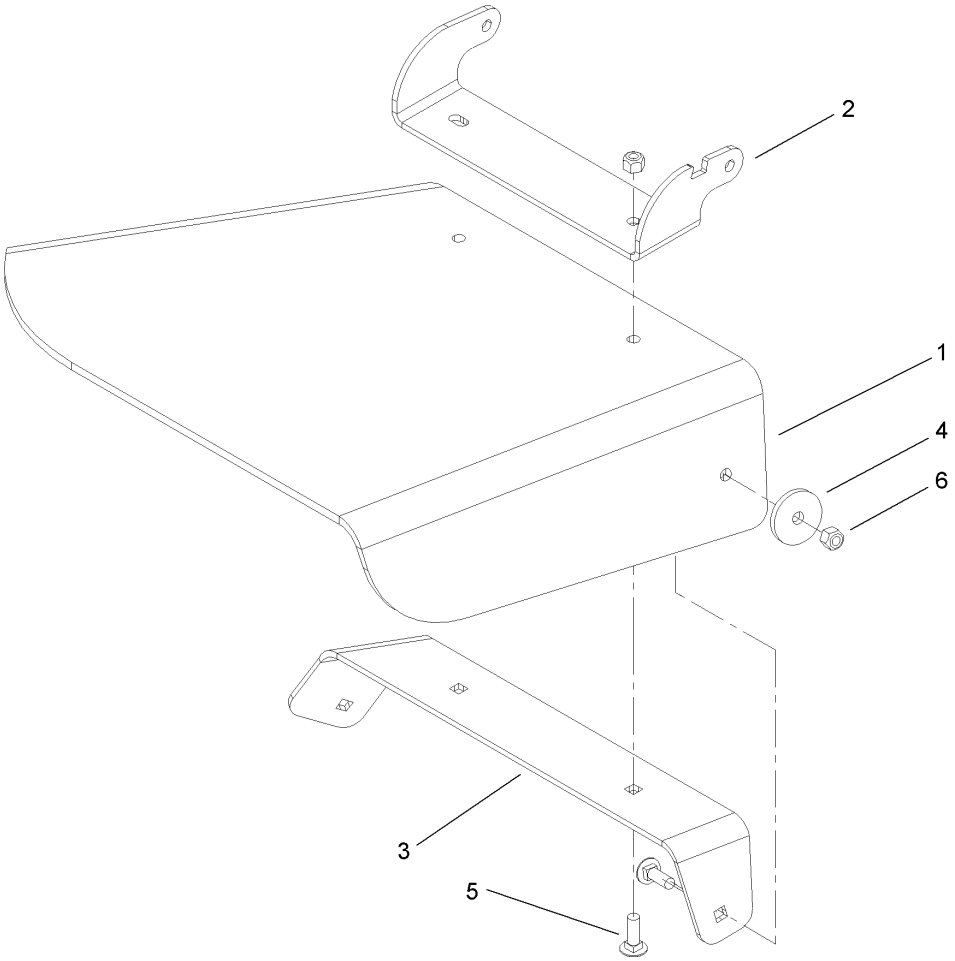

Rubber Deflector Assembly No. 114-1651

Ref	Part No.	Qty.	Description
1	114-1660	1	Deflector-Rubber
2	114-1648-03	1	Bracket-Deflector, Upper
3	114-1649-03	1	Bracket-Deflector, Lower
4	62-7190	2	Spacer-Steel
5	3230-2	4	Bolt-CARR
6	3296-29	4	Nut-Lock, NI

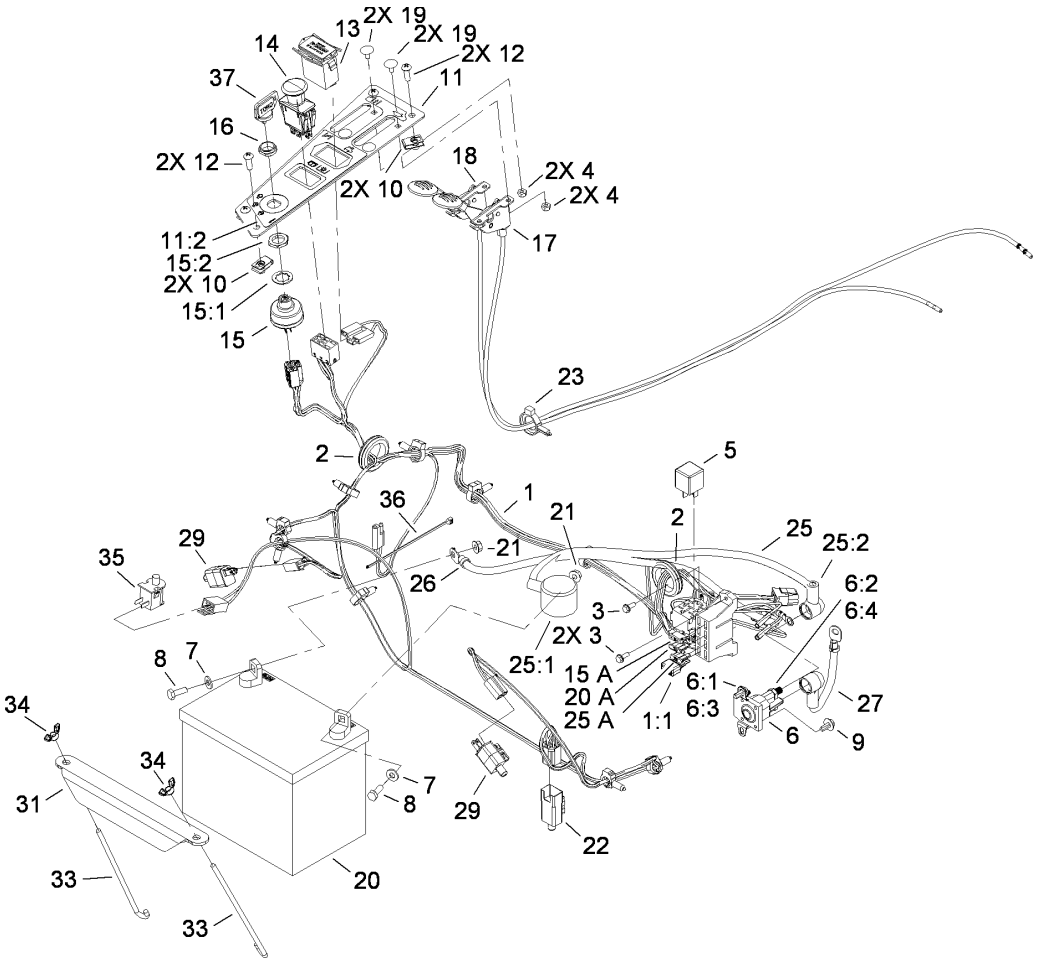

Electrical Assembly

Ref	Part No.	Qty.	Description
1	109-8786	1	Harness-Wire
1:1	109-9186	1	Diode-Tvs
2	240-3	2	Grommet-Rubber
3	32144-1	3	Screw-Taptite
4	3296-2	4	Nut-Lock
5	1-643275	1	Relay
6	1-513075	1	Switch-Solenoid
6:1	3253-17	2	Washer-Lock
6:2	3253-4	2	Washer-Lock
6:3	3219-14	2	Nut-Hex
6:4	3220-2	2	Nut-Jam
7	3256-22	2	Washer-Flat
8	321-4	2	Screw-HH
9	46-8560	2	Screw-HHF
10	107069	4	Clip
11	109-6398	1	Control Panel ASM
11:2	109-6029	1	Decal-Console
12	3258-166	4	Screw-PRH
13	1-513374	1	Meter-Hour
14	103-5221	1	Switch-PTO
15	103-0206	1	Switch-Starting, Key
15:1	3254-5	1	Washer-Tooth
15:2	218-461	1	Nut-HH
16	103-0498	1	Nut-Switch, Ignition

Ref	Part No.	Qty.	Description
17	109-3987	1	Control-Throttle
18	109-8747	1	Control,Choke
19	1-807513	4	Bolt-CARR
20	104-2491	1	Battery
21	32128-33	2	Nut-HF
22	99-7408	1	Switch-Reverse
23	105-1853	1	Clamp-Hose
25	109-7653	1	Positive Battery Cable ASM
25:1	109-2407	1	Insulator-Battery
25:2	1-543393	1	Insulator-Solenoid
26	103-0705	1	Cable-Ground, Negative
27	109-9415	1	Positive Starter Cable ASM
29	110-6765	2	Switch-Single Pole No
31	103-1311-03	1	Holddown-Battery
33	1-633651	2	Bolt-Holddown
34	1-543792	2	Wingnut
35	82-2190	1	Switch-Bail
36	1-303287	1	Tie-Plastic
37	63-8360	1	Key-Ignition

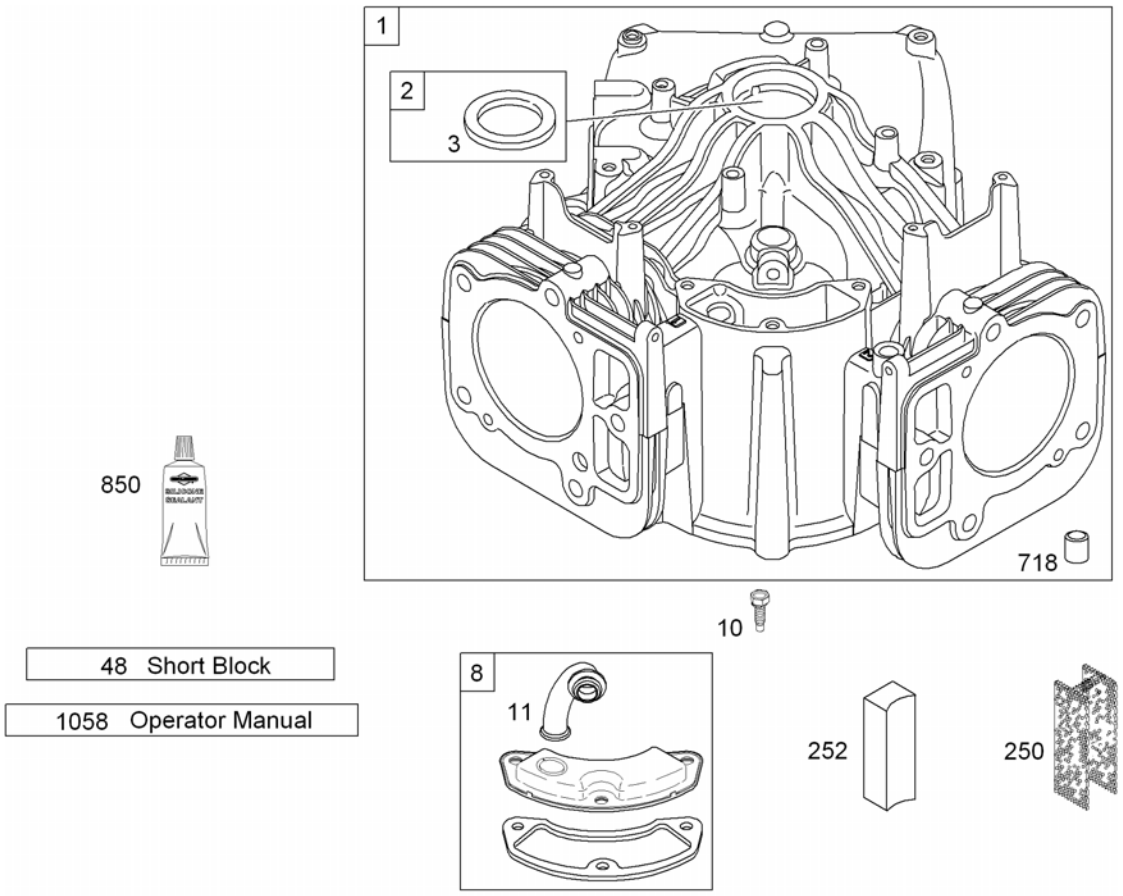

Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 44K777-0125-G1

Ref	Part No.	Qty.	Description
❸1	699753	1	Cylinder ASM
❸2	499585	1	Bushing And Seal ASM (Magneto Side)
❸❺3	391086s	1	Seal-Oil (Magneto Side)
❸8	792185	1	Breather ASM
❸10	691108	1	Screw (Breather ASM)
❸11	792184	1	Tube-Breather
❸48	698172	1	Short Block
❸250	690957	1	Retainer-Breather
❸252	794389	1	Collector-Oil
❸718	690959	1	Pin-Locating
❸850	100106	1	Sealant-Liquid
❸1058	MS3373	1	Operator Manual

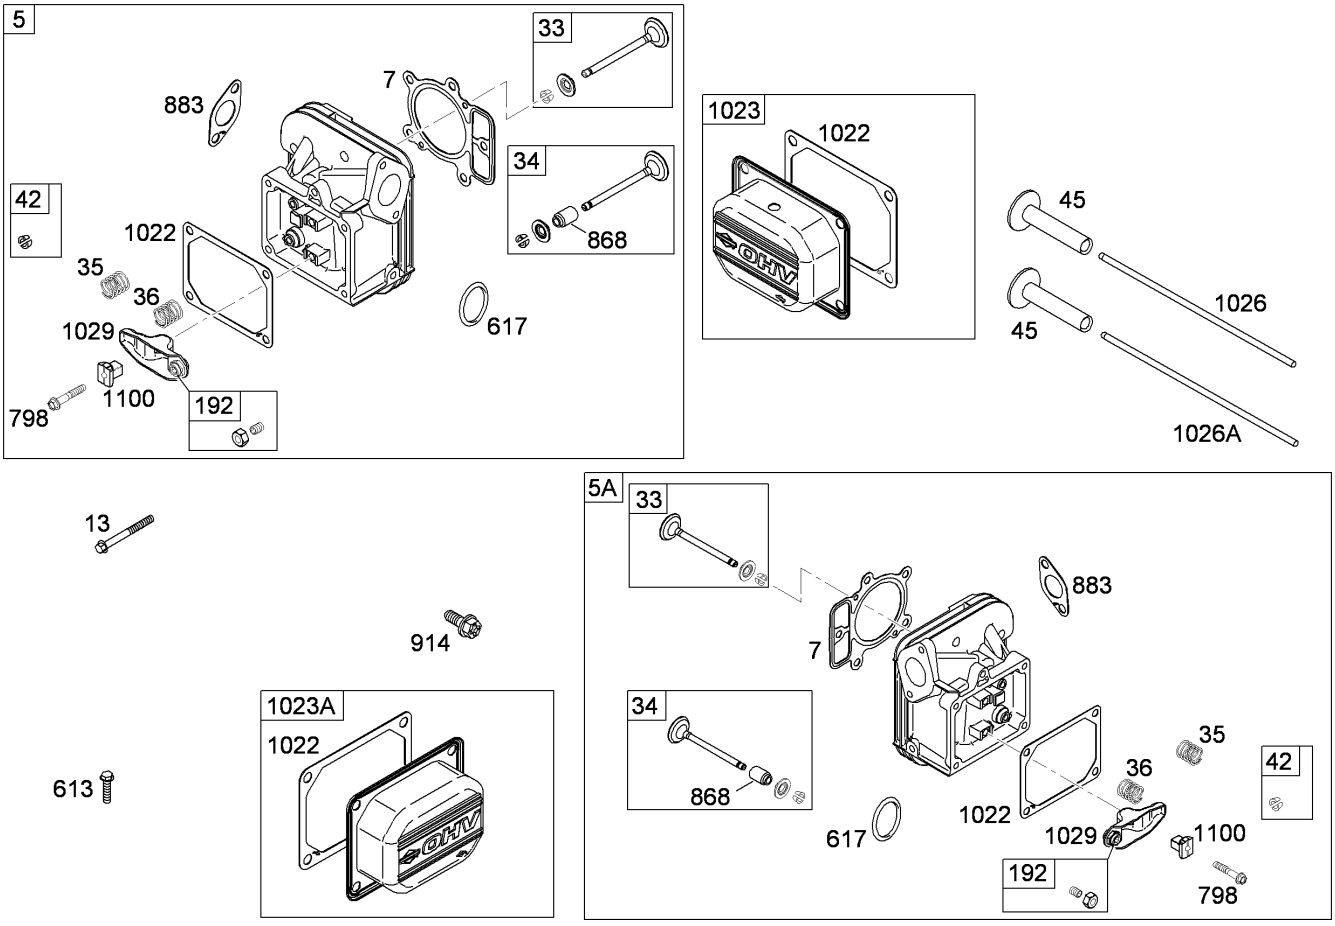

Assemblies include all parts shown in frames

Head Assembly
Briggs and Stratton 44K777-0125-G1

Ref	Part No.	Qty.	Description
❸5	792299	1	Head-Cylinder (Cylinder 1)
❸5A	792300	1	Head-Cylinder (Cylinder 2)
❸❺❻7	693997	1	Gasket-Head, Cylinder
❸13	791130	1	Screw (Cylinder Head)
❸33	697576	1	Valve-Exhaust
❸34	792200	1	Valve-Intake
❸35	694865	1	Spring-Valve (Intake)
❸36	694865	1	Spring-Valve (Exhaust)
❸42	499586	1	Keeper-Valve
❸45	690977	1	Tappet-Valve
❸192	690083	1	Adjuster-Arm, Rocker
❸613	690341	1	Screw (Muffler)
❸617	697891	1	Seal-O Ring (Intake Manifold)
❸798	697890	1	Screw (Rocker Arm)
❸❺❻868	690968	1	Seal-Valve
❸❺❻883	690970	1	Gasket-Exhaust
❸914	691127	1	Screw (Rocker Cover)
❸❺❻1022	690971	1	Gasket-Cover, Rocker
❸1023	793146	1	Cover-Rocker (Cylinder 1)
❸1023A	499600	1	Cover-Rocker (Cylinder 2)
❸1026	690981	1	Rod-Push (Steel)

Ref	Part No.	Qty.	Description
❸1026A	690982	1	Rod-Push (Aluminum)
❸1029	690972	1	Arm-Rocker
❸1100	791959	1	Pivot-Arm, Rocker

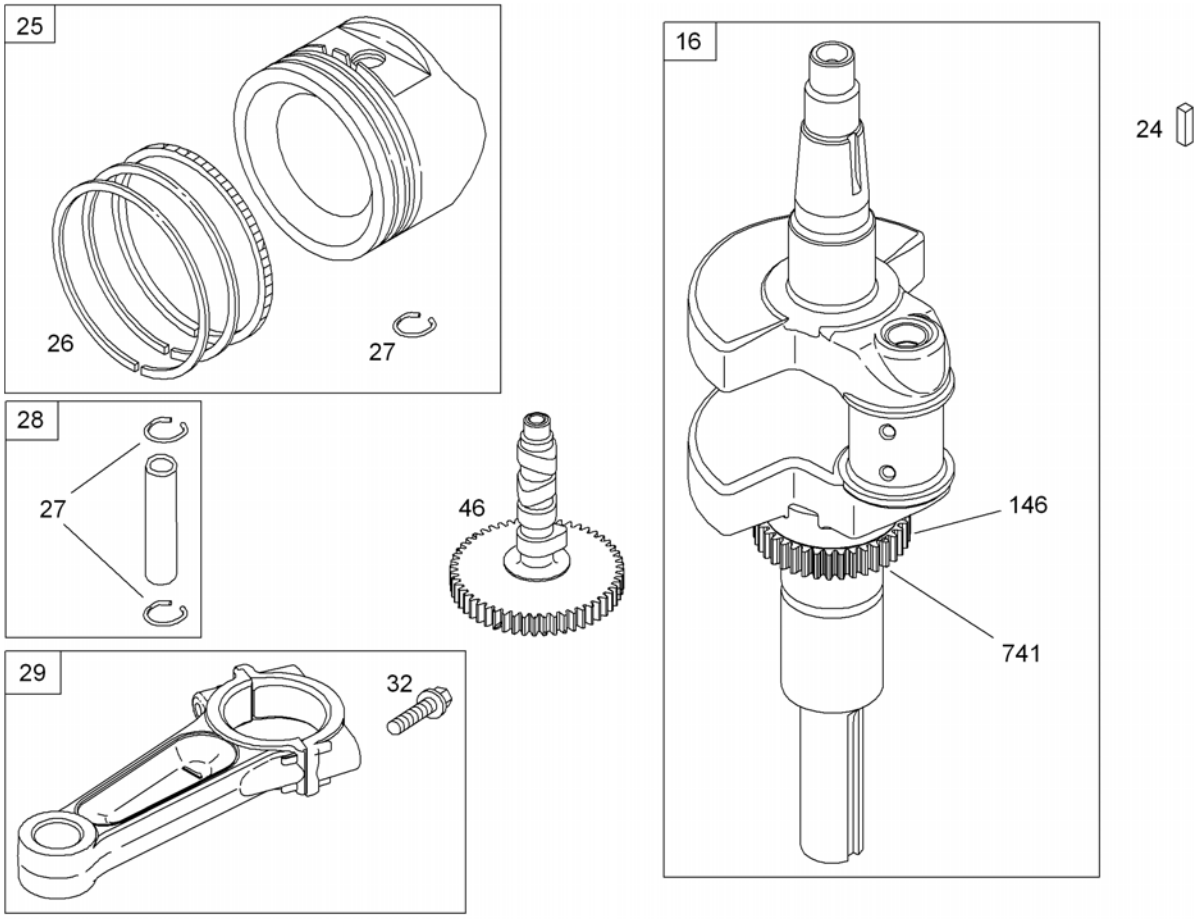

Assemblies include all parts shown in frames

Crankshaft Assembly
Briggs and Stratton 44K777-0125-G1

Ref	Part No.	Qty.	Description
❸16	699700	1	Crankshaft
❸24	222698s	1	Key-Flywheel
❸25	792117	1	Piston ASM (STD)
❸25	792144	1	Piston ASM (.020 O S)
❸26	792026	1	Ring Set (STD)
❸26	792073	1	Ring Set (.020 O S)
❸27	690975	1	Lock-Pin, Piston
❸28	690229	1	Pin-Piston (STD)
❸29	699699	1	Rod-Connecting
❸32	690976	1	Screw (Connecting Rod)
❸46	790562	1	Camshaft
❸146	690979	1	Key-Timing
❸741	690980	1	Gear-Timing

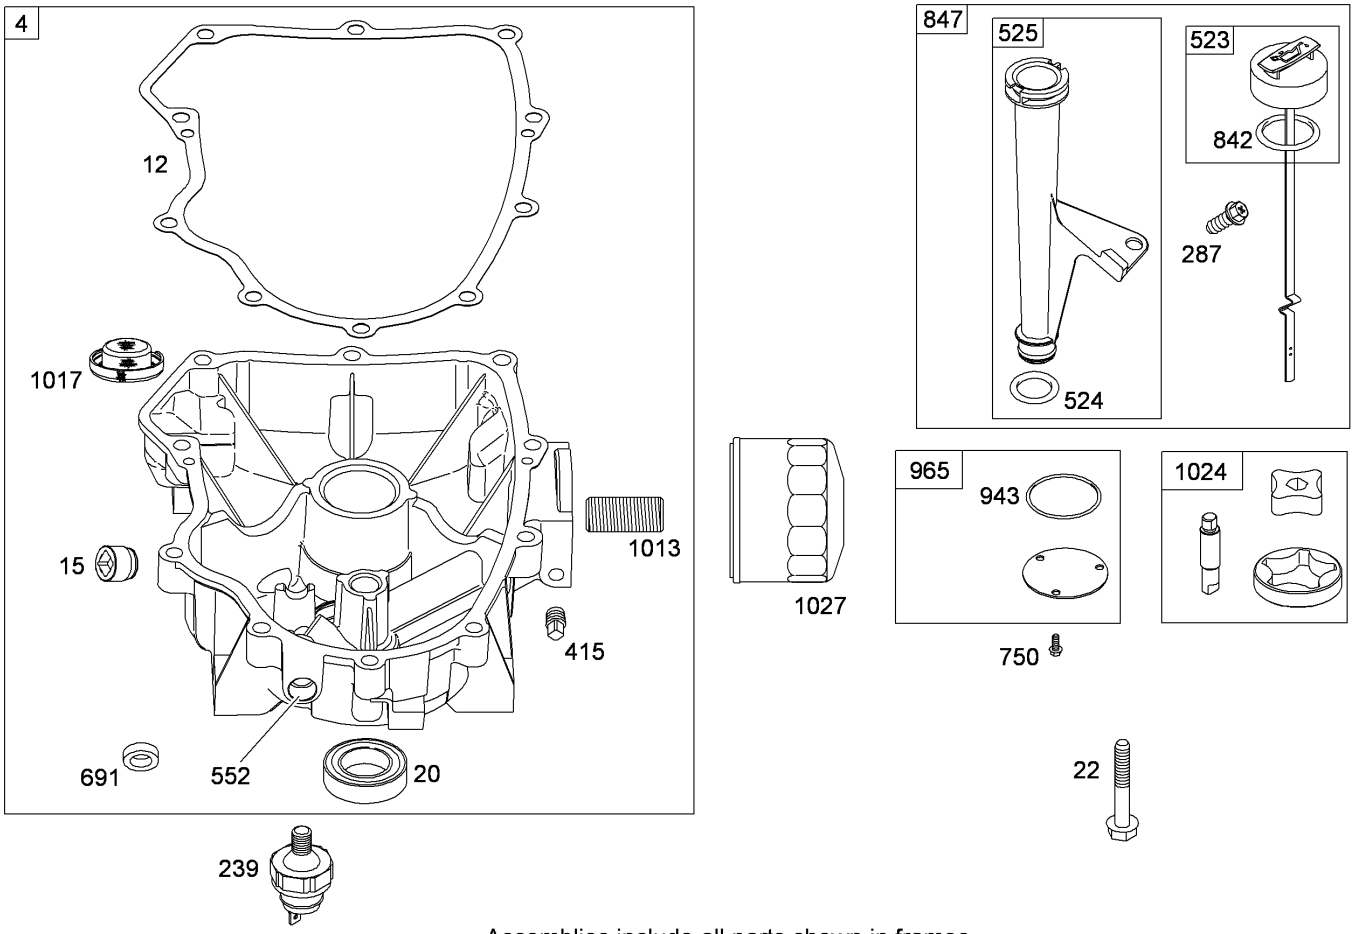

Assemblies include all parts shown in frames

Crankcase Assembly
Briggs and Stratton 44K777-0125-G1

Ref	Part No.	Qty.	Description
❸4	699747	1	Sump-Engine
❸❺12	697227	1	Gasket-Crankcase
❸15	690946	1	Plug-Drain, Oil
❸❺20	795387	1	Seal-Oil (PTO Side)
❸22	694966	1	Screw (Engine Sump)
❸239	697049	1	Switch-Pressure, Oil
❸287	691108	1	Screw (Dipstick Tube)
❸415	690283	1	Plug-Oil
❸523	691036	1	Dipstick
❸❺524	691032	1	Screw (Dipstick Tube)
❸525	691037	1	Tube-Dipstick
❸552	690552	1	Bushing-Crank, Governor
❸❺691	690657	1	Seal-Shaft, Governor
❸750	696999	1	Screw (Oil Pump Cover)
❸❺842	691031	1	Seal-O Ring (Dipstick Tube)
❸847	499602	1	Dipstick And Tube ASM
❸❺943	690589	1	Seal-O Ring (Oil Pump Cover)
❸965	499613	1	Cover-Pump, Oil
❸1013	690954	1	Nipple-Filter, Oil
❸1017	690770	1	Screen-Pump, Oil
❸1024	794416	1	Pump-Oil
❸1027	696854	1	Filter–Oil

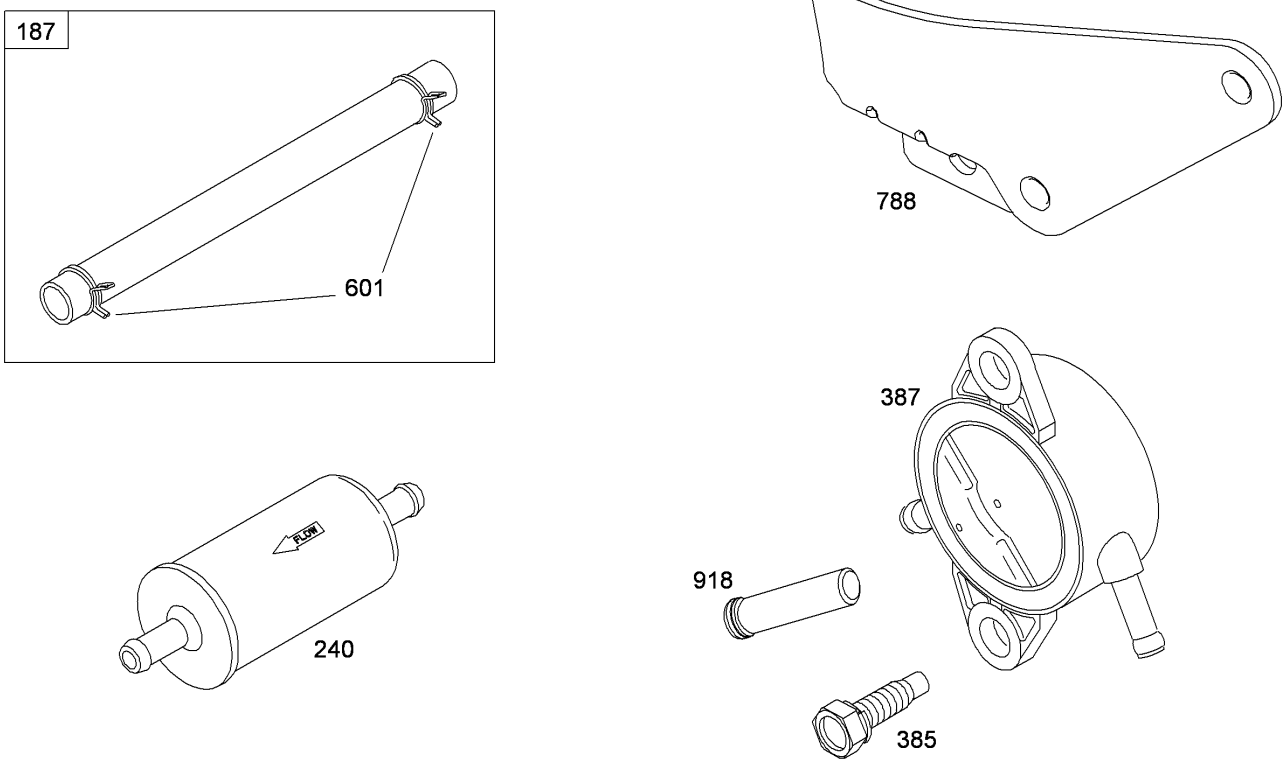

Assemblies include all parts shown in frames

Fuel Pump Assembly
Briggs and Stratton 44K777-0125-G1

Ref	Part No.	Qty.	Description
❸187	791766	1	Line-Fuel (Cut To Required Length)
❸240	695666	1	Filter–Fuel
❸385	691108	1	Screw (Fuel Pump)
❸387	808656	1	Pump-Fuel
❸601	691038	1	Clamp-Hose
❸788	793145	1	Bracket-Pump, Fuel
❸918	793147	1	Hose-Vacuum

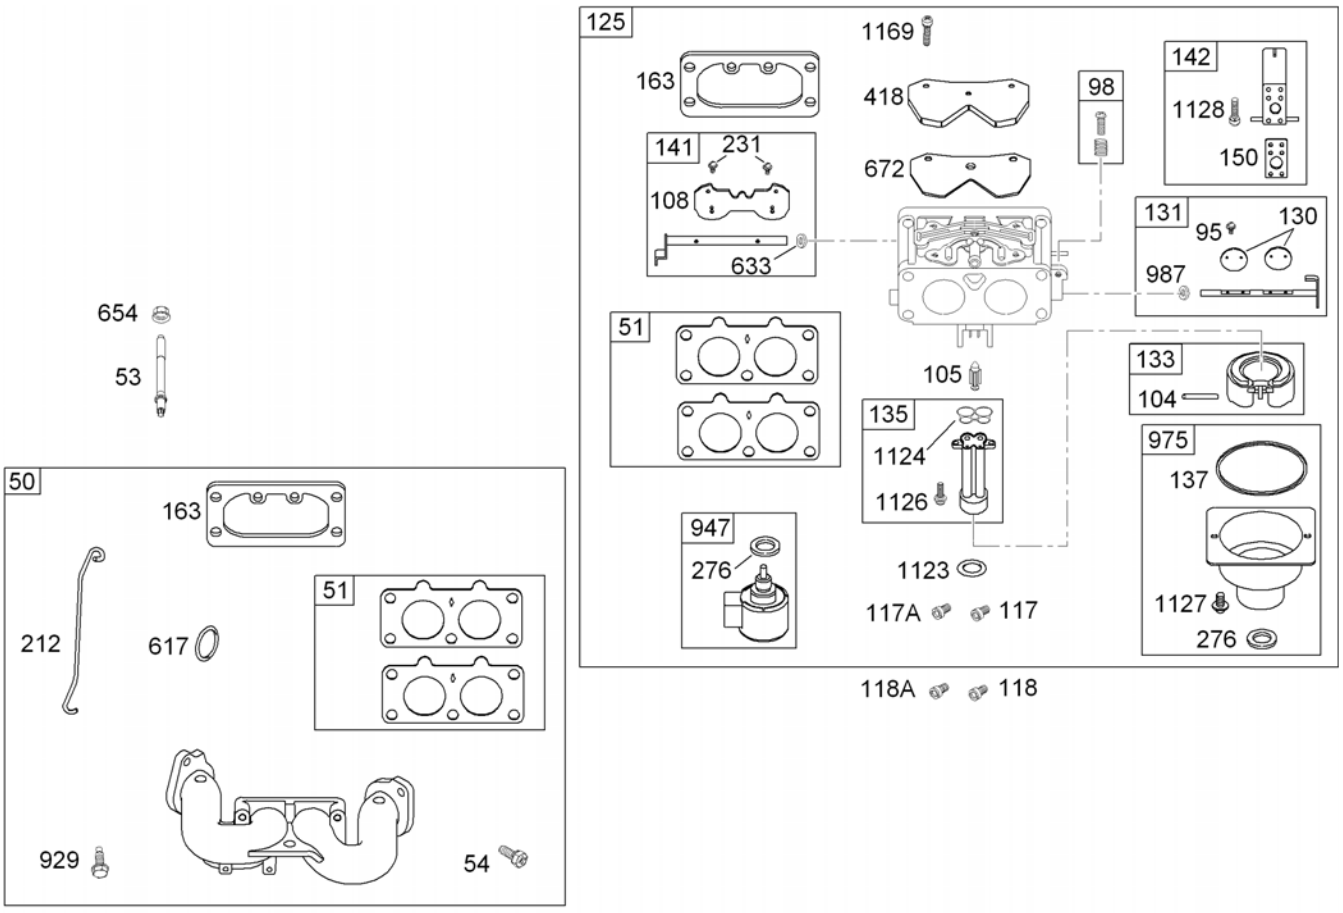

Assemblies include all parts shown in frames

Carburetor Assembly
Briggs and Stratton 44K777-0125-G1

Ref	Part No.	Qty.	Description
❸50	695241	1	Manifold-Intake
❸❺51	791677	1	Gasket-Intake
❸53	690951	1	Stud (Carburetor)
❸54	699816	1	Screw (Intake Manifold)
❸95	690718	1	Screw (Throttle Valve)
❸98	699721	1	Idle Speed Kit
❸❹104	694918	1	Pin-Hinge, Float
❸❹105	698537	1	Valve-Needle, Float
❸108	699723	1	Valve-Choke
❸117	792296	1	Jet-Main (Standard, Left)
❸117A	842627	1	Jet-Main (Standard, Right)
❸118	699457	1	Jet-Main (High Altitude, Left)
❸118A	699733	1	Jet-Main (High Altitude, Right)
❸125	792295	1	Carburetor
❸130	690993	1	Valve-Throttle
❸131	699722	1	Throttle Shaft Kit
❸133	699724	1	Float-Carburetor
❸135	699729	1	Tube-Transfer, Fuel
❸❹137	690994	1	Gasket-Bowl, Float
❸141	699722	1	Throttle Shaft Kit
❸142	699726	1	Nozzle-Carburetor
❸❹150	690995	1	Gasket-Nozzle
❸❺163 ❻	691001	1	Gasket-Cleaner, Air

Ref	Part No.	Qty.	Description
❸212	695238	1	Link–Throttle
❸231	690718	1	Screw (Choke Valve)
❸❺276 ❻	695410	1	Washer-Sealing
❸418	690999	1	Plate-Cover, Carburetor
❸617	697891	1	Seal-O Ring (Intake Manifold)
❸❹633	690998	1	Seal-Shaft, Choke
❸654	690958	1	Nut (Carburetor)
❸❹672	690234	1	Gasket-Cover Plate, Carburetor
❸929	695239	1	Screw (Choke Control Bracket)
❸947	841546	1	Solenoid-Fuel
❸975	791232	1	Bowl-Float
❸❹987	691000	1	Seal-Shaft, Throttle
❸❹1123	841653	1	Seal-O Ring (Solenoid Retainer)
❸❹1124	690988	1	Seal-O Ring (Fuel Transfer Tube)
❸1126	690991	1	Screw (Fuel Transfer Tube)
❸1127	695407	1	Screw (Float Bowl)
❸1128	690990	1	Screw (Carburetor Nozzle)
❸1169	690990	1	Screw (Carburetor Cover Plate)

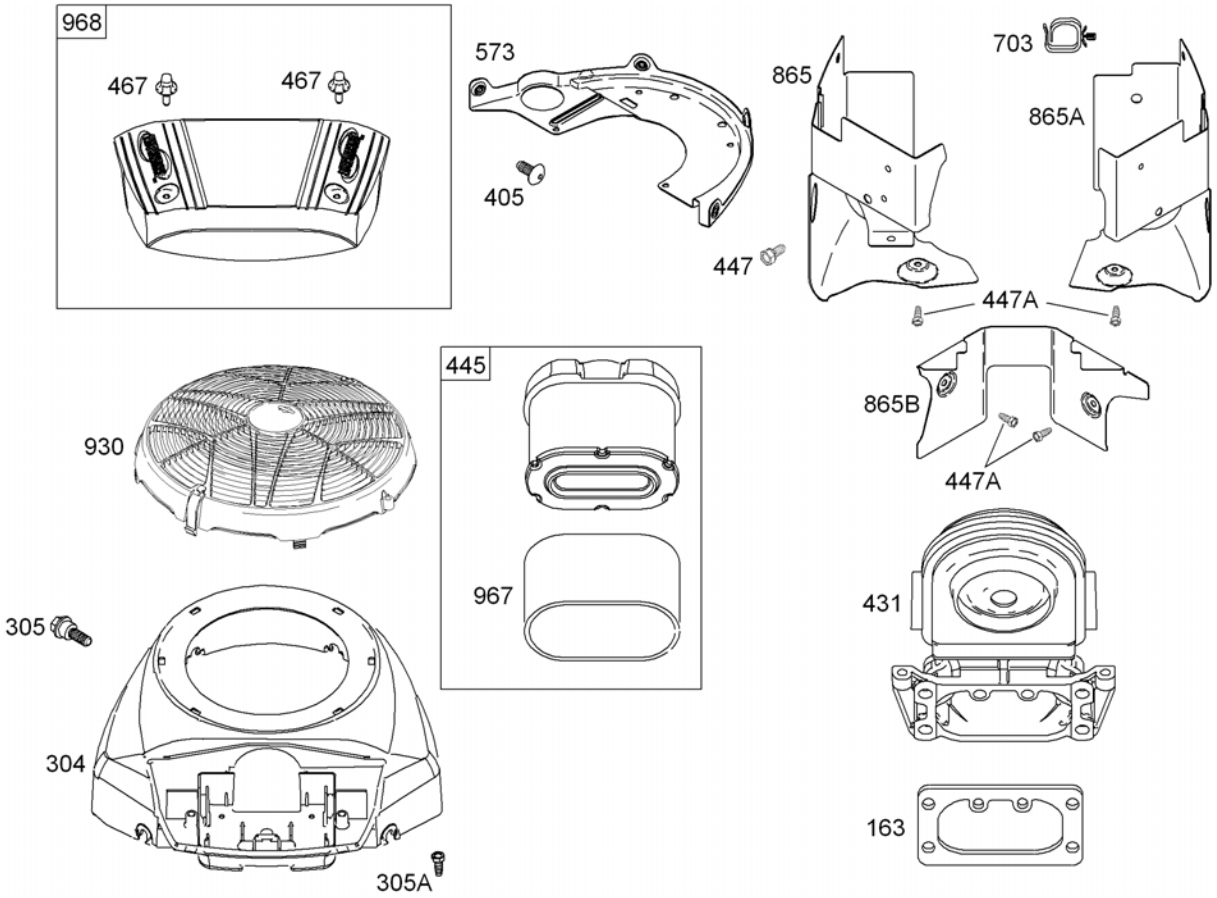

Assemblies include all parts shown in frame

Air Cleaner Assembly
Briggs and Stratton 44K777-0125-G1

Ref	Part No.	Qty.	Description
❸❺❻163	691001	1	Gasket-Cleaner, Air
❸304	792301	1	Housing-Blower
❸305	691005	1	Screw (Blower Housing)
❸305A	790690	1	Screw (Blower Housing)
❸405	697820	1	Screw (Back Plate)
❸431	792297	1	Elbow-Intake
❸445	792105	1	Filter-Cartridge, Air Cleaner
❸447	691003	1	Screw (Air Guide Cover)
❸447A	691108	1	Screw (Air Guide Cover)
❸467	790697	1	Knob-Cleaner, Air
❸573	790444	1	Plate-Back
❸703	691010	1	Clip
❸865	691012	1	Cover-Guide, Air (Cylinder 1)
❸865A	793205	1	Cover-Guide, Air (Cylinder 2)
❸865B	792286	1	Cover-Guide, Air (Valley)
❸930	794277	1	Guard-Rewind
❸967	792303	1	Filter-Pre Cleaner
❸968	795120	1	Cover-Air Cleaner

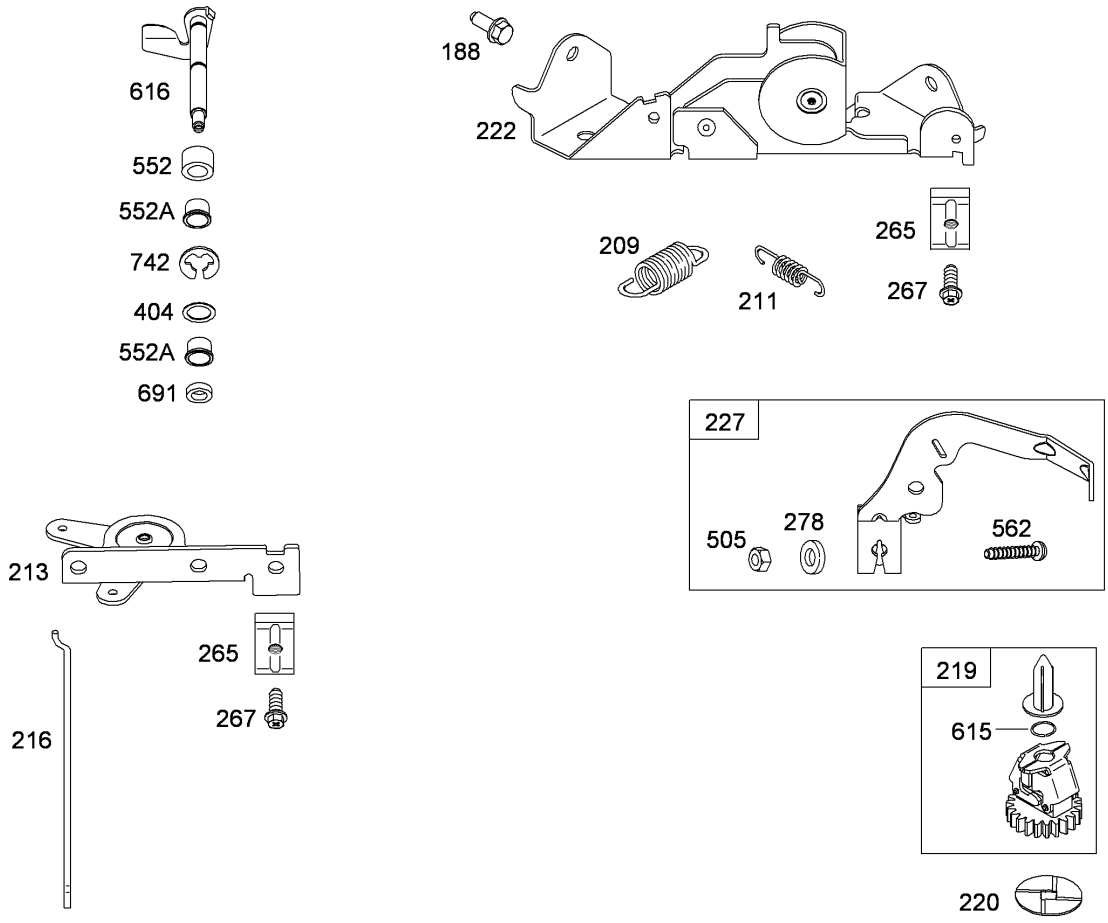

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 44K777-0125-G1

Ref	Part No.	Qty.	Description
❸188	691108	1	Screw (Control Bracket)
❸209	793343	1	Spring-Governor
❸211	691019	1	Spring-Idle, Governed
❸213	691021	1	Bracket-Control, Choke
❸216	691022	1	Link-Choke
❸219	793338	1	Gear-Governor
❸220	690412	1	Washer (Governor Gear)
❸222	698761	1	Bracket-Control
❸227	792492	1	Lever-Control, Governor
❸265	691024	1	Clamp-Casing
❸267	695134	1	Screw (Casing Clamp)
❸278	792651	1	Washer (Governor Control Lever)
❸404	690442	1	Washer (Governor Crank)
❸505	691029	1	Nut (Governor Control Lever)
❸552	690552	1	Bushing-Crank, Governor
❸552A	690553	1	Bushing-Crank, Governor
❸562	690311	1	Bolt (Governor Control Lever)
❸615	698290	1	Retainer-Shaft, Governor
❸616	691045	1	Crank-Governor
❸❺691	790574	1	Seal-Shaft, Governor
❸742	690328	1	Retainer-E Ring

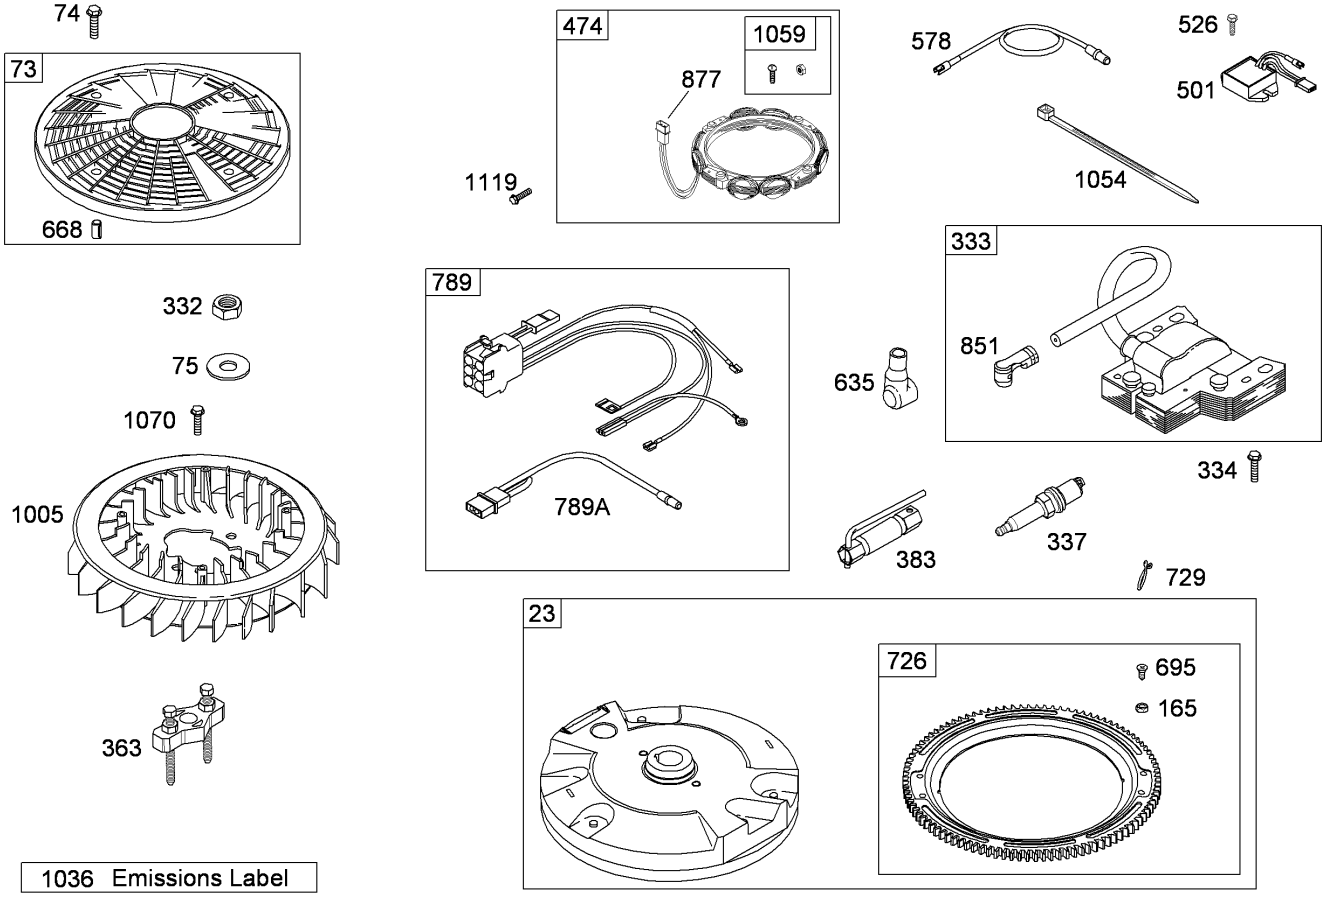

Assemblies include all parts shown in frames

Flywheel Assembly
Briggs and Stratton 44K777-0125-G1

Ref	Part No.	Qty.	Description
❸23	691053	1	Flywheel
❸73	494439	1	Screen-Rotating
❸74	698425	1	Screw (Rotating Screen)
❸75	691056	1	Washer (Flywheel)
❸165	693148	1	Nut (Ring Gear)
❸332	691059	1	Nut (Flywheel)
❸333	691060	1	Armature-Magneto
❸334	691061	1	Screw (Magneto Armature)
❸337	792015	1	Plug-Spark
❸363	19203	1	Puller-Flywheel
❸383	19374s	1	Wrench-Spark Plug
❸474	696458	1	Alternator
❸501	691185	1	Regulator
❸526	691108	1	Screw (Regulator)
❸578	691208	1	Wire ASM
❸635	66538s	1	Boot-Spark Plug
❸668	691500	1	Spacer
❸695	693149	1	Screw (Ring Gear)
❸726	499612	1	Gear-Ring
❸729	694123	1	Clip–Wire
❸789	698330	1	Harness-Wiring
❸789A	790544	1	Harness-Wiring
❸851	493880s	1	Terminal-Spark Plug
❸877	399916	1	Connector-Wire, Alternator

Ref	Part No.	Qty.	Description
❸1005	791236	1	Fan-Flywheel
❷❸1036		1	Label-Emissions
❸1054	280275	1	Tie-Cable
❸1059	698516	1	Screw And Washer Kit
❸1070	690372	1	Screw (Flywheel Fan)
❸1119	691183	1	Screw (Alternator)

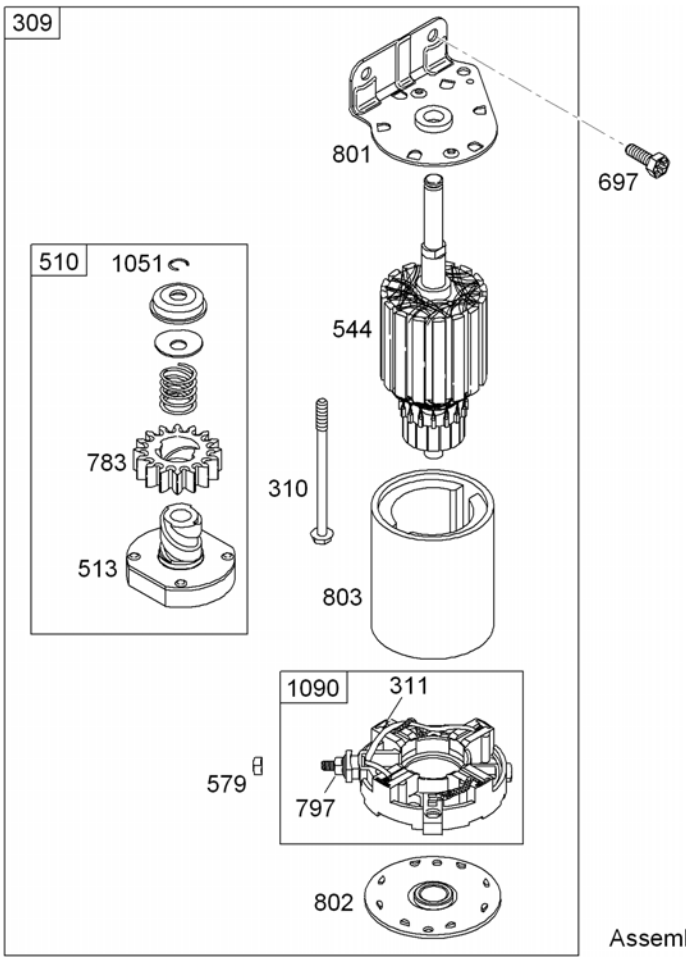

Assemblies include all parts shown in frames

Starter Assembly
Briggs and Stratton 44K777-0125-G1

Ref	Part No.	Qty.	Description
❸309	499521	1	Motor-Starter
❸310	691263	1	Bolt (Starter Motor)
❸311	497608	1	Brush Set
❸510	696541	1	Drive-Starter
❸513	692024	1	Clutch-Drive
❷❸544		1	Armature-Starter (Service With 499521)
❸579	691029	1	Nut (Starter Cable)
❸697	690372	1	Screw (Starter Motor)
❸783	695708	1	Gear-Pinion
❸797	693167	1	Nut (Brush Retainer)
❸801	691283	1	Cap-Drive
❸802	691286	1	Cap-End
❷❸803		1	Housing-Starter (Service With 499521)
❸1051	691265	1	Ring-Retaining
❸1090	691293	1	Retainer-Brush

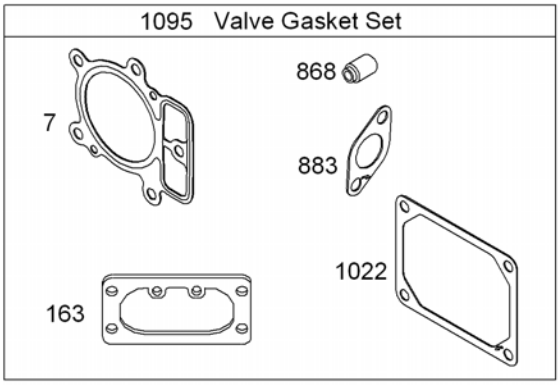

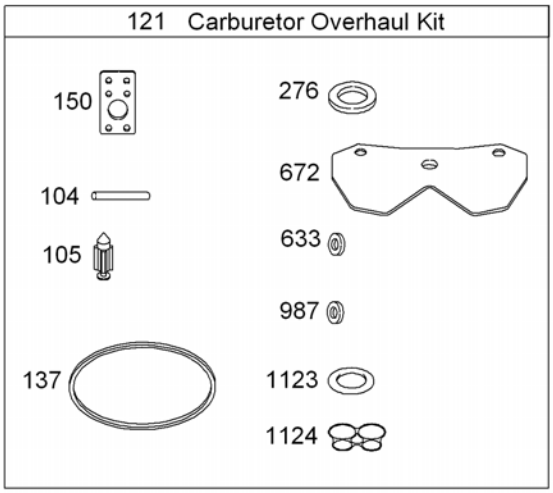

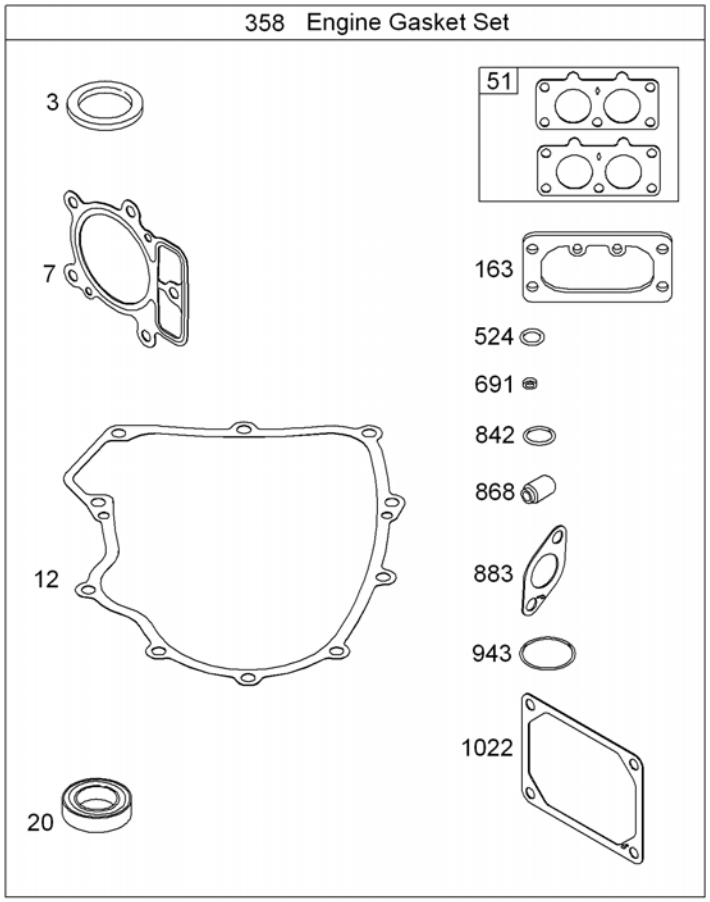

Assemblies include all parts shown in frames

Engine Gaskets and Carburetor Overhaul Kit
Briggs and Stratton 44K777-0125-G1

Ref	Part No.	Qty.	Description
❸❺3	391086s	1	Seal-Oil (Magneto Side)
❸❺7 ❻	693997	1	Gasket-Head, Cylinder
❸❺12	697227	1	Gasket-Crankcase
❸❺20	795387	1	Seal-Oil (PTO Side)
❸❺51	791677	1	Gasket-Intake
❸❹104	694918	1	Pin-Hinge, Float
❸❹105	698537	1	Valve-Needle, Float
❸121	792455	1	Carburetor Overhaul Kit
❸❹137	690994	1	Gasket-Bowl, Float
❸❹150	690995	1	Gasket-Nozzle
❸❺163 ❻	691001	1	Gasket-Cleaner, Air
❸❹276	695410	1	Washer-Sealing
❸358	694012	1	Engine Gasket Set
❸❺524	691032	1	Seal-O Ring (Dipstick Tube)
❸❹633	690998	1	Seal-Shaft, Choke
❸❹672	690234	1	Gasket-Cover Plate, Carburetor
❸❹987	691000	1	Seal-Shaft, Throttle
❸❺691	790574	1	Seal-Shaft, Governor
❸❺842	691031	1	Seal-O Ring (Dipstick)
❸❺868 ❻	690968	1	Seal-Valve
❸❺883 ❻	690970	1	Gasket-Exhaust
❸❺943	690589	1	Seal-O Ring (Oil Pump Cover)
❸❺1022 ❻	690971	1	Gasket-Cover, Rocker
❸1095	694013	1	Valve Gasket Set
❸❹1123	841653	1	Seal-O Ring (Solenoid Retainer)
❸❹1124	690988	1	Seal-O Ring (Fuel Transfer Tube)

Attachments and Accessories

For 74812 - TITAN Z4800 Zero-Turn-Radius Riding Mower

Product Name	Model/Part
48 Inch Bagging Blade Kit	79141
48 Inch Mulching Kit	79154
Z Sunshade	79157
Z Light Kit	79158
48 Inch and 52 Inch Bagger	79171

NOTES

NOTES

TORO®