Form Number 3360-682 Rev B

Workman® 2110 Utility Vehicle

Model No. 07277TC - 280000683 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Hood and Fender Assembly	3
Pedal Assembly	4
Shifter Assembly	5
Frame Assembly	6
Seat Base Assembly	7
Front Tire and Steering Assembly	8
Engine and Clutch Assembly	9
Drive Clutch Assembly No. 108-7013	11
Starter Generator Assembly No. 99-7108	12
Rear Tire and Transaxle Assembly	13
Transaxle Assembly No. 107-0360	14
Driven Clutch Assembly No. 99-7104	16
Left Hand Brake Assembly No. 104-6807	17
Right Hand Brake Assembly No. 104-6806	18
Drivetrain Mounting, Battery and Air Cleaner Assembly	19
Air Cleaner Assembly No. 99-7120	20
Upper Steering Assembly	21
Steering Gearbox Assembly No. 99-7660	22
Box and Tailgate Installation Assembly	23
Box and Tailgate Assembly	24
Hydraulic Brake Assembly	25
Master Cylinder Assembly No. 104-6782	26
Cylinder Assembly Briggs and Stratton 295440-0158-G1	27
Cylinder Head Assembly Briggs and Stratton 295440-0158-G1	28
Crankshaft and Piston/Ring Assembly Briggs and Stratton 295440-0158-G1	29
Crankcase Cover/Sump Assembly Briggs and Stratton 295440-0158-G1	30
Carburetor and Fuel Pump Assembly Briggs and Stratton 295440-0158-G1	31
Governor Control Assembly Briggs and Stratton 295440-0158-G1	32
Blower Housing, Flywheel and Air Guide Assembly Briggs and Stratton 295440-0158-G1	33
Intake Manifold Assembly Briggs and Stratton 295440-0158-G1	34
Engine, Valve Gasket and Carburetor Overhaul Kits Briggs and Stratton 295440-0158-G1	35
Attachments and Accessories List	36

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated

❷ Not serviced separately

❸ Obtain from your local Briggs & Stratton dealer

❹ Included in Carburetor Overhaul Kit (Ref. No. 121)

❺ Included in Engine Gasket Set (Ref. No. 358)

❻ Included in Valve Gasket Set (Ref. No. 1095)

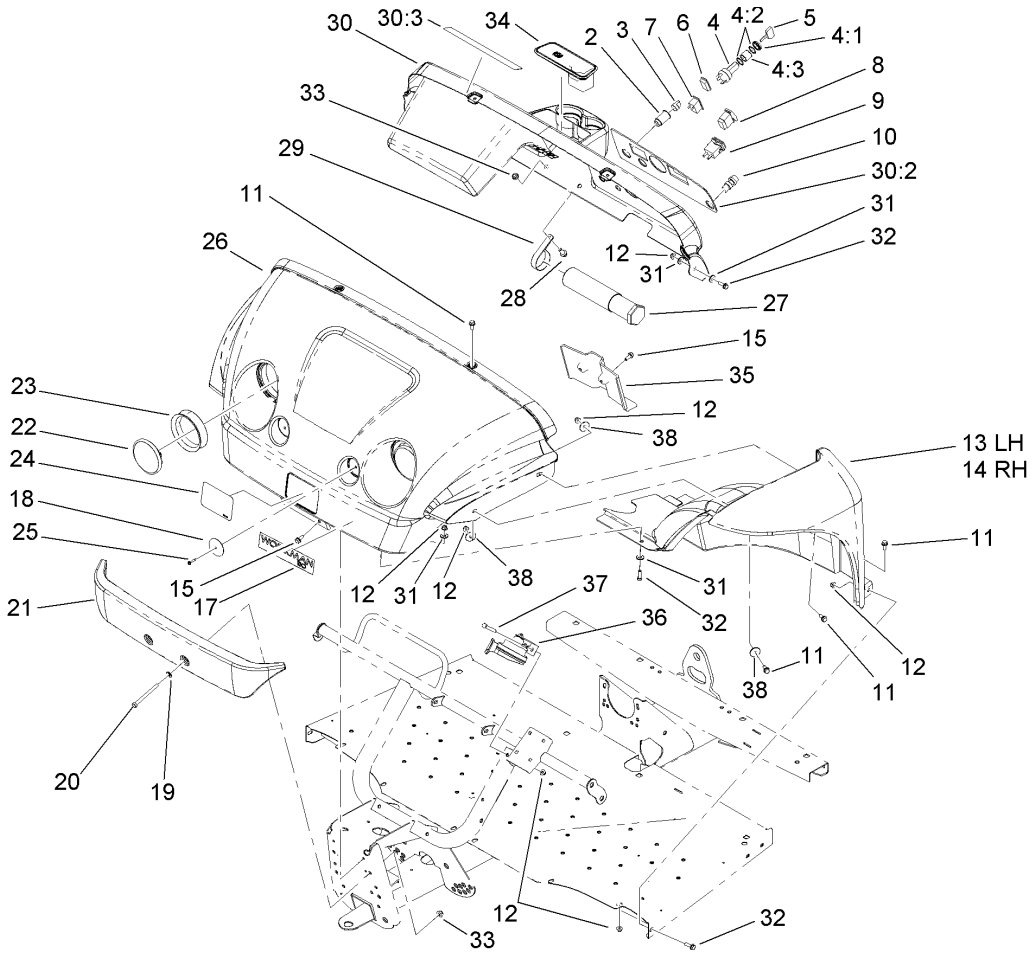

Hood and Fender Assembly

Ref	Part No.	Qty.	Description
2	99-7411	1	Point-Power
3	99-7416	1	Cap
4	104-6929	1	Switch-Ignition
4:1	104-7042	1	Nut-Switch, Plastic
4:2	104-7019	2	Washer-Lock, Internal
4:3	104-7021	1	Spacer-Switch
5	99-7418	2	Key-Ignition
6	99-7420	1	Plug-Hole
7	99-7410	1	Indicator-Light, Low-Oil Pressure
8	95-8999	1	Switch
9	94-4208	1	Hourmeter
10	18-2830	1	Button-Horn
11	3234-5	14	Screw-HHF
12	104-8300	15	Nut-Flange, NI
13	104-7076	1	LH Fender ASM
14	104-7077	1	RH Fender ASM
15	104-7206	4	Screw-HHF
17	104-7267	1	Decal
18	99-7312	2	Reflector
19	3256-24	2	Washer-Flat
20	323-42	2	Screw-HH
21	99-7733	1	Bumper-Plastic
22	99-7310	2	Headlight
23	99-7311	2	Mount-Headlight

Ref	Part No.	Qty.	Description
24	99-7339	1	Decal
25	32144-89	2	Screw-Forming, Thread
26	104-7003	1	Hood
27	74-0720	1	Tube-Manual
28	3234-11	2	Screw-HHF
29	2412-133	2	R-Clamp
30	107-0700	1	Dash ASM
30:2	107-0699	1	Decal-Panel, Control
30:3	104-6581	1	Decal-Danger
31	3256-3	8	Washer-Flat
32	3234-17	4	Screw-HHF
33	104-8301	4	Nut-Flange, NI
34	104-6930	1	Plug-Rubber
35	104-7075	1	Cover-Channel
36	116749	1	Horn
37	322-11	1	Screw-HH
38	3256-57	6	Washer-Flat

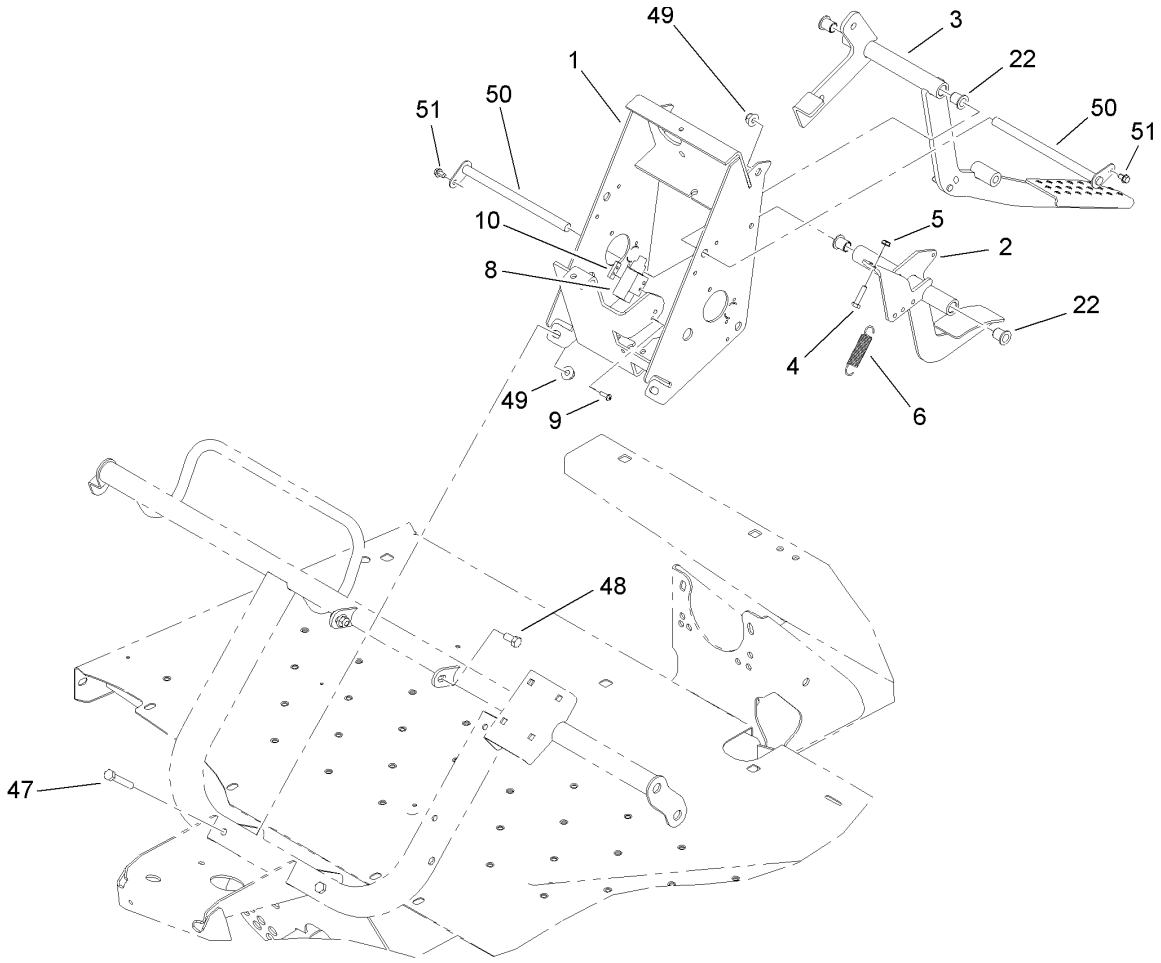

Pedal Assembly

Ref	Part No.	Qty.	Description
1	112-3048-03	1	Pedal Support Frame ASM
2	110-2607-03	1	Pedal-Throttle
3	104-7170-03	1	Pedal-Brake
4	321-7	2	Screw-HH
5	32149-2	2	Nut-Keps
6	104-6415	1	Spring-Return, Pedal
8	99-7407	1	Switch
9	104-7221	2	Screw-PPH
10	1-633181	1	Plate-Tapped
22	256-155	4	Bushing-Flange
47	323-11	2	Screw-HH
48	323-4	2	Screw-HH
49	104-8301	4	Nut-Flange, NI
50	104-7164	2	Pivot-Pedal
51	12-3270	2	Screw

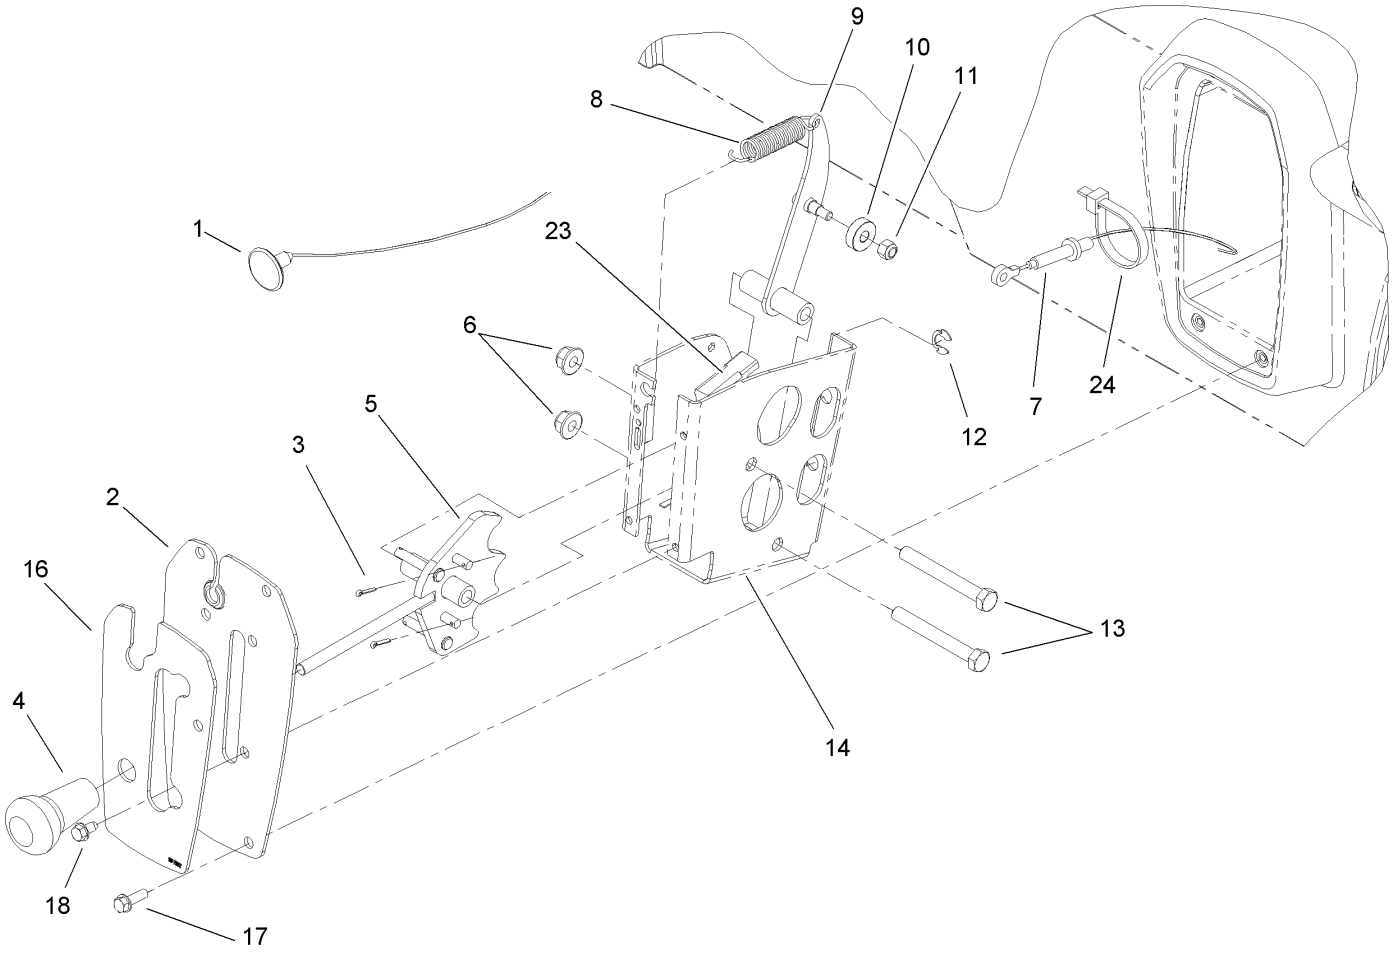

Shifter Assembly

Ref	Part No.	Qty.	Description
1	99-7111	1	Cable-Choke
2	99-7887-03	1	Plate-Shifter
3	3272-5	2	Pin-Cotter
4	99-7981	1	Knob-Grip, Soft
5	108-3139	1	Lever-Shift
6	104-8301	2	Nut-Flange, NI
7	104-6896	2	Cable-Shift
8	104-6415	1	Spring-Return, Pedal
9	108-3138	1	Arm-Detent
10	251-307	1	Bearing-Ball
11	3296-42	1	Nut-Lock, NI
12	32151-101	2	E-Ring
13	323-14	2	Screw-HH
14	108-3141-03	1	Bracket-Shift
16	99-7952	1	Decal-Shifter
17	32105-15	4	Screw
18	12-3270	4	Screw
23	99-7408	1	Switch-Reverse
24	3290-378	1	Tie-Cable

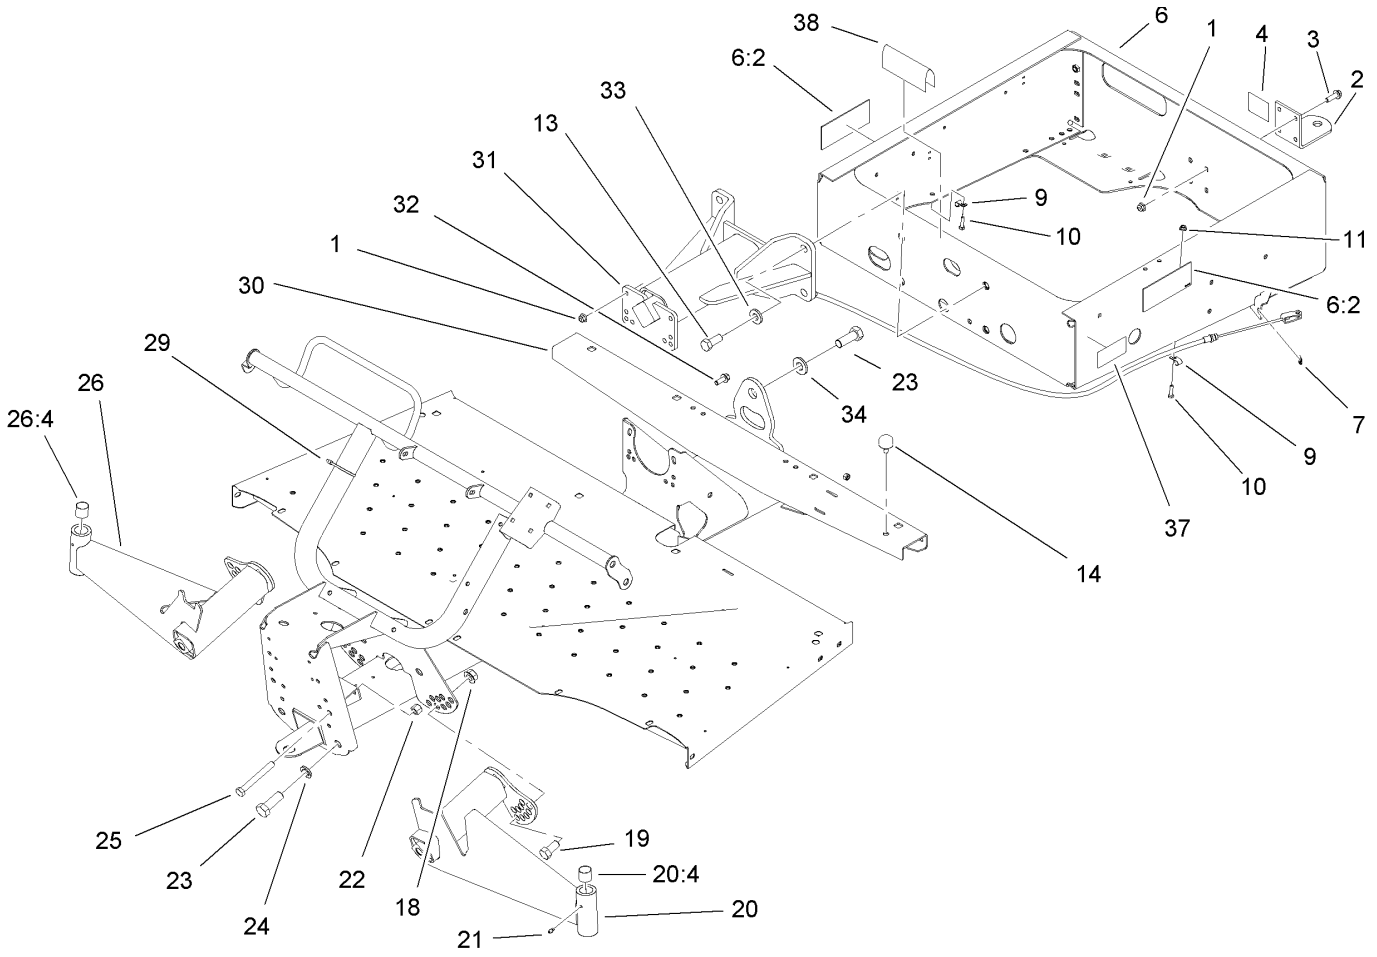

Frame Assembly

Ref	Part No.	Qty.	Description
1	104-8301	8	Nut-Flange, NI
2	99-7654-03	1	Hitch-Duty, Light
3	3234-24	4	Screw-HHF
4	99-7350	1	Decal-Rating, Hitch (Light Duty)
6	108-3137	1	Rear Frame ASM
6:2	99-7345	2	Decal-Warning
7	32120-47	2	Ring-Retaining, External
9	2412-89	2	Clamp
10	321-6	2	Screw-HH
11	32128-33	2	Nut-HF
13	327-4	4	Screw-HH
14	87-2440	1	Bumper-Rubber
18	32128-54	2	Nut-HF
19	3214-2	2	Screw-HH
20	99-7685	1	LH A-Arm ASM
20:4	3-0348	2	Bushing
21	302-5	2	Fitting-Grease
22	3296-23	2	Nut-Lock, NI
23	328-24	5	Screw-HH
24	3254-7	4	Washer-Lock, Int
25	325-17	2	Screw-HH
26	99-7684	1	RH A-Arm ASM
26:4	3-0348	2	Bushing
29	3290-379	12	Tie-Cable

Ref	Part No.	Qty.	Description
30	104-7197-03	1	Front Frame ASM
31	99-7700	1	Pivot Yoke ASM
32	3234-11	4	Screw-HHF
33	99-7667	4	Washer-Flat
34	87-3060	1	Washer-Hardened
37	104-6591	1	Decal-Capacity
38	95-5686	1	Trim

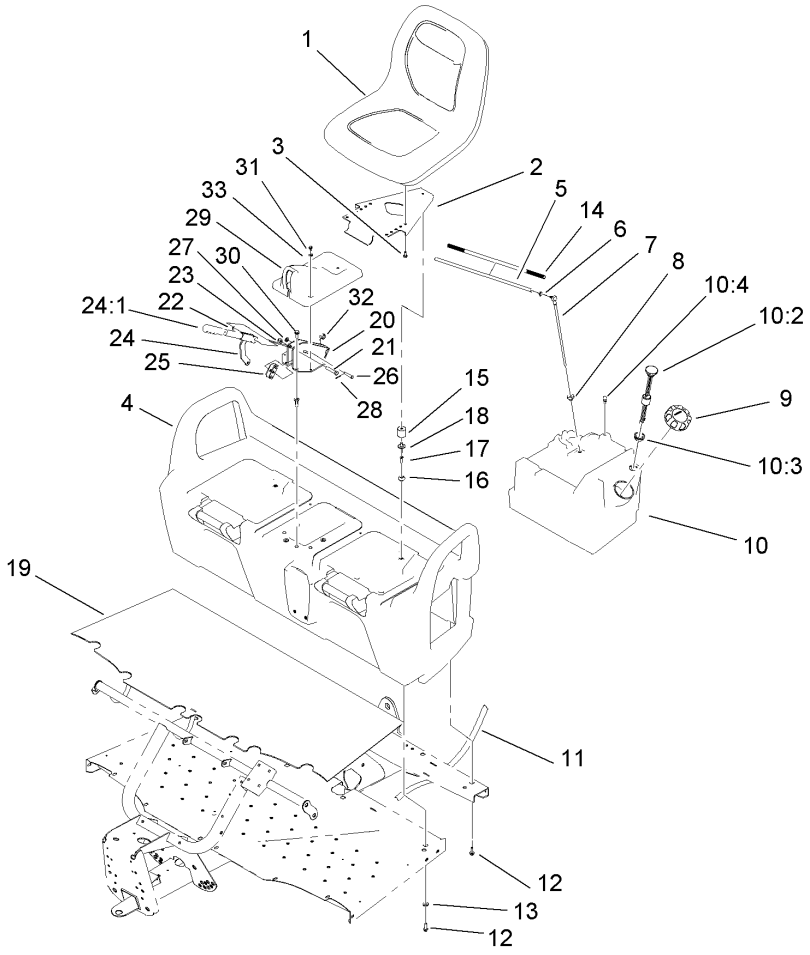

Seat Base Assembly

Ref	Part No.	Qty.	Description
1	112-2923	2	Seat ASM
2	99-7829	2	Bracket-Seat
3	33114-016	8	Screw-HH
4	104-6847	1	Seat Base ASM
5	108-4582	1	Hose-Fuel
6	2412-98	1	Clamp
7	99-7264	1	Pipe-Stand
8	46-6560	1	Bushing
9	95-4192	1	Unleaded Gas Cap ASM
10	99-7323	1	Fuel Tank ASM
10:2	99-7262	1	Gauge-Fuel
10:3	95-8972	1	Grommet
10:4	99-7267	1	Vent-Air
11	3339-175	1	Strapping-Web, 48 Inch
12	3234-17	8	Screw-HHF
13	88-7200	8	Washer-Flat
14	99-7129	1	Conduit-Line, Fuel
15	99-7830	2	Rubber Receptical ASM
16	99-7833	2	Post-Holding
17	32108-5	2	Screw-FH
18	3290-412	2	Rivet
19	104-6590	1	Mat-Floor
20	104-6844-03	1	Support-Brake, Park
21	323-10	1	Screw-HH

Ref	Part No.	Qty.	Description
22	3290-477	1	Washer-Curved
23	3296-39	1	Nut-Lock, NI
24	104-6842	1	Lever-Brake, Park
24:1	106-7972	1	Grip-Handle
25	87-3480	1	Bracket-Equalizer, Cable
26	94-3829	1	Pin-Clevis
27	3256-23	1	Washer-Flat
28	3272-6	1	Pin-Cotter
29	104-7014	1	Cover-Brake, Parking
30	3234-17	4	Screw-HHF
31	12-3270	2	Screw
32	32120-47	2	Ring-Retaining, External
33	3256-1	2	Washer-Flat

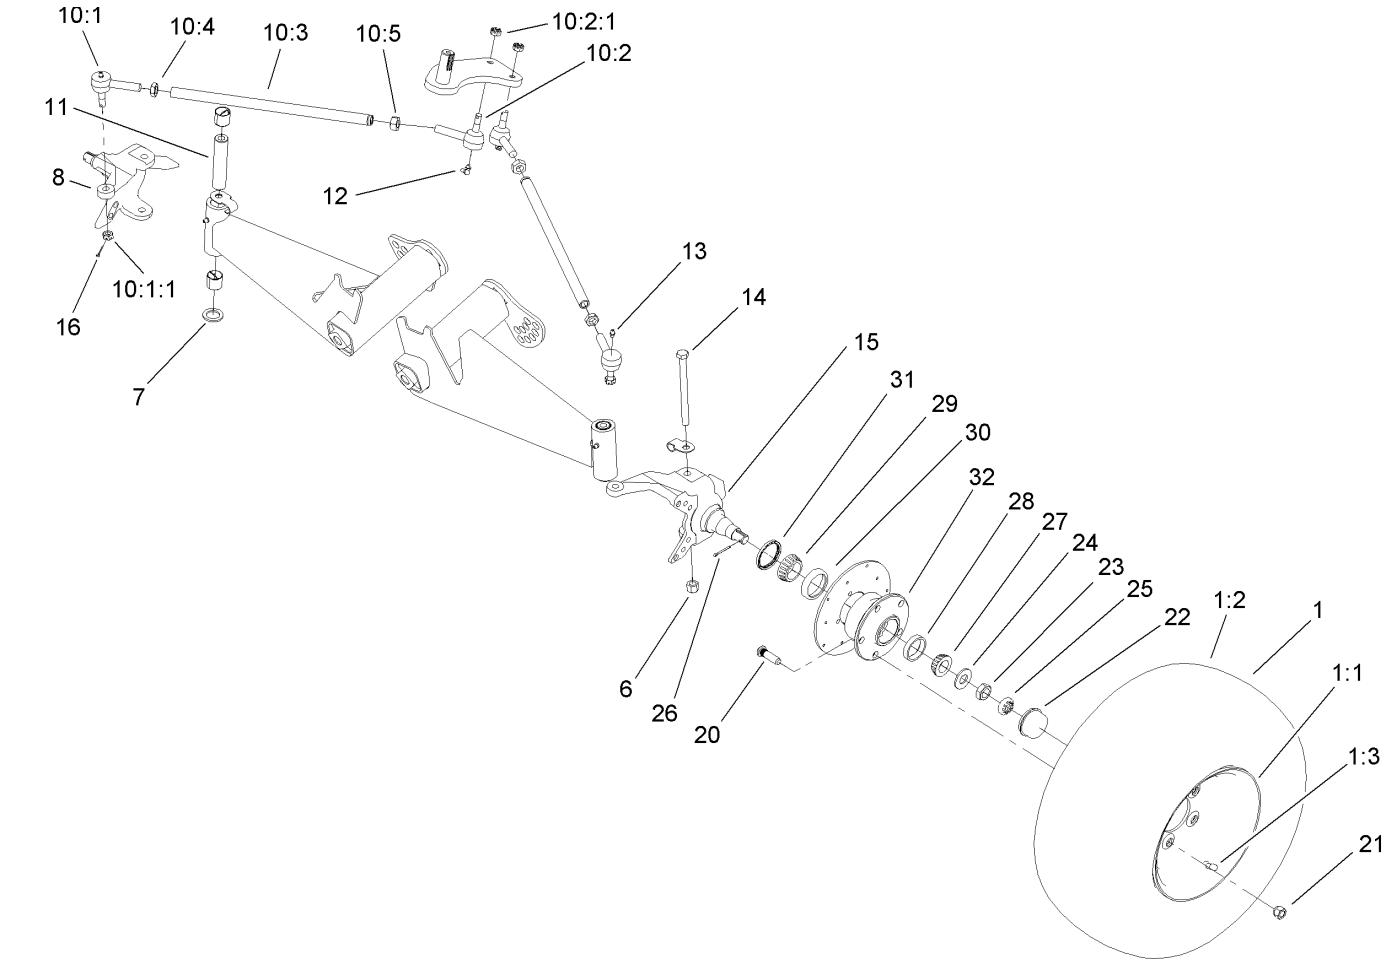

Front Tire and Steering Assembly

Ref	Part No.	Qty.	Description
1	104-7290	2	Tire And Wheel ASM
1:1	104-7288	1	Wheel
1:2	104-7289	1	Tire
1:3	232-27	1	Stem-Valve
6	3296-23	2	Nut-Lock, NI
7	256-115	2	Washer-Thrust
8	104-6877	1	Spindle-Disc, RH
❷10		2	Rod-Tie
10:1	112772	1	Joint-Ball, RH
10:1:1	915031	1	Nut
10:2	112771	1	Joint-Ball, LH
10:2:1	915031	1	Nut
10:3	99-7600-03	1	Rod-Tie
10:4	3220-11	1	Nut-Jam
10:5	3218-21	1	Nut-Jam
11	99-7499	2	Sleeve-Kingpin
12	302-60	2	Fitting-Grease, 90 DEG
13	302-5	2	Fitting-Grease
14	325-20	2	Screw-HH
15	104-6876	1	Spindle-Disc, LH
16	3272-7	4	Pin-Cotter
20	10-6830	10	Stud-Type, Drive
21	242-50	10	Nut-Lug
22	241-119	2	Cap-Dust

Ref	Part No.	Qty.	Description
23	3220-7	2	Nut-Jam
24	93-0309	2	Washer-Tab
25	93-0307	2	Nut-Lock, Retainer
26	3272-12	2	Pin-Cotter
27	254-94	2	Bearing-Cone, Tapered
28	254-72	2	Bearing-Cup, Tapered
29	254-106	2	Cone-Bearing, Tapered
30	254-107	2	Cup-Bearing, Tapered
31	108-7019	2	Seal-Shaft
32	104-6809	2	Hub

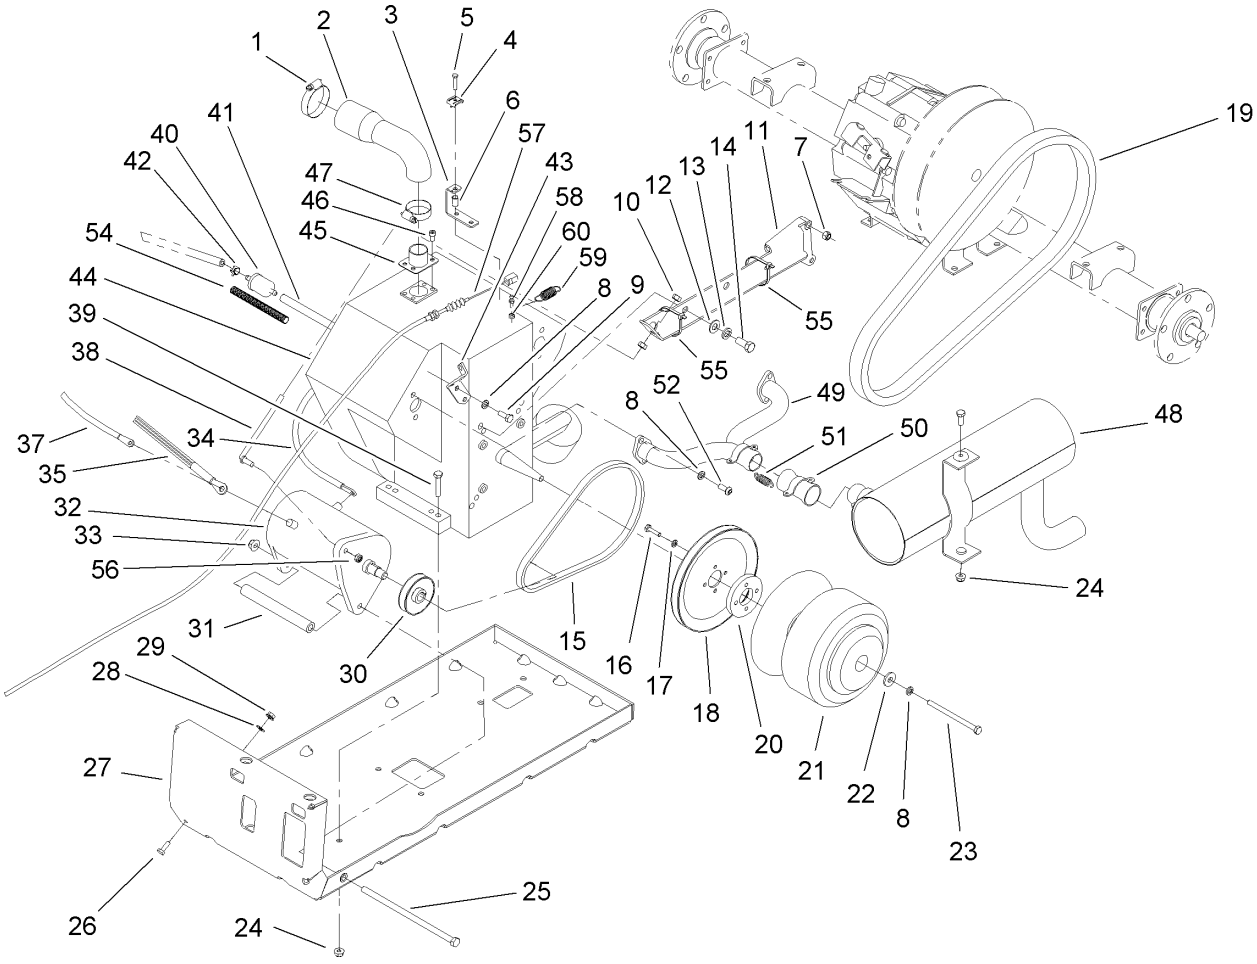

Engine and Clutch Assembly

Ref	Part No.	Qty.	Description
1	2412-130	1	Clamp-Hose
2	99-7106	1	Hose-Intake
3	107-0319	1	Bracket-Cable
4	81-1690	1	Clamp-Cable
5	3290-432	1	Screw-HH
6	32148-14	1	Insert-Threaded
7	33024-00	2	Nut-Lock
8	3253-4	6	Washer-Lock
9	66-3160	2	Screw-Cap
10	3217-6	2	Nut-Hex
11	104-6631-03	1	Torque Arm ASM
12	3256-25	2	Washer-Flat
13	3253-6	2	Washer-Lock
14	324-4	2	Screw-HH
15	99-7133	1	V-Belt-Starter
16	321-6	4	Screw-HH
17	3253-3	4	Washer-Lock
18	99-7131	1	Pulley-Engine
19	99-7144	1	Belt-Drive
20	99-7064	1	Spacer-Starter
21	108-7013	1	Clutch-Drive
22	5-0838	1	Washer
23	99-7201	1	Screw-HH
24	104-8300	5	Nut-Flange, NI

Ref	Part No.	Qty.	Description
25	99-7203	1	Screw
26	321-4	1	Screw-HH
27	104-6433-03	1	Mount-Engine
28	3255-8	1	Washer-Lock
29	32128-32	1	Nut-HHF
30	99-7130	1	Pulley-Starter
31	99-7053	1	Pivot-Starter
32	99-7108	1	Generator-Starter
33	104-8301	2	Nut-Flange, NI
34	99-7403	1	Cable-Negative
35	99-7437	1	Harness-Wire, Engine
37	104-6926	1	Cable-Positive
38	104-6629	1	Rod-Starter
39	322-8	4	Screw-HH
40	94-2690	1	Filter-Fuel
41	109-0678	1	Hose-Fuel
42	2412-98	3	Clamp
43	104-7152	1	Bracket-Cable, Throttle
44	115-7821	1	Engine-Briggs & Stratton, 295440-0158-G1
45	99-7083	1	Bracket-Intake
46	99-7202	4	Screw-HSH
47	2412-3	1	Clamp-Hose
48	104-6475	1	Muffler-Engine

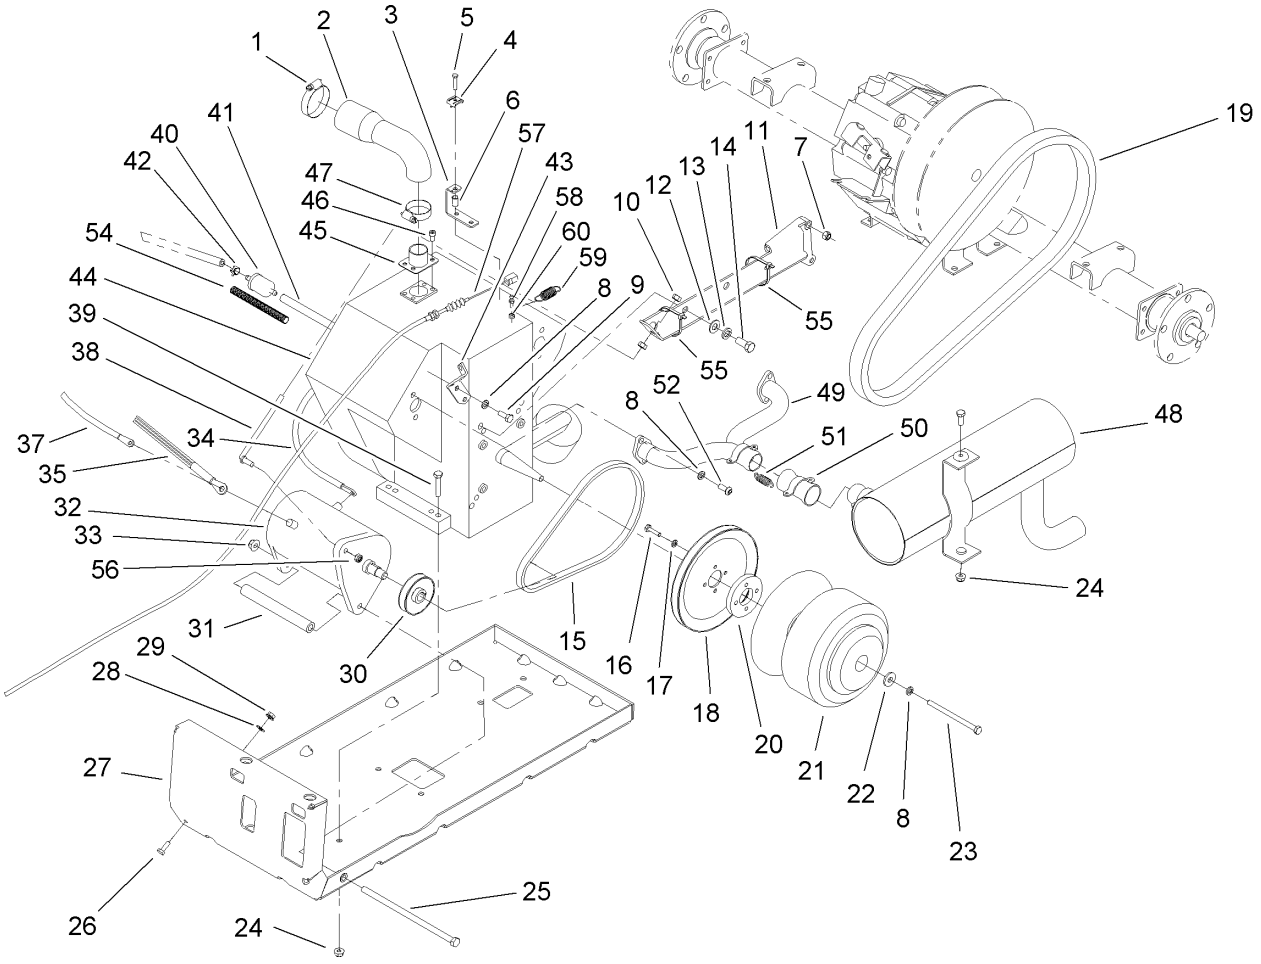

Engine and Clutch Assembly (continued)

Ref	Part No.	Qty.	Description
49	104-6476	1	Manifold-Engine
50	104-6477	1	Coupler-Exhaust
51	104-6478	4	Spring-Coupler, Exhaust
52	3274-96	4	Screw-HSBH
54	99-7377	1	Conduit-Line, Fuel
55	3290-379	2	Tie-Cable
56	3296-20	1	Nut-Lock, NI
57	108-7017	1	Cable-Accelerator
58	99-7847	1	Ball-Stud
59	71-5470	1	Spring-Brake
60	110-2619	1	Keeper-Spring

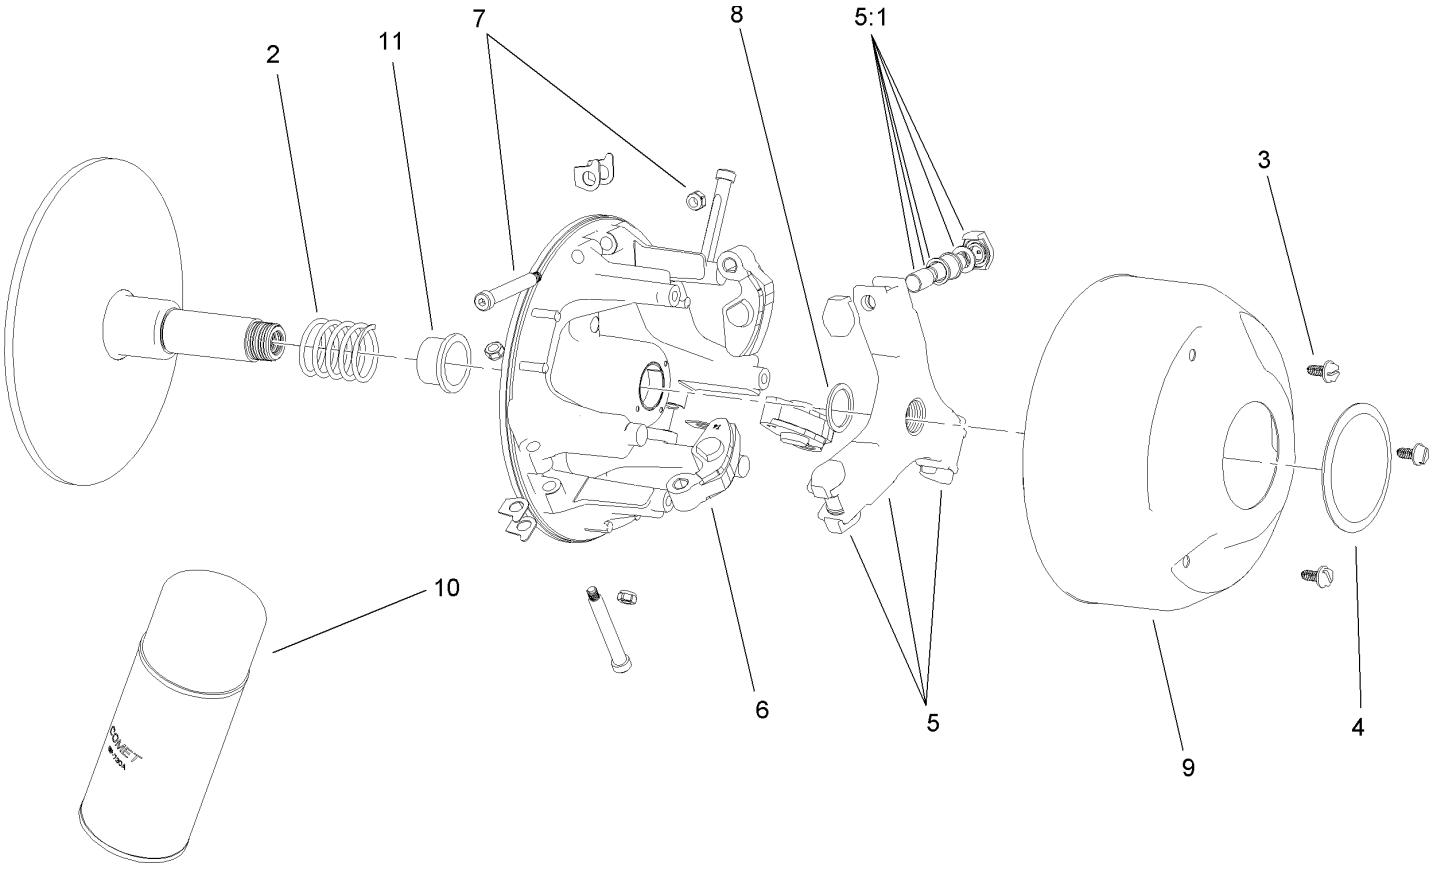

Drive Clutch Assembly No. 108-7013

Ref	Part No.	Qty.	Description
2	104-1686	1	Spring
3	3234-26	3	Screw
4	104-1690	1	Cap
5	108-3047	1	Spider ASM
5:1	110-2642	1	Spider Replacement Parts Kit
6	108-7008	1	Arm-Cam (Set Of 3)
7	104-4256	1	Pivot Bolt And Nut Kit
8	104-1687	1	Spacer
9	104-1691	1	Cover
10	104-7011	1	Lubricant-Dry
11	108-3048	1	Spacer-Clutch

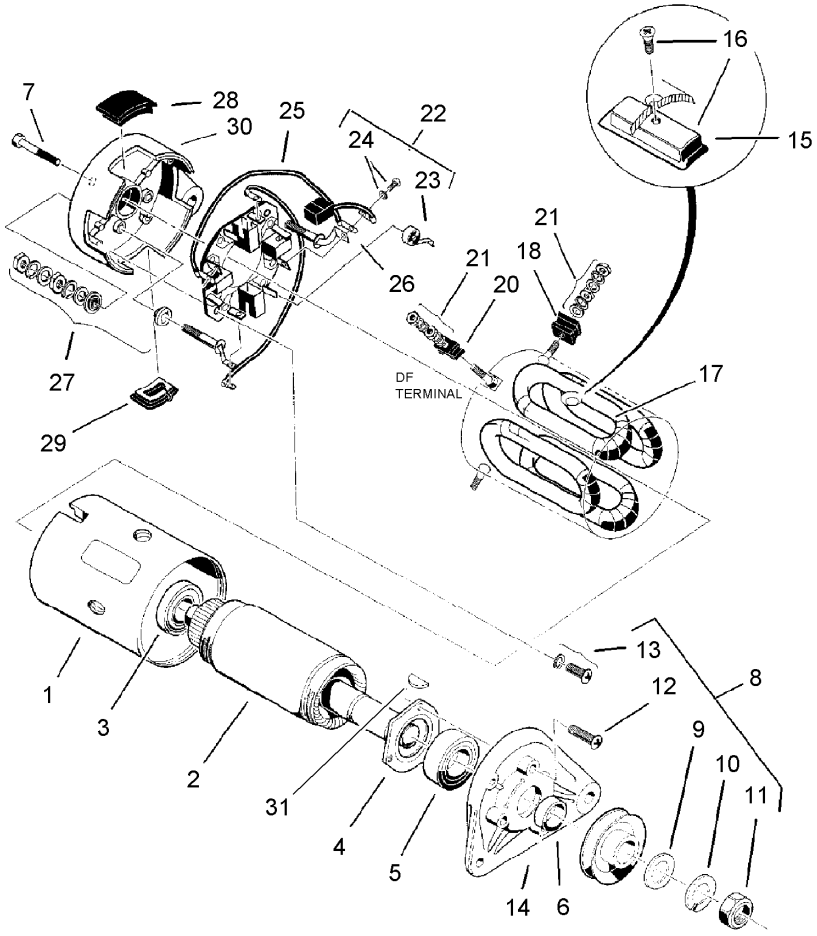

Starter Generator Assembly No. 99-7108

Ref	Part No.	Qty.	Description
❷1		1	Yoke
2	104-1210	1	Armature Kit
3	104-1211	1	Bearing-Ball, Rear
4	104-1212	1	Retainer
5	104-1213	1	Bearing-Ball, Front
6	104-1214	1	Spacer
7	104-1215	2	Bolt
❷8		1	Nut And Screw Set
9	104-1216	1	Washer-Plain
10	104-1217	1	Washer-Spring
11	104-1218	1	Nut-Hex
❷12		3	Screw-Flange
13	104-1219	2	Set-Screw
14	104-1220	1	Bracket-Front
❷15		4	Pole
16	104-1221	1	Set-Pole And Screw
17	104-1222	1	Field Stator Coil ASM
❷18		2	F Mold
❷20		1	Df Mold
21	104-1224	1	Nut And Washer Set
22	104-1225	1	Brush Holder Kit
23	104-1226	4	Spring-Brush
24	104-1227	1	Brush And Screw Set
❷25		2	Brush Connector ASM

Ref	Part No.	Qty.	Description
❷26		2	A Terminal ASM
27	104-1228	2	Screw And Mold ASM
❷28		1	Cover Set
❷29		1	Cover B
❷30		1	Bracket-Rear
31	3257-3	1	Key-Woodruff

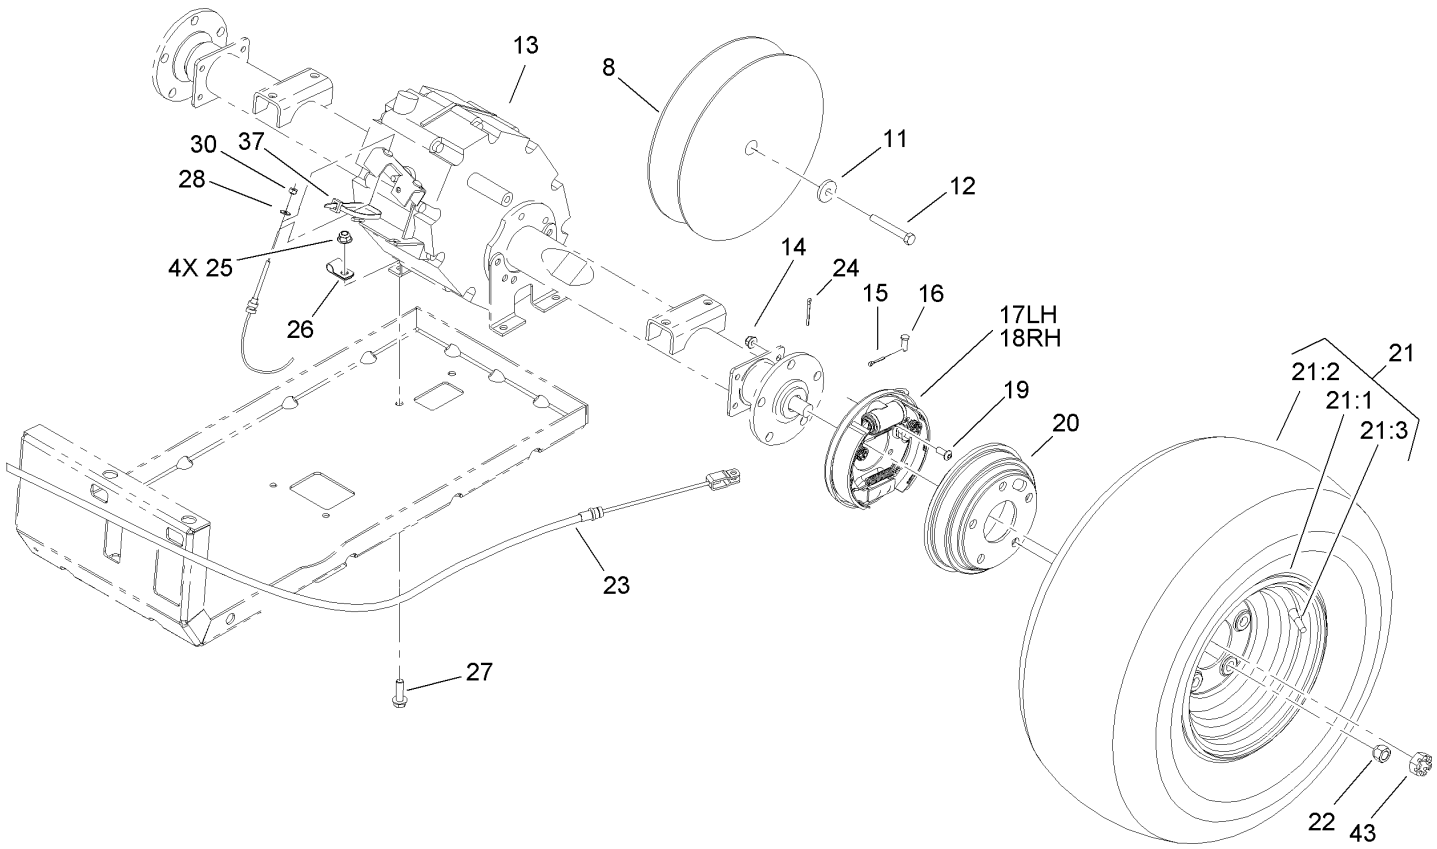

Rear Tire and Transaxle Assembly

Ref	Part No.	Qty.	Description
8	99-7104	1	Clutch-Driven
11	104-6563	1	Washer-Stepped
12	104-6564	1	Screw-HH
13	107-0360	1	Transaxle
14	104-8300	8	Nut-Flange, NI
15	3272-10	2	Pin-Cotter
16	283-62	2	Pin-Clevis
17	104-6807	1	LH Brake ASM
18	104-6806	1	RH Brake ASM
19	3274-55	8	Screw-HSBH
20	104-6500	2	Drum-Brake
21	104-7282	2	Tire And Wheel ASM
21:1	104-7279	1	Wheel
21:2	104-7281	1	Tire
21:3	232-27	1	Stem-Valve
22	242-50	10	Nut-Lug
23	104-6846	2	Cable-Brake, Park
24	3272-42	2	Pin-Cotter
25	104-8301	4	Nut-Flange, NI
26	2412-10	1	R-Clamp
27	3234-24	4	Screw-HHF
28	3256-49	2	Washer-Flat
30	3296-2	2	Nut-Lock
37	3290-378	1	Tie-Cable

Ref	Part No.	Qty.	Description
43	104-1656	2	Nut-Castle

Transaxle Assembly No. 107-0360

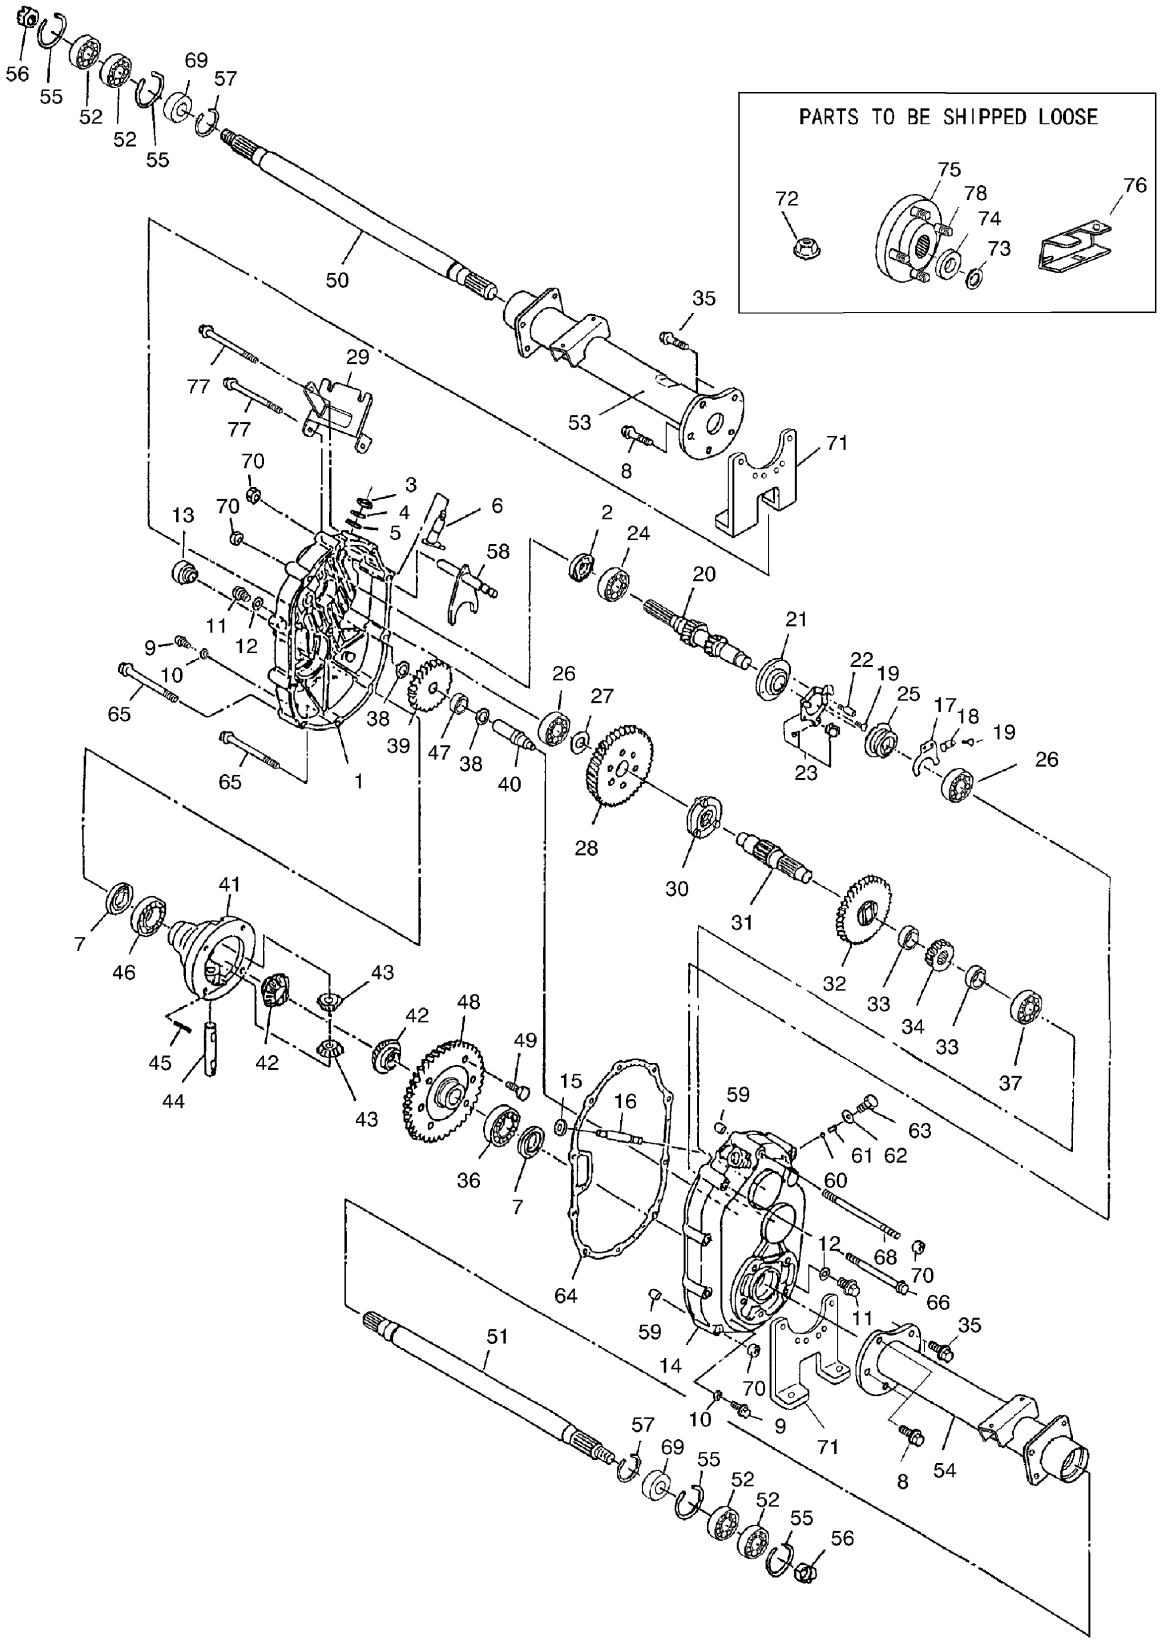

Transaxle Assembly No. 107-0360

Ref	Part No.	Qty.	Description
1	104-1601	1	Case-LH, Complete
2	104-1602	1	Seal-Oil
3	104-1603	1	Seal-Oil
4	104-1604	1	Ring-Snap
5	104-1605	1	Spacer
6	104-1606	1	Shaft-Selector
7	104-1607	2	Seal-Oil
8	104-1608	4	Bolt-Flange
9	104-1609	2	Plug-Check, Oil
10	104-1610	2	Gasket
11	104-1611	2	Plug-Drain, Oil
12	104-1612	2	Gasket
13	104-1613	1	Plug-Filler, Oil
14	104-1614	1	Case-Complete, RH
15	104-1615	1	Seal-Oil
16	104-1616	1	Shaft-Governor
17	104-1617	1	Fork-Governor
18	104-1618	1	Stopper
19	104-1619	4	Screw And Washer ASM
20	104-7002	1	Shaft-Input, Complete
21	104-1621	1	Base-Governor
22	104-1622	1	Pin-Lock
23	104-1623	1	Unit-Plate, Governor
24	104-1624	1	Bearing-Ball
25	104-1625	1	Sleeve-Governor
26	104-1626	2	Bearing-Ball
27	104-1627	1	Spacer
28	104-1628	1	Gear
29	104-1629	1	Bracket-Wire, Change
30	104-1630	1	Clutch-Pin
31	104-1631	1	Shaft-Center
32	104-1632	1	Gear
33	104-1633	2	Collar
34	104-1634	1	Gear
35	104-1635	6	Bolt-Flange
36	104-1636	1	Bearing-Ball
37	104-1637	1	Bearing-Ball
38	104-1638	2	Spacer
39	104-1639	1	Gear
40	104-1640	1	Shaft-Counter
41	104-1641	1	Case-Differential
42	104-1642	2	Gear-Side, Differential
43	104-1643	2	Pinion-Differential
44	104-1644	1	Shaft-Differential
45	104-1645	1	Pin
46	104-1646	1	Bearing-Ball
47	104-1647	1	Bearing-Needle
48	104-1648	1	Gear
49	104-1649	6	Bolt
50	104-1650	1	Shaft-Axle, LH
51	104-1651	1	Shaft-Axle, RH
52	104-1652	4	Bearing-Ball

Ref	Part No.	Qty.	Description
53	104-1653	1	Case-Axle, LH
54	104-1654	1	Case-Axle, RH
55	104-1655	4	Ring-Snap
56	104-1656	2	Nut-Castle
60	104-1660	1	Ball-Steel
57	104-1657	2	Ring-Snap
58	104-6870	1	Shaft-Shift, Complete
59	104-1659	2	Knock-Pipe
60	104-1660	1	Ball-Steel
61	104-1661	1	Spring
62	104-1662	1	Gasket
63	104-1663	1	Bolt
64	104-1664	1	Gasket
65	104-1665	6	Bolt-Flange
66	104-1666	1	Bolt-Flange
68	104-6866	1	Bolt
69	104-6867	2	Collar
70	33004-00	11	Nut-HF
71	104-1671	2	Bracket-Axle
72	104-1672	1	Nut-Lock
73	104-1673	2	Washer-Spring
74	104-1674	2	Washer
75	104-1675	2	Hub
76	104-6860	1	Lever-Select
77	104-6869	2	Bolt-Flange
78	104-8649	10	Stud

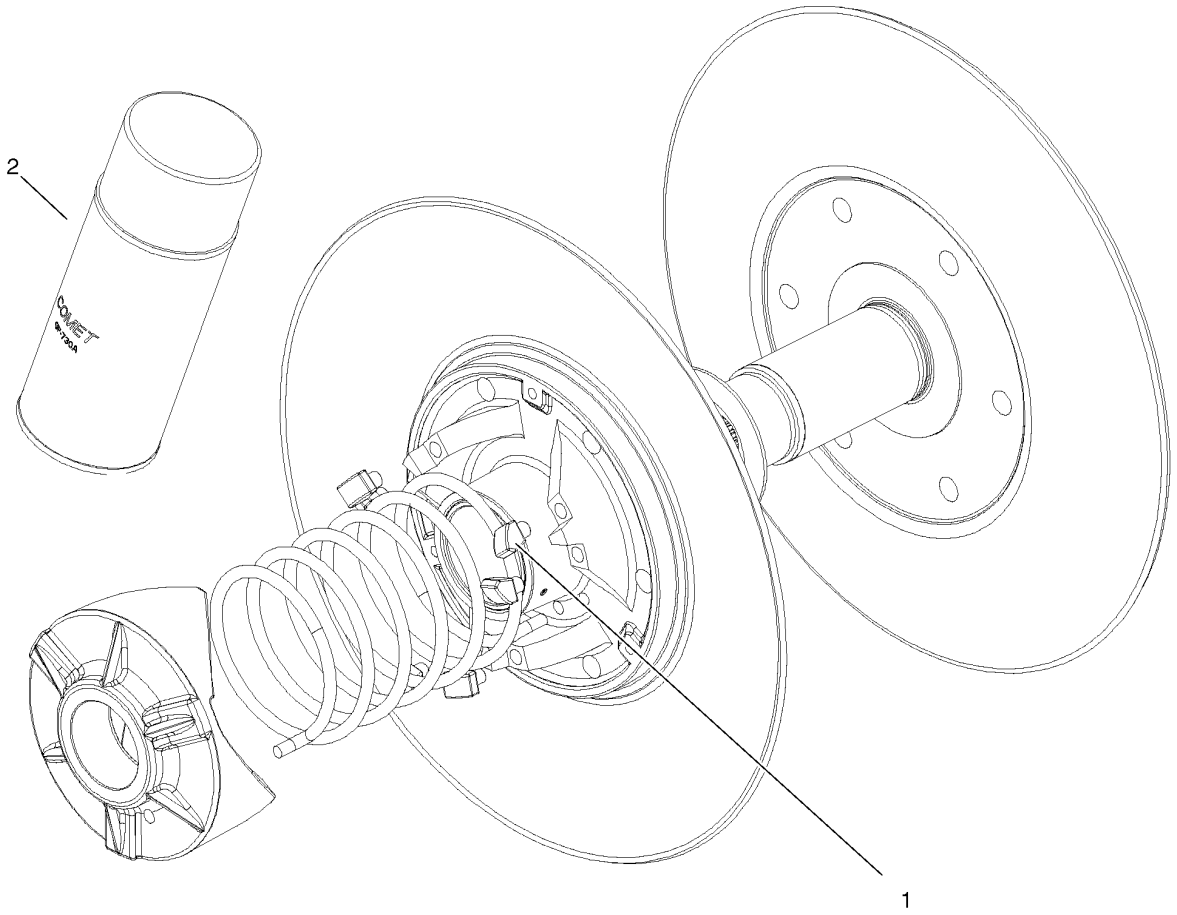

Driven Clutch Assembly No. 99-7104

Ref	Part No.	Qty.	Description
1	104-4257	1	Button Kit
2	104-7011	1	Lubricant-Dry

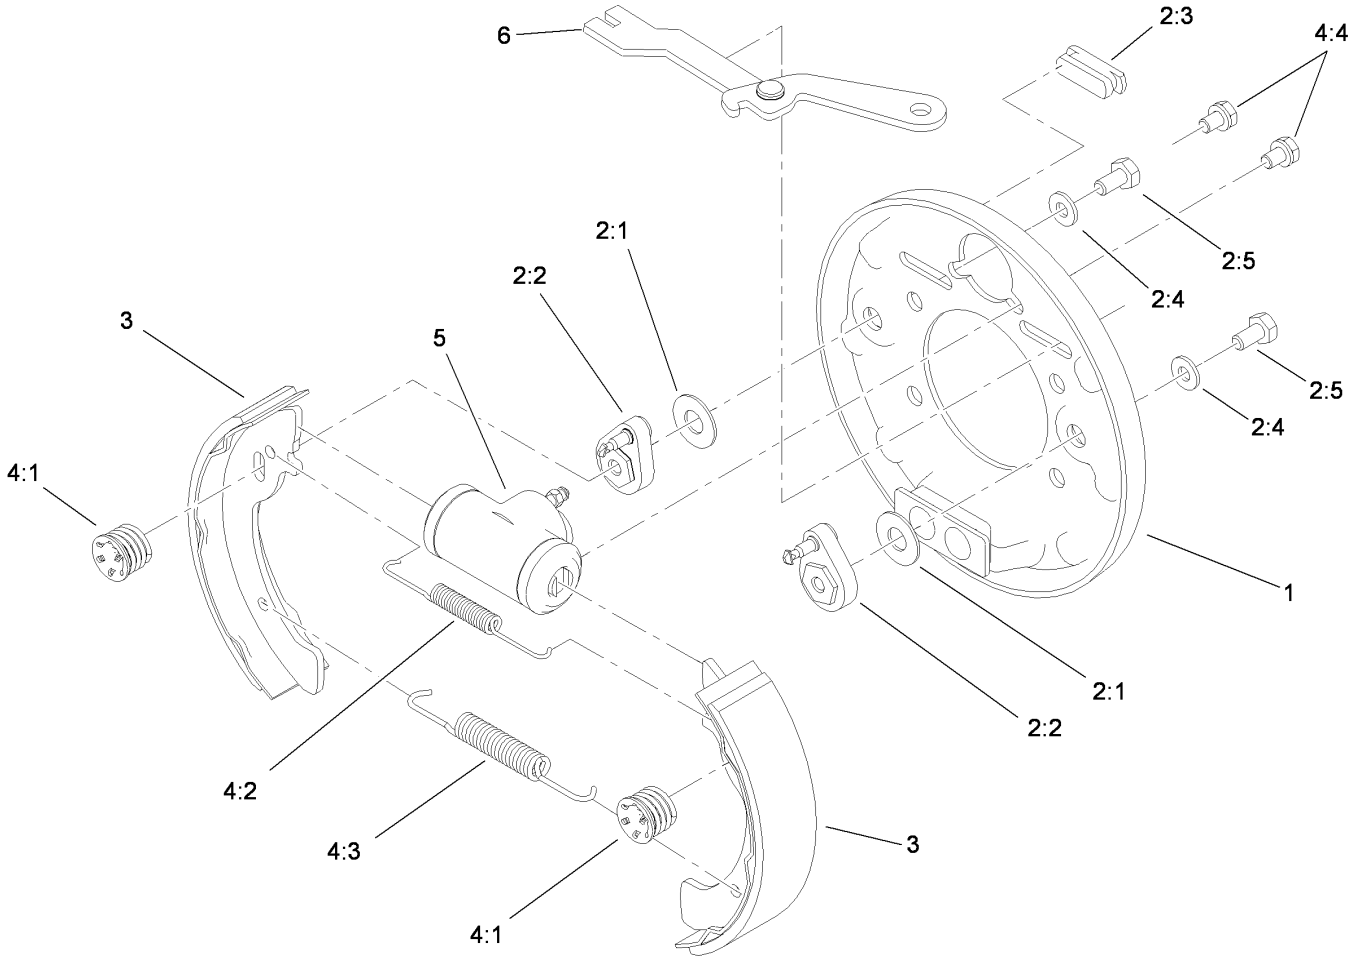

Left Hand Brake Assembly No. 104-6807

Ref	Part No.	Qty.	Description
1	100-8586	1	Backing Plate ASM
2	104-6820	1	Adjuster Kit
2:1	100-8585	2	Washer-Bellville
2:2	100-8588	2	Adjuster Lever ASM
2:3	100-8584	2	Cover-Dust
❷2:4		2	Washer
❷2:5		2	Bolt
3	104-6818	4	Shoe And Lining Kit
4	104-6819	1	Hardware Kit
4:1	100-8583	2	Shoe Hold Down Spring ASM
4:2	100-8581	2	Spring-Upper
4:3	100-8582	2	Spring-Lower
❷4:4		2	Bolt And Washer
5	104-6824	1	Wheel Cylinder ASM
6	104-6825	1	LH Park Brake Lever ASM

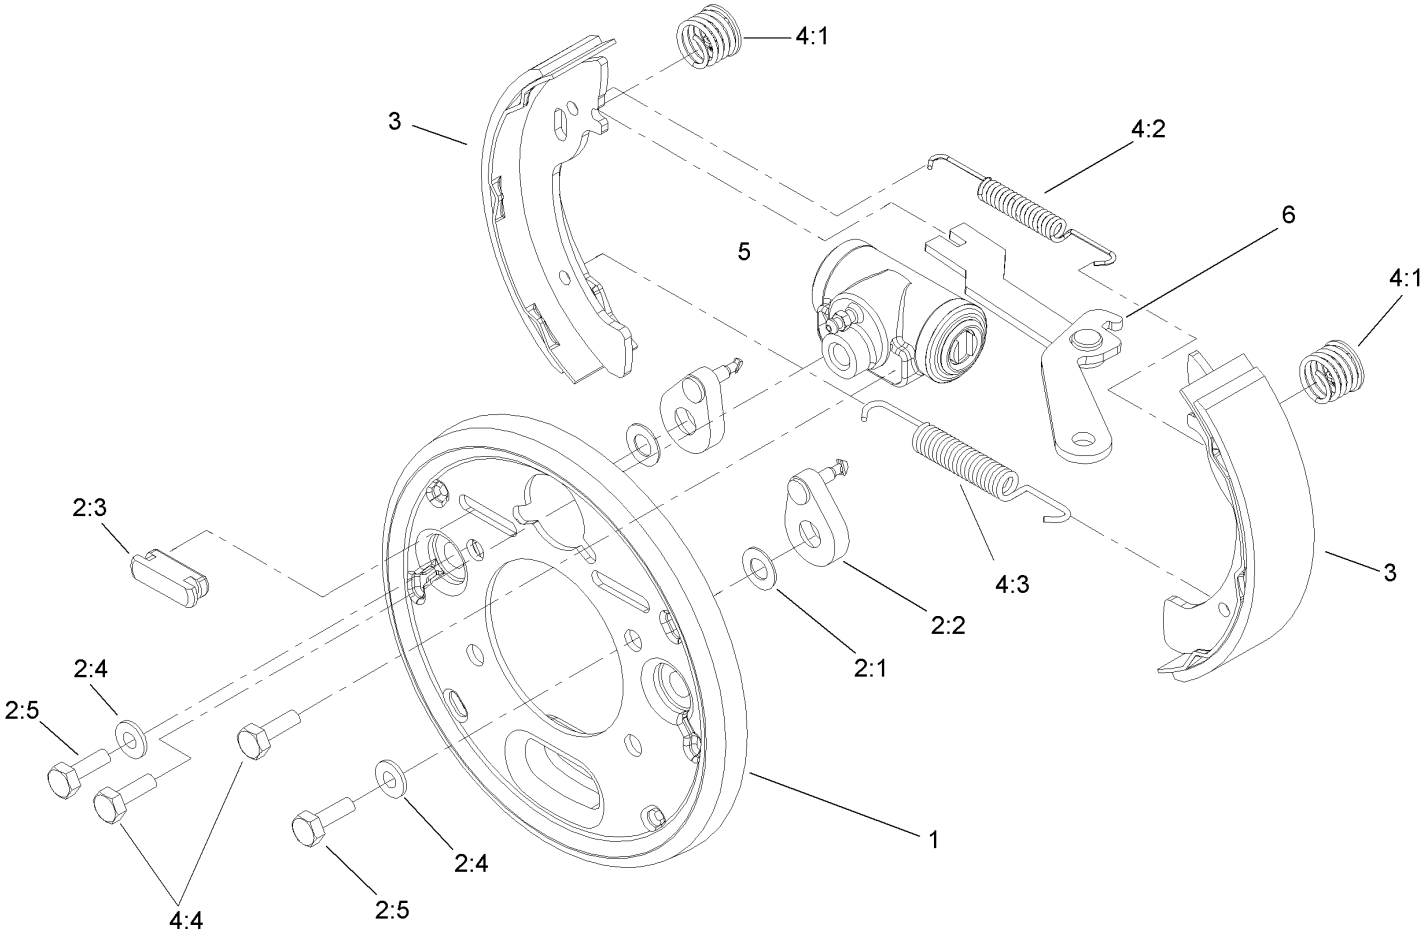

Right Hand Brake Assembly No. 104-6806

Ref	Part No.	Qty.	Description
1	100-8586	1	Backing Plate ASM
2	104-6820	1	Adjuster Kit
2:1	100-8585	2	Washer-Bellville
2:2	100-8588	2	Adjuster Lever ASM
2:3	100-8584	2	Cover-Dust
❷2:4		2	Washer
❷2:5		2	Bolt
3	104-6818	4	Shoe And Lining Kit
4	104-6819	1	Hardware Kit
4:1	100-8583	2	Shoe Hold Down Spring ASM
4:2	100-8581	2	Spring-Upper
4:3	100-8582	2	Spring-Lower
❷4:4		2	Bolt And Washer
5	104-6824	1	Wheel Cylinder ASM
6	104-6826	1	RH Park Brake Lever ASM

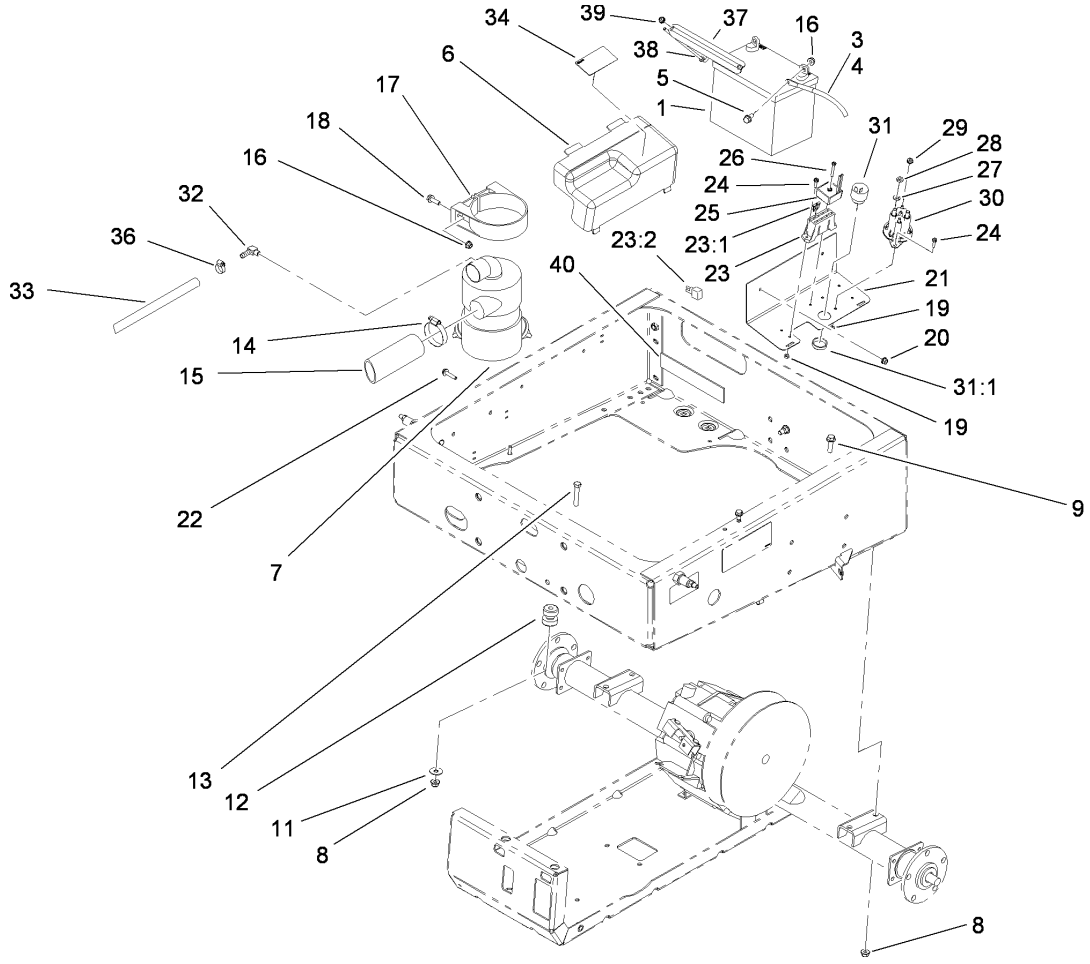

Drivetrain Mounting, Battery and Air Cleaner Assembly

Ref	Part No.	Qty.	Description
1	104-8162	1	Battery
3	99-7415	1	Cable-Negitive
4	99-7404	1	Cable-Positive
5	3234-5	2	Screw-HHF
6	99-7325	1	Cover-Electrical
7	99-7120	1	Air Cleaner ASM
8	104-8301	6	Nut-Flange, NI
9	3234-24	4	Screw-HHF
11	3256-35	2	Washer-Flat
12	95-2596	2	Mount-Iso
13	323-10	2	Screw-HH
14	2412-130	1	Clamp-Hose
15	104-6528	1	Hose-Intake
16	104-8300	4	Nut-Flange, NI
17	95-5806	1	Bracket-Mounting
18	3234-17	2	Screw-HHF
19	3296-2	5	Nut-Lock
20	32128-32	2	Nut-HHF
21	99-7051-03	1	Mount-Component
22	3234-21	2	Screw-HHF
23	107-0669	1	Harness-Wire, Main
23:1	218-578	3	Fuse-10 Amp
❶23:2	100-4918	1	Diode
24	32105-13	4	Screw-HWH

Ref	Part No.	Qty.	Description
25	104-6927	1	Regulator
26	32105-1	1	Screw-SHH
27	3255-8	2	Washer-Lock
28	3220-2	2	Nut-Jam
29	32149-8	2	Nut-Keps
30	114-3315	1	Solenoid-12 Vdc
31	80-9330	1	Alarm-Audio
31:1	104-5107	1	Nut-Plastic, Knurled
32	99-7230	1	Fitting-90 DEG
33	99-7842	1	Hose-Breather
34	99-7352	1	Decal-Information
36	2412-36	2	Clamp-Hose
37	92-5018-03	1	Clamp-Battery
38	95-4042	2	Hook-Retain, Battery
39	104-7201	2	Nut-HF
40	104-7102	1	Pad-Battery

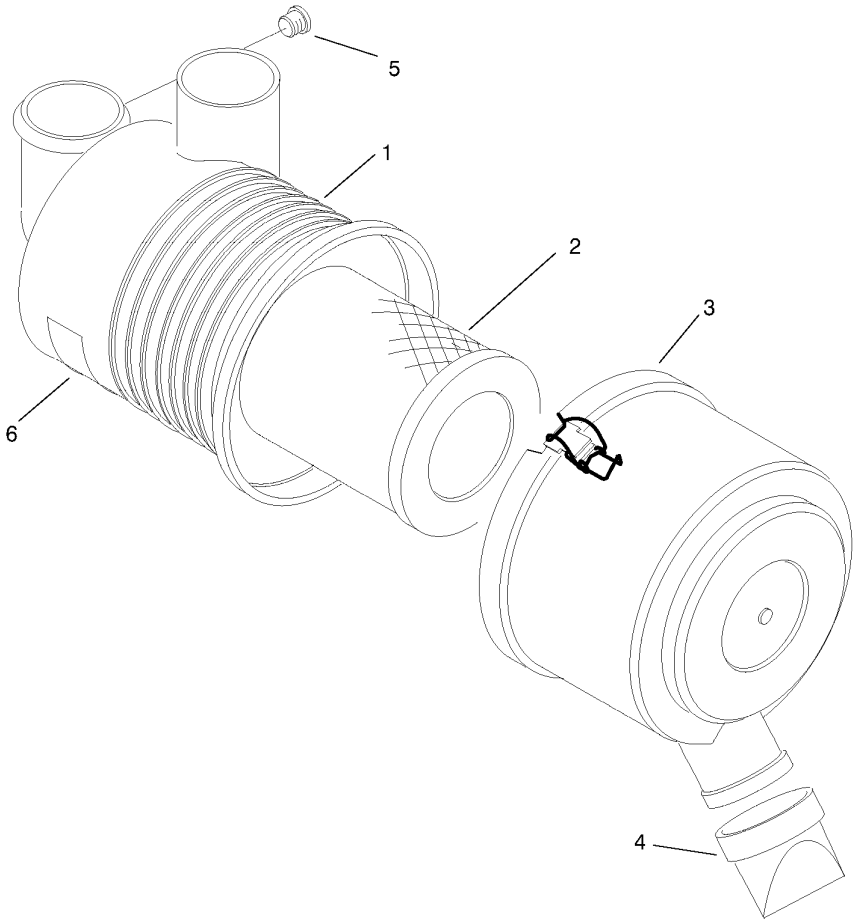

Air Cleaner Assembly No. 99-7120

Ref	Part No.	Qty.	Description
❷1		1	Body
2	108-3811	1	Filter-Air
3	94-3652	1	Cover ASM
4	87-9400	1	Valve-Vacuator
❷5		1	Plug
❷6		1	Marking

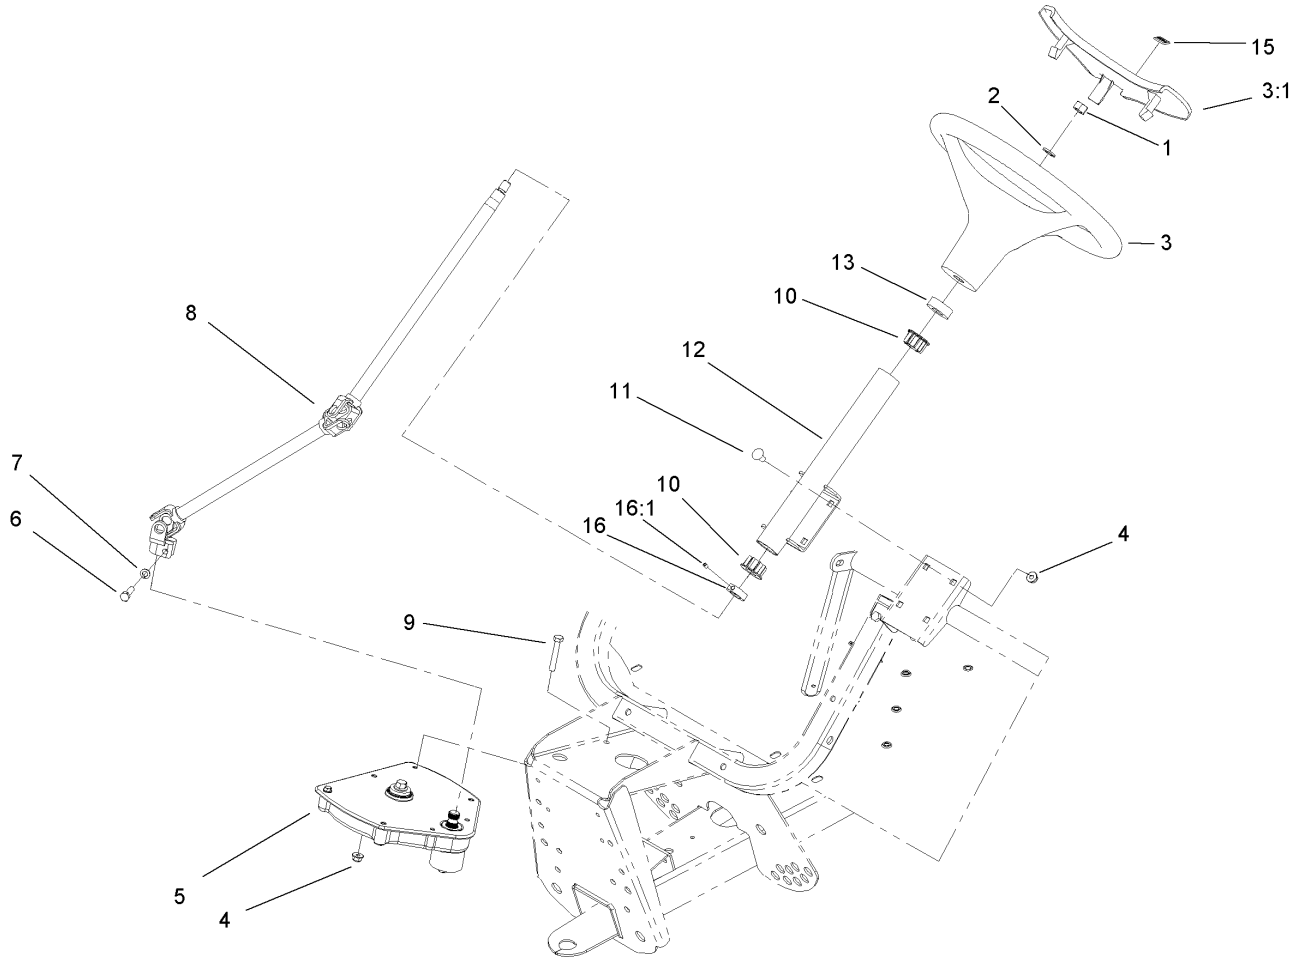

Upper Steering Assembly

Ref	Part No.	Qty.	Description
1	110-8815	1	Nut-Hex
2	3256-26	1	Washer-Flat
3	98-1471	1	Wheel-Steering
3:1	98-1468	1	Cover-Wheel, Steering
4	104-8300	7	Nut-Flange, NI
5	99-7660	1	Steering Gearbox ASM
6	48-7730	1	Screw-HH
7	3253-4	1	Washer-Lock
8	99-7653	1	Shaft-Steering
9	322-10	3	Screw-HH
10	93-1146	2	Bushing-Steering, Upper
11	3230-1	4	Bolt-CARR
12	99-7651-03	1	Column-Steering
13	21-9260	1	Cover-Dust
15	98-1459	1	Decal
16	111383	1	Collar
16:1	3245-32	1	Screw-HSH

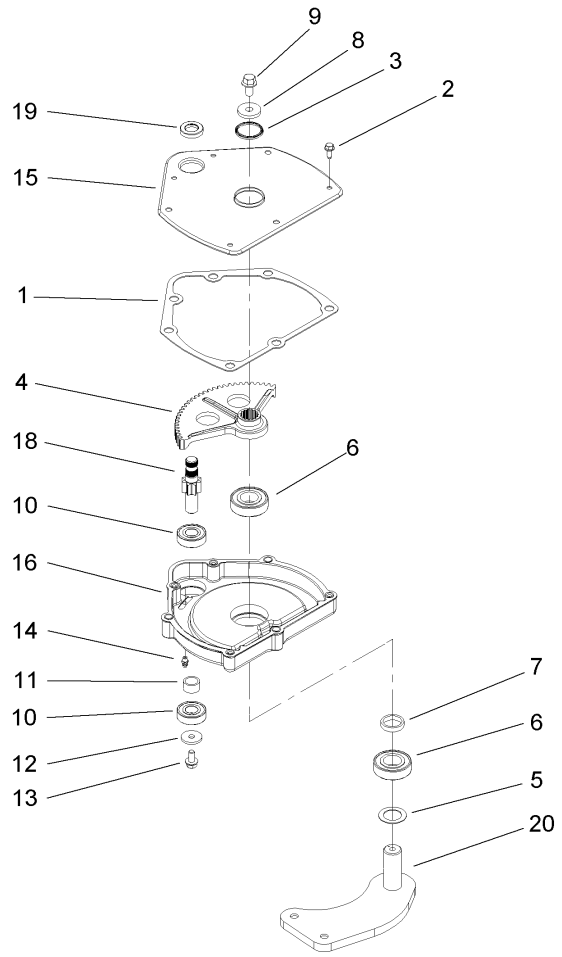

Steering Gearbox Assembly No. 99-7660

Ref	Part No.	Qty.	Description
1	94-2135	1	Gasket
2	32144-10	4	Screw-HWH
3	103118	1	Seal
4	99-7843	1	Sector-Gear
5	3256-42	1	Washer-Flat
6	251-82	2	Bearing-Ball
7	94-2218	1	Spacer-Shaft, Output
8	104-6563	1	Washer-Stepped
9	104-7156	1	Screw-HHF
10	38-7820	2	Bearing-Ball
11	94-2217	1	Spacer-Shaft, Input
12	1-613235	1	Washer
13	98-3498	1	Screw-HH
14	302-5	1	Fitting-Grease
15	99-7656-03	1	Cover-Housing, Steering
16	99-7658	1	Housing-Steering
18	99-7650	1	Gear-Pinion
19	99-7657	1	Seal-Oil
20	99-7601-03	1	Arm-Pitman

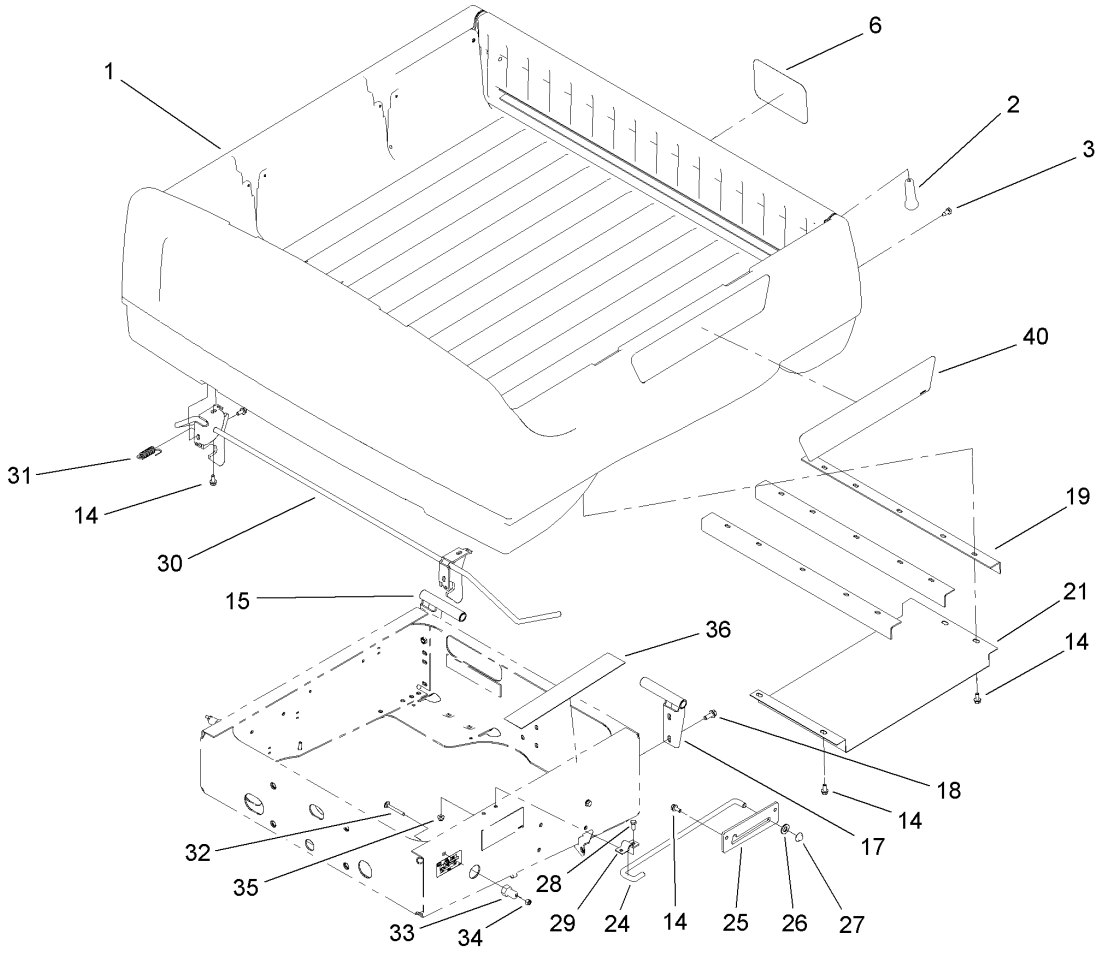

Box and Tailgate Installation Assembly

Ref	Part No.	Qty.	Description
❷1		1	Box And Tailgate ASM
2	99-7984	2	Knob-Soft Grip, Push-On
3	87-8460	2	Bumper-Rubber
6	104-7213	1	Decal
14	3234-5	18	Screw-HHF
15	99-7309-03	1	RH Pivot Bracket ASM
17	99-7308-03	1	LH Pivot Bracket ASM
18	3234-11	4	Screw-HHF
19	99-7864-03	3	Brace-Box
21	99-7870	1	Shield-Heat
24	99-7895	1	Rod-Prop
25	99-7894	1	Bracket-Rod, Prop
26	3256-26	1	Washer-Flat
27	32112-14	1	Nut-Push
28	3234-17	2	Screw-HHF
29	99-7896	1	Bracket-U, Prop Rod
30	104-7244	1	Rod-Latch
31	5-7290	2	Spring-Tension
32	3230-7	2	Screw-CARR
33	104-7248	2	Pin-Latch
34	3296-29	2	Nut-Lock, NI
35	104-8300	1	Nut-Flange, NI
36	104-6859	1	Shield-Heat
40	104-7265	2	Decal

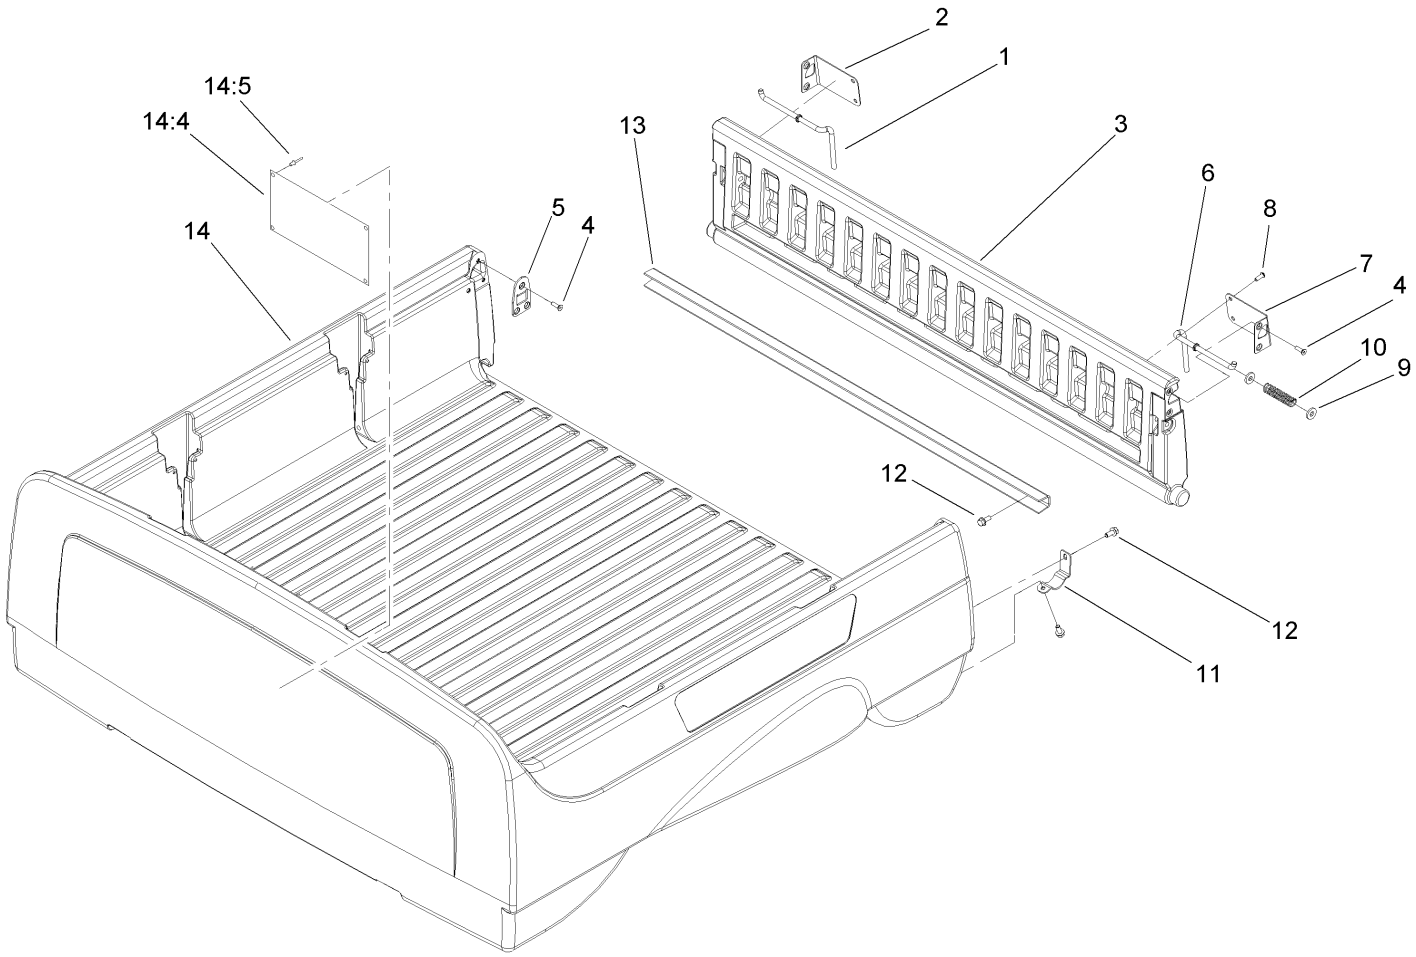

Box and Tailgate Assembly

Ref	Part No.	Qty.	Description
1	99-7860	1	Rod-Latch, Right
2	99-7858	1	Bracket-Tailgate Latch, Right
3	99-7893	1	Tailgate ASM
4	99-7334	10	Screw
5	99-7852	2	Plate-Striker
6	99-7859	1	Rod-Latch, Left
7	99-7857	1	Bracket-Tailgate Latch, Left
8	99-7335	4	Screw
9	99-7861	4	Washer-Latch
10	61-8880	2	Spring
11	99-7286	2	Bracket-Pivot, Tailgate
12	3234-5	10	Screw-HHF
13	99-7867	1	Channel-Tailgate
14	104-7203	1	Box ASM
14:4	99-7954	1	Decal-No Riders
14:5	3290-415	4	Rivet

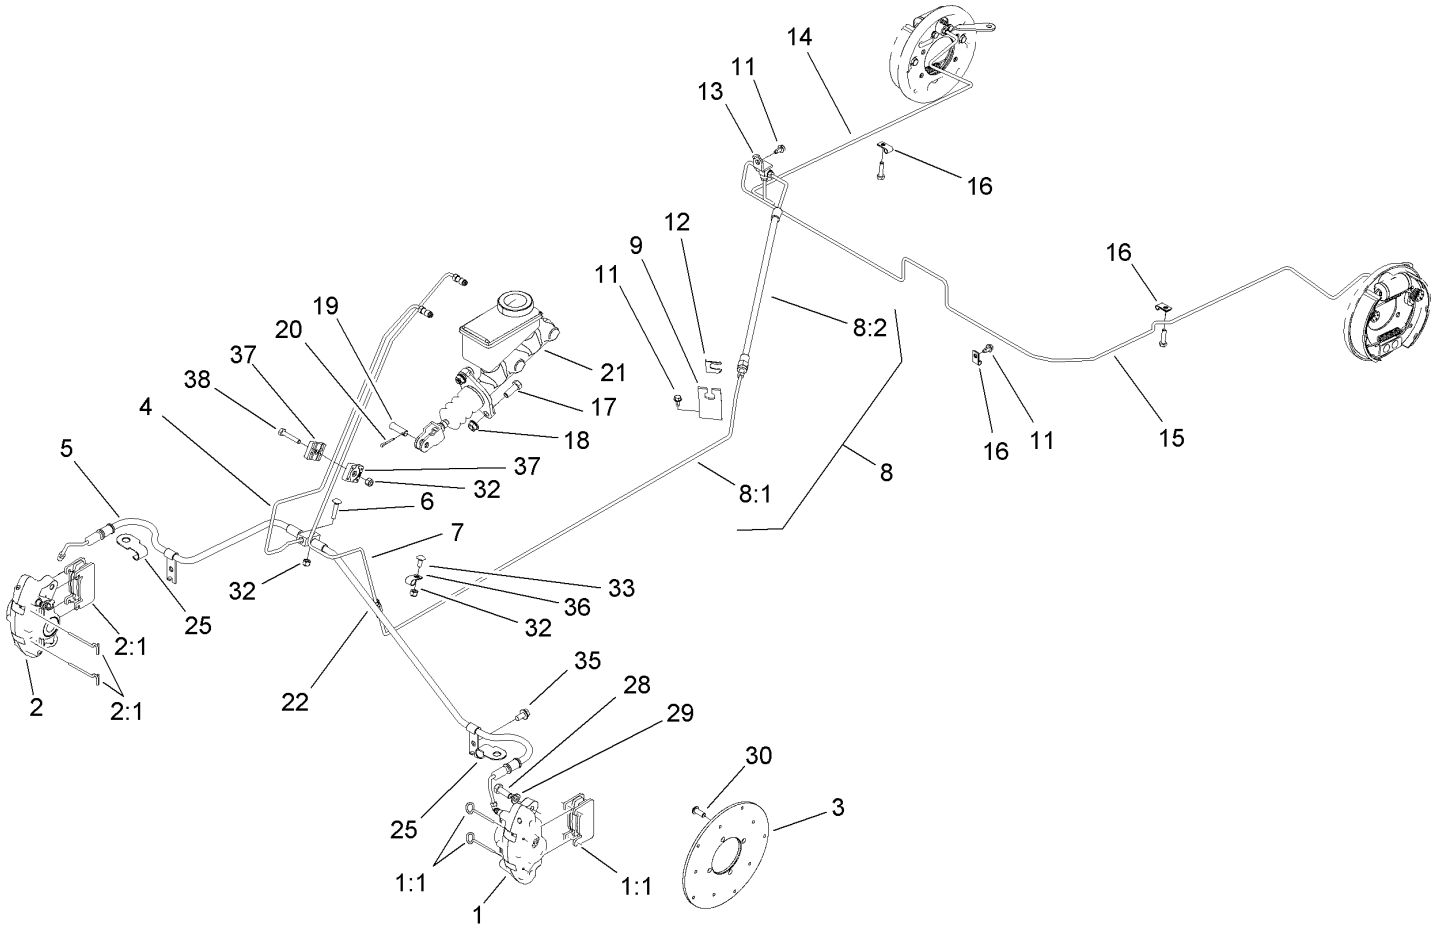

Hydraulic Brake Assembly

Ref	Part No.	Qty.	Description
1	107-0361	1	Caliper-LH
1:1	107-0708	1	Friction Pad And Pin Kit
2	107-0362	1	Caliper-RH
2:1	107-0708	1	Friction Pad And Pin Kit
3	104-6891	2	Rotor
4	104-6798	1	Tube-Brake, Front
5	104-7256	1	Front Hose ASM
6	3229-3	1	Screw-CARR
7	104-6793	1	Tube-Brake, Rear
❷8		1	Rear Brake Hose ASM
8:1	104-6794	1	Tube-Brake, Rear
8:2	104-6795	1	Hose-Brake, Rear
9	104-6799	1	Bracket-Hose, Brake
11	12-3270	3	Screw
12	104-7092	1	Clip
13	87-3560	1	Tee
14	104-6796	1	Tube-Brake, Rear (RH)
15	110-2604	1	Tube-Brake, Rear (LH)
16	2412-72	3	Clip-Closed, Insulated
17	323-6	2	Screw-HH
18	3290-357	2	Nut-HHF, Whiz
19	283-2	1	Pin-Clevis
20	3272-10	1	Pin-Cotter
21	104-6782	1	Cylinder-Master

Ref	Part No.	Qty.	Description
22	87-3570	1	Union
25	104-7073	2	Bracket-Hose
28	323-6	4	Screw-HH
29	3253-21	4	Washer-Lock
30	3274-55	8	Screw-HSBH
32	3296-42	3	Nut-Lock, NI
33	3229-11	1	Screw-CARR
35	32144-14	2	Screw-HWHTF
36	2412-89	1	Clamp
37	87-7660	2	Clamp-Tube
38	321-9	1	Screw-HH

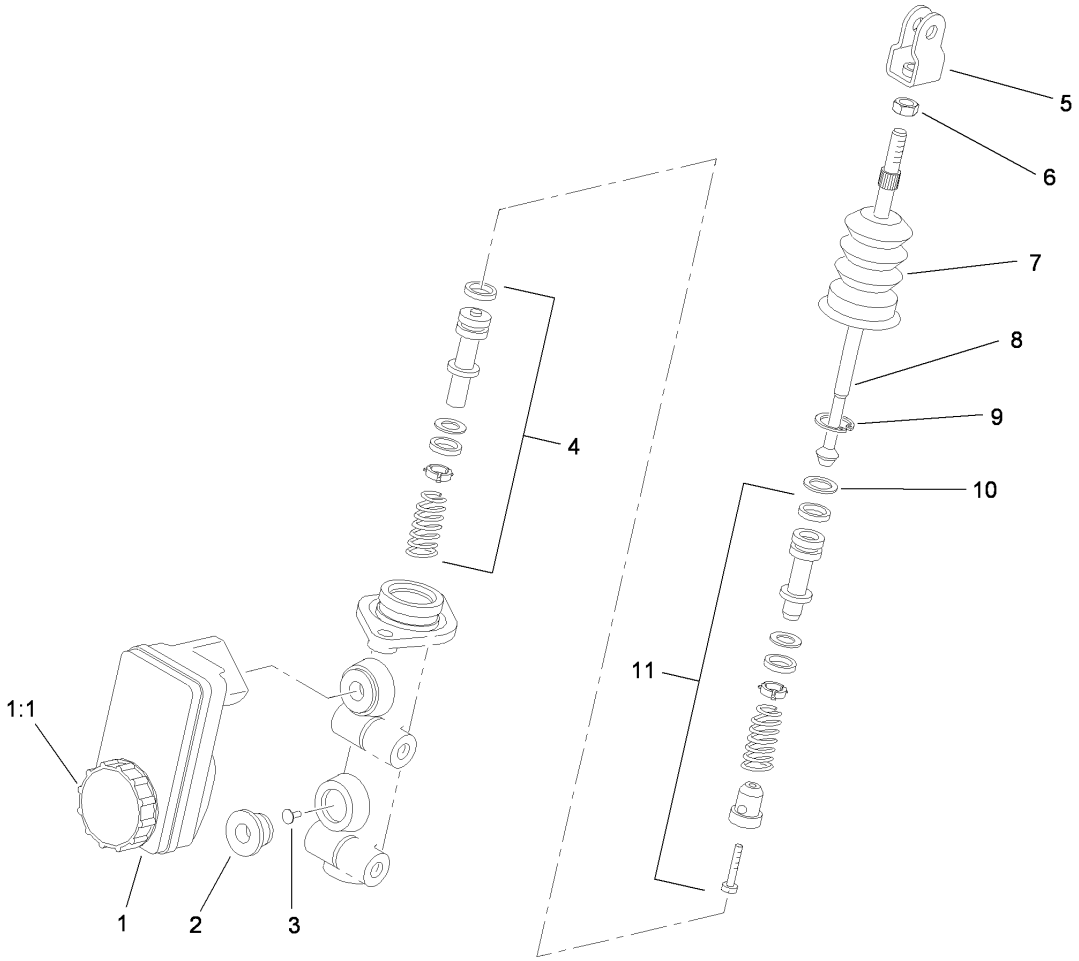

Master Cylinder Assembly No. 104-6782

Ref	Part No.	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

48 Short Block

1330 Repair Manual

1058 Operator Manual

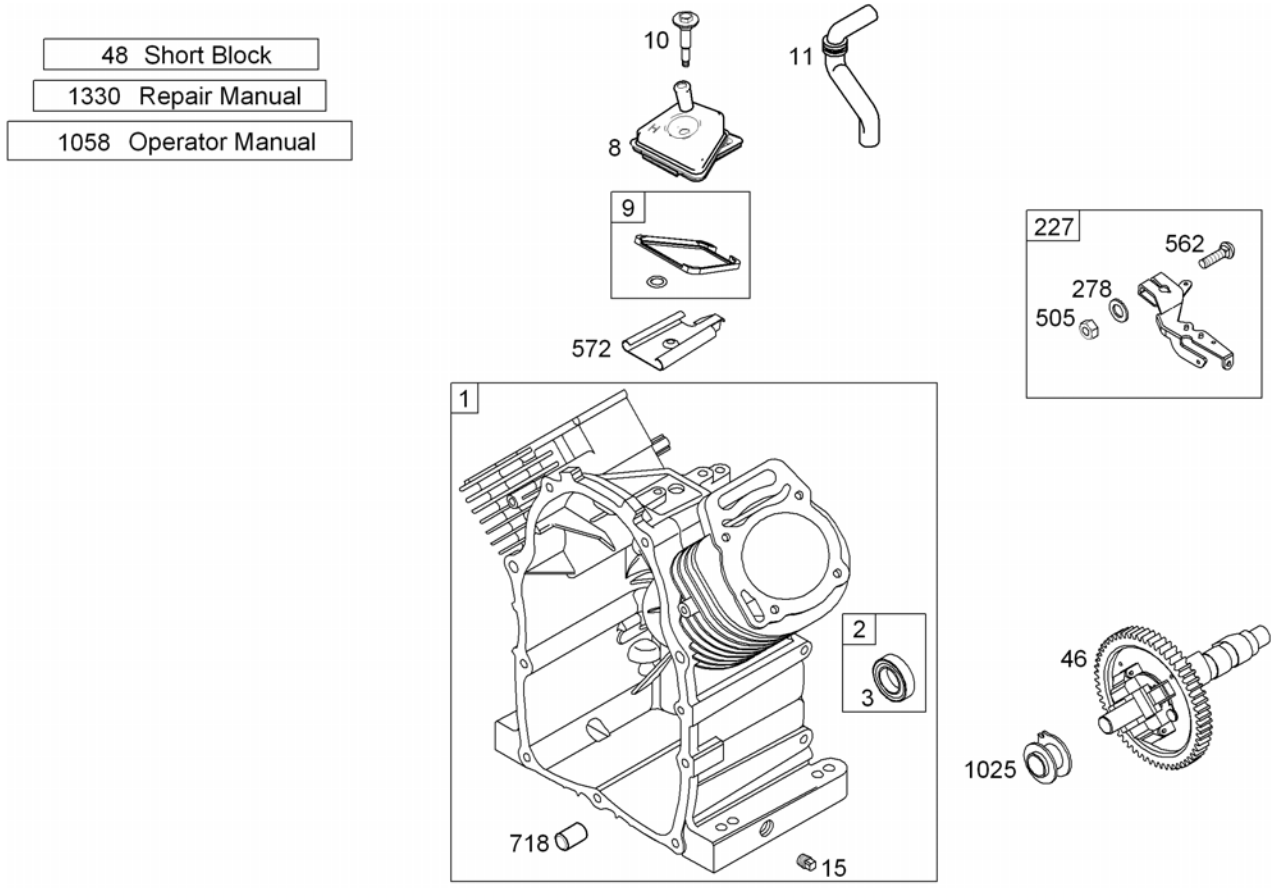

Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description
❸1	692178	1	Cylinder ASM
❸2	808534	1	Bushing And Seal ASM (Magneto Side)
❸❺3	805101S	1	Seal-Oil (Magneto Side)
❸8	808984	1	Breather ASM
❸❺9	809094	1	Gasket-Breather
❸10	690751	1	Screw (Breather ASM)
❸11	806038s	1	Tube-Breather
❸15	690946	1	Plug-Drain, Oil (Cylinder)
❸46	691557	1	Camshaft
❸48	494055	1	Block-Short
❸227	690236	1	Lever-Control, Governor
❸278	842122	1	Washer (Governor Control Lever)
❸505	690238	1	Nut (Governor Control Lever)
❸562	690239	1	Bolt (Governor Control Lever)
❸572	690686	1	Baffle-Breather
❸718	806469	1	Pin-Locating
❸1025	690689	1	Spool-Governor
❸1058	277106	1	Manual-Operator
❸1330	272144	1	Manual-Repair

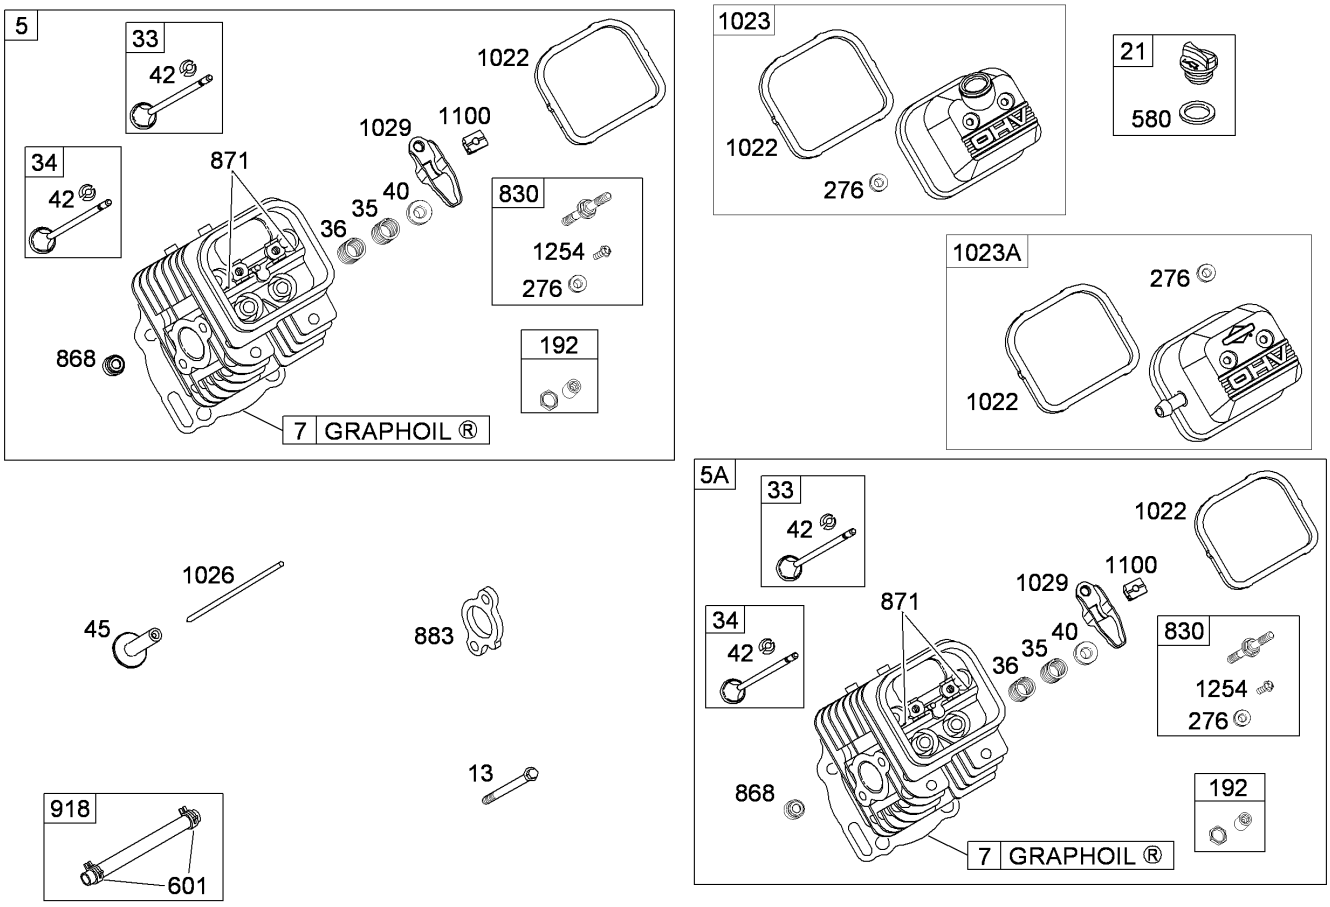

Assemblies include all parts shown in frames

Cylinder Head Assembly
Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description
❸5	809200	1	Head-Cylinder (Cylinder 1)
❸5A	809201	1	Head-Cylinder (Cylinder 2)
❸❺7 ❻	806085S	1	Gasket-Head, Cylinder
❸13	692059	1	Screw (Cylinder Head)
❸21	809500	1	Cap-Fill, Oil
❸33	807681	1	Valve-Exhaust
❸34	807680	1	Valve-Intake
❸35	692084	1	Spring-Valve (Exhaust)
❸36	692084	1	Spring-Valve (Exhaust)
❸40	692058	1	Retainer-Valve
❸42	807683	1	Keeper-Valve
❸45	843379	1	Tappet-Valve
❸192	807623	1	Adjuster-Arm, Rocker
❸276	807085	1	Washer-Sealing (Rocker Cover)
❸❻580	691312	1	Seal-O Ring (Oil Fill Cap)
❸601	691038	1	Clamp-Hose
❸830	809157	1	Stud-Arm, Rocker
❸❺868 ❻	691963	1	Seal-Valve
❸871	692057	1	Bushing-Guide, Valve
❸❺883 ❻	691613	1	Gasket-Exhaust
❸918	791880	1	Hose-Vacuum

Ref	Part No.	Qty.	Description
❸❺1022 ❻	806039S	1	Gasket-Cover, Rocker
❸1023	843749	1	Cover-Rocker
❸1023A	691558	1	Cover-Rocker (Cylinder 1)
❸1026	691836	1	Rod-Push (Intake)
❸1026	691758	1	Rod-Push (Exhaust)
❸1029	807323	1	Arm-Rocker
❸1100	791959	1	Pivot-Arm, Rocker
❸1254	807084	1	Screw (Rocker Cover Stud)

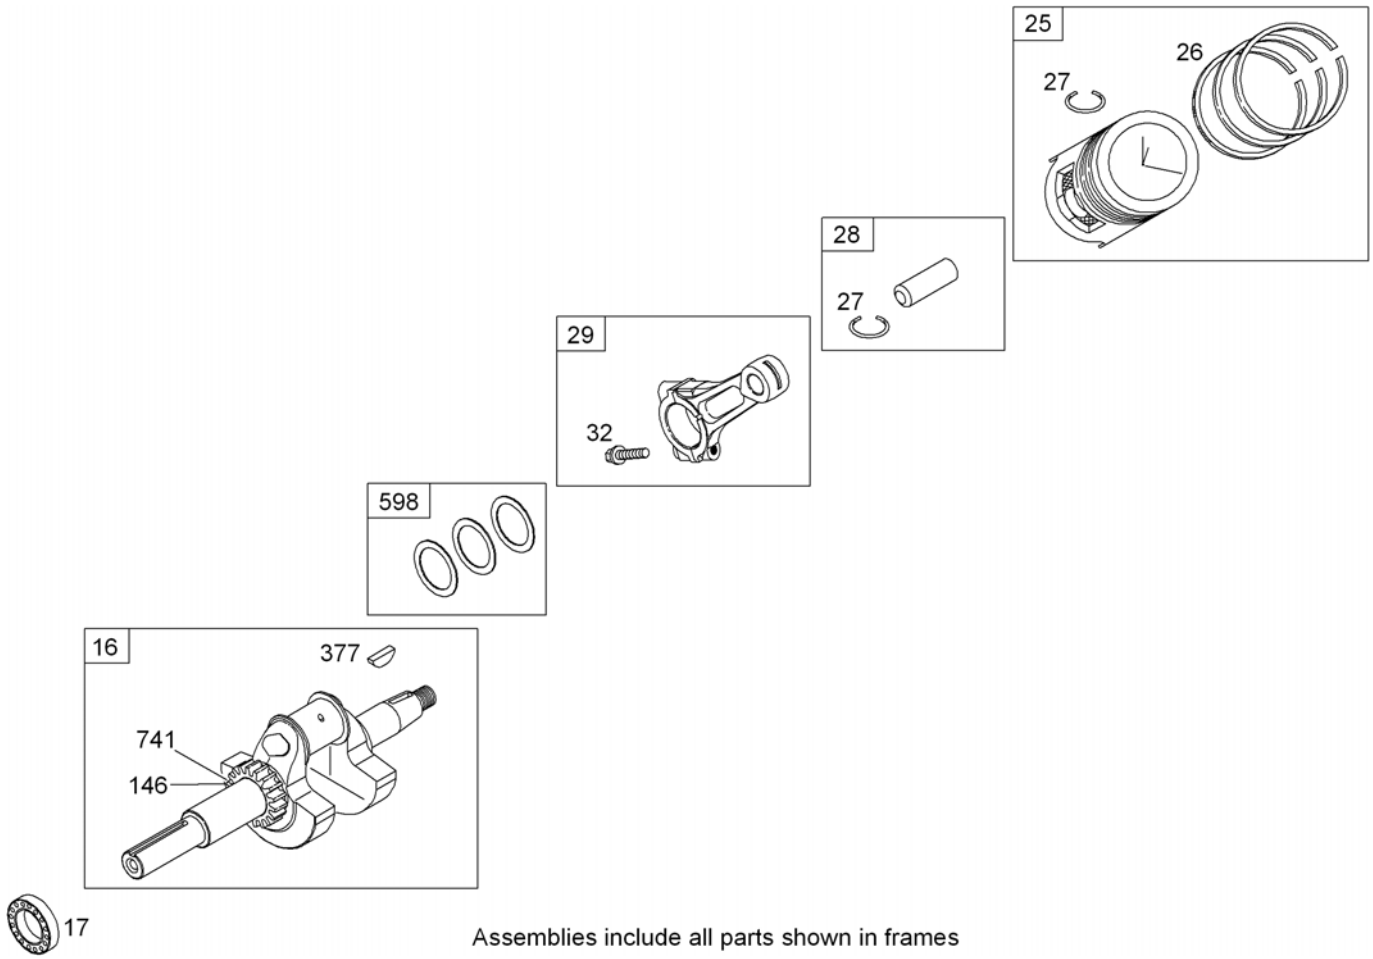

Assemblies include all parts shown in frames

Crankshaft and Piston/Ring Assembly
Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description
❸16	692163	1	Crankshaft
❸17	690752	1	Bearing-Ball
❸25	843952	1	Piston ASM (Standard)
❸25	843956	1	Piston ASM (.020 Oversize)
❸26	843953	1	Ring Set (Standard)
❸26	843957	1	Ring Set (.020 Oversize)
❸27	690683	1	Lock-Pin, Piston
❸28	690229	1	Pin-Piston (STD)
❸29	807900S	1	Rod-Connecting
❸32	690698	1	Screw (Connecting Rod)
❸146	691639	1	Key-Timing
❸377	808095	1	Key-Woodruff
❸598	807625	1	Shim-Play, End (Crankshaft Or Camshaft Bearing)
❸741	691530	1	Gear-Timing

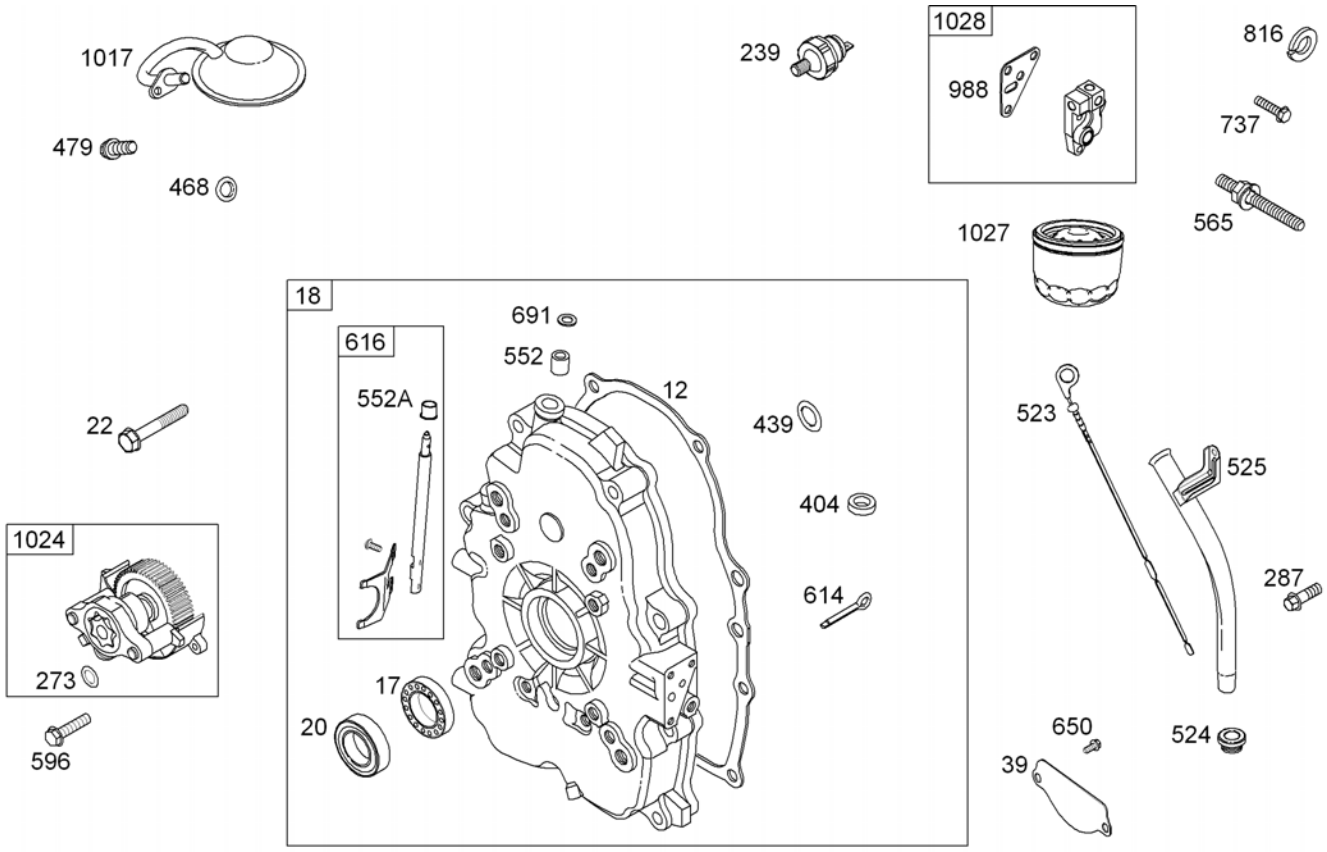

Assemblies include all parts shown in frames

Crankcase Cover/Sump Assembly
Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description
❸❺12	6843970	1	Gasket-Crankcase
❸17	690752	1	Bearing-Ball
❸18	808847	1	Cover-Crankcase
❸❺20	805049S	1	Seal-Oil (PTO Side)
❸22	807362	1	Screw (Crankcase/Cover/Sump)
❸39	690745	1	Deflector-Oil
❸239	690233	1	Switch-Pressure, Oil
❸❺273	690681	1	Seal-Oil (Oil Pump)
❸287	692062	1	Screw (Dipstick Tube)
❸404	690704	1	Washer (Governor Crank)
❸❺439	692154	1	Seal-O Ring (Crankcase/Cover/Sump)
❸❺468	690690	1	Seal-O Ring (Oil Pump Screen)
❸479	807084	1	Screw (Oil Pump Screen)
❸523	693175	1	Dipstick
❸❺524	693172	1	Seal-Tube, Dipstick
❸525	693174	1	Tube-Dipstick
❸552	690701	1	Bushing-Crank, Governor
❸552A	806686	1	Bushing-Crank, Governor
❸565	690682	1	Stud (Oil Filter Adapter)
❸596	691492	1	Screw (Oil Pump)
❸614	691550	1	Retainer-Shaft, Governor
❸616	806685	1	Crank-Governor
❸650	841233	1	Screw (Oil Deflector)

Ref	Part No.	Qty.	Description
❸❺691	690680	1	Seal-Shaft, Governor
❸737	690679	1	Screw (Oil Filter Adapter)
❸816	690706	1	Washer (Oil Filter Adapter)
❸❺988	692063	1	Gasket-Adapter, Oil Filter
❸1017	690900	1	Screen-Pump, Oil
❸1024	693185	1	Pump-Oil
❸1027	842921	1	Filter-Oil
❸1028	492687	1	Adapter-Filter, Oil

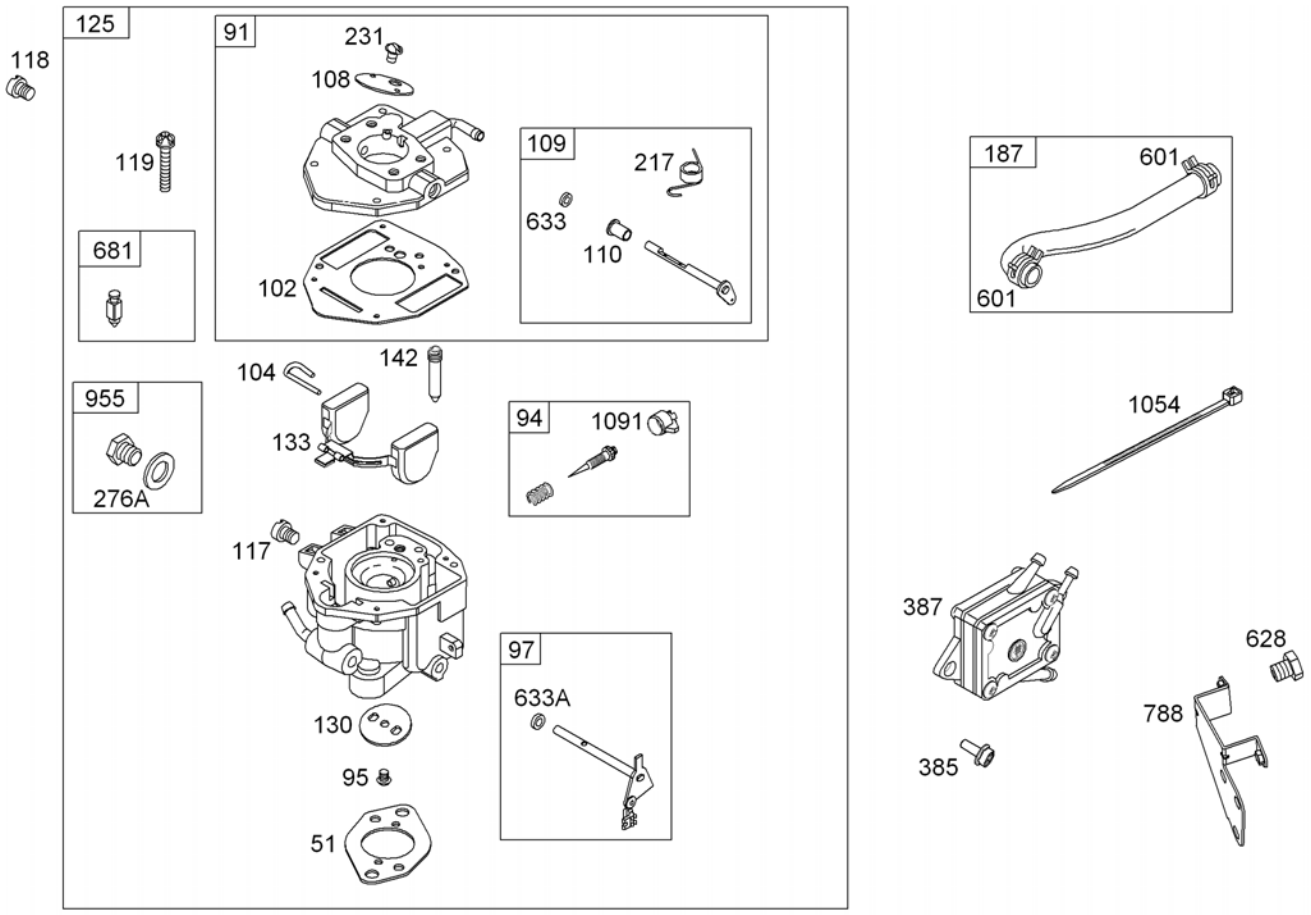

Assemblies include all parts shown in frames

Carburetor and Fuel Pump Assembly
Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description
❸❺51	691694	1	Gasket-Intake
❸91	843532	1	Body-Carburetor, Upper
❸❹94	842870	1	Idle Mixture Kit
❸95	690718	1	Screw (Throttle Valve)
❸97	841498	1	Shaft-Throttle
❸❹102	692077	1	Gasket-Body, Carburetor
❸❹104	690723	1	Pin-Hinge, Float
❸108	690719	1	Valve-Choke
❸109	808962	1	Shaft-Choke
❸❹110	806861	1	Washer (Choke Shaft)
❸117	842318	1	Jet-Main (Standard)
❸118	842836	1	Jet-Main (High Altitude)
❸119	842791	1	Screw (Upper To Lower Carburetor Body)
❸125	843130	1	Carburetor
❸130	690726	1	Valve-Throttle
❸133	806961	1	Float-Carburetor
❸❹142	842319	1	Nozzle-Carburetor
❸187	791801	1	Line-Fuel
❸217	806862	1	Spring-Return, Choke
❸231	690718	1	Screw (Choke Valve)
❸❹276A	693497	1	Washer-Sealing
❺❻			
❸385	693169	1	Screw (Fuel Pump)

Ref	Part No.	Qty.	Description
❸387	808969	1	Pump-Fuel
❸601	691038	1	Clamp-Hose
❸628	806660	1	Screw (Fuel Pump Bracket)
❸❹633	690722	1	Seal-Shaft, Choke Throttle
❸633A	806131	1	Seal-Shaft, Choke Throttle
❸❹681	808798	1	Valve-Needle, Float
❸788	691559	1	Bracket-Pump, Fuel
❸955	807723	1	Plug-Carburetor
❸1054	280275	1	Tie-Cable
❸❹1091	691516	1	Cap-Limiter

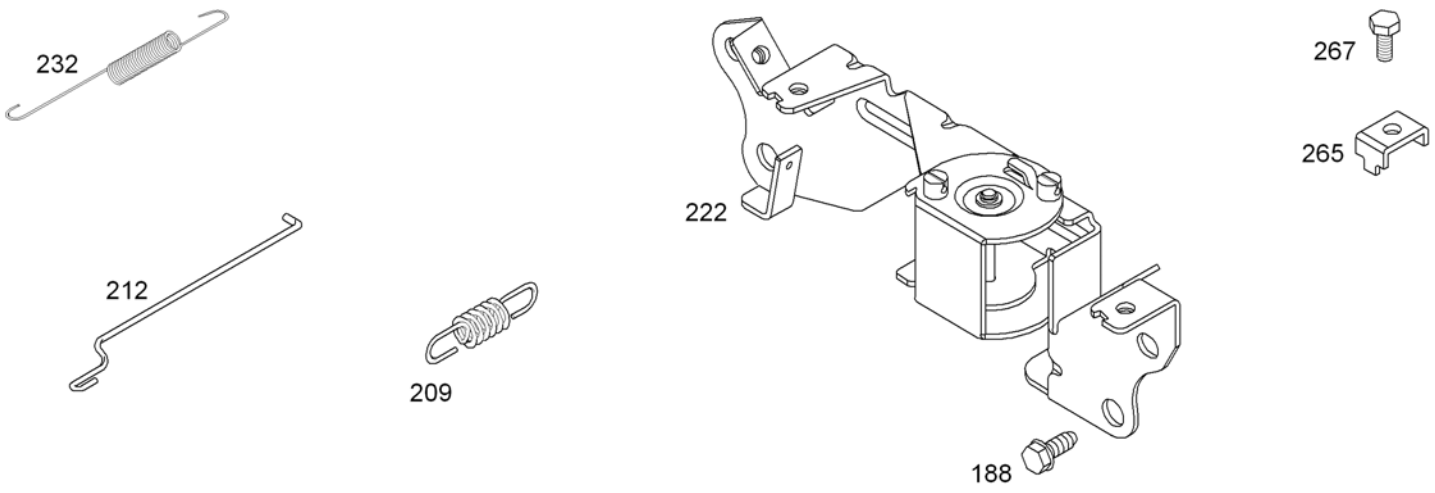

Governor Control Assembly
Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description
❸188	692056	1	Screw (Control Bracket)
❸209	691507	1	Spring-Governor (Brown)
❸212	690712	1	Link-Throttle
❸222	691570	1	Bracket-Control
❸232	692073	1	Spring-Link, Governor
❸265	691024	1	Clamp-Casing
❸267	841552	1	Screw (Casing Clamp)

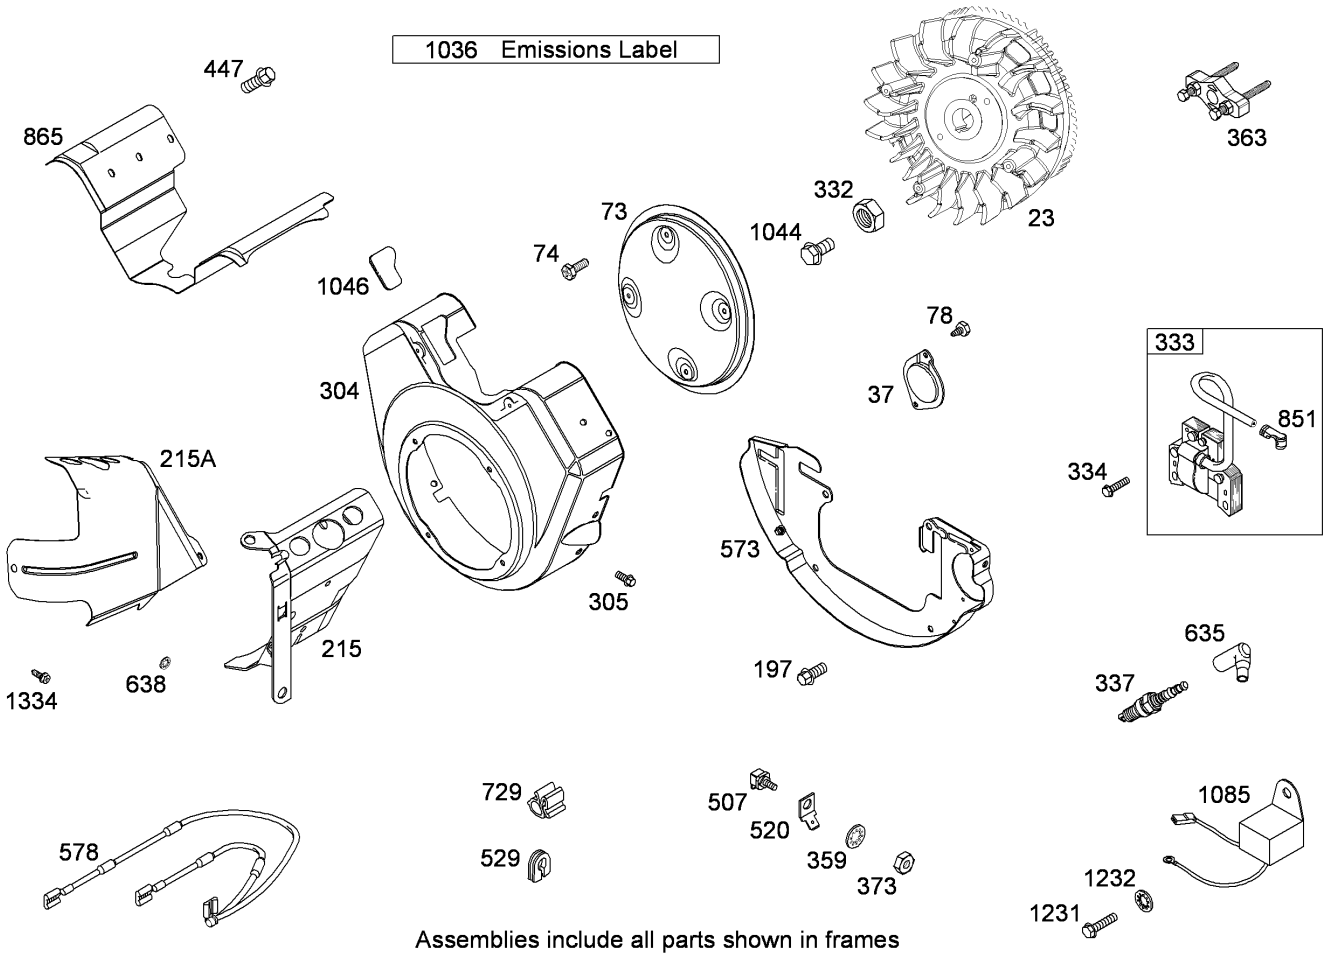

Assemblies include all parts shown in frames

Blower Housing, Flywheel and Air Guide Assembly
Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description
❸23	842683	1	Flywheel
❸37	841309	1	Guard-Flywheel
❸73	841440	1	Screen–Rotating
❸74	841441	1	Screw (Rotating Screen)
❸78	690688	1	Screw (Flywheel Guard)
❸197	807163	1	Screw (Back Plate)
❸215	841183	1	Guide-Air (Cylinder 1)
❸215A	841182	1	Guide-Air (Cylinder 2)
❸304	842681	1	Housing-Blower
❸305	841233	1	Screw (Cylinder Head Cover)
❸332	690887	1	Nut (Flywheel)
❸333	492341	1	Armature-Magneto
❸334	692066	1	Screw (Magneto Armature)
❸337	496018S	1	Spark Plug
❸359	691077	1	Washer (Ignition Module)
❸363	19203	1	Puller-Flywheel
❸373	691612	1	Nut (Ground Terminal)
❸447	841233	1	Screw (Cylinder Head Cover)
❸507	691972	1	Insulator
❸520	691084	1	Terminal-Ground
❸529	690744	1	Grommet (Ignition)
❸573	841310	1	Plate–Back
❸578	692319	1	Wire ASM
❸635	692076	1	Boot-Spark Plug

Ref	Part No.	Qty.	Description
❸638	691551	1	Washer (Cylinder Head Cover)
❸729	690586	1	Clip-Wire
❸851	493880s	1	Terminal-Spark Plug
❸865	843768	1	Cover-Guide, Air
❷❸1036		1	Label-Emissions
❸1044	692056	1	Screw (Flywheel)
❸1046	843068	1	Plug-Housing, Blower
❸1085	809093	1	Module-Ignition
❸1231	692067	1	Screw (Ignition Module)
❸1232	691077	1	Washer (Ignition Module)
❸1334	841233	1	Screw (Cylinder Head Cover)

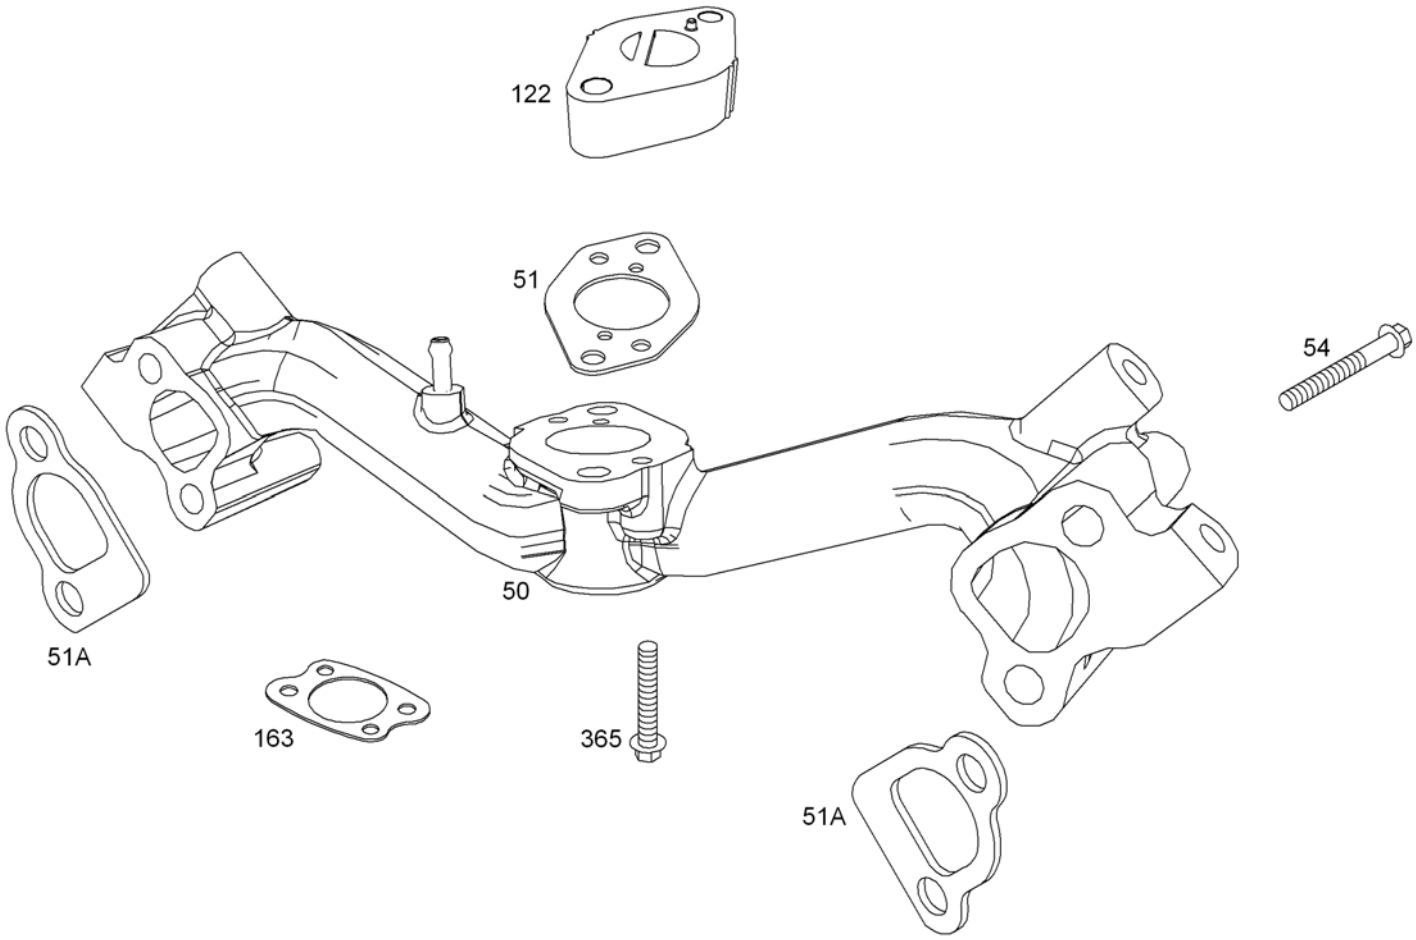

Intake Manifold Assembly
Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description
❸50	844034	1	Manifold-Intake
❸❺51	691694	1	Gasket-Intake (Manifold To Carburetor)
❸❺51A ❻	692035	1	Gasket-Intake
❸54	690676	1	Screw (Intake Manifold)
❸122	690691	1	Spacer-Carburetor
❸❹163	692081	1	Gasket-Cleaner, Air
❸365	690711	1	Screw (Carburetor)

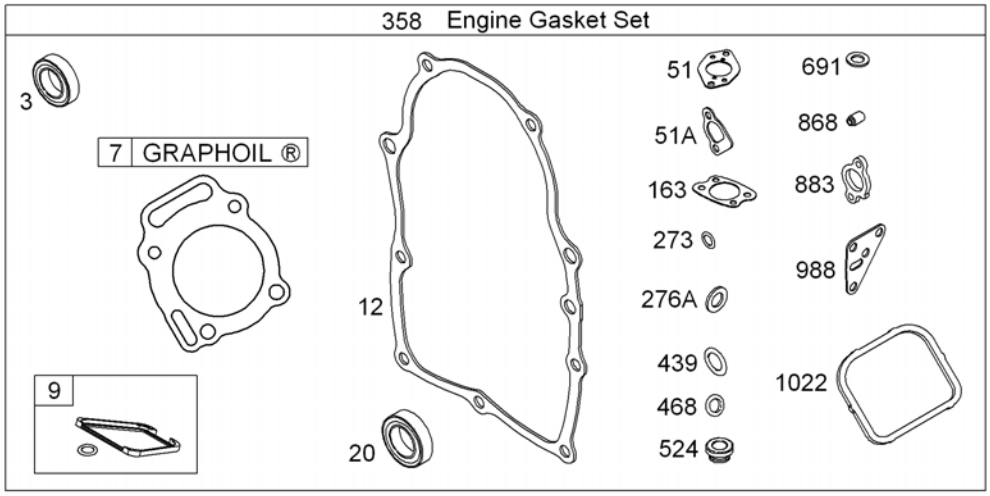

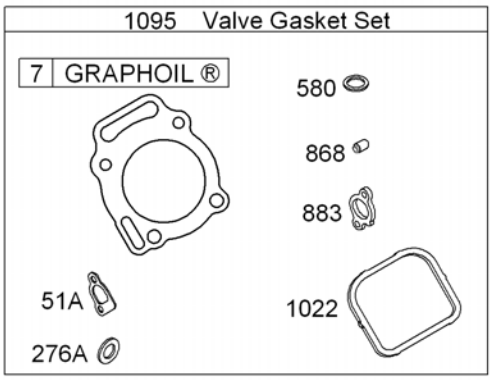

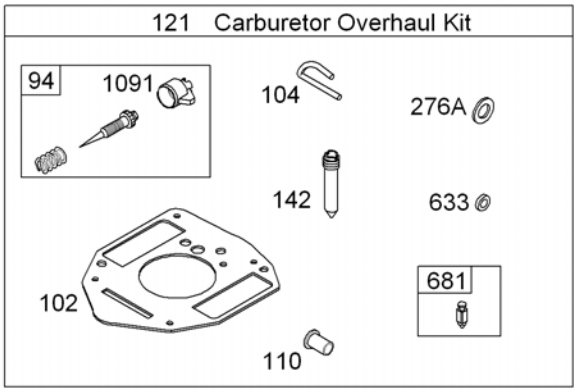

Assemblies include all parts shown in frames

Engine, Valve Gasket and Carburetor Overhaul Kits
Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description
❸❺3	805101S	1	Seal-Oil (Magneto Side)
❸❺7 ❻	806085S	1	Gasket-Head, Cylinder
❸❺9	809094	1	Gasket-Breather
❸❺12	843970	1	Gasket-Crankcase
❸❺20	805049S	1	Seal-Oil (PTO Side)
❸❺51	691694	1	Gasket-Intake (Manifold To Carburetor)
❸❺51A ❻	692035	1	Gasket-Intake
❸❹94	842870	1	Idle Mixture Kit
❸❹102	692077	1	Gasket-Body, Carburetor
❸❹104	690723	1	Pin-Hinge, Float
❸❹110	806861	1	Washer (Choke Shaft)
❸121	842877	1	Carburetor Overhaul Kit
❸❹142	842319	1	Nozzle-Carburetor
❸❹163	692081	1	Gasket-Cleaner, Air
❸❺273	690681	1	Seal-O Ring (Oil Pump)
❸❹276A ❺❻	693497	1	Washer-Sealing
❸358	842722	1	Engine Gasket Set
❸❺439	692154	1	Seal-O Ring (Crankcase/Cover/Sump)
❸❺468	690690	1	Seal-O Ring (Oil Pump Screen)
❸❺524	693172	1	Seal-Tube, Dipstick

Ref	Part No.	Qty.	Description
❸❻580	691312	1	Seal-O Ring (Oil Fill Cap)
❸❹633	690722	1	Seal-Shaft, Choke Throttle
❸❹681	808798	1	Valve-Needle, Float
❸❺691	690680	1	Seal-Shaft, Governor
❸❺868 ❻	691963	1	Seal-Valve
❸❺883 ❻	691613	1	Gasket-Exhaust
❸❺988	692063	1	Gasket-Adapter, Oil Filter
❸❺1022 ❻	806039S	1	Gasket-Cover, Rocker
❸❹1091	691516	1	Cap-Limiter
❸1095	842723	1	Valve Gasket Set

Attachments and Accessories

For 07277TC - Workman 2110 Utility Vehicle

Product Name	Model/Part
Stand Alone Windshield Kit	07221
Electric Bed Lift Kit	07262
Rear Lift Kit	07274
Roll-Over Protection System	07276
Receiver Hitch Kit	07278
Heavy-Duty Bumper Kit	07282
Stake Side Kit	07290
Cab	07291
Snow Plow-Mid Duty	07292
Folding Windshield Kit	07293
Windshield Kit	07294
Heavy-Duty Brushguard and Bumper Kit	07296
Canopy Kit	07297
Portable Refreshment Center	07298
Clutch Guard ASM	104-6408-03
Horn Kit	104-6663
Brake and Taillights (Rear lights, side reflectors)	104-6697
Signal Lights (Front marker lights / turn signal control)	104-6953
Key Start Kit	107-0330
Vinyl Enclosure	79979
Electric Harness Kit	99-7924

NOTES

NOTES

NOTES

TORO®