Form Number 3362-505 Rev A

Commercial Walk-Behind Mower

Floating Deck T-Bar Gear with 32in Cutting Unit

Model No. 30092 - 290001001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Fuel Tank and Idler Bracket Assembly	3
Transmission and Idler Pulley Assembly	4
Brake, Wheel Pulley and Wheel Assembly	5
Handle and Control Panel Assembly	6
Engine Assembly	7
Carrier Assembly	8
Deck Assembly	9
Spindle and Blade Assembly	10
Decal and Mulcher Cover Assembly	11
Cylinder and Crankcase Assembly Kawasaki FH430V-BS35	12
Piston and Crankshaft Assembly Kawasaki FH430V-BS35	13
Valve and Camshaft Assembly Kawasaki FH430V-BS35	14
Lubrication Equipment Assembly Kawasaki FH430V-BS35	15
Cooling Equipment Assembly Kawasaki FH430V-BS35	16
Cooling Equipment Assembly Kawasaki FH430V-BS35	17
Control Equipment Assembly Kawasaki FH430V-BS35	18
Carburetor Assembly Kawasaki FH430V-BS35	19
Air Filter and Muffler Assembly Kawasaki FH430V-BS35	20
Fuel Tank and Valve Assembly Kawasaki FH430V-BS35	21
Starter Assembly Kawasaki FH430V-BS35	22
Label Assembly Kawasaki FH430V-BS35	23
Attachments and Accessories List	24

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
CCW. . . . . counter clock wise
CW. . . . . clockwise
DEG. . . . . degrees
ECM. . . . . electronic control module
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes

❶ Not serviced separately

❷ Obtain parts from Peerless Transmissions (model 700-070A)

❸ Obtain parts from www.kawpowerepc.com

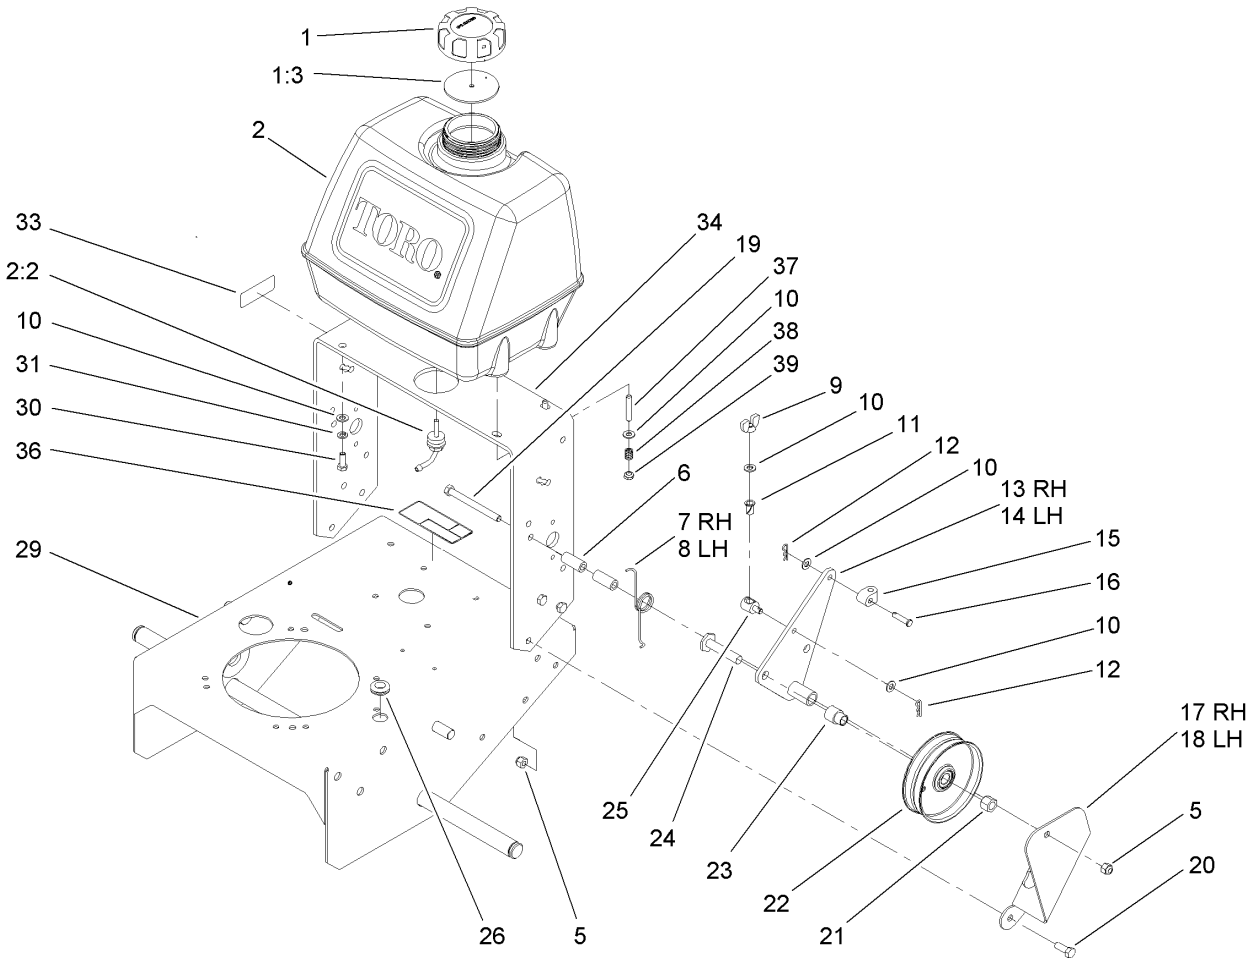

Fuel Tank and Idler Bracket Assembly

Ref	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
5	3296-39	8	Nut-Lock, NI
6	74-0040	4	Spacer-Pivot, Idler
7	51-4370	1	Spring-Torsion, RH
8	51-4380	1	Spring-Torsion, LH
9	32103-25	2	Nut-Wing
10	3256-23	12	Washer-Flat
11	52-2890	2	Bushing-Nylon
12	3290-307	4	Pin-Hair
13	108-2741-01	1	RH Idler Arm ASM
14	108-2740-01	1	LH Idler Arm ASM
15	74-0521	2	Fitting-Rod
16	283-6	2	Pin-Clevis
17	67-6370-01	1	Bracket-Support, RH
18	67-6380-01	1	Bracket-Support, LH
19	323-16	2	Screw-HH
20	323-6	6	Screw-HH
21	3296-23	2	Nut-Lock, NI
22	95-2800	2	Pulley-Idler
23	95-2801	2	Spacer-Pulley
24	51-4450	2	Screw-Leveler

Ref	Part No.	Qty.	Description
25	68-9690	2	Fitting-Rod
26	237-124	1	Grommet
29	105-4670-01	1	Frame ASM
30	322-4	4	Screw-HH
31	3253-4	2	Washer-Lock
33	95-2814	1	Decal-Shut Off, Fuel
34	106-0649-01	1	Frame-Upper
36	98-0776	1	Decal-Caution
37	104-8121	2	Stud-Threaded
38	1-633349	2	Spring-Tank, Fuel
39	3296-47	2	Nut-Lock, NI

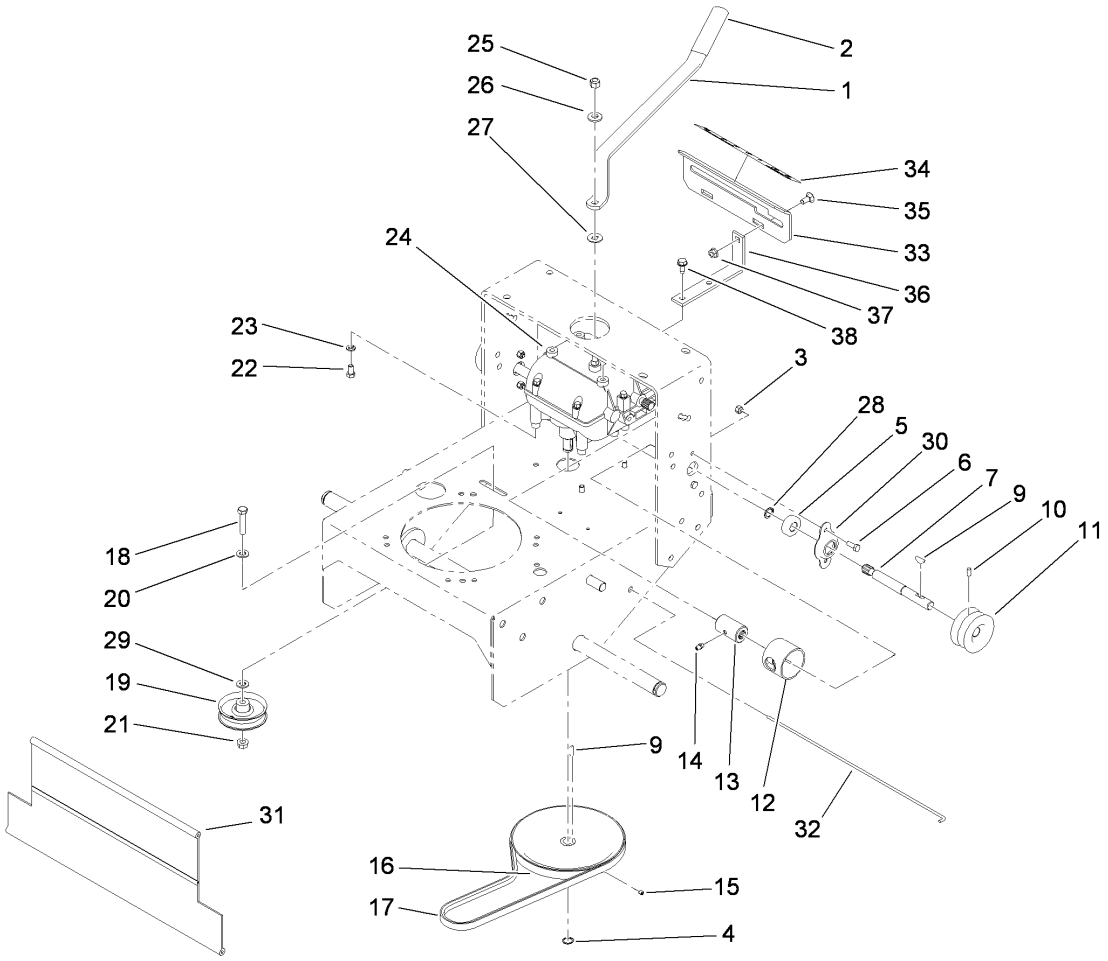

Transmission and Idler Pulley Assembly

Ref	Part No.	Qty.	Description
1	98-3274-03	1	Lever-Shift
2	47-1970	1	Grip
3	3296-42	4	Nut-Lock, NI
4	32120-64	1	Ring-Snap, External
5	1-323252	2	Bearing-Shaft
6	321-4	4	Screw-HH
7	104-1102	2	Shaft-Output
9	3257-5	3	Key-Woodruff
10	3245-9	2	Screw-Set
11	105-2698	2	Pulley-Transmission
12	51-4220	2	Guard-Coupler
13	1-323680	2	Coupler
14	302-5	2	Fitting-Grease
15	3245-1	1	Screw-Set, HSH
16	51-4190	1	Pulley-Driven
17	26-9671	1	Belt V
18	323-9	1	Screw-HH
19	51-4810	1	Pulley-Idler
20	3256-24	1	Washer-Flat
21	32128-21	1	Nut-HF
22	322-2	4	Screw-HH
23	3253-4	4	Washer-Lock
❷24	1-323500	1	Transmission
25	3296-6	1	Nut-Lock

Ref	Part No.	Qty.	Description
26	98-5975	1	Washer-Belleville
27	1-323379	1	Washer
28	32151-62	2	Ring-Retaining
29	3256-24	1	Washer-Flat
30	1-323254	2	Flange-Output
31	95-1526	1	Shield-Trailing
32	95-1529	1	Rod-Shield
33	1-323387-03	1	Plate-Shift
34	98-3256	1	Decal-Speed, Ground
35	3230-1	2	Bolt-CARR
36	1-323389-03	2	Bracket-Plate, Shift
37	32128-20	2	Nut-HF
38	9264964	4	Screw-HWH, Thread Cut

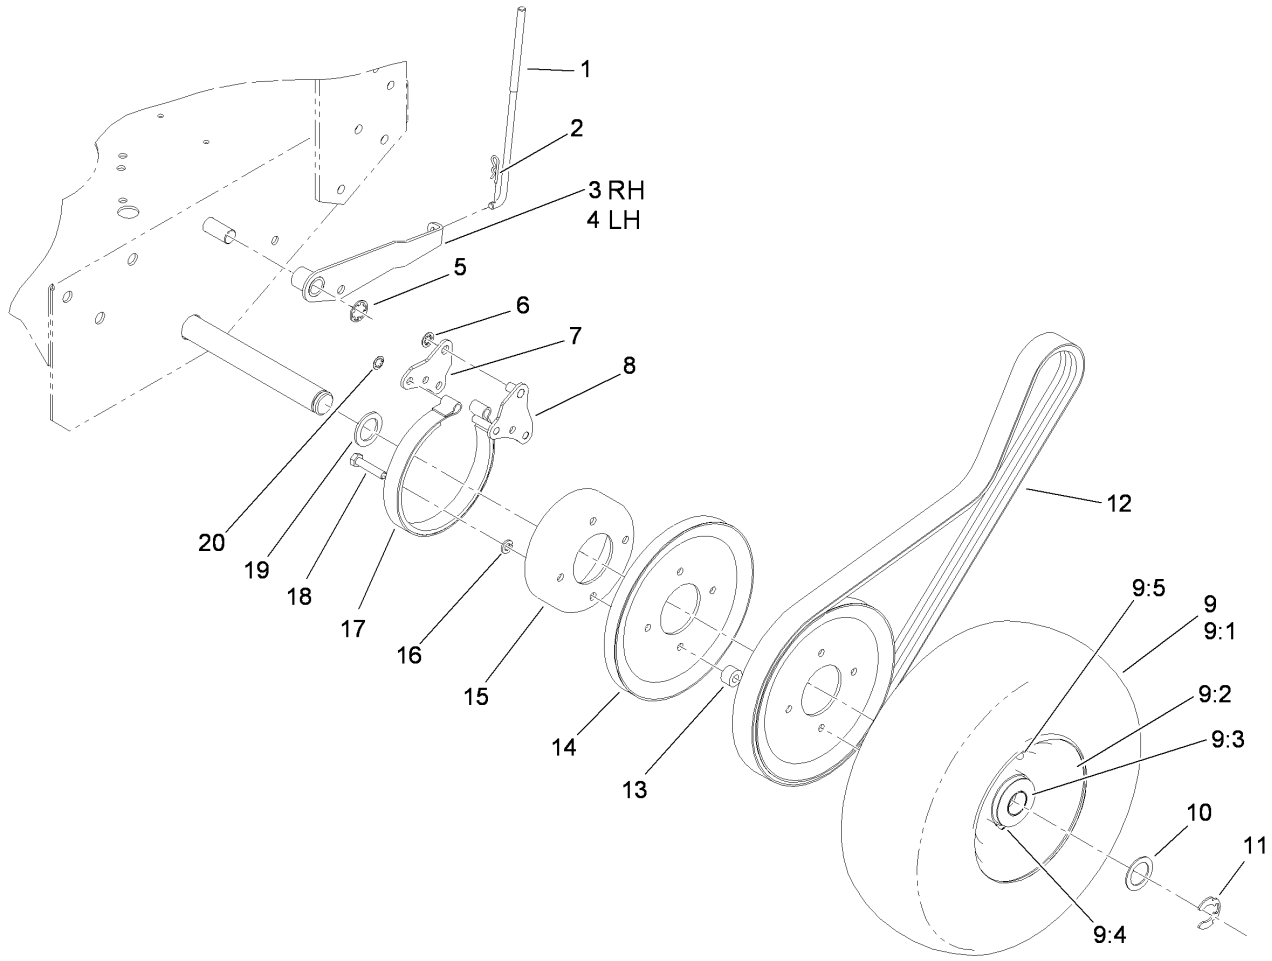

Brake, Wheel Pulley and Wheel Assembly

Ref	Part No.	Qty.	Description
1	51-4580	2	Rod-Brake
2	3290-307	2	Pin-Hair
3	67-6400-01	1	Arm-Brake, RH
4	67-6420-01	1	Arm-Brake, LH
5	32151-40	2	Ring-Retaining
6	32151-56	2	Ring-Retaining, External
7	51-4660-01	2	Plate-Link, Brake
8	51-4650-01	2	Link-Brake
9	93-1163	2	Wheel And Tire ASM
9:1	231-94	1	Tire-Front
9:2	93-1181	1	Wheel ASM
9:3	92-1746	2	Bearing-Ball
9:4	302-57	1	Fitting-Grease
9:5	232-27	1	Stem-Valve
10	10-8110	8	Washer-Thrust
11	32151-91	2	Ring-Retaining
12	51-4291	2	V-Belt
13	51-4170	8	Spacer-Pulley
14	51-4160-03	4	Pulley-Wheel
15	51-4180-03	2	Drum-Brake
16	3253-4	8	Washer-Lock
17	51-4700	2	Band-Brake
18	322-7	8	Screw-HH
19	51-4230	2	Washer-Wheel

Ref	Part No.	Qty.	Description
20	32151-72	4	Ring-Retaining

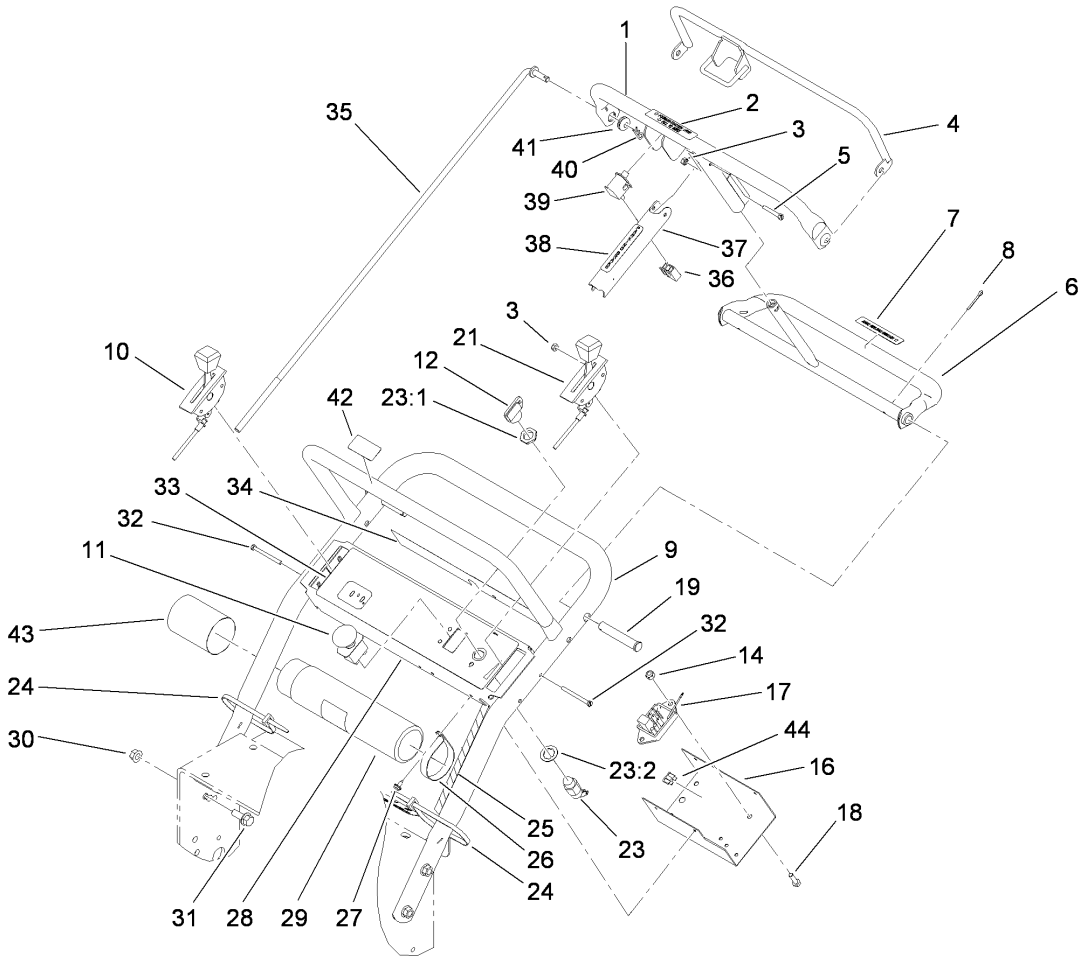

Handle and Control Panel Assembly

Ref	Part No.	Qty.	Description
1	82-7690-03	1	Bar-Control
2	82-2290	1	Decal
3	3296-2	5	Nut-Lock, NI
4	82-7680-03	1	Bail ASM
5	32105-1	1	Screw-SHH
6	106-5477-03	1	Control Pivot ASM
7	82-2280	1	Decal
8	3272-11	2	Pin-Cotter
9	105-3158-03	1	Upper Handle ASM
10	112-8712	1	Cable-Choke
11	104-8140	1	Switch-PTO
12	63-8360	2	Key-Ignition
14	3296-42	1	Nut-Lock, NI
16	93-1187-03	1	Panel-Bottom
17	104-8141	1	Module-Delay
18	321-2	1	Screw-HH
19	283-55	2	Pin-Clevis
21	112-8711	1	Cable-Throttle
23	29-5560	1	Switch-On / Off
23:1	218-461	1	Nut-HH
23:2	3254-5	1	Washer-Tooth
24	3290-378	2	Tie-Cable
25	104-8137	1	Harness-Wire
26	2412-120	2	R-Clamp

Ref	Part No.	Qty.	Description
27	32104-76	4	Screw
28	110-4982-03	1	Panel-Control
29	104-7050	1	Tube-Manual
30	32128-21	4	Nut-HF
31	3234-11	4	Screw-HHF
32	32105-14	4	Screw-SHH
33	110-4971	1	Decal-Control Panel
34	105-0884	1	Decal-Danger
35	82-7632	2	Rod-Control
36	218-595	1	Connector-Body
37	51-4850-03	1	Lever-Brake, Parking
38	52-2010	1	Decal-Lever, Parking
39	82-2190	1	Switch-Bail
40	3290-307	2	Pin-Hair
41	237-141	2	Grommet-Rubber
42	98-4387	1	Decal-Protection, Ear
43	104-7048	1	Cap-Housing
44	114241	1	Fuse-7.5 Amp

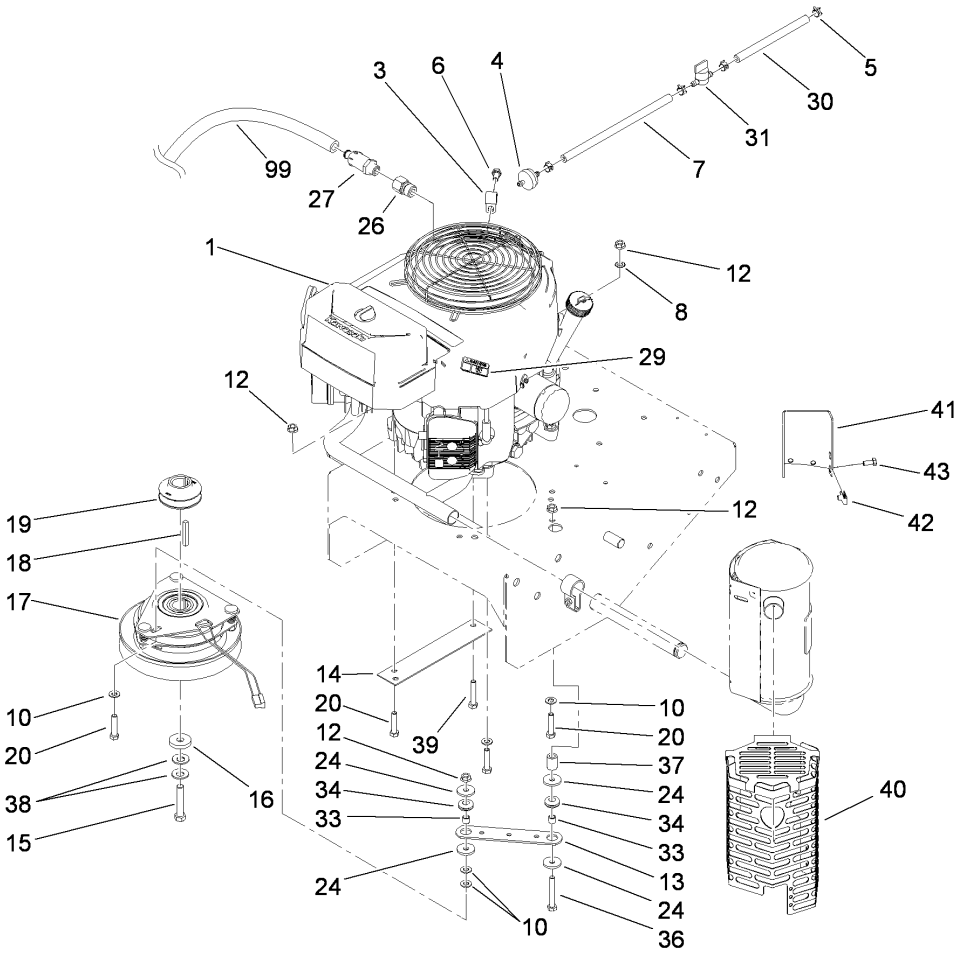

Engine Assembly

Ref	Part No.	Qty.	Description
❶❸1		1	Engine-Kawasaki, FH430V-Bs35
3	2412-87	1	Clamp-Cable
4	56-6360	1	Filter-Fuel
5	2412-98	4	Clamp
6	33114-016	1	Screw-HH
7	110-4894	1	Hose-Fuel
8	3255-8	1	Washer-Lock
10	3256-23	5	Washer-Flat
12	32128-20	6	Nut-HF
13	1-633543-03	1	Strap-Clutch, Brake
14	94-5847-01	1	Cover-Pulley
15	3212-9	1	Screw-HH
16	107-4136	1	Washer
17	105-2635	1	Clutch / Brake
18	608006	1	Key-Square
19	107-4112	1	Pulley-Drive
20	322-7	4	Screw-HH
24	1-613235	4	Washer
26	103-1966	1	Adapter
27	92-6877	1	Valve-Drain, Oil
29	106-0699	1	Decal-Warning
30	107-0588	1	Hose-Fuel
31	1-603770	1	Valve-Fuel
33	1-633545	2	Spacer

Ref	Part No.	Qty.	Description
34	1-633630	2	Grommet-Brake
36	322-11	1	Screw-HH
37	104-6373	1	Tube-Retainer
38	1-603610	2	Washer-Spring
39	322-9	1	Screw-HH
40	115-4150-03	1	Muffler Shield ASM
41	115-4154-03	1	Bracket-Muffler
42	94-2413	4	U-Nut
43	322-3	4	Screw-HH
99	103-1964	1	Hose-Drain, Oil

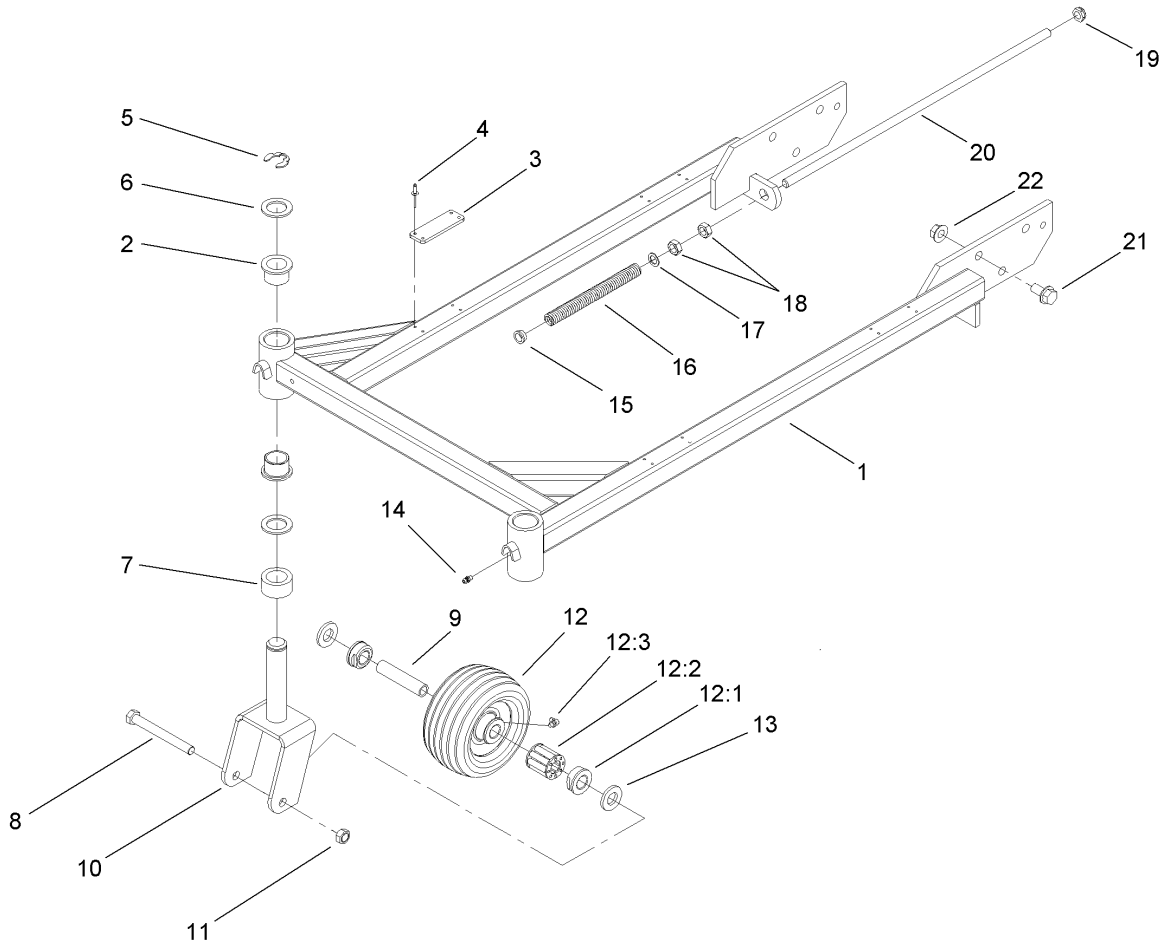

Carrier Assembly

Ref	Part No.	Qty.	Description
1	74-0080	1	Carrier Frame ASM
2	94-1291	4	Bushing
3	74-0330	4	Pad-Rubber
4	3269-24	16	Rivet
5	32151-91	2	Ring-Retaining
6	3-6781	4	Washer-Thrust
7	93-1166	2	Spacer-Castor
8	325-18	2	Screw-HH
9	67-6220	2	Spanner
10	93-1164-01	2	Fork-Caster ASM
11	32153-5	2	Nut-Lock, Side
12	63-8400	2	Caster Wheel ASM
12:1	62-5580	2	Bearing-Outside
12:2	63-8580	1	Bearing-Roller
12:3	302-40	1	Fitting-Grease
13	67-6570	4	Spacer-Wheel
14	302-5	2	Fitting-Grease
15	256-156	2	Bushing-Flange
16	74-0290	2	Spring
17	41-8440	2	Washer
18	3218-5	4	Nut-Jam
19	74-0310	2	Shaft-Adjusting
20	3296-45	2	Nut-Lock, NI
21	3234-6	6	Screw-HHF

Ref	Part No.	Qty.	Description
22	32128-23	6	Nut-HF

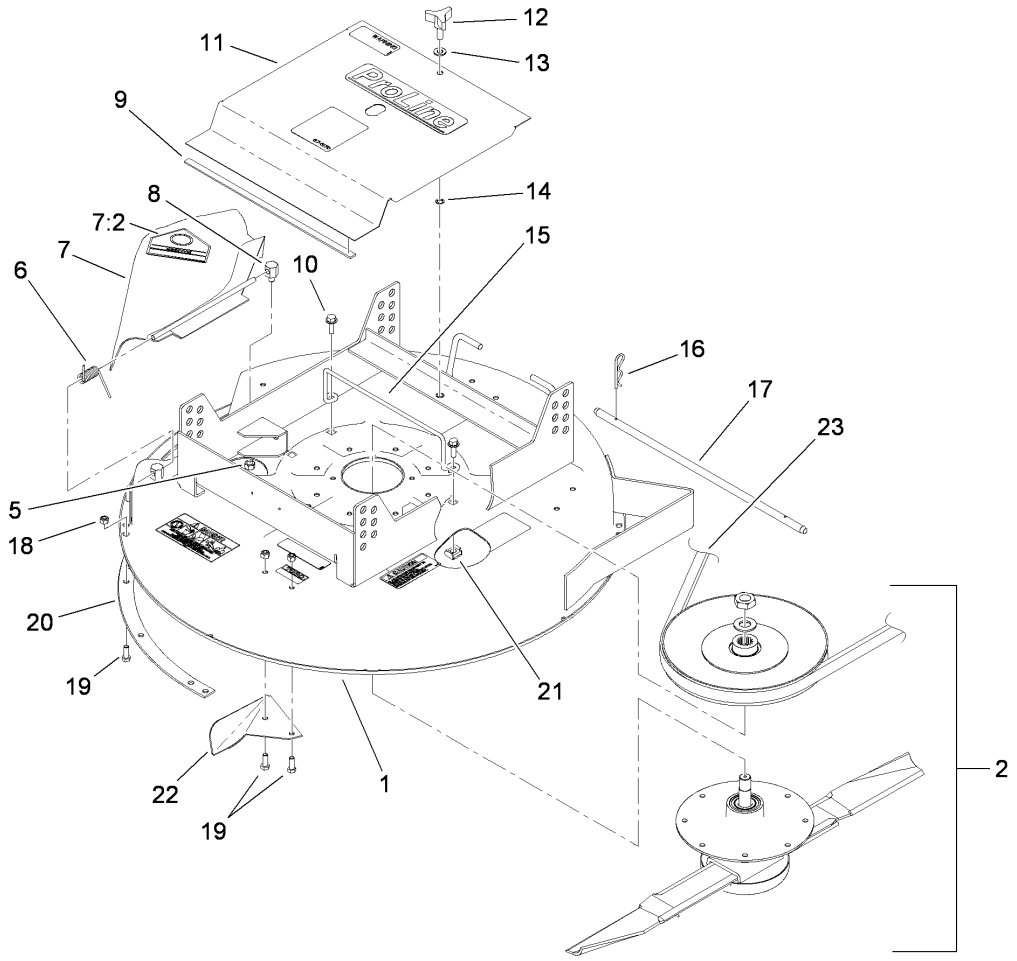

Deck Assembly

Ref	Part No.	Qty.	Description
1	14-5079	1	32 Inch Deck ASM W/ Decals
❶2		1	Spindle ASM
5	32153-2	1	Nut-Lock, Side
6	28-8010	1	Spring
7	44-5930	1	Deflector ASM
7:2	54-9220	1	Decal-Danger
8	28-7350	1	Post-Pivot
9	67-6180	1	Strip-Magnetic
10	3234-29	2	Screw-HHF
11	67-6160-01	1	Cover
12	104-8587	1	Knob
13	3256-24	1	Washer-Flat
14	32151-72	1	Ring-Retaining
15	74-0570	1	Guide-Belt
16	3290-355	4	Pin-Hair
17	67-6140	2	Rod-Support
18	3296-29	24	Nut-Lock, NI
19	322-4	24	Screw-HH
20	92-5419-03	4	Ring-Recycler
21	3290-496	2	Nut-Retainer
22	80-2630-03	4	Kicker
23	67-6920	1	V-Belt

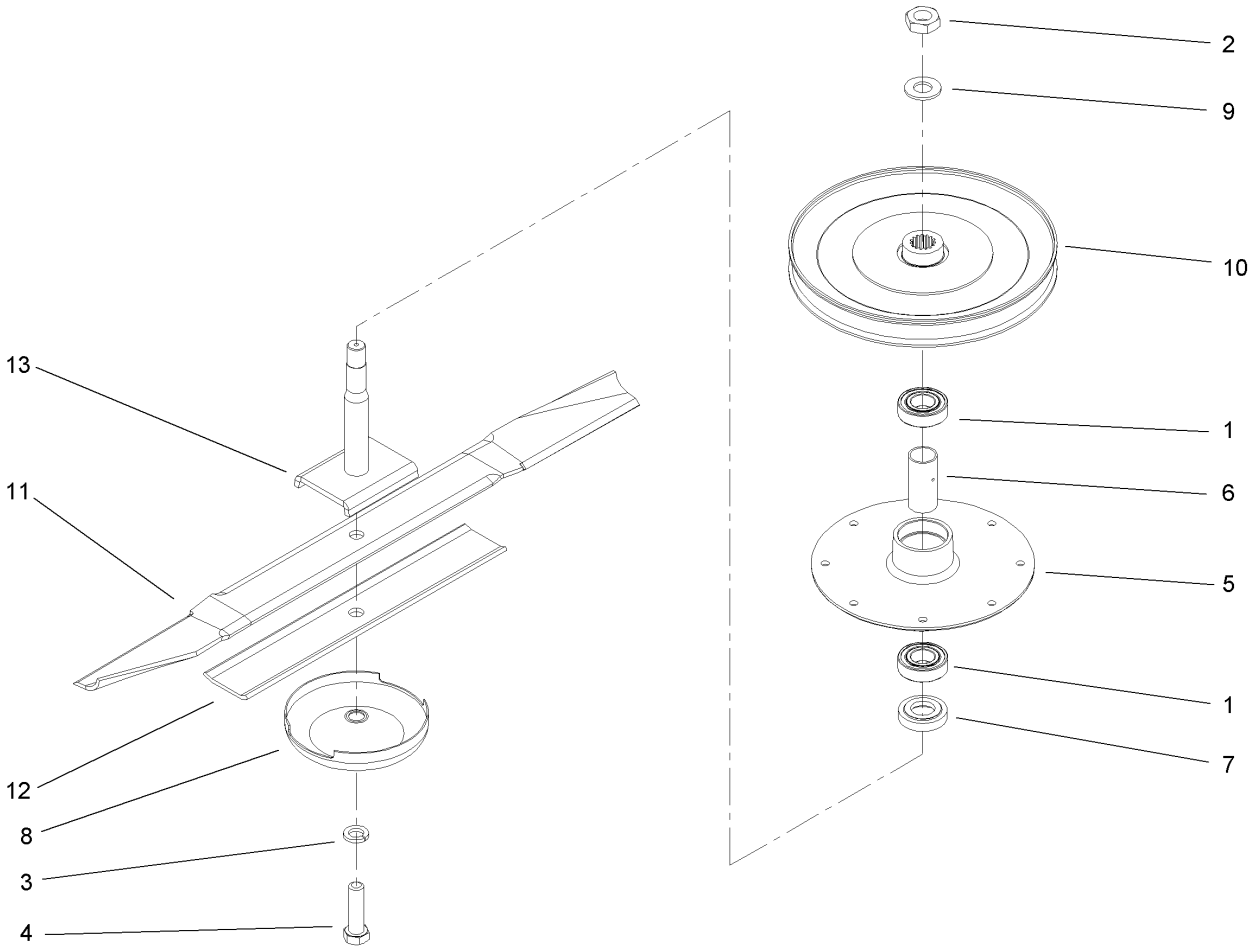

Spindle and Blade Assembly

Ref	Part No.	Qty.	Description
1	104-6325	2	Bearing-Ball
2	32146-20	1	Nut-Jam
3	3253-23	1	Washer-Lock/Sp
4	51-4060	1	Screw-Blade
5	67-6060	1	Housing-Spindle
6	67-6070	1	Spacer-Bearing
7	67-6080	1	Spacer
8	92-6313	1	Cup-Scalp, Anti
9	106-0776	1	Washer-Pinion
10	74-0580	1	Pulley ASM
11	80-4430	1	Blade-Recycler
12	82-4750-03	1	Spacer-Blade
13	105-4607-03	1	Spindle Shaft ASM

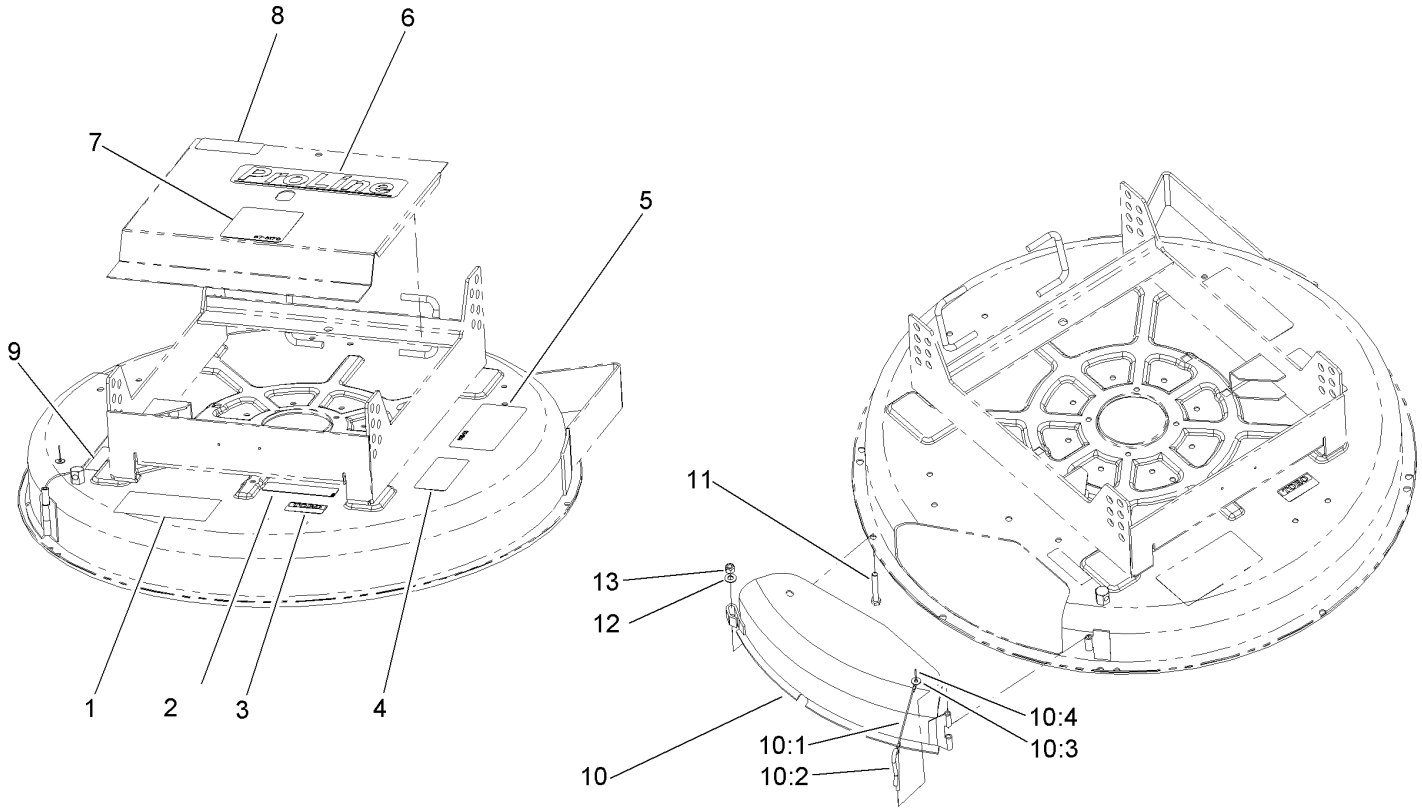

Decal and Mulcher Cover Assembly

Ref	Part No.	Qty.	Description
1	66-1340	1	Decal-Danger, Thrown Object
2	67-5360	1	Decal-Danger
3	105-2625	1	Decal-STD, Safety
4	68-8340	1	Decal-Torque
5	93-1159	1	Decal-HOC
6	106-0719	1	Decal
7	67-6170	1	Decal
8	54-0910	1	Decal-Hot
9	66-6380	1	Decal-Danger
10	92-5422	1	Mulcher Cover ASM
10:1	28-8070	1	Lanyard
10:2	28-8130	1	Pin-Locking, Chute
10:3	3256-49	1	Washer-Flat
10:4	3290-282	1	Rivet-Blind
11	322-11	1	Screw-HH
12	3256-23	2	Washer-Flat
13	3296-29	1	Nut-Lock, NI

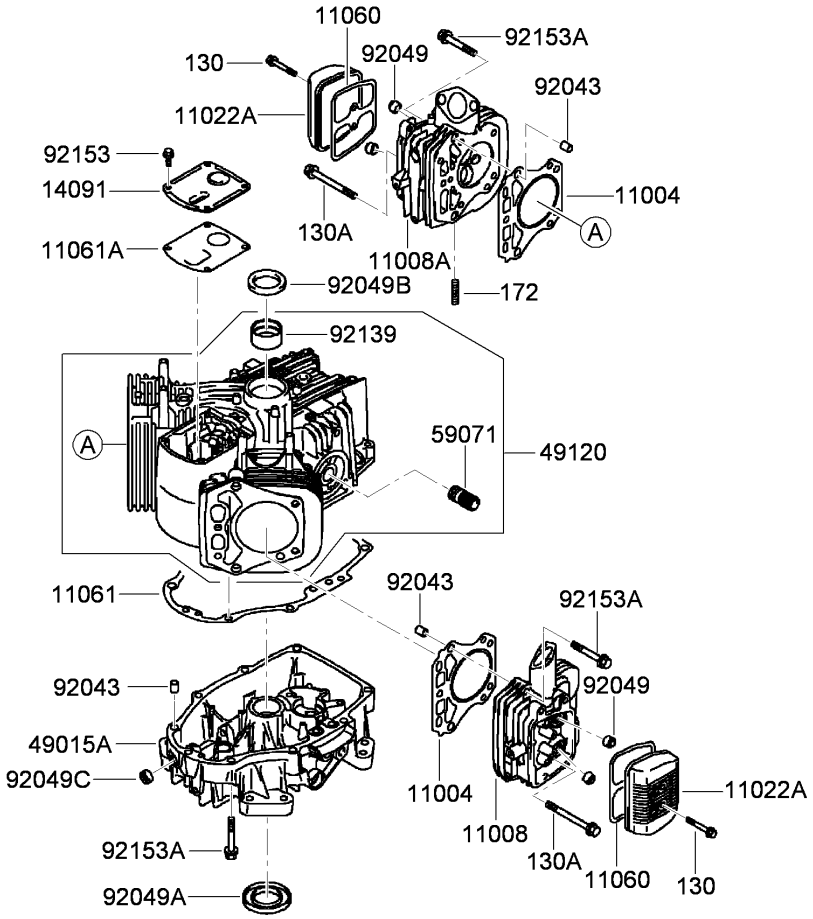

Cylinder and Crankcase Assembly
Kawasaki FH430V-BS35

Ref	Part No.	Qty.	Description
❸130	130AA0640	4	Bolt-Flanged (6X40)
❸130A	130CA0875	2	Bolt-Flanged (8X75)
❸172	172BA0818	4	Bolt-Stud (8X18)
❸11004	11004-7018	2	Gasket-Head
❸11008	11008-7021	1	Head-Cylinder, No. 2
❸11008A	11008-7022	1	Head-Cylinder, No. 1
❸11022A	11022-7018	2	Case-Rocker
❸11060	11060-7001	2	Gasket-Case, Rocker
❸11061	11061-7007	1	Gasket-Cover, Crankcase
❸11061A	11061-7008	1	Gasket-Breather
❸14091	14091-7007	1	Cover
❸49015A	49015-7080	1	Cover-Crankcase
❸49120	49120-7015	1	Crankcase
❸59071	59071-2079	1	Joint
❸92043	92043-7001	6	Pin
❸92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
❸92049A	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)
❸92049B	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)
❸92049C	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)
❸92139	92139-7008	1	Bushing
❸92153	92153-7043	4	Bolt (6X12)
❸92153A	92153-7054	17	Bolt (8X50)

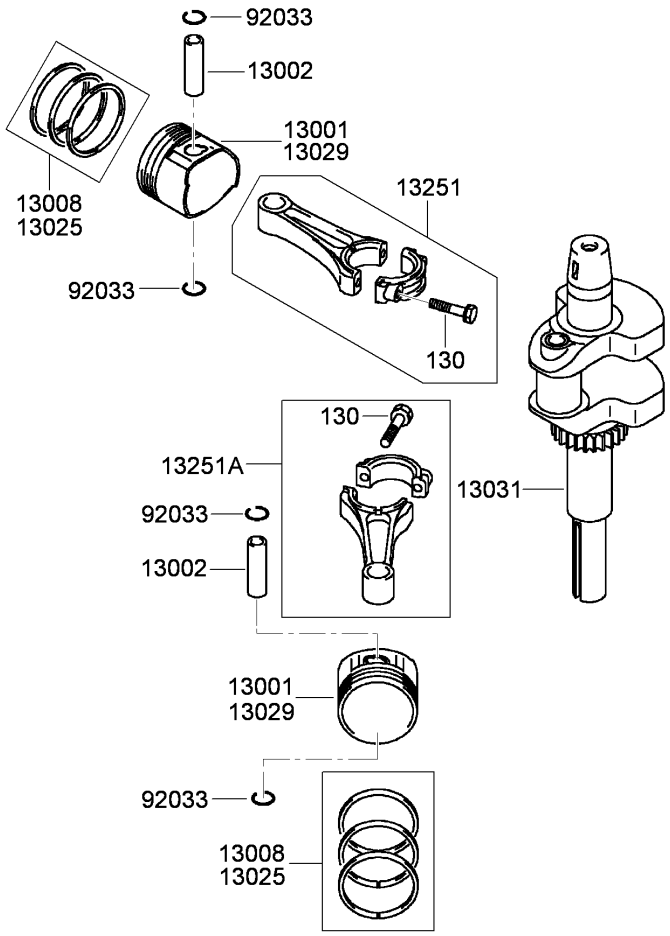

Piston and Crankshaft Assembly
Kawasaki FH430V-BS35

Ref	Part No.	Qty.	Description
❸130	130BA0630	4	Bolt-Flanged (6X30)
❸13001	13001-7022	2	Piston-Engine
❸13002	13002-7001	2	Pin-Piston
❸13008	13008-7001	2	Piston Ring Set
❸13025	13025-7003	1	Piston Ring Set (L 0.50)
❸13029	13029-7005	1	Piston-Engine (L 0.50)
❸13031	13031-7033	1	Crankshaft
❸13251	13251-7007	2	Connecting Rod ASM
❸13251A	13251-7008	2	Connecting Rod ASM (0.50)
❸92033	92033-7002	4	Ring-Snap

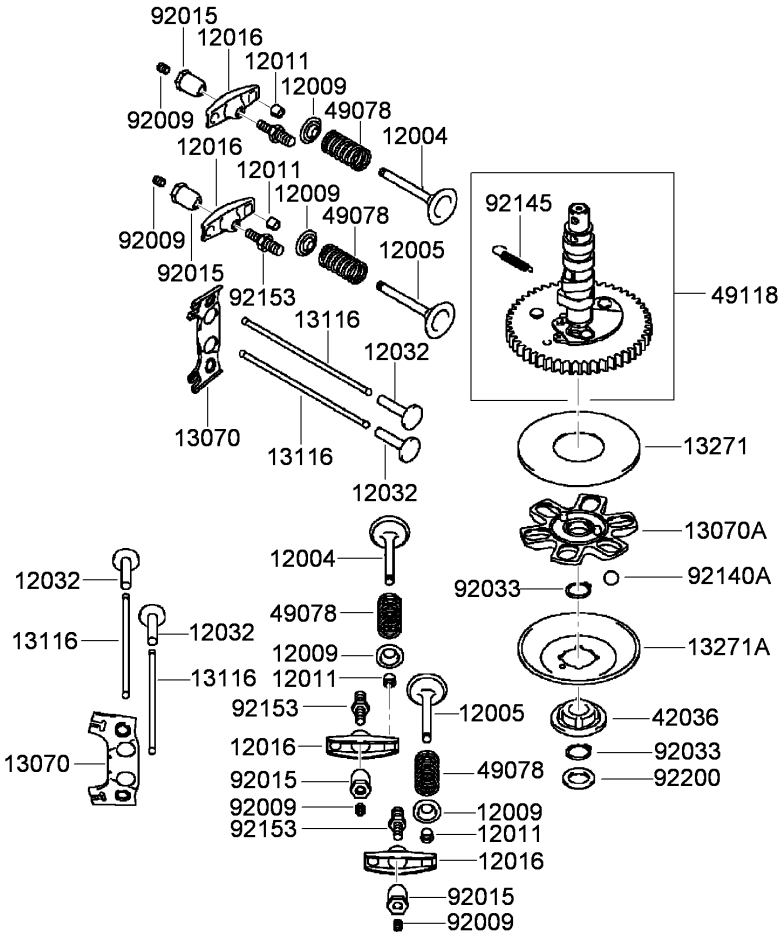

Valve and Camshaft Assembly
Kawasaki FH430V-BS35

Ref	Part No.	Qty.	Description
❸12004	12004-7005	2	Valve-Intake
❸12005	12005-7006	2	Valve-Exhaust
❸12009	12009-7001	4	Retainer-Spring, Valve
❸12011	12011-2056	8	Collet
❸12016	12016-7008	4	Arm-Rocker
❸12032	12032-7001	4	Tappet
❸13070	13070-7001	2	Guide
❸13070A	13070-7004	1	Guide
❸13116	13116-2057	4	Rod-Push
❸13271	13271-7007	1	Plate
❸13271A	13271-7021	1	Plate-Governor
❸42036	42036-7010	1	Sleeve
❸49078	49078-7001	4	Spring-Valve, Engine
❸49118	49118-7009	1	Camshaft
❸92009	92009-2341	4	Screw
❸92015	92015-2253	4	Nut
❸92033	92033-7001	2	Ring-Snap
❸92140A	92140-7005	6	Ball
❸92145	92145-7001	1	Spring
❸92153	92153-7019	4	Bolt
❸92200	92200-7001	1	Washer

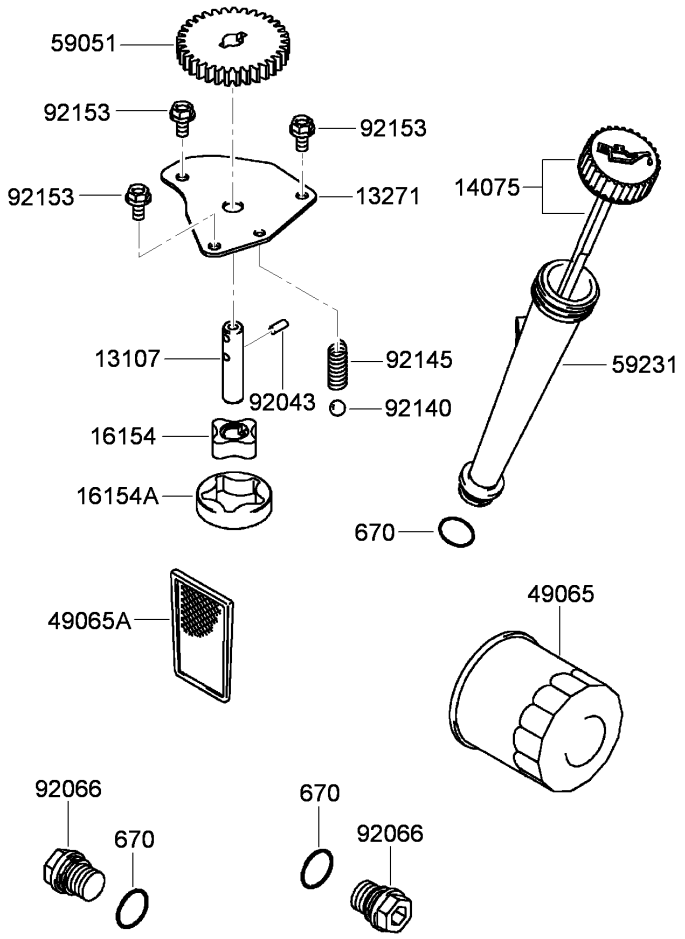

Lubrication Equipment Assembly
Kawasaki FH430V-BS35

Ref	Part No.	Qty.	Description
❸670	670D2016	3	O-Ring (16Mm)
❸13107	13107-7009	1	Shaft
❸13271	13271-7017	1	Plate
❸14075	14075-7009	1	Cap ASM
❸16154	16154-2053	1	Rotor-Pump (In)
❸16154A	16154-2054	1	Rotor-Pump (Out)
❸49065	49065-2078	1	Filter-Oil
❸49065A	49065-7004	1	Filter-Oil
❸59051	59051-7011	1	Gear-Spur
❸59231	59231-7003	1	Filler
❸92043	92043-7003	2	Pin
❸92066	92066-7003	2	Plug
❸92140	92140-7003	1	Ball
❸92145	92145-7002	1	Spring
❸92153	92153-7043	3	Bolt (6X12)

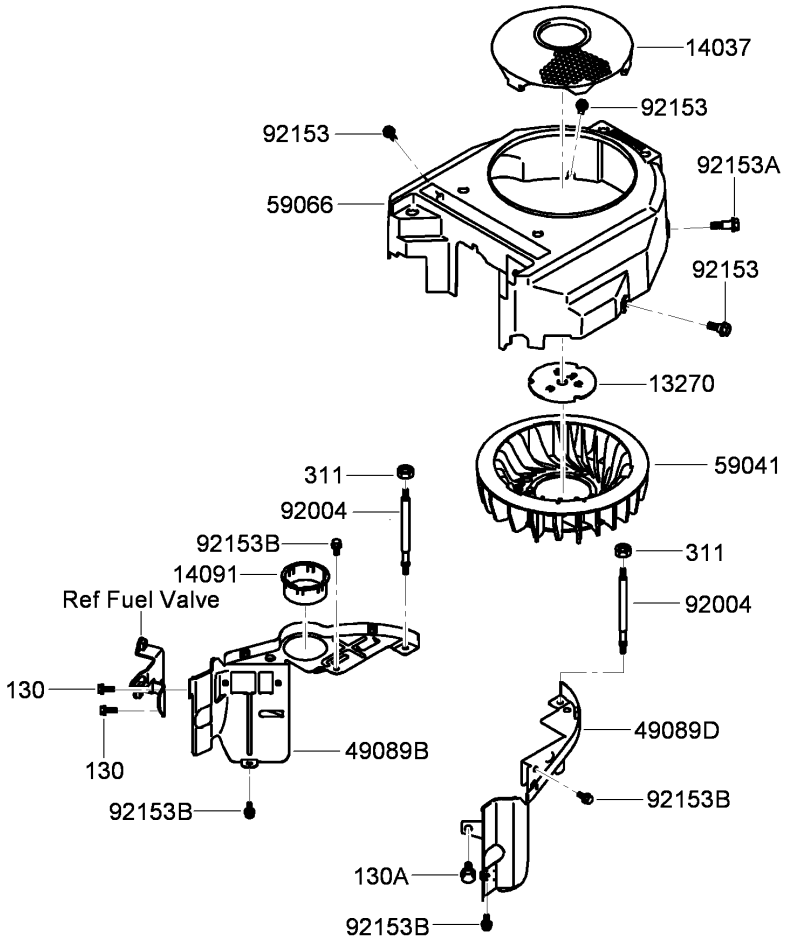

Cooling Equipment Assembly
Kawasaki FH430V-BS35

Ref	Part No.	Qty.	Description
❸130	130AA0616	2	Bolt-Flanged (6X16)
❸130A	130AA0816	1	Bolt-Flanged (8X16)
❸311	311AB0600	2	Nut-Hex (6Mm)
❸13270	13270-7007	1	Plate
❸14037	14037-7025-9H	1	Screen
❸14091	14091-7009	1	Cover
❸49089B	49089-7071	1	Shroud-Engine
❸49089D	49089-7072	1	Shroud-Engine
❸59041	59041-7012	1	Fan
❸59066	59066-7036	1	Housing-Fan
❸92004	92004-7007	2	Stud
❸92153	92153-7007	3	Bolt
❸92153A	92153-7008	1	Bolt
❸92153B	92153-7043	4	Bolt (6X12)

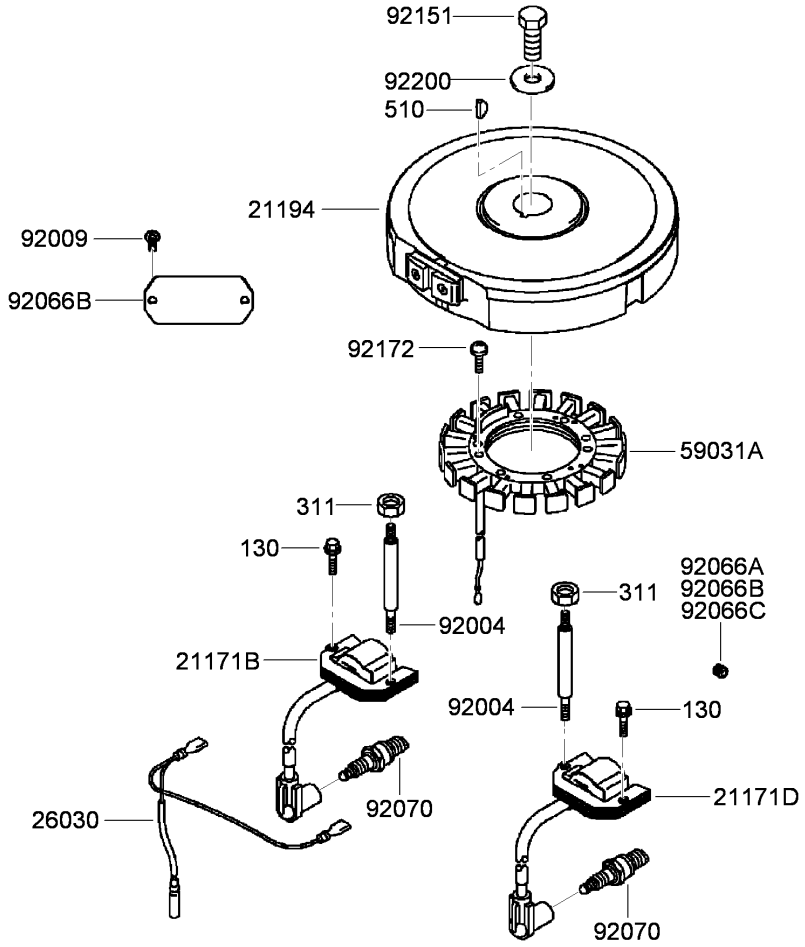

Cooling Equipment Assembly
Kawasaki FH430V-BS35

Ref	Part No.	Qty.	Description
❸130	130AA0620	2	Bolt-Flanged (6X20)
❸311	311F0600	2	Nut-Hex (6Mm)
❸510	510A5100	1	Key-Woodruff
❸21171B	21171-7034	1	Ignition Coil ASM
❸21171D	21171-7035	1	Coil-Assy-Ignition
❸21194	21194-7012	1	Flywheel
❸26030	26030-7001	1	Harness
❸59031A	59031-7011	1	Coil-Charging
❸92004	92004-7008	2	Stud
❸92009	92009-2308	2	Screw
❸92066A	92066-7002	1	Plug (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)
❸92066B	92066-7005	1	Plug
❸92066C	92066-7026	1	Plug
❸92070	92070-7003	2	Spark Plug (R C J 8 Y, Solid)
❸92151	92151-2097	1	Bolt (12X30)
❸92172	92172-7018	4	Screw (5X20)
❸92200	92200-7002	1	Washer

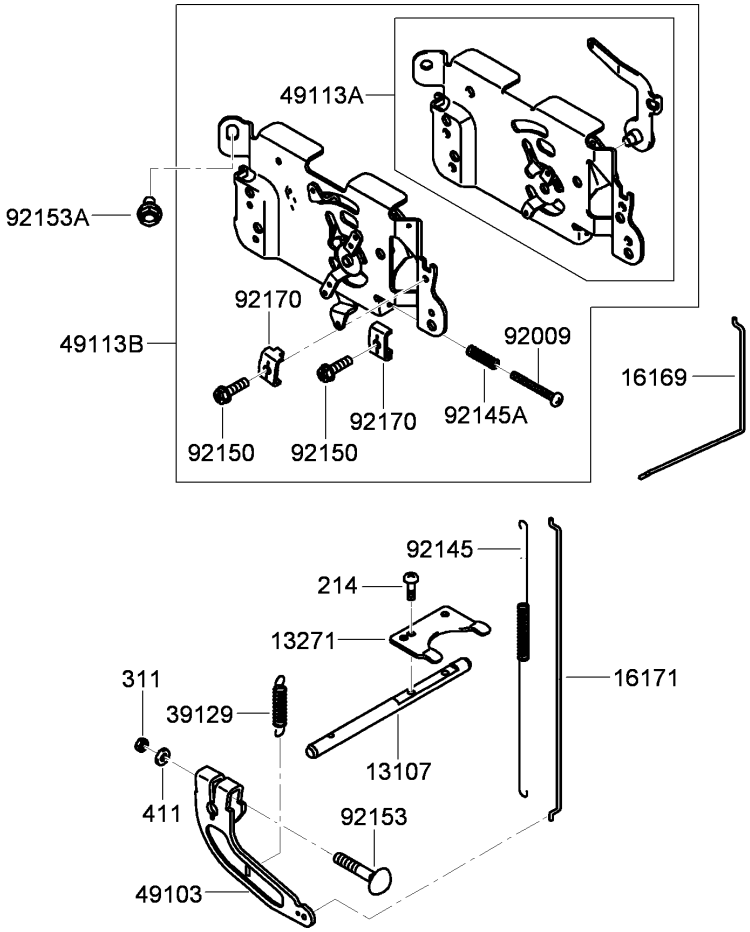

Control Equipment Assembly
Kawasaki FH430V-BS35

Ref	Part No.	Qty.	Description
❸214	214AA0408	2	Screw-Pan +-(4X8)
❸311	311AA0600	1	Nut-Hex (6Mm)
❸411	411AA0600	1	Washer-Plain (6Mm)
❸13107	13107-7010	1	Shaft
❸13271	13271-7032	1	Plate
❸16169	16169-7012	1	Link-Choke
❸16171	16171-7007	1	Link
❸39129	39129-7003	1	Spring-Governor
❸49103	49103-7004	1	Arm-Governor
❸49113A	49113-7024	1	Panel-Control (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)
❸49113B	49113-7054	1	Control Panel ASM
❸92009	92009-7007	1	Screw (4X35)
❸92145	92145-7003	1	Spring
❸92145A	92145-7005	1	Spring
❸92150	92150-2182	2	Bolt (5X18)
❸92153	92153-7033	1	Bolt (6X35)
❸92153A	92153-7043	2	Bolt (6X12)
❸92170	92170-7001	2	Clamp

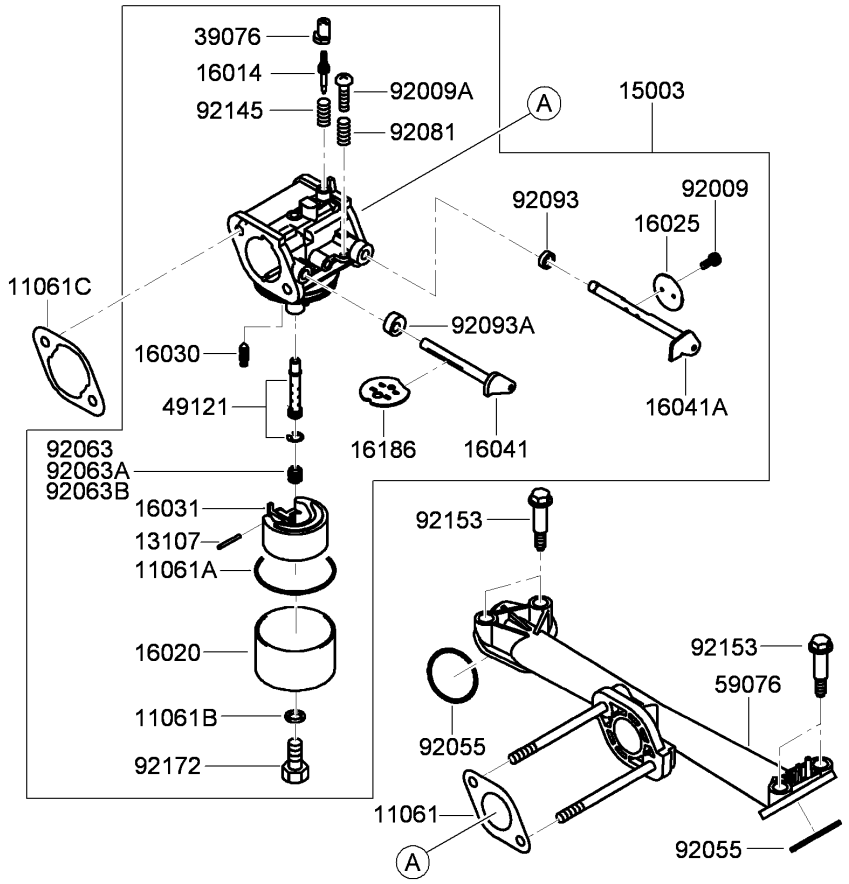

Carburetor Assembly
Kawasaki FH430V-BS35

Ref	Part No.	Qty.	Description
❸11061	11061-7004	1	Gasket-Insulator
❸11061A	11061-7009	1	Gasket-Chamber
❸11061B	11061-7010	1	Gasket-Screw
❸11061C	11061-7018	1	Gasket-Cleaner, Air
❸13107	13107-7018	1	Shaft
❸15003	15003-7061	1	Carburetor ASM
❸16014	16014-7002	1	Screw-Pilot, Air
❸16020	16020-7003	1	Chamber-Float
❸16025	16025-7006	1	Valve-Throttle
❸16030	16030-7003	1	Valve-Float
❸16031	16031-7002	1	Float
❸16041	16041-7016	1	Shaft-Choke, Carburetor
❸16041A	16041-7018	1	Shaft-Throttle, Carburetor
❸16186	16186-7002	1	Choke Valve ASM
❸39076	39076-7001	1	Limiter
❸49121	49121-7001	1	Nozzle-Main
❸59076	59076-7005	1	Manifold-Intake
❸92009	92009-2083	2	Screw
❸92009A	92009-2349	1	Screw
❸92055	92055-7007	2	O-Ring (I D 31)
❸92063	92063-7026	1	Jet-Main, No. 88
❸92063A	92063-7028	1	Jet-Main, No. 85 (3280 Ft)
❸92063B	92063-7029	1	Jet-Main, No.82 (6560 Ft)
❸92081	92081-2234	1	Spring

Ref	Part No.	Qty.	Description
❸92093	92093-2100	1	Seal
❸92093A	92093-7003	1	Seal
❸92145	92145-7015	1	Spring
❸92153	92153-7009	4	Bolt
❸92172	92172-7002	1	Screw

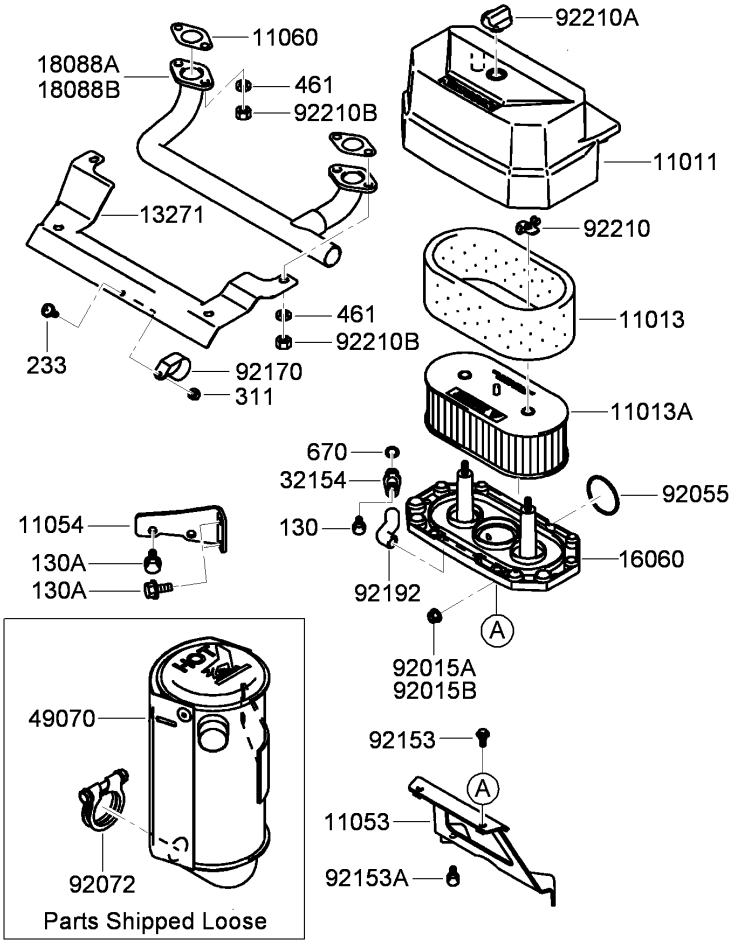

Air Filter and Muffler Assembly
Kawasaki FH430V-BS35

Ref	Part No.	Qty.	Description
❸130	130AA0610	1	Bolt-Flanged (6X10)
❸130A	130AA0816	3	Bolt-Flanged (8X16)
❸233	233AA0416	1	Screw-Pan, Wp +-(4X16)
❸311	311AA0400	1	Nut-Hex (4Mm)
❸461	461DA0800	4	Washer-Spring (8Mm)
❸670	670B2010	1	O-Ring (10Mm)
❸11011	11011-7045	1	Case-Filter, Air
❸11013	11013-7025	1	Element-Filter, Air
❸11013A	11013-7031	1	Element-Filter, Air
❸11053	11053-7022	1	Bracket
❸11054	11054-7002-9H	1	Bracket
❸11060	11060-7021	2	Gasket-Muffler
❸13271	13271-7022	1	Plate
❸16060	16060-7016	1	Pipe-Intake
❸18088A	18088-7001	1	Pipe-Exhaust (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)
❸18088B	18088-7008	1	Pipe-Exhaust
❸32154	32154-7006	1	Pipe
❸49070	49070-7021	1	Muffler
❸92015A	92015-1193	1	Nut (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)

Ref	Part No.	Qty.	Description
❸92015B	92015-1367	2	Nut
❸92055	92055-7015	1	O-Ring
❸92072	92072-7012	1	Band
❸92153	92153-7038	2	Bolt (6X10)
❸92153A	92153-7043	2	Bolt (6X12)
❸92170	92170-7002	1	Clamp
❸92192	92192-7010	1	Tube
❸92210	92210-7004	2	Nut (M6)
❸92210A	92210-7019	1	Nut
❸92210B	92210-7027	4	Nut (M8)

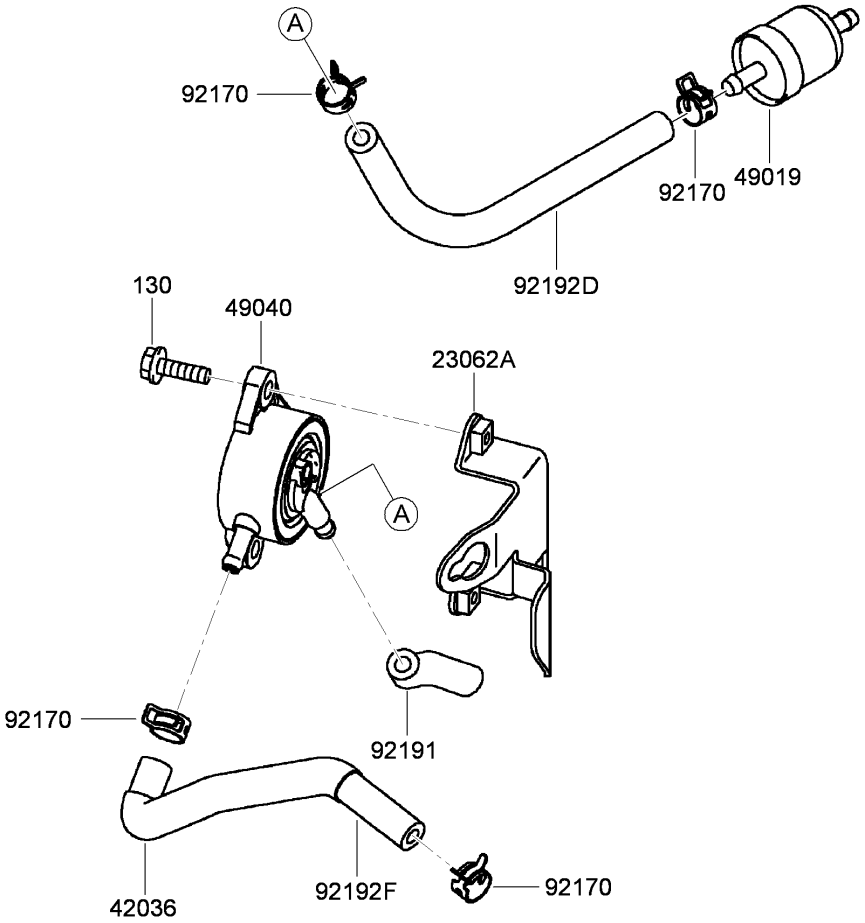

Fuel Tank and Valve Assembly
Kawasaki FH430V-BS35

Ref	Part No.	Qty.	Description
❸130	130AA0620	2	Bolt-Flanged (6X20)
❸23062A	23062-7019-9H	1	Bracket
❸42036	42036-7012	1	Sleeve
❸49019	49019-7001	1	Filter-Fuel
❸49040	49040-7001	1	Pump-Fuel
❸92170	92170-2009	4	Clamp
❸92191	92191-7002	1	Tube
❸92192D	92192-7135	1	Tube (6.35X12.7X160)
❸92192F	92192-7136	1	Tube (6.35X12.7X180)

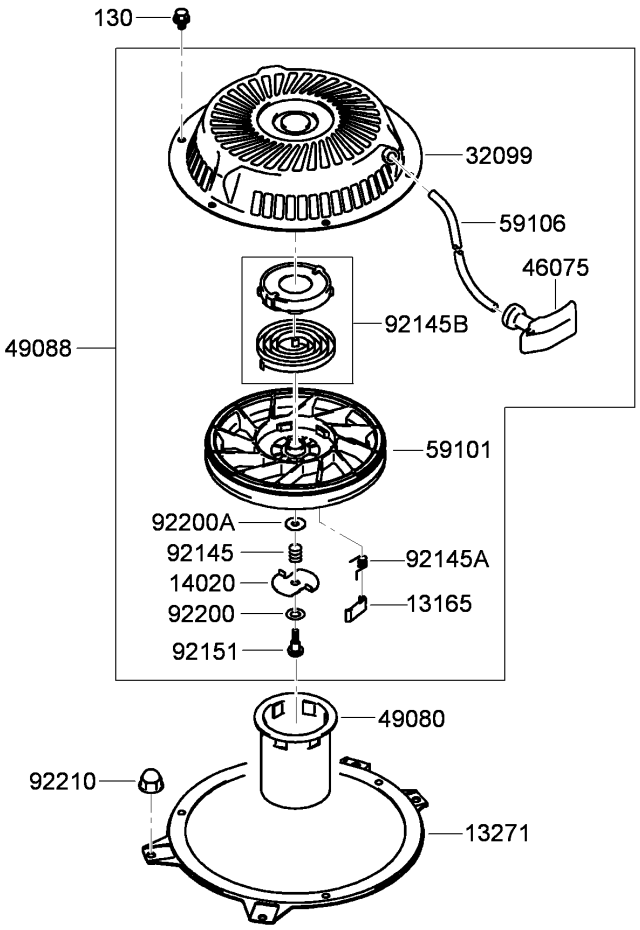

Starter Assembly
Kawasaki FH430V-BS35

Ref	Part No.	Qty.	Description
❸130	130AA0608	3	Bolt-Flanged (6X8)
❸13165	13165-7001	2	Pawl-Starter, Recoil
❸13271	13271-7003-9H	1	Plate
❸14020	14020-7001	1	Retainer
❸32099	32099-7002	1	Case-Starter, Recoil
❸46075	46075-7001	1	Grip-Starter, Recoil
❸49080	49080-7001	1	Pulley-Starting
❸49088	49088-7013	1	Starter-Recoil
❸59101	59101-7001	1	Reel-Starter, Recoil
❸59106	59106-7005	1	Rope
❸92145	92145-7006	1	Spring
❸92145A	92145-7007	2	Spring
❸92145B	92145-7008	1	Spring
❸92151	92151-7008	1	Bolt
❸92200	92200-7004	1	Washer
❸92200A	92200-7005	1	Washer
❸92210	92210-0003	4	Nut

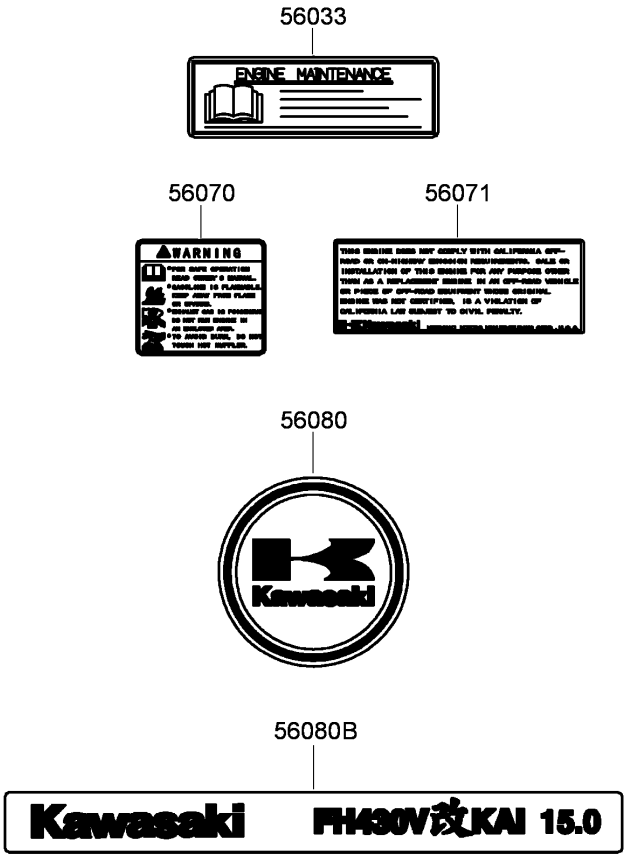

Label Assembly
Kawasaki FH430V-BS35

Ref	Part No.	Qty.	Description
❸56033	56033-7001	1	Label-Manual
❸56070	56070-7001	1	Label-Warning
❸56071	56071-7002	1	Label-Warning
❸56080	56080-2077	1	Label-Brand
❸56080B	56080-7057	1	Label-Brand

Attachments and Accessories

For 30092 - Commercial Walk-Behind Mower, Floating Deck T-Bar Gear with 32in Cutting Unit

Product Name	Model/Part
Bag Kit	30124

NOTES

NOTES

NOTES

TORO®