Form No. 3362-566 Rev A

TORO®

Count on it.

Parts Catalog

1800 Power Curve® Snowthrower

Model No. 38025—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake clutch

CARR: carriage

CCW: counter clock wise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

© 2009—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Contents


Housing and Rotor Assembly 4
Handle Assembly 5
Chute Assembly 6

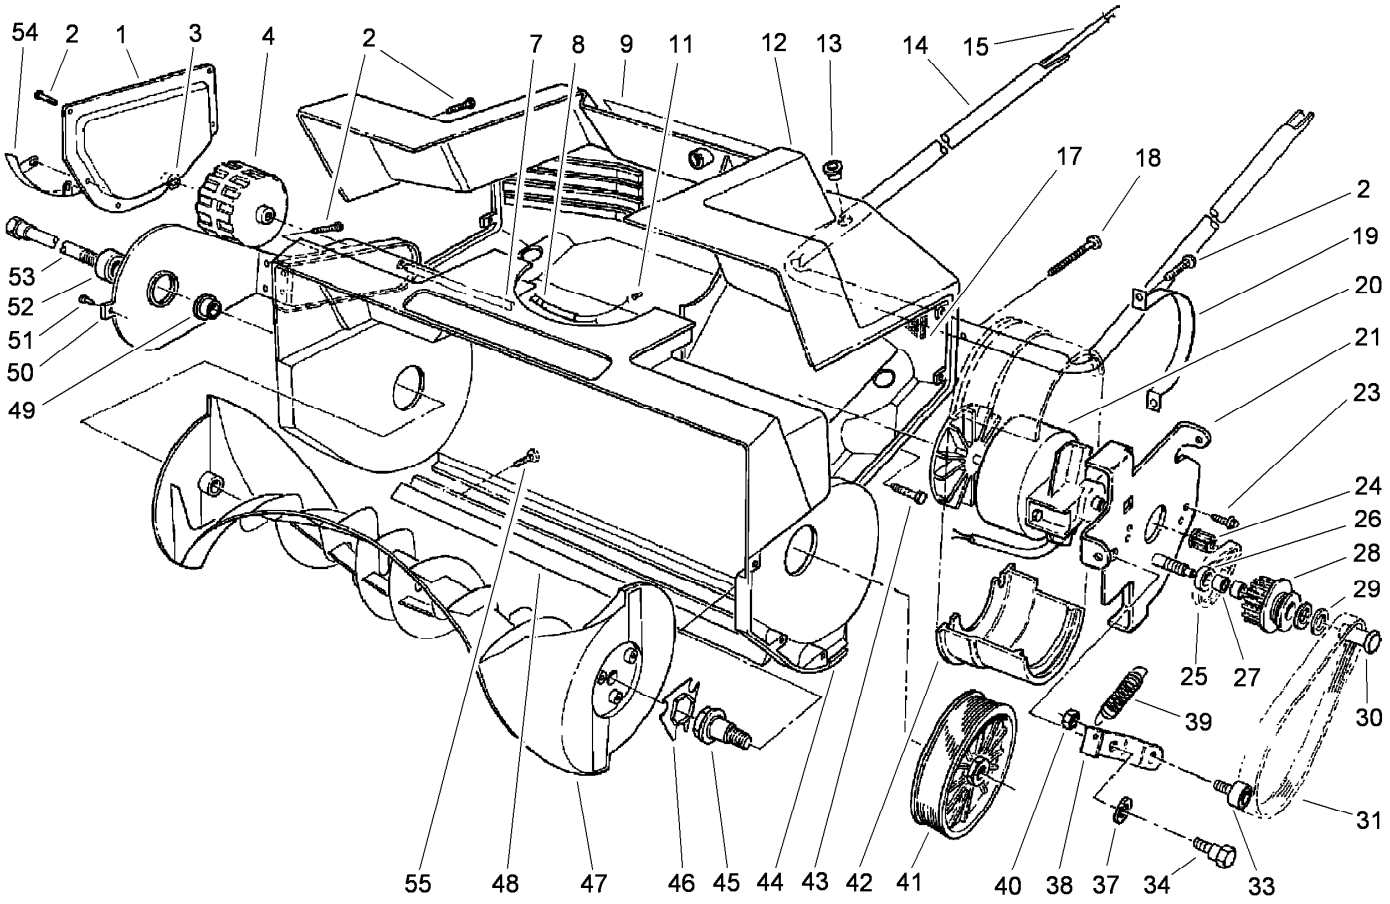

Housing and Rotor Assembly


Ref.	Part Number	Qty.	Description
1	73-9370	2	Plate-Side
2	94-4496	19	Screw-PPH
3	32112-1	2	Pushnut-Cap, Washer
4	73-5720	2	Wheel
7	73-0370	1	Shaft-Axle
8	64-5820	1	Relief-Strain
9	73-0450	1	Decal-Danger
11	218-511	2	Connector
12	73-9320	1	Shroud-Housing
13	256-307	1	Bushing
14	73-0280	1	Tube-Lower Handle
15	73-3630	1	Wire Harness
17	73-1800	1	Filter-Foam
18	32144-88	4	Screw-Pan Head
19	73-0120	1	Strap-Motor
20	73-3520	1	Motor
21	73-8680	1	Motor Plate ASM
23	32144-100	2	Screw-Hex Washer Hd.
24	73-3660	1	Pulley-Driver
25	73-0160	1	Belt-Timing
26	73-3580	1	Washer
27		2	Bearing-Needle ●
28	73-3570	1	Idler Pulley ASM (Incl. Ref. #27)
29	73-0041	2	Washer-Thrust
30	73-3530	1	Bolt-Idler
31	61-8802	1	Belt-Drive
33	73-5730	1	Bearing ASM (Incl. Ref. #40)
34	27-0411	1	Screw-Shoulder
37	25-5641	1	Washer
38	73-3600	1	Bracket-Idler
39	73-3680	1	Spring
40	3296-47	1	Nut-Lock, NI
41	73-3550	1	Pulley-Driven
42	73-3650	2	Clamp-Motor Bracket
43	32104-97	2	Screw-HH
44	73-3640	1	Housing-Rotor
45	73-0990	1	Shaft-Driver, Rotor
46	73-0860	1	Coupler-Rotor
47	73-8590	1	Rotor
48	73-3690	1	Scraper
49	73-8580	1	Bushing
50	73-0010	2	Wheel Bracket ASM (Incl. Ref. #52)
51	3290-271	2	Rivet-Pop
52	61-8780	2	Bearing-Ball
53	73-0020	1	Shaft-Rotor
54	73-1570	2	Skid-Housing
55	32144-108	2	Screw-Pan Head

● Not serviced separately

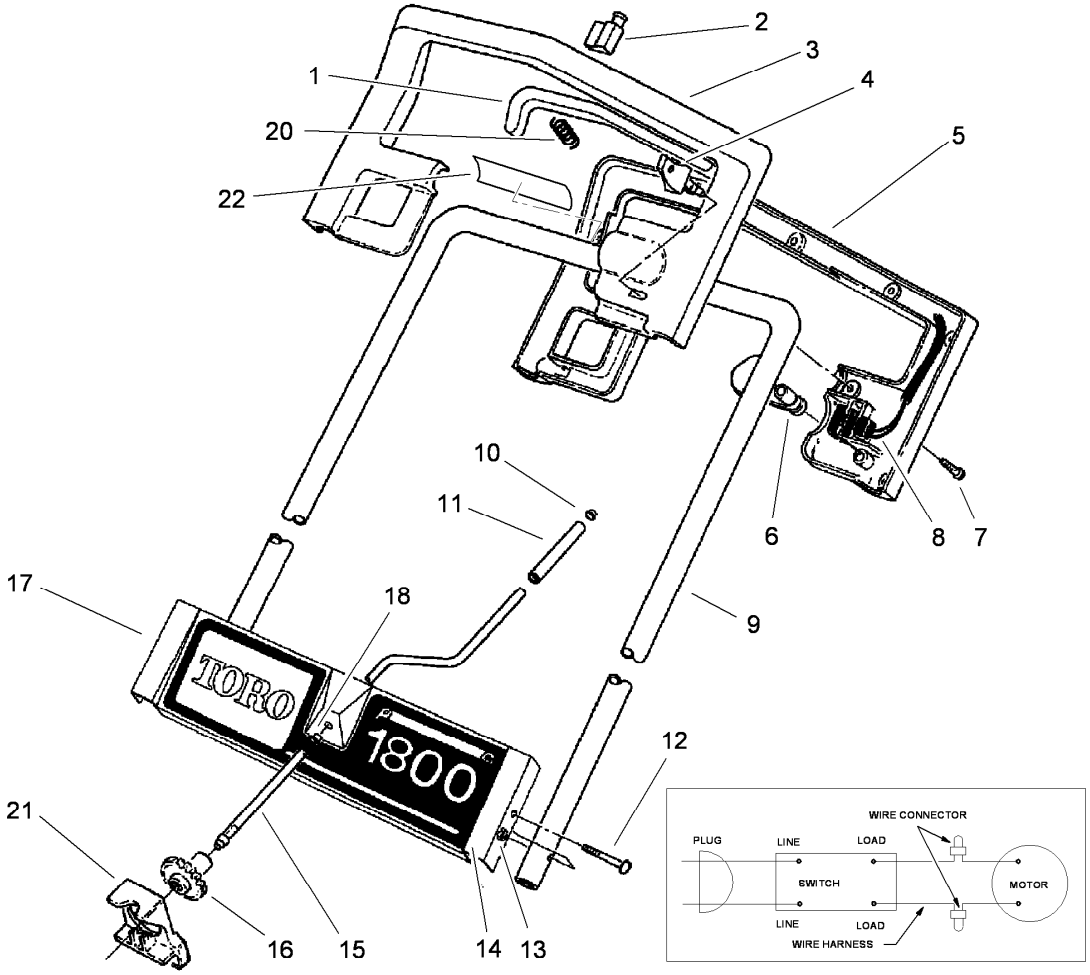

Handle Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	73-3510	1	Bar-Switch
2	64-4930	1	Switch
3	73-5700	1	Handle-Control, Upper
4	73-5190	1	Key
5	73-5710	1	Handle-Control, Lower
6	73-5690	1	Tab-Lock
7	94-4496	11	Screw-PPH
8	73-5642	1	Cord-Supply
9	73-3460	1	Tube-Handle, Upper
10	32112-1	1	Pushnut-Cap, Washer
11	73-0251	1	Sleeve-Crank, Chute
12	33-8951	2	Screw-HH
13	3296-12	2	Nut-Lock, NI
14	98-1822	1	Decal-Escutcheon
15	73-0240	1	Rod-Crank, Chute
16	73-0230	1	Gear-Crank, Chute
17	73-0310	1	Plate-Escutcheon
18	256-306	1	Bushing-Nyliner
20	73-3450	2	Spring
21	73-3710	1	Brake-Gear
22	114-8986	1	Decal-Operation

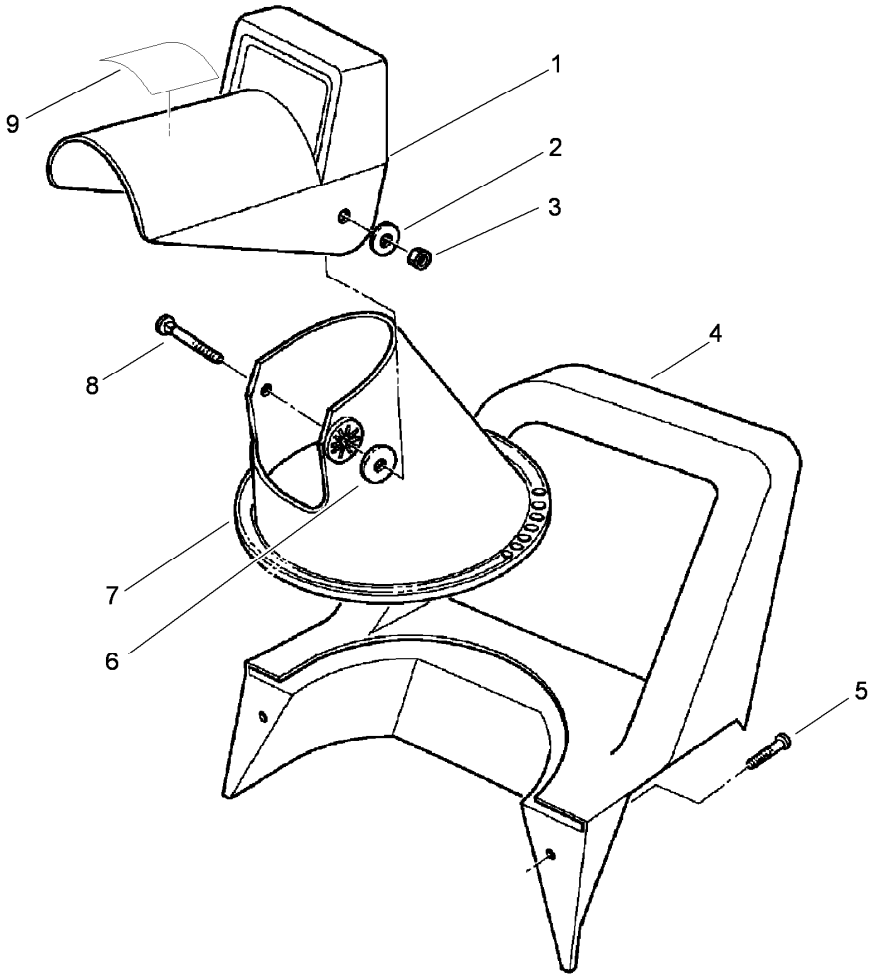

Chute Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	73-0190	1	Chute-Deflector
2	3256-68	2	Washer-Flat
3	3296-29	2	Nut-Lock, NI
4	73-0260	1	Handle-Middle
5	94-4496	4	Screw-PPH
6	20-4320	2	Washer-Rubber
7	73-0180	1	Chute-Lower
8	3230-2	2	Bolt-CARR
9	114-9286	1	Decal-Danger
	73-0520	1	Loose Parts (Incl. Ref. #2, 3, 6, & 8, Page 4)(Incl. Ref. #12, & 13 Page 3) ●

● Not illustrated

Notes:



Count on it.