Form Number 3362-164 Rev B

Super Bagger Lawn Mower

Model No. 20194 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Deck Housing, Front Wheel and Rear Door Assembly	3
Side Discharge, Transmission and Rear Wheel Assembly	4
Upper Handle Assembly	5
Lower Handle Assembly	6
Engine and Blade Assembly	7
Brake System Assembly	8
Brake System Handle Assembly	9
Rear Bag Assembly	10
Cylinder Assembly Honda GCV160A NBL1	11
Oil Pan Assembly Honda GCV160A NBL1	12
Crankshaft Assembly Honda GCV160A NBL1	13
Piston and Connecting Rod Assembly Honda GCV160A NBL1	14
Camshaft Pulley Assembly Honda GCV160A NBL1	15
Recoil Starter Assembly Honda GCV160A NBL1	16
Fan Cover Assembly Honda GCV160A NBL1	17
Carburetor Assembly Honda GCV160A NBL1	18
Air Cleaner Assembly Honda GCV160A NBL1	19
Muffler Assembly Honda GCV160A NBL1	20
Flywheel Assembly Honda GCV160A NBL1	21
Control Assembly Honda GCV160A NBL1	22
Top Cover Assembly Honda GCV160A NBL1	23
Label Assembly Honda GCV160A NBL1	24
Attachments and Accessories List	25

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
CCW. . . . . counter clock wise
CW. . . . . clockwise
DEG. . . . . degrees
ECM. . . . . electronic control module
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes

❶ Not serviced separately

❷ Obtain parts from www.honda-engines.com

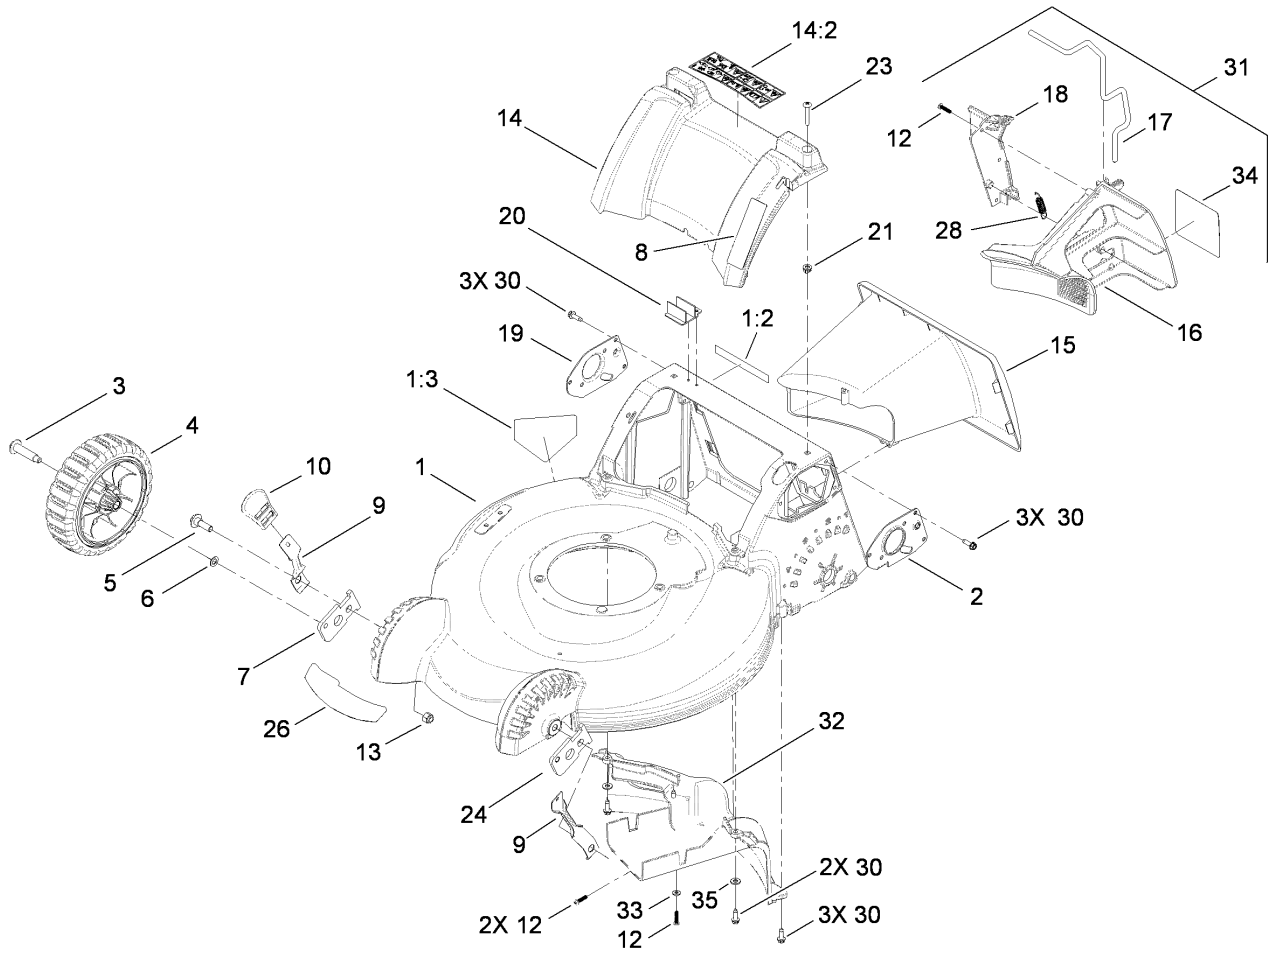

Deck Housing, Front Wheel and Rear Door Assembly

Ref	Part No.	Qty.	Description
1	117-4167	1	Housing ASM
1:2	107-3889	1	Decal-Safety
1:3	94-8072	1	Decal-Danger
2	110-9415-03	1	Mount-Handle, LH
3	614650	2	Bolt-Shoulder
4	117-4103	2	8 Inch Wheel ASM
5	614672	2	Bolt-Shoulder
6	40-1940	2	Washer
7	110-9421	1	Arm-Pivot, RH
8	117-5902	1	Decal-Quick Stow
9	110-9434	2	Arm-Spring, Front
10	110-0549	2	Knob-HOC
12	108-7476	6	Screw-Plastite
13	3296-39	2	Nut-Lock, NI
14	115-3177	1	Cover-Rear
14:2	114-2820	1	Decal-Warning
15	110-9455	1	Tunnel
16	110-9446	1	Plug-Mulch, LH
17	110-9448	1	Latch-Plug, Mulch
18	110-9447	1	Plug-Mulch, RH
19	110-9416-03	1	Mount-Handle, RH
20	117-5905	1	Module-Switch
21	94-1610	2	Nut-Clip
23	108-0965	2	Screw-PTH

Ref	Part No.	Qty.	Description
24	110-9420	1	Arm-Pivot, LH
26	117-4164	1	Decal-Super Bagger
28	110-9458	1	Spring-Extension
30	49-2040	11	Screw-HWHTF
31	110-9468	1	Mulch Plug ASM
32	110-9423	1	Baffle-Rear
33	3256-14	1	Washer-Flat
34	110-9457	1	Decal-Plug, Mulch
35	3256-22	2	Washer-Flat

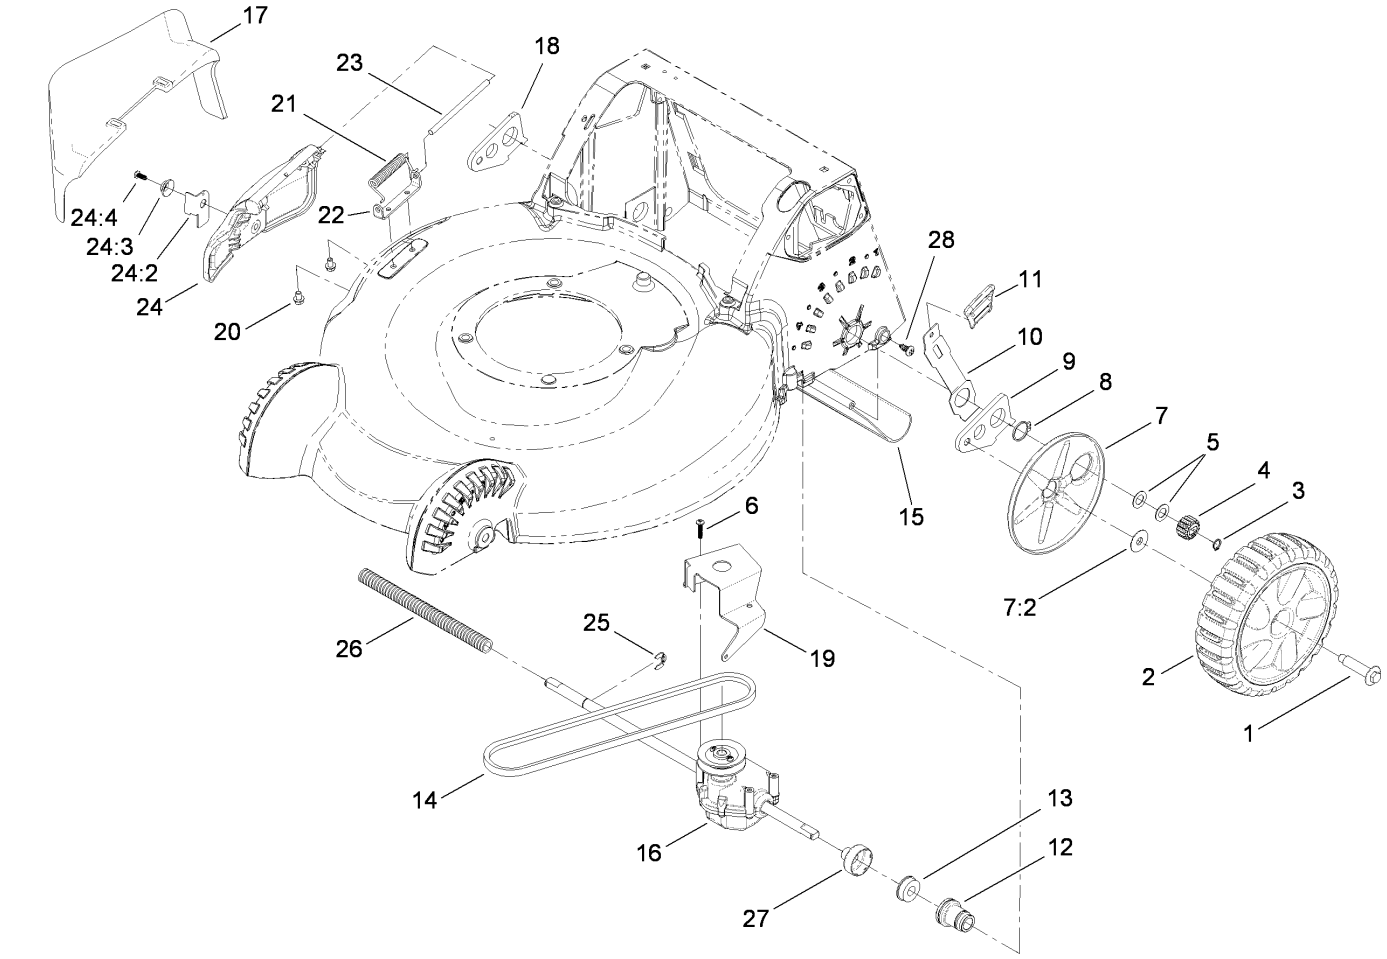

Side Discharge, Transmission and Rear Wheel Assembly

Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	117-4104	2	Rear Wheel ASM
3	32151-61	2	Ring-Retaining
4	110-9417	2	Pinion
5	36-4780	2	Washer-Plain
6	108-7476	3	Screw-Plastite
7	117-4197	2	Wheel Cover ASM
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	110-9445	2	Arm-Spring, Rear
11	110-0549	2	Knob-HOC
12	110-9422	2	Retainer-Bearing
13	104-8699	2	Bearing-Ball
14	110-9429	1	V-Belt
15	112-8768	1	Shield-Trailing
16	114-2812	1	Transmission ASM
17	105-3028	1	Chute-Discharge, Side
18	108-9343	1	Arm-Rear Pivot, RH
19	114-7977-03	1	Bracket-Transmission
20	99-8445	2	Screw-HWH
21	99-5293	1	Spring-Torsion
22	112-6416	1	Bracket-Cover
23	99-5291	1	Rod-Cover

Ref	Part No.	Qty.	Description
24	106-8376	1	Discharge Door ASM
24:2	107-0795	1	Latch-Door
24:3	107-7456	1	Cap-Door
24:4	107-7461	1	Screw-Plastite
25	65-2720	1	Ring-Clip, Locking
26	24-7922	1	Cover-Shaft, Drive
27	114-2755	2	Cap-Bearing
28	117-1092	2	Screw-PTH

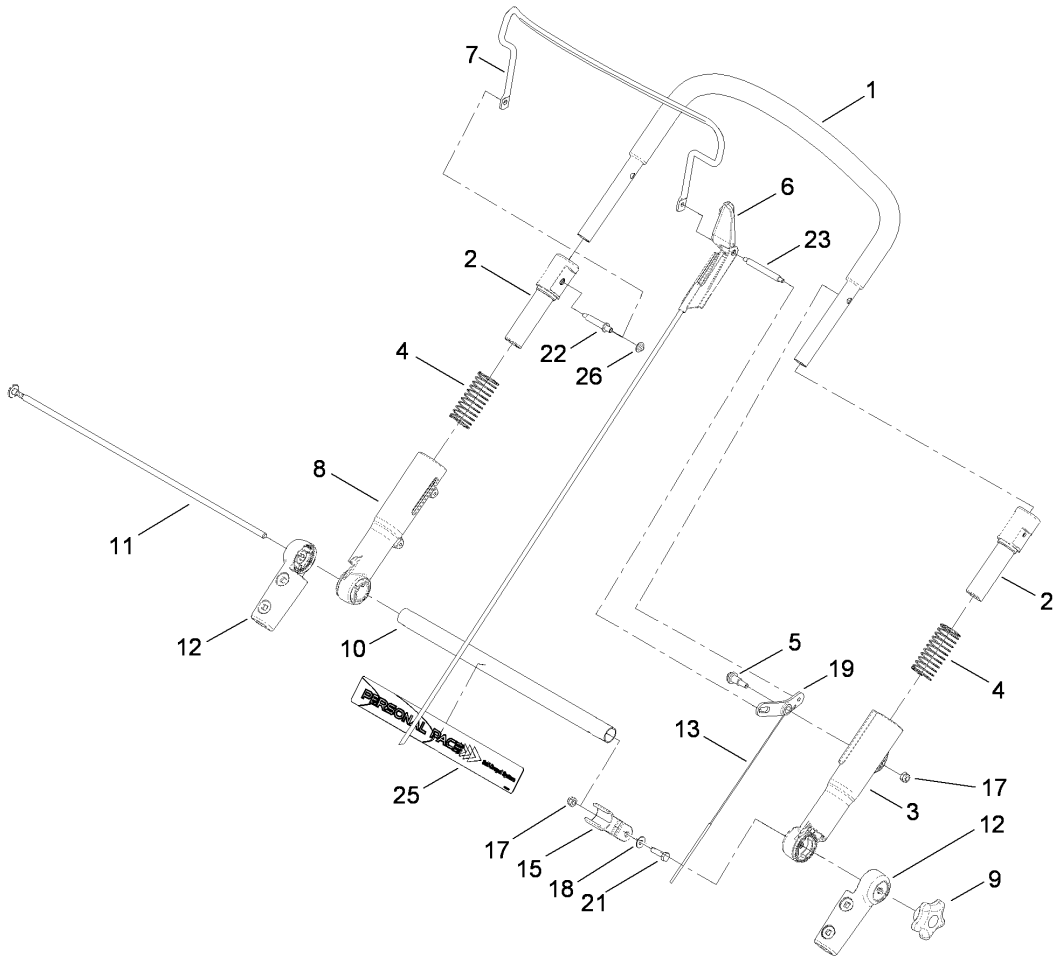

Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	108-0974	1	Upper Handle ASM
2	112-8754	2	Sleeve-Inner
3	112-1544	1	Sleeve-Outer, LH
4	107-3869	2	Spring-Compression
5	104-0858	1	Bolt-Shoulder
6	112-8764	1	Stop-Pivot
7	110-1819-03	1	Bail-Brake
8	112-1545	1	Sleeve-Outer, RH
9	106-4161	1	Knob-Handle
10	107-3867-03	1	Tube-Cross
11	107-3871	1	Rod-Threaded
12	107-3865	2	Mount-Handle, Lower
13	110-9465	1	Cable-Traction
15	112-8801	1	Clamp-Cable
17	3296-73	2	Nut-Lock, NI
18	3256-1	1	Washer-Flat
19	107-3893	1	Lever-Traction
21	321-5	1	Screw-HH
22	108-0959	1	Pin-Handle
23	108-1008	1	Pin-Bail, LH
25	117-5901	1	Decal-Personal Pace
26	108-9378	1	Retainer-Push On

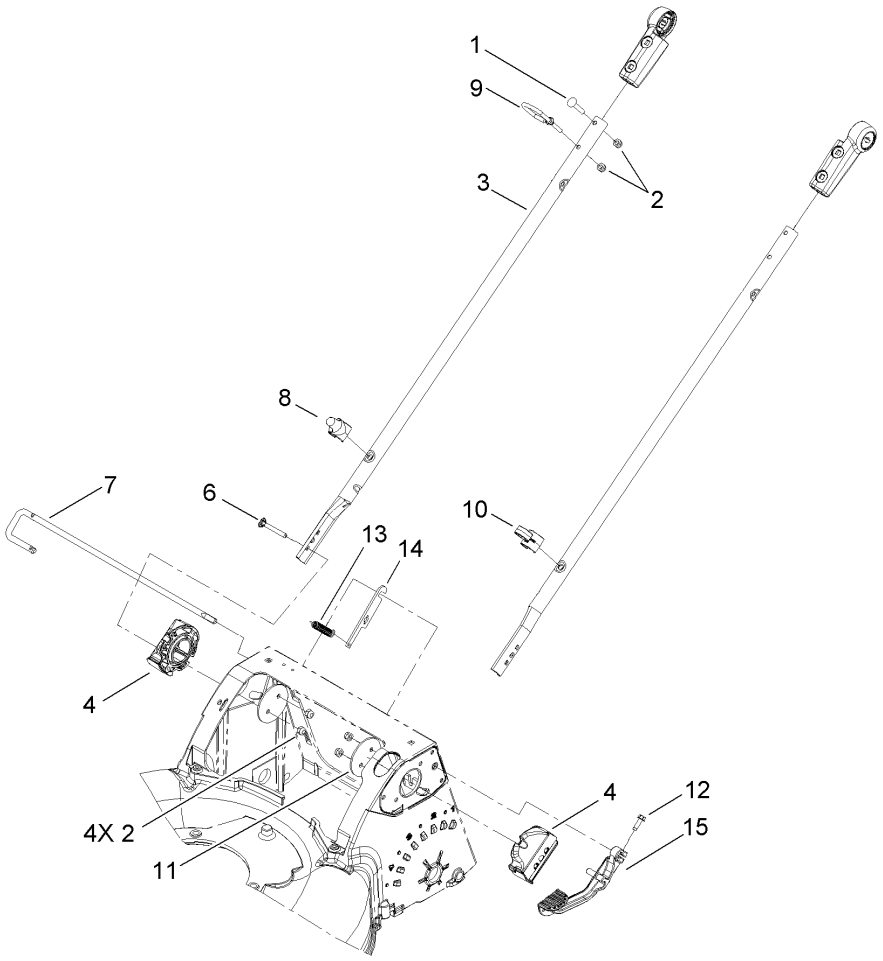

Lower Handle Assembly

Ref	Part No.	Qty.	Description
1	108-0988	3	Screw-CARR
2	3296-73	8	Nut-Lock, NI
3	107-3887-03	2	Tube-Lower
4	114-2791	2	Mount-Handle, Lower
6	95-4453	4	Screw
7	112-8755	1	Rod-Release, Handle
8	117-4141	1	Guide-Rope, Lower
9	107-3908	1	Guide-Rope, Upper
10	106-6805	1	Guide-Cable
11	107-3944-03	2	Plate
12	49-2040	1	Screw-HWHTF
13	112-1542	1	Spring-Extension
14	112-1539	1	Plate-Rod, Release
15	110-1823-03	1	Lever-Release

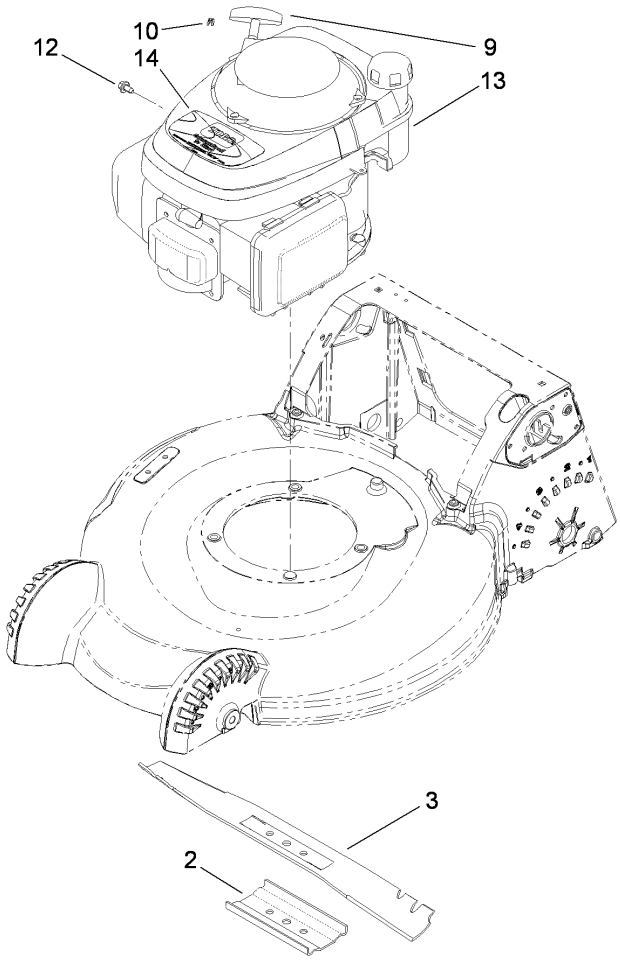

Engine and Blade Assembly

Ref	Part No.	Qty.	Description
2	108-3766-03	1	Support-Blade
3	108-0954-03	1	Blade-21 Inch
9	117-5949	1	Handle-Recoil
10	92-1701	1	Stop-Rope
12	98-1394	1	Screw-HWH
❶❷13		1	Engine-Honda, Gcv160A Nbl1
14	117-4163	1	Decal-Honda

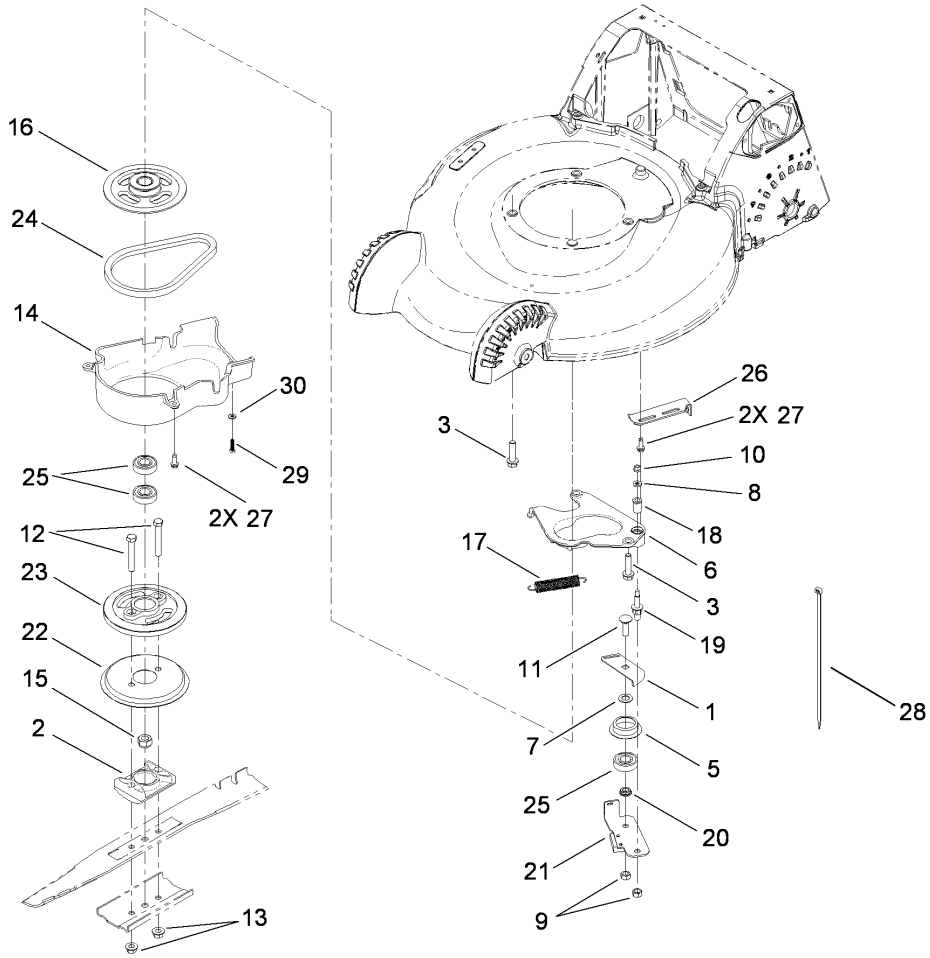

Brake System Assembly

Ref	Part No.	Qty.	Description
1	107-7471	1	Plate-Guide
2	107-7487	1	Support-Blade
3	32144-102	3	Screw-HWH
5	108-3790	1	Retainer-Belt
6	107-0761	1	Plate-Anchor
7	605256	1	Washer
8	3256-16	1	Washer-Flat
9	603773	2	Nut
10	3296-73	1	Nut-Lock, NI
11	3231-25	1	Screw-CARR
12	3211-42	2	Screw-HH
13	54-9190	2	Nut-Lock
14	107-7488	1	Cover
15	108-9342	1	Nut-Hex
16	110-7456	1	Pulley
17	108-3792	1	Spring-Tension, Brake
18	107-0797	1	Bushing
19	107-0759	1	Bolt-Shoulder
20	107-0758	1	Spacer-Bearing
21	107-7477	1	Brake Arm ASM
22	108-3787	1	Disc
23	107-0754	1	Drum
24	110-1790	1	Belt-BBC
25	100-1048	3	Bearing-Ball

Ref	Part No.	Qty.	Description
26	110-9425-03	1	Bracket-Cable
27	49-2040	4	Screw-HWHTF
28	614249	1	Strap-Tie
29	108-7476	1	Screw-Plastite
30	3256-14	1	Washer-Flat

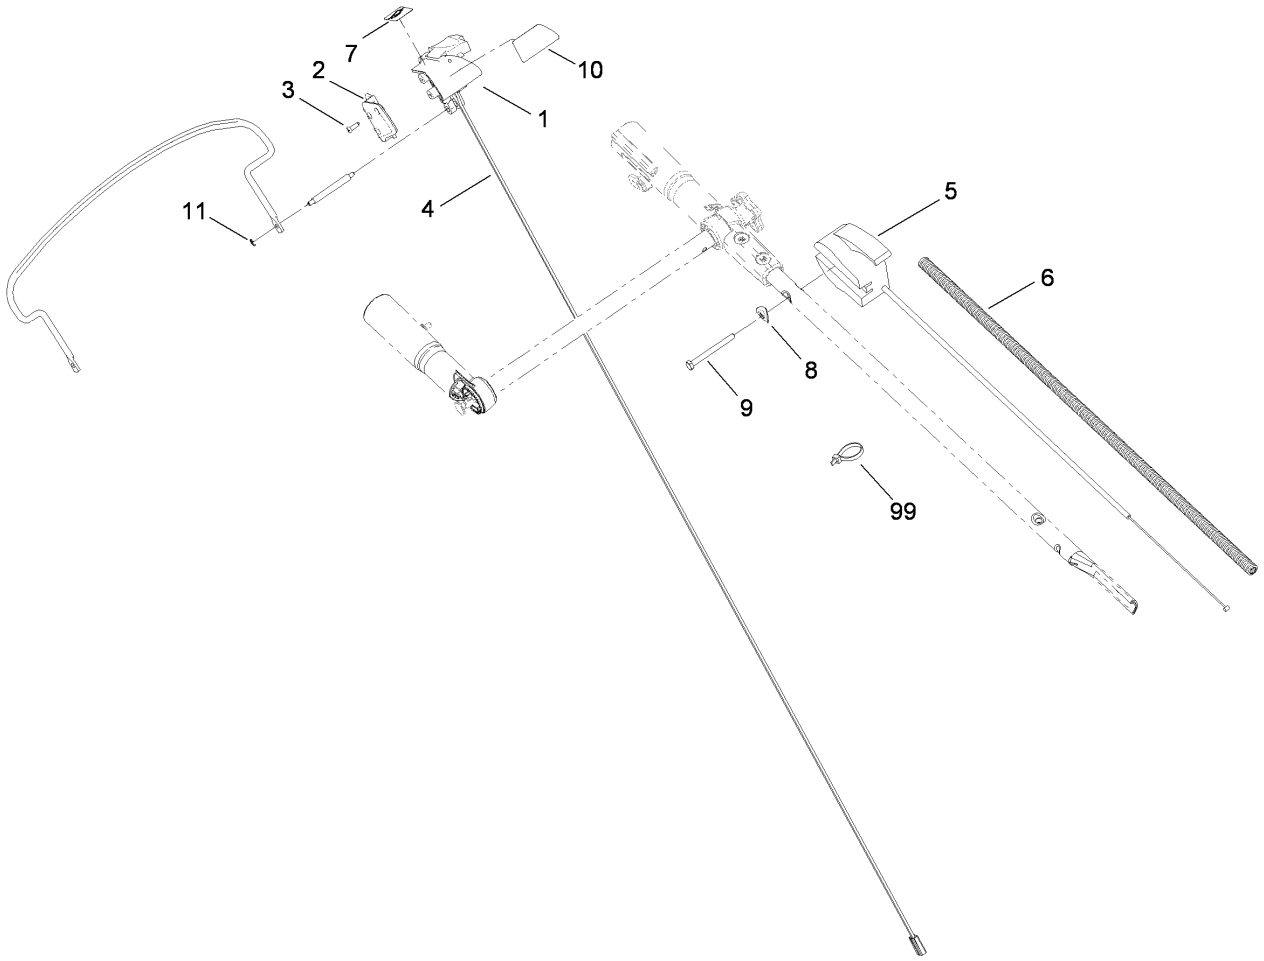

Brake System Handle Assembly

Ref	Part No.	Qty.	Description
1	117-5908	1	Saftey Switch ASM
2	108-7532	1	Cover-Switch
3	32144-111	3	Screw-PPH
4	112-1536	1	Cable-Bcs
5	117-5906	1	Cable-Throttle
6	110-1761	1	Conduit
7	108-9393	1	Decal-Blade
8	107-3844	1	Washer
9	321-57	1	Screw-HH
10	117-5910	1	Decal-Control, Blade
11	110-1758	1	Ring-Retaining
99	614249	4	Strap-Tie

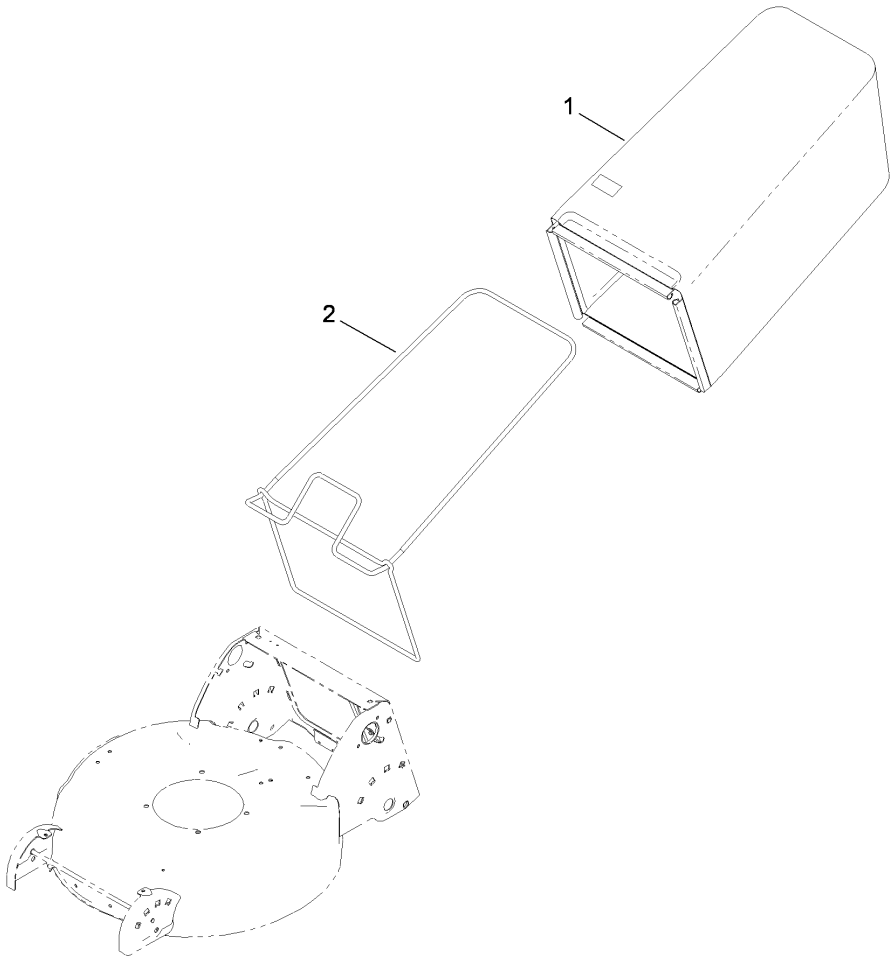

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	117-4191	1	Grass Bag ASM
2	112-8750-03	1	Frame-Bag

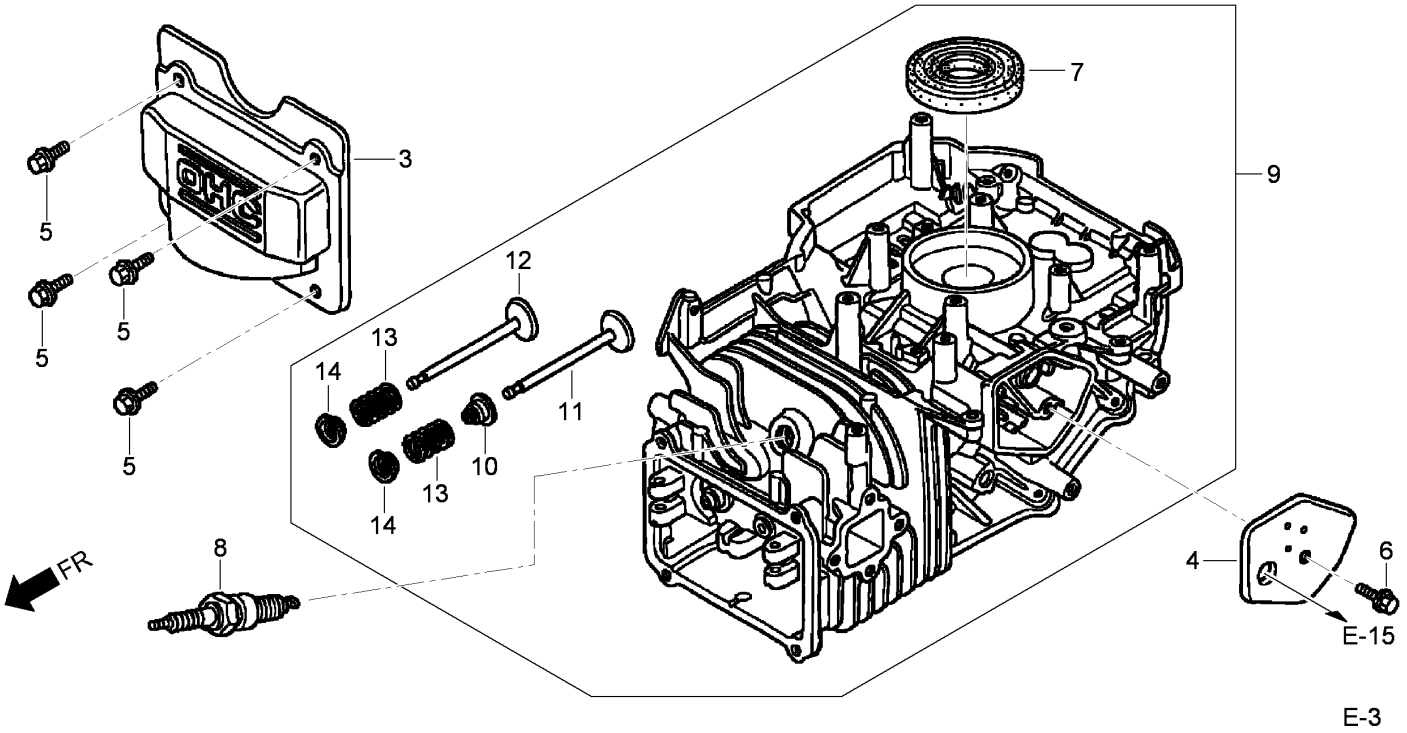

E-3

Cylinder Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷3	12310-Z0J-000	1	Cover-Head, Cylinder
❷3	12311-ZL8-D00	1	Cover-Head
❷3	12311-ZL8-000	1	Cover-Head
❷4	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)
❷5	90013-883-000	4	Bolt-Flange (6X12) (C T200)
❷6	90014-952-000	1	Bolt-Flange (6X14) (C T200)
❷7	91201-ZL8-003	1	Seal (25.4X62X6)
❷8	98079-56846	1	Spark Plug (B P R 6E S) (N G K)
❷9	12000-Z0L-840	1	Cylinder ASM
❷10	12209-ZM0-003	1	Seal-Stem, Valve
❷11	14711-Z0J-000	1	Valve-Intake (Rocknel) (Engine Serial Numbers Up To 6330748)
❷11	14711-Z0J-800	1	Valve-Intake (Engine Serial Numbers Starting At 6330749)
❷12	14721-ZL8-000	1	Valve-Exhaust
❷13	14751-ZL8-000	2	Spring-Valve

Ref	Part No.	Qty.	Description
❷14	14771-Z0J-000	2	Retainer-Spring, Valve

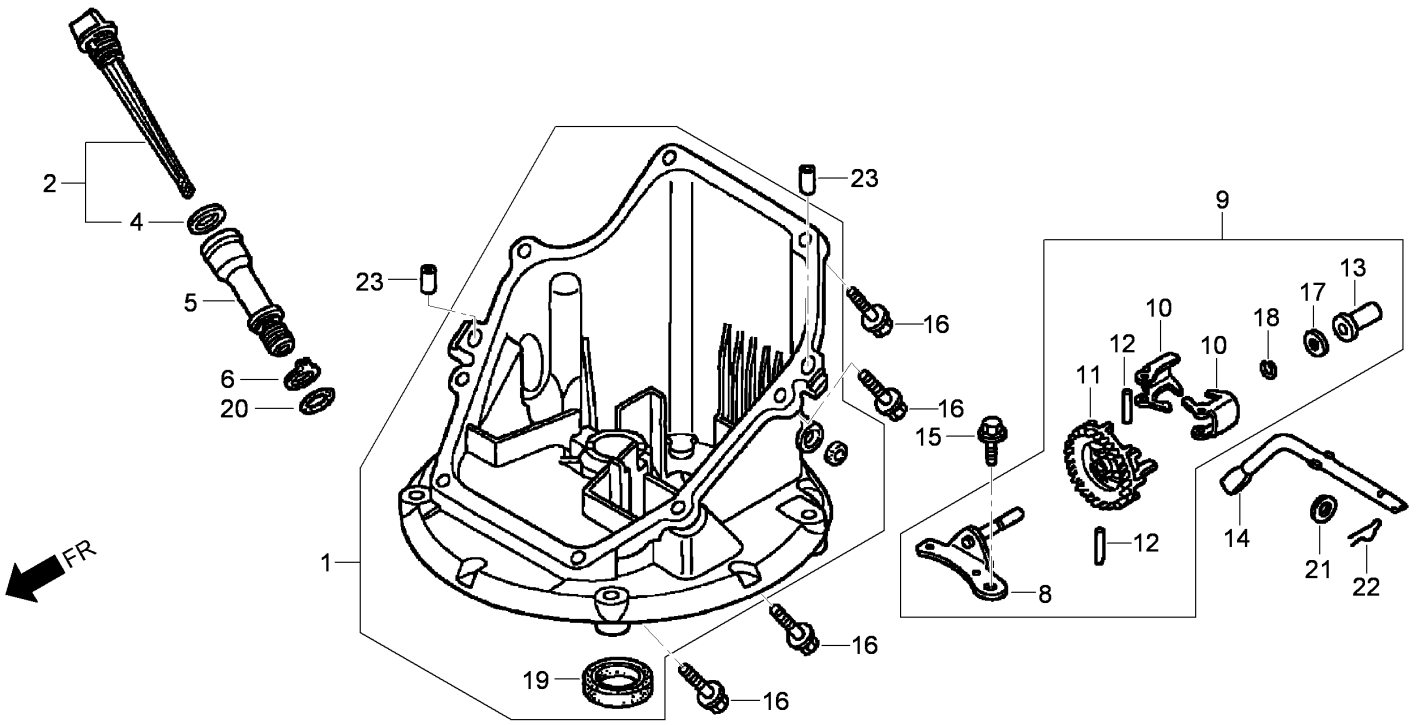

E-6

Oil Pan Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷1	11300-ZM0-811	1	Oil Pan ASM
❷2	15650-ZM0-801	1	Oil Level Gauge ASM
❷4	15625-ZE6-000	1	Gasket-Cap, Oil Filler
❷5	15631-ZM0-000	1	Extension-Filler, Oil
❷6	15639-ZM0-000	1	Washer-Lock, Extension
❷8	16508-ZM0-010	1	Shaft-Holder, Governor
❷9	16510-ZM0-010	1	Governor ASM
❷10	16511-ZL8-000	2	Weight-Governor
❷11	16512-ZM0-000	1	Holder-Weight, Governor
❷12	16513-ZE1-000	2	Pin-Weight, Governor
❷13	16531-ZE1-000	1	Slider-Governor
❷14	16541-ZM0-000	1	Shaft-Arm, Governor
❷15	90014-952-000	1	Bolt-Flange (6X14) (C T200)

Ref	Part No.	Qty.	Description
❷16	90121-952-000	8	Bolt-Flange (6X25) (C T 200)
❷17	90451-ZE1-000	1	Washer-Thrust (6Mm)
❷18	90602-ZE1-000	1	Clip-Holder, Governor
❷19	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
❷20	91356-MA6-005	1	O-Ring (14.8X24) (N O K)
❷21	94101-06800	1	Washer-Plain (6Mm)
❷22	94251-08000	1	Pin-Lock (8Mm)
❷23	94301-08200	2	Pin-Dowel (8X20)

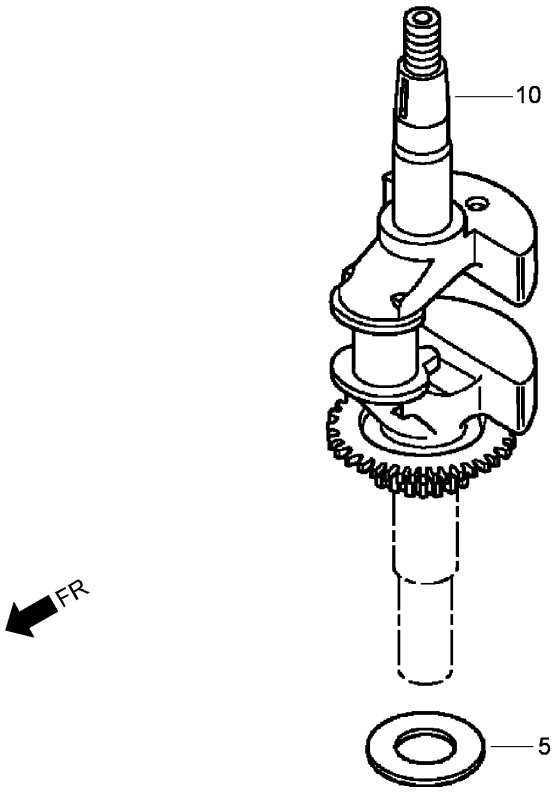

E-7

Crankshaft Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷5	90402-ZL8-000	1	Washer-Thrust
❷10	13310-Z0L-S20	1	Crankshaft

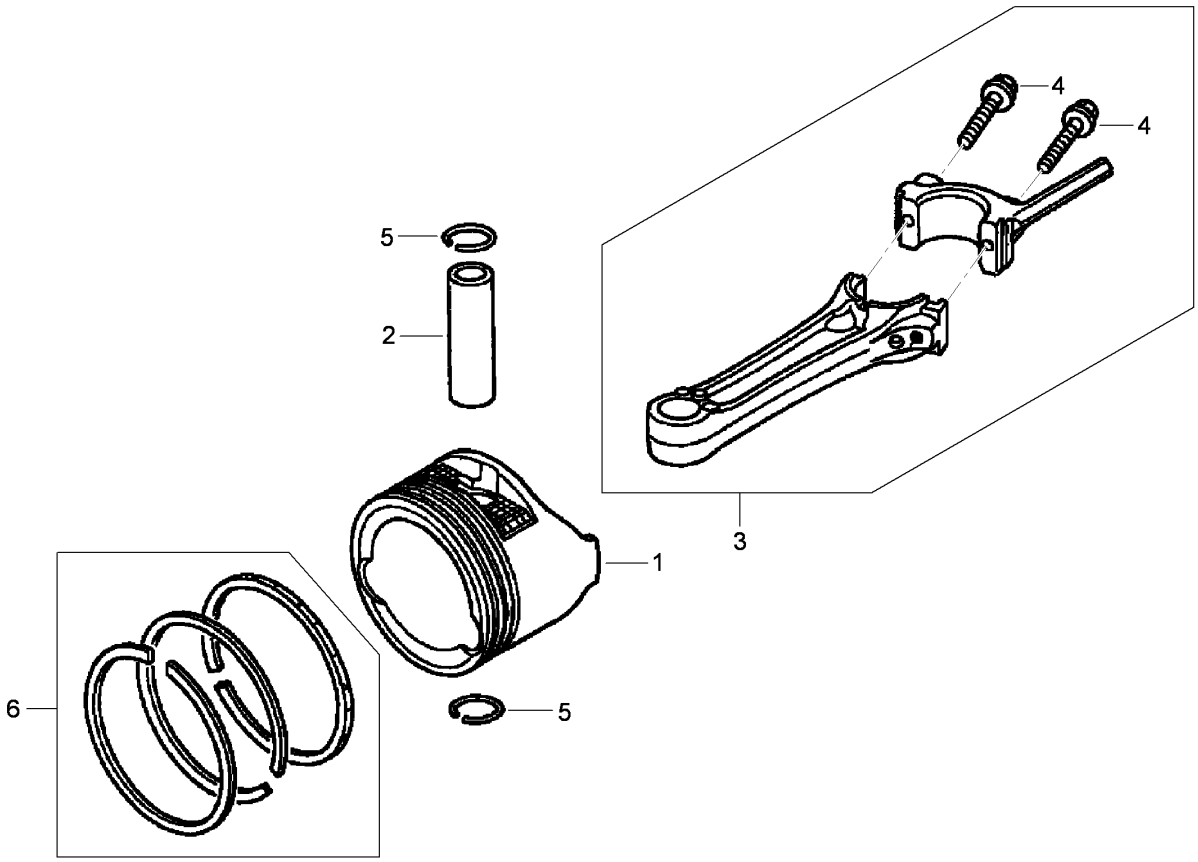

FR

E-8

Piston and Connecting Rod Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷1	13101-ZL8-000	1	Piston (Engine Serial Numbers Up To 5383514)
❷1	13101-Z2A-000	1	Piston (Engine Serial Numbers Up To 5383514)
❷1	13101-Z2A-010	1	Piston (Engine Serial Numbers Starting At 5383515)
❷2	13111-ZE0-000	1	Pin-Piston
❷3	13200-ZL8-000	1	Connecting Rod ASM
❷4	90001-ZE1-000	2	Bolt-Rod, Connecting
❷5	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)
❷6	13010-ZL8-003	1	Piston Ring Set (Riken) (Engine Serial Numbers Up To 5383514)
❷6	13010-ZL8-024	1	Piston Ring Set (Teikoku) (Engine Serial Numbers Up To 5383514)
❷6	13010-Z0L-003	1	Piston Ring Set (Riken) (Engine Serial Numbers Up To 5383514)
❷6	13010-Z0L-004	1	Piston Ring Set (STD) (Teikoku) (Engine Serial Numbers Up To 5383514)
❷6	13010-Z0L-014	1	Piston Ring Set (STD) (Teikoku) (Engine Serial Numbers Starting At 5383515)

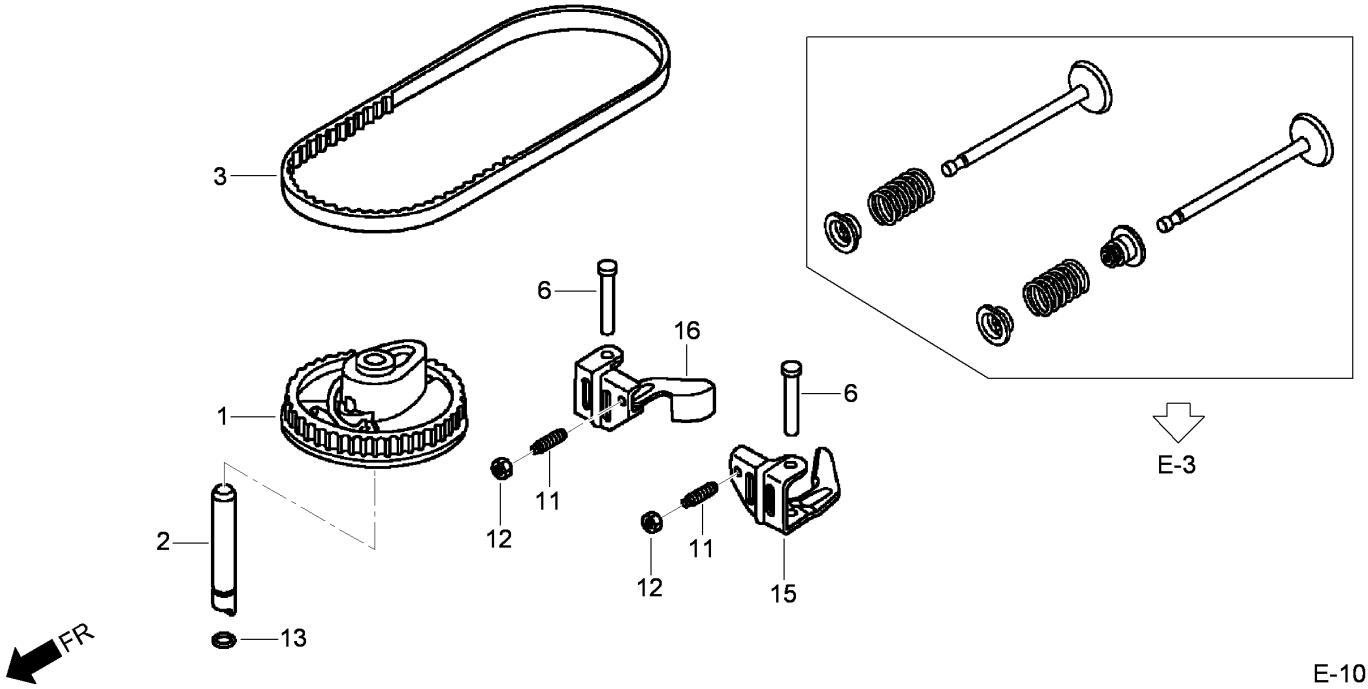

Camshaft Pulley Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷1	14320-ZL8-010	1	Pulley-Camshaft
❷2	14324-ZL8-000	1	Shaft-Pulley, Cam
❷3	14400-Z0J-014	1	Belt-Timing (84H U7 G-200)
❷6	14461-ZL8-000	2	Shaft-Arm, Rocker
❷11	90012-333-000	2	Screw-Adjusting, Tappet
❷12	90206-001-000	2	Nut-Adjusting, Tappet
❷13	91301-ZM0-V31	1	O-Ring (6.8X19) (Arai)
❷15	14431-Z0J-000	1	Arm-Rocker, Intake Valve
❷16	14441-Z0J-000	1	Arm-Rocker, Exhaust Valve

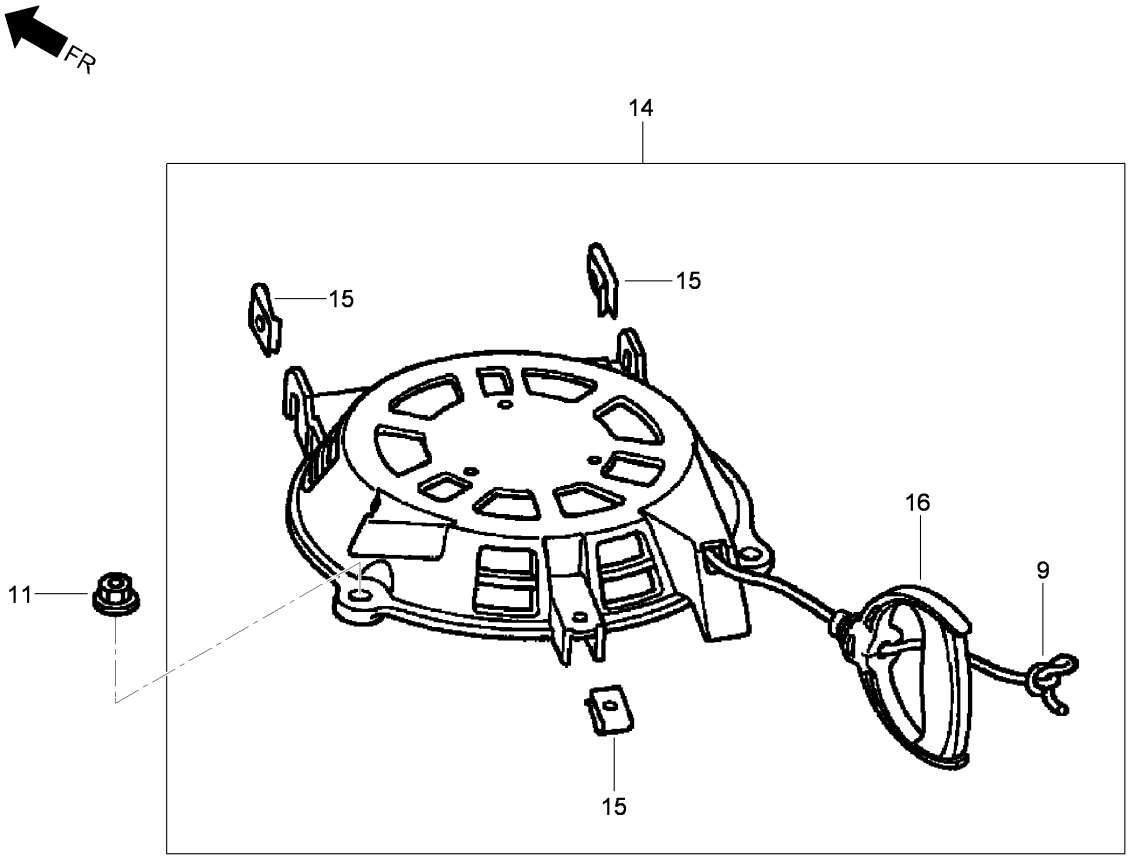

E-11

Recoil Starter Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷9	28462-Z0L-V71	1	Rope-Starter, Recoil (Long Type)
❷11	90201-ZM0-000	3	Nut-Flange (6Mm)
❷14	28400-Z0L-V72	1	Recoil Starter ASM (Long Rope)
❷15	66871-KY2-700	3	Nut-Cowl
❷16	28461-Z0L-V71	1	Knob-Starter, Recoil

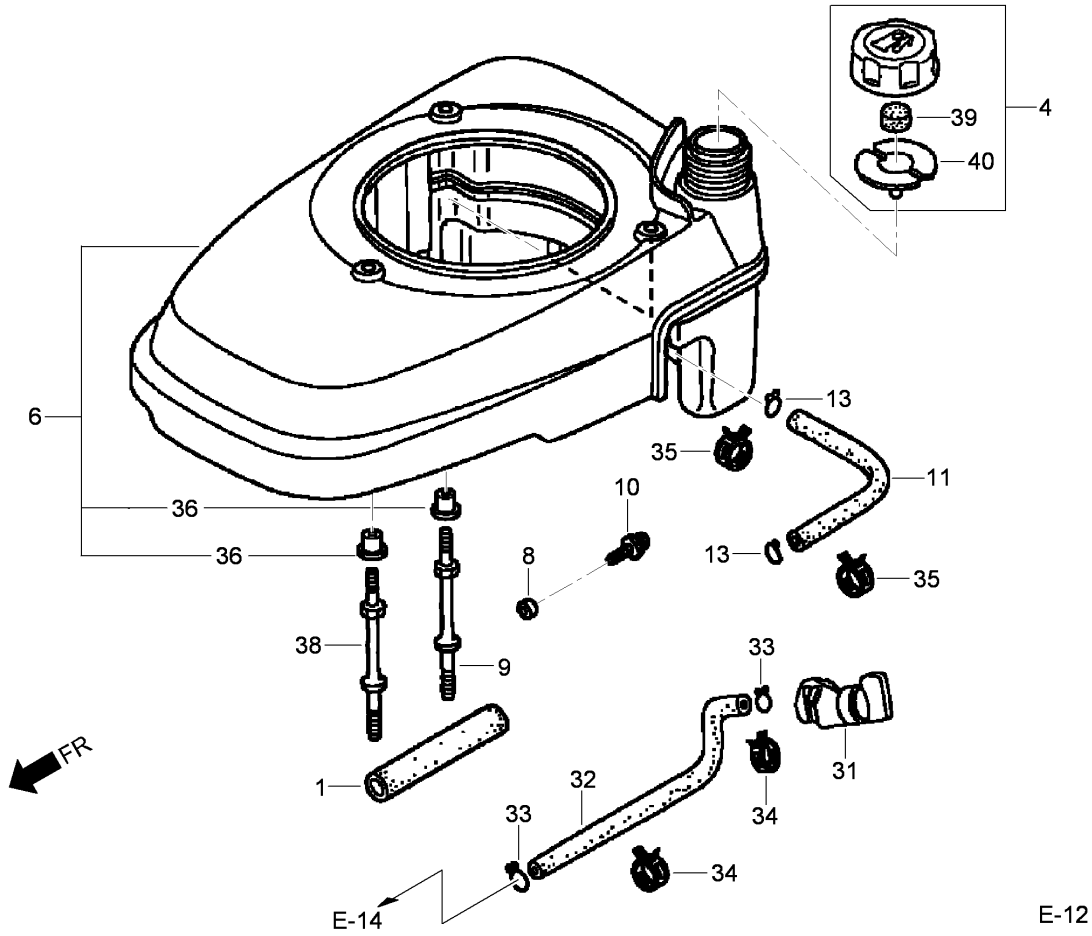

Fan Cover Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷1	16854-ZH8-000	1	Supporter-Rubber (107 Mm)
❷4	17620-ZL8-013	1	Fuel Tank Cap ASM
❷6	19610-Z0L-000ZA	1	Cover-Fan, N H1 (Black)
❷8	33609-GK4-620	1	Collar-Turn Signal, Front
❷9	90043-ZL8-000	2	Bolt-Stud (H=42.5Mm)
❷10	93891-05010-08	1	Screw-Washer (5X10)
❷11	91425-Z0L-801	1	Tube-Fuel (5.3X150) (Fkm) (Engine Serial Numbers Starting At 3698327)
❷11	95001-55003-60M	1	Hose-Fuel, Bulk (5.5X3000) (5.5X100) (Engine Serial Numbers Up To 3698326)
❷13	95002-02100	2	Clip-Tube (B10) (Engine Serial Numbers Up To 3698326)
❷31	16950-ZM0-003	1	Petcock ASM
❷32	17702-ZM0-800	1	Tube-Fuel (Engine Serial Numbers Up To 3698326)
❷32	17702-Z0L-801	1	Tube-Fuel (Fkm) (Engine Serial Numbers Starting At 3698327)
❷33	95002-02080	2	Clip-Tube (B8) (Engine Serial Numbers Up To 3698326)

Ref	Part No.	Qty.	Description
❷34	95002-40800-08	2	Clamp-Tube (D8) (Engine Serial Numbers Starting At 3698327)
❷35	95002-41000-08	2	Clamp-Tube (D10) (Engine Serial Numbers Starting At 3698327)
❷36	19619-ZL8-300	3	Collar-Cover, Fan
❷38	90043-ZL8-000	1	Bolt-Stud (H=42.5Mm)
❷39	17622-ZL8-003	1	Sponge-Breather, Fuel Cap
❷40	17624-ZL8-003	1	Gasket-Cap, Fuel

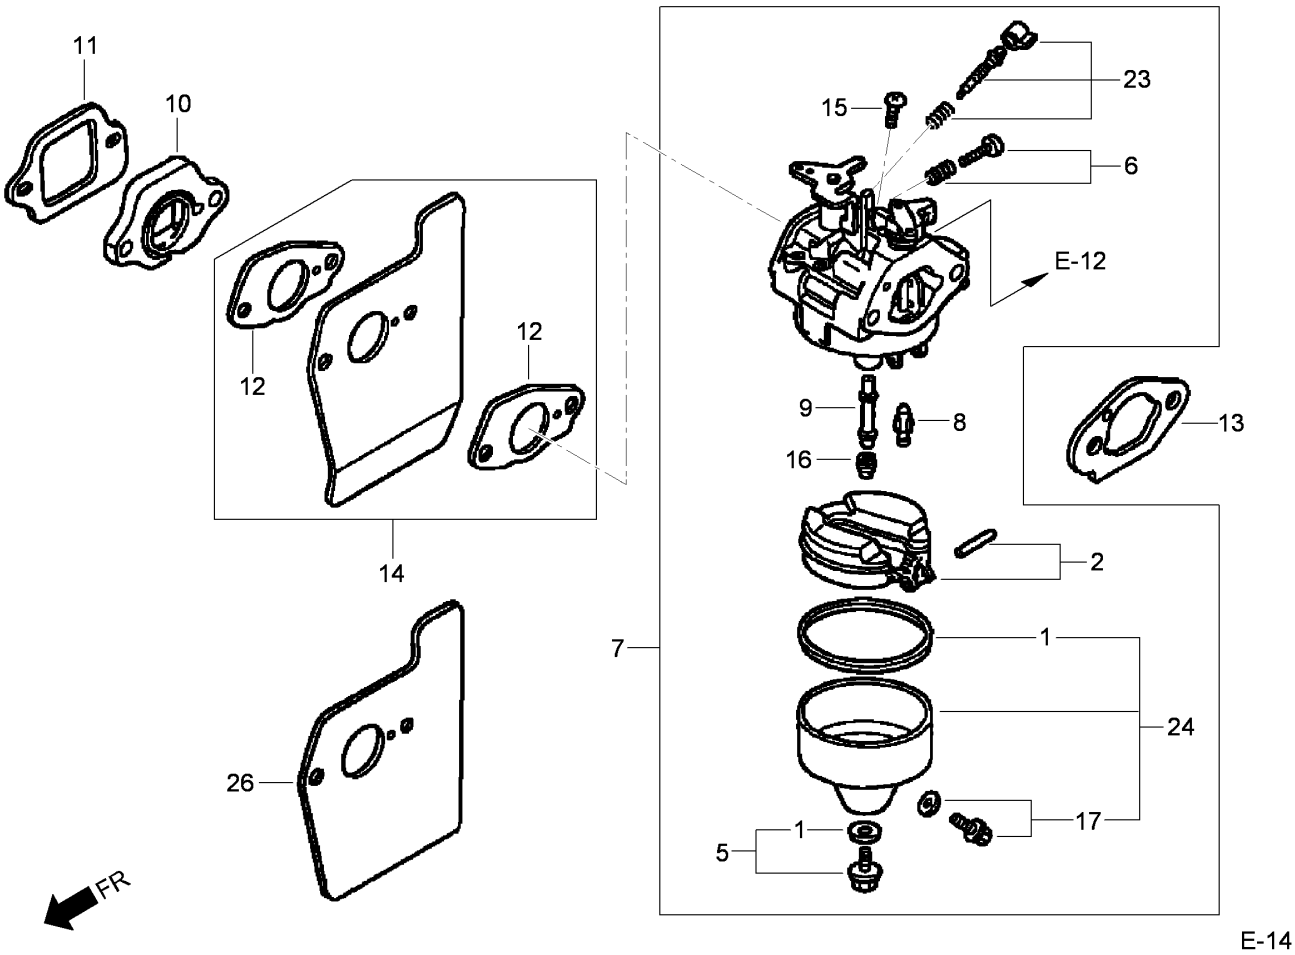

Carburetor Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷1	16010-883-015	1	Gasket Set
❷2	16013-ZL1-003	1	Float Set
❷5	16028-ZE0-005	1	Screw Set
❷5	16028-ZK7-S91	1	Screw Set
❷6	16029-ZG0-901	1	Screw Set (Throttle Stop)
❷7	16100-ZM0-804	1	Carburetor ASM (B B62B E) (Engine Serial Numbers Up To 3698326)
❷7	16100-Z0L-003	1	Carburetor ASM (B B62W A) (Engine Serial Numbers Starting At 3698327)
❷8	16155-ZM0-013	1	Valve-Float
❷9	16166-ZM0-003	1	Nozzle-Main
❷10	16211-ZL8-000	1	Insulator-Carburetor
❷11	16212-ZL8-000	1	Gasket-Insulator
❷12	16221-883-800	2	Gasket-Carburetor (Engine Serial Numbers Up To 6349022)
❷13	16228-ZL8-000	1	Gasket-Carburetor

Ref	Part No.	Qty.	Description
❷14	19650-ZM0-000	1	Guide-Air (Engine Serial Numbers Up To 6349022)
❷15	93500-05006-0H	1	Screw-Pan (5X6)
❷16	99101-124-0600	1	Jet-Main (No.60) (Optional Equipment)
❷16	99101-124-0620	1	Jet-Main (No.62) (Optional Equipment)
❷16	99101-124-0650	1	Jet-Main (No.65)
❷17	16024-ZE1-811	1	Drain Screw Set
❷23	16016-ZG0-W00	1	Screw Set
❷24	16015-887-782	1	Float Chamber Set
❷26	19651-Z0L-000	1	Guide-Air (Engine Serial Numbers Starting At 6349023)

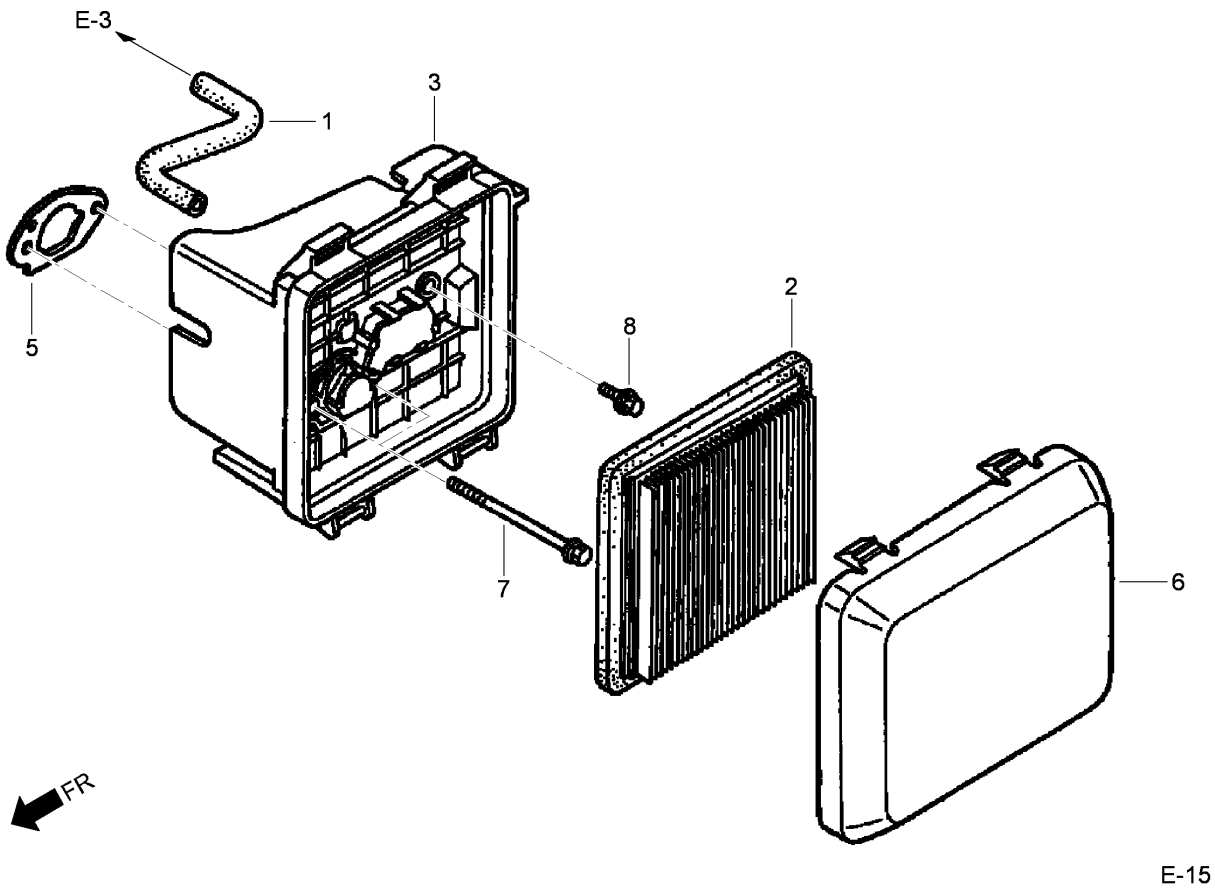

E-15

Air Cleaner Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷1	15721-ZM0-000	1	Tube-Breather
❷2	17211-ZL8-023	1	Element-Cleaner, Air
❷3	17220-ZM0-000	1	Air Cleaner Case ASM
❷3	17220-ZM0-010	1	Air Cleaner Case ASM
❷5	17228-ZM0-000	1	Gasket-Cleaner, Air
❷6	17231-Z0L-030	1	Cover-Cleaner, Air
❷7	90003-ZM0-000	2	Bolt-Flange (6X86) (C T200) (Engine Serial Numbers Up To 6349022)
❷7	90003-ZM0-010	2	Bolt, Flange (6X85) (C T200)
❷8	95701-06014-08	1	Bolt-Flange (6X14)

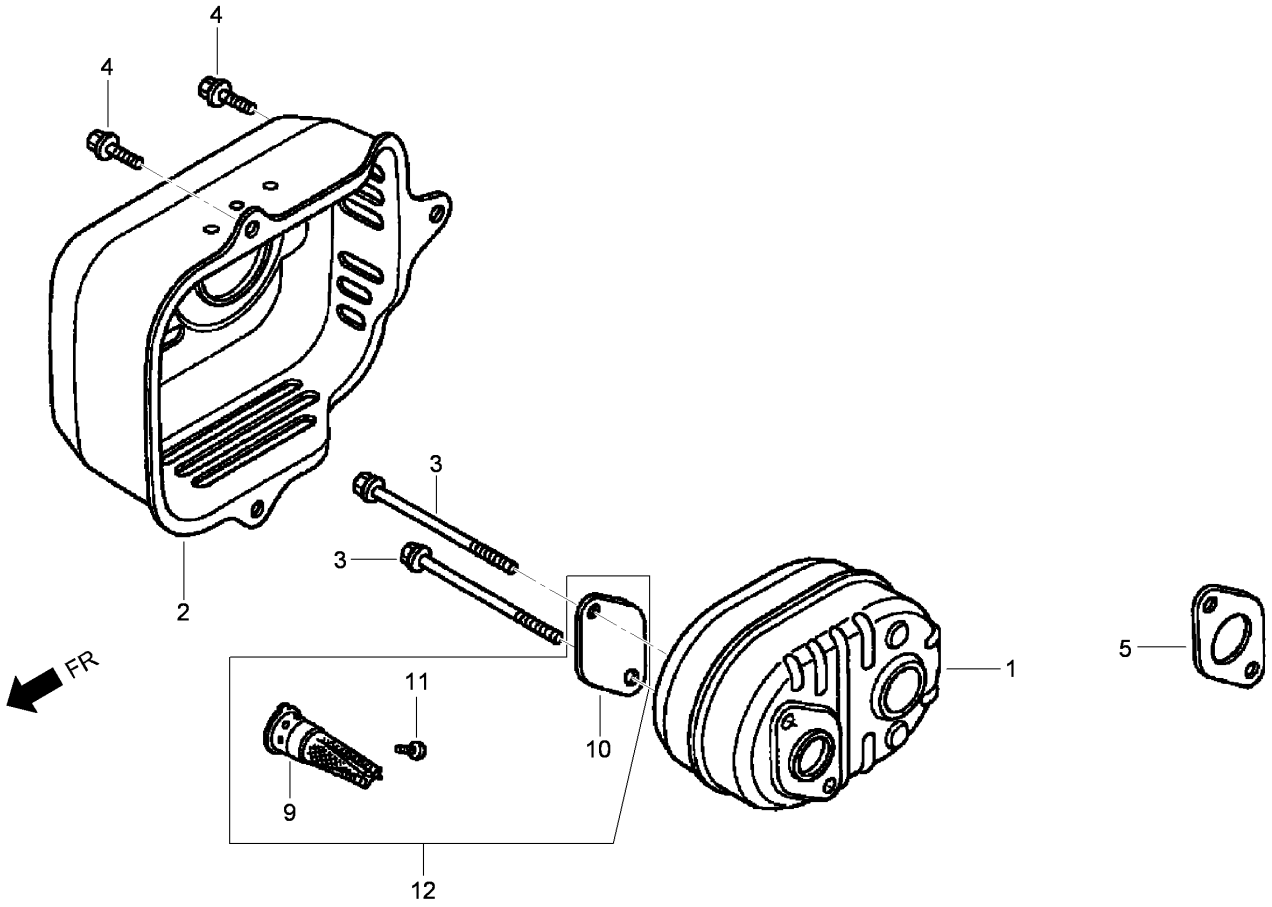

E-16

Muffler Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷1	18310-ZM0-000	1	Muffler
❷2	18321-Z0L-J00	1	Protector-Muffler
❷3	90004-ZL8-000	2	Bolt-Flange (6X79) (C T200)
❷4	90013-883-000	3	Bolt-Flange (6X12) (C T200)
❷5	18381-ZL8-305	1	Gasket-Muffler (Optional Equipment)
❷9	18350-ZL8-000	1	Arrester-Spark (Optional Equipment)
❷10	18356-ZL8-000	1	Plate-Number, Arrester (Optional Equipment)
❷11	90055-ZE1-000	1	Screw-Tapping (4X6) (Optional Equipment)
❷12	06180-Z0J-000	1	Spark Arrester Kit (Optional Equipment)

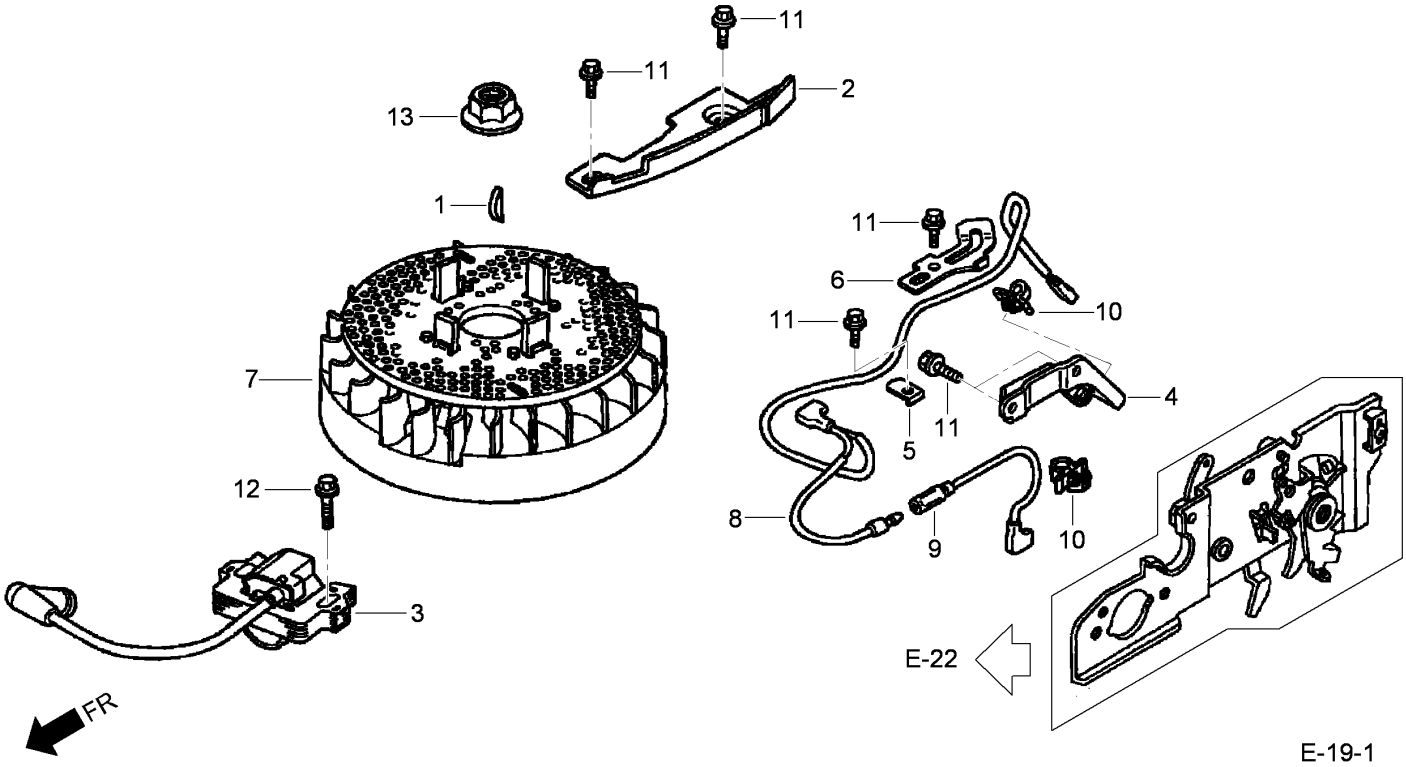

E-19-1

Flywheel Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷1	13331-357-000	1	Key-Woodruff, Special (25X18)
❷2	19612-ZM0-J20	1	Plate-Side (Engine Serial Numbers Up To 5008780)
❷2	19612-Z0L-000	1	Plate-Side (Engine Serial Numbers Starting At 5008781)
❷3	30500-Z0J-003	1	Ignition Coil ASM (Phelon) (Use For Flywheel Of Phelon)
❷4	30547-Z0L-S00	1	Clamp-Wire, Stop Switch
❷5	30548-ZL8-000	1	Clamp-Wire, Stop Switch
❷6	30549-ZL8-000	1	Clamp-Wire
❷7	31105-Z0J-010	1	Flywheel ASM (Phelon) (Use For Ignition Coil Of Phelon)
❷8	32195-Z0L-S20	1	Wire-Switch, Stop
❷9	32196-Z0L-S20	1	Wire-Switch, Stop
❷10	51125-Z0L-003	2	Holder-Wire (Fastex)
❷10	90681-959-003	2	Clip A-Cable (3.8Mm Black) (Nifco)
❷11	90013-883-000	6	Bolt-Flange (6X12) (C T200)

Ref	Part No.	Qty.	Description
❷12	90022-888-010	1	Bolt-Flange (6X20) (C T200)
❷13	90201-878-003	1	Nut-Special (14 Mm)

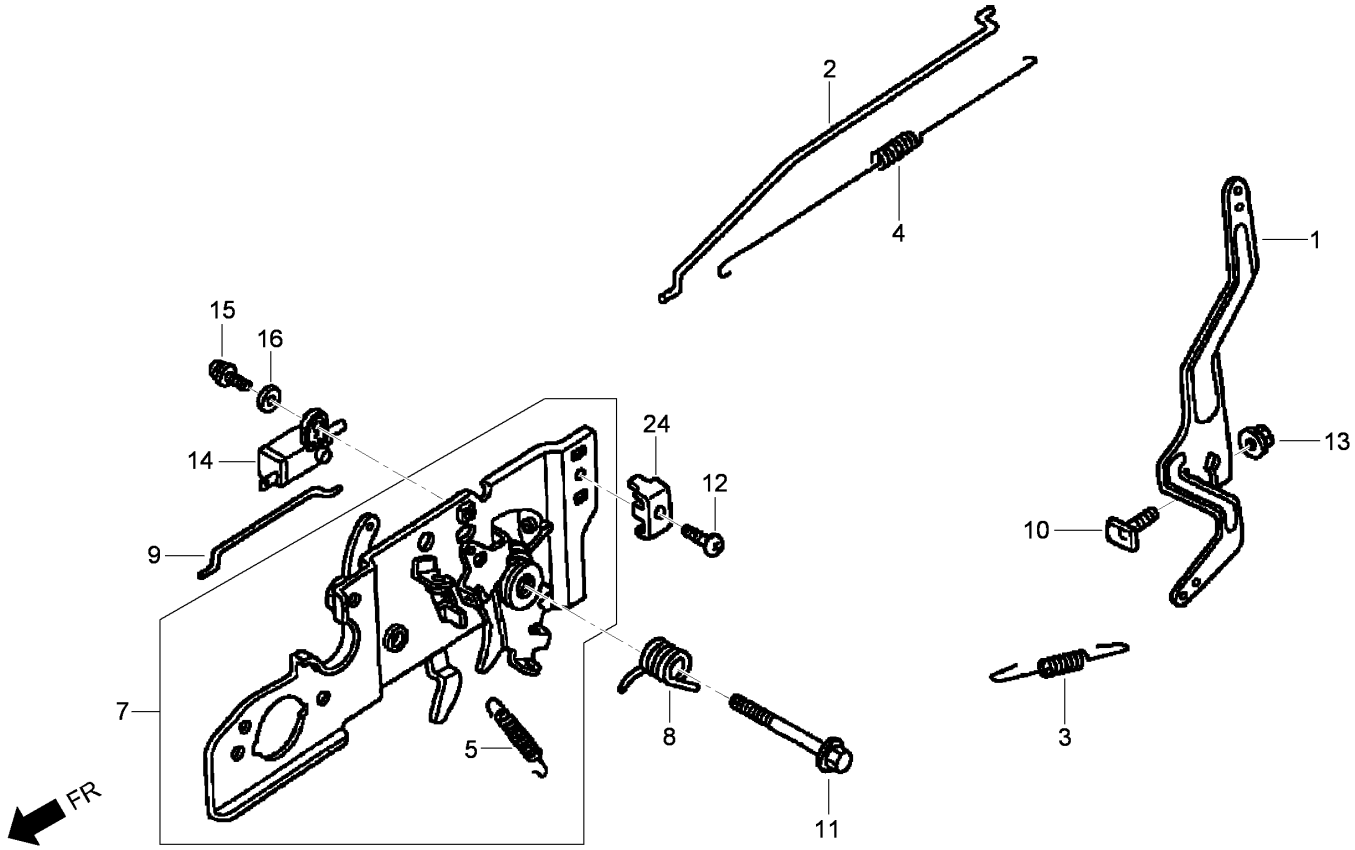

E-22

Control Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷1	16551-ZM0-010	1	Arm-Governor
❷2	16555-Z0L-800	1	Rod-Governor (Engine Serial Numbers Up To 6349022)
❷2	16555-Z0L-801	1	Rod-Governor (Engine Serial Numbers Starting At 6349023)
❷3	16561-Z0L-000	1	Spring-Governor
❷4	16562-ZM0-000	1	Spring-Return, Throttle
❷5	16576-ZE7-300	1	Spring-Lever
❷7	16580-ZM0-J23	1	Base-Control
❷8	16593-ZM0-000	1	Spring-Return, Control Lever
❷9	16674-ZM0-000	1	Rod-Choke
❷10	90015-ZE5-010	1	Bolt-Arm, Governor
❷11	90016-ZM0-000	1	Bolt-Flange (6X45) (Ct200)
❷12	93500-05016-0A	1	Screw-Pan (5X16)
❷13	94050-06000	1	Nut-Flange (6 Mm)
❷14	35120-ZL8-003	1	Engine Stop Switch ASM

Ref	Part No.	Qty.	Description
❷15	93892-04012-00	1	Screw-Washer (4X12)
❷16	94103-04000	1	Washer-Plain (4Mm)
❷24	16617-VG3-000	1	Holder-Cable

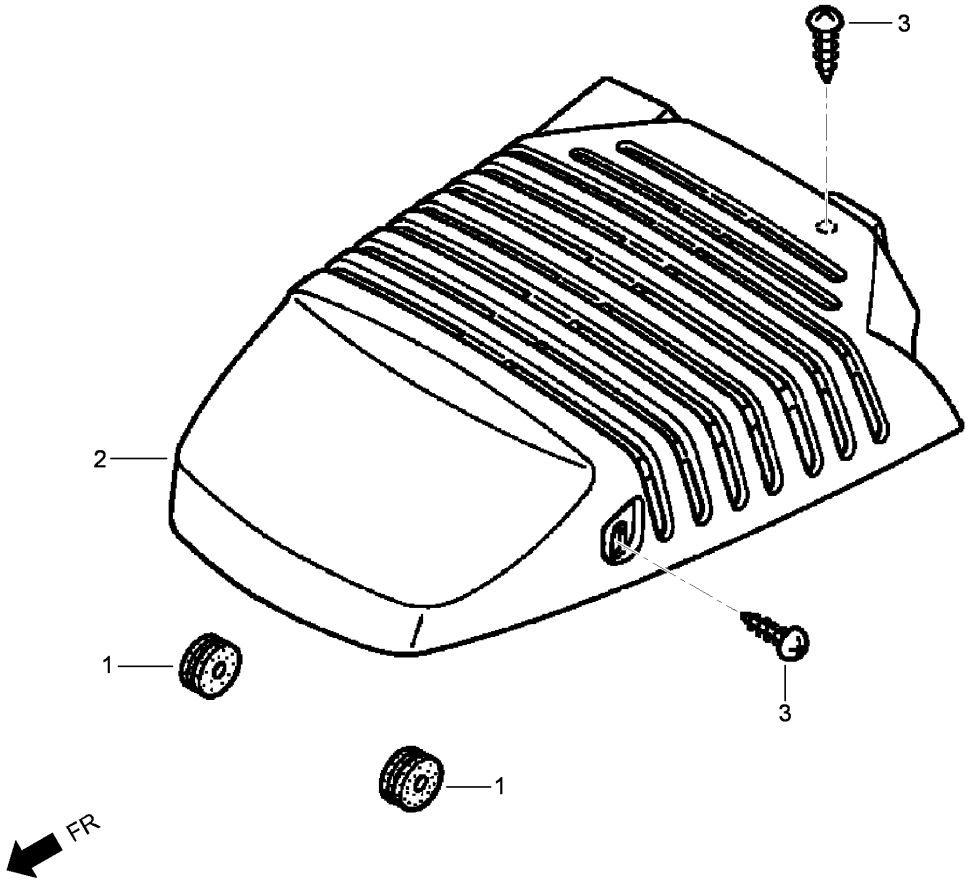

E-27

Top Cover Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷1	16613-883-610	2	Grommet-Rod, Choke
❷2	19721-Z0L-000ZA	1	Cover-Top (N H1) (Black)
❷3	90137-SH3-000	3	Screw-Tapping (4X16)

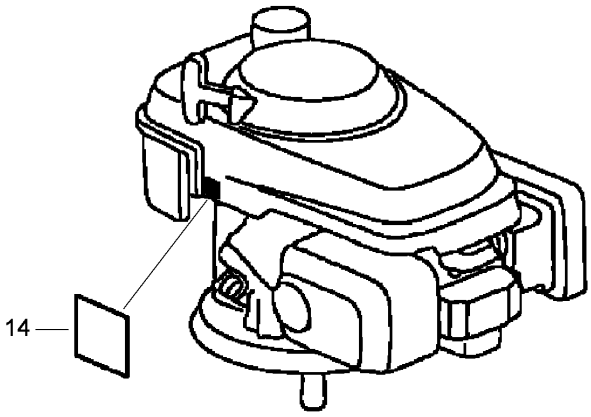

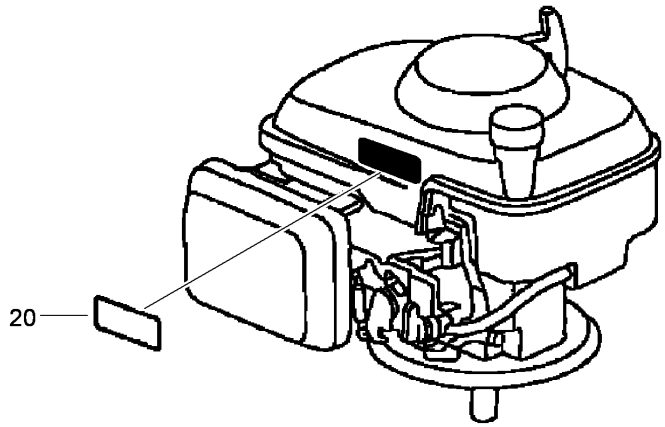

E-28

Label Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❷14	87594-VG3-010	1	Mark-Caution, Oil
❷20	87114-ZH7-821	1	Label-Warning (Not Certified For Sale)

Attachments and Accessories

For 20194 - Super Bagger Lawn Mower

Product Name	Model/Part
Cruise Control Kit	89919

NOTES

NOTES

TORO®