FORM NO. 3318–256


TORO®

MODEL NO. 30139–690001 & UP

PARTS CATALOG

PROLINE 37”

RECYCLER® Rotary Cutting Unit Ce

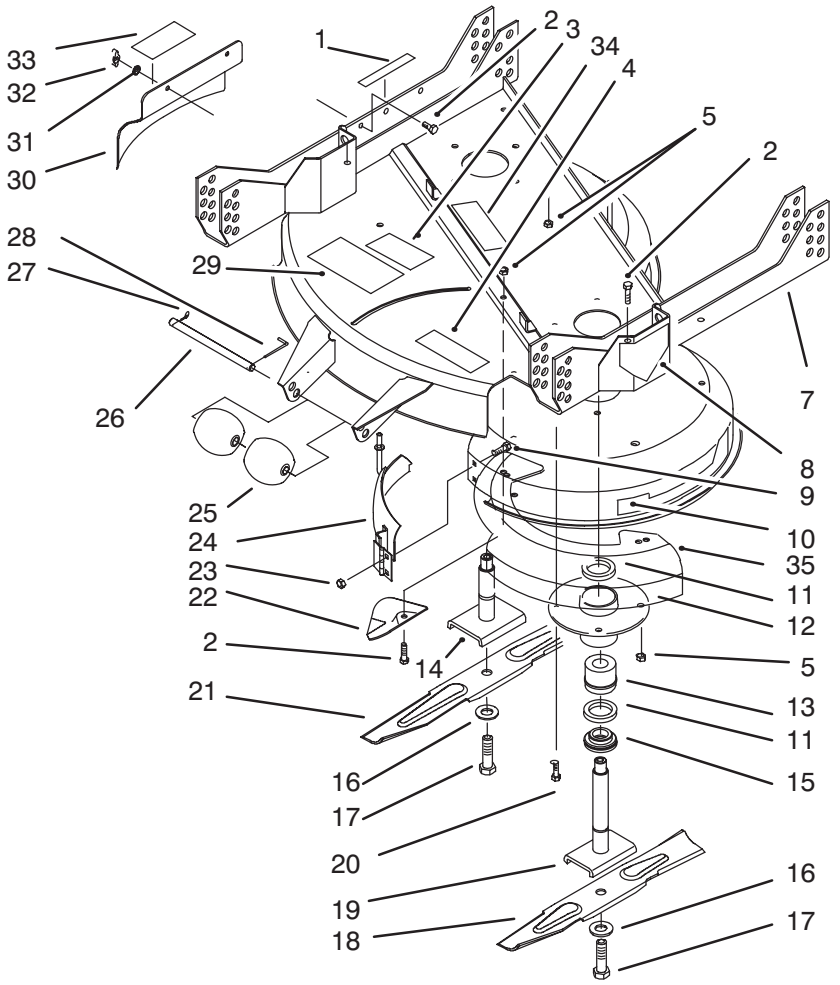

C–1078


DECK & SPINDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	(Ref.)	Decal – Danger	
2	322–5	Screw – Hex. Hd.	15
3	(Ref.)	Decal – Caution	
4	(Ref.)	Decal – Discharge Door	
5	3296–29	Nut – Lock	15
7	92–3134	Deck Support	1
8	(Ref.)	Decal – Danger	
9	3229–22	Bolt – Carriage	2
10	(Ref.)	Decal – 37”	
11	253–139	Seal – Wave	4
12	82–5990	Housing – Spindle	2
13	46–8530	Bearing Assembly	2
*	27–5970	Set – Matched Bearings	1
14	84–4430	Shaft – Spindle	1
15	27–0950	Spacer – Spindle Bearing	2
16	3253–8	Washer – Lock	2
17	51–4060	Bolt – Blade	2
18	93–0107	Blade – 17”	1

Ref. No.	Part No.	Description	No. Used
19	51–3552	Shaft – Spindle	1
20	322–7	Screw – Hex. Hd.	1
21	93–0106	Blade – 21”	1
22	84–5760	Plate – Kicker	7
23	32149–2	Nut – Keps	2
24	92–2932	Cover – Front	1
25	29–4820	Roller	2
26	40–6400	Shaft – Roller	1
27	3272–11	Pin – Cotter	1
28	57–0690	Pin – Special Cotter	1
29	(Ref.)	Decal – Danger	1
30	86–9870	Cover – Discharge Chute	1
31	3255–8	Washer – Ext. Tooth	2
32	32103–27	Nut – Wing	2
33	(Ref.)	Decal – Danger	
34	(Ref.)	Decal – Danger	
35	92–2937	Insert – Deck	1

© The TORO Company –1995
All Rights Reserved.

TPS

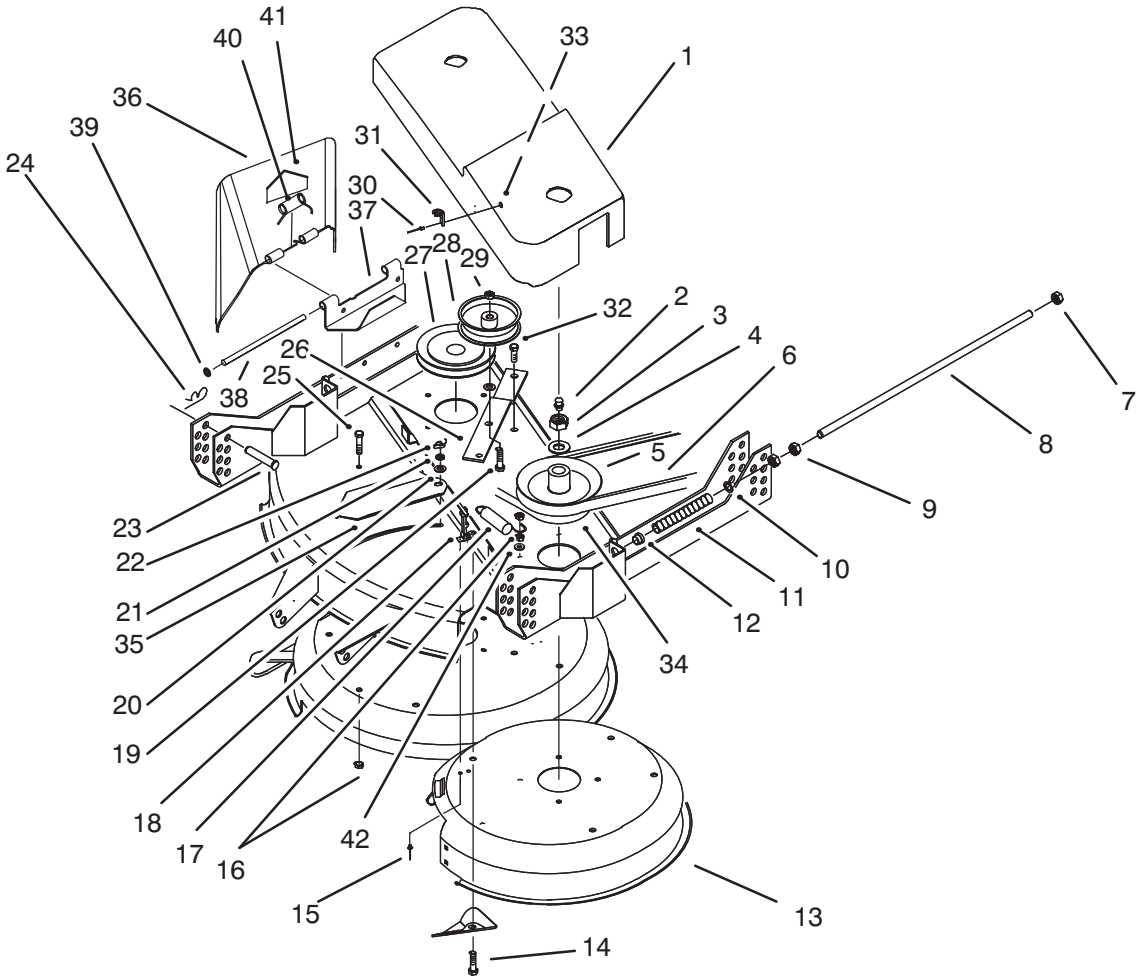


C–1073

COVER & PULLEY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	84–4350	Cover – Pulley	1
2	302–2	Fitting – Grease	2
3	32146–20	Nut – Lock	2
4	7–4150	Spacer – Bearing	2
5	84–4360	Pulley – Center	1
6	84–4390	V–Belt – Deck Drive	1
7	3296–45	Nut – Lock	2
8	74–0310	Shaft – Adjusting	2
9	3218–5	Nut – Jam	4
10	41–8440	Washer – Flat	2
11	74–0290	Spring – Compression	2
12	256–156	Bushing	2
13	92–9689	Deck	1
14	322–7	Screw – Hex. Hd.	1
15	3296–13	Rivet – Pop	4
16	3296–29	Nut – Lock	6
17	54–1160	Spring – Extension	1
18	117344	Handle – Latch	2
19	323–9	Screw – Hex. Hd.	1
20	3256–24	Washer – Flat	2
21	3255–8	Washer – Ext. Tooth	1
22	32103–27	Nut – Wing	1

Ref. No.	Part No.	Description	No. Used
23	283–55	Pin – Clevis	4
24	3290–355	Cotter – Hairpin	4
25	322–5	Screw – Hex. Hd.	4
26	84–4330	Lever – Idler	1
27	84–4440	Pulley – Outside	1
28	36–3220	Pulley – Idler	1
29	3296–39	Nut – Hex	1
30	3290–415	Rivet – Pop	4
31	117343	Keeper – Latch	2
32	19–1471	Bolt – Shoulder	1
33	3269–10	Washer – Backup	4
34	84–4410	V–Belt – Deck	1
35	84–4420	Cover – Slot	1
36	82–7520	Deflector – Discharge	1
37	82–7530	Hinge – Deflector	1
38	82–7540	Pin – Hinge	1
39	32151–56	Ring – Retaining	2
40	40–6230	Spring – Torsion	1
41	54–9220	Decal – Danger	1
42	3256–23	Washer – Flat	3
*	117341	Latch Assembly (Incl. Ref. # 18 & 31)	2


*Not Illustrated

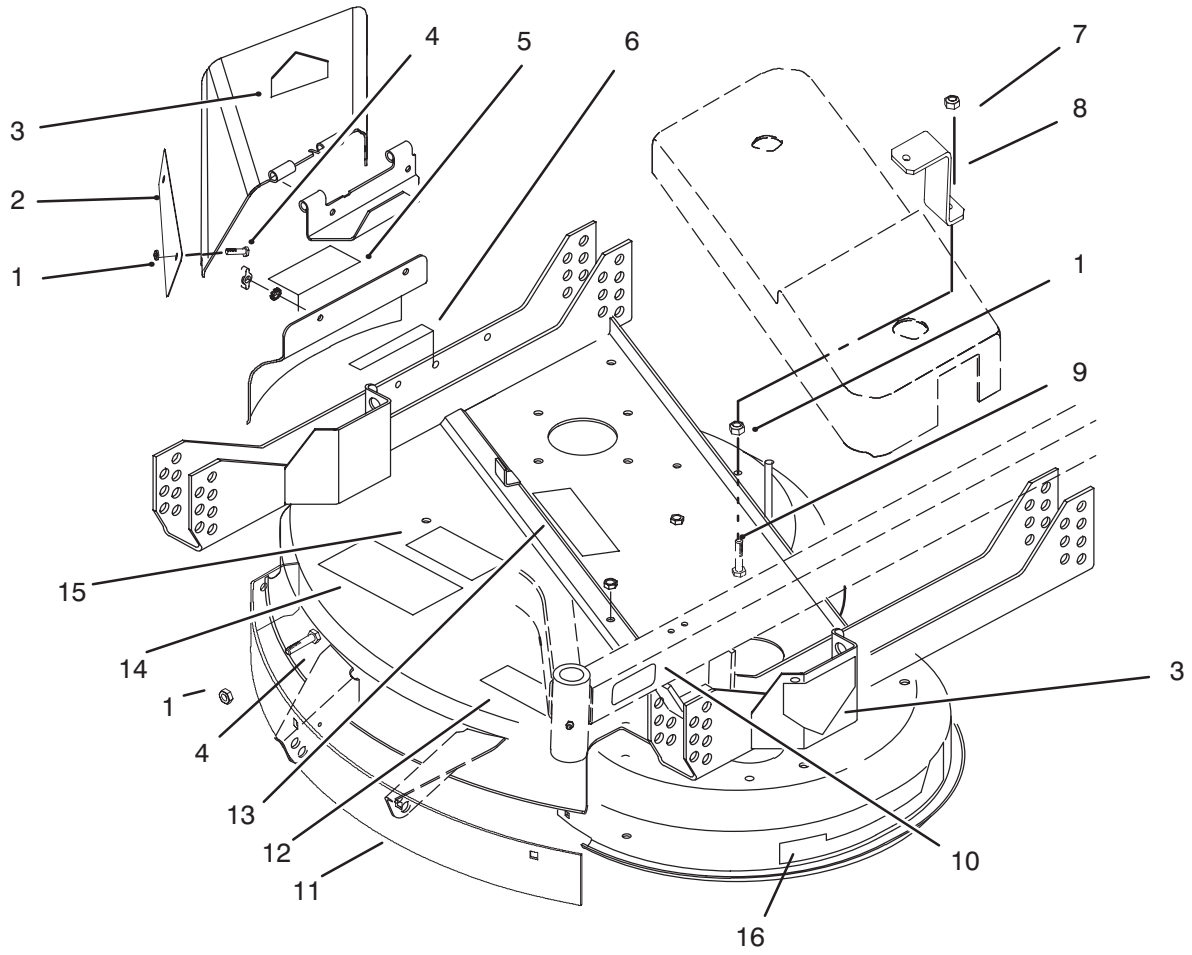

Decals, Baffles And Attaching Parts

Ref. No.	Part No.	Description	No. Used
1	3296–47	Nut – Lock	8
2	93–9481	Baffle – Deflector	1
3	93–7316	Decal – Danger	2
4	322–3	Screw – Hex. Hd.	7
6	93–6667	Decal – Danger	1
5	93–7302	Decal – Warning	1
7	3217–6	Nut – Hex. Hd.	1
8	93–9482	Bracket – Guard Belt	1

Ref. No.	Part No.	Description	No. Used
9	322–6	Screw – Hex.Hd.	1
10	93–7819	Decal – Hieght of Cut	2
11	93–9483	Baffle – Front	1
12	93–7274	Decal – Discharge Door	1
13	93–7273	Decal – Danger	1
14	93–7825	Decal – Danger	1
15	93–7818	Decal – Blade Bolt Torque	1
16	84–4340	Decal – 37”	1

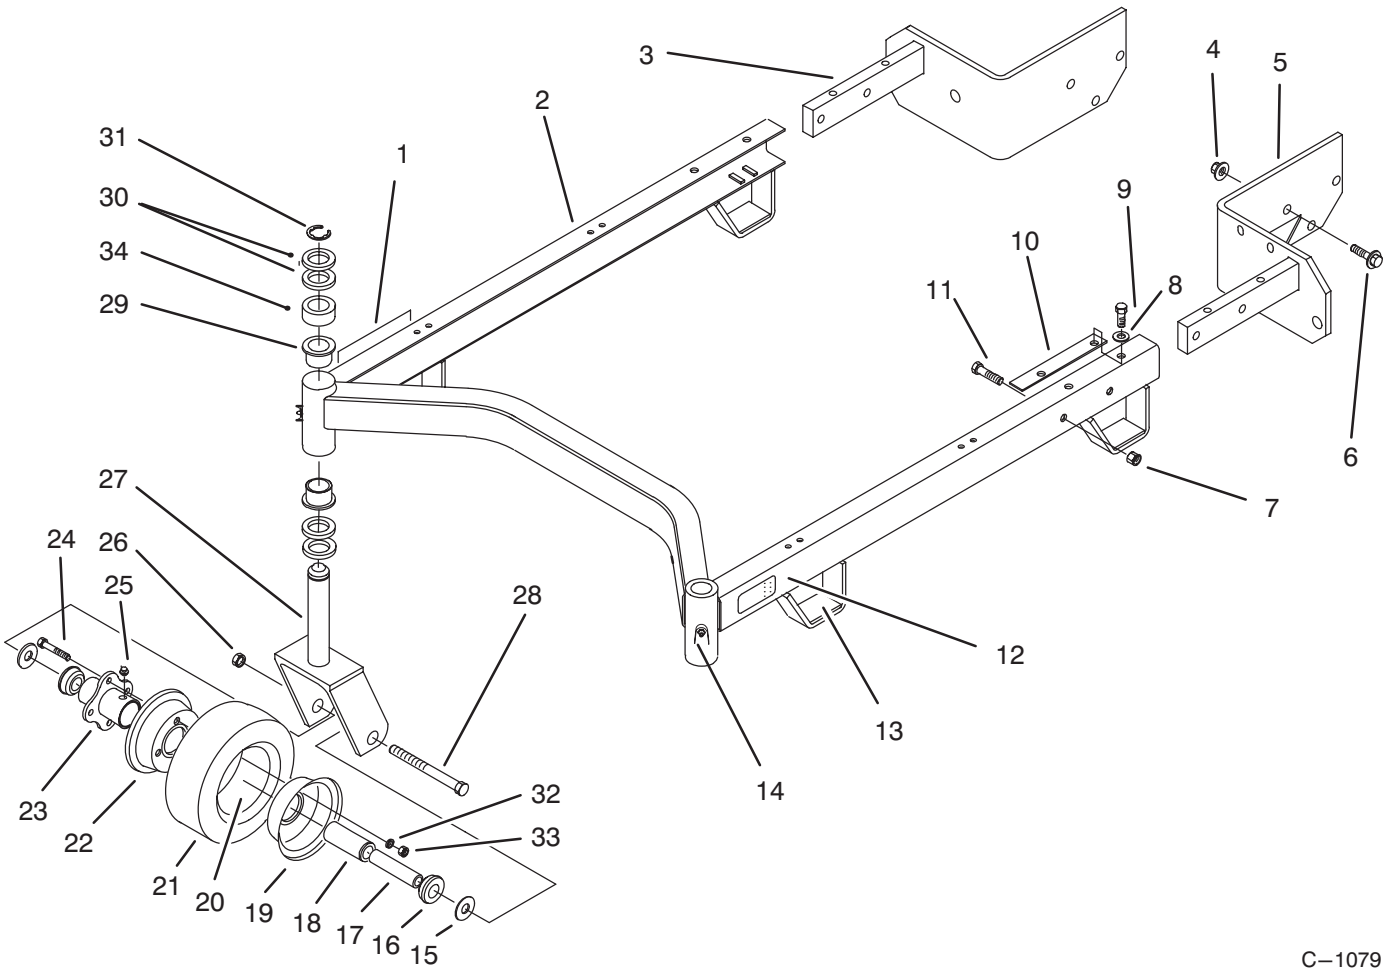

C–1079

CARRIER FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	(Ref.)	Decal – Height of Cut	
2	94–4166	Suspension Frame	1
3	86–7110	Angle Bracket – R.H.	1
4	32128–23	Nut – Lock	6
5	86–7100	Angle Bracket – L.H.	1
6	3234–6	Screw – Hex Washer Hd. (Gear Drive Only)	6
*	3234–32	Screw – Hex Washer Hd. (Hydraulic Drive Only)	6
7	32152–2	Nut – Lock	4
8	3256–24	Washer – Flat	4
9	3235–21	Screw – Hex. Hd.	4
10	62–6980	Shim – Carrier	2
11	323–9	Screw – Hex. Hd.	4
12	(Ref.)	Decal – Height of Cut	
13	74–0340	Cushion – Rubber	4
14	302–5	Fitting – Grease	2
15	3256–6	Washer – Flat	4
16	62–5580	Bushing	4
17	68–8980	Spanner	2

Ref. No.	Part No.	Description	No. Used
18	62–5570	Bearing	2
19	68–8930	Wheel Half – male	2
20	68–8950	Tube w/Valve	2
21	68–8960	Tire	2
22	68–8920	Wheel Half – Female	2
23	68–8940	Hub – Centered	2
24	54–8890	Bolt – Wheel	8
25	302–61	Fitting – Grease	2
26	32153–5	Nut – Lock	2
27	74–0251	Front Castor Fork	2
28	325–19	Screw – Hex. Hd.	2
29	94–1291	Bushing	4
30	3–6781	Washer – Thrust	8
31	32151–91	Ring – Retaining	2
32	3253–4	Washer – Lock	8
33	3217–6	Nut – Lock	8
34	93–1167	Spacer – Castor	2
*	13–3869	Caster Wheel Assembly (Incl Ref. #16, 18–25, 32 & 33)	2

* Not Illustrated.