FORM NO. 3318–511

TORO®

MODEL NO. 20441–6900001 & UP
MODEL NO. 20443–6900001 & UP
MODEL NO. 20453–6900001 & UP

PARTS CATALOG

21" RECYCLER®
Rear Bagging Mower

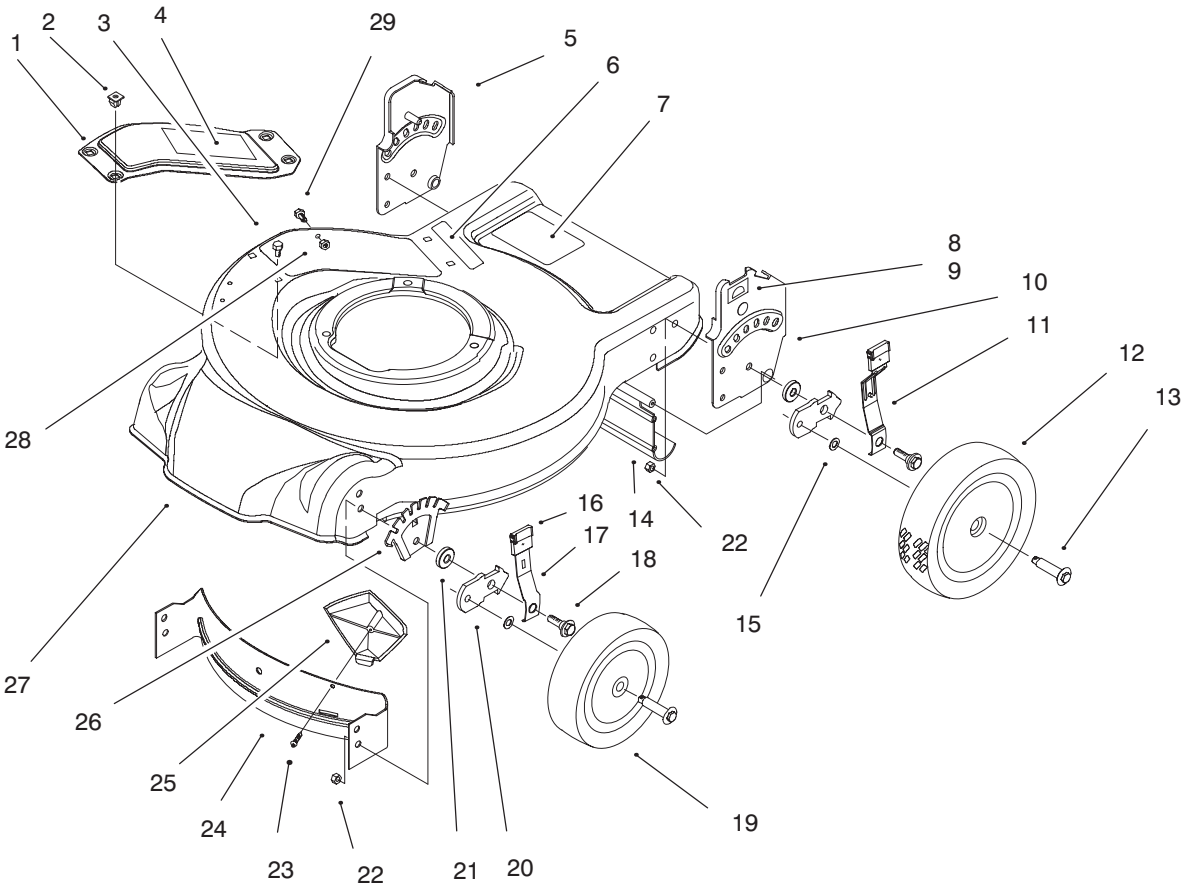

C–2288

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	16–9269	Cover – Recycling (Incl. Ref. #4) (Model No. 20441 & 20443)	1
2	93–0242	Grommet (Model No. 20441 & 20443)	4
3	32144–4	Screw – Tapping (Model No. 20441 & 20443)	4
4	85–7060	Decal – Danger (Model No. 20441 & 20443)	1
5	93–0236	Bracket – Handle R.H.	1
6	93–0262	Decal – Warning	1
7	93–0248	Decal – Warning	1
8	92–2915	Decal – HOC L.H.	1
9	92–2914	Decal – HOC R.H.	1
10	93–0235	Bracket – Handle L.H.	1

Ref. No.	Part No.	Description	No. Used
11	92–1005	Spring Arm Assembly	2
12	92–9592	Wheel Assembly	2
13	614650	Bolt – Shoulder	4
14	92–8647	Shield – Trailing	1
15	40–1940	Washer	4
16	92–1008	Knob – Height Adjust	4
17	614687	Spring Arm Assembly	2
18	614672	Bolt – Shoulder	4
19	92–9591	Wheel Assembly	2
20	614637	Bracket – Wheel Height Adj.	4
21	92–4890	Washer	4
22	3296–39	Nut – Lock	4
23	93–0231	Screw – Plastite	2
24	93–0222	Baffle – Front	1
25	93–0216	Kicker – Front	1

Copyright 1995 The Toro Company
All Rights Reserved

3318−511

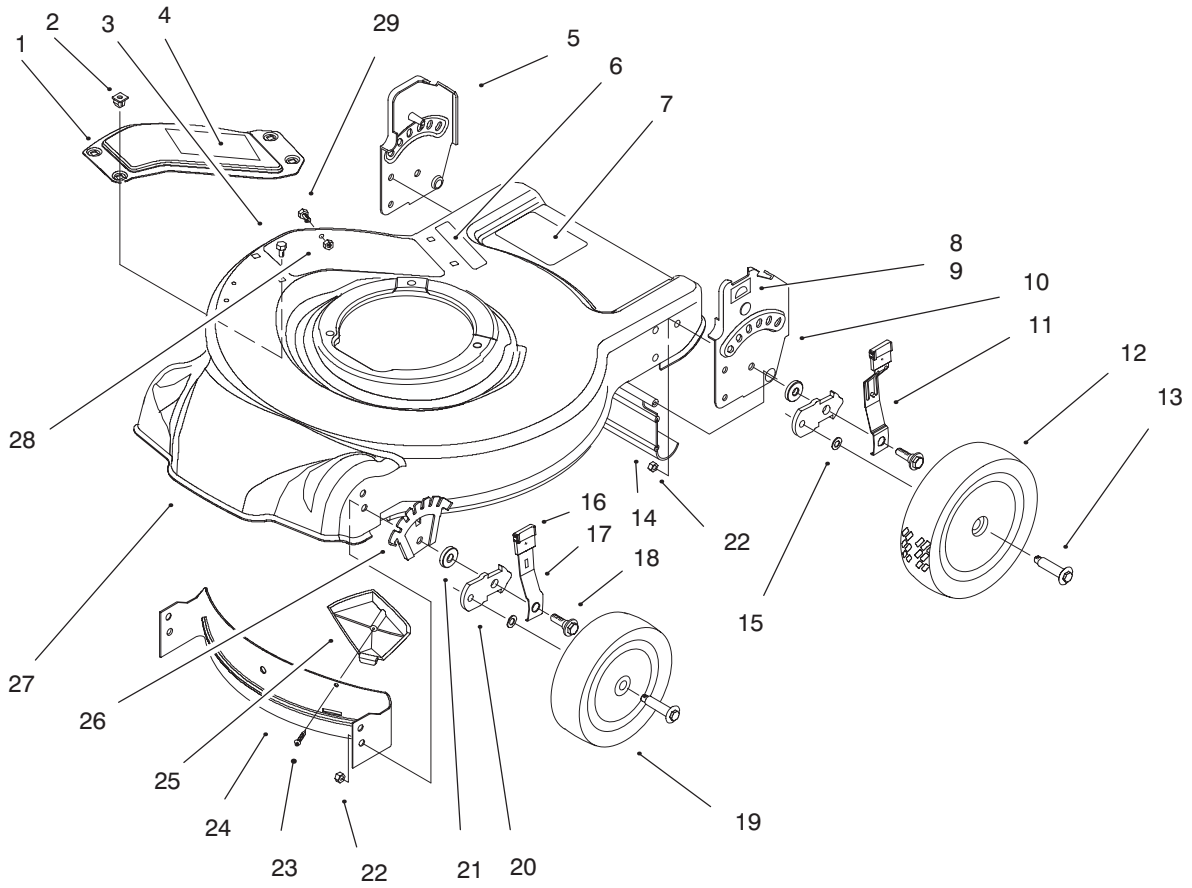

C−2288

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
26	92−4881	Plate − Height Adjust	2
27	16−9259	Deck Assembly (Incl. Ref. #6 & 7 pg. 1) (Incl. Ref. #14 pg. 3)	1

Ref. No.	Part No.	Description	No. Used
28	3296−2	Nut − Lock (Model No. 20441 & 20443)	1
29	32105−27	Screw − Hex Washer Hd. (Model No. 20441 & 20443)	1

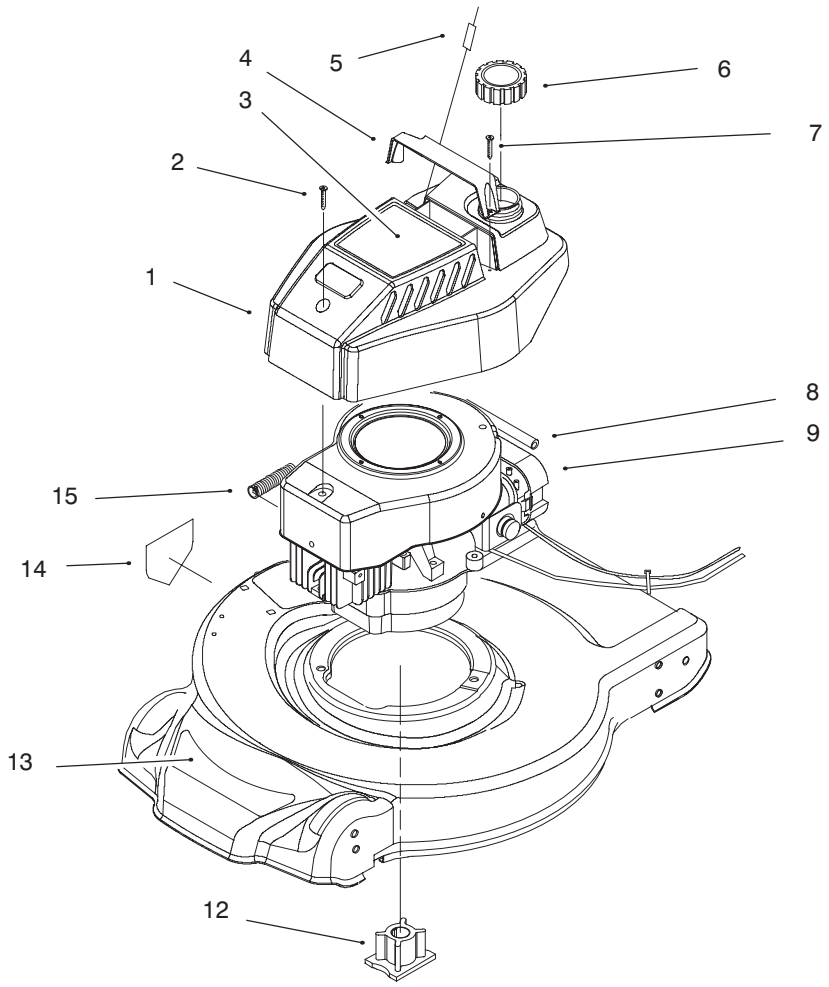

C−2289

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92−6396	Shroud − Engine (Model No. 20441 Only)	1
2	93−4302	Screw − Sems (Model No. 20441 Only)	3
3	93−0246	Decal − Engine (Model No. 20441 Only)	1
4	93−1200	Cover − Strap (Model No. 20441 Only)	1
5	92−1701	Rope − Stop (Model No. 20441 Only)	1
6	55−3578	Gas Cap Assembly (Model No. 20441 Only)	1

Ref. No.	Part No.	Description	No. Used
7	32104−118	Screw − Phillips Hd. (Model No. 20441 Only)	2
8	68−3632	Line − Fuel (Model No. 20441 Only)	1
9		Engine (Model No. 20441 Only)	1
12	52−7320	Retainer − Blade (Model No. 20441 Only)	1
13	93−0245	Decal − Deck	1
14	39−5770	Decal − Danger	1
15	66−5370	Spring − Compression (Model No. 20441 Only)	1

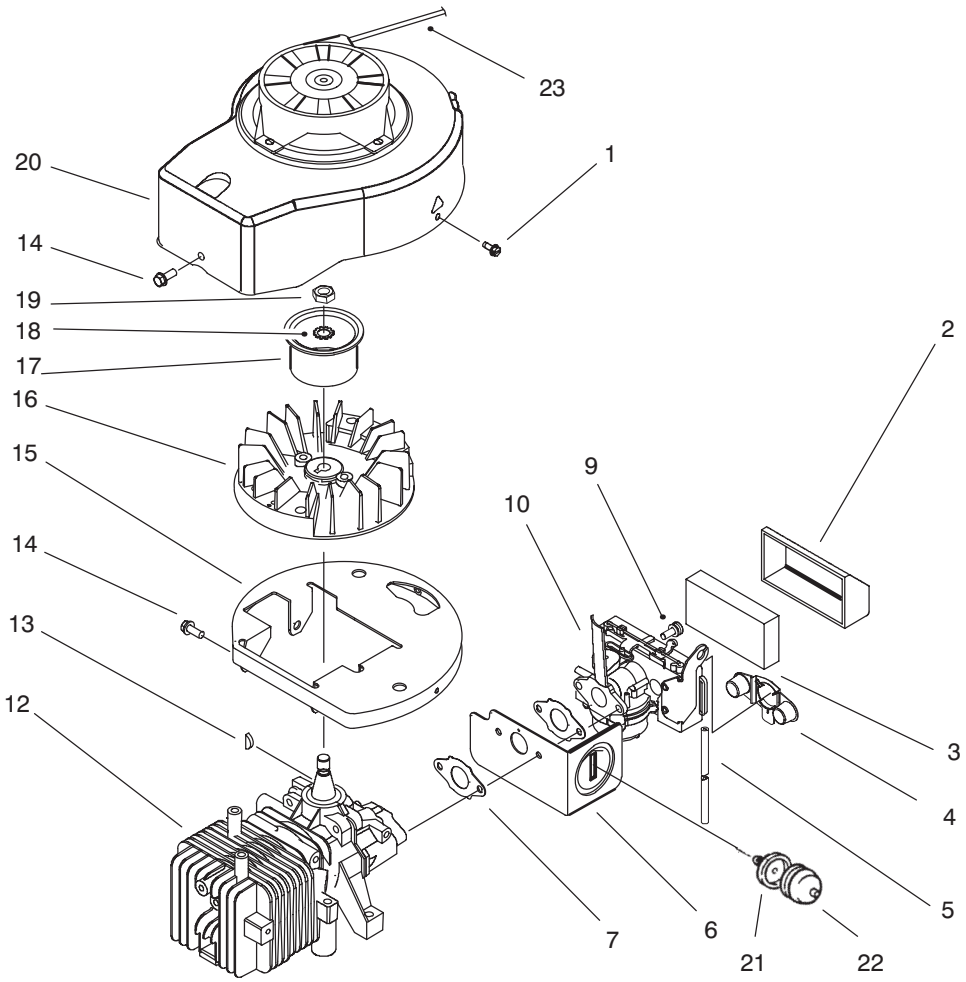

C–2244A

SHROUD & BLOCK ASSEMBLY (Model No. 20441 Only)

Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3
2	93–1231	Cover – Air Filter	1
3	609493	Element – Air Filter	1
4	93–4320	Plug	1
5	44–3172	Hose – Primer	1
6	93–1227	Shield – Carburetor	1
7	92–4948	Gasket – Carburetor	2
9	609482	Screw	2
10	93–4331	Carburetor Assembly	1
12	94–5731	Short Block Assembly	1
13	607199	Key	1

Ref. No.	Part No.	Description	No. Used
14	614702	Screw	4
15	93–1216	Base – Shroud	1
16	684743	Flywheel Assembly	1
17	614640	Hub – Starter	1
18	316959	Washer – Lock	1
19	130743	Nut	1
20	93–1248	Shroud	1
21	44–2750	Body – Primer	1
22	66–7460	Bulb – Primer	1
23	93–4304	Rope	1

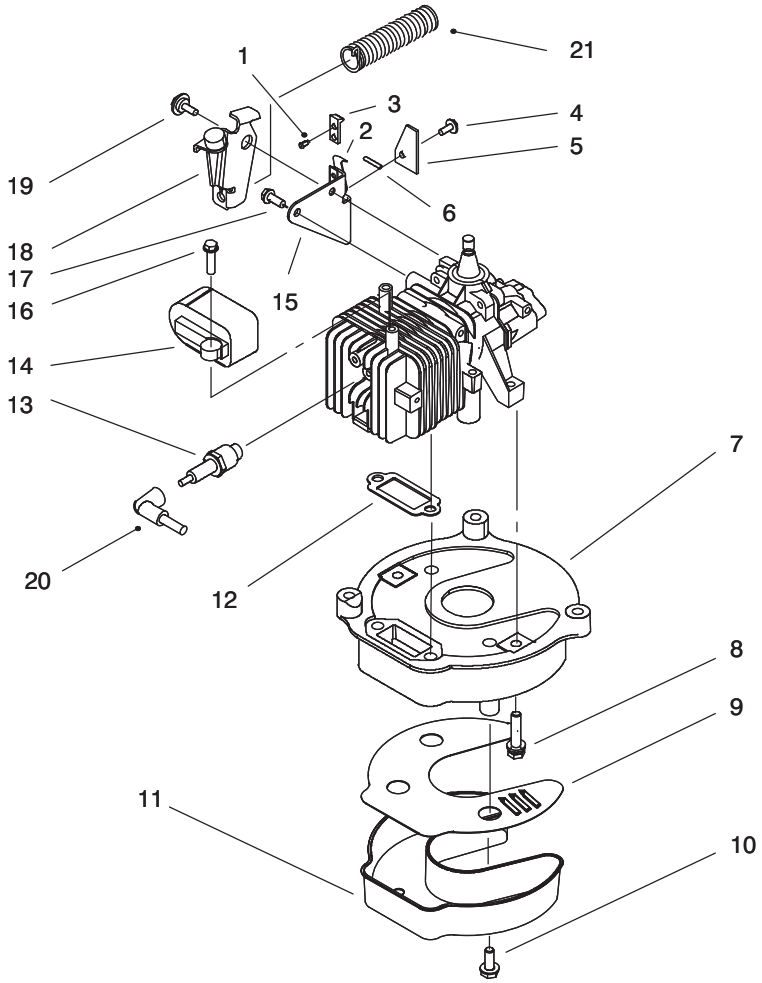

C–1899

BRAKE & MUFFLER ASSEMBLY (Model No. 20441 Only)

Ref. No.	Part No.	Description	No. Used
1	3290–459	Rivet	2
2	60–9010	Strap – Ground	1
3	92–2925	Strap – Insulation	1
4	12–5450	Screw – Thread Forming	1
5	53–4690	Stop – Ground Strap	1
6	92–1156	Wire – Brake Switch Lead	1
7	614654	Plate – Muffler	1
8	607601	Screw	4
9	614681	Baffle	1
10	609471	Screw	3
11	93–1108	Cover – Muffler	1

Ref. No.	Part No.	Description	No. Used
12	93–1233	Gasket – Exhaust	1
13	614009	Plug – Spark	1
14	684049	Ignition Assembly (Incl. Ref. #20)	1
15	84–7820	Plate – Brake Mount	1
16	613208	Screw – Hex Washer Hd.	2
17	614702	Screw	1
18	93–4312	Plate – Brake Assembly	1
19	92–9698	Screw – Shoulder	1
20	681678	Lead & Cover Assembly	1
21	93–4306	Spring – Compression	1

3318–511

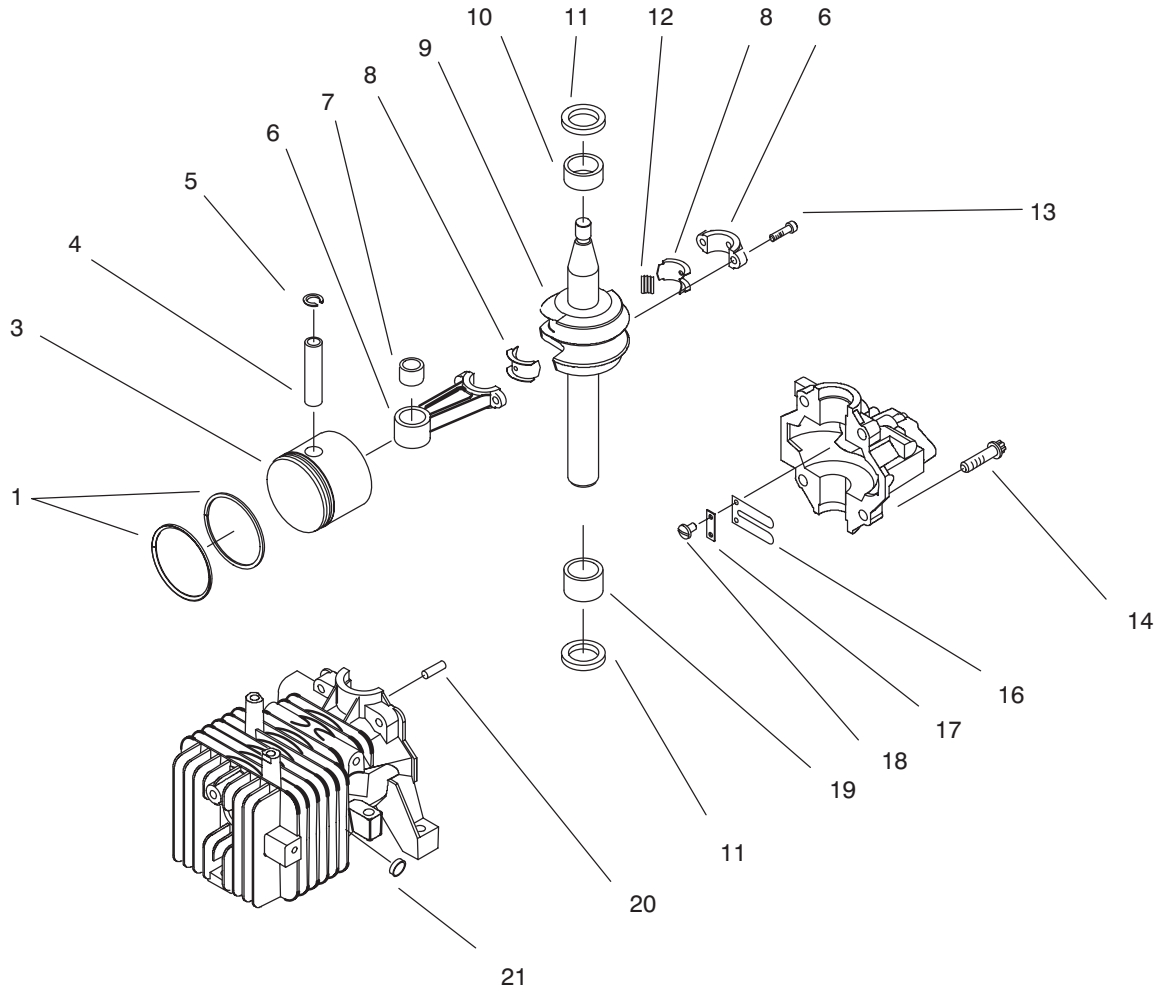

C–2292A

BLOCK ASSEMBLY (Model No. 20441 Only)

Ref. No.	Part No.	Description	No. Used
1	681737	Set – Rings, Piston	1
3	92–4923	Piston & Ring Set	1
*	92–4925	Piston & Connecting Rod (Incl. Ref. #1, 3–7 & 13)	1
4	606608	Pin – Wrist	1
5	303712	Ring – Retaining	2
6	92–4921	Connecting Rod Assembly (Incl. Ref. #8, 12 & 13)	1
7	92–4927	Bearing	1
8	677982	Liner – Split (Set of 2)	1
9	94–5733	Crankshaft	1

Ref. No.	Part No.	Description	No. Used
10	681830	Bearing – Upper Main	1
11	611396	Seal – Oil	2
12	683911	Bearing – Needle	1
13	611393	Screw – Hex. Hd.	2
14	614636	Screw – Hex. Washer Hd.	3
16	602588	Reed – Carburetor	1
17	602587	Reed – Backup Plate	1
18	612872	Screw	2
19	681831	Bearing – Needle	1
20	609629	Dowel	1
21	609123	Plug – Core	4

*Not Illustrated

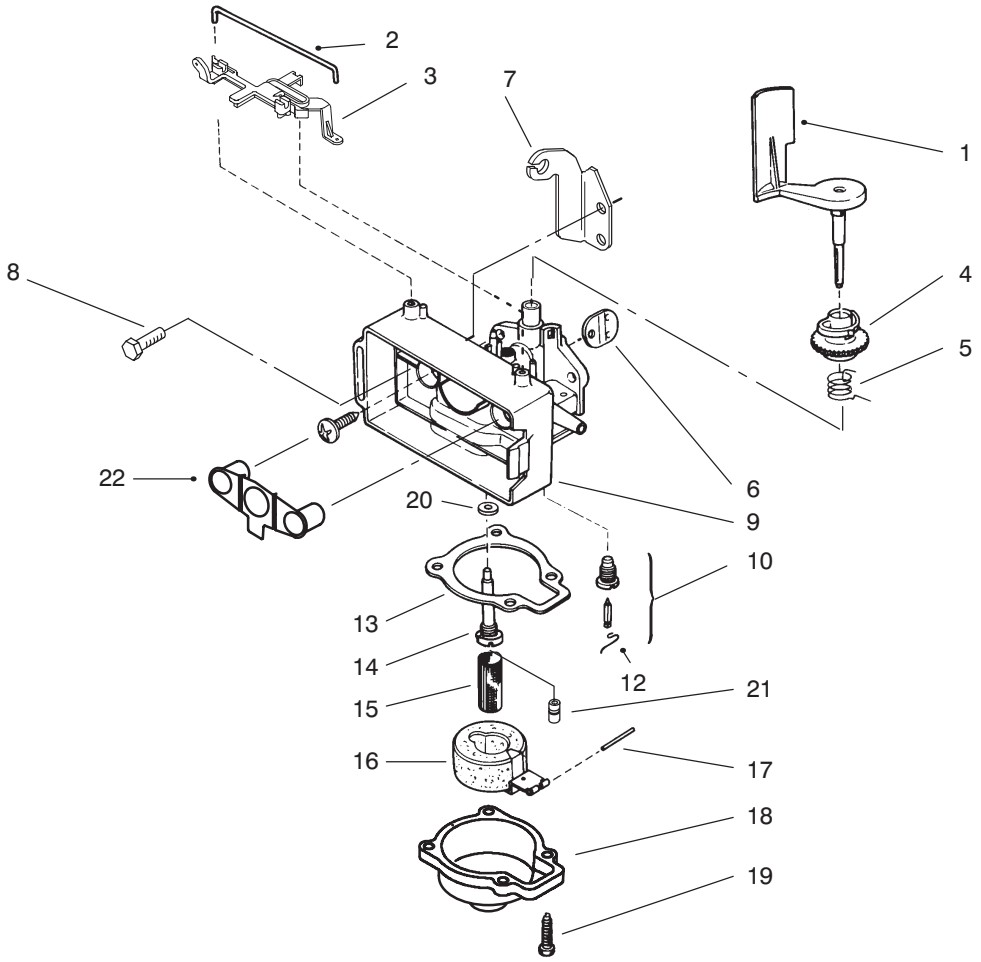

C–2130B

CARBURETOR ASSEMBLY (Model No. 20441 Only)

Ref. No.	Part No.	Description	No. Used
1	92–6376	Air Vane & Shaft	1
2	610165	Retainer – Speed Control	1
3	93–1225	Lever – Speed Adjust	1
4	610834	Collar – Air Vane	1
5	92–4944	Spring – Governor	1
6	92–6373	Disc – Throttle	1
7	92–4949	Bracket – Throttle Control	1
8	613269	Screw	2
9	93–4324	Carburetor Body	1
10	92–9697	Kit – Float Valve, Body & Seat (Incl. Ref. #12)	1
12	603145	Spring	1

Ref. No.	Part No.	Description	No. Used
13	602850	Gasket	1
14	92–6371	Nozzle	1
15	611071	Filter – Fuel	1
16	678113	Float & Arm Assembly	1
17	92–6389	Pin	1
18	92–9691	Float Chamber	1
19	608850	Screw	4
20	612383	Washer	1
21	92–6370	Main Jet	1
22	93–4320	Shield – Fuel	1
*	92–6385	Jet – High Altitude	1
*	93–4331	Carburetor Assembly	1

*Not Illustrated

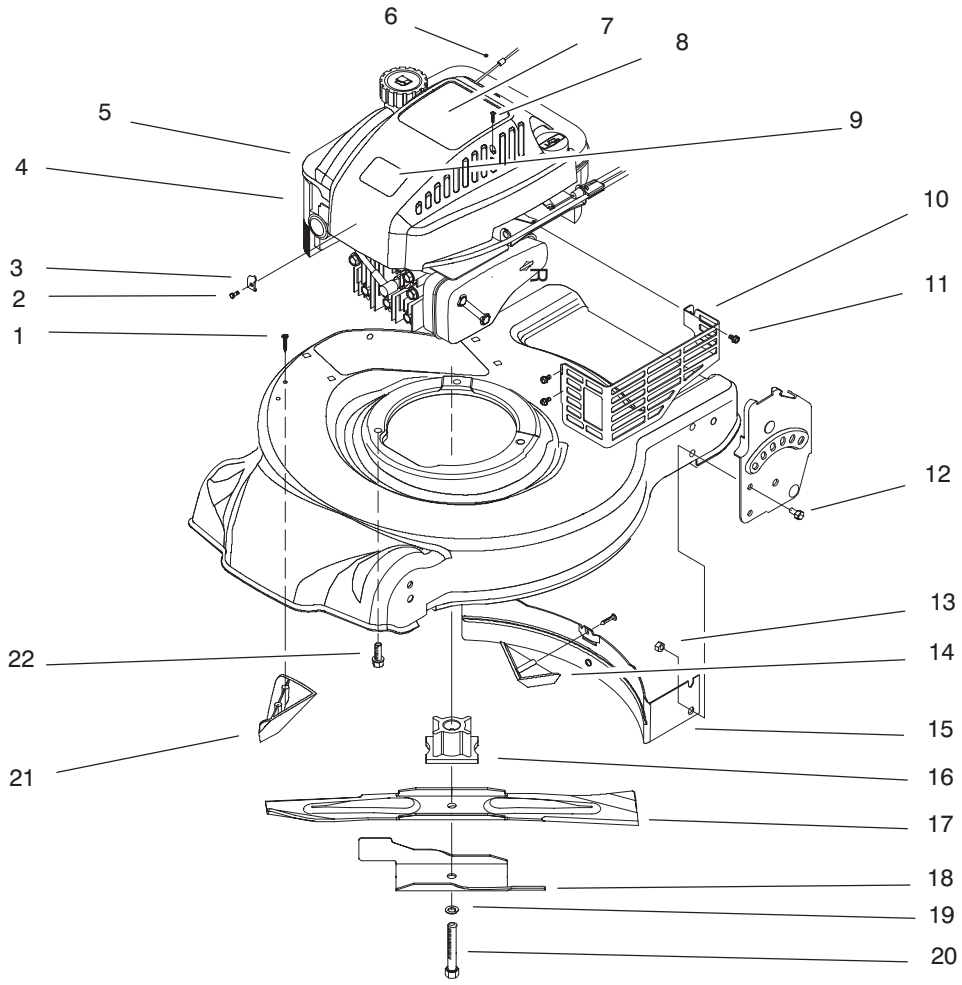

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144–111	Screw – Phillips Pan Hd.	2
2	93–8470	Screw – Clamp (P/W Eng.) (Model No. 20443 & 20453)	1
3	2210–249	Clamp – Casing (P/W Eng.) (Model No. 20443 & 20453)	1
4		Engine – Quantum 4HP (Model No. 20441 & 20453)	1
5	93–0243	Shroud – Qt Wedge (Model No. 20443 & 20453)	1
6	2210–316	Stop – Rope (P/W Eng.) (Model No. 20443 & 20453)	1
7	93–0247	Decal – Engine (Model No. 20443 & 20453)	1
8	32144–121	Screw (Model No. 20443 & 20453)	2
9	92–2289	Plate – Logo	1
10	82–8550	Shield – Muffler Model No. 20443 & 20453)	1

Ref. No.	Part No.	Description	No. Used
11	32144–73	Screw – Hex Washer Hd. Thread Forming (Model No. 20443 & 20453)	3
12	322–3	Screw – Hex Hd. Cap	4
13	3296–29	Nut – Lock	4
14	93–0217	Kicker – Rear	1
15	93–0223	Baffle – Rear	1
16	62–7540	Retainer – Blade (Model No. 20443 & 20453)	1
17	93–0241	Blade – Steel Deck	1
18	93–0219	Accelerator	1
19	3253–22	Washer – Lock	1
20	26–0670	Bolt – Blade	1
21	93–0218	Kicker – Side	1
22	92–1624	Screw – Engine	3

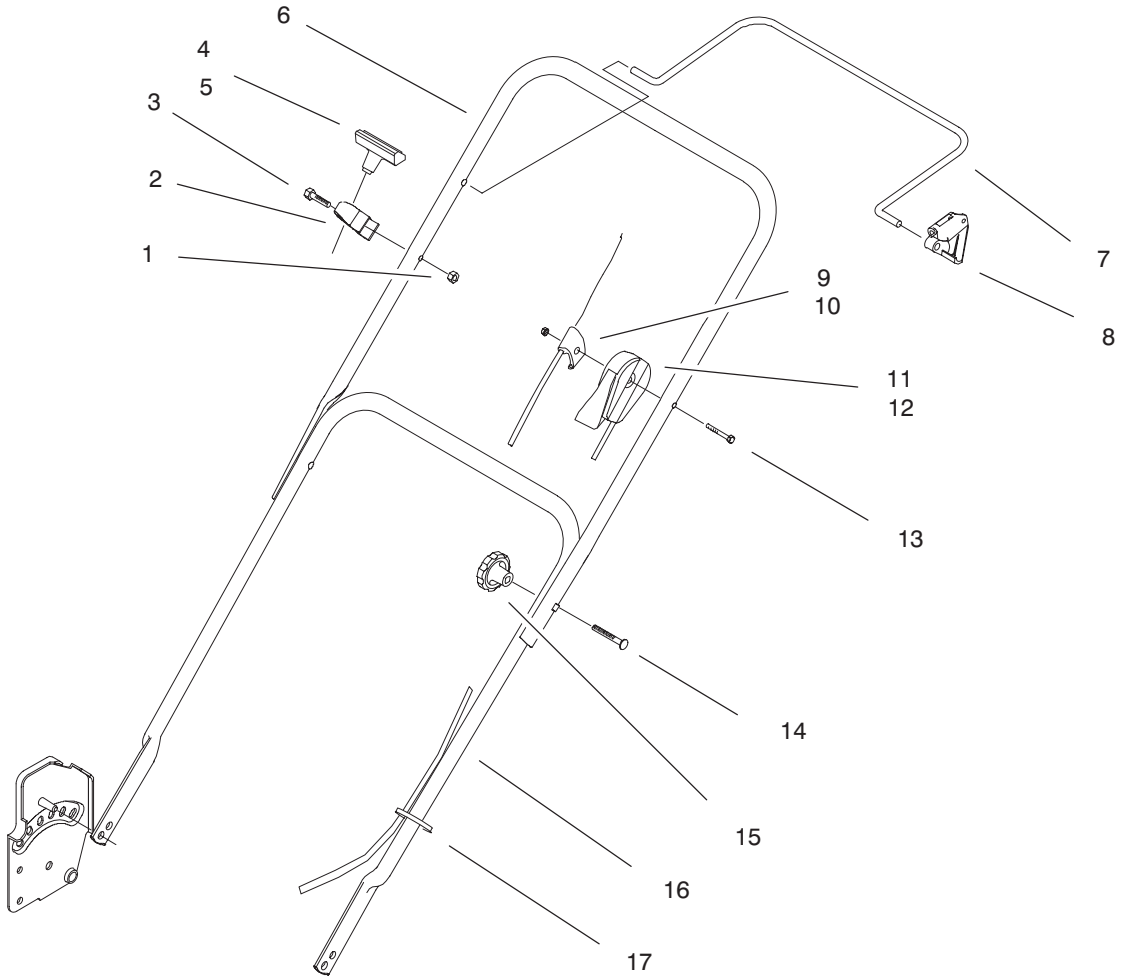

C–2291

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–73	Nut – Lock	2
2	93–7383	Guide – Rope	1
3	321–51	Screw – Hex Hd. Cap	1
4	612825	Handle – Starter (Model No. 20441 Only)	1
5	612824	Clip – Rope Insert (Model No. 20441 Only)	1
6	93–0237	Handle – Upper	1
7	92–3134	Bar – Control	1
8	92–5412	Stop – Pivot	1
9	93–0253	Cable – Brake (Model No. 20443 & 20453)	1
10	93–0257	Cable – Brake (Model No. 20441 Only)	1
11	93–0252	Cable – Throttle (Model No. 20443 & 20453)	1
12	93–0256	Cable – Throttle (Model No. 20441 Only)	1
13	92–2269	Screw – Handle	1
14	92–2260	Screw – Handle	2
15	19–4050	Knob	2
16	93–0238	Handle – Lower	1
17	3290–378	Tie – Cable (Model No. 20443 & 20453)	1
17	3290–378	Tie – Cable (Model No. 20441 Only)	2

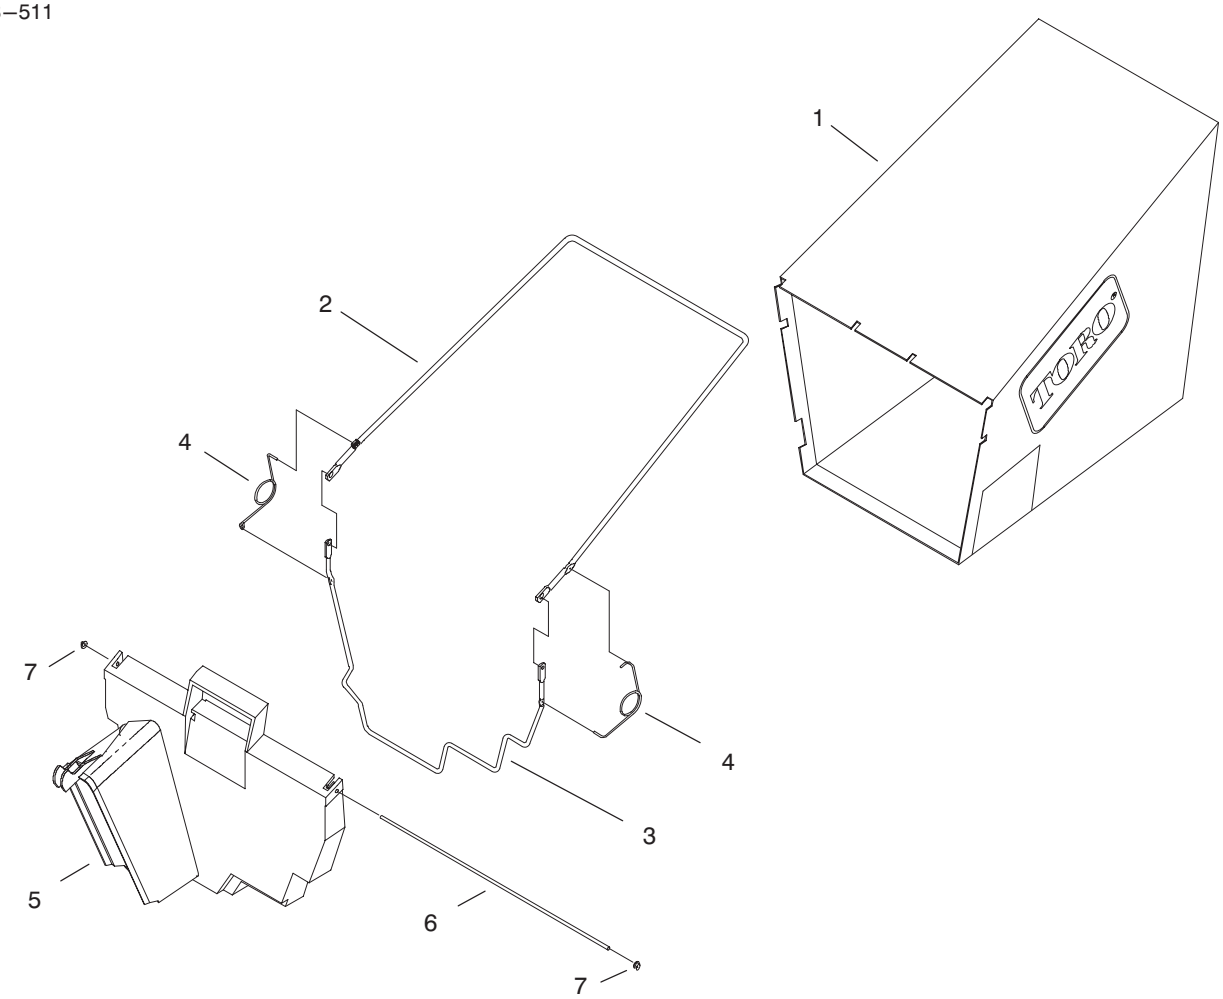

C–2337

REAR BAGGING ASSEMBLY (Model No. 20453 Only)

Ref. No.	Part No.	Description	No. Used
1	93–0284	Bag – Grass	1
2	93–0281	Frame – Bag Upper	1
3	93–0282	Frame – Bag Lower	1
4	36–6910	Spring	2

Ref. No.	Part No.	Description	No. Used
5	93–0266	Door – Bag	1
6	93–0283	Hinge – Bag Door	1
7	3290–422	Nut – Push	2

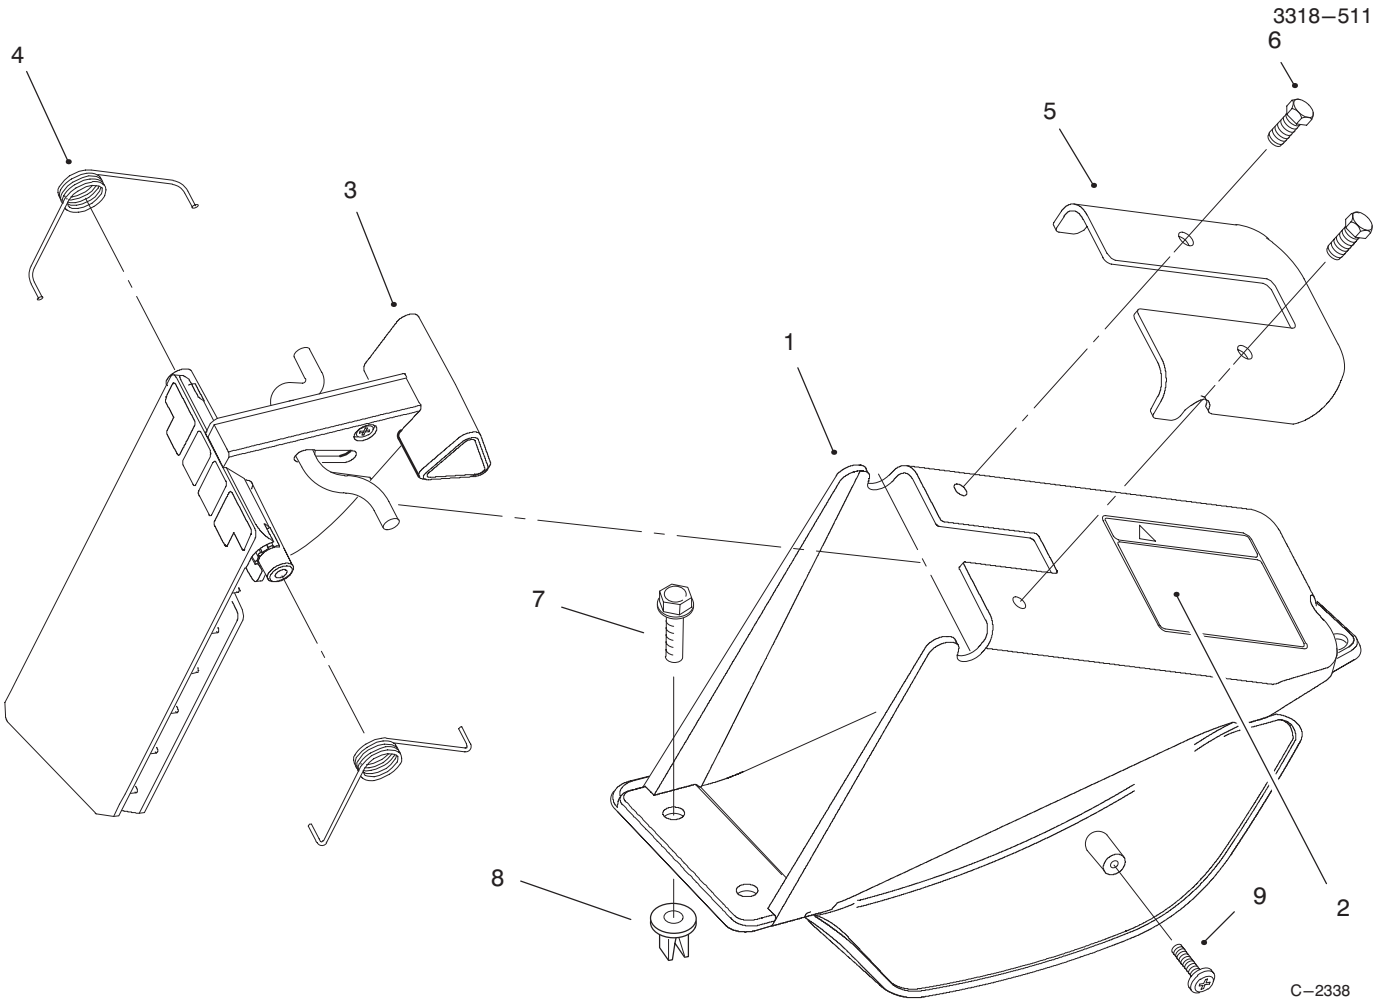

REAR BAGGING ASS'Y (Model No. 20453 Only) (Cont.)

Ref. No.	Part No.	Description	No. Used
1	93–0263	Chute – Discharge	1
2	88–3360	Decal – Caution Door	1
3	93–0273	Discharge Door Assembly	1
4	88–1090	Spring – Door	2
5	93–0267	Plate – Discharge Chute	1
6	46–8090	Screw – Tapping	2

Ref. No.	Part No.	Description	No. Used
7	46–6811	Screw – Washer Hd.	4
8	93–0242	Grommet	4
9	32144–111	Screw – Pan Hd.	1
*	93–0274	Discharge Chute Assembly (Incl. Ref. #1–6)	1

* Not Illustrated

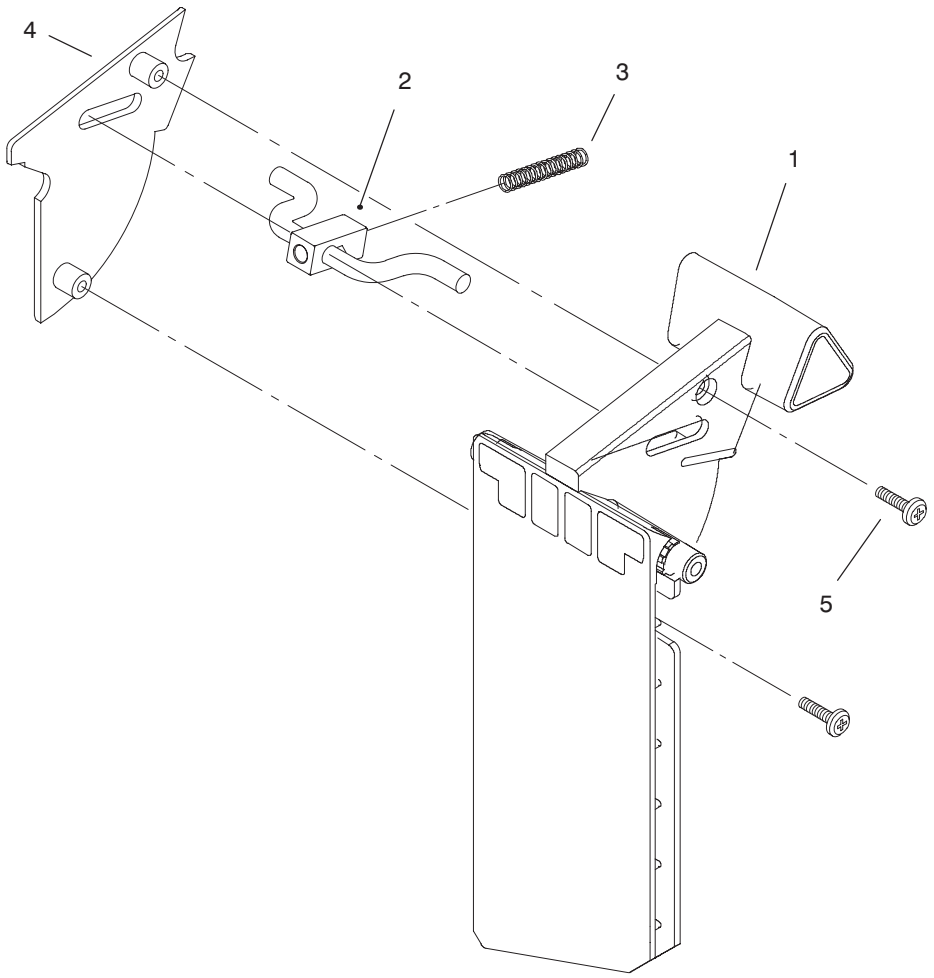

C–2317

REAR BAGGING ASS'Y (Model No. 20453 Only) (Cont.)

Ref. No.	Part No.	Description	No. Used
1	93–0264	Door – Discharge	1
2	88–1800	Latch – Door	1
3	33–0450	Spring – Door	1

Ref. No.	Part No.	Description	No. Used
4	33–0441	Cover – Door	1
5	32144–32	Screw – Plastic	2

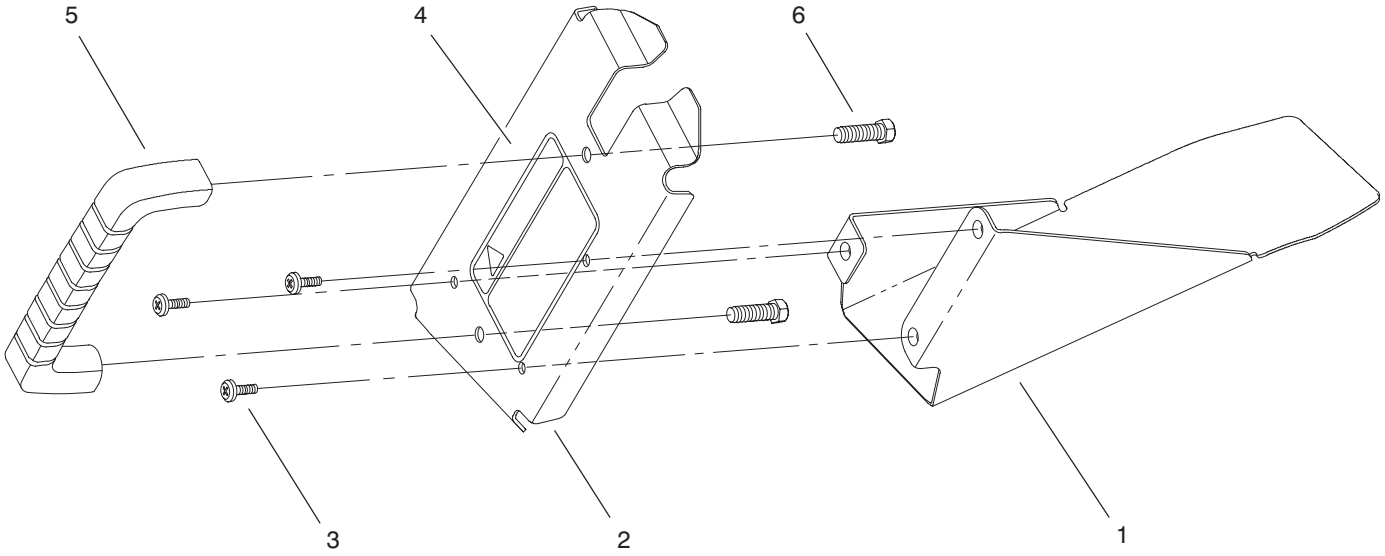

C–2339

REAR BAGGING ASS'Y (Model No. 20453 Only) (Cont.)

Ref. No.	Part No.	Description	No. Used
1	93–0279	Shield – Discharge Plug	1
2	93–0280	Cover – Discharge Plug	1
3	32104–122	Screw – Phillips Pan Hd.	3
4	88–6930	Decal – Warning	1
5	65–5100	Handle – Hood	1
6	46–8091	Screw – Tapping	2
*	93–0275	Discharge Plug Assembly (Incl. Ref. #1–6)	1

* Not Illustrated

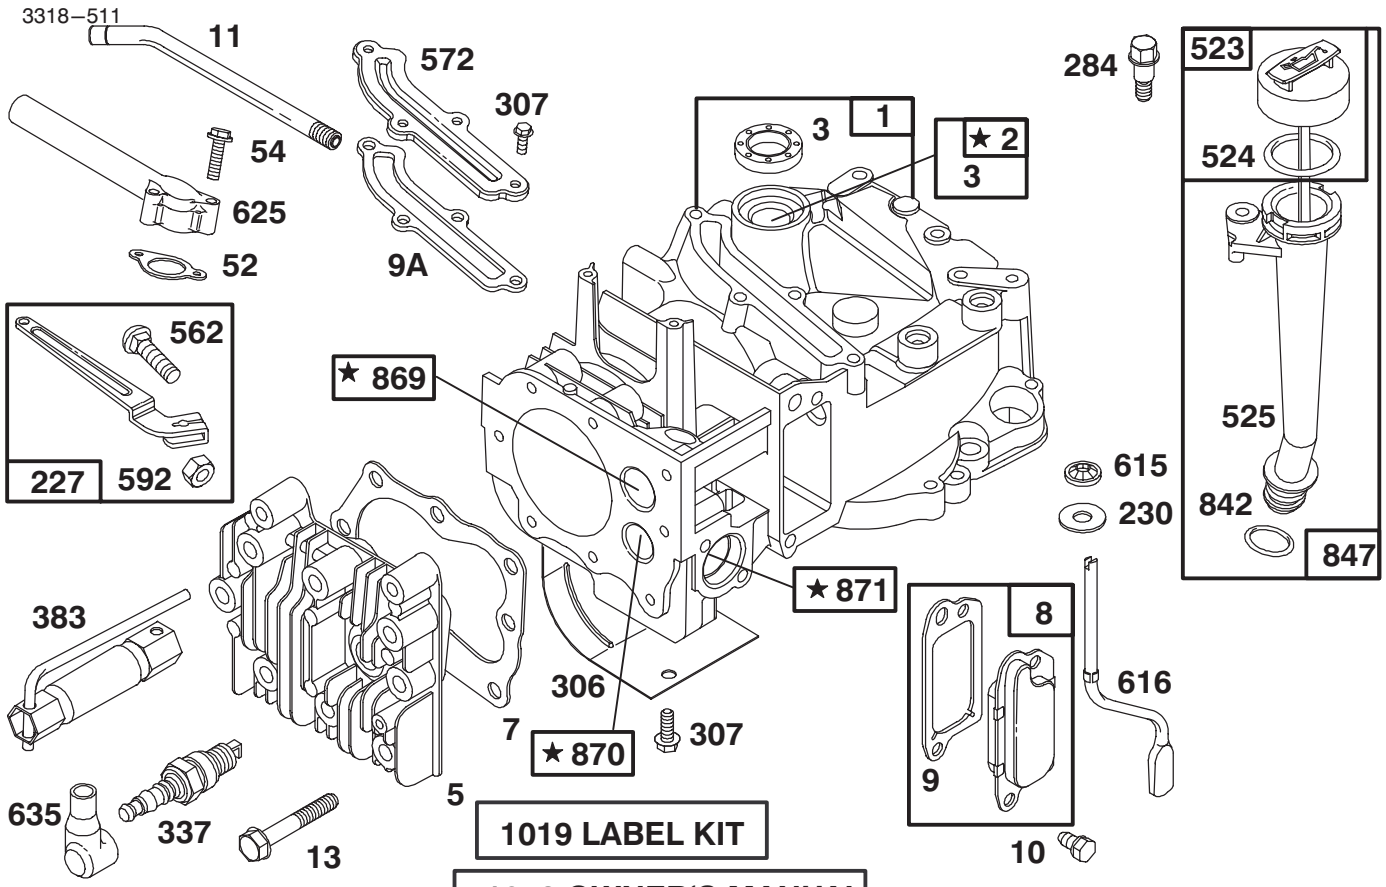

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127802-0640–01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214349	Head – Cylinder	1
★7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★9	272481	Gasket – Valve Cover	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★52	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mounting	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex. Head	1
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	495264	Cap With Dipstick – Oil Filler	1
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	92613	Bolt – Governor Lever	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	262578	Crank – Governor	1
625	281085	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve **Note:** 63709 Guide – Intake Valve	1
1019	494256	Label Kit	1
1058	272262	Owner's Manual	1

★ Included in Gasket Set–Part No. 496117.

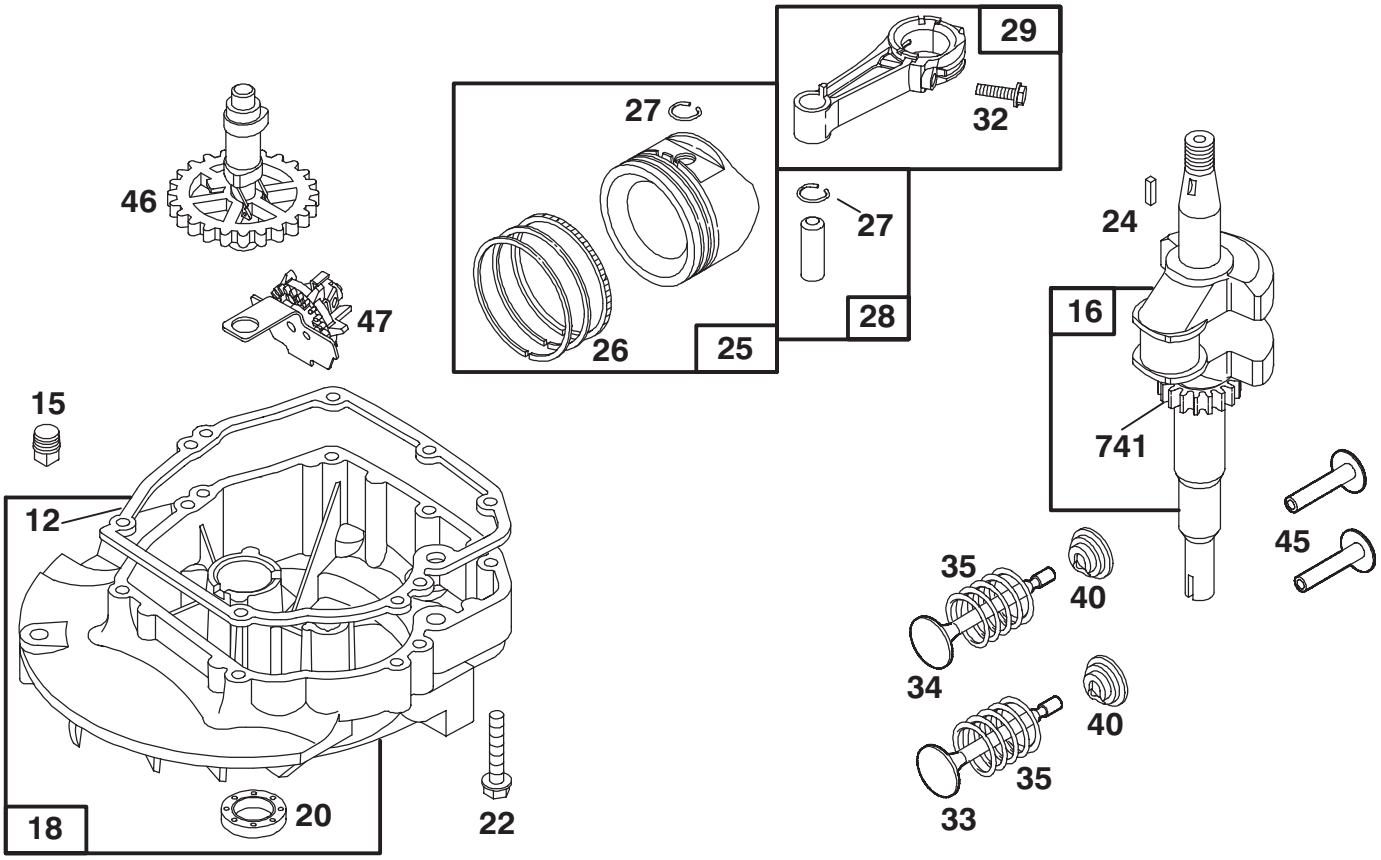

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127802-0640–01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket – Crankcase	1
15	94720	Plug – Oil Drain	1
16	494546	Crankshaft	1
		Note: Order 94388 For Timing Gear Key.	1
18	493279	Sump – Engine	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex. Head	1
		Note: 94612 Screw – Hex. Head	1
		(One (1) Used in Hole Nearest Breather.)	1
24	222698	Key – Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010” O.S.)	1
	493386	Piston Assy. (.020” O.S.)	1
	493387	Piston Assy. (.030” O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010” O.S.)	1
	493389	Ring Set (.020” O.S.)	1
	493390	Ring Set (.030” O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock – Piston Pin	1
28	298909	Pin – Piston (Standard)	1
	298908	Pin – Piston (.005” O.S.)	1
29	490566	Rod Assembly – Conn.	1
		Note: For Conn. Rod With .020” Undersize Crankpin Bearing – Order No. 490743.	1
32	94699	Screw – Conn. Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	492828	Gear – Cam	1
47	493737	Slinger – Oil	1
741	262598	Gear – Timing	1

★ Included in Gasket Set–Part No. 496117.

3318–511

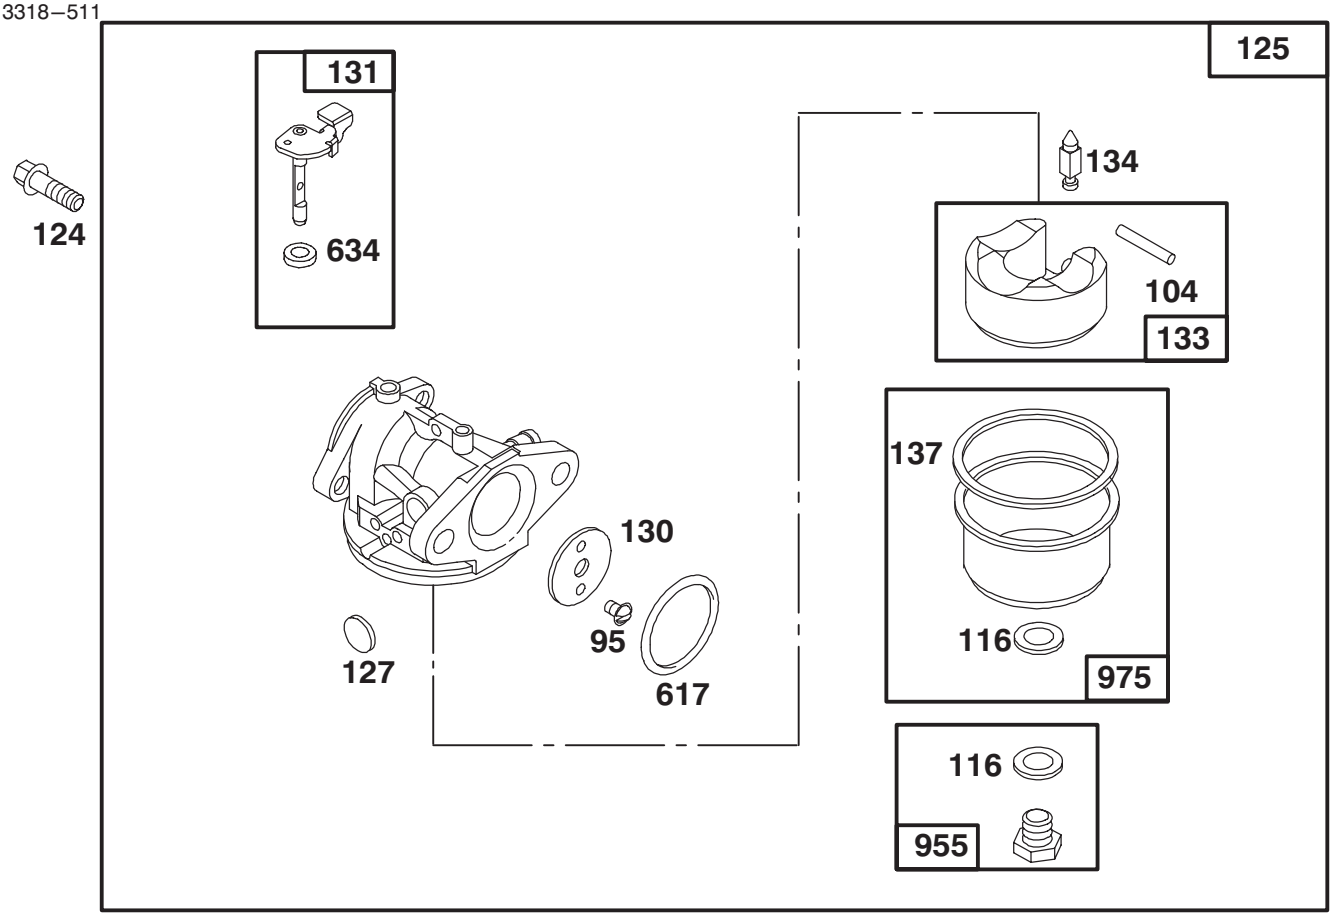

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127802-0640–01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mounting	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket–Sealing (Sold in Kit Only).	1
124	94525	Screw – Carburetor Mtg.	1
125	497314	Carburetor	1
●127		Plug – Welch (Sold in Kit Only).	1
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer–Shaft (Sold in Kit Only).	1
955	497315	Screw – Bowl Mtg. (Std.)	1
		Note: 496495 Screw – Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. – Carburetor	1

●Included in Carburetor Kit–Part No. 493762.
◆ Included in Carburetor Gasket Set–Part No. 490937.

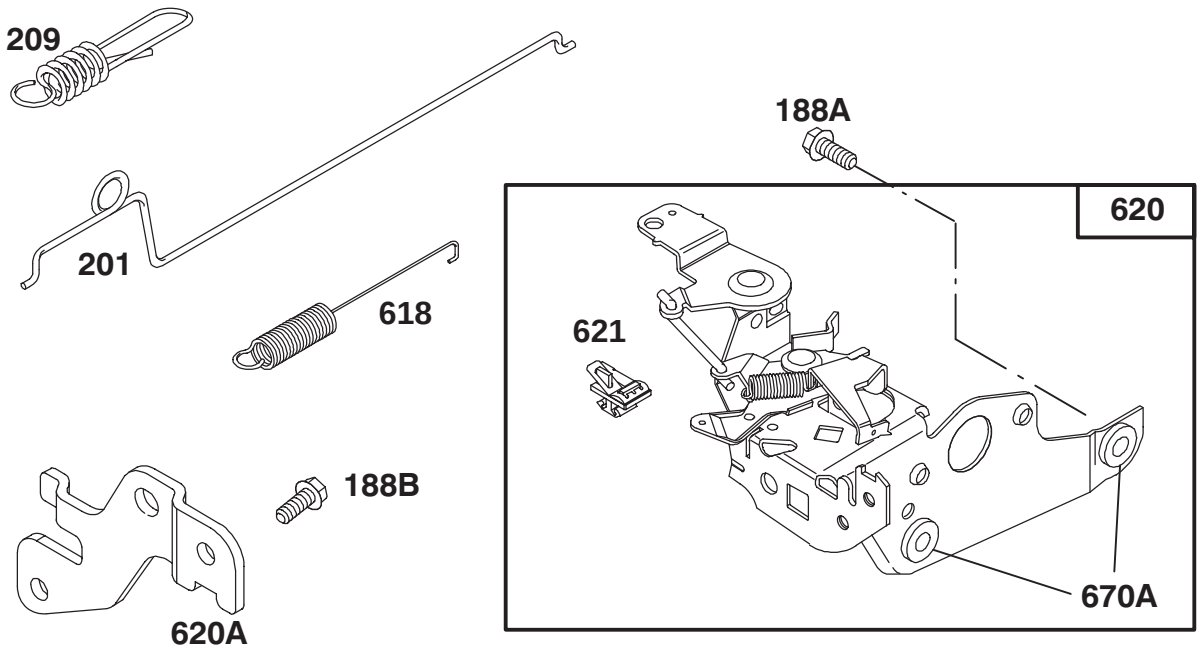

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127802-0640—01

Ref. No.	Part No.	Description	No. Used
188A	94644	Screw — Hex. Head	1
188B	94602	Screw — Hex. Head	1
201	262579	Link — Governor	1
209	262661	Spring — Governor	1
618	262749	Spring — Return	1

Ref. No.	Part No.	Description	No. Used
620	497203	Bracket — Carburetor	1
620A	225152	Bracket — Control	1
621	396847	Switch — Stop	1
670A	493823	Spacer — Bracket	1

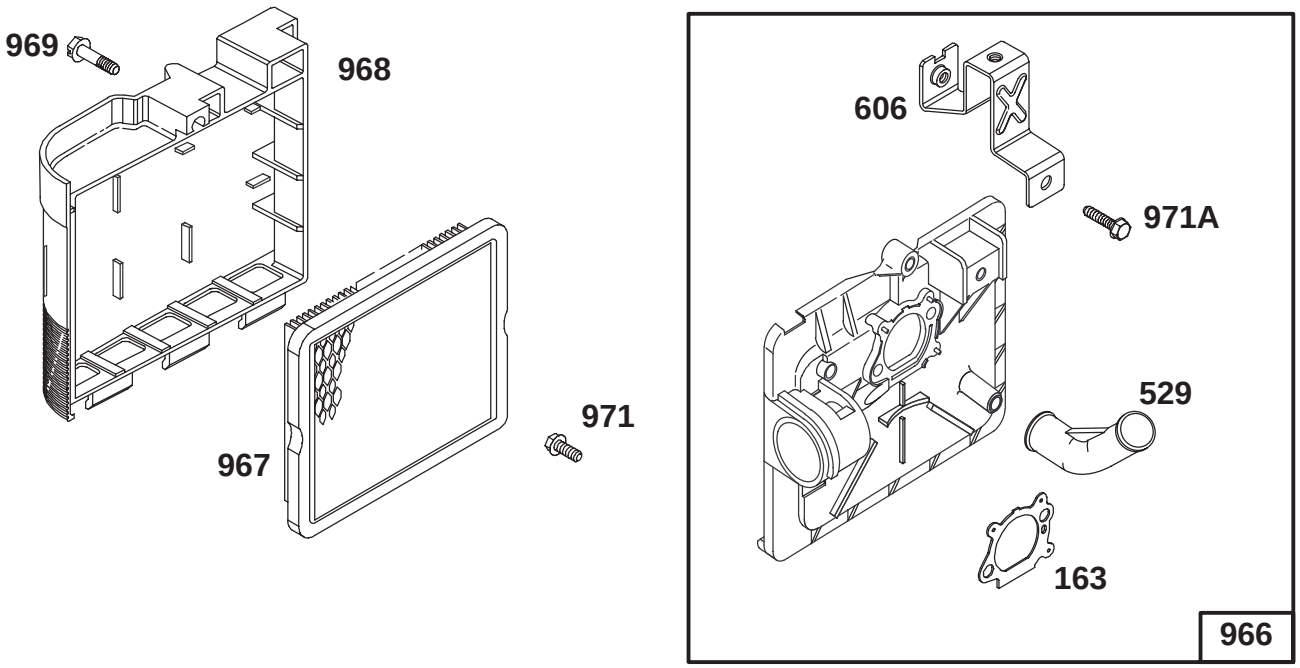

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127802-0640—01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket — Air Cleaner	1
529	281299	Grommet — Breather	1
606	224815	Strap — Bracket	1
966	496116	Base — Air Cleaner	1
967	491588	Filter — Air	1

Ref. No.	Part No.	Description	No. Used
968	281340	Cover — Air Cleaner	1
969	94120	Screw — Cover Mtg.	1
971	94121	Screw — Air Cleaner	1
971A	94749	Screw — Hex. Head	1

★Included in Gasket Set—Part No. 496117.

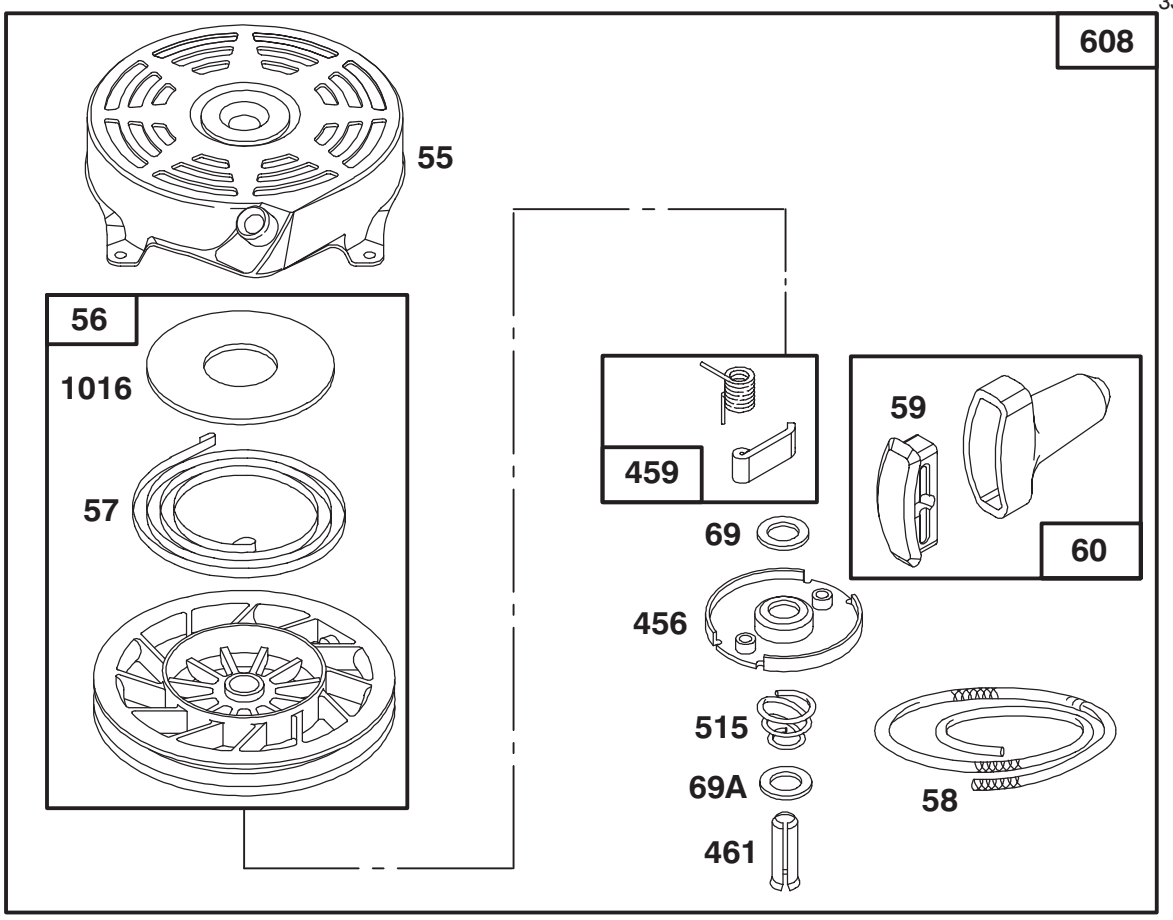

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127802-0640–01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing – Rewind Starter	1
56	493824	Pulley – Rewind Starter	1
57	262594	Spring – Rewind Starter	1
58	280399	Rope – Rewind Starter	1
59	396892	Insert – Handle	1
60	393152	Handle – Rewind Starter	1
69	280973	Washer – Rewind Starter	1
69A	224322	Washer – Rewind Starter	1
456	224321	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	492833	Pawl – Starter	1
461	262626	Pin – Starter	1
515	262625	Spring – Torsion	1
608	493295	Starter Assy. – Rewind	1
		Includes:	
		94128 Screw – Hex. Hd.	1
		92987 Nut – Hex.	1
1016	224278	Cover – Rewind Starter	1

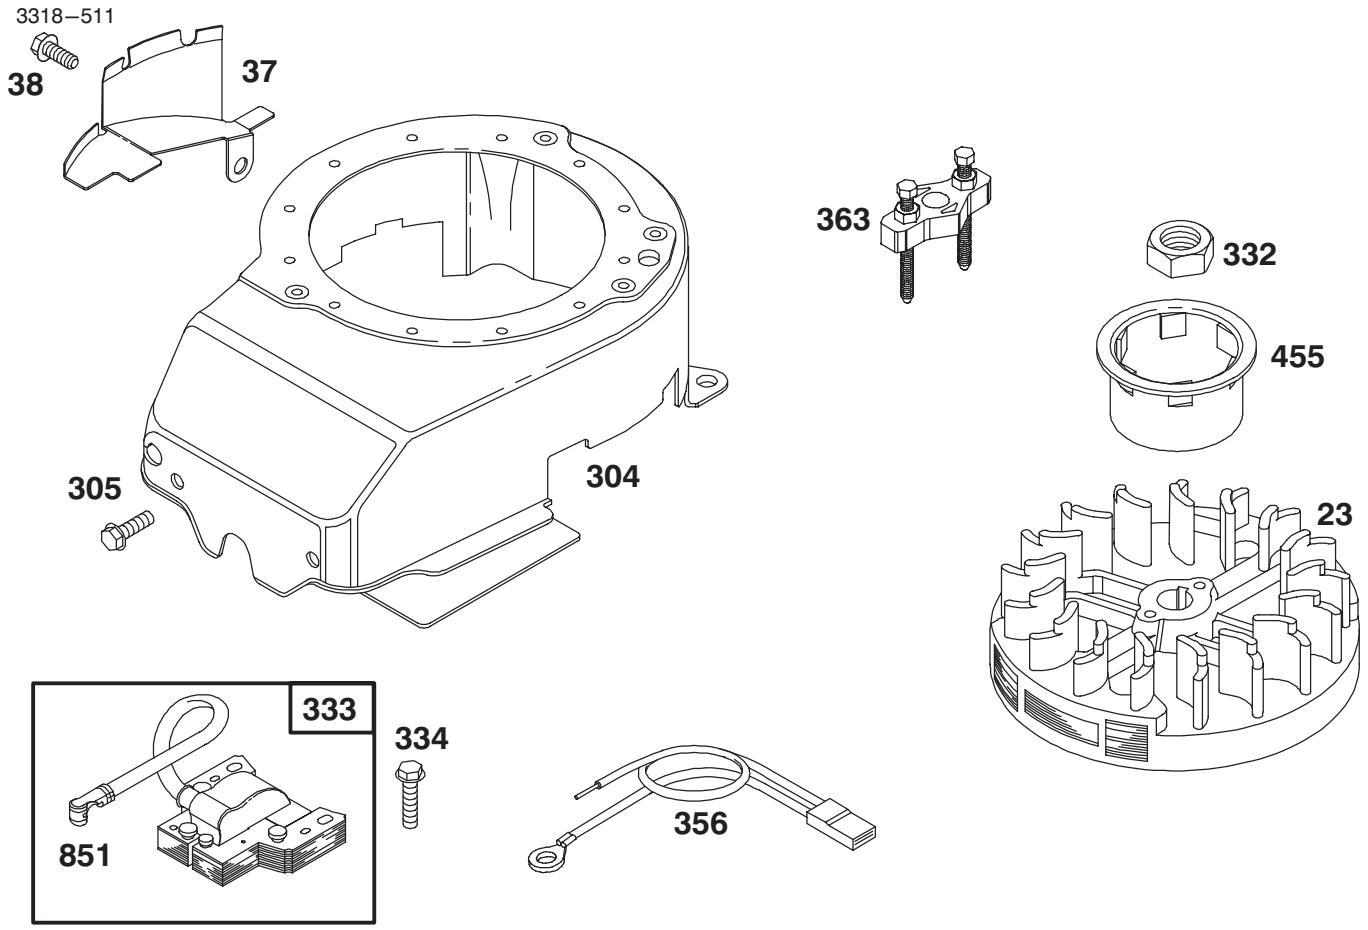

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127802-0640–01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard – Flywheel	1
38	94786	Screw – Hex. Head	1
304	493294	Housing – Blower	1
305	94786	Screw – Sem	1
332	92284	Nut – Flywheel	1

Ref. No.	Part No.	Description	No. Used
333	802574	Armature – Magneto	1
334	94731	Screw – Sem	1
356	398808	Wire – Ground	1
363	19069	Puller – Flywheel	1
455	224250	Cup – Starter	1
851	493880	Terminal – Ignition Cable	1

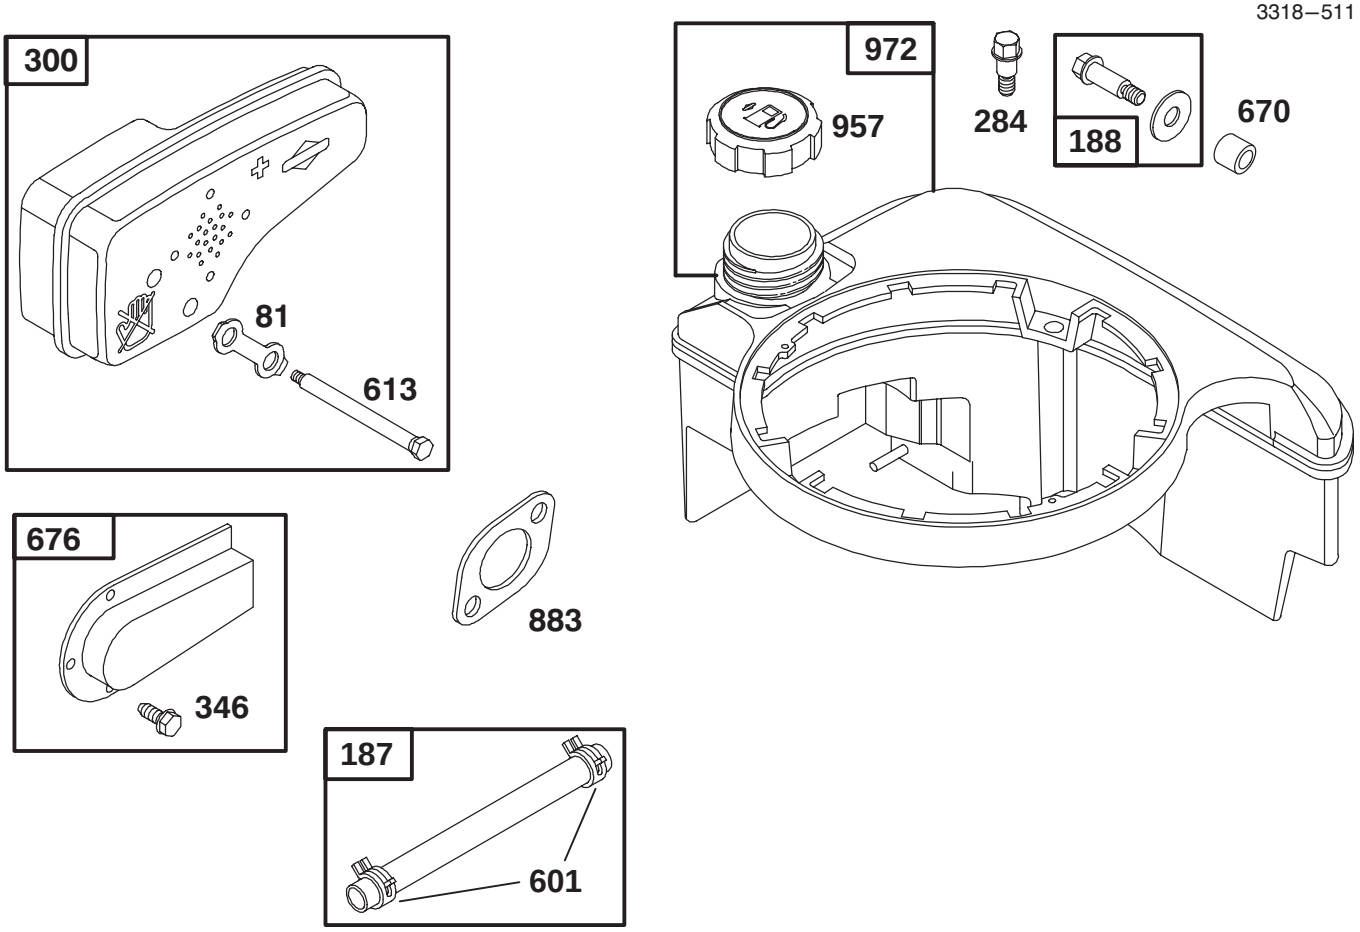

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127802-0640–01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Hex. Head	1
300	490547	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93807	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Muffler Mtg.	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
⋆883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

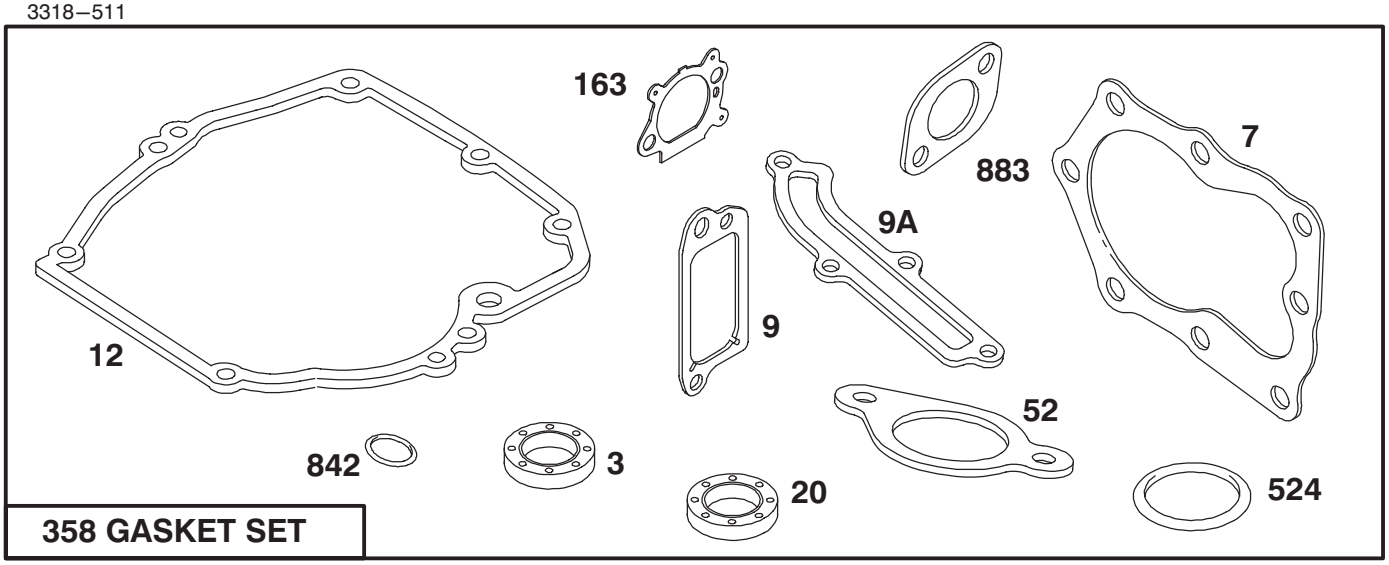

358 GASKET SET

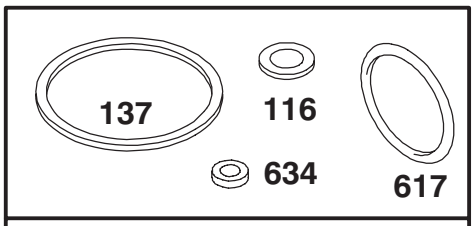

977 CARBURETOR GASKET SET

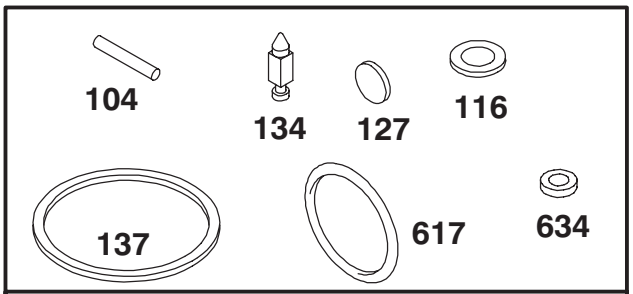

121 CARBURETOR KIT

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127802-0640—01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal — Oil	1
★7	272916	Gasket — Cylinder Hd.	1
★9	272481	Gasket — Valve Cover	1
★9A	272238	Gasket — Baffle Plate	1
★12	272198	Gasket — Crankcase	1
★20	399781	Seal — Oil	1
★52	272199	Gasket — Intake Elbow	1
●104	231371	Pin — Float Hinge	1
●◆116		Gasket — Sealing (Sold in Kit Only).	1
121	493762	Carburetor Kit	1
●127		Plug — Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve — Inlet (Includes Seat)	1
●◆137		Gasket — Bowl (Sold in Kit Only).	1
★163	272653	Gasket — Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal — Filler Tube	1
●◆617	270344	Seal — Fuel Intake Tube	1
●◆634		Washer — Shaft (Sold in Kit Only).	1
★842	280966	Seal — O-Ring	1
★883	272253	Gasket — Exhaust	1
977	490937	Gasket Set — Carburetor	1

●Included in Carburetor Kit—Part No. 493762.
◆Included in Carburetor Gasket Set—Part No. 490937.
★ Included in Gasket Set—Part No. 496117.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
130743	Nut	4	19	1
303712	Ring – Retaining	6	5	2
316959	Washer – Lock	4	18	1
602587	Reed – Backup Plate	6	17	1
602588	Reed – Carburetor	6	16	1
602850	Gasket	7	13	1
603145	Spring	7	12	1
606608	Pin – Wrist	6	4	1
607199	Key	4	13	1
607601	Screw	5	8	4
608850	Screw	7	19	4
609123	Plug – Core	6	21	4
609471	Screw	5	10	3
609482	Screw	4	9	2
609493	Element – Air Filter	4	3	1
609629	Dowel	6	20	1
610165	Retainer – Speed Control	7	2	1
610834	Collar – Air Vane	7	4	1
611071	Filter – Fuel	7	15	1
611393	Screw – Hex. Hd.	6	13	2
611396	Seal – Oil	6	11	2
612383	Washer	7	20	1
612824	Clip – Rope Insert	9	5	1
612825	Handle – Starter	9	4	1
612872	Screw	6	18	2
613208	Screw – Hex Washer Hd.	5	16	2
613269	Screw	7	8	2
614009	Plug – Spark	5	13	1
614636	Screw – Hex. Washer Hd.	6	14	3
614637	Bracket – Wheel Height Adj.	1	20	4
614640	Hub – Starter	4	17	1
614650	Bolt – Shoulder	1	13	4
614654	Plate – Muffler	5	7	1
614672	Bolt – Shoulder	1	18	4
614681	Baffle	5	9	1
614687	Spring Arm Assembly	1	17	2
614699	Screw	4	1	3
614702	Screw	4	14	4
614702	Screw	5	17	1
677982	Liner – Split (Set of 2)	6	8	1
678113	Float & Arm Assembly	7	16	1
681678	Lead & Cover Assembly	5	20	1
681737	Set – Rings, Piston	6	1	1
681830	Bearing – Upper Main	6	10	1
681831	Bearing – Needle	6	19	1
683911	Bearing – Needle	6	12	1
684049	Ignition Assembly	5	14	1
684743	Flywheel Assembly	4	16	1
12–5450	Screw – Thread Forming	5	4	1
16–9259	Deck Assembly	2	27	1
16–9269	Cover – Recycling	1	1	1
19–4050	Knob	9	15	2
26–0670	Bolt – Blade	8	20	1
33–0441	Cover – Door	12	4	1
33–0450	Spring – Door	12	3	1
36–6910	Spring	10	4	2
39–5770	Decal – Danger	3	14	1
40–1940	Washer	1	15	4
44–2750	Body – Primer	4	21	1
44–3172	Hose – Primer	4	5	1
46–6811	Screw – Washer Hd.	11	7	4
46–8090	Screw – Tapping	11	6	2
46–8091	Screw – Tapping	13	6	2
52–7320	Retainer – Blade	3	12	1
53–4690	Stop – Ground Strap	5	5	1
55–3578	Gas Cap Assembly	3	6	1
60–9010	Strap – Ground	5	2	1
62–7540	Retainer – Blade	8	16	1
65–5100	Handle – Hood	13	5	1
66–5370	Spring – Compression	3	15	1
66–7460	Bulb – Primer	4	22	1
68–3632	Line – Fuel	3	8	1
82–8550	Shield – Muffler	8	10	1
84–7820	Plate – Brake Mount	5	15	1
85–7060	Decal – Danger	1	4	1
88–1090	Spring – Door	11	4	2
88–1800	Latch – Door	12	2	1
88–3360	Decal – Caution Door	11	2	1
88–6930	Decal – Warning	13	4	1
92–1005	Spring Arm Assembly	1	11	2
92–1008	Knob – Height Adjust	1	16	4
92–1156	Wire – Brake Switch Lead	5	6	1
92–1624	Screw – Engine	8	22	3
92–1701	Rope – Stop	3	5	1
92–2260	Screw – Handle	9	14	2
92–2269	Screw – Handle	9	13	1
92–2289	Plate – Logo	8	9	1
92–2914	Decal – HOC R.H.	1	9	1
92–2915	Decal – HOC L.H.	1	8	1
92–2925	Strap – Insulation	5	3	1
92–3134	Bar – Control	9	7	1
92–4881	Plate – Height Adjust	2	26	2
92–4890	Washer	1	21	4
92–4921	Connecting Rod Assembly	6	6	1
92–4923	Piston & Ring Set	6	3	1
92–4925	Piston & Connecting Rod	6	*	1
92–4927	Bearing	6	7	1
92–4944	Spring – Governor	7	5	1
92–4948	Gasket – Carburetor	4	7	2
92–4949	Bracket – Throttle Control	7	7	1
92–5412	Stop – Pivot	9	8	1
92–6370	Main Jet	7	21	1
92–6371	Nozzle	7	14	1
92–6373	Disc – Throttle	7	6	1
92–6376	Air Vane & Shaft	7	1	1
92–6385	Jet – High Altitude	7	*	1
92–6389	Pin	7	17	1
92–6396	Shroud – Engine	3	1	1
92–8647	Shield – Trailing	1	14	1
92–9591	Wheel Assembly	1	19	2
92–9592	Wheel Assembly	1	12	2
92–9691	Float Chamber	7	18	1
92–9697	Kit – Float Valve, Body	7	10	1
92–9698	Screw – Shoulder	5	19	1
93–0216	Kicker – Front	1	25	1
93–0217	Kicker – Rear	8	14	1
93–0218	Kicker – Side	8	21	1
93–0219	Accelerator	8	18	1
93–0222	Baffle – Front	1	24	1
93–0223	Baffle – Rear	8	15	1
93–0231	Screw – Plastite	1	23	2
93–0235	Bracket – Handle L.H.	1	10	1
93–0236	Bracket – Handle R.H.	1	5	1
93–0237	Handle – Upper	9	6	1
93–0238	Handle – Lower	9	16	1
93–0241	Blade – Steel Deck	8	17	1
93–0242	Grommet	1	2	4
93–0242	Grommet	11	8	4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
93–0243	Shroud – Qt Wedge	8	5	1
93–0245	Decal – Deck	3	13	1
93–0246	Decal – Engine	3	3	1
93–0247	Decal – Engine	8	7	1
93–0248	Decal – Warning	1	7	1
93–0252	Cable – Throttle	9	11	1
93–0253	Cable – Brake	9	9	1
93–0256	Cable – Throttle	9	12	1
93–0257	Cable – Brake	9	10	1
93–0262	Decal – Warning	1	6	1
93–0263	Chute – Discharge	11	1	1
93–0264	Door – Discharge	12	1	1
93–0266	Door – Bag	10	5	1
93–0267	Plate – Discharge Chute	11	5	1
93–0273	Discharge Door Assembly	11	3	1
93–0274	Discharge Chute Assembly	11	*	1
93–0275	Discharge Plug Assembly	13	*	1
93–0279	Shield – Discharge Plug	13	1	1
93–0280	Cover – Discharge Plug	13	2	1
93–0281	Frame – Bag Upper	10	2	1
93–0282	Frame – Bag Lower	10	3	1
93–0283	Hinge – Bag Door	10	6	1
93–0284	Bag – Grass	10	1	1
93–1108	Cover – Muffler	5	11	1
93–1200	Cover – Strap	3	4	1
93–1216	Base – Shroud	4	15	1
93–1225	Lever – Speed Adjust	7	3	1
93–1227	Shield – Carburetor	4	6	1
93–1231	Cover – Air Filter	4	2	1
93–1233	Gasket – Exhaust	5	12	1
93–1248	Shroud	4	20	1
93–4302	Screw – Sems	3	2	3
93–4304	Rope	4	23	1
93–4306	Spring – Compression	5	21	1
93–4312	Plate – Brake Assembly	5	18	1
93–4320	Plug	4	4	1
93–4320	Shield – Fuel	7	22	1
93–4324	Carburetor Body	7	9	1
93–4331	Carburetor Assembly	4	10	1
93–4331	Carburetor Assembly	7	*	1
93–7383	Guide – Rope	9	2	1
93–8470	Screw – Clamp (P/W Eng.)	8	2	1
94–5731	Short Block Assembly	4	12	1
94–5733	Crankshaft	6	9	1
2210–249	Clamp – Casing (P/W Eng.)	8	3	1
2210–316	Stop – Rope (P/W Eng.)	8	6	1
321–51	Screw – Hex Hd. Cap	9	3	1
322–3	Screw – Hex Hd. Cap	8	12	4
3253–22	Washer – Lock	8	19	1
3290–378	Tie – Cable	9	17	1
3290–378	Tie – Cable	9	17	2
3290–422	Nut – Push	10	7	2
3290–459	Rivet	5	1	2
3296–2	Nut – Lock	2	28	1
3296–29	Nut – Lock	8	13	4
3296–39	Nut – Lock	1	22	4
3296–73	Nut – Lock	9	1	2
32104–118	Screw – Phillips Hd.	3	7	2
32104–122	Screw – Phillips Pan Hd.	13	3	3
32105–27	Screw – Hex Washer Hd.	2	29	1
32144–4	Screw – Tapping	1	3	4
32144–32	Screw – Plastic	12	5	2
32144–73	Screw – Hex Washer Hd.	8	11	3
32144–111	Screw – Pan Hd.	11	9	1
32144–111	Screw – Phillips Pan Hd.	8	1	2
32144–121	Screw	8	8	2

OPTIONAL EQUIPMENT

Recycler Side Discharge Kit . . . . Model No. 59291

Recycler Bagging Kit
(Model No. 20441 & 20443 Only)
(Std. Model No. 20453) . . . . . Model No. 59290

*Not Illustrated