Form No. 3365-573 Rev C

TORO®

Count on it.

Parts Catalog

Hydraulic Power Pack

ProPass 200 Top Dresser

Model No. 44713—Serial No. 310001001 and Up

CE

Register at www.Toro.com.

Original Instructions (EN)

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

© 2010—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Contents

Hydraulic Power Pack Assembly 4
Hydraulic Tank Assembly No. 119-6913 6
Engine and Mounting Assembly 7

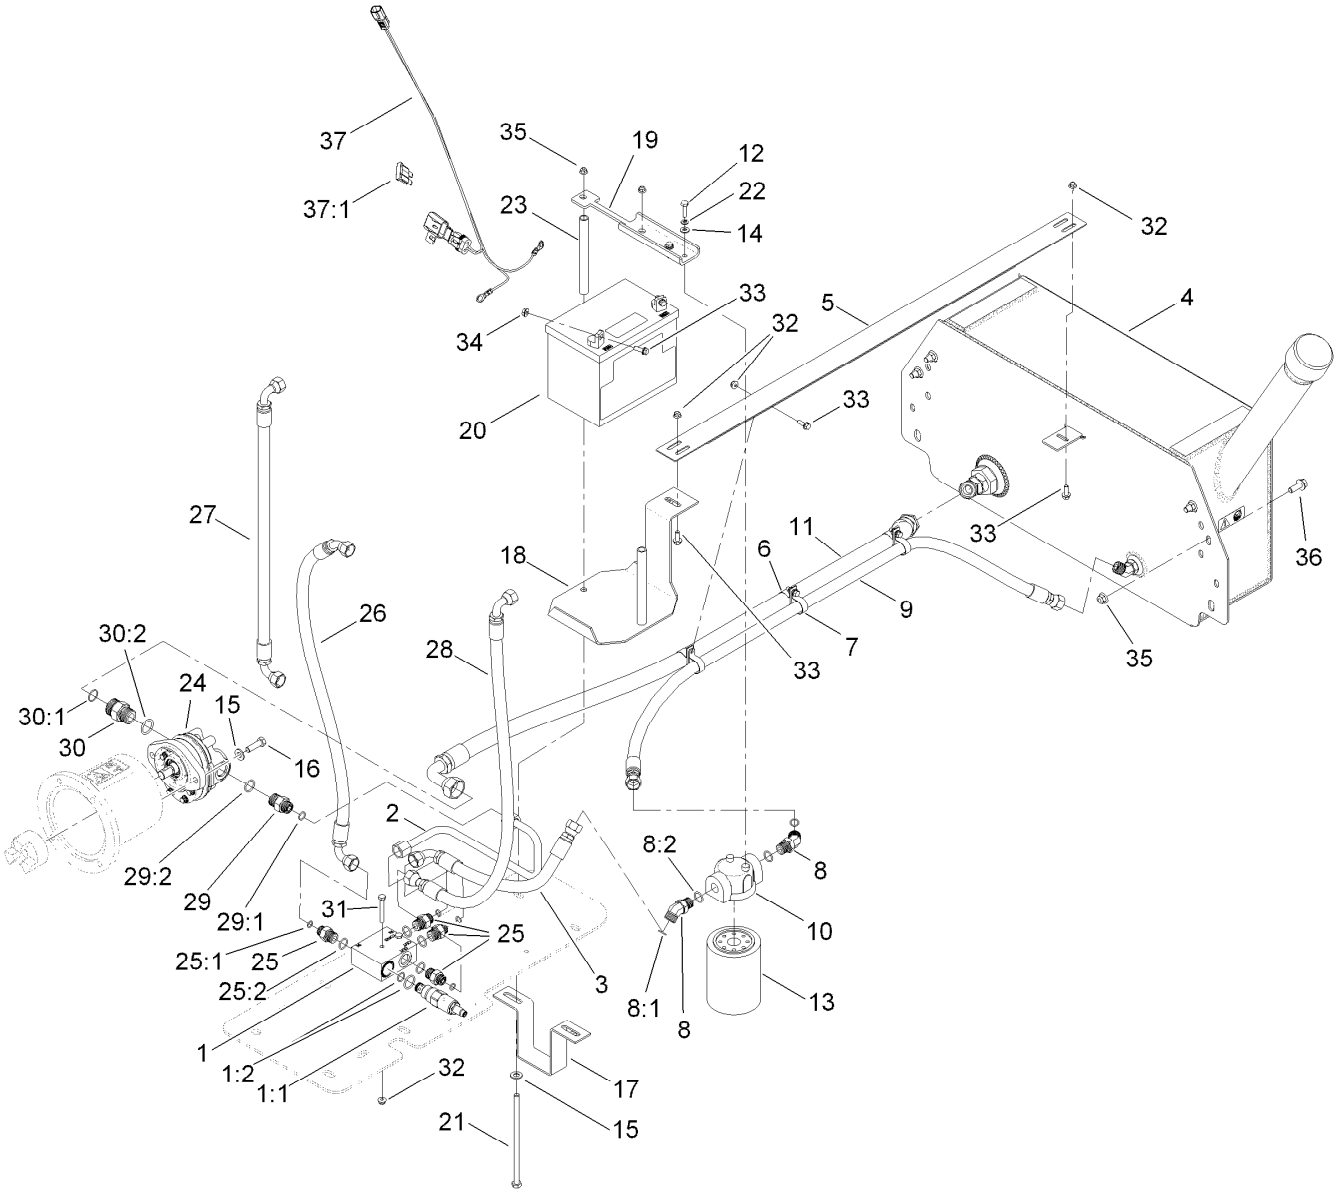

Hydraulic Power Pack Assembly

Ref.	Part Number	Qty.	Description
1	120-0839	1	Valve-Hydraulic, Relief
1:1	120-0840	1	Valve-Cartridge
1:2	105-9159	1	Seal Kit
2	119-6916	1	Tube-HYD
3	107-1136	1	Hose ASM
4	119-6913	1	HYD Tank ASM
5	T0000-7678-01	1	Bracket-Hose
6	2412-104	3	Clamp-R
7	2412-106	3	Clamp-R
8	340-101	2	Fitting-HYD, 45 DEG
8:1	237-30	1	O-Ring
8:2	237-79	1	O-Ring
9	119-6918	1	Hose-Hydraulic
10	87-8780	1	Head-Filter
11	119-6917	1	Hose-Hydraulic
12	321-6	2	Screw-HH
13	54-0110	1	Filter-Oil, Transmission
14	3256-22	2	Washer-Flat
15	3256-24	4	Washer-Flat
16	323-7	2	Screw-HH
17	T0000-7679-01	1	Strap-Mounting

Ref.	Part Number	Qty.	Description
18	T0000-7684-01	1	Tray-Battery
19	T0000-7677-01	1	Bracket-Battery / Filter
20	104-8162	1	Battery
21	323-30	2	Screw-HH
22	3253-3	2	Washer-Lock
23	T0000-3220	2	Tube-Bolt
24	T56031070	1	Pump
25	340-4	4	Fitting-HYD, Straight
25:1	237-30	1	O-Ring
25:2	237-79	1	O-Ring
26	119-6928	1	Hose-Hydraulic
27	119-6929	1	Hose-Hydraulic
28	95-3738	1	HYD Hose ASM
29	340-6	1	Fitting-HYD, Straight
29:1	237-30	1	O-Ring
29:2	237-80	1	O-Ring
30	340-9	1	Fitting-Straight
30:1	237-58	1	O-Ring
30:2	237-81	1	O-Ring
31	321-11	2	Screw-HH
32	104-7201	9	Nut-HF

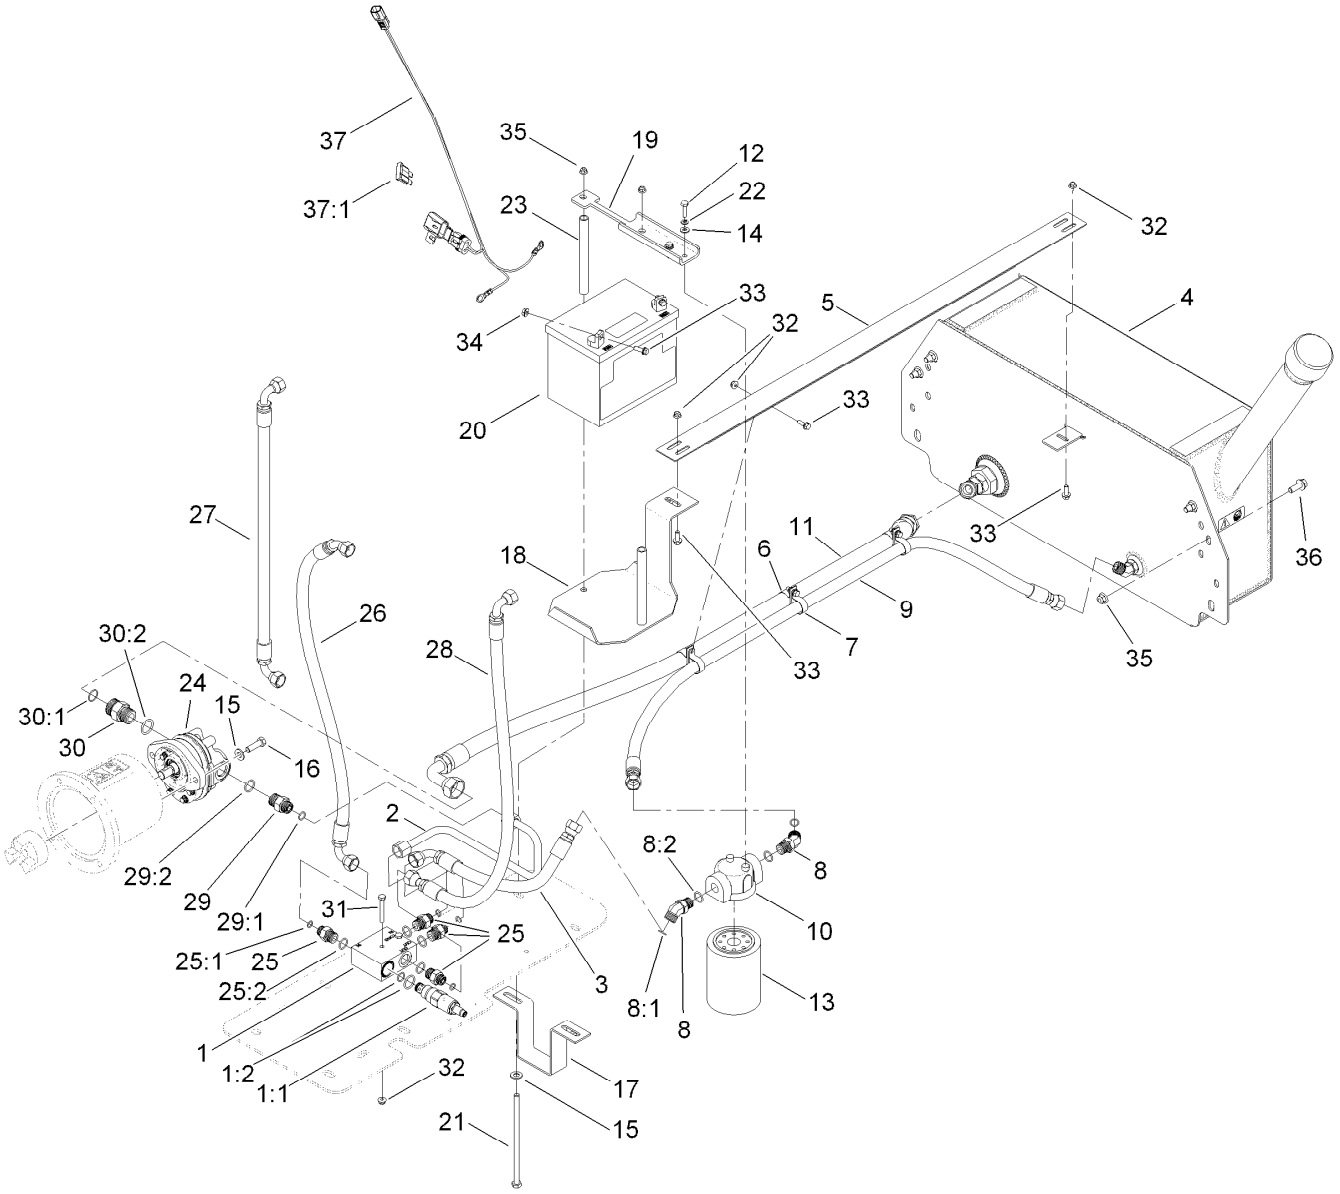

Hydraulic Power Pack Assembly (continued)

Ref.	Part Number	Qty.	Description
33	115-5103	9	Screw-HHF
34	32128-14	2	Nut-HF
35	104-8301	6	Nut-Flange, NI
36	3234-42	4	Screw-HHF
37	120-0877	1	Harness-Wire, Power Pack
37:1	109355	1	Fuse-15 Amp

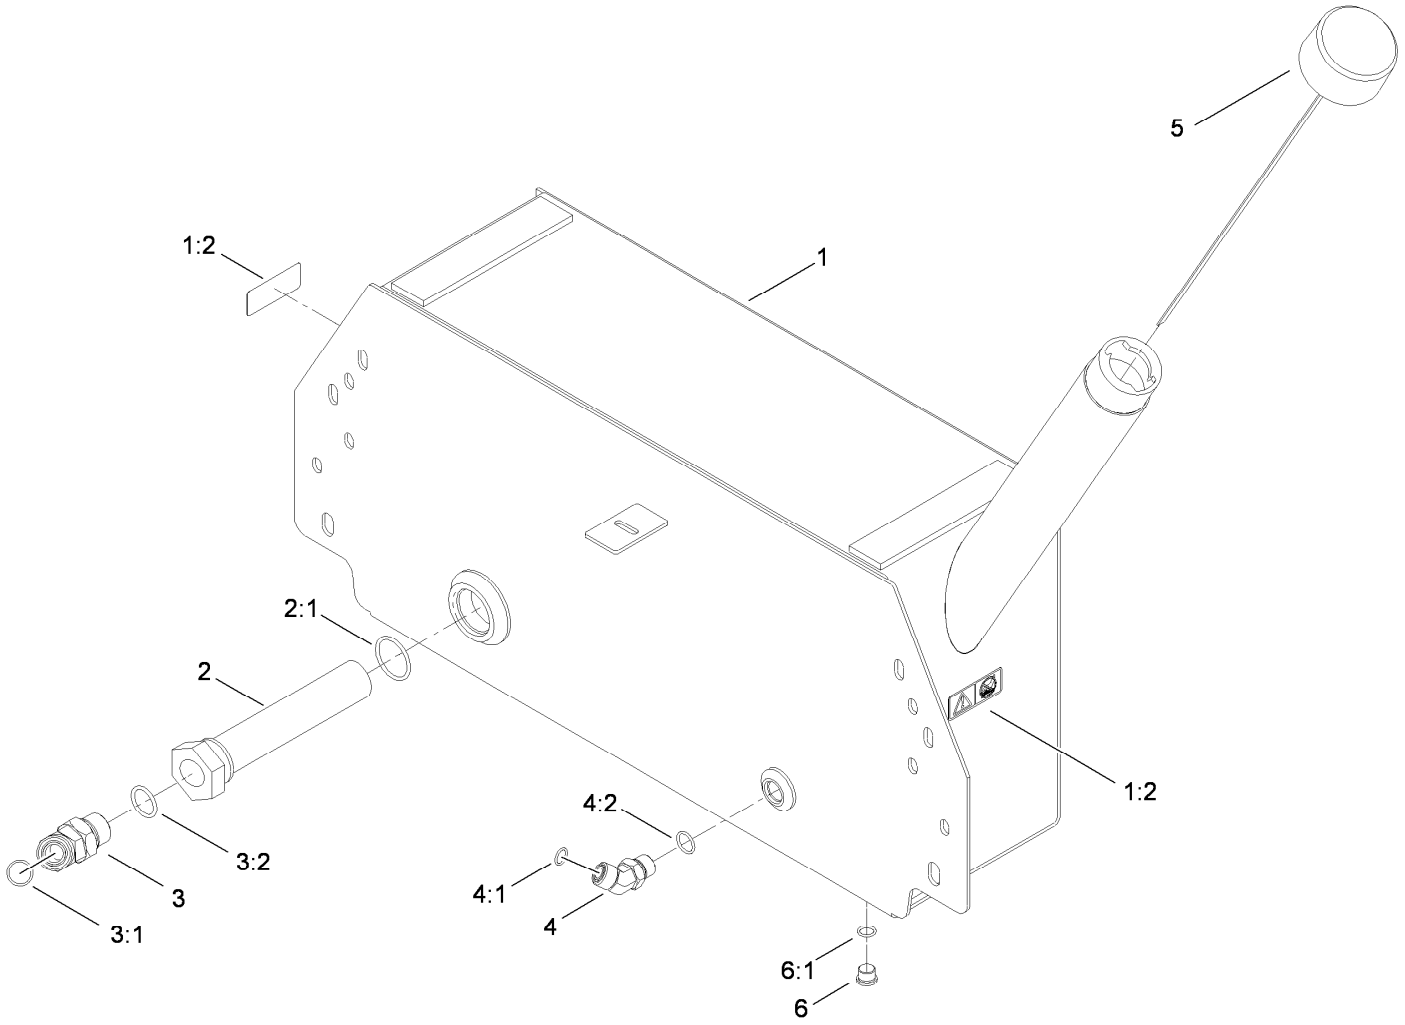

Hydraulic Tank Assembly No. 119-6913

Ref.	*Part Number*	*Qty.*	*Description*
1	120-0833	1	HYD Tank Decal ASM
1:2	115-2047	2	Decal-Surface, Hot
2	87-3990	1	Strainer-Transaxle
2:1	237-123	1	O-Ring
3	100-5530	1	Fitting-HYD, 45 DEG
3:1	237-58	1	O-Ring
3:2	237-81	1	O-Ring
4	340-101	1	Fitting-HYD, 45 DEG
4:1	237-30	1	O-Ring
4:2	237-79	1	O-Ring
5	T0000-4560	1	Dipstick Filler Cap ASM
6	353-989	1	Plug-Hex, Hollow
6:1	237-42	1	O-Ring

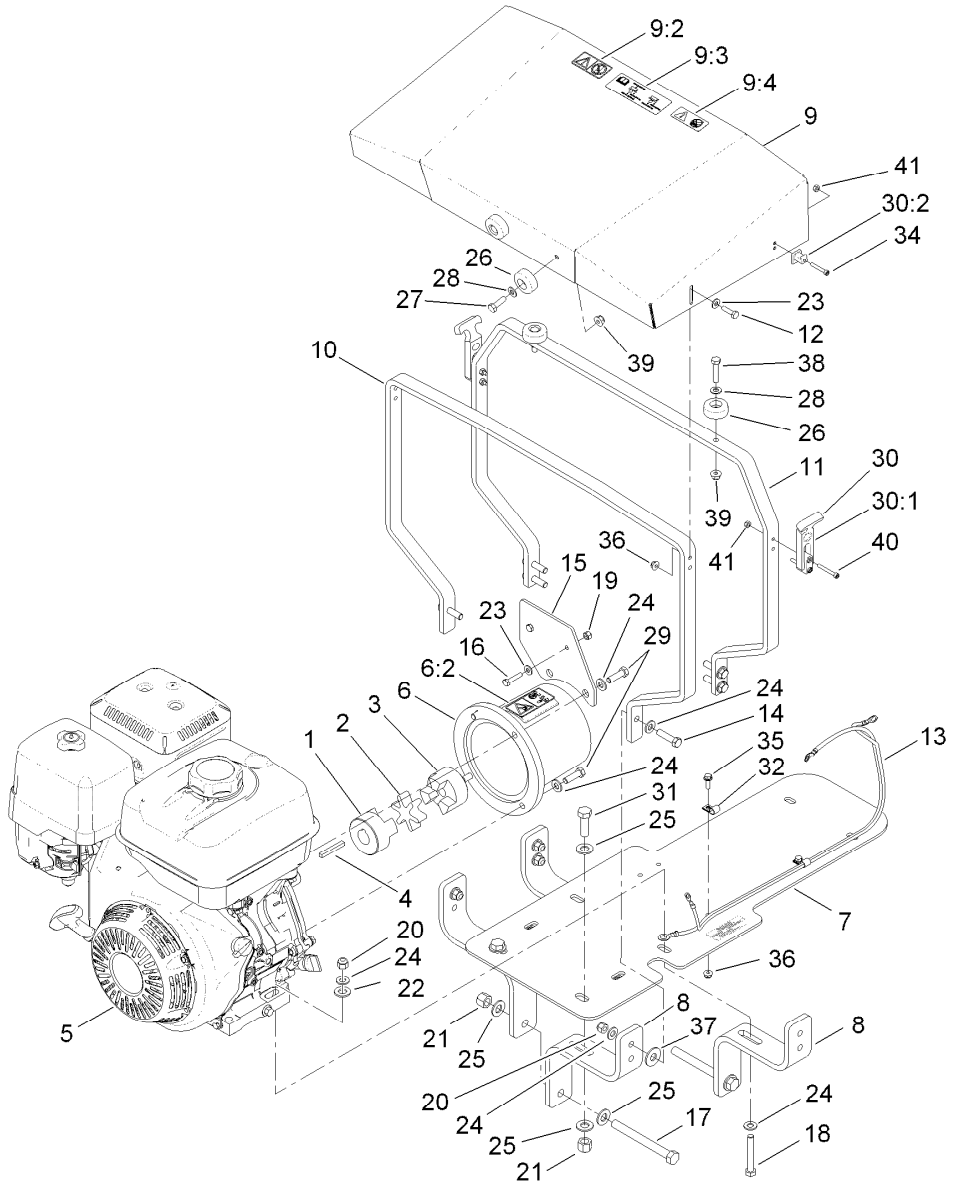

Engine and Mounting Assembly

Ref.	Part Number	Qty.	Description
1	T59013015	1	Coupling-Jaw
2	T59013022	1	Spider-Coupling
3	T59013005	1	Coupling-Jaw
4	T01-29633B	1	Stock-Key
5	T0002-1776	1	Engine-Honda, Gx340Ut1 Qnr2 ●
6	T0000-7665	1	Flange Adaptor Decal ASM
6:2	119-6844	1	Decal-Warning, Shear
7	T0000-1349-01	1	Plate-Mount, Engine
8	T0000-7680-01	4	Bracket-Mount, Engine
9	T36057010	1	Engine Cover ASM W/Decals
9:2	119-6807	1	Decal-Warning, Do Not Step
9:3	119-6829	1	Decal-Weight
9:4	115-2047	1	Decal-Surface, Hot
10	T36057015-01	1	Strut-Cover, Engine
11	T0000-7685-01	1	Stop-Cover, Engine
12	321-6	2	Screw-HH
13	119-6899	1	Harness-Wire, Engine

Ref.	Part Number	Qty.	Description
14	323-8	6	Screw-HH
15	T36057020-01	1	Bracket-Generator, Engine
16	321-8	2	Screw-HH
17	325-19	2	Screw-HH
18	323-12	4	Screw-HH
19	3296-42	2	Nut-Lock, NI
20	3296-39	10	Nut-Lock, NI
21	3296-23	4	Nut-Lock, NI
22	106-9888	4	Washer-Flat
23	3256-22	4	Washer-Flat
24	3256-24	24	Washer-Flat
25	3256-26	8	Washer-Flat
26	T0000-2430	4	Bumper-Rubber
27	322-5	2	Screw-HH
28	3256-23	4	Washer-Flat
29	323-7	4	Screw-HH
30	104-0010	2	Latch-Draw, Flexible
30:1	104-0011	1	Handle-Latch
30:2	104-0012	1	Keeper-Latch

● Obtain parts from www.honda-engines.com

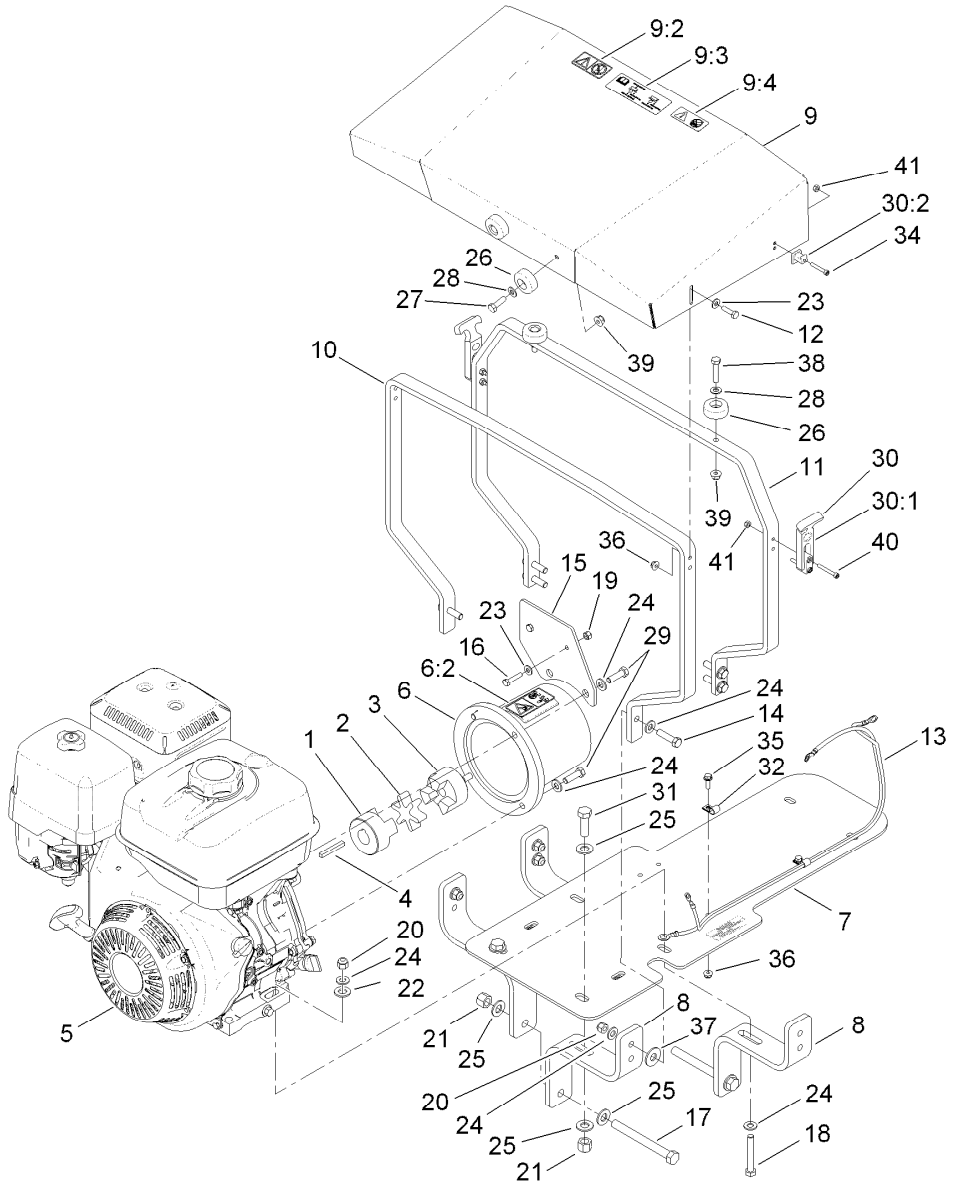

Engine and Mounting Assembly (continued)

Ref.	Part Number	Qty.	Description
31	325-6	2	Screw-HH
32	2412-89	2	Clamp
34	3274-13	2	Screw-HSH
35	115-5103	2	Screw-HHF
36	104-7201	4	Nut-HF
37	T0000-2623	2	Washer-Poly, Ultra High Molecular Weight
38	322-7	2	Screw-HH
39	104-8300	4	Nut-Flange, NI
40	3274-59	4	Screw-HSH
41	3296-2	6	Nut-Lock, NI

● Obtain parts from www.honda-engines.com

Notes:

Notes:

Notes:

Count on it.