Form No. 3368-381 Rev A

Service Engine Kit

Sand Pro 5020 Traction Unit

Model No. 120-3436

Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
Engine	1	
Air cleaner hose	1	Install the kit.
Hose clamp	2	

Refer to your Toro *Operator's Manual*, the Toro Service Manual, and the Briggs and Stratton Service Manual for more information on how to replace and adjust the engine and its components.

1. Remove the old engine and disconnect the air cleaner hose.
2. Install the new engine with a new air cleaner hose and 2 hose clamps from the kit as shown in Figure 1.

Note: Remove the blower housing, governor springs, air cleaner support bracket, and flywheel from the old engine and install them on the new engine.

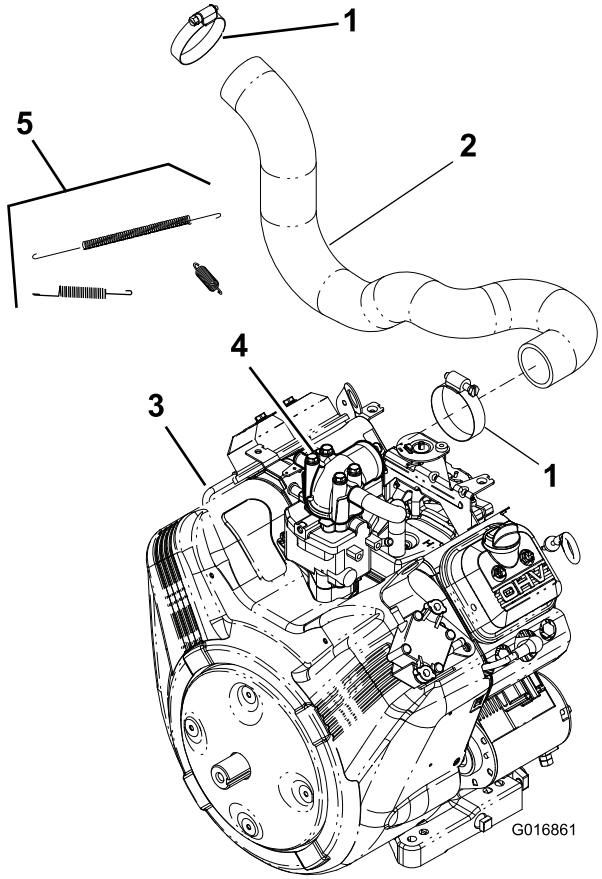


Figure 1

1. Hose clamp
2. Air cleaner hose
3. Engine
4. Air cleaner support bracket
5. Governor spring (location on engine not shown; refer to the engine owner's manual)

© 2011—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Register at www.Toro.com.

Original Instructions (EN)
Printed in the USA
All Rights Reserved