Form No. 3364-369 Rev B

Engine Replacement

2006 and Before Sand Pro/Infield Pro 5020 Traction Units

Model No. 117–2732

Model No. 119–2465

Installation Instructions

Refer to your *Toro Operator's Manual*, the *Toro Service Manual*, and the *Briggs and Stratton Service Manual* for information on engine and component replacement and adjustment.

Note: Remove the blower housing, flywheel, governor springs and the air cleaner support bracket from the old engine and install them on the new engine (Figure 1).

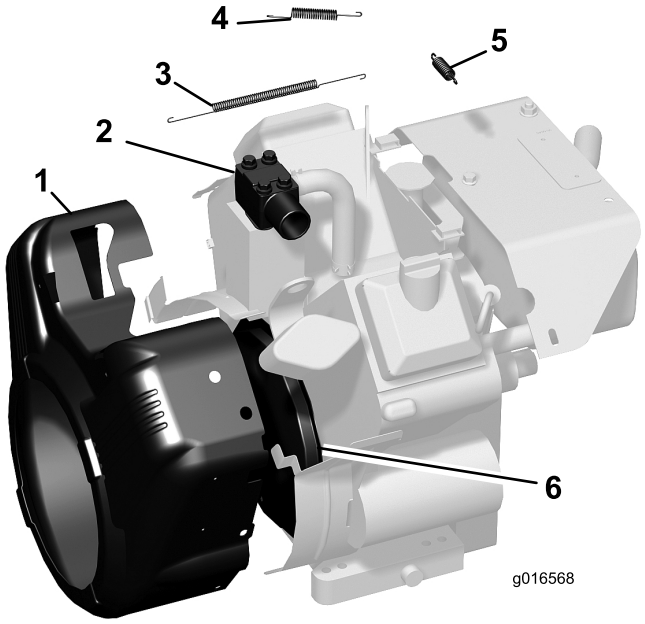


Figure 1

1. Blower housing
2. Air cleaner support bracket
3. Governor spring
4. Governor spring
5. Governor spring
6. Flywheel

© 2011—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Register at www.Toro.com.

Original Instructions (EN)
Printed in the USA.
All Rights Reserved