Form No. 3360-914 Rev B

TORO®

Count on it.

Parts Catalog

# Super Recycler® Lawn Mower

**Model No. 20090—Serial No. 290000001 and Up**

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquid Propane

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head

# Contents

Deck Housing and Rear Door Assembly . . . . . 4
Discharge Door Assembly No. 107-3717 . . . . . 5
Housing Assembly No. 115-2854 . . . . . 6
Front and Rear Wheel Assembly . . . . . 7
Engine and Blade Assembly . . . . . 8
Handle Assembly . . . . . 9
Cylinder Assembly Briggs and Stratton 126T02-0224-B1 . . . . . 10
Crankshaft Assembly Briggs and Stratton 126T02-0224-B1 . . . . . 11
Crankcase Assembly Briggs and Stratton 126T02-0224-B1 . . . . . 12
Carburetor Assembly Briggs and Stratton 126T02-0224-B1 . . . . . 13
Air Cleaner Assembly Briggs and Stratton 126T02-0224-B1 . . . . . 14
Governor Assembly Briggs and Stratton 126T02-0224-B1 . . . . . 15
Muffler and Fuel Tank Assembly Briggs and Stratton 126T02-0224-B1 . . . . . 16
Blower Housing Assembly Briggs and Stratton 126T02-0224-B1 . . . . . 17
Starter Assembly Briggs and Stratton 126T02-0224-B1 . . . . . 18
Engine Gasket Set Briggs and Stratton 126T02-0224-B1 . . . . . 19
Carburetor Overhaul Kit Briggs and Stratton 126T02-0224-B1 . . . . . 20
Attachments and Accessories . . . . . 21

**© 2011—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**



**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

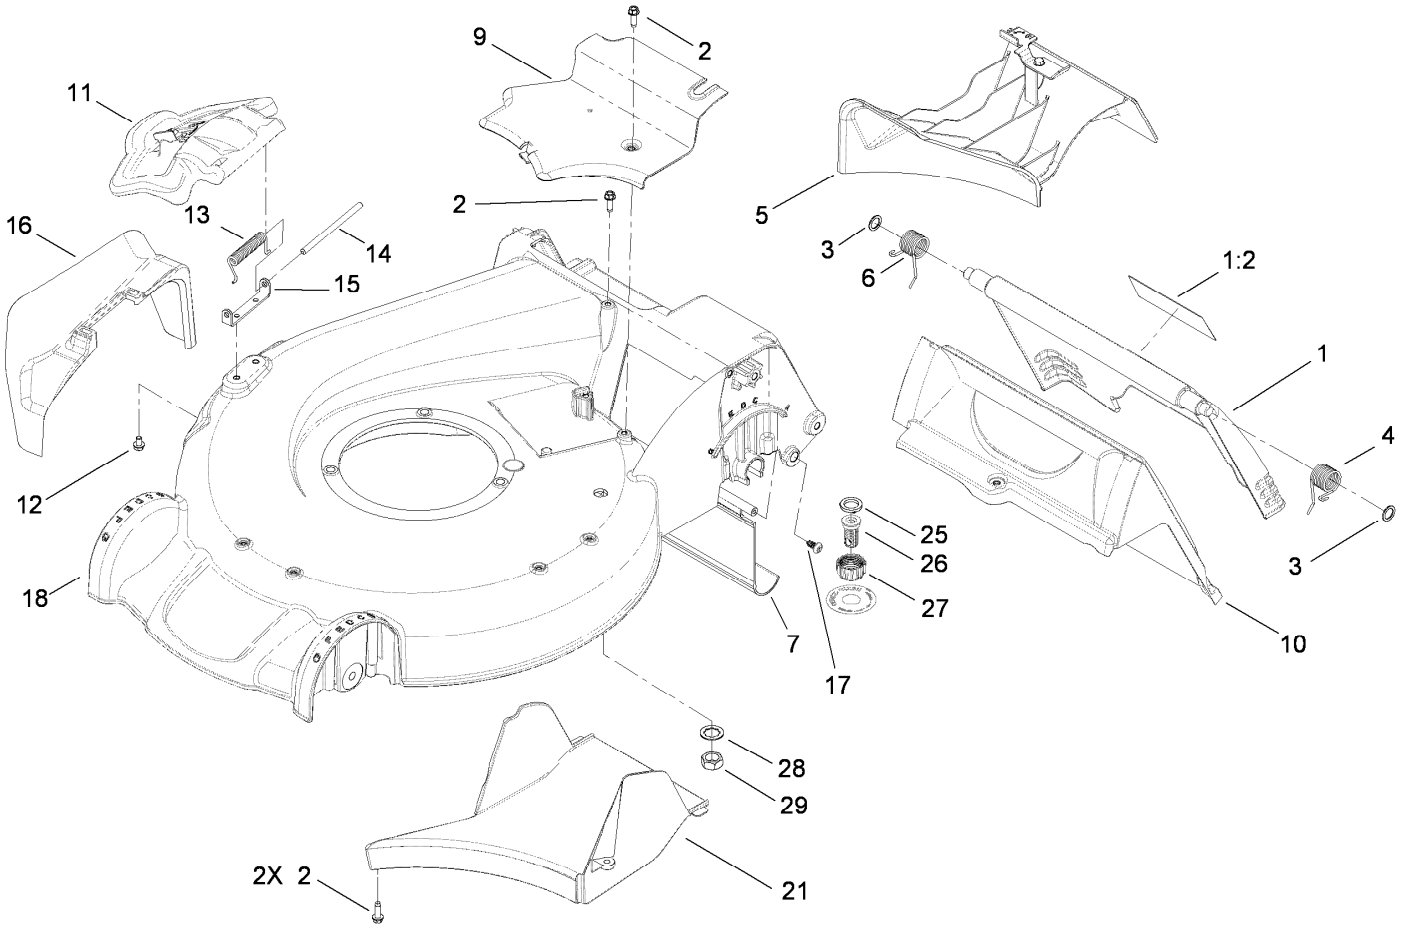


# Deck Housing and Rear Door Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 114-7992 | 1 | Rear Door ASM |
| 1:2 | 114-7982 | 1 | Decal-Warning |
| 2 | 49-2040 | 4 | Screw-HWHTF |
| 3 | 94-8196 | 2 | Washer-Nylon |
| 4 | 115-2859 | 1 | Spring-Torsion |
| 5 | 115-8413 | 1 | Mulch Plug ASM |
| 6 | 114-7924 | 1 | Spring-Torsion |
| 7 | 114-1586 | 1 | Shield-Trailing |
| 9 | 107-7494 | 1 | Cover-Belt |
| 10 | 114-2668 | 1 | Chute |
| 11 | 107-3717 | 1 | Discharge Door ASM |
| 12 | 99-8445 | 2 | Screw-HWH, Taptite |
| 13 | 99-5293 | 1 | Spring-Torsion |
| 14 | 99-5291 | 1 | Rod-Cover |
| 15 | 112-6416 | 1 | Bracket-Cover |
| 16 | 108-3753 | 1 | Chute-Discharge, Side |
| 17 | 117-1092 | 2 | Screw-PTH |
| 18 | 115-2854 | 1 | Housing ASM |
| 21 | 107-7495 | 1 | Tunnel-Discharge |
| 25 | 112-6438 | 1 | Washer-Seal, Washout Port |
| 26 | 112-6400 | 1 | Port-Washout |
| 27 | 112-6401 | 1 | Coupling-Hose, Washout Port |
| 28 | 3254-5 | 1 | Washer-Tooth, Internal |
| 29 | 3218-6 | 1 | Nut-Jam |

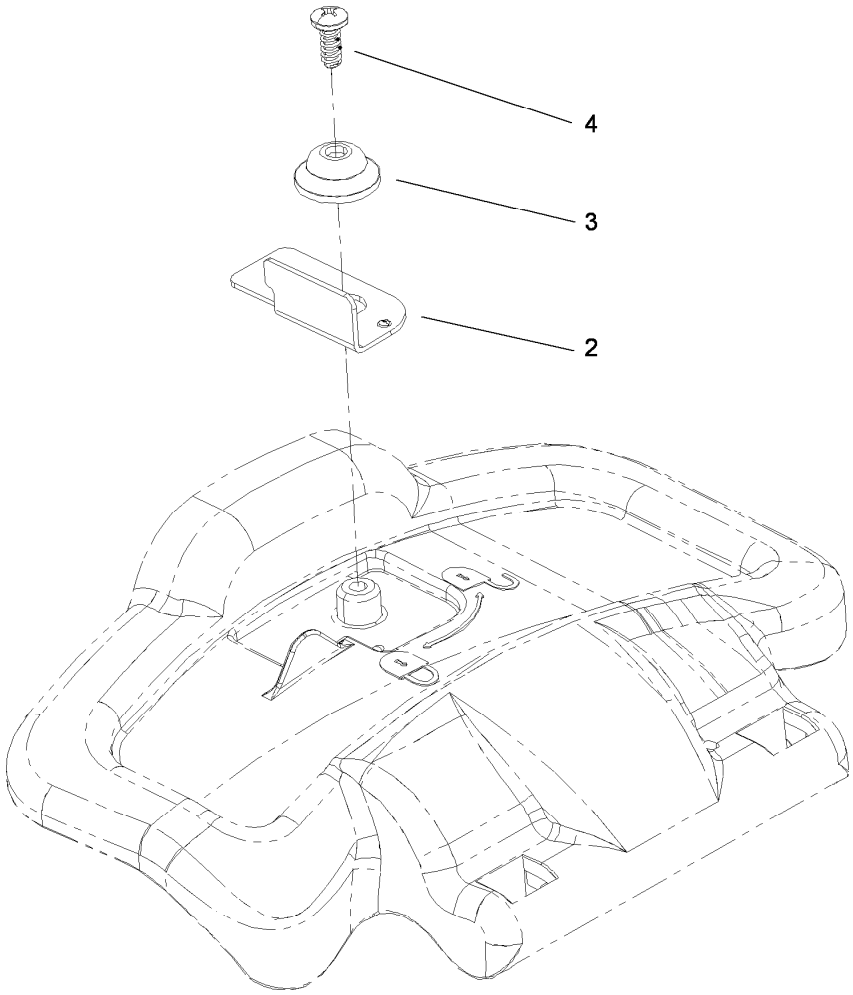


# Discharge Door Assembly No. 107-3717

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 2 | 107-0795 | 1 | Latch-Door |
| 3 | 107-7456 | 1 | Cap-Door |
| 4 | 107-7461 | 1 | Screw-Plastite |

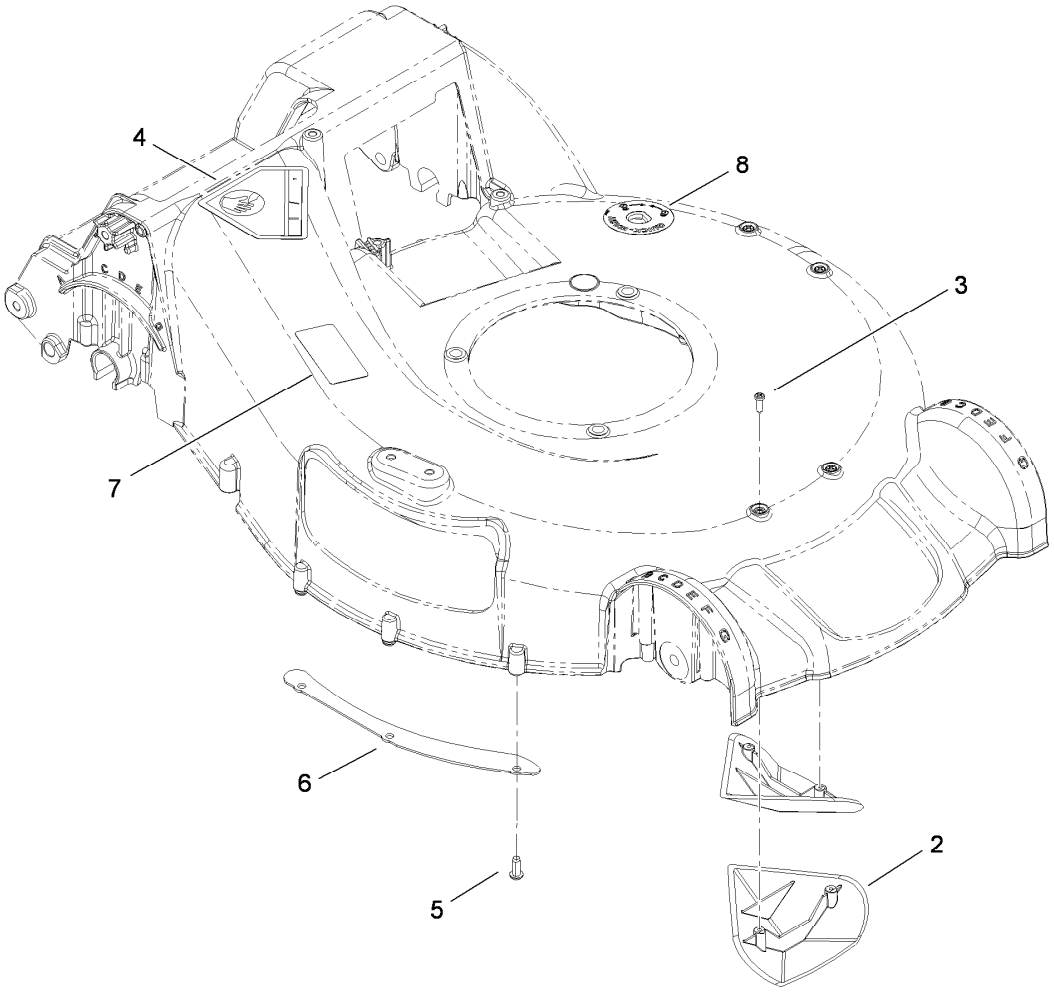


# Housing Assembly No. 115-2854

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 2 | 108-3798 | 2 | Kicker-Housing |
| 3 | 32144-111 | 4 | Screw-PPH |
| 4 | 94-8072 | 1 | Decal-Danger |
| 5 | 63-8590 | 3 | Screw |
| 6 | 105-1316-03 | 1 | Sheet-Lip |
| 7 | 108-8117 | 1 | Decal-Placement, Foot |
| 8 | 112-8867 | 1 | Decal-Port, Washout |

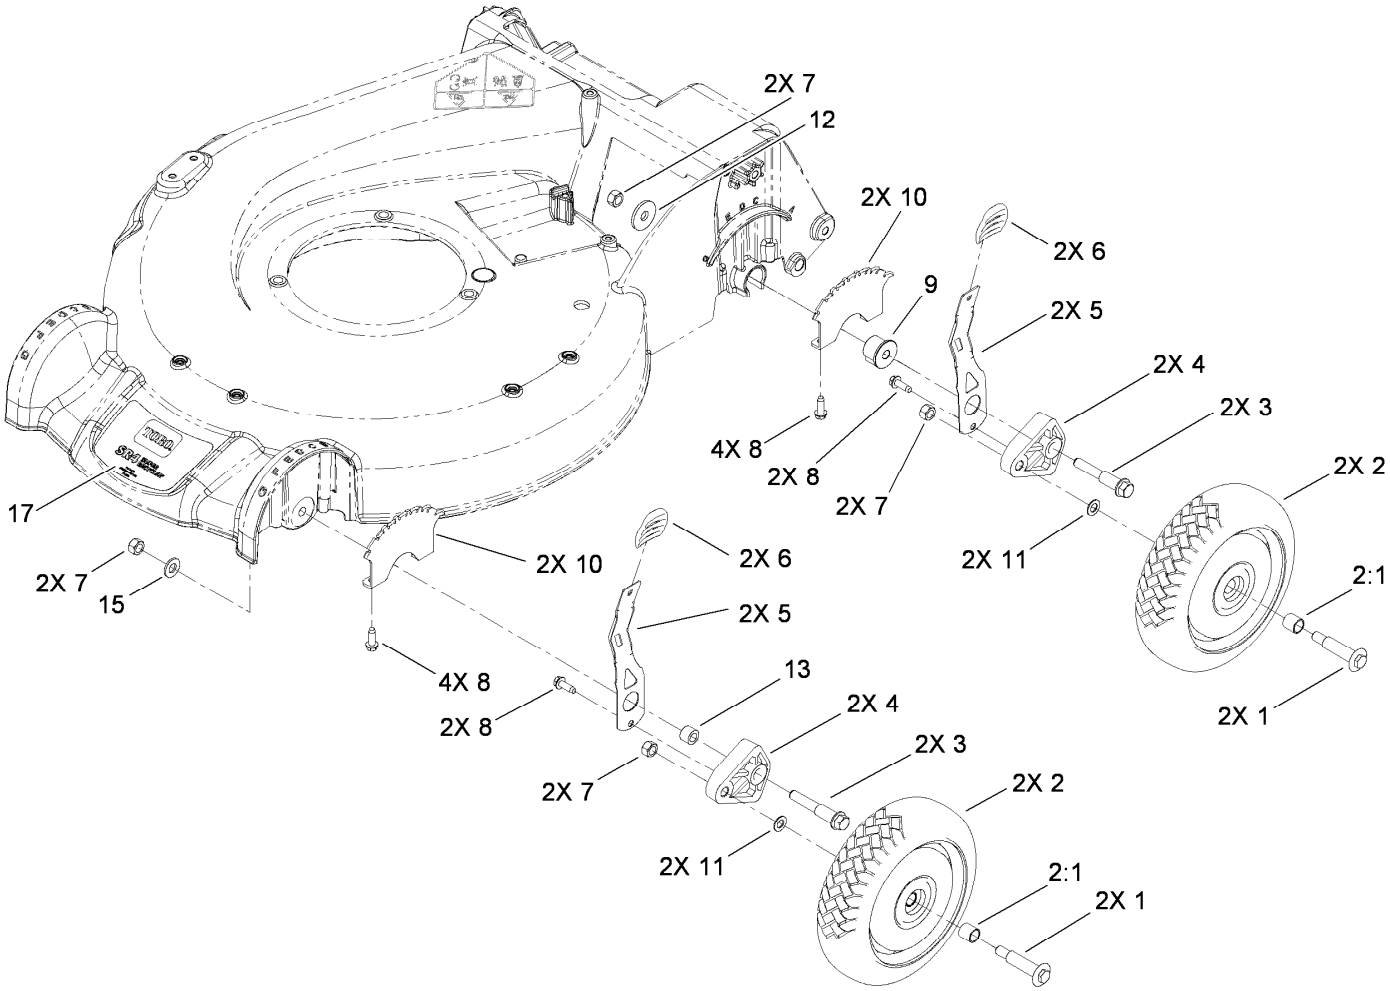


# Front and Rear Wheel Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 92-1057 | 4 | Bolt-Shoulder |
| 2 | 14-9989 | 4 | Wheel And Tire ASM |
| 2:1 | 27-6250 | 2 | Bushing |
| 3 | 114-3467 | 4 | Screw-Shoulder |
| 4 | 107-7492 | 4 | Arm-Pivot |
| 5 | 107-7491 | 4 | Arm-Spring |
| 6 | 105-3042 | 4 | Knob-Lever, HOC |
| 7 | 603773 | 8 | Nut |
| 8 | 49-2040 | 12 | Screw-HWHTF |
| 9 | 108-9758 | 2 | Spacer-Hp |
| 10 | 107-7478 | 4 | Plate-HOC |
| 11 | 40-1940 | 4 | Washer |
| 12 | 2844 | 2 | Washer |
| 13 | 52-2480 | 2 | Spacer-Wheel |
| 15 | 3256-24 | 2 | Washer-Flat |
| 17 | 108-8168 | 1 | Decal-Supercare |

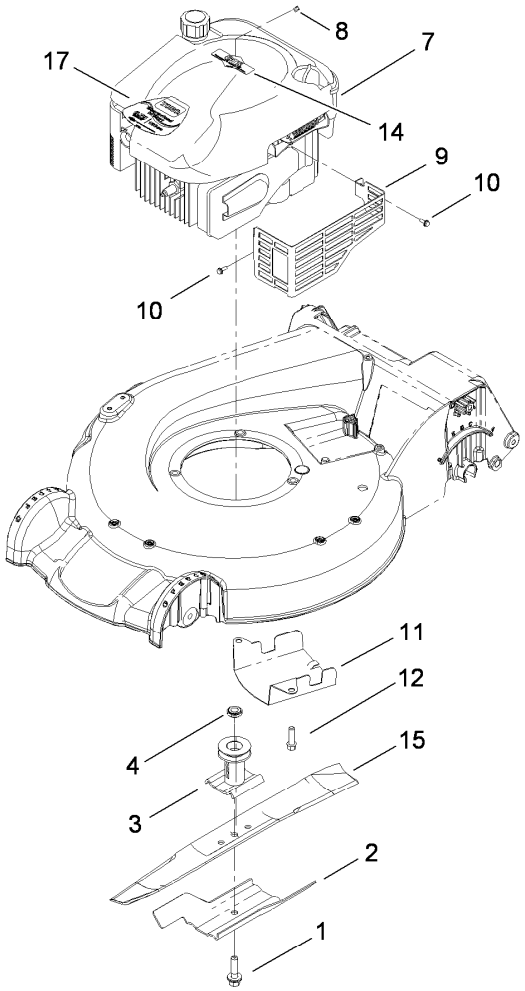


# Engine and Blade Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 105-8579 | 1 | Bolt-Blade |
| 2 | 105-6848-03 | 1 | Accelerator-Blade |
| 3 | 106-3987 | 1 | Blade Driver ASM |
| 4 | 106-3999 | 1 | Spacer-Driver |
| 7 | | 1 | Engine-B&s, 126T02-0224-B1 ●■ |
| 8 | 2210-316 | 1 | Stop-Rope |
| 9 | 104-7577-03 | 1 | Shield-Muffler |
| 10 | 32144-1 | 3 | Screw-Taptite |
| 11 | 107-7489-03 | 1 | Shield-Grass |
| 12 | 95-1727 | 3 | Screw-Taptite |
| 14 | 108-8130 | 1 | Decal-Recoil |
| 15 | 108-3762-03 | 1 | Blade-Recycling |
| 17 | 114-0339 | 1 | Decal-Engine |

● Not serviced separately

■ Obtain parts from www.briggsandstratton.com

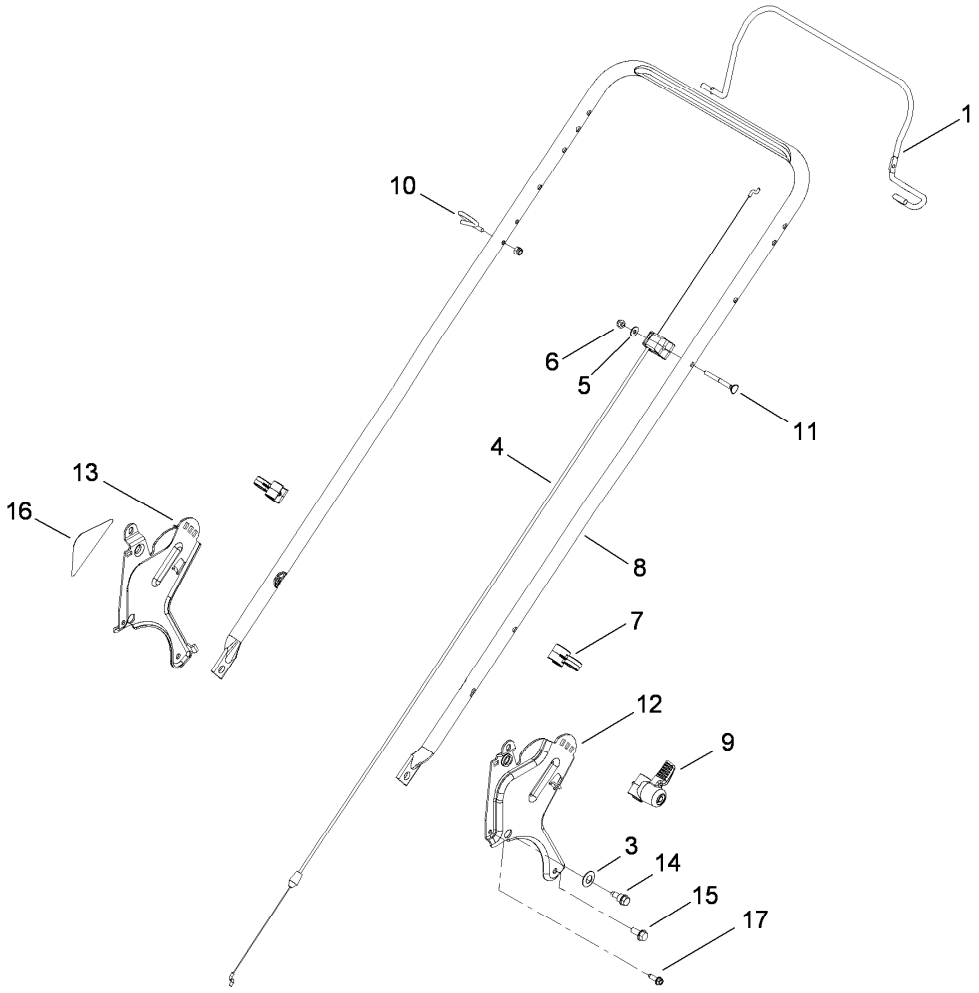


# Handle Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 117-4137-03 | 1 | Bail-Brake |
| 3 | 112-9972 | 2 | Washer-Conical, Spring |
| 4 | 117-5919 | 1 | Cable-Brake |
| 5 | 3256-1 | 1 | Washer-Flat |
| 6 | 3296-73 | 2 | Nut-Lock, NI |
| 7 | 106-6805 | 1 | Guide-Cable |
| 8 | 115-1300-05 | 1 | Handle |
| 9 | 115-2860 | 2 | Quick Release ASM |
| 10 | 86-9671 | 1 | Guide-Rope |
| 11 | 92-2270 | 1 | Screw-Handle |
| 12 | 114-2671-03 | 1 | Bracket-Handle, LH |
| 13 | 114-2672-03 | 1 | Bracket-Handle, RH |
| 14 | 115-1958 | 2 | Bolt-Shoulder |
| 15 | 32144-11 | 2 | Screw-HWHTF |
| 16 | 115-2884 | 1 | Decal-Instruction |
| 17 | 49-2040 | 2 | Screw-HWHTF |

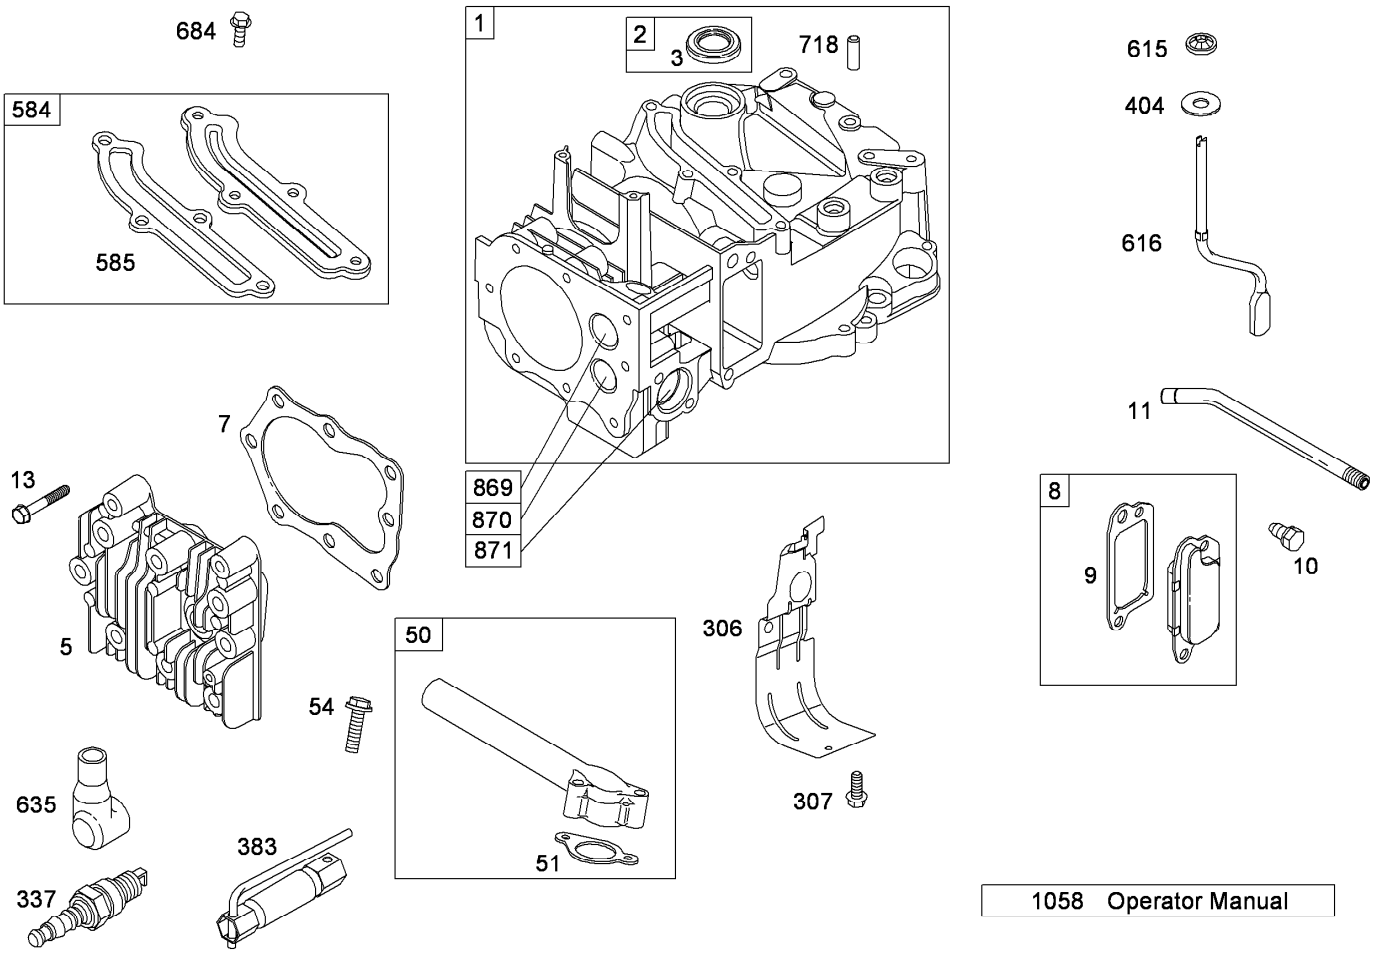


Assemblies include all parts shown in frames

# Cylinder Assembly
# Briggs and Stratton 126T02-0224-B1

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 697322 | 1 | Cylinder ASM ● |
| 2 | 399269 | 1 | Bushing And Seal Kit ● |
| 3 | 299819s | 1 | Seal-Oil (Magneto Side) ●■ |
| 5 | 691160 | 1 | Head-Cylinder ● |
| 7 | 692249 | 1 | Gasket-Head, Cylinder ■● |
| 8 | 695250 | 1 | Breather Asm ● |
| 9 | 696125 | 1 | Gasket-Breather ● |
| 10 | 691125 | 1 | Screw (Breather ASM) ● |
| 11 | 691781 | 1 | Tube-Breather ● |
| 13 | 690912 | 1 | Screw (Cylinder Head) ● |
| 50 | 794305 | 1 | Manifold-Intake ● |
| 51 | 794306 | 1 | Gasket-Intake ■● |
| 54 | 691650 | 1 | Screw (Intake Manifold) ● |
| 306 | 790836 | 1 | Shield-Cylinder ● |
| 307 | 690345 | 1 | Screw (Cylinder Shield) ● |
| 337 | 802592s | 1 | Spark Plug ● |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 383 | 89838s | 1 | Wrench-Spark Plug ● |
| 404 | 690272 | 1 | Washer (Governor Crank) ● |
| 584 | 697734 | 1 | Cover-Passage, Breather ● |
| 585 | 691879 | 1 | Gasket-Passage, Breather ■● |
| 615 | 690340 | 1 | Retainer-Shaft, Governor ● |
| 616 | 698801 | 1 | Crank-Governor ● |
| 635 | 66538s | 1 | Boot-Spark Plug ● |
| 684 | 690345 | 1 | Screw (Breather Passage Cover) ● |
| 718 | 690959 | 1 | Pin-Locating ● |
| 869 | 691155 | 1 | Seat-Valve (Intake) ● |
| 870 | 690380 | 1 | Seat-Valve (Exhaust) ● |
| 871 | 262001 | 1 | Bushing-Guide (Exhaust) ● |
| 871 | 63709 | 1 | Bushing-Guide (Intake) ● |
| 1058 | 277039TRI | 1 | Operator Manual ● |

● Obtain parts from www.briggsandstratton.com

■ Included in Engine Gasket Set (Ref. No. 358)

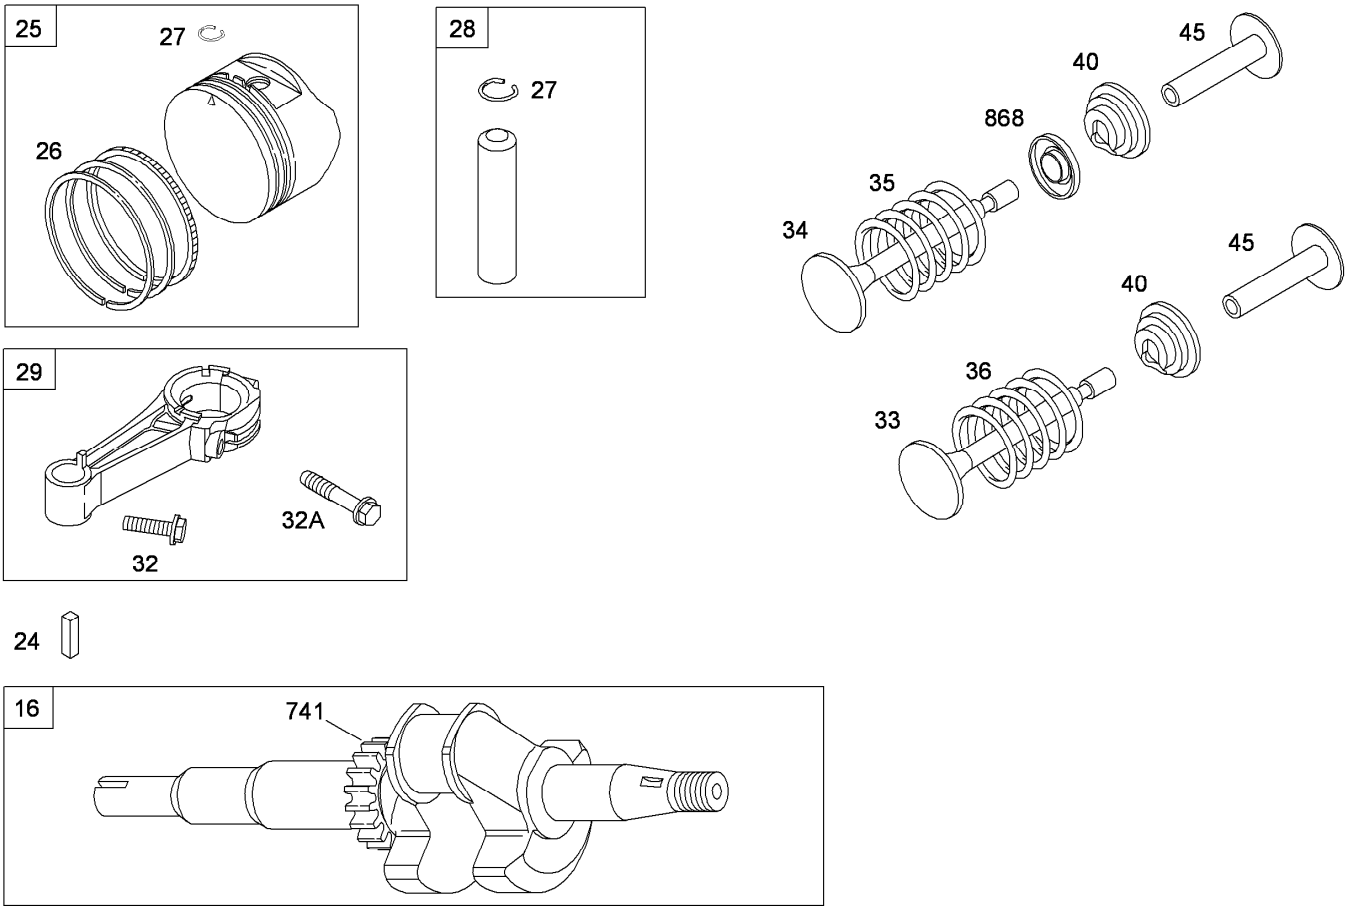


Assemblies include all parts shown in frames

# Crankshaft Assembly
# Briggs and Stratton 126T02-0224-B1

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 16 | 696009 | 1 | Crankshaft ● |
| 24 | 222698s | 1 | Key-Flywheel ● |
| 25 | 795429 | 1 | Piston Asm (Std) ● |
| 25 | 795430 | 1 | Piston Asm (.020 Oversize) ● |
| 26 | 795431 | 1 | Ring Set (Std) ● |
| 26 | 795432 | 1 | Ring Set (.020 Oversize) ● |
| 27 | 691866 | 1 | Lock-Pin, Piston ● |
| 28 | 499423 | 1 | Pin-Piston (Std) ● |
| 29 | 499424 | 1 | Rod-Connecting ● |
| 32 | 691664 | 1 | Screw (Connecting Rod ) ● |
| 32A | 695759 | 1 | Screw (Connecting Rod ) ● |
| 33 | 262651s | 1 | Valve-Exhaust ● |
| 34 | 262652s | 1 | Valve-Intake ● |
| 35 | 691270 | 1 | Spring-Valve (Intake) ● |
| 36 | 691270 | 1 | Spring-Valve (Exhaust) ● |
| 40 | 692194 | 1 | Retainer-Valve ● |
| 45 | 690548 | 1 | Tappet-Valve ● |
| 741 | 790345 | 1 | Gear-Timing ● |
| 868 | 697338 | 1 | Seal-Valve ● |

● Obtain parts from www.briggsandstratton.com

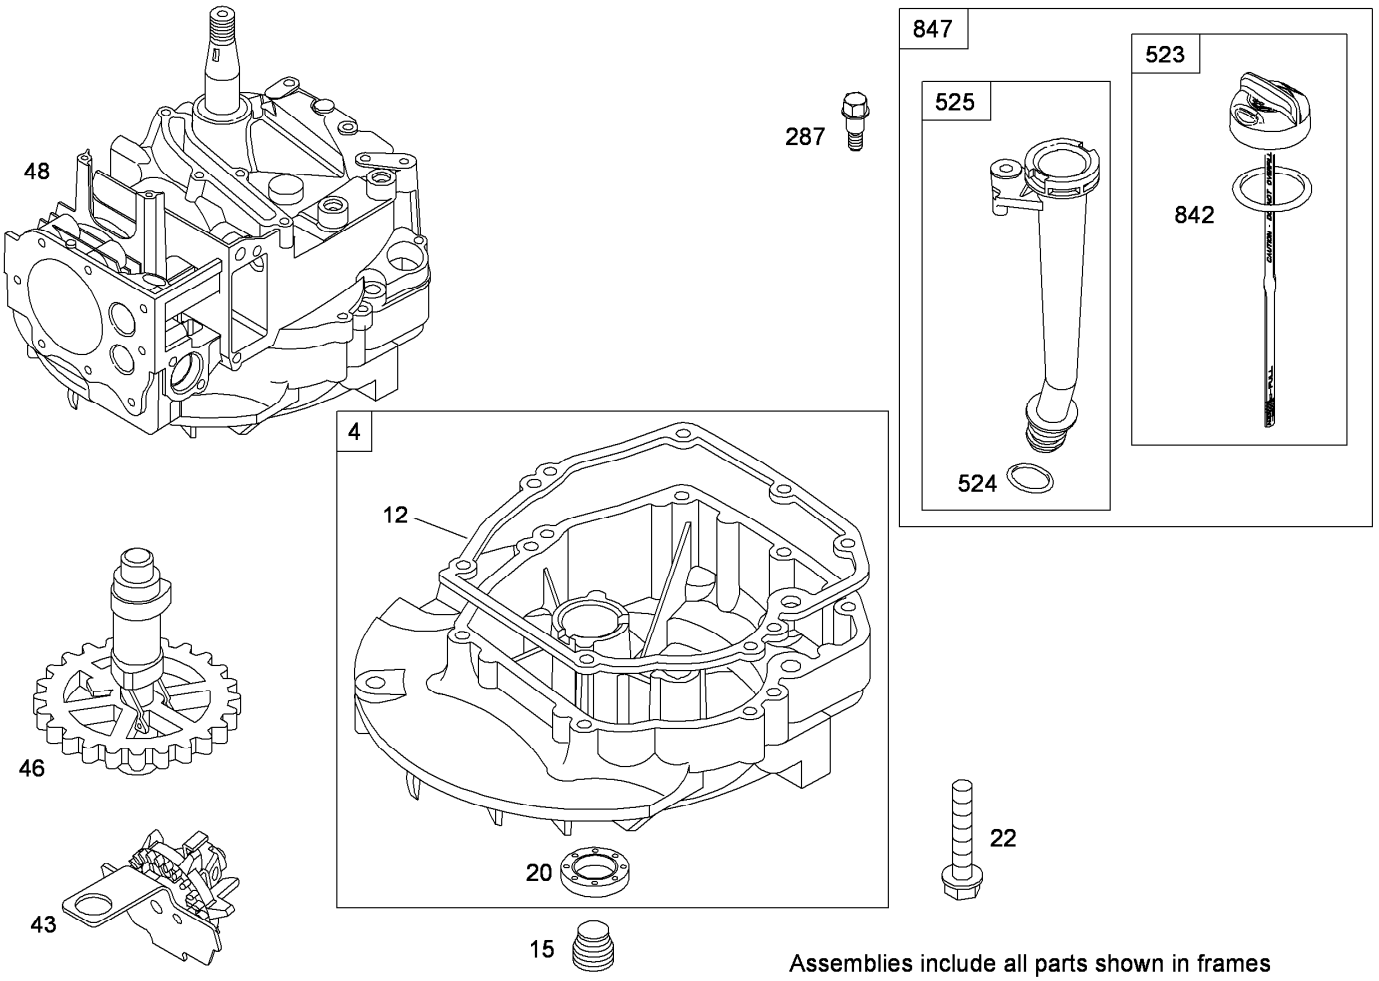


Assemblies include all parts shown in frames

# Crankcase Assembly
# Briggs and Stratton 126T02-0224-B1

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 4 | 493279 | 1 | Sump-Engine ● |
| 12 | 692232 | 1 | Gasket-Crankcase (.015 STD) ●■ |
| 15 | 691680 | 1 | Plug-Drain, Oil ● |
| 20 | 399781s | 1 | Seal-Oil (PTO Side) ●■ |
| 22 | 691092 | 1 | Screw (Engine Sump) ● |
| 43 | 691997 | 1 | Slinger-Oil, Governor ● |
| 46 | 691449 | 1 | Camshaft ● |
| 48 | 792742 | 1 | Block-Short ● |
| 287 | 690940 | 1 | Screw (Dipstick Tube) ●● |
| 523 | 499621 | 1 | Dipstick ● |
| 524 | 692296 | 1 | Seal-O Ring (Dipstick Tube) ●■ |
| 525 | 495265 | 1 | Tube-Dipstick ● |
| 842 | 691031 | 1 | Seal-O Ring (Dipstick Tube) ●■ |
| 847 | 692047 | 1 | Dipstick Tube ASM ● |

● Obtain parts from www.briggsandstratton.com

■ Included in Engine Gasket Set (Ref. No. 358)

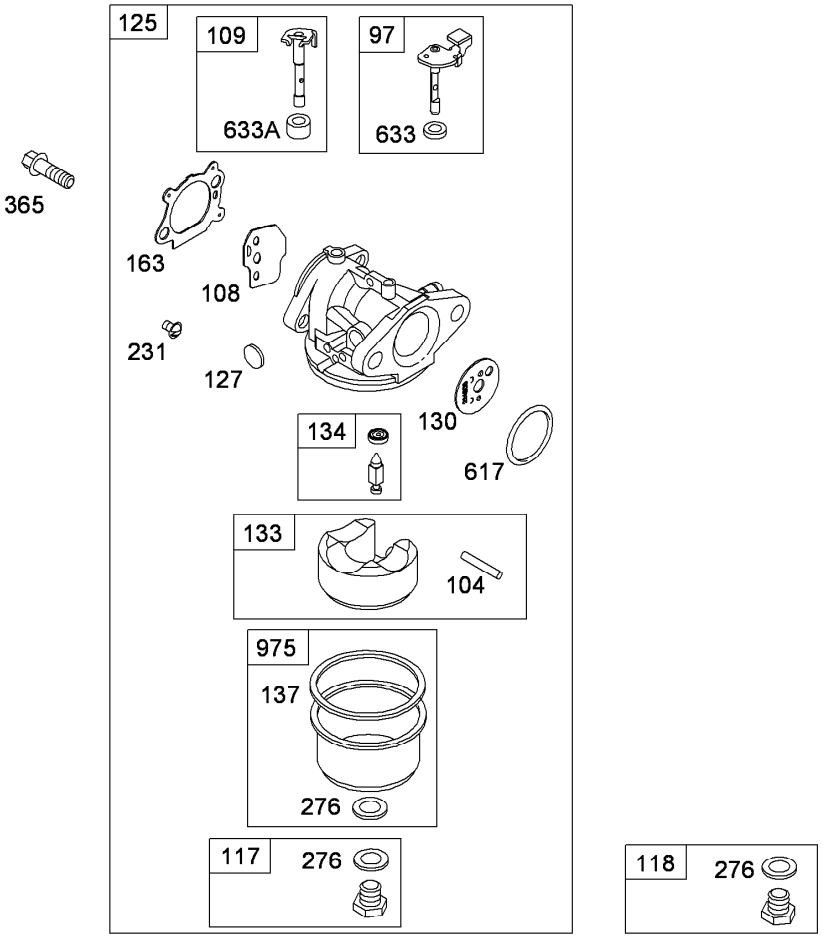


Assemblies include all parts shown in frames

# Carburetor Assembly
# Briggs and Stratton 126T02-0224-B1

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 97 | 696565 | 1 | Shaft-Throttle ● |
| 104 | 691242 | 1 | Pin-Hinge, Float ●◆ |
| 108 | 790844 | 1 | Valve-Choke ● |
| 109 | 790843 | 1 | Shaft-Choke ● |
| 117 | 691428 | 1 | Jet-Main (Standard) ● |
| 118 | 498977 | 1 | Jet-Main (High Altitude) ● |
| 125 | 794304 | 1 | Carburetor ● |
| 127 | 694468 | 1 | Plug-Welch ●◆ |
| 130 | 696564 | 1 | Valve-Throttle ● |
| 133 | 398187 | 1 | Float-Carburetor ● |
| 134 | 398188 | 1 | Needle And Seat Kit ●◆ |
| 137 | 693981 | 1 | Gasket-Bowl, Float ●◆▲ |
| 163 | 272653s | 1 | Gasket-Cleaner, Air ●◆■▲ |
| 231 | 691636 | 1 | Screw (Choke Valve) ● |
| 276 | 271716 | 1 | Washer-Sealing ●◆▲ |
| 365 | 692524 | 1 | Screw (Carburetor) ● |
| 617 | 270344s | 1 | Seal-O Ring (Intake Manifold) ●◆▲ |
| 633 | 691321 | 1 | Seal-Shaft, Choke Throttle ●◆▲ |
| 633A | 693867 | 1 | Seal-Shaft, Choke Throttle ●◆▲ |
| 975 | 493640 | 1 | Bowl-Float ● |

● Obtain parts from www.briggsandstratton.com
▲ Included in Carburetor Gasket Set (Ref. No. 977)
■ Included in Engine Gasket Set (Ref. No. 358)
◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

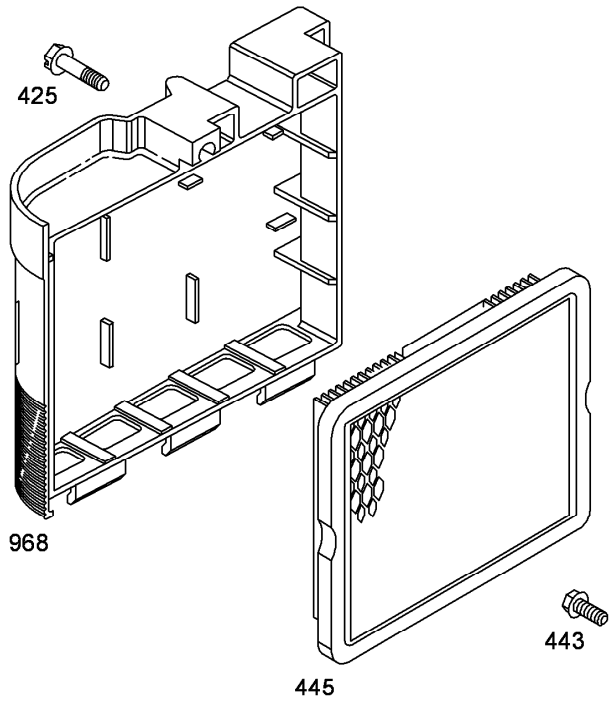


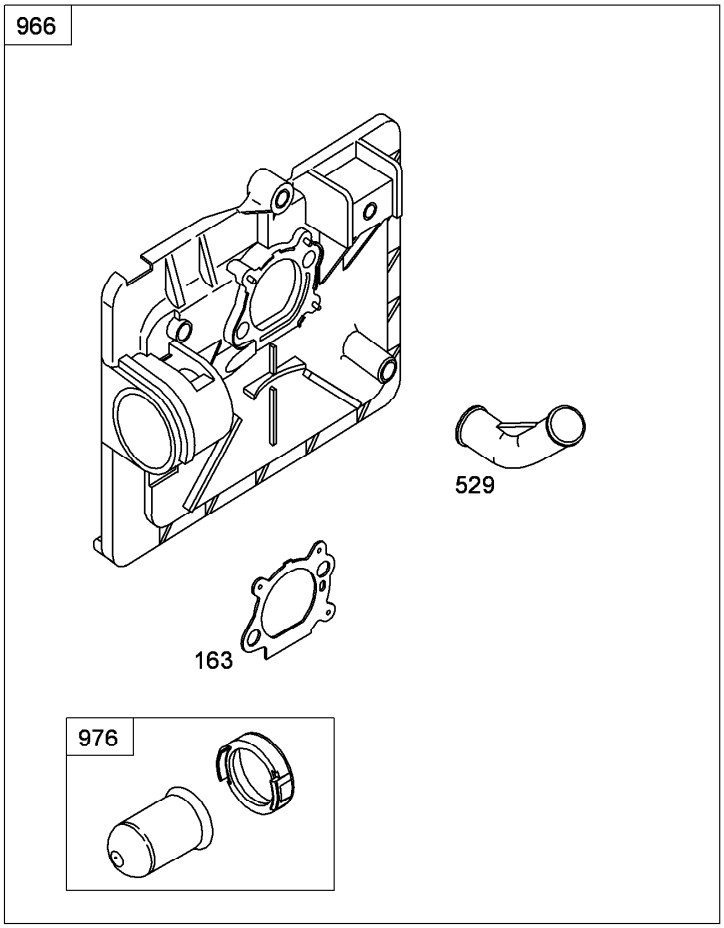


Assemblies include all parts shown in frames

# Air Cleaner Assembly
# Briggs and Stratton 126T02-0224-B1

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 163 | 272653s | 1 | Gasket-Cleaner, Air ●■◆▲ |
| 425 | 690670 | 1 | Screw (Air Cleaner Cover) ● |
| 443 | 692523 | 1 | Screw (Air Cleaner Primer Base) ● |
| 445 | 491588s | 1 | Filter-Cartridge, Air Cleaner ● |
| 529 | 691923 | 1 | Grommet ● |
| 966 | 792040 | 1 | Base-Primer, Air Cleaner ●● |
| 968 | 692298 | 1 | Cover-Cleaner, Air ● |
| 976 | 694395 | 1 | Primer-Carburetor ● |

● Obtain parts from www.briggsandstratton.com
■ Included in Engine Gasket Set (Ref. No. 358)
▲ Included in Carburetor Gasket Set (Ref. No. 977)
◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

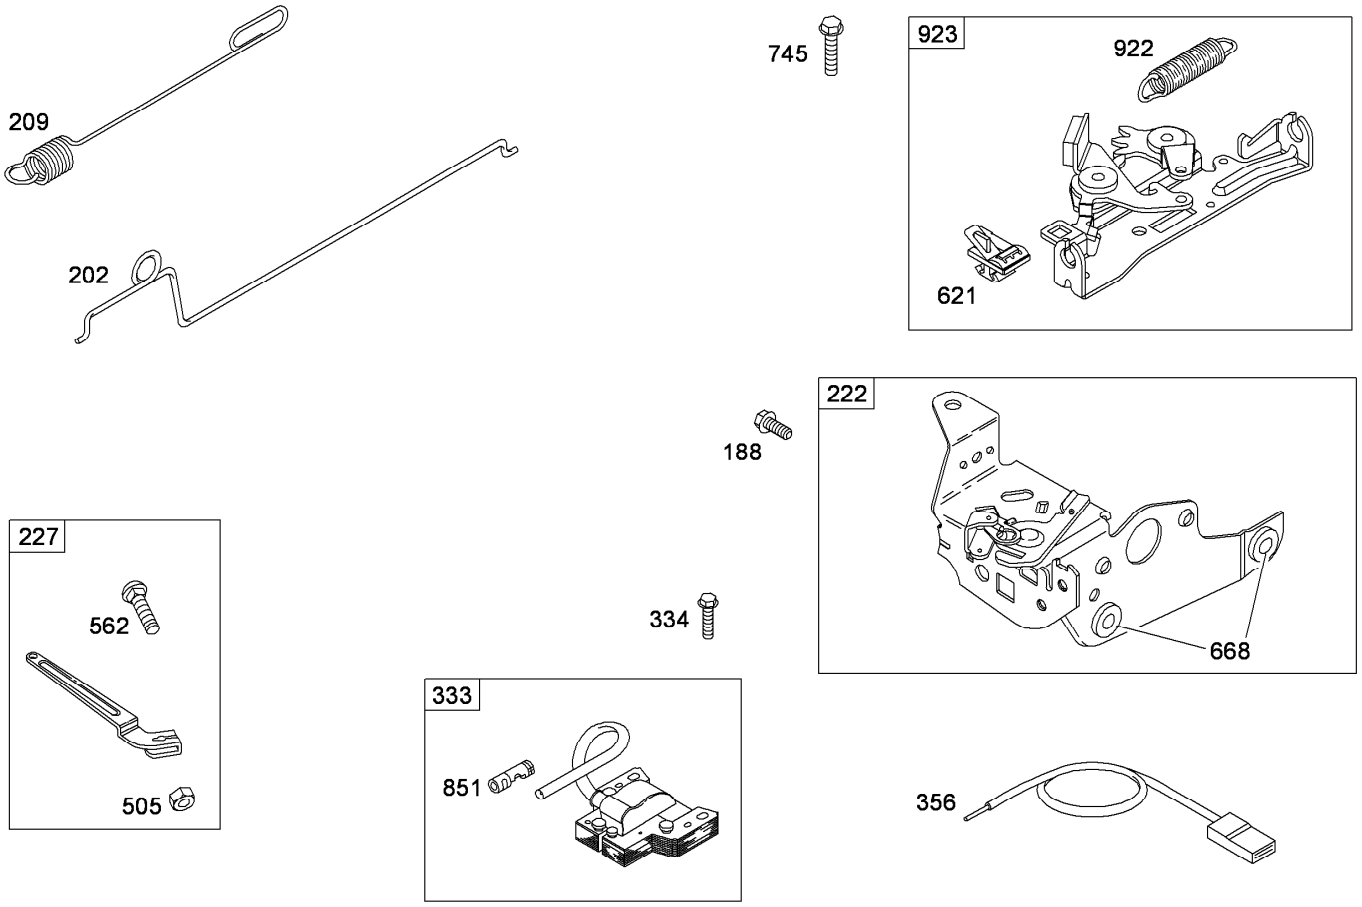


Assemblies include all parts shown in frames

# Governor Assembly
# Briggs and Stratton 126T02-0224-B1

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 188 | 693399 | 1 | Screw (Control Bracket) ● |
| 202 | 691829 | 1 | Link-Governor, Mechanical ● |
| 209 | 691292 | 1 | Spring-Governor ● |
| 222 | 793754 | 1 | Bracket-Control ● |
| 227 | 690783 | 1 | Lever-Control, Governor ● |
| 333 | 790817 | 1 | Armature-Magneto ● |
| 334 | 691061 | 1 | Screw (Magneto Armature) ● |
| 356 | 692390 | 1 | Wire-Stop ● |
| 505 | 691251 | 1 | Nut (Governor Control Lever) ● |
| 562 | 691119 | 1 | Bolt (Governor Control Lever) ● |
| 621 | 692310 | 1 | Switch-Stop ● |
| 668 | 493823 | 1 | Spacer ● ■ |
| 745 | 691648 | 1 | Screw (Brake) ● |
| 851 | 493880s | 1 | Terminal-Spark Plug ● |
| 922 | 691831 | 1 | Spring-Brake ● |
| 923 | 691994 | 1 | Brake ASM ● |

● Obtain parts from www.briggsandstratton.com

■ Included in Engine Gasket Set (Ref. No. 358)

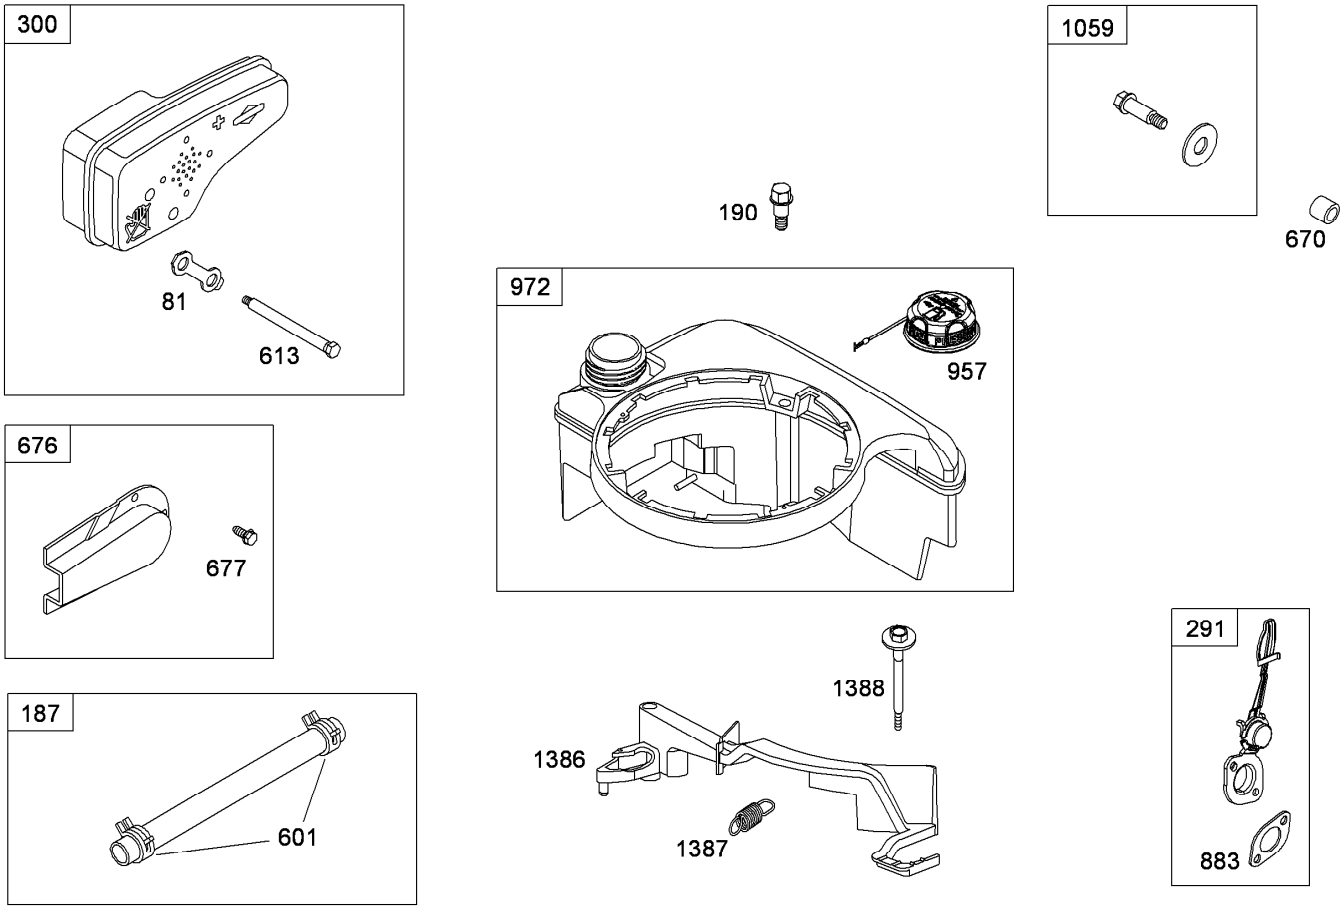


Assemblies include all parts shown in frames

# Muffler and Fuel Tank Assembly
# Briggs and Stratton 126T02-0224-B1

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 81 | 691740 | 1 | Lock-Screw, Muffler ● |
| 187 | 791766 | 1 | Line-Fuel (Cut To Required Length) ● |
| 190 | 690940 | 1 | Screw (Fuel Tank) ● |
| 291 | 790830 | 1 | Thermostat ● |
| 300 | 692038 | 1 | Muffler ● |
| 601 | 791850 | 1 | Clamp-Hose ● |
| 613 | 691340 | 1 | Screw (Muffler) ● |
| 670 | 692294 | 1 | Spacer-Tank, Fuel ● |
| 676 | 493871 | 1 | Deflector-Muffler ● |
| 677 | 690661 | 1 | Screw (Muffler Deflector) ● |
| 883 | 691881 | 1 | Gasket-Exhaust ● |
| 957 | 699985 | 1 | Cap-Tank, Fuel ● |
| 972 | 699374 | 1 | Tank-Fuel ● |
| 1059 | 692311 | 1 | Screw And Washer Kit ● |
| 1386 | 790848 | 1 | Vane-Air ● |
| 1387 | 790849 | 1 | Spring-Vane, Air ● |
| 1388 | 790850 | 1 | Screw (Air Vane) ● |

● Obtain parts from www.briggsandstratton.com

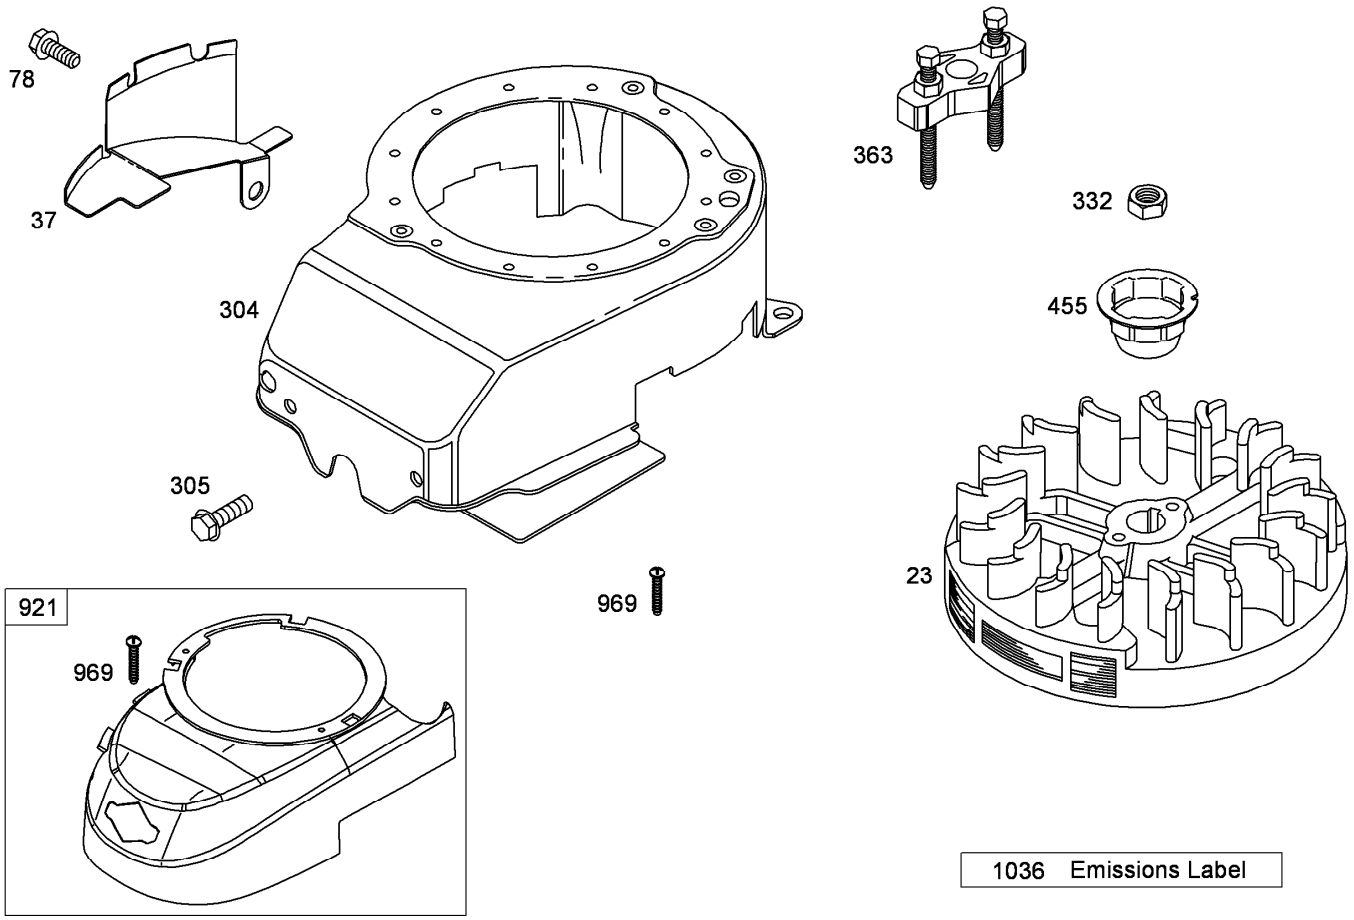


Assemblies include all parts shown in frames

# Blower Housing Assembly
# Briggs and Stratton 126T02-0224-B1

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 23 | 691987 | 1 | Flywheel ■ |
| 37 | 694086 | 1 | Guard-Flywheel ■ |
| 78 | 691108 | 1 | Screw (Flywheel Guard) ■ |
| 304 | 790983 | 1 | Housing-Blower ■ |
| 305 | 691108 | 1 | Screw (Blower Housing) ■ |
| 332 | 690662 | 1 | Nut (Flywheel) ■ |
| 363 | 19069 | 1 | Puller-Flywheel ■ |
| 455 | 791760 | 1 | Gasket-Passage, Breather ■ |
| 921 | 790036 | 1 | Cover-Housing, Blower ■ |
| 969 | 691138 | 1 | Screw (Blower Housing Cover) ■ |
| 1036 | | 1 | Label-Emissions ■ ● |

● Not serviced separately

■ Obtain parts from www.briggsandstratton.com

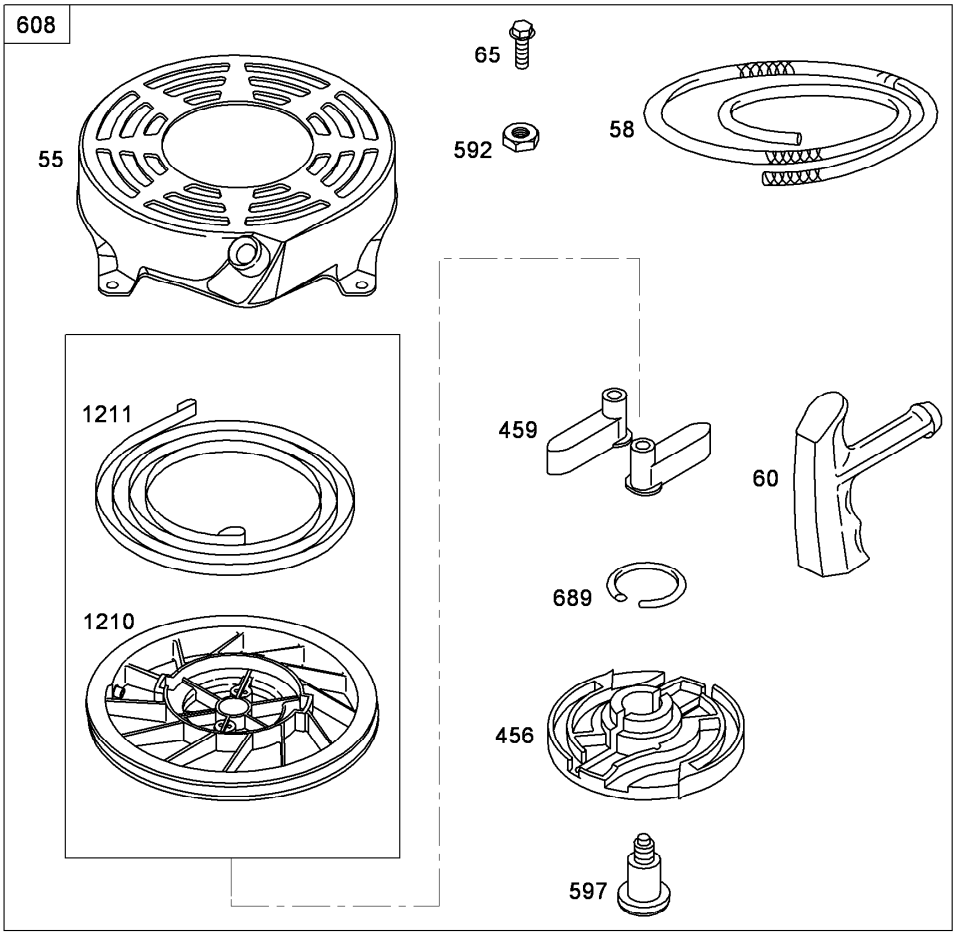


Assemblies include all parts shown in frames

# Starter Assembly
# Briggs and Stratton 126T02-0224-B1

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 55 | 691421 | 1 | Housing-Starter, Rewind ● |
| 58 | 697316 | 1 | Rope-Starter (Cut To Required Length) ● |
| 60 | 281434s | 1 | Grip-Rope, Starter ● |
| 65 | 690837 | 1 | Screw (Rewind Starter) ● |
| 456 | 692299 | 1 | Plate-Friction, Pawl ● |
| 459 | 281505s | 1 | Ratchet-Pawl ● |
| 592 | 690800 | 1 | Nut (Rewind Starter) ● |
| 597 | 691696 | 1 | Screw (Pawl Friction Plate) ● |
| 608 | 497680 | 1 | Starter-Rewind ● |
| 689 | 691855 | 1 | Spring-Friction ● |
| 1210 | 498144 | 1 | Pulley And Spring ASM (Pulley) ● |
| 1211 | 498144 | 1 | Pulley And Spring ASM (Spring) ● |

● Obtain parts from www.briggsandstratton.com

358 Engine Gasket Set

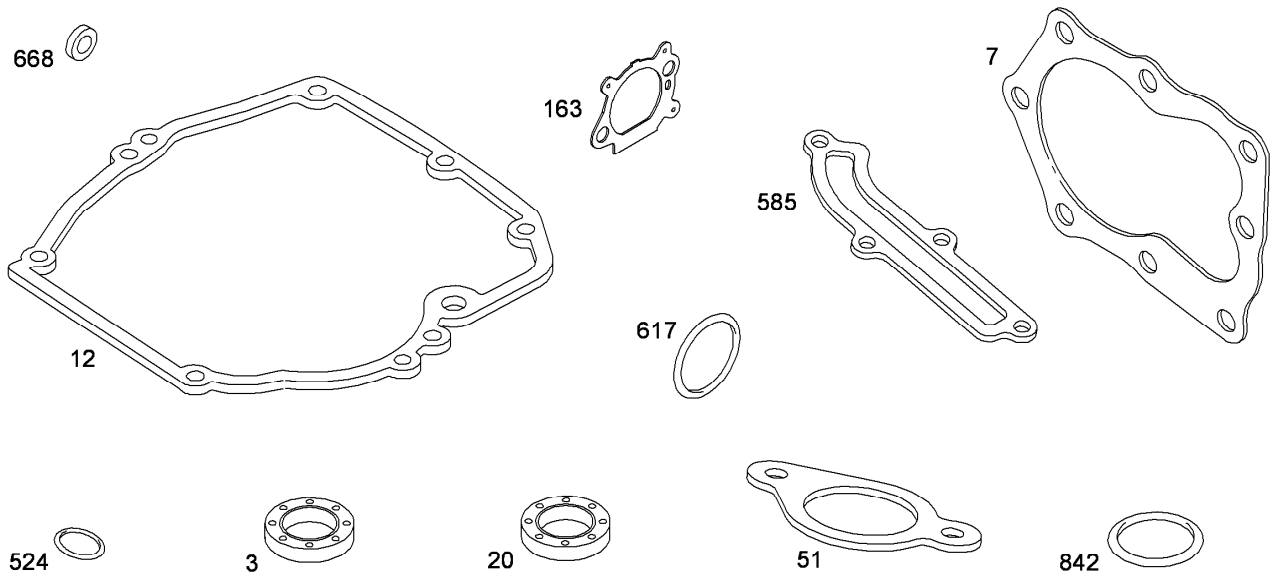


Assemblies include all parts shown in frames

# Engine Gasket Set
# Briggs and Stratton 126T02-0224-B1

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 3 | 299819s | 1 | Seal-Oil (Magneto Side) ●■ |
| 7 | 692249 | 1 | Gasket-Head, Cylinder ●■ |
| 12 | 692232 | 1 | Gasket-Crankcase (.015 Std) ●■ |
| 20 | 399781s | 1 | Seal-Oil (PTO Side) ●■ |
| 51 | 794306 | 1 | Gasket-Intake ●■ |
| 163 | 272653s | 1 | Gasket-Cleaner, Air ●◆■▲ |
| 358 | 794307 | 1 | Engine Gasket Set ● |
| 524 | 692296 | 1 | Seal-O Ring (Dipstick Tube) ●■ |
| 585 | 691879 | 1 | Gasket-Passage, Breather ●■ |
| 617 | 270344s | 1 | Seal-O Ring (Intake Manifold) ●◆■▲ |
| 668 | 493823 | 1 | Spacer ●■ |
| 842 | 691031 | 1 | Seal-O Ring (Dipstick) ■● |

● Obtain parts from www.briggsandstratton.com
■ Included in Engine Gasket Set (Ref. No. 358)
▲ Included in Carburetor Gasket Set (Ref. No. 977)
◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

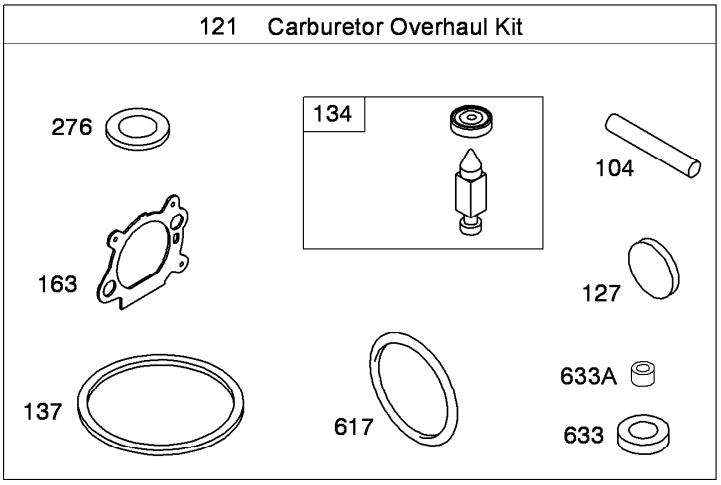


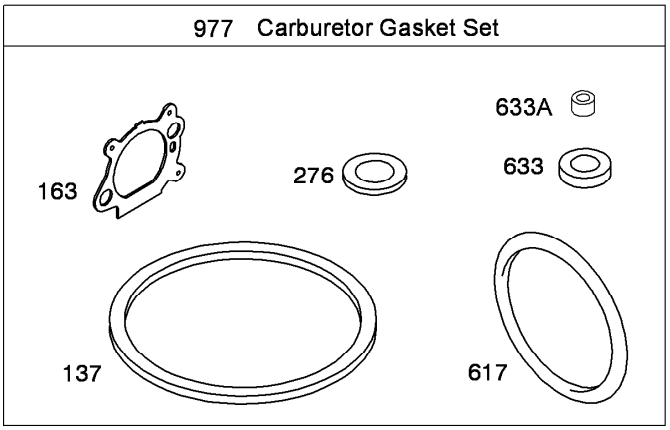


Assemblies include all parts shown in frames

# Carburetor Overhaul Kit
# Briggs and Stratton 126T02-0224-B1

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 104 | 691242 | 1 | Pin-Hinge, Float ●◆ |
| 121 | 498260 | 1 | Carburetor Overhaul Kit ● |
| 127 | 694468 | 1 | Plug-Welch ●◆ |
| 134 | 398188 | 1 | Needle And Seat Kit ●◆ |
| 137 | 693981 | 1 | Gasket-Bowl, Float ●◆▲ |
| 163 | 272653s | 1 | Gasket-Cleaner, Air ▲●◆■ |
| 276 | 271716 | 1 | Washer-Sealing ●◆▲ |
| 617 | 270344s | 1 | Seal-O Ring (Intake Manifold) ▲●◆■ |
| 633 | 691321 | 1 | Seal-Shaft, Choke Throttle ●◆▲ |
| 633A | 693867 | 1 | Seal-Shaft, Choke Throttle ●◆▲ |
| 977 | 498261 | 1 | Carburetor Gasket Set ● |

● Obtain parts from www.briggsandstratton.com
▲ Included in Carburetor Gasket Set (Ref. No. 977)
■ Included in Engine Gasket Set (Ref. No. 358)
◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

# Attachments and Accessories

## For 20090 Super Recycler Lawn Mower

| Product Name | Model/Part |
|---|---|
| Bagging Blade | 108-3759-03 |
| Traction Assist Handle Kit | 108-8120 |
| Cover-Lawnmower | 490-7462 |
| Plain Walk Mower Cover | 490-7463 |
| Bagger Kit | 59165 |

## Notes:

## Notes:

**Count on it.**