FORM NO. 3318–128 REV A

TORO®

MODEL NO. 09120–60001 & UP

PARTS CATALOG

GREENS AERATOR

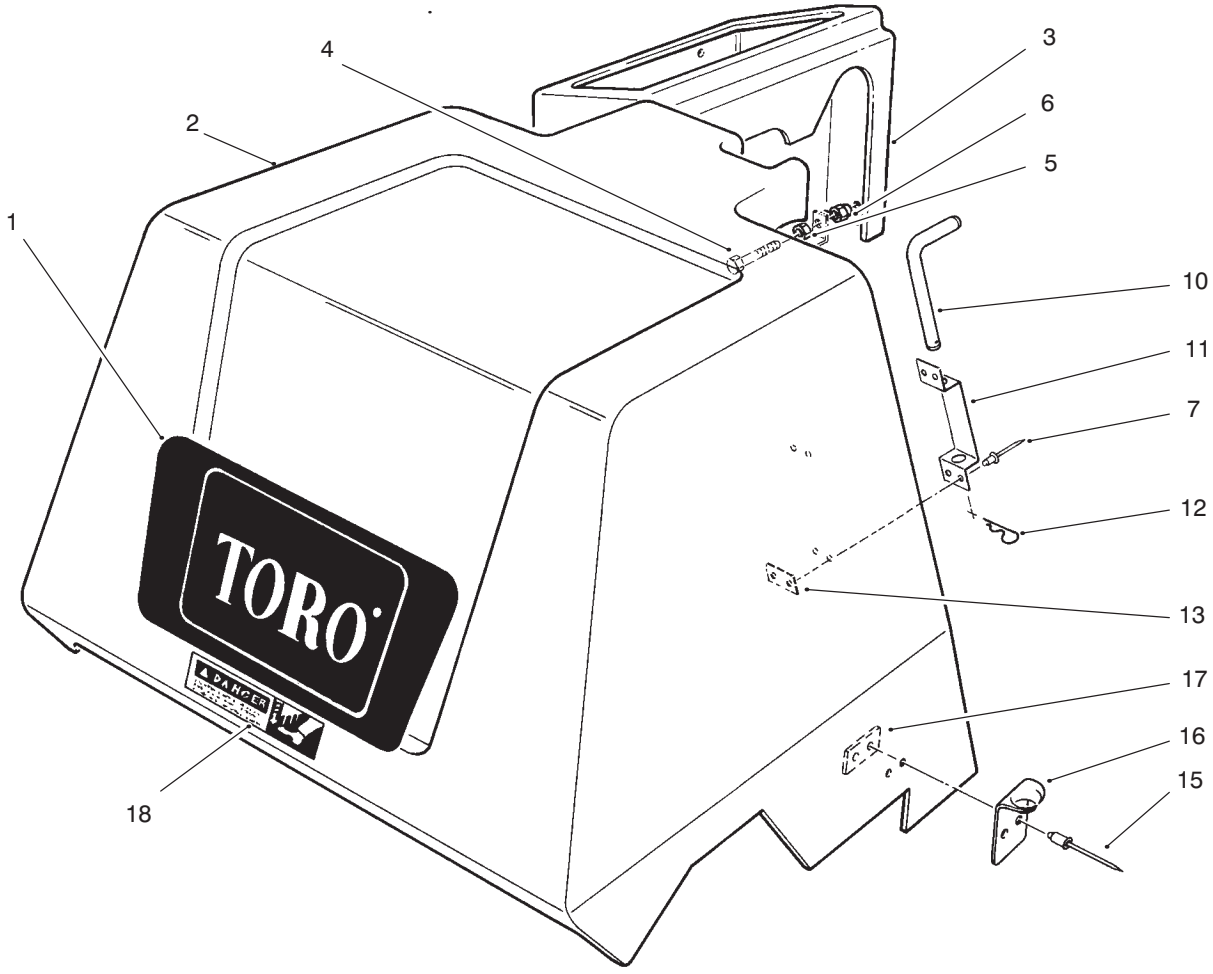

T–0223A

COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	59–4350	Decal – Toro	1
2	66–4130	Cover – Coring Head	1
3	66–4110	Cover – Controls	1
4	322–2	Screw – Cap Hex Hd.	1
5	3218–2	Nut – Jam	1
6	32111–8	Cap & Locknut	1
7	3269–8	Rivet – Pop	4
10	66–4060	Pin – Idler	1

Ref. No.	Part No.	Description	No. Used
11	66–4440	Holder – Idler Pin	1
12	3290–355	Pin – Hair, Cotter	1
13	59–9610	Plate – Backup	2
15	3269–4	Rivet – Pop	4
16	249–38	Keeper	2
17	59–9611	Plate – Backup	2
18	59–9930	Decal – Danger	1

© The TORO Company –1996
All Rights Reserved

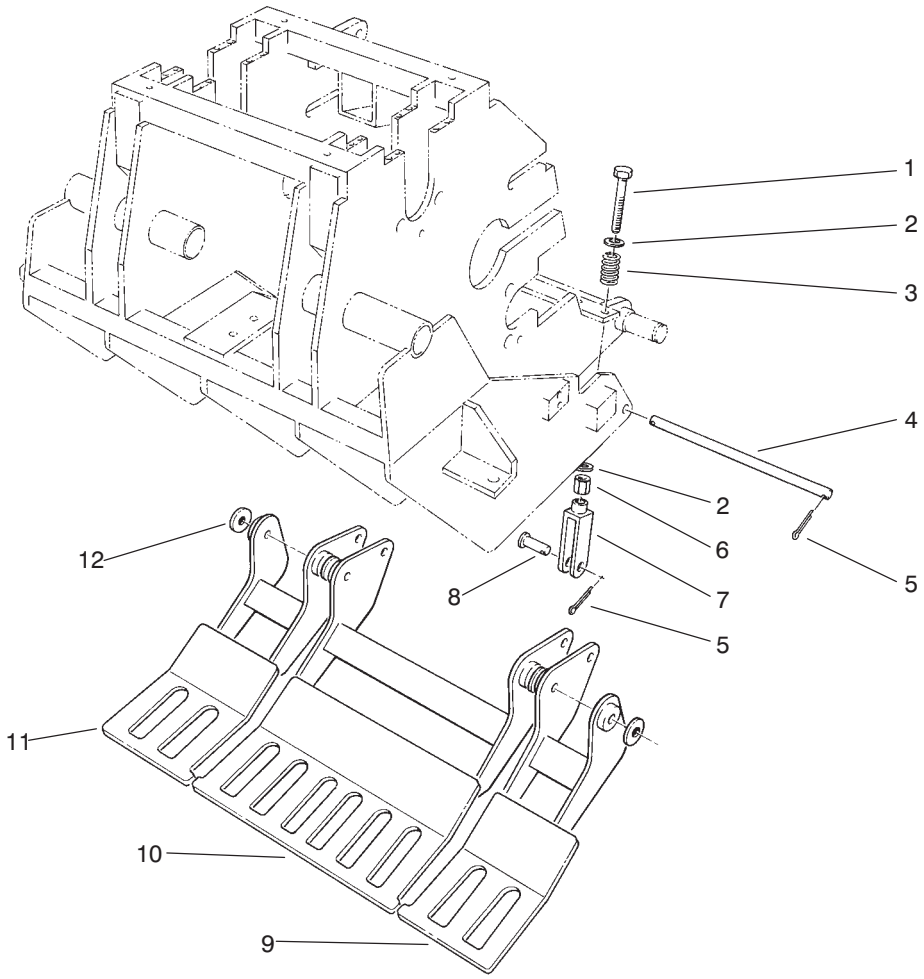

T–0224A

TURF GUARD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3211–12	Screw–Cap Hex Hd.	4
2	3256–4	Washer – Flat	8
3	59–3490	Spring – Compression	4
4	59–2770	Rod – Pivot	2
5	3272–6	Pin – Cotter	8
6	3219–3	Nut	4

Ref. No.	Part No.	Description	No. Used
7	282–22	Clevis	4
8	283–2	Pin – Clevis	4
9	72–4660	Turf Guard – R.H.	1
10	72–4680	Turf Guard – Center	1
11	72–4640	Turf Guard – L.H.	1
12	3256–26	Washer – Flat	6

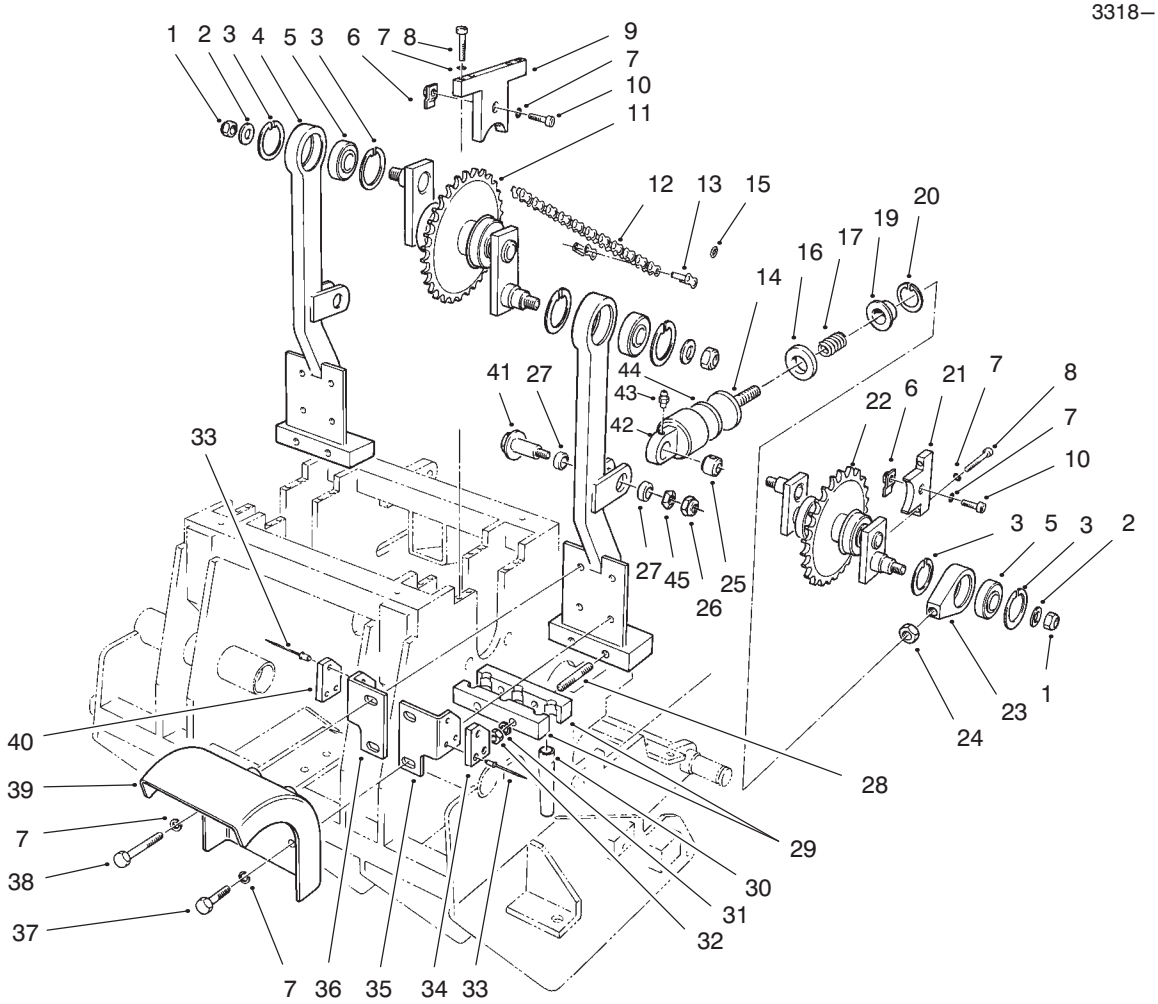

T–0225

TINE ARM & CRANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–67	Nut – Hex	8
2	3256–44	Washer – Flat	8
3	32120–22	Ring – Retaining	16
4	13–1509	Arm–Tine (Incl. Ref. #1, 27 & 28)	4
5	251–312	Bearing	8
6	59–2710	Clip – Retaining	12
7	3253–21	Washer – Lock	52
8	3274–50	Screw – Hex Socket Hd.	24
†9		Cap–Bearing	4
10	3274–7	Screw – Hex Socket Hd.	12
11	66–4030	Assembly – Crank, Long	2
12	59–2080	Chain – Roller	2
13	287–13	Link – Connecting	2
14	70–9770	Rod–Ram	4
15	72–4760	O–Ring Seal, Chain	A/R
16	59–3480	Cushion	4
17	66–9010	Spring – Compression	4
19	59–3450	Retainer	4
20	32151–75	Ring – Retaining	4
†21		Cap – Bearing	4
22	66–4040	Assembly – Crank ,Short	2
23	59–3410	Head – Bearing	4
24	3218–6	Nut – Jam	4
25	59–3520	Bushing – Long	4
26	32153–2	Nut–Lock	4

Ref. No.	Part No.	Description	No. Used
27	59–3510	Bushing – Short	8
28	61–9160	Stud	8
■29		Block	
■30		Tine	
31	3253–7	Washer – Lock	8
32	3217–9	Nut–Hex	8
33	3269–3	Rivet – Pop	24
34	59–2520	Plate – Wear R.H.	4
35	66–8980	Assy. – Wear Plate, R.H. (Incl. Ref. #33 & 34)	4
36	66–8990	Assy. – Wear Plate, L.H. (Inc. Ref. #33 & 40)	4
37	323–6	Screw – Cap Hex Hd.	8
38	323–11	Screw – Cap Hex Hd.	8
39	59–4220	Deflector – Kickout	4
40	59–2550	Plate – Wear L.H.	4
41	80–3830	Bolt – Shoulder	4
42	59–3420	Housing	4
43	302–5	Fitting – Grease	4
44	59–3470	Cushion	4
45	3290–224	Washer – Pyramidal	4
*	62–4740	Timing Rod	4
*	12–3819	Assembly – Damper (Incl. Ref.#14, 16,17, 19–20, 25 & 42–44)	1

*Not Illustrated
†Not Serviced Separately.

■ See pages 4 & 5 for selection.

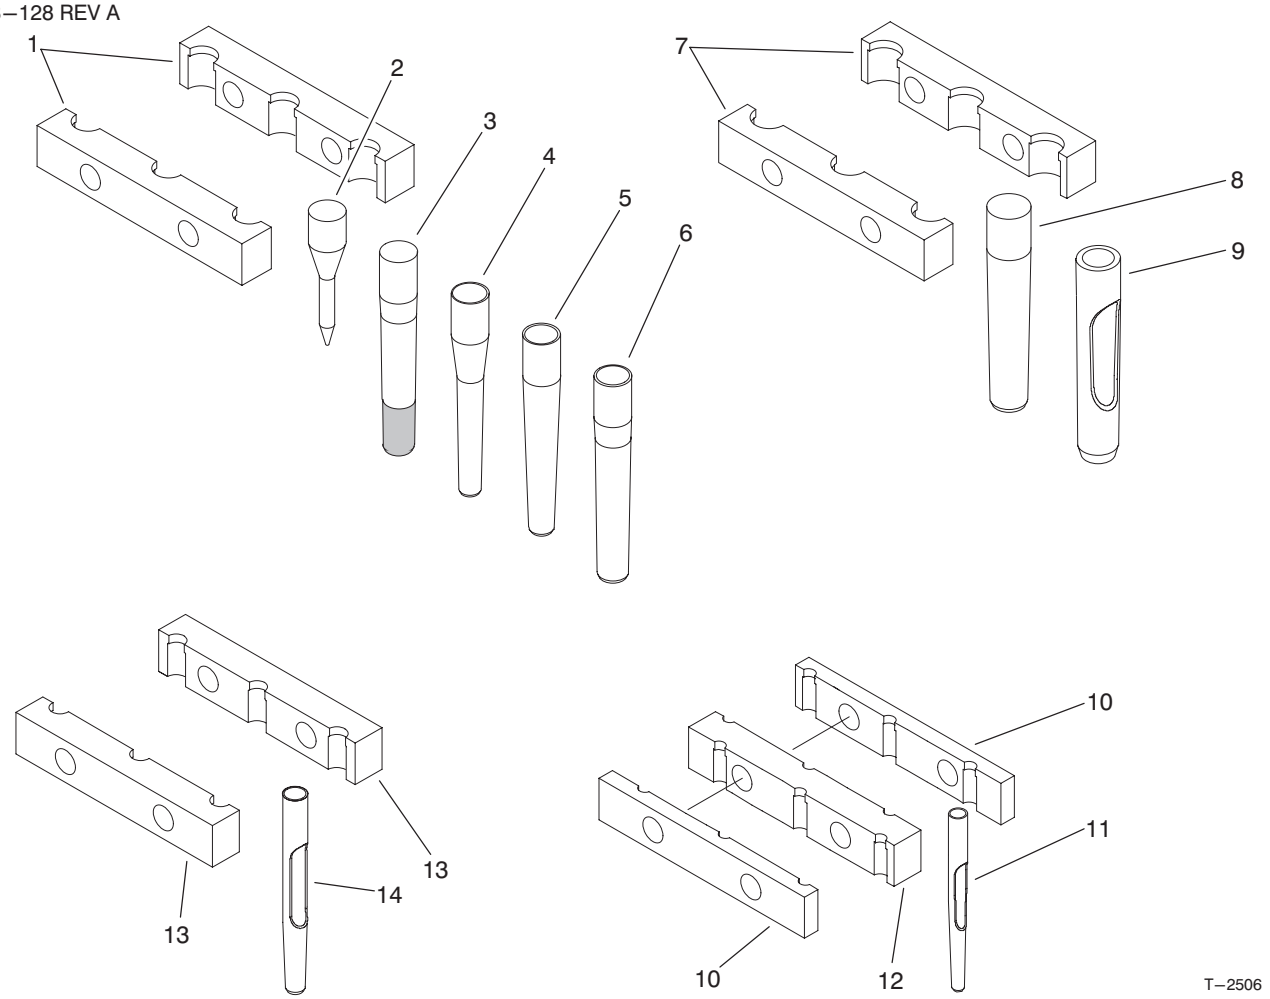

TINE BLOCK & TINE SELECTION

Ref. No.	Part No.	Description	No. Used
1	59–2500	Block	8
2	77–5320	Tine – Spiker, 5/16" x 3 1/4"	12
3	59–9770	Tine – Coring, Long Wear 5/8" x 4 3/4"	12
4	59–3690	Tine – Coring, 3/8" x 4 3/4"	12
5	94–3419	Tine – Coring, 1/2" x 4 3/4"	12
6	59–3670	Tine – Coring, 5/8" x 4 3/4"	12
7	62–4610	Block	8
8	62–4600	Tine – Coring, 3/4" x 4 3/4"	12

Ref. No.	Part No.	Description	No. Used
9	92–7941	Tine – Open Center, 3/4" x 4 3/4"	12
*	94–6823	Kit– 1/4" Open Center Tine (Opt.) (Incl. Ref. #10–12)	1
10	94–3421	Block – Outboard	8
11	94–3417	Tine – Open Center 1/4" x 4 1/4"	24
12	94–6822	Block – Inboard	4
*	94–6814	Kit – 3/8" Open Center Tine (Opt.) (Incl. Ref. #13–14)	1
13	94–3420	Block	8
14	94–3418	Tine – Open Center, 3/8" x 4 3/4"	12

*Not Illustrated

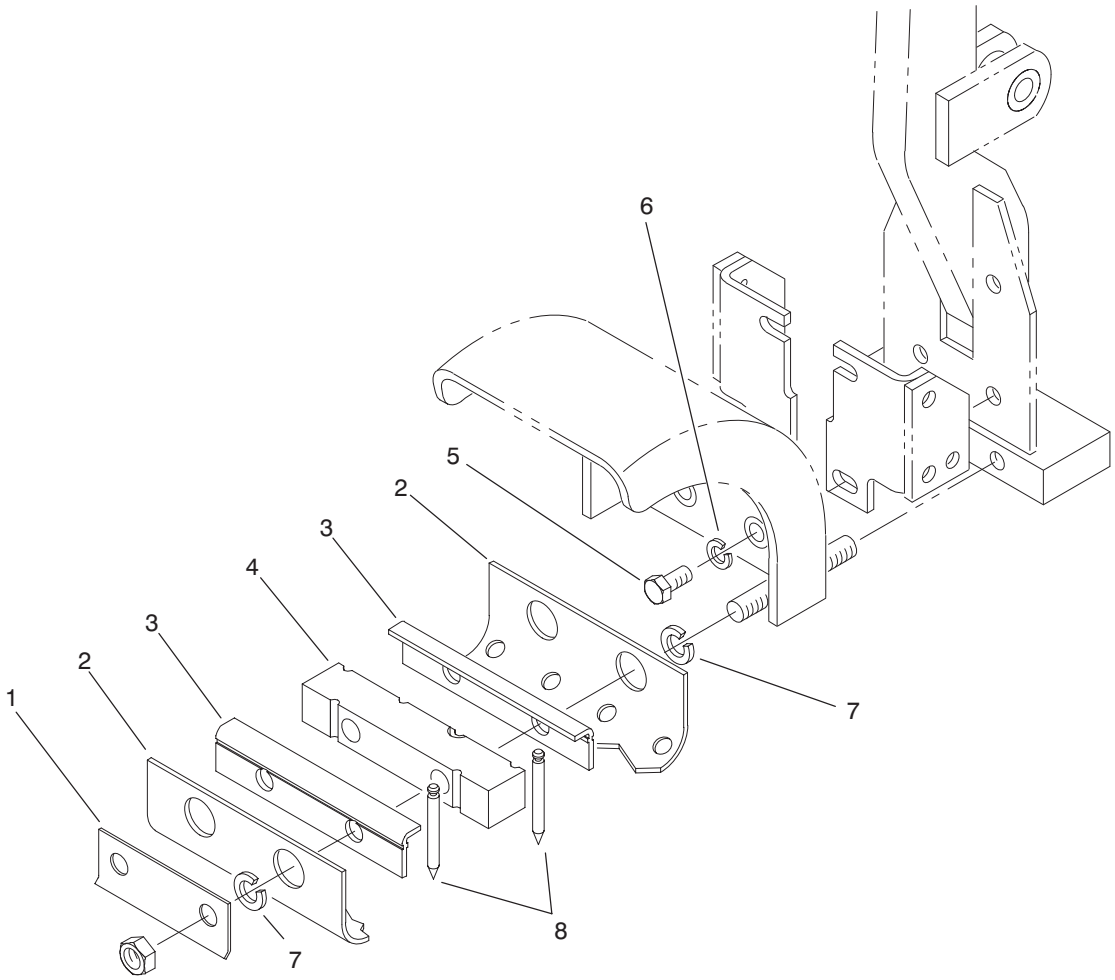

T–1944

KIT – SPIKER 1/4” MODEL NO. 09153 (Optional)

Ref. No.	Part No.	Description	No. Used
1	77–5360	Plate – Holder, Turf	4
2	77–5380	Guard – Turf	4
3	77–5350	Clamp – Holder, Tine	8
4	77–5370	Holder – Tine	4

Ref. No.	Part No.	Description	No. Used
5	323–4	Screw – HH	16
6	3253–21	Washer – Lock	16
7	3253–7	Washer – Lock	16
8	77–5340	Tine – Spiker, 1/4” x 2 1/2”	28

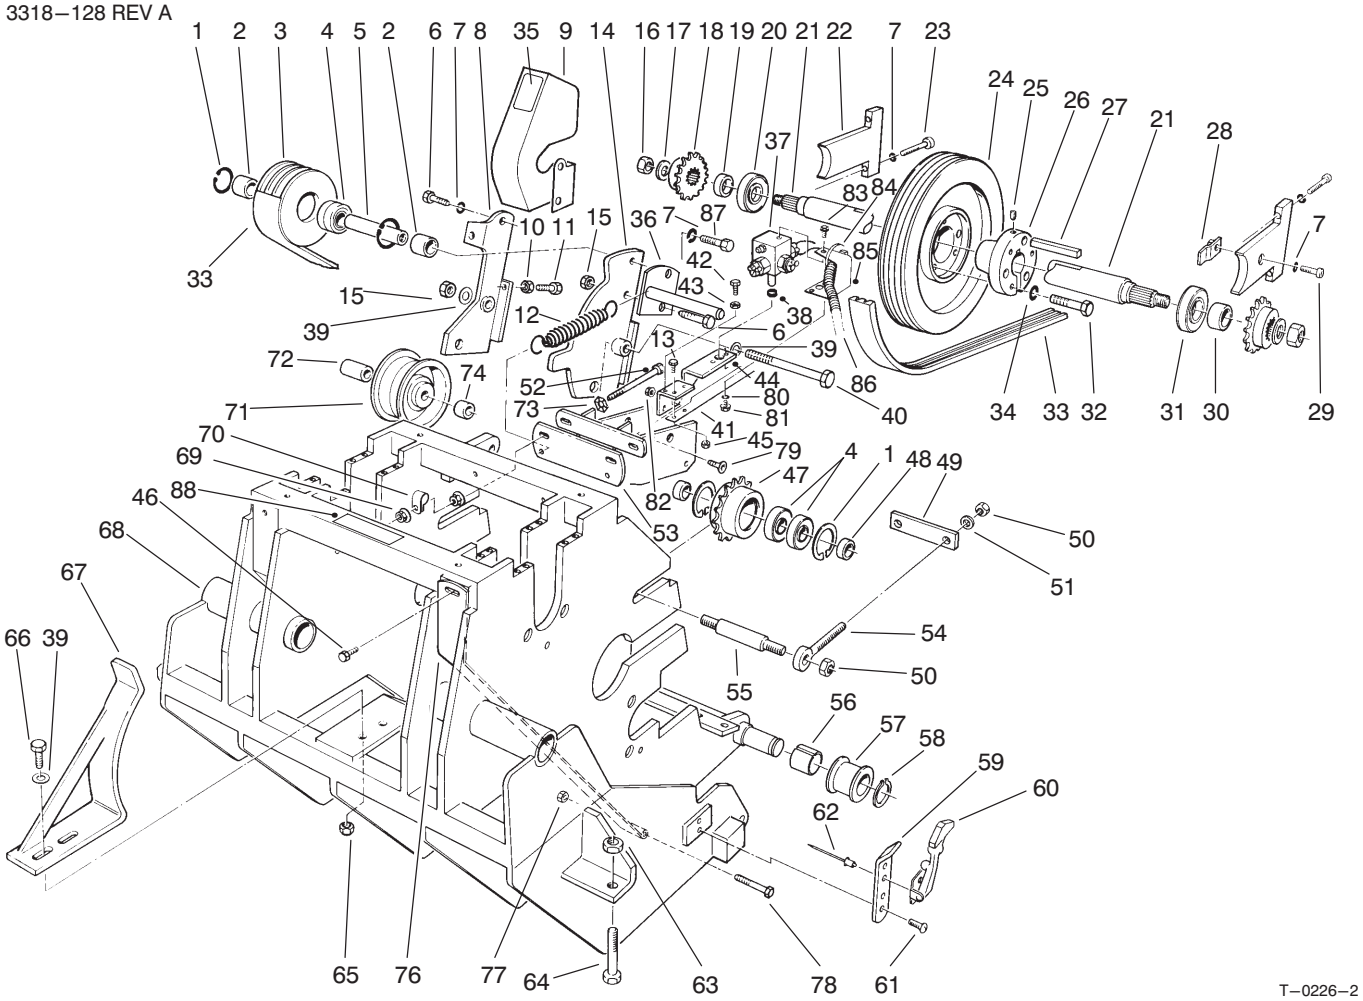

CORING HEAD DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32120–11	Ring – Retaining	6
2	66–4380	Spacer	2
3	66–3470	Pulley – Idler	1
4	251–297	Bearing	6
5	66–3480	Shaft – Idler	1
6	323–6	Screw – Cap, Hex. Hd.	2
7	3253–21	Washer – Lock	9
8	66–4320	Bracket – Idler L.H.	1
9	94–1751	Guard – Pulley	1
10	3218–1	Nut – Jam	2
11	321–43	Screw – Cap, Hex. Hd.	2
12	66–4270	Spring – Extension	2
13	3290–359	Screw – Machine, Hex. Hd.	2
14	66–4280	Bracket – Idler R.H.	1
15	32153–2	Nut – Lock	2
16	3296–67	Nut – Lock	2
17	3256–44	Washer – Flat	2
18	66–3790	Sprocket	2
19	66–4690	Spacer	1
20	251–312	Bearing	1
21	66–3840	Shaft – Power	1
†22		Cap – Bearing	2
23	3274–50	Screw – Cap, Socket Hd.	4
24	59–2130	Pulley	1
25	3245–2	Screw – Set	1
26	59–3790	Bushing Assembly (Incl. Ref. #25, 32 & 34)	1

Ref. No.	Part No.	Description	No. Used
27	59–4210	Key	1
28	59–2710	Clip – Retaining	3
29	3274–7	Screw – Cap, Socket Hd.	3
30	66–4680	Spacer	1
31	251–313	Bearing	1
32	322–7	Screw – Cap, Hex. Hd.	3
33	66–4070	V–Belt	1
34	3253–4	Washer – Lock	3
35	94–9111	Decal – Warning	1
36	94–6808	Handle	1
†37		Assembly – Switch	1
38	253–166	Seal	1
39	3256–24	Washer – Flat	4
40	323–25	Screw – Cap, Hex. Hd.	1
41	66–4480	Actuator – Switch	1
42	3290–360	Screw – Hex. Head	1
43	3217–26	Nut – Jam	1
44	80–3820	Bracket – Switch	1
45	3296–12	Nut – Lock	2
46	46–8560	Screw – Thread Forming	2
47	59–2390	Sprocket	2
48	59–2600	Bushing	4
49	59–2070	Bar – Keeper	2
50	3296–23	Nut – Lock	8
51	3256–26	Washer – Flat	4
52	323–20	Screw – Cap, Hex. Hd.	2
53	80–4020	Bracket – Idler Pulley Pivot	1

† Not Serviced Separately.

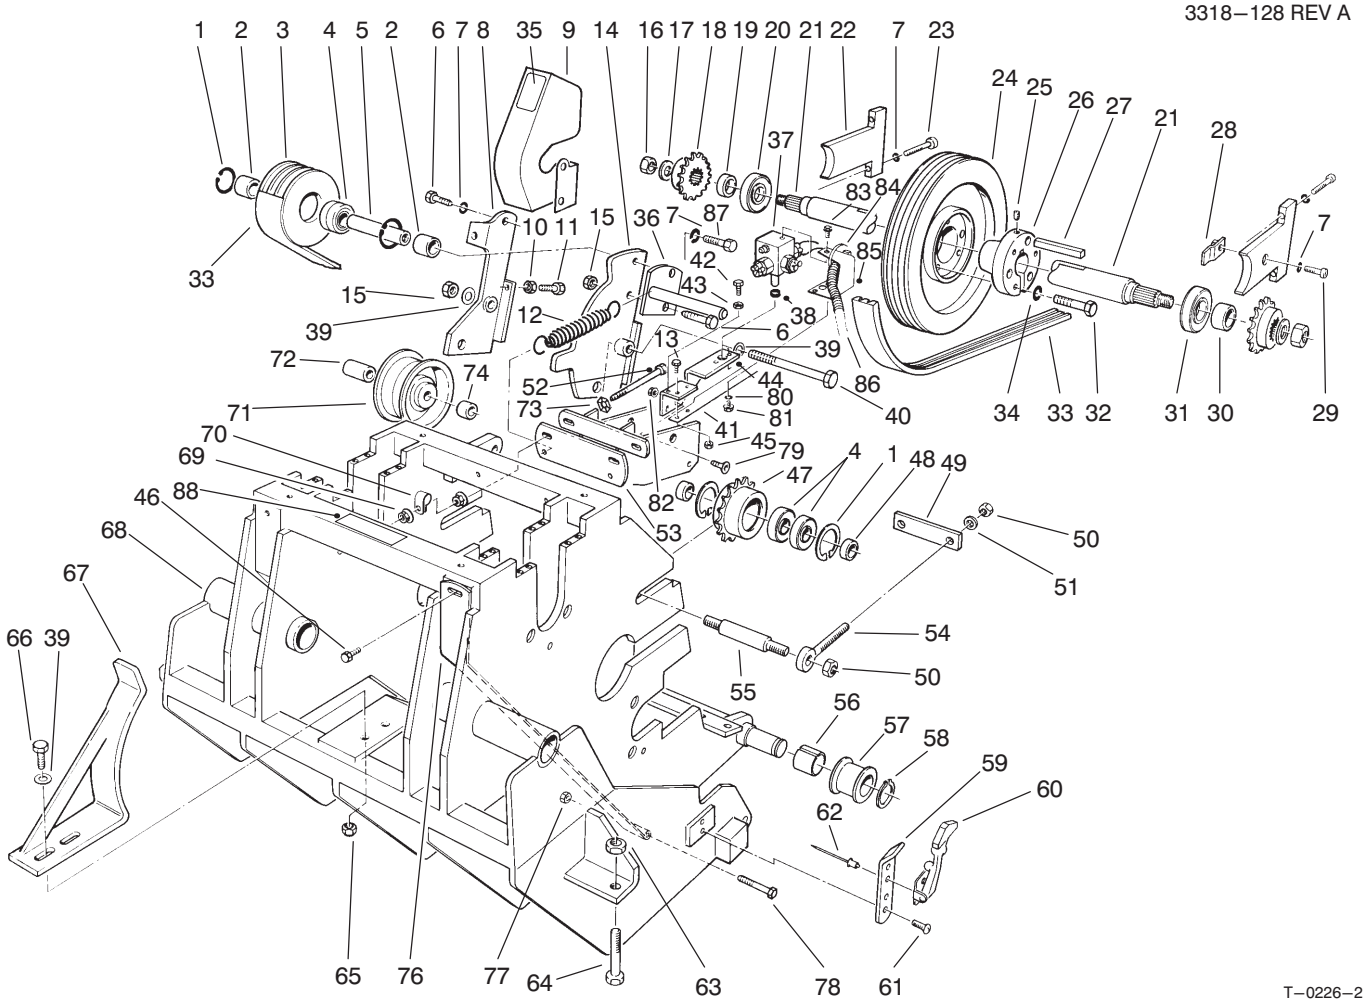

CORING HEAD DRIVE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
54	59–2620	Eye Bolt	4
55	59–2610	Shaft	2
56	256–319	Bushing – Split	2
57	84–8480	Sleeve	2
58	32151–77	Ring – Retaining	2
59	59–9640	Plate – Handle	2
60	59–9750	Assembly – Latch	2
61	32140–29	Screw – Washer Hd.	4
62	3269–4	Rivet – Pop	4
63	3218–5	Nut – Jam	2
64	60–9870	Screw – Adjustment	2
65	3296–59	Nut – Lock	2
66	323–4	Screw – Cap, Hex. Hd.	2
67	66–3810	Guide – Belt	1
68	72–9100	Frame	1
69	32128–19	Nut – Lock, Flange Hd.	3
70	94–6821	Clamp – Wire	1
71	37–5760	Pulley – Idler	1
72	59–2580	Spacer – Long	1
73	3290–224	Washer – Lock, Pyramidal	2

Ref. No.	Part No.	Description	No. Used
74	59–2570	Spacer – Short	1
76	76–2370	Guard – Chain	2
77	3296–42	Nut – Lock	2
78	321–33	Screw – Cap, Hex. Hd.	2
79	3289–4	Screw – Flat Hd. Hex. Soc.	2
80	3253–12	Washer – Lock	2
81	32105–8	Screw – Washer Head	2
82	32128–33	Nut – Flange	2
83	32144–73	Screw – Hex. Washer Head Thread Forming	1
84	3290–378	Tie – Cable	1
85	80–3930	Guard – Switch	1
86	94–9108	Wiring Harness – Coring Head Switch	1
87	323–7	Screw – Cap Hex. Hd.	1
88	67–5360	Decal – Danger	1
*		Coring Head Stand Model No. 09152 (Optional)	1

*Not Illustrated

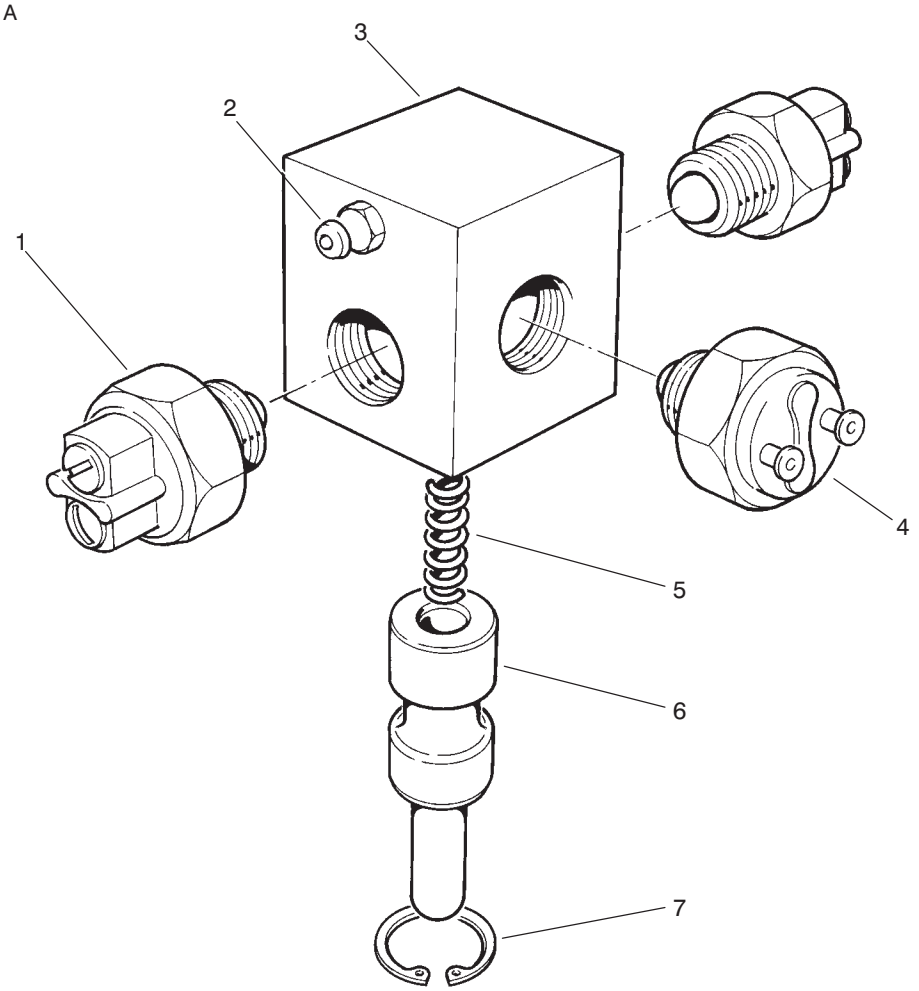

T–1173

SWITCH ASSEMBLY – CORING HEAD

Ref. No.	Part No.	Description	No. Used
1	19–2530	Switch – Start. Safety N.O.	2
2	302–22	Fitting – Grease	1
3	80–2830	Housing Switch	1
4	28–4250	Switch – Neutral N. C.	1

Ref. No.	Part No.	Description	No. Used
5	10–4850	Spring – Compression	1
6	80–2840	Plunger – Switch	1
7	32151–54	Ring – Retaining	1

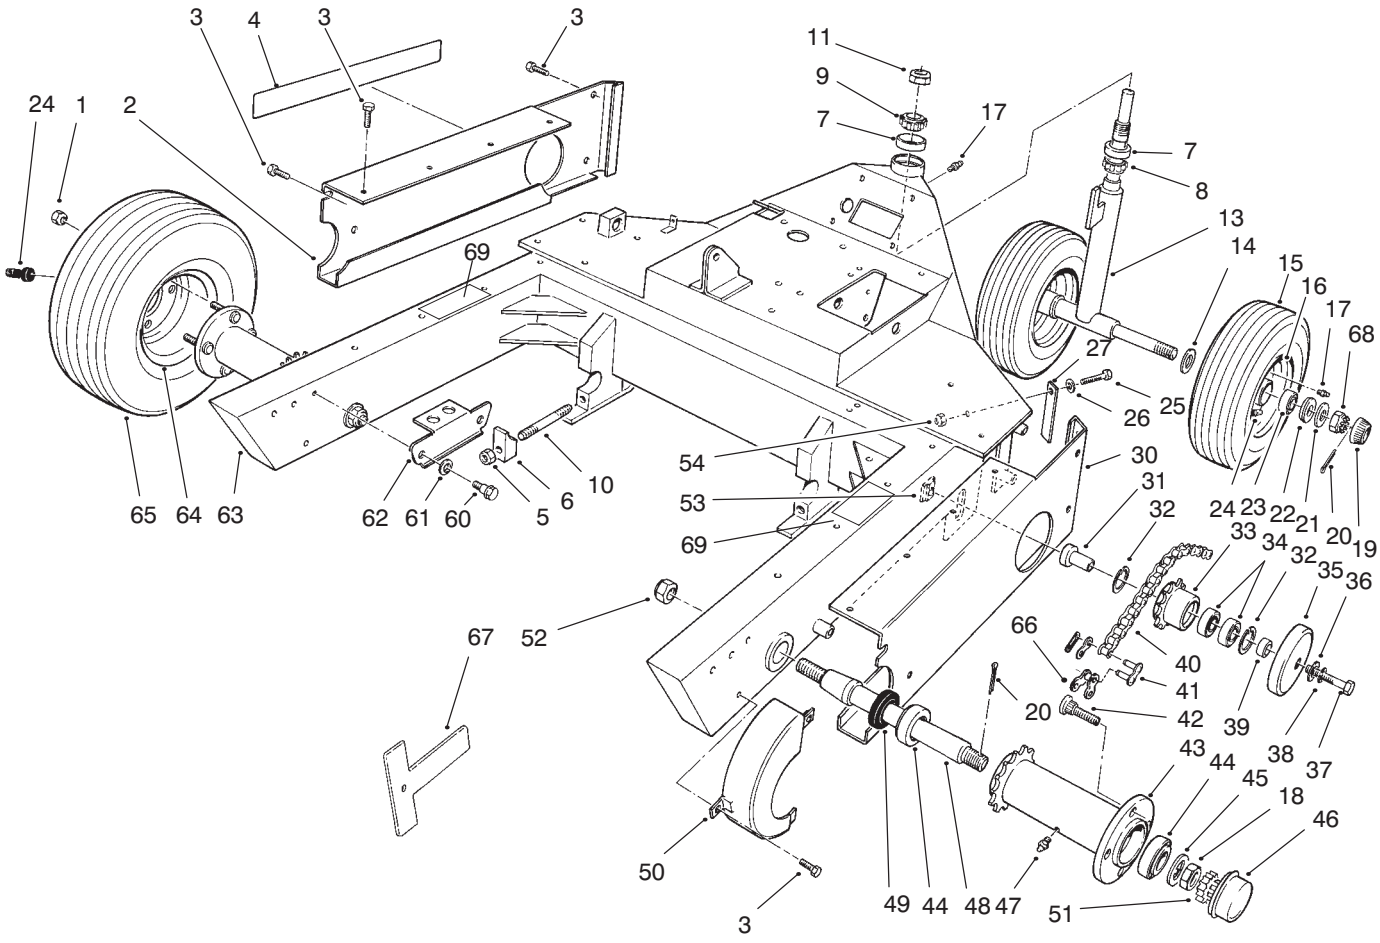

T–0227–3

CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	242–50	Nut – Lug	8
2	66–9070	Guard – Chassis L.H.	1
3	46–8560	Screw– Cap Hex. Hd.	17
4	59–4440	Decal – Greens Aerator	2
5	3296–45	Nut – Lock	2
6	82–8020	Clamp	2
7	254–61	Cup – Bearing	2
8	254–70	Cone – Bearing	1
9	254–62	Cone – Bearing	1
10	61–9160	Stud	2
11	3296–68	Nut – Lock	1
13	80–2710	Assembly – Front Axle	1
14	22–6090	Washer – Thrust	2
15	231–126	Tire	2
16	241–123	Wheel	2
17	302–5	Fitting – Grease	3
18	3220–7	Nut – Jam	2
19	61–9780	Cap–Hub	2
20	3272–13	Pin – Cotter	4
21	28–2480	Washer	2
22	59–9650	Retainer – Bearing	4
23	252–105	Bearing – Roller	4
24	232–35	Stem – Valve w/Cap	4
25	321–4	Screw – Cap, Hex Hd.	2
26	3256–22	Washer – Flat	2
27	59–9460	Guide	2

Ref. No.	Part No.	Description	No. Used
30	94–6813	Guard – Chassis R.H.	1
31	59–2420	Bushing	2
32	32120–11	Ring – Retaining	4
33	59–2390	Sprocket – Idler	2
34	251–297	Bearing – Ball	4
35	59–9620	Cover – Idler	2
36	3256–26	Washer – Flat	2
37	325–13	Screw– Cap Hex. Hd.	2
38	3253–7	Washer – Lock	2
39	59–9630	Spacer	2
40	59–2090	Chain – Roller	2
41	2710–16	Link – Connecting	2
42	10–6830	Stud – Drive	8
43	59–4040	Assembly – Hub (Incl. Ref. #42)	2
44	254–105	Bearing – Roller	4
45	93–0309	Washer – Tab	2
46	59–2380	Cap – Dust	2
47	302–10	Grease Fitting	2
48	93–0177	Shaft	2
49	253–158	Seal – Shaft	2
50	59–3280	Guard – Sprocket R.H.	1
*	59–3270	Guard – Sprocket L.H.	1
51	93–0307	Nut – Retainer	2
52	3296–15	Nut – Lock	2
53	59–2430	Nut – Special	2

*Not Illustrated

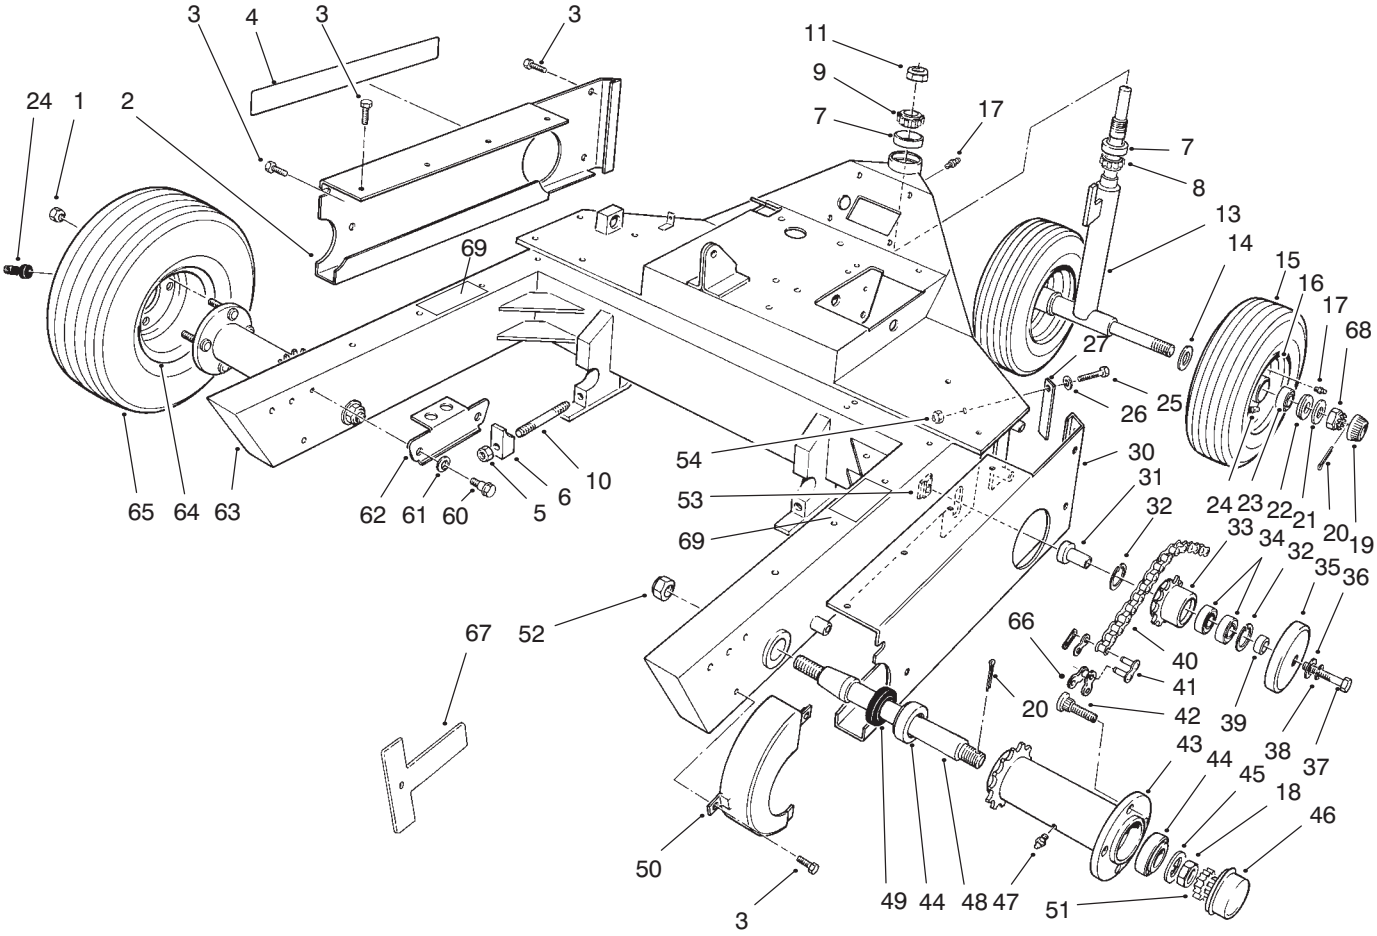

T–0227–3

CHASSIS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
54	3296–42	Nut – Lock	2
60	5–2490	Bolt – Shoulder	2
61	3–3287	Spacer	2
62	66–4530	Bracket – Lockup	2
63	94–3442	Frame	1
64	217–60	Wheel	2

Ref. No.	Part No.	Description	No. Used
65	231–119	Tire	2
66	2710–20	Link – Single Pitch	2
67	60–9930	Frame Gauge	1
68	32136–5	Nut – Hex. Slotted	2
69	67–5360	Decal – Danger	2

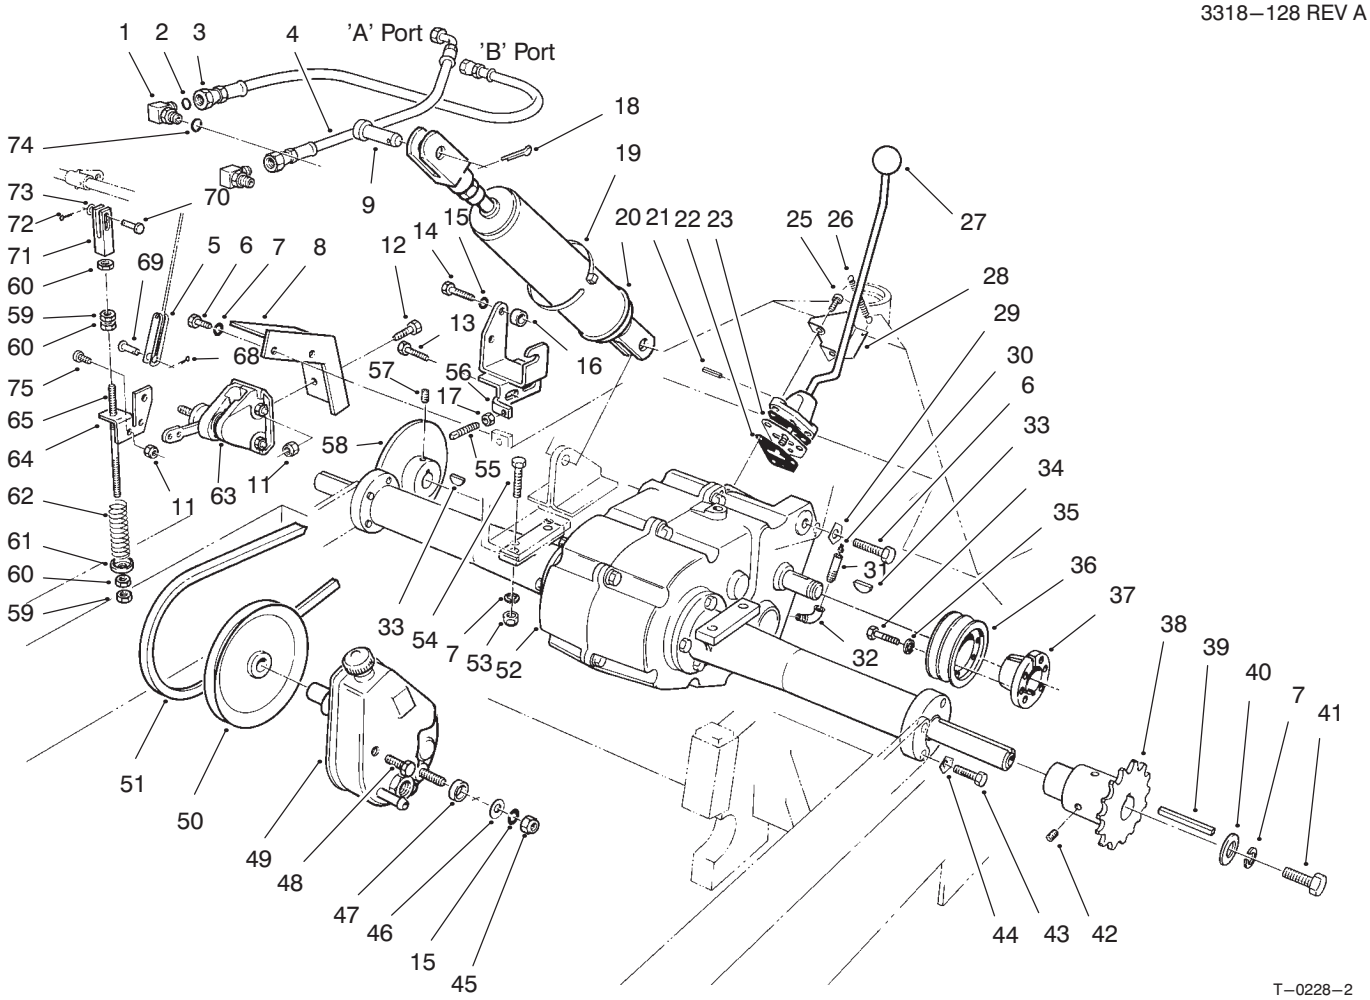

TRANSAXLE, BRAKE & PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	340–82	Fitting (Incl. Ref. #2 & 74)	2
2	237–21	O–Ring	2
3	76–2300	Hose – Cylinder	1
4	59–4160	Hose – Cylinder	1
5	66–3930	Clevis	1
6	323–6	Screw – Cap, Hex. Hd.	3
7	3253–21	Washer – Lock	8
8	76–2620	Bracket	1
9	283–74	Pin – Clevis	2
11	3296–42	Nut – Lock	3
12	321–4	Screw – Cap, Hex. Hd.	2
13	11–0590	Screw – Thread Forming Hex. Washer Hd.	2
14	48–9470	Screw – Cap Hex Hd.	2
15	3253–6	Washer – Lock	3
16	59–4320	Spacer	2
17	3218–3	Nut – Jam	1
18	3272–12	Pin – Cotter	2
19	3290–379	Tie – Cable	1
20	62–4660	Assembly – Cylinder	1
21	32121–20	Pin – Roll	1
22	27–6390	Gasket	2
23	66–3290	Plate – Guide Shift	1
25	3274–26	Screw – Socket Hd.	3
26	66–4460	Spring	1
27	233–13	Knob	1
28	66–3920	Bracket – Spring	1

Ref. No.	Part No.	Description	No. Used
29	3290–224	Washer – Pyramidal	1
30	281–1	Plug – Oil	1
31	68–3110	Tube–Oil	1
32	2811–10	Elbow – Street	1
33	3257–5	Key	2
34	321–13	Screw – Cap, Hex. Hd.	3
35	3253–3	Washer – Lock	3
36	59–2140	Pulley	1
37	59–2150	Bushing (Inc. Ref. #34 & 35)	1
38	59–3110	Sprocket	2
39	5–0786	Key	2
40	3–4685	Washer – Thrust	2
41	323–5	Screw – Cap, Hex. Hd.	2
42	3247–2	Screw – Set	4
43	322–5	Screw – Cap, Hex. Hd.	4
44	3290–238	Washer – Pyramidal	4
45	21–0360	Hex Nut (Metric)	1
46	3256–25	Washer – Flat	1
47	59–4310	Spacer	1
48	60–9920	Screw (Metric)	1
49	44–7800	Pump – Steering	1
50	38–1830	Pulley	1
51	59–4200	V–Belt	1
52	66–4590	Transaxle	1
53	3217–7	Nut	4
54	323–10	Screw – Cap, Hex. Hd.	4
55	3243–9	Screw – Set, Sq. Hd.	1

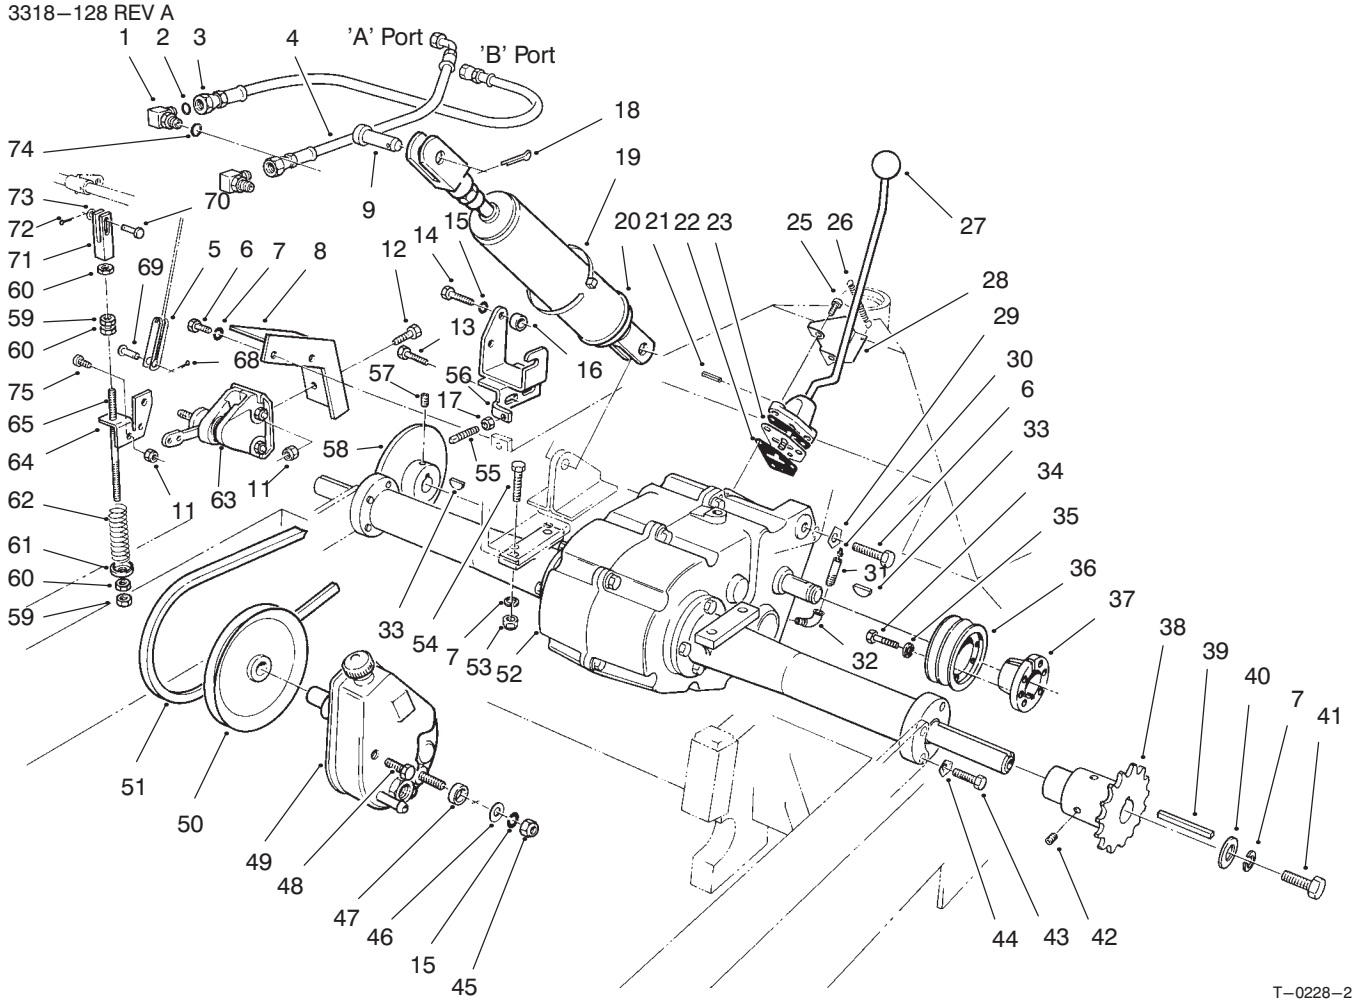

TRANSAXLE, BRAKE & PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
56	72–4860	Bracket – Pump Support	1
57	3245–33	Screw – Set	2
58	59–4100	Brake – Disc	1
59	3220–1	Nut – Jam	2
60	3219–1	Nut – Hex.	3
61	66–3390	Retainer – Brake Spring	1
62	66–4150	Spring	1
63	76–2590	Brake – Caliper	1
64	80–3890	Arm – Brake	1

Ref. No.	Part No.	Description	No. Used
65	66–3400	Rod – Brake Take–up	1
68	3272–10	Pin – Cotter	1
69	283–2	Pin – Clevis	1
70	283–67	Pin – Clevis	1
71	66–4600	Clevis – Brake	1
72	3272–4	Pin – Cotter	1
73	3256–22	Washer – Flat	1
74	237–42	O–Ring	2
75	321–5	Screw – Cap Hex. Hd.	2

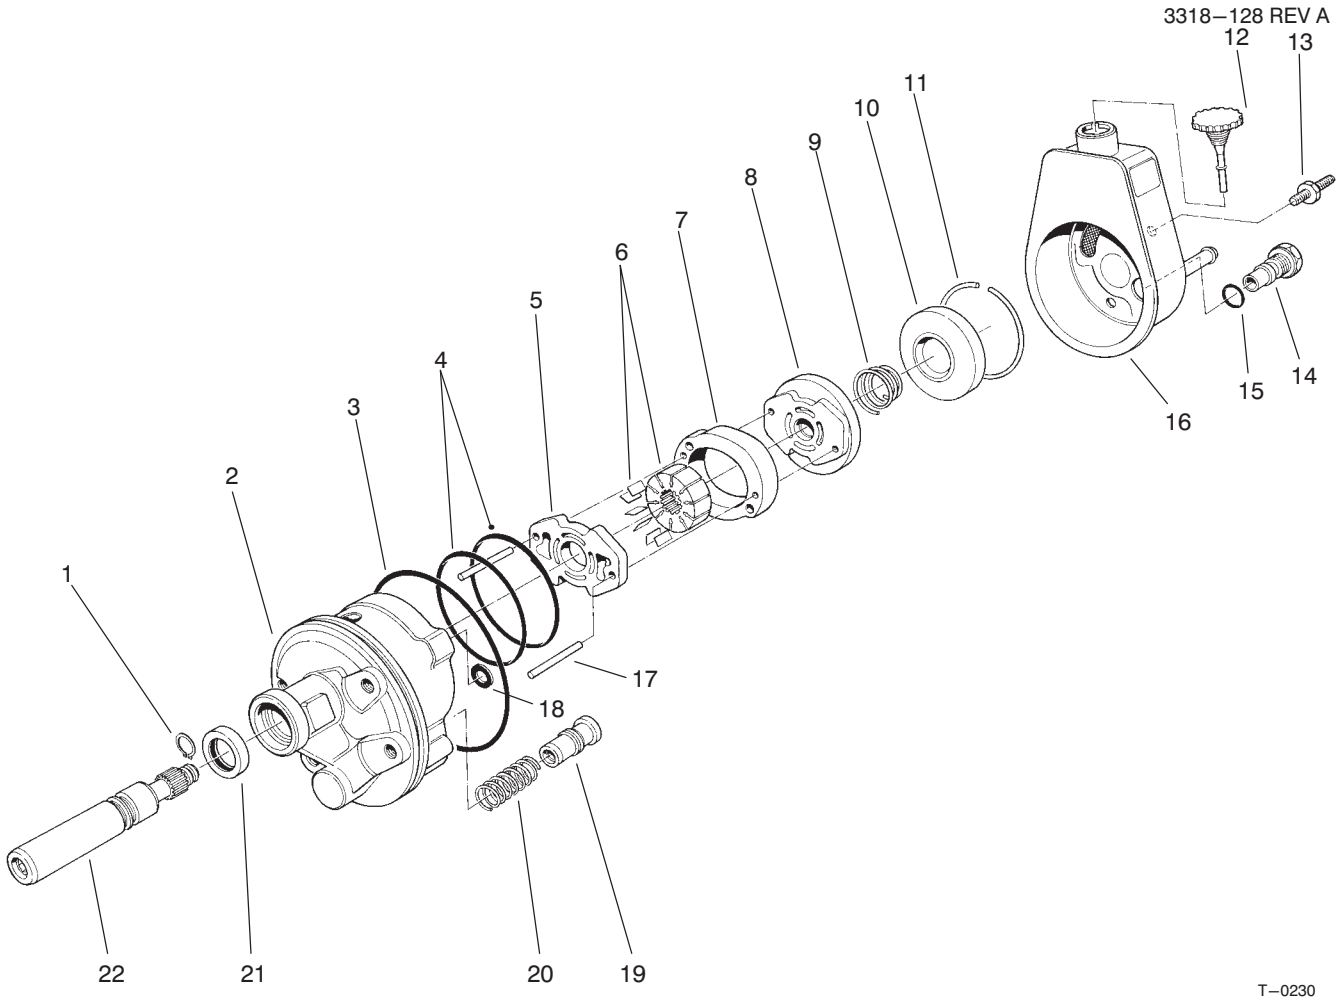

PUMP ASSEMBLY NO. 44–7800

Ref. No.	Part No.	Description	No. Used
1	44–7850	Ring – Shaft Retaining	1
†2		Housing – Hydraulic Pump (Incl. Ref. #21)	1
3	37–8360	Seal – O–Ring	1
4		Seal – O–Ring	2
5	44–7840	Thrust Plate	1
6	44–7810	Ring Service Kit Rotor Vane (Incl. Ref. #1 & 7)	1
†7		Pump Ring	1
8	44–7830	Pressure Plate	1
9	44–7820	Spring Pressure Plate	1
10	37–8380	End Plate	1
11	37–8440	Ring – Retaining	1
12	37–8420	Assy. – Cap, Reservoir	1
13	39–8700	Stud Pump Mounting	2
14	39–8680	Assembly – Fitting (Incl. Ref. #15)	1

Ref. No.	Part No.	Description	No. Used
15	39–8710	Seal – O–Ring	1
16	37–8400	Pump Reservoir Service Kit (Incl. Ref. #3 & 18)	1
17	37–8300	Pin – Pump, Ring Dowel	2
18		Seal	2
19	37–8410	Assembly – Valve, Control	1
20	37–8450	Spring – Flow Control	1
21	37–8340	Seal – Drive Shaft	1
22	44–2680	Shaft – Service Retaining Ring & Drive Kit (Incl. Ref. #1)	1
*	37–8460	Seal Service Kit (Incl. Ref. #3, 4, 15, 18 & 21)	1
*	44–7860	Retaining Ring Service Kit (Incl. Ref. #1)	1

*Not Illustrated
†Not Serviced Separately

TRANSAXLE ASSEMBLY MODEL NO. 2361A

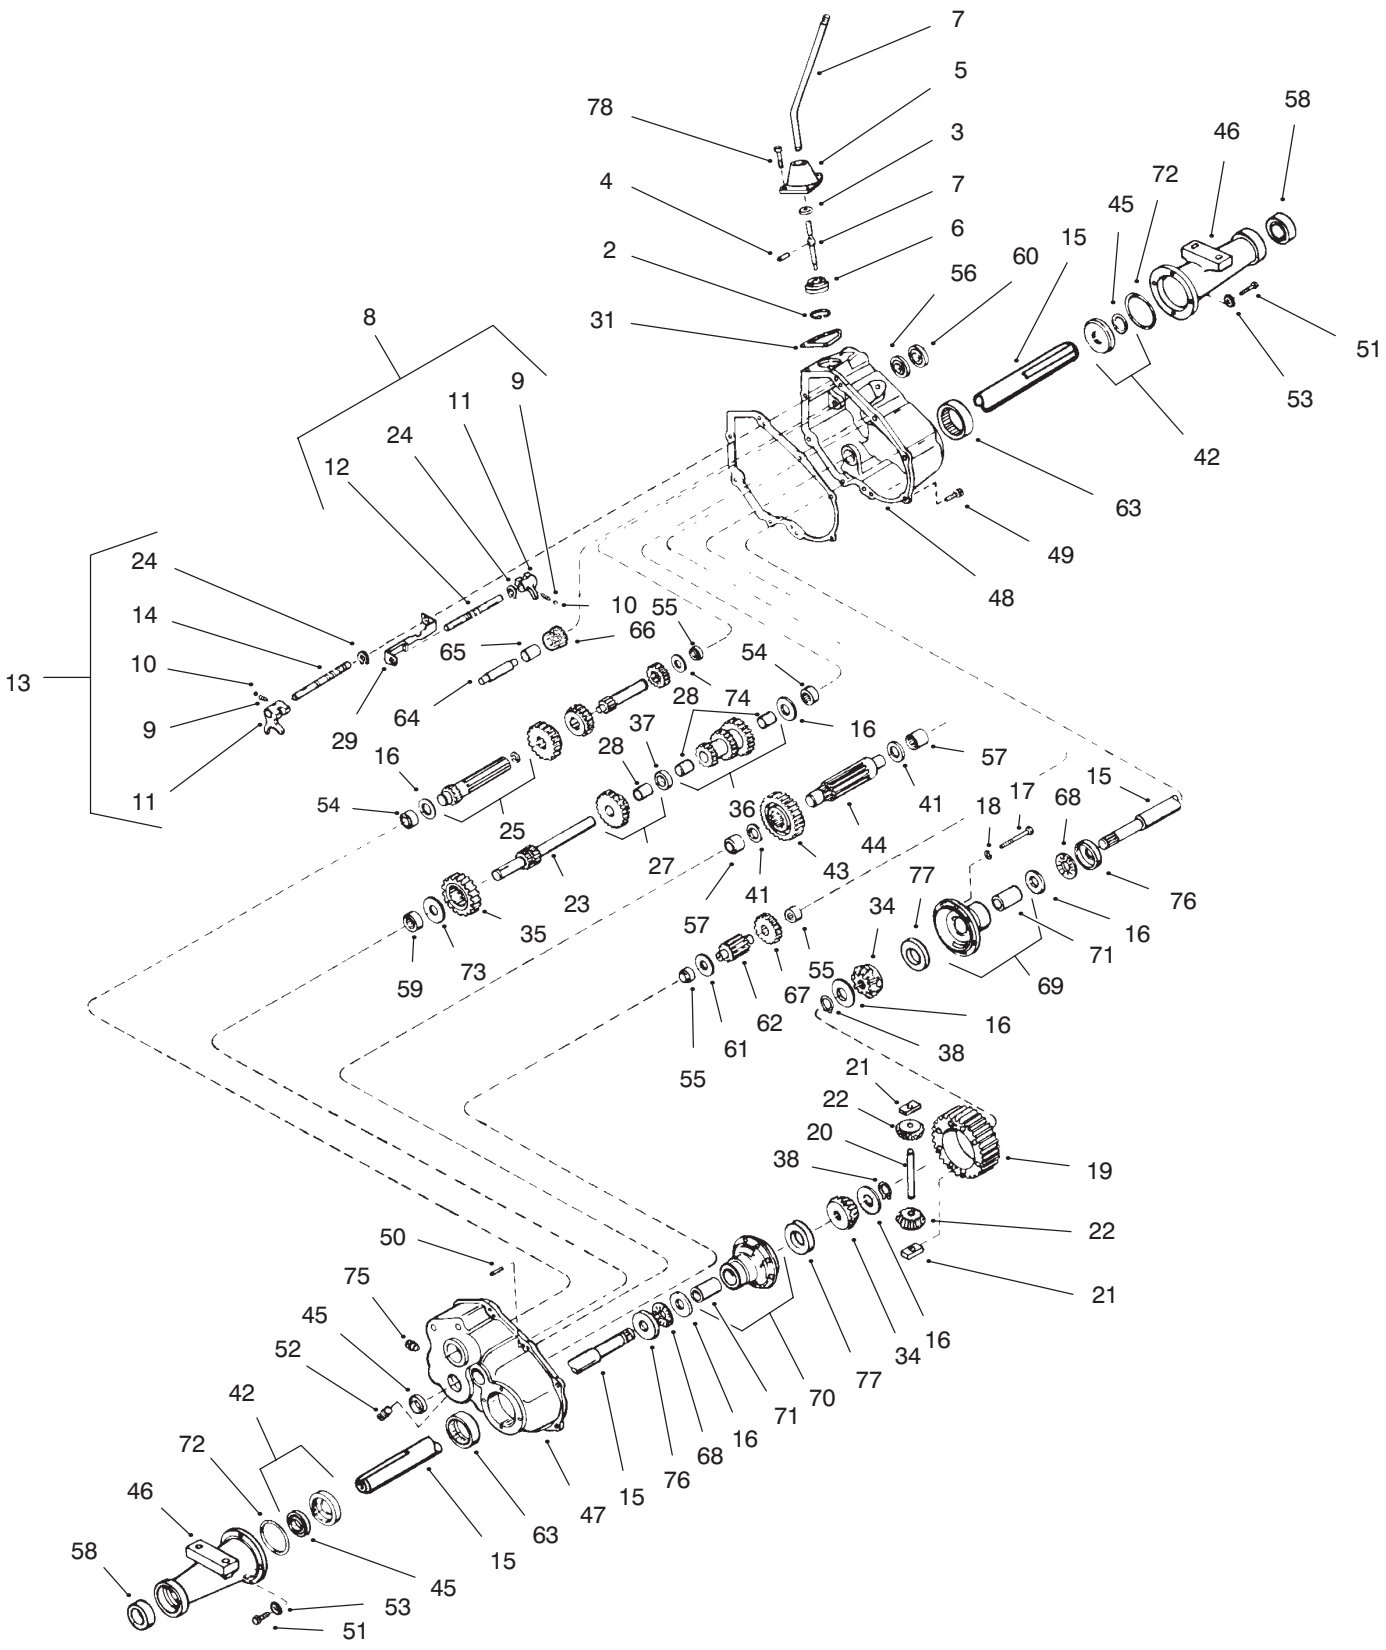

T−0229A

TRANSAXLE ASSEMBLY MODEL NO. 2361A (Continued)

Ref. No.	Part No.	Description	No. Used
2	792016	Ring – Snap	1
3	792001	Ring – Quad	1
4	792049	Pin – Roll	1
5	784344	Housing – Shift Lever	1
†6	66–9080	Keeper – Shift Lever	1
7	784343A	Lever – Shift	1
8	784054	Rod Assy. – Shift (Inc. Ref. #9–12 & 24)	1
9	792003	Spring	2
10	792004	Ball – Steel	2
11	784004	Fork – Shifter	2
12	784055	Rod – Shifter (3rd & 4th)	1
13	784056	Rod Assy. – Shift (Incl. Ref. #9,10,11,14 & 24)	1
14	784057	Rod – Shift (Low)	1
15	774694	Axle (17–7/8" Long)	2
16	780042	Washer –Thrust	6
17	792005	Screw – Hex Hd.	8
18	792006	Lockwasher	8
19	778033A	Gear – Ring	1
20	786019	Pin – Drive	1
21	786027	Block – Drive	2
22	778197	Pinion – Bevel	2
23	776029A	Shaft & Gear – Brake	1
24	792017	Ring–Snap	2
25	776189A	Pinion Shaft & Bearing (Incl. Ref. #26)	1
26	780018	Bearing – Needle	1
27	778034	Gear Cluster Assembly (Incl. Ref. #28)	1
28	780053	Bushing	3
29	784074	Stop – Shifter	1
30	788023	Gasket – Case & Cover	1
31	788022	Gasket – Lever Housing	1
32	778217	Gear – Shifting (3rd & 4th)	1
33	778020	Gear – Shifting (1st, 2nd & Rev.)	1
34	778231	Gear–Bevel	2
35	778037	Gear – Idler	1
36	778218	Gear Cluster Assembly (Incl. Ref. #28)	1
37	786024	Spacer	1
38	792018	Ring–Snap	2
39	776067	Shaft – Input	1
40	778024A	Spur Gear – Input Shaft	1
41	780052	Washer – Thrust	2
42	788021	Seal & Retainer Assy. – Oil (Incl. Ref. #45)	2
43	778036	Gear – Output	1
44	776028	Pinion – Output	1
45	788008	Seal – Oil	3
46	782058	Housing – Axle (10.906" long)	2
47	772016A	Cover Assy. – Transaxle (Inc. Ref. #54, 55, 57, 59 & 63)	1
48	770012	Case Assy. – Transaxle (Inc. Ref. #54, 55, 57 & 63)	1
49	792007	Screw – Flanged Hex Hd.	8
50	786026	Pin – Dowel	2
51	792037	Screw – Hex Hd.	8
52	792019	Plug – Magnetic Drain	1
54	780049	Bearing – Needle	2
55	780140	Bearing – Needle	3
56	780024	Bearing – Ball	1
57	780047	Bearing – Needle	2
58	780050	Bearing – Ball	2
59	780046	Bearing – Needle	1
60	788025	Seal–Oil	1
61	780001	Washer	1
62	776031	Shaft & Pinion	1
63	780048	Bearing – Needle	2
64	776030	Shaft – Reverse Idler	1
65	786025	Spacer – Reverse Idler	1
66	778051	Idler – Reverse	1
67	778038	Gear – Spur (22 Teeth)	1
68	780039	Bearing – Thrust	2
69	774072A	Carrier Assy. – Differential (Incl. Ref. #71)	1
70	774071A	Carrier Assy. – Differential (Inc. Ref. #71)	1
71	780041	Bushing	2
72	788024	O–Ring	2
73	780007	Washer – Thrust	1
74	780051	Washer – Thrust	1
75	792122	Plug – Pipe	1
76	780075	Race – Thrust	2
77	780107	Washer	2
†78	3274–26	Screw – Socket Hd.	3

†Obtain from your local Toro dealer.

Obtain service replacement parts from Peerless Division, Tecumseh Products Co. Grafton, WI 53024

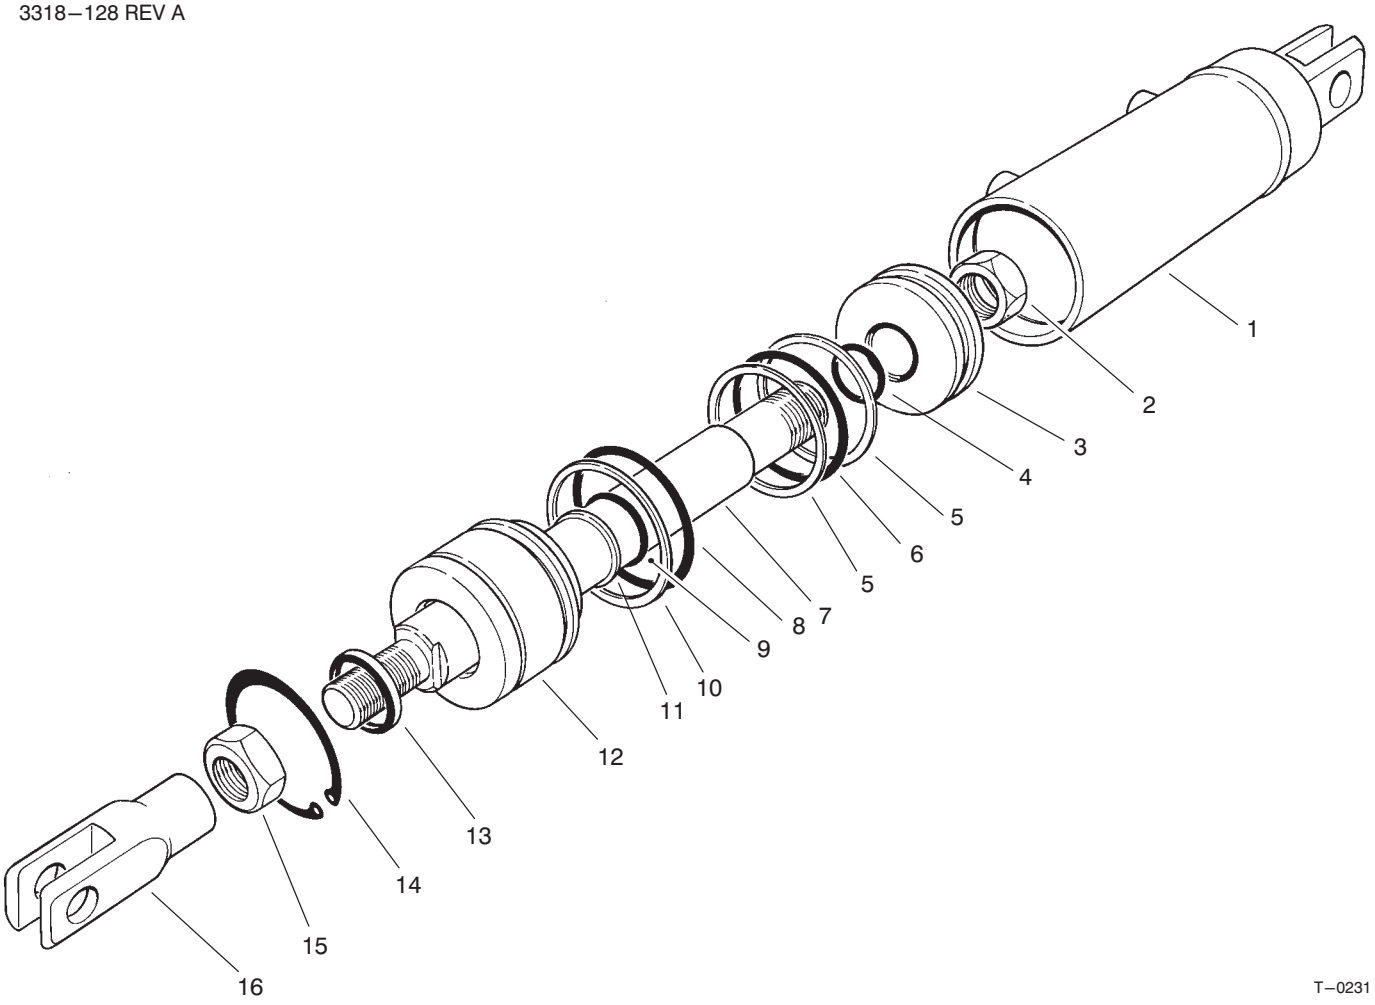

T–0231

HYDRAULIC CYLINDER ASSEMBLY NO. 62–4660

Ref. No.	Part No.	Description	No. Used
†1		Assembly – Barrel	1
2	60–9760	Nut – Lock	1
3	62–4690	Piston	1
†4		O–Ring	1
†5		Ring – Back–Up	2
†6		O–Ring	1
7	62–4700	Rod	1
†8		O–Ring	1
†9		O–Ring	1
†10		Ring – Back–Up	1

Ref. No.	Part No.	Description	No. Used
†11		Ring – Back–Up	1
12	62–4680	Head	1
†13		Dust Seal	1
14	32120–65	Ring – Retaining	1
15	3220–7	Nut – Jam	1
16	62–4670	Clevis – Rod	1
*	62–4720	Seal Repair Kit (Inc. Ref. #4–6, 8–11, 13 & 14)	1

*Not Illustrated
†Not Serviced Separately

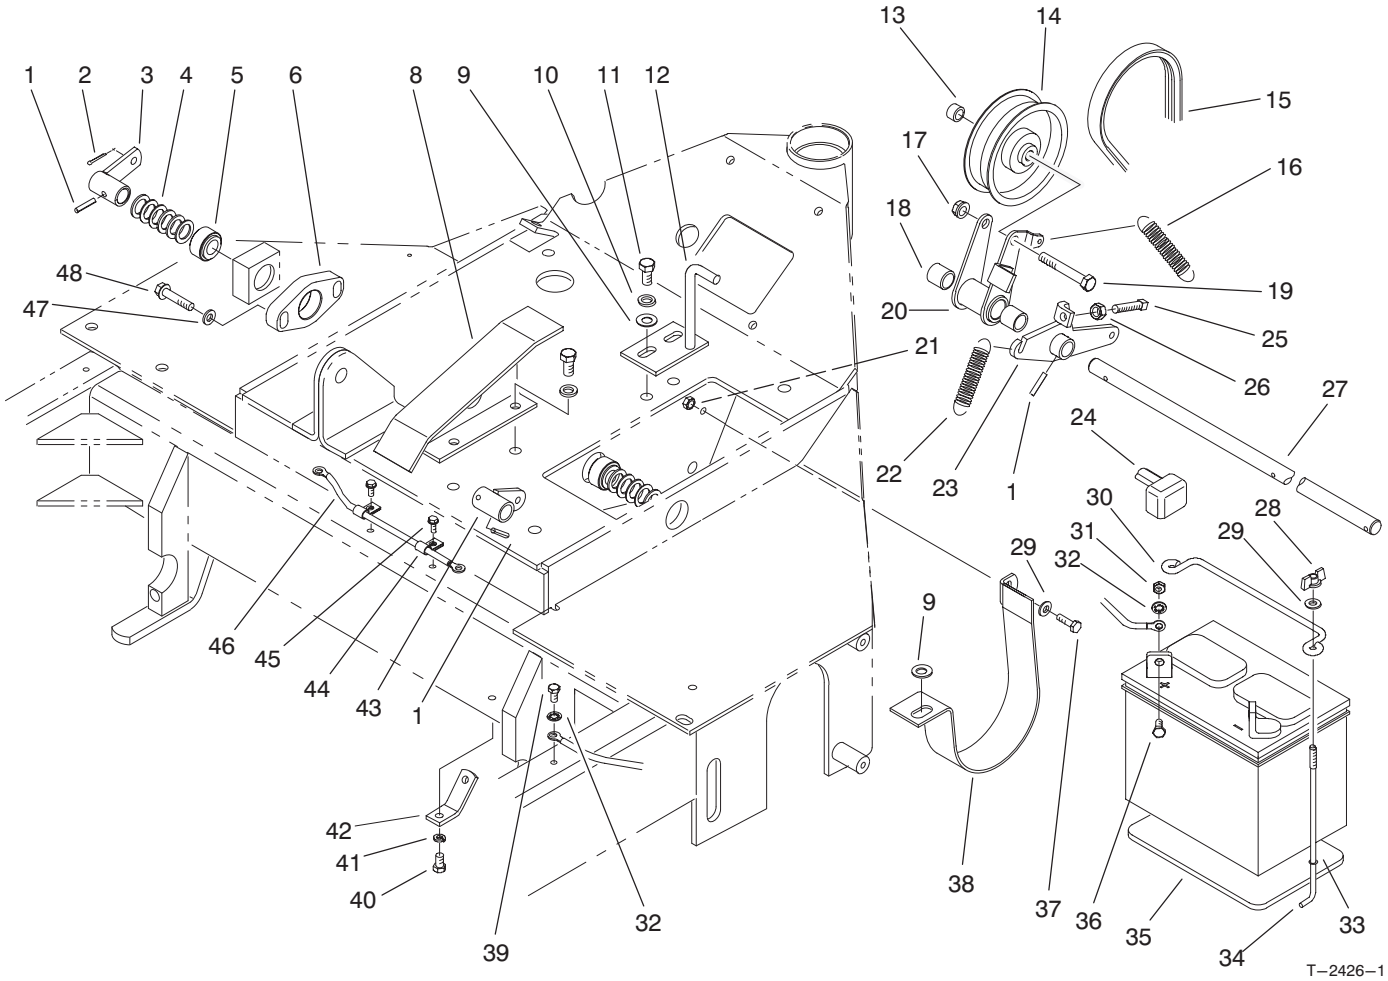

BATTERY & DRIVE TAKE–UP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32121–16	Pin – Roll	3
2	3272–6	Pin – Cotter	1
3	72–8650	Arm – Cross Shaft	1
4	3256–69	Washer – Flat	11
5	66–4730	Bearing	3
6	66–4520	Housing – Bearing	1
8	66–4400	Guide – Belt	1
9	3256–24	Washer – Flat	3
10	3253–21	Washer – Lock	1
11	323–4	Screw – HH	4
12	66–3560	Guide – Belt	1
13	59–4320	Spacer	1
14	66–4210	Pulley – Idler	1
15	66–4340	V–Belt	1
16	5–7290	Spring	1
17	3296–39	Nut – Lock	1
18	256–216	Bushing	2
19	323–12	Screw – HH	1
20	66–3590	Bracket – Drive, Take–up (Incl. Ref. #18)	1
21	3296–42	Nut – Lock	1
22	66–4180	Spring	1
23	66–3360	Arm – Brake Clutch	1
24	28–8080	Boot – Battery	1

Ref. No.	Part No.	Description	No. Used
25	3242–9	Screw – Set, Sq. Head	1
26	3218–2	Nut – Jam	1
27	66–3440	Cross Shaft – Clutch	1
28	32103–12	Nut – Wing	2
29	3256–22	Washer – Flat	3
30	94–5343	Clamp – Battery	1
31	3217–5	Nut – Hex.	2
32	3254–8	Washer – Lock, Int. Tooth	3
33	237–143	O–Ring	2
34	7–3328	Bolt – Battery	2
35	59–9470	Pad – Battery	1
36	321–3	Screw – HH	2
37	321–5	Screw – HH	1
38	72–8920	Guide – Belt, Traction	1
39	32104–17	Screw – HHST	1
40	321–2	Screw – HH	1
41	3253–3	Washer – Lock	1
42	66–3420	Bracket – Spring Brake	1
43	76–2610	Arm – Brake	1
44	2412–131	Clamp–R	2
45	32144–1	Screw – HHST	2
46	94–5349	Asm. – Wire	1
47	3256–2	Washer – Flat	2
48	32144–57	Screw – HHST	2

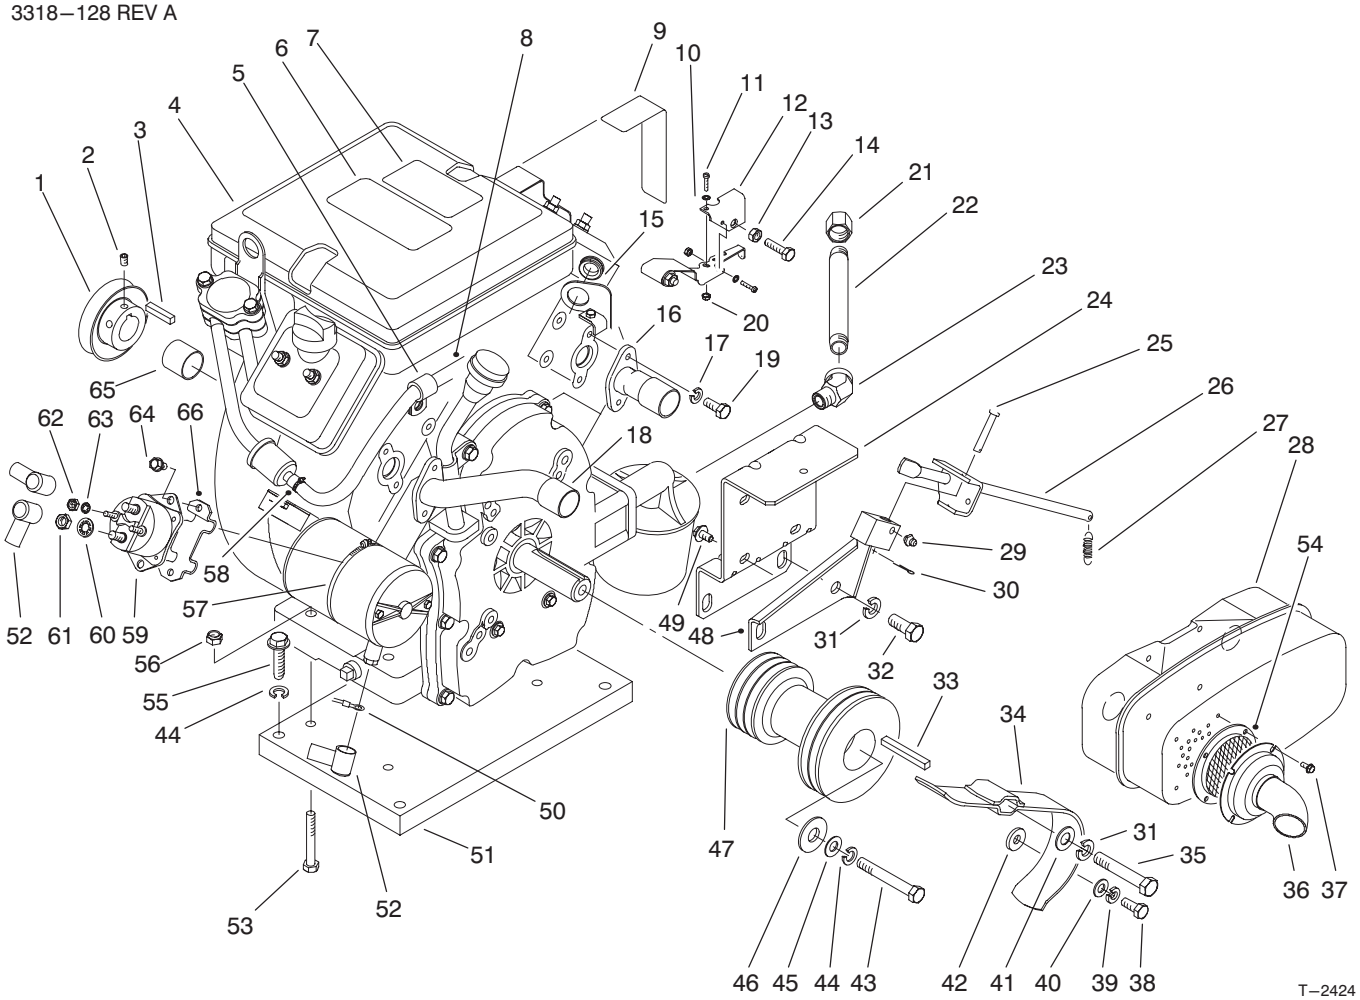

ENGINE, PULLEY & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61−9150	Pulley	1
2	3245−2	Screw − Set	2
3	13−2840	Key	1
4		Engine − 16 HP, Briggs & Stratton Model No. 303447	1
5	94−6819	Clamp−R	1
6	66−9050	Decal − Shift	1
7	66−9110	Decal − Start	1
8	94−6809	Hose − Fuel	1
9	94−5310	Decal − Choke/Throttle	1
10	3254−9	Washer − Lock, Int. Tooth	2
11	3290−93	Screw − Pan Head	2
12	94−6810	Bracket − Adjuster, Throttle	1
13	3219−1	Nut − Hex.	1
14	329−6	Screw − HH	1
15	94−6817	Grommet	1
16	94−5314	Asm. − Exhaust Tube	1
17	42−9850	Washer − Lock	4
18	94−5313	Asm. − Exhaust Tube	1
19	66−3120	Screw − HH	4
20	94−9109	Nut − Hex. Keps	2
21	288−10	Cap − Pipe	1
22	94−6804	Nipple − Pipe	1
23	94−6820	Elbow − Street 45°	1
24	94−5315	Mount − Muffler	1
25	283−66	Pin − Clevis	1

Ref. No.	Part No.	Description	No. Used
26	94−6802	Rod − Control, Throttle	1
27	66−4160	Spring	1
28	94−3438	Muffler	1
29	302−5	Fitting − Grease	1
30	3272−1	Pin − Cotter	1
31	3253−6	Washer − Lock	2
32	324−4	Screw − HH	1
33	5−0930	Key	1
34	94−5316	Guide − Belt	1
35	324−10	Screw − HH	2
36	94−6803	Pipe − Exhaust	1
37	32144−107	Screw − HHST	4
38	3210−3	Screw − HH	1
39	3253−33	Washer − Lock	1
40	3256−23	Washer − Flat	1
41	3256−4	Washer − Flat	1
42	4−2390	Washer	1
43	3211−12	Screw − HH	1
44	3253−21	Washer − Lock	2
45	3256−24	Washer − Flat	1
46	3256−6	Washer − Flat	1
47	94−3432	Pulley − Engine	1
48	94−5341	Support − Muffler	1
49	46−8560	Screw − HHST	4
50	94−6800	Asm. − Wire	1
51	94−3437	Plate − Mount, Engine	1

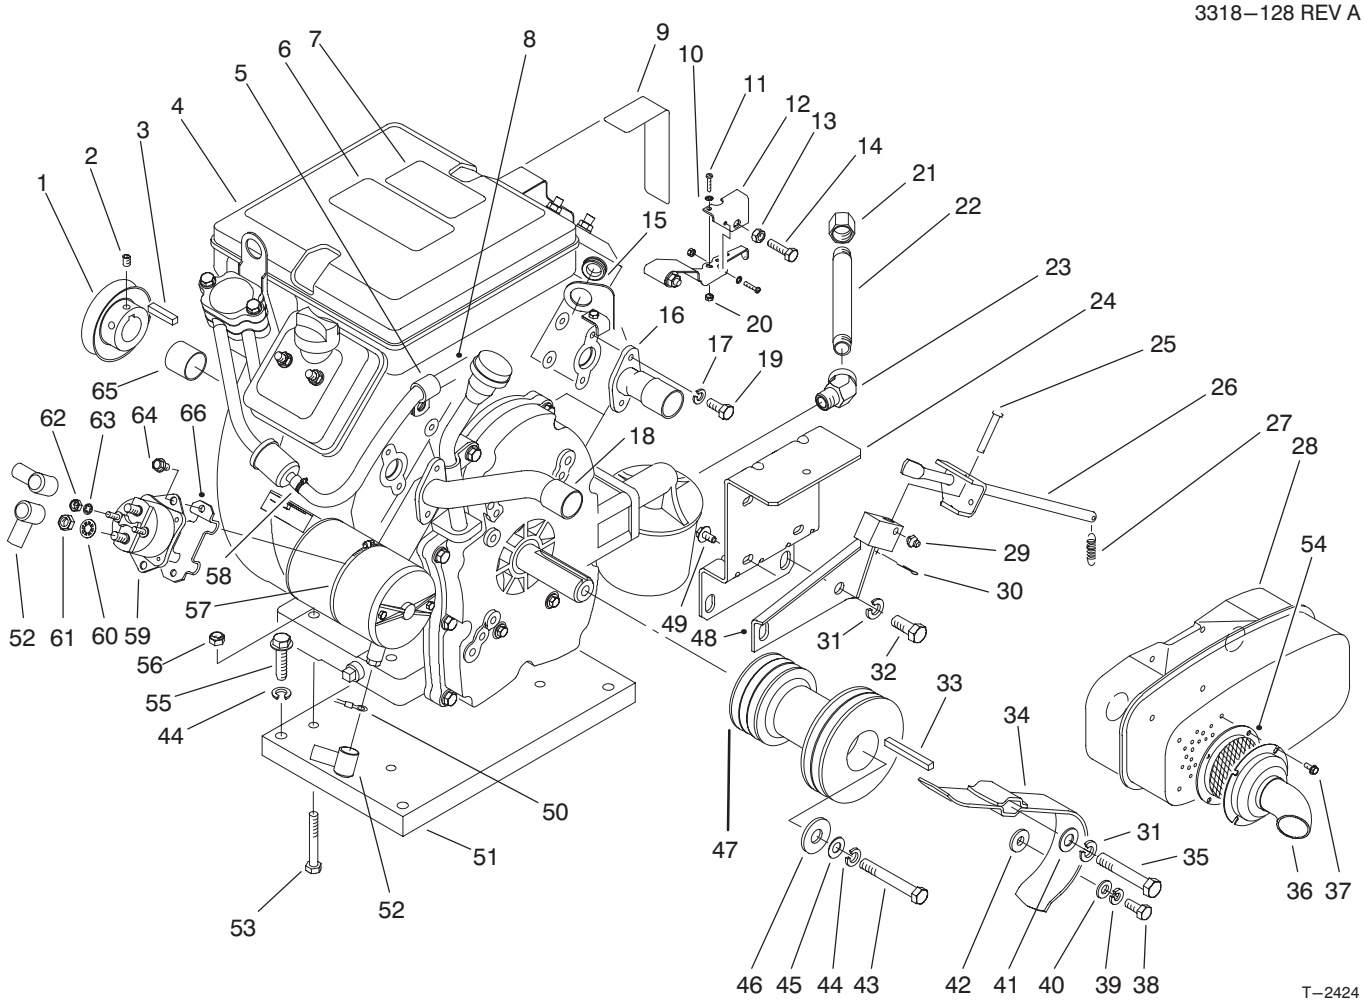

ENGINE, PULLEY & MUFFLER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
52	94–6824	Boot – Terminal	3
53	322–11	Screw – HH	4
54	94–5301	Spark Arrester (Optional)	1
55	11–0590	Screw – HH	4
56	3296–29	Nut – Lock	4
57	2412–110	Clamp	1
58	2412–108	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
59	28–4210	Solenoid	1
60	3254–2	Washer – Lock	2
61	3218–13	Nut – Jam	2
62	3219–14	Nut – Hex.	2
63	3254–1	Washer – Lock	2
64	32144–4	Screw – HHST	2
65	94–6812	Shield	1
†66	222934	Bracket – Solenoid	1

† Obtain from Briggs & Stratton

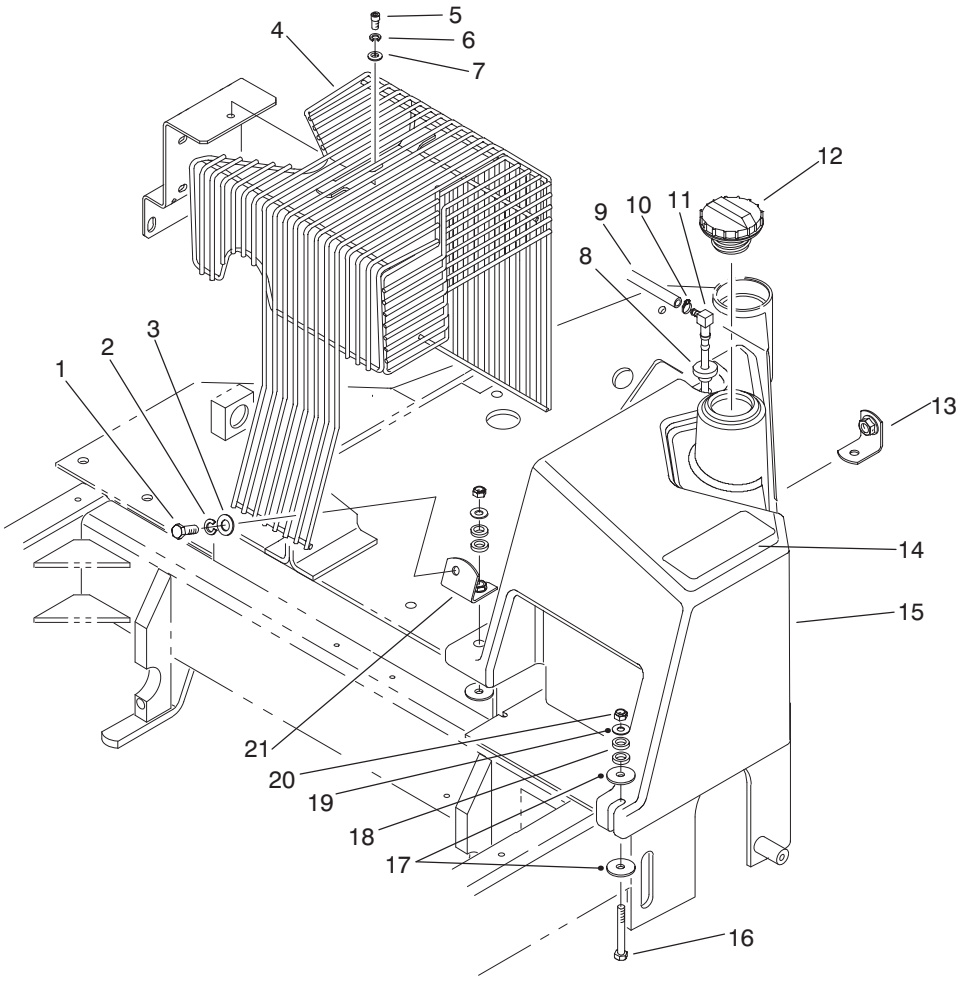

T–2425

MUFFLER GUARD & FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323–6	Screw – HH	2
2	3253–21	Washer – Lock	2
3	3256–4	Washer – Flat	2
4	94–5321	Guard – Muffler	1
5	3274–84	Screw – HSH	1
6	3253–3	Washer – Lock	1
7	3256–22	Washer – Flat	1
8	46–6560	Bushing	1
9	94–6809	Hose – Fuel	1
10	2412–108	Clamp – Hose	1
11	94–6805	Asm. – Stand Pipe, Fuel	1

Ref. No.	Part No.	Description	No. Used
12	93–3101	Cap – Fuel	1
13	94–6815	Bracket – Front	1
14	27–7310	Decal – Refueling	1
15	94–3435	Tank – Fuel	1
16	322–12	Screw – HH	3
17	3256–57	Washer – Flat	4
18	3–3287	Spacer	6
19	3256–2	Washer – Flat	3
20	3296–29	Nut – Lock	3
21	94–6816	Bracket – Rear	1

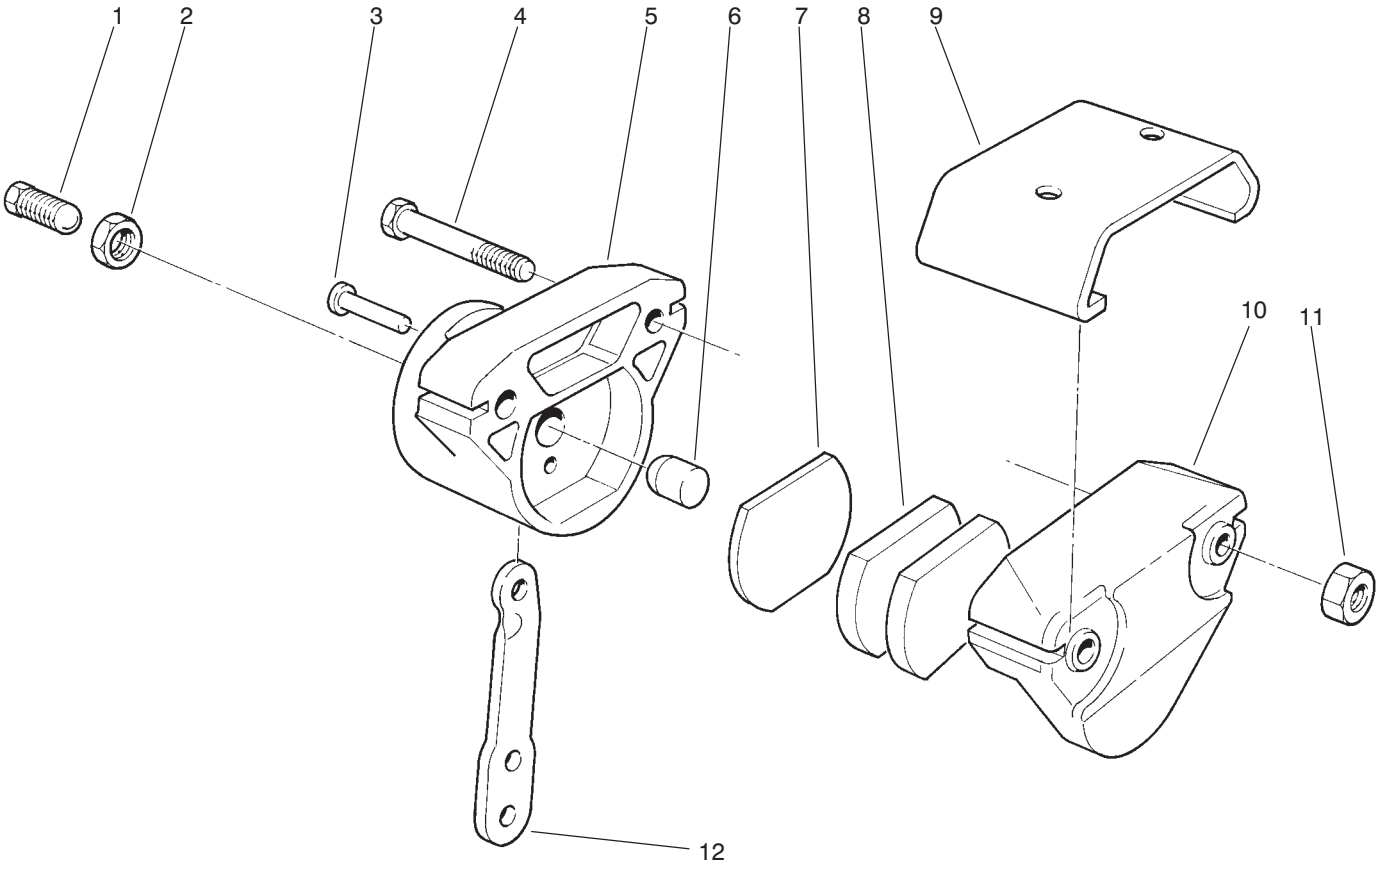

T–1243

BRAKE CALIPER ASSEMBLY NO. 76–2590

Ref. No.	Part No.	Description	No. Used
1	95–1842	Pin – Adjustment	1
2	3220–4	Nut – Jam	1
3	95–1837	Pin – Groove	1
4	3211–10	Screw – Cap Hex. Hd.	2
5	95–1844	Housing – Live Side	1
6	95–1843	Pin – Actuator	1
7	95–1845	Plate – Backing	1
8	80–0270	Lining	2
9	95–1841	Bracket – Floating	1

Ref. No.	Part No.	Description	No. Used
10	80–0280	Anvil Sub Asm. (Incl. 1 of Ref. #8)	1
11	32153–11	Nut – Lock	2
12	80–0180	Lever – Cam	1
*	80–0290	Kit – Repair, Lining (Incl. Ref. #7 & 8)	1
*	80–0310	Kit – Service (Incl. Ref. #3, 5, & 12)	1

*Not Illustrated

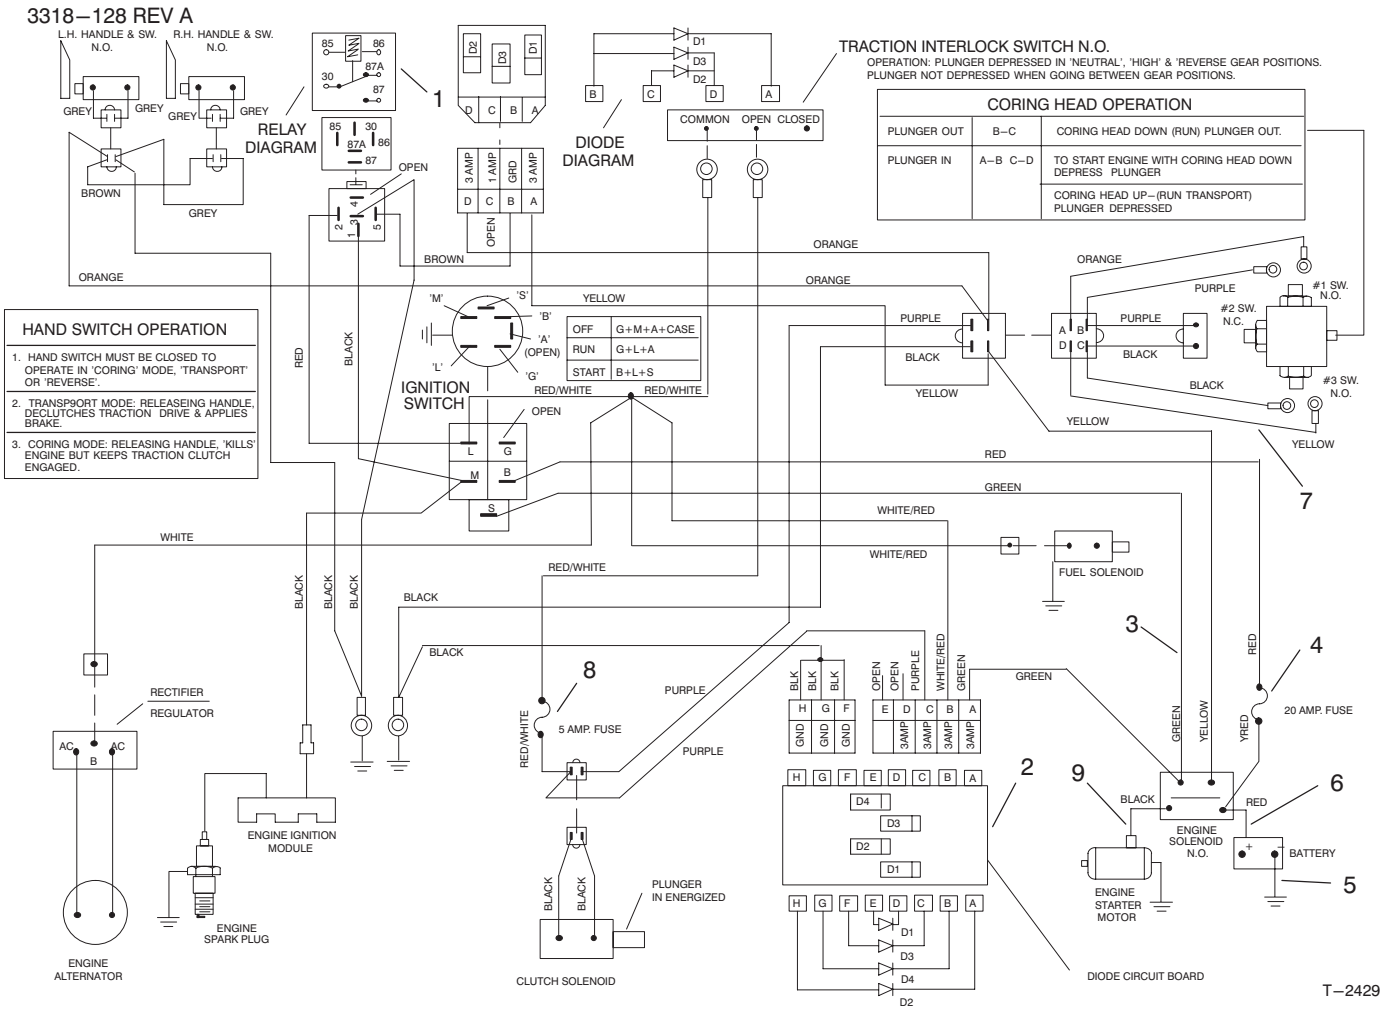

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	92–3191	Diode	1
2	92–3188	Diode	1
3	94–3433	Wire Harness – Main	1
†4		Fuse – 20 Amp	1
5	28–3860	Battery Cable – Ground	1

Ref. No.	Part No.	Description	No. Used
6	94–5349	Battery Cable – Positive	1
7	80–3810	Wire Harness – Coring Head Switch	1
8	218–573	Fuse – 5 Amp	1
9	94–6800	Asm. – Wire, Positive	1

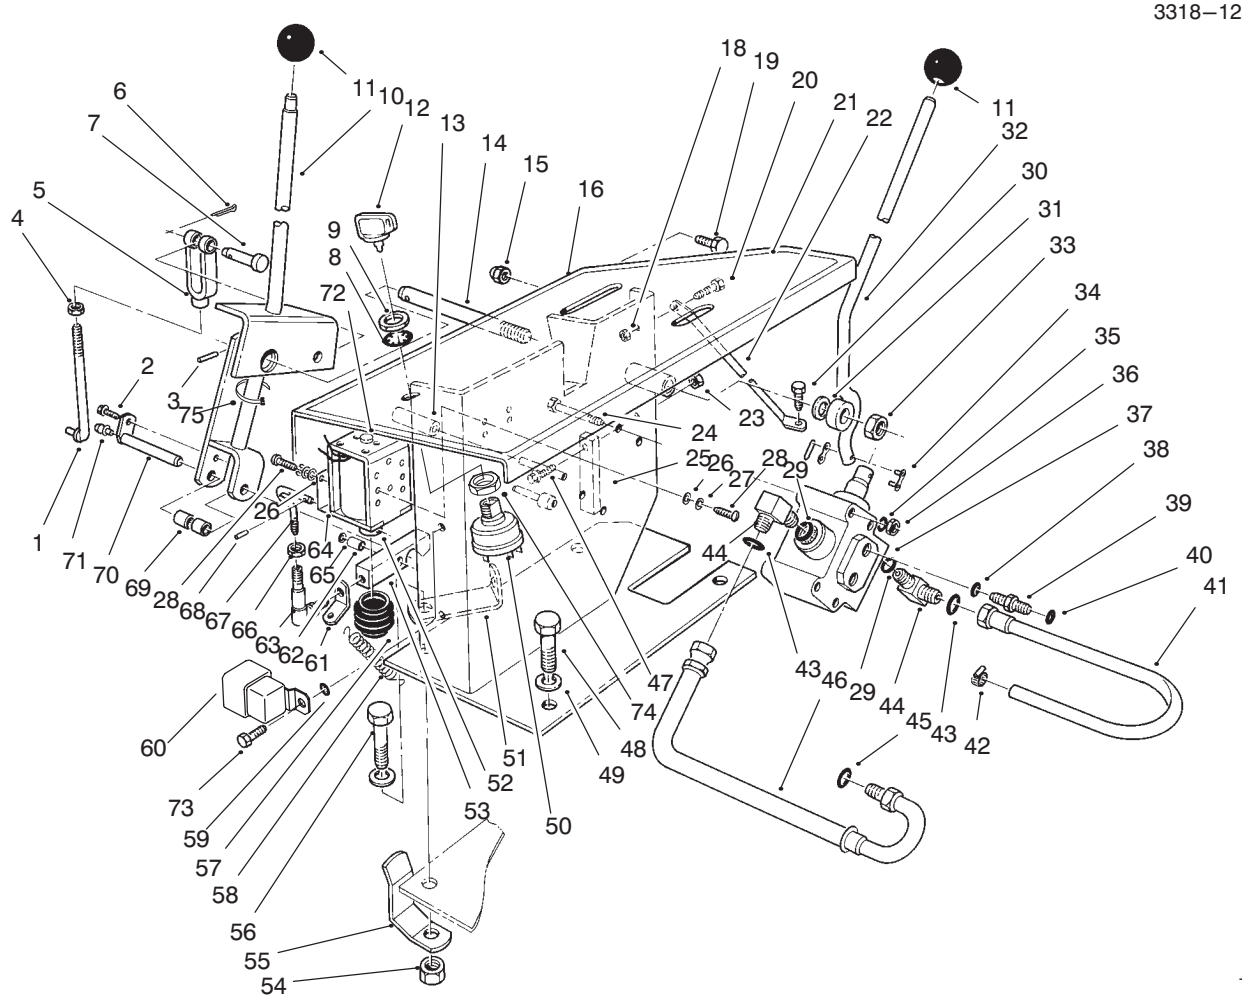

T–0958–2

CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5–1686	Rod – Adjusting	1
2	32144–112	Screw – Backing Plate	1
3	32121–23	Pin – Roll	1
4	3220–3	Nut – Jam	1
5	282–1	Yoke	1
6	3272–6	Pin – Cotter	1
7	283–2	Pin – Clevis	1
8	3254–5	Washer – Lock, Int. Tooth	1
9	218–461	Nut – Hex	1
10	72–8710	Handle & Latch	1
11	233–13	Knob – With Ring	2
12	63–8360	Key	2
13	72–9060	Cushion – Solenoid Stop	
		Latch Pin	1
14	72–8690	Shaft – Traction Clutch	1
15	32111–8	Nut – Lock, Cap	2
16	80–4030	Panel – Control	1
18	32128–33	Nut – Lock	1
19	322–26	Screw – Cap, Hex. Hd.	2
20	321–3	Screw – Cap, Hex. Hd.	1
21	80–3910	Decal – Control	1
22	72–9110	Brace – Control Panel	1
23	3296–12	Nut – Lock	1
24	321–14	Screw – Cap Hex. Hd.	4
25	72–9070	Pad – Bumper	1
26	3256–21	Washer – Flat	8
27	3253–15	Washer – Lock	6

Ref. No.	Part No.	Description	No. Used
28	218–462	Screw – Machine	6
29	237–42	O–Ring	2
30	46–8560	Screw – Hex Hd. Thd. Form	1
31	3256–26	Washer – Flat	1
32	72–8810	Assy. – Handle, Valve	1
33	32153–5	Nut – Lock	1
34	2710–16	Chain – Connecting Link	1
35	3253–3	Washer – Lock	4
36	3217–5	Nut – Hex	4
37	43–1950	Valve – Hydraulic Control	1
38	237–78	O–Ring	2
39	340–92	Fitting – Straight	
		(Incl. Ref. #38 & 40)	2
40	237–21	Seal – O–Ring	2
41	59–4150	Hose – Return	1
42	2412–36	Clamp – Hose	1
43	237–22	O–Ring	2
44	340–77	Fitting – 90°	
		(Inc. Ref. #29 & 43)	2
45	39–7310	O–Ring (Metric)	1
46	59–4140	Hose – Pressure	1
47	3290–126	Screw – Hex Washer Hd.	1
48	11–0590	Screw – Cap, Hex. Hd.	3
49	3253–21	Washer – Lock	4
50	83–0020	Switch – Starter	
		(Incl. Ref. #8 & 9)	1
51	72–9080	Bracket – Spring	1

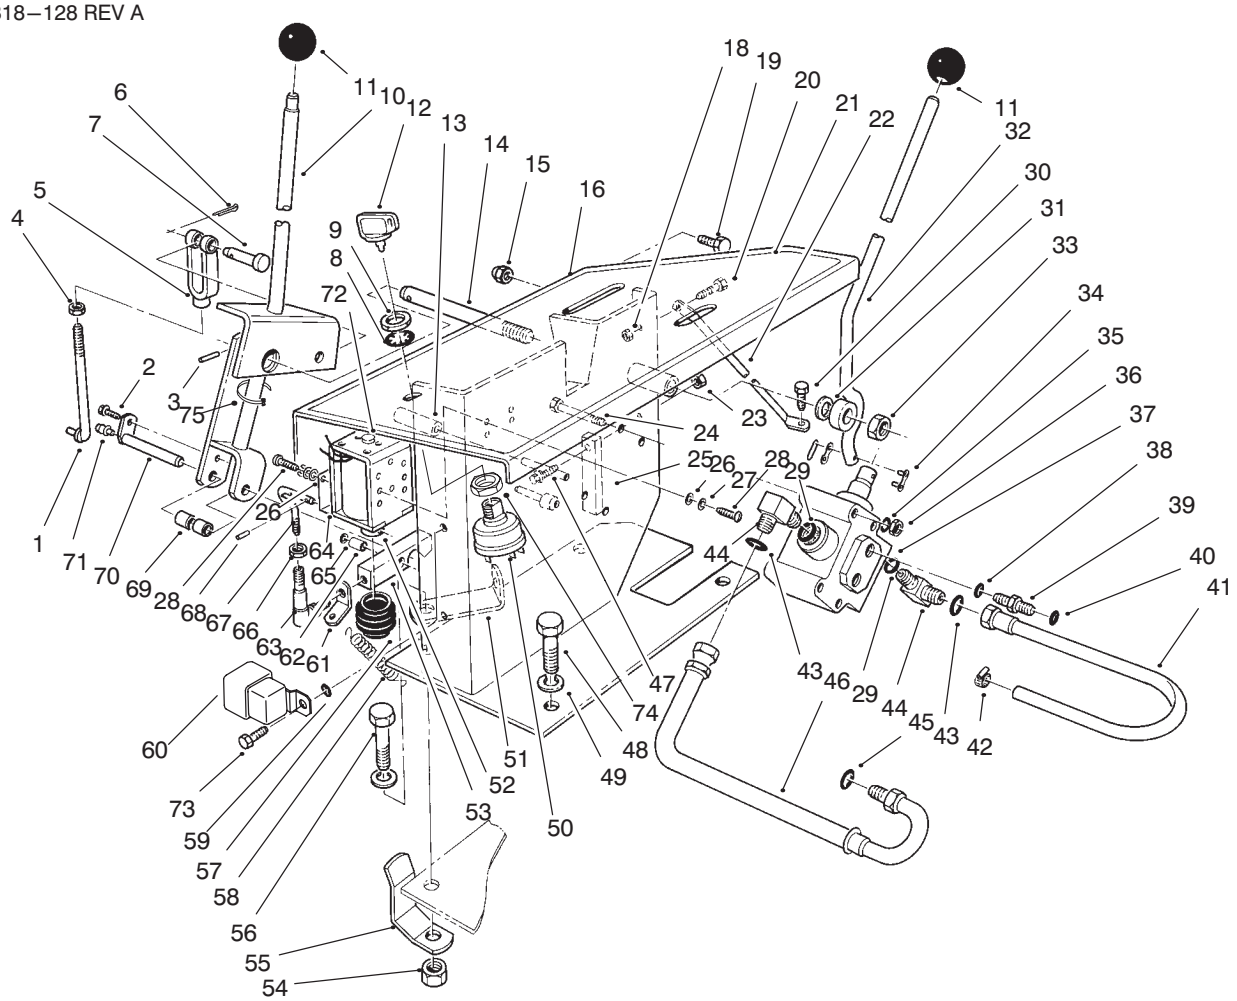

T–0958–2

CONTROL PANEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
52	72–4620	Plunger – Solenoid	1
53	72–8780	Latch – Clutch Solenoid	1
54	32153–2	Nut – Lock	1
55	72–9050	Clip – Control Cover	1
56	323–7	Screw – Cap, Hex. Hd.	1
57	67–9510	Seal – Dust	1
58	66–4160	Spring	1
59	3254–8	Washer – Lock, Int. Tooth	1
60	70–1480	Relay	1
61	72–9090	Bracket – Spring Latch	1
62	256–312	Bushing	1
63	18–1720	Ball Joint	1
64	3290–418	Nut – Push On	1

Ref. No.	Part No.	Description	No. Used
65	80–3920	Clamp – Boot Solenoid	1
66	3296–13	Nut – Lock	1
67	72–8790	Rod – Solenoid Adjusting	1
68	32121–90	Pin – Roll	2
69	72–9140	Roller – Latch	2
70	72–9130	Pin – Roller Latch	1
71	302–18	Fitting – Grease	1
72	80–3960	Solenoid Assembly (Incl. Ref. #52)	1
73	321–5	Screw – Cap, Hex. Hd.	1
74	3296–42	Nut – Lock	1
75	3290–381	Tie – Cable	2
*	3290–379	Tie – Cable	2

*Not Illustrated

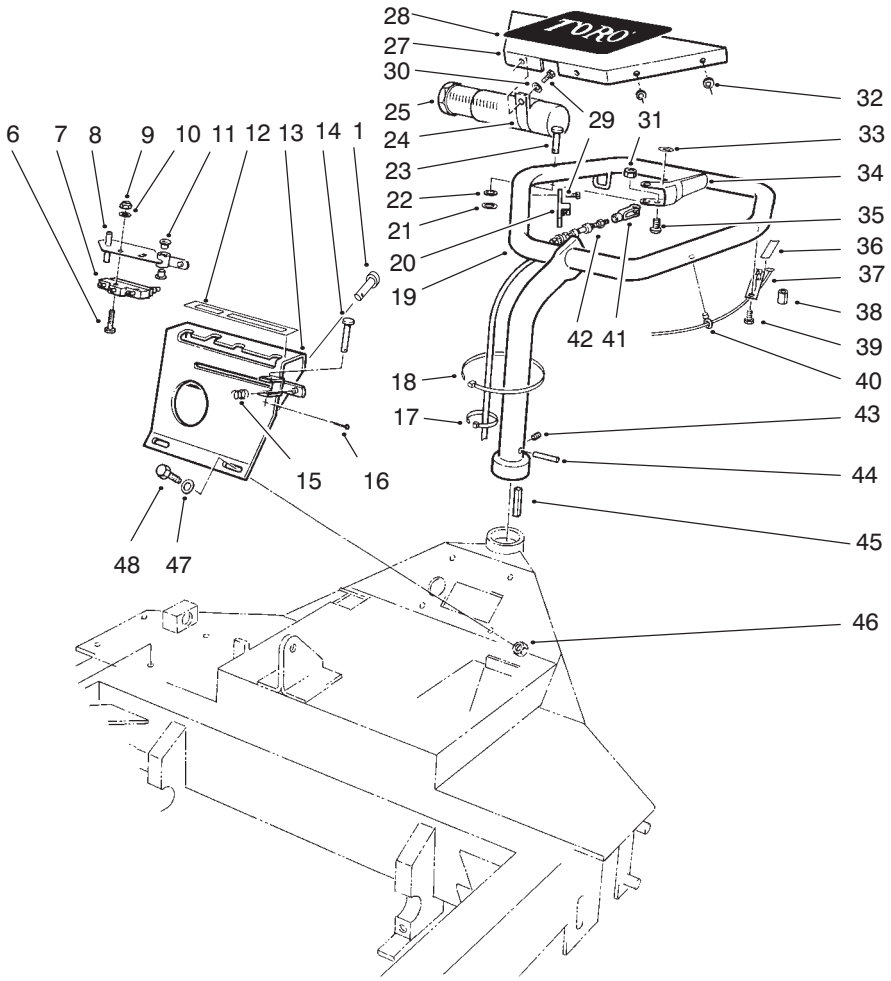

T–0235A

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	283–89	Pin – Clevis	1
6	32105–17	Screw – Pan Hd. Machine	2
7	29–6162	Switch	1
8	66–4780	Hub & Plate (Incl. Ref. #11)	1
9	3296–9	Nut – Lock	2
10	3256–53	Washer – Flat	2
11	256–301	Bushing	2
12	66–4710	Decal – Shift Pattern	1
13	66–4750	Plate – Shift	1
14	283–66	Pin – Clevis	1
15	66–4850	Spring	1
16	3272–6	Pin – Cotter	1
17	3290–381	Tie – Cable	5
18	3290–379	Tie – Cable	3
19	95–1902	Handle	1
20	59–9730	Bracket – Cable	1
21	3290–418	Nut – Push On	1
22	3–3287	Spacer – Rubber	1
23	283–11	Pin – Clevis	1
24	2412–133	R–Clamp	2
25	74–0720	Tube	1
27	59–4530	Panel – Handle	1

Ref. No.	Part No.	Description	No. Used
28	67–7320	Decal – Toro	1
29	32144–64	Screw – Hex. Hd. Self Tap	6
30	3256–61	Washer – Flat	2
31	3296–12	Nut – Hex.	1
32	3256–14	Washer – Flat	2
33	59–9860	Decal – Brake	1
34	59–9560	Handle – Control	1
35	3252–3	Screw – Machine	1
36	59–9870	Decal – Interlock	2
37	40–9690	Interlock Handle & Switch (Incl. Ref. #40)	2
38	72–9030	Cushion – Guard	2
39	32104–17	Screw – Hex Hd. Self Tap.	2
40	17–9120	Mount–Wire	6
41	282–26	Clevis	1
42	59–4410	Cable – Brake	1
43	3247–2	Screw – Set	1
44	32121–49	Pin – Roll	1
45	13–2840	Key	1
46	3296–29	Nut – Lock	4
47	3256–23	Washer – Flat	4
48	322–4	Screw – Cap Hex. Hd.	4

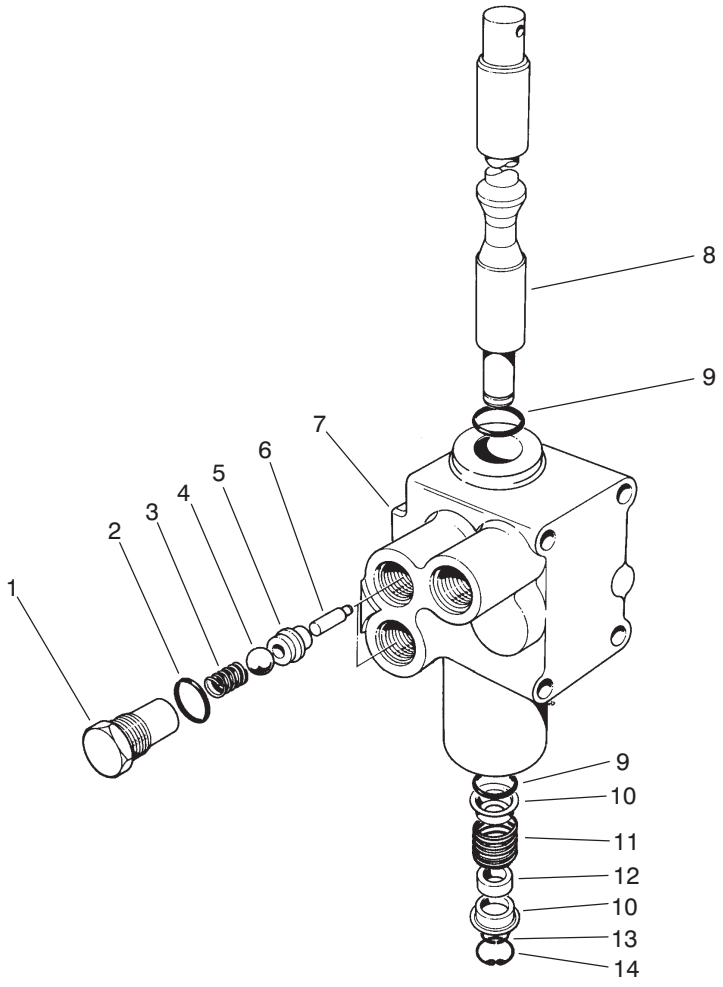

T–0236

CONTROL VALVE NO. 43–1950

Ref. No.	Part No.	Description	No. Used
1	22–8330	Plug	2
2	237–42	O–Ring	2
3	22–8340	Spring	2
4	22–8350	Ball	2
5	22–8370	Seat–Check Valve	2
6	22–8360	Pin – Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22–8420	Spool	1
9	22–8500	O–Ring	2
10	22–8380	Retainer – Spring	2
11	22–8410	Spring	1
12	23–3030	Spacer	1
13	22–8480	Snap Ring Spool	1
14	22–8490	Snap Ring	1

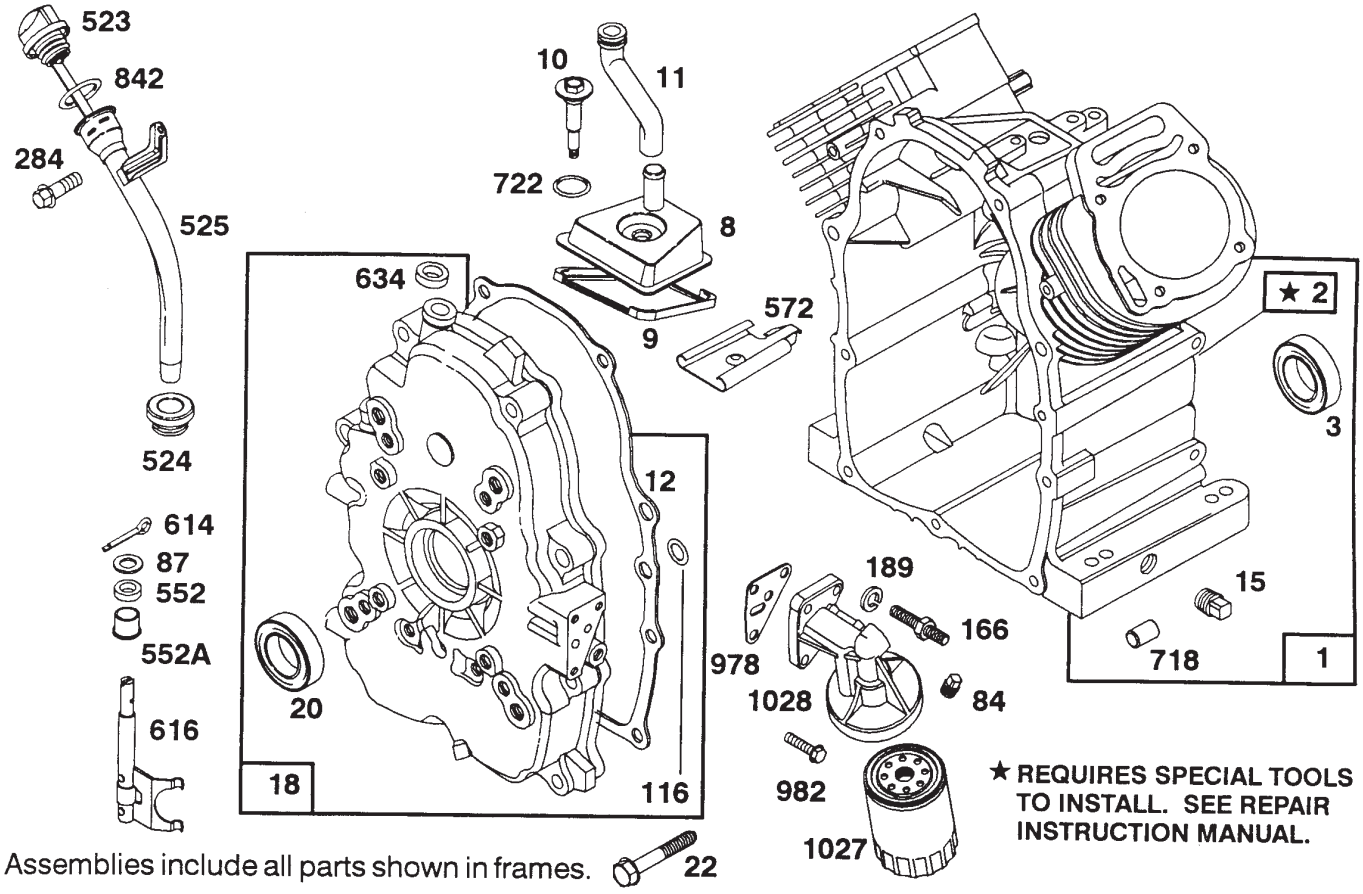

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447—1233—A1

Ref. No.	Part No.	Description	No. Used
1	807521	Cylinder Assembly	
2	805107	Bearing — Cylinder	
*3	805101	Seal — Oil	
8	807795	Breather Assembly	
*9	805379	Gasket — Breather	
10	805751	Screw — Hex. Washer Head	
11	805362	Tube — Breather	
*12	805112	Gasket — Crankcase Cover	
15	805048	Plug — Oil Drain	
18	807628	Cover Assembly — Crankcase	
*20	805049	Seal — Oil	
22	805696	Screw — Crankcase Cover	
84	91488	Plug — Pipe	
*87	805054	Seal — Governor Shaft	
*116	805198	O—Ring (Crankcase Cover)	
166	805073	Stud — Oil Filter Adapter	
284	805177	Screw — Hex. Head	

Ref. No.	Part No.	Description	No. Used
189	805449	Lockwasher	
523	807977	Dipstick	
*524	805259	Seal — Filler Tube	
525	807976	Tube — Oil Filler	
552	805412	Bushing — Governor Shaft	
552A	805413	Bushing — Governor Shaft	
572	805197	Baffle — Governor	
614	805417	Pin — Cotter	
616	807596	Fork — Governor	
634	805416	Washer — Governor Shaft	
718	805103	Dowel — Crankcase	
*722	805483	Seal — Breather Screw	
*842	805386	O—Ring	
*978	805250	Gasket — Oil Filter Adapter	
982	805030	Screw	
1027	492932	Filter — Oil	
1028	805292	Adapter — Oil Filter	

NOTE: Obtain parts from Briggs & Stratton dealer or Briggs & Stratton Corp. Milwaukee, WI 53201 Service hot line in USA or Canada 1—800—233—3723. *Included in Gasket Set — Part No. 807989.

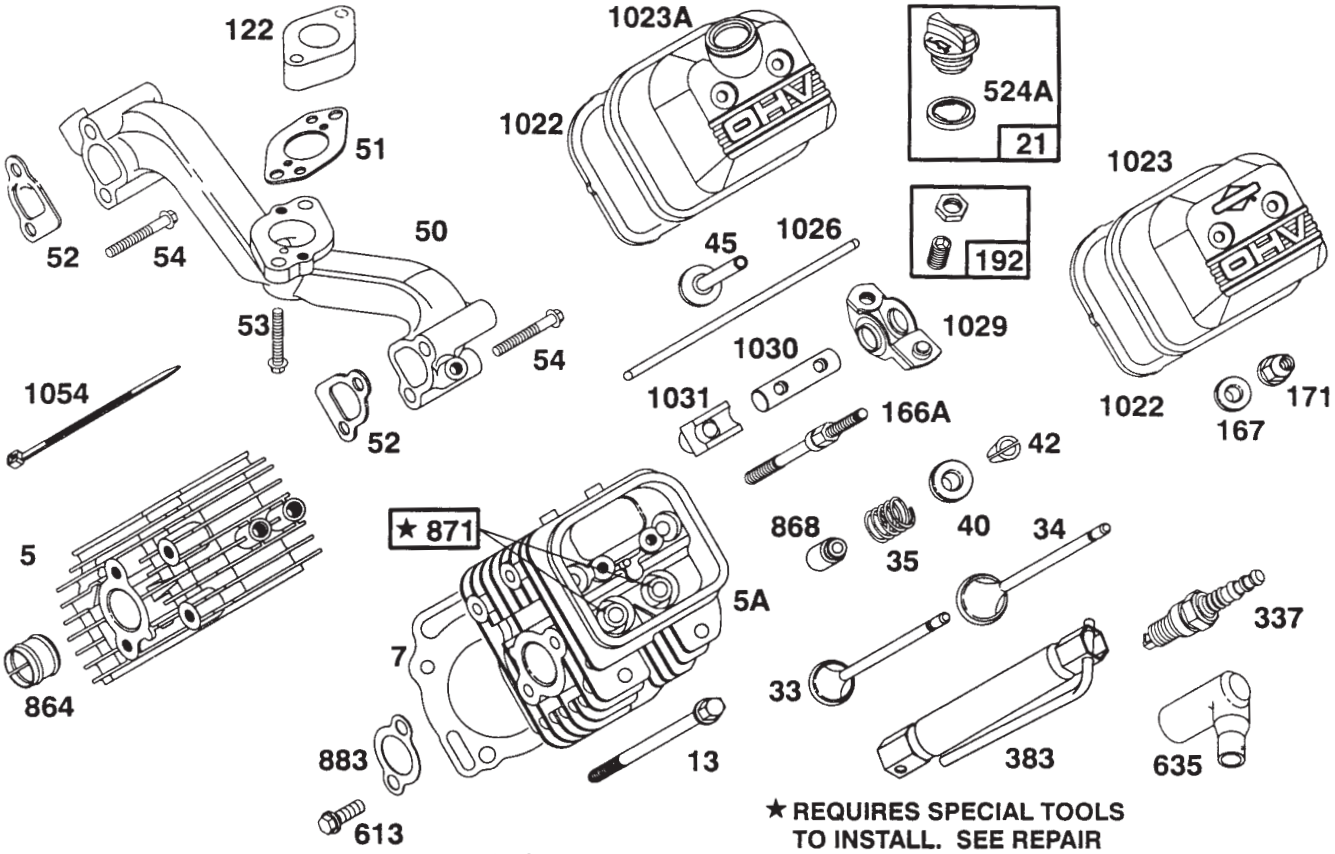

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447—1233—A1

Ref. No.	Part No.	Description	No. Used
5	807987	Head — Cylinder (Cyl. #1)	
5A	807988	Head — Cylinder (Cyl. #2)	
*‡7	807986	Gasket — Cylinder Head	
13	805097	Screw — Cylinder Head	
21	491832	Plug — Oil Filter	
33	805089	Valve — Exhaust	
34	805090	Valve — Intake	
35	805078	Spring — Valve	
40	805092	Retainer — Valve Spring	
42	805161	Retainer — Valve	
45	262679	Tappet — Valve	
50	805772	Manifold — Intake	
*51	805700	Gasket — Carburetor Mtg.	
*‡52	805023	Gasket — Intake Manifold	
53	805466	Screw	
54	805006	Screw	
122	805328	Spacer — Carburetor	
166A	805343	Stud — Rocker Arm	
*‡167	805420	Washer — Valve Cover	
‡171	805019	Nut — Nylock	

Ref. No.	Part No.	Description	No. Used
192	807623	Screw — Valve Adjustment	
337	496018	Plug — Spark	
383	19374	Wrench — Spark Plug	
*‡524A	271983	Seal — Filler Plug	
613	805158	Screw	
635	805529	Elbow — Spark Plug	
864	805083	Liner — Exhaust Port	
868	805094	Seal — Valve Guide	
871	805084	Guide — Valve	
*‡883	805024	Gasket — Exhaust Manifold	
*‡1022	806039	Gasket — Valve Cover	
1023	805100	Cover — Valve	
1023A	808032	Cover — Valve	
1026	805352	Rod — Push **NOTE:** 805617 Rod — Push Used on Exhaust Side Only.	
1029	808096	Arm — Rocker	
1030	805342	Shaft — Rocker Arm	
1031	805341	Support — Rocker Arm	
1054	280275	Tie — Cable	

*Included in Gasket Set — Part No. 807989.

‡Included in Valve Overhaul Kit — Part No. 807990.

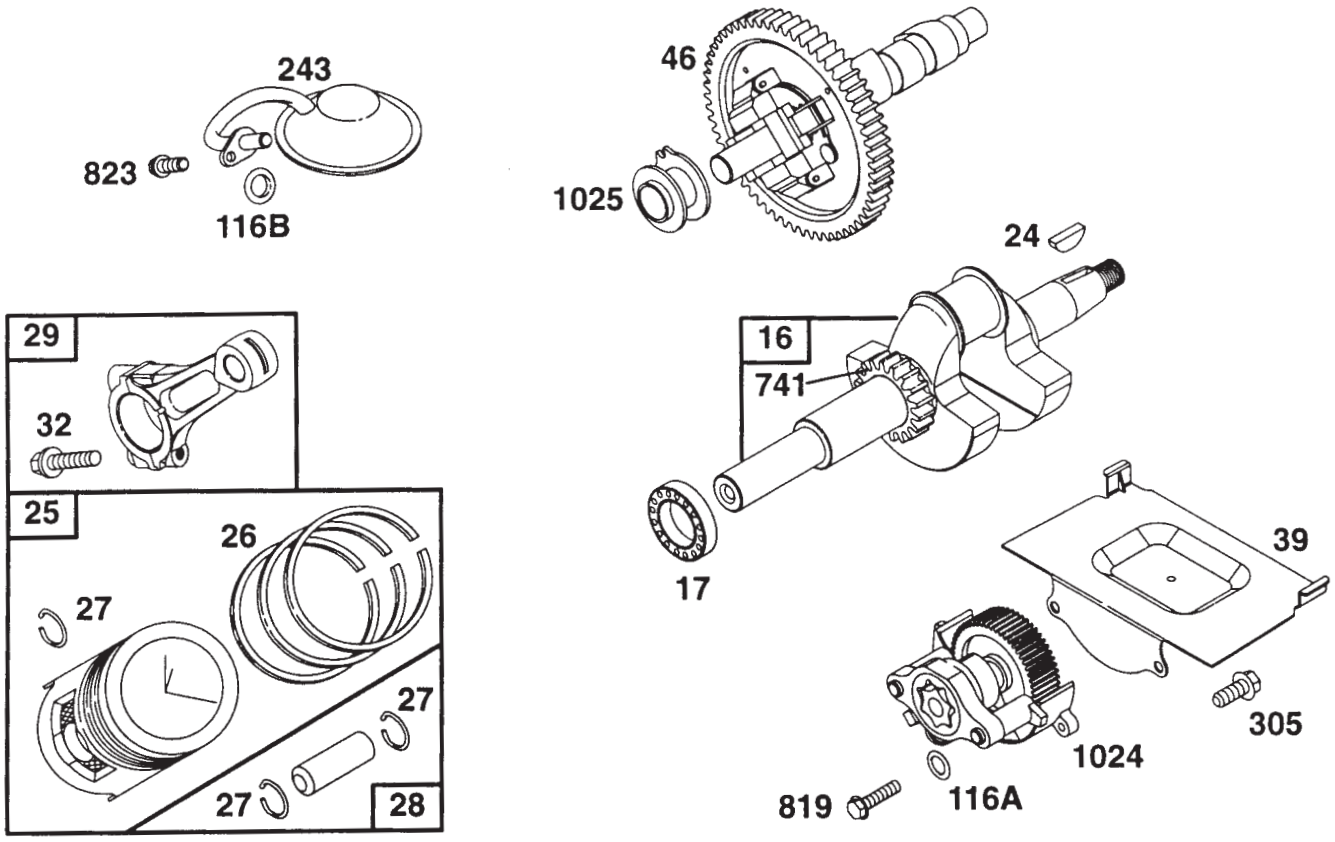

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447—1233—A1

Ref. No.	Part No.	Description	No. Used
16	807589	Crankshaft **NOTE:** To Replace Crankshaft Timing Gear Key Order Part No. 94196. 807625 Washers — Thrust	
17	805754	Bearing — Ball	
24	805016	Key — Flywheel	
25	807619	Piston Assembly (Standard)	
	807807	Piston Assembly (.010 O.S.)	
	807809	Piston Assembly (.020 O.S.)	
	807811	Piston Assembly (.030 O.S.)	
26	807620	Ring Set — Piston (Standard)	
	807808	Ring Set — Piston (.010 O.S.)	
	807810	Ring Set — Piston (.020 O.S.)	
	807812	Ring Set — Piston (.030 O.S.)	
27	805099	Lock — Piston Pin	
28	807621	Piston Pin Assembly	
29	807900	Connecting Rod Assembly	
32	805395	Screw — Connecting Rod	
39	805654	Deflector — Oil	
46	807542	Gear — Cam	
*116A	805058	O—Ring (Oil Pump)	
*116B	805316	O—Ring (Pick — Up Tube)	
243	807598	Screen — Oil Pump Pick—Up	
305	805406	Screw	
741	805984	Gear — Timing	
819	805057	Screw	
823	805317	Screw — Mounting	
1024	807644	Oil Pump Assembly	
1025	805313	Slider — Governor	

*Included in Gasket Set — Part No. 807989.

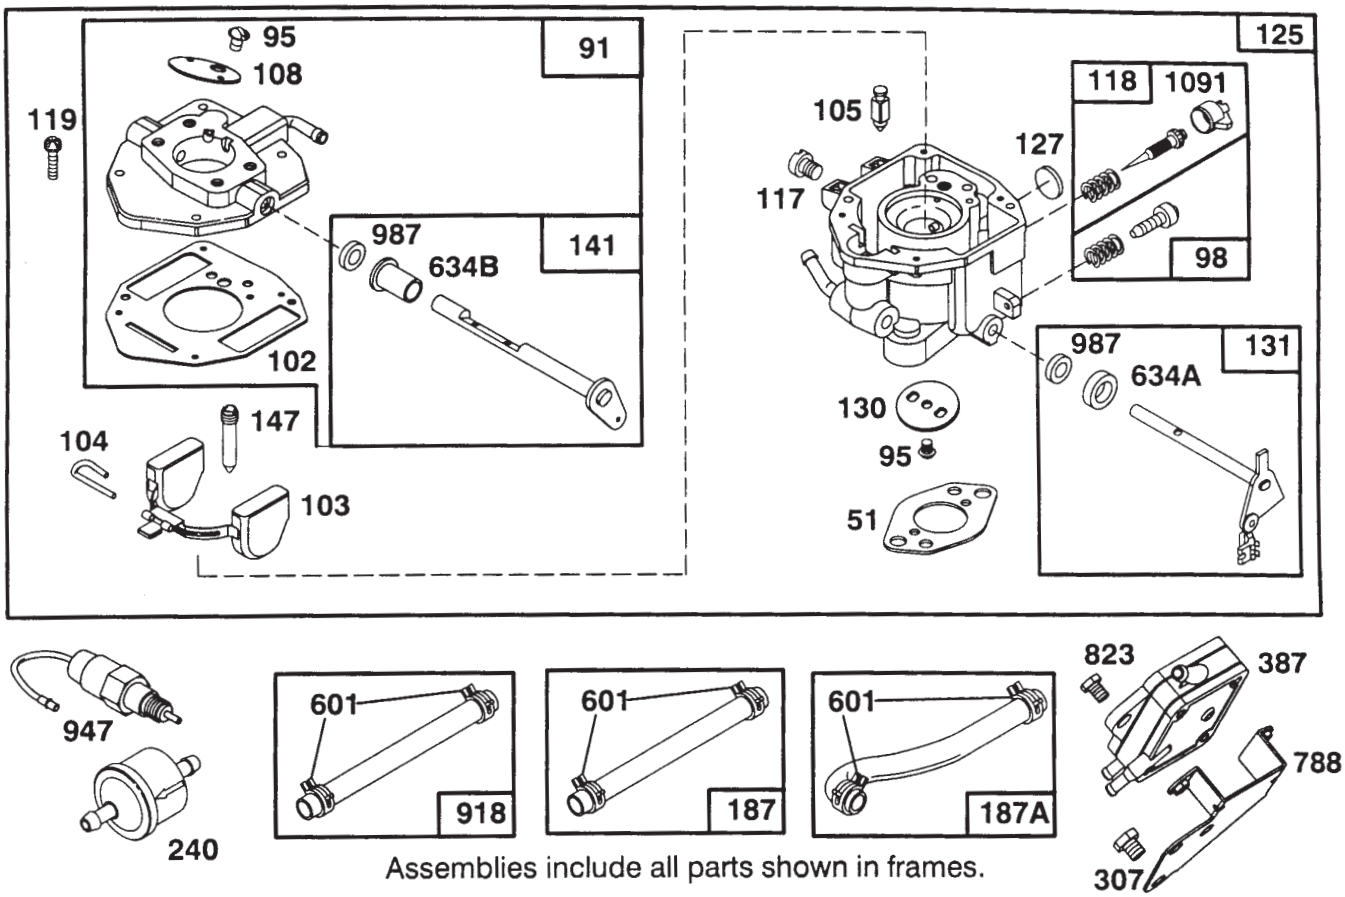

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447—1233—A1

Ref. No.	Part No.	Description	No. Used
*51	805700	Gasket — Carburetor Mtg.	
91	807919	Body — Upper Carburetor	
95	805538	Screw — Valve Mtg.	
98	808177	Screw — Throttle Adj.	
†102	805541	Gasket — Carburetor Body	
103	805546	Float Assembly	
†104	805545	Pin — Float Hinge	
†105	805547	Valve — Fuel Inlet	
108	805539	Valve — Choke	
117	805852	Jet — Main	
117	805537	Jet — Main, High Altitude (To be used at altitudes above 5000 feet (1524m) sea level.)	
118	808293	Valve — Idle Adjust.	
119	805540	Screw — Upper Body Mtg.	
125	808294	Carburetor Assembly	
†127	805559	Plug — Welch	
130	805554	Valve — Throttle	

Ref. No.	Part No.	Description	No. Used
131	807720	Shaft — Throttle	
141	807722	Shaft — Choke	
†147	805553	Jet — Slow Speed	
187	393815	Line — Fuel (Cut to Required Length)	
187A	398367	Line — Fuel	
240	493629	Filte — Fuel	
307	805025	Screw — Hex. Hd.	
387	808322	Pump — Fuel	
601	93053	Clamp — Hose	
†634A	805557	Collar — Throttle	
†634B	805543	Collar — Choke	
788	807685	Bracket — Fuel Pump	
823	805317	Screw — Mounting	
918	393815	Line — Vacuum (Cut to Required Length)	
947	807664	Solenoid	
†987	805544	Seal — Shaft	
1091	805862	Cap — Limiter	

†Included in Carburetor Kit — Part No. 807726.

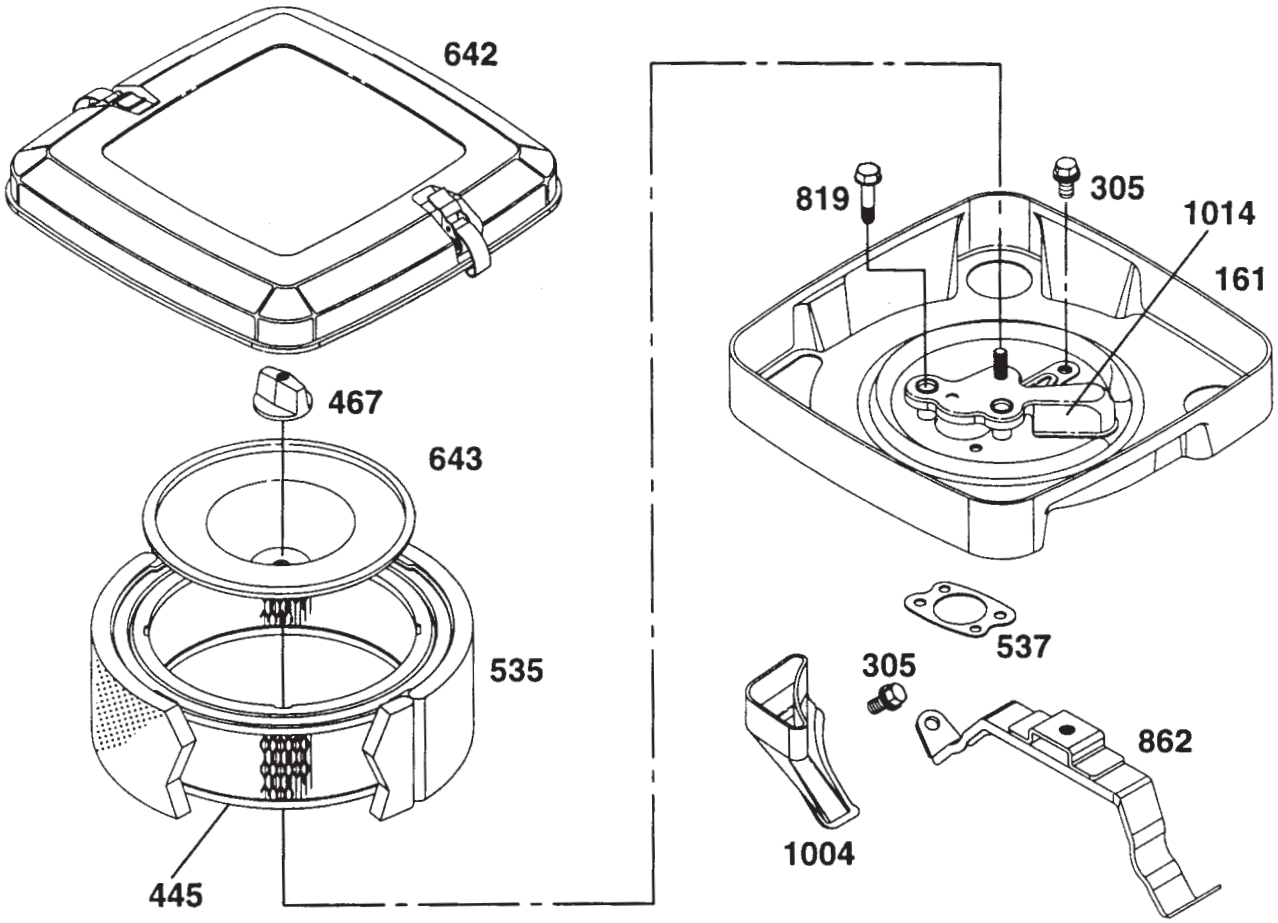

ENGINE BRIGGS & STRATTON MODEL 303447—1233—A1

Ref. No.	Part No.	Description	No. Used
161	807857	Base — Air Cleaner	
305	805406	Screw — Sem	
445	394018	Filter — Air	
467	491875	Knob — Air Cleaner	
535	272490	Filter — Air	
*537	805655	Gasket — Air Cleaner	

Ref. No.	Part No.	Description	No. Used
642	807862	Cover — Air Cleaner	
643	805631	Plate — Air Cleaner	
819	805057	Screw — Hex. Hd.	
862	807796	Bracket — Air Cleaner	
1004	805632	Strap — Cleaner Mounting	
1014	807797	Shield — Carburetor	

†Included in Gasket Set — Part No. 807989.

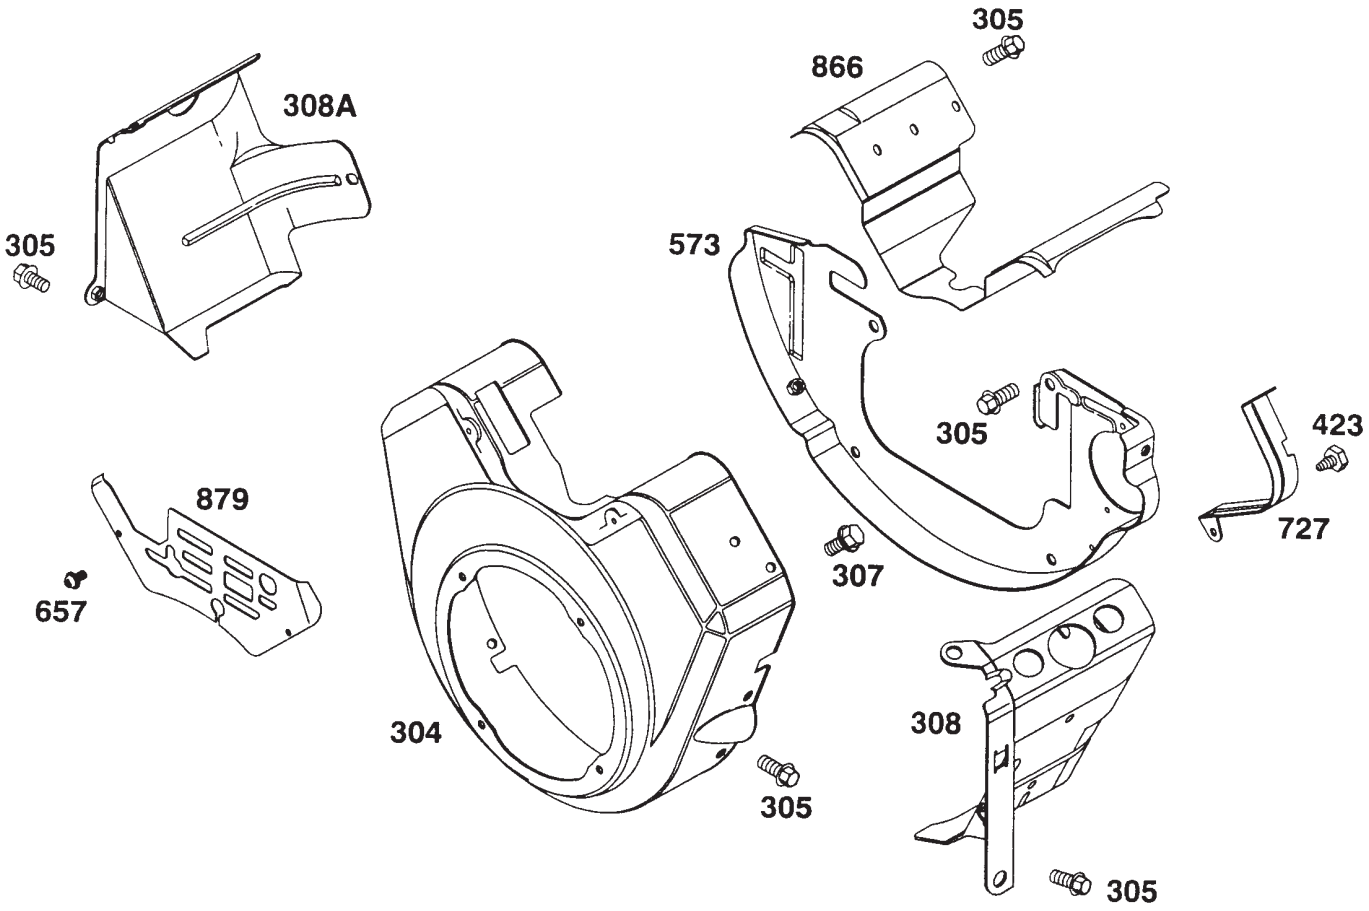

ENGINE BRIGGS & STRATTON MODEL 303447—1233—A1

Ref. No.	Part No.	Description	No. Used
304	807898	Housing — Blower	
305	805406	Screw — Sem	
307	805025	Screw	
308	808309	Cover — Air Guide (Cyl. #1)	
308A	808098	Cover — Air Guide (Cyl. #2)	

Ref. No.	Part No.	Description	No. Used
373	805383	Nut — Hex.	
423	805260	Screw	
573	807663	Back Plate Assembly	
657	805009	Screw	
727	805505	Shield — Starter	
866	805738	Valley Cover — Air Guide	
879	805841	Cover — Carburetor	

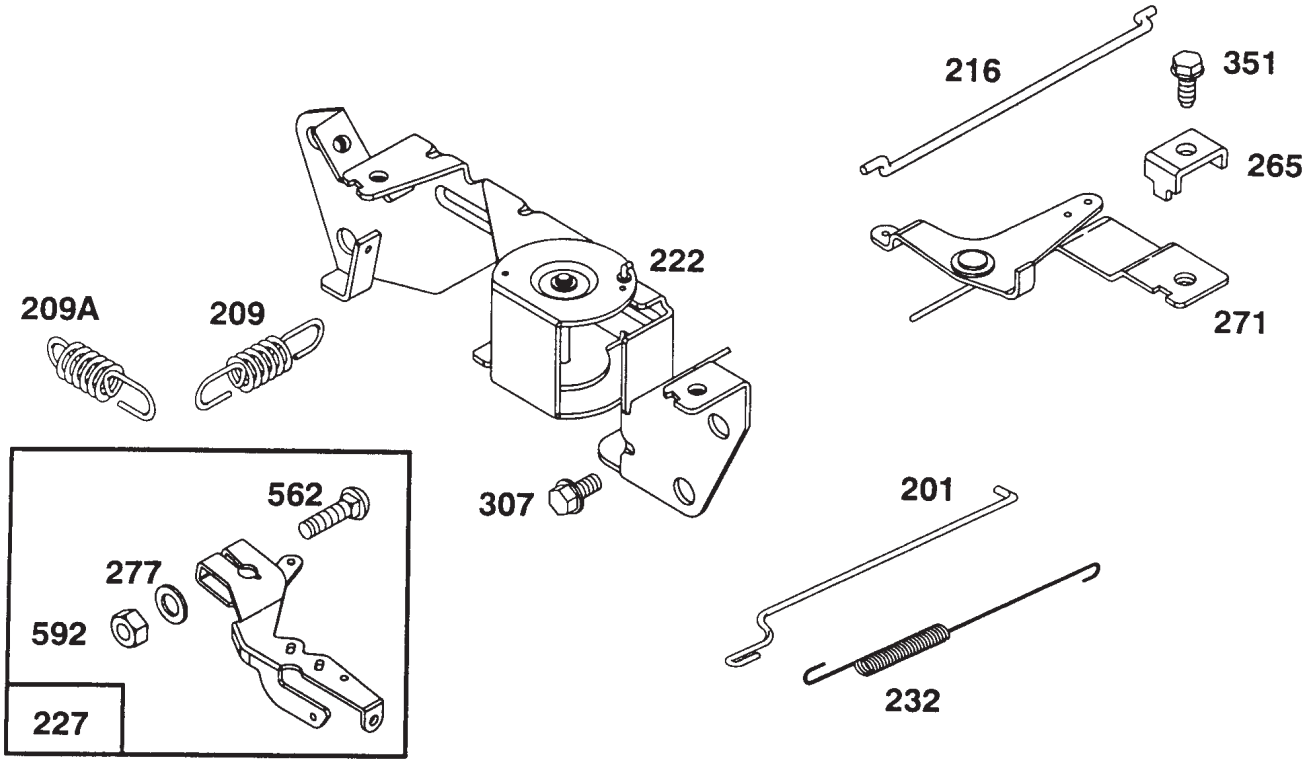

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447—1233—A1

Ref. No.	Part No.	Description	No. Used
201	805480	Link — Governor	
209	805460	Spring — Governor	
209A	805453	Spring — Governor Idle	
216	805439	Link — Choke	
222	807610	Bracket — Governor Control	
227	807528	Lever Assembly — Governor	
232	805465	Spring — Governor Link	

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp — Casing	
271	808145	Bracket — Choke Control	
277	805018	Washer	
307	805025	Screw	
351	805169	Screw — Hex. Head	
562	805381	Bolt — Carriage	
592	805383	Nut — Hex.	

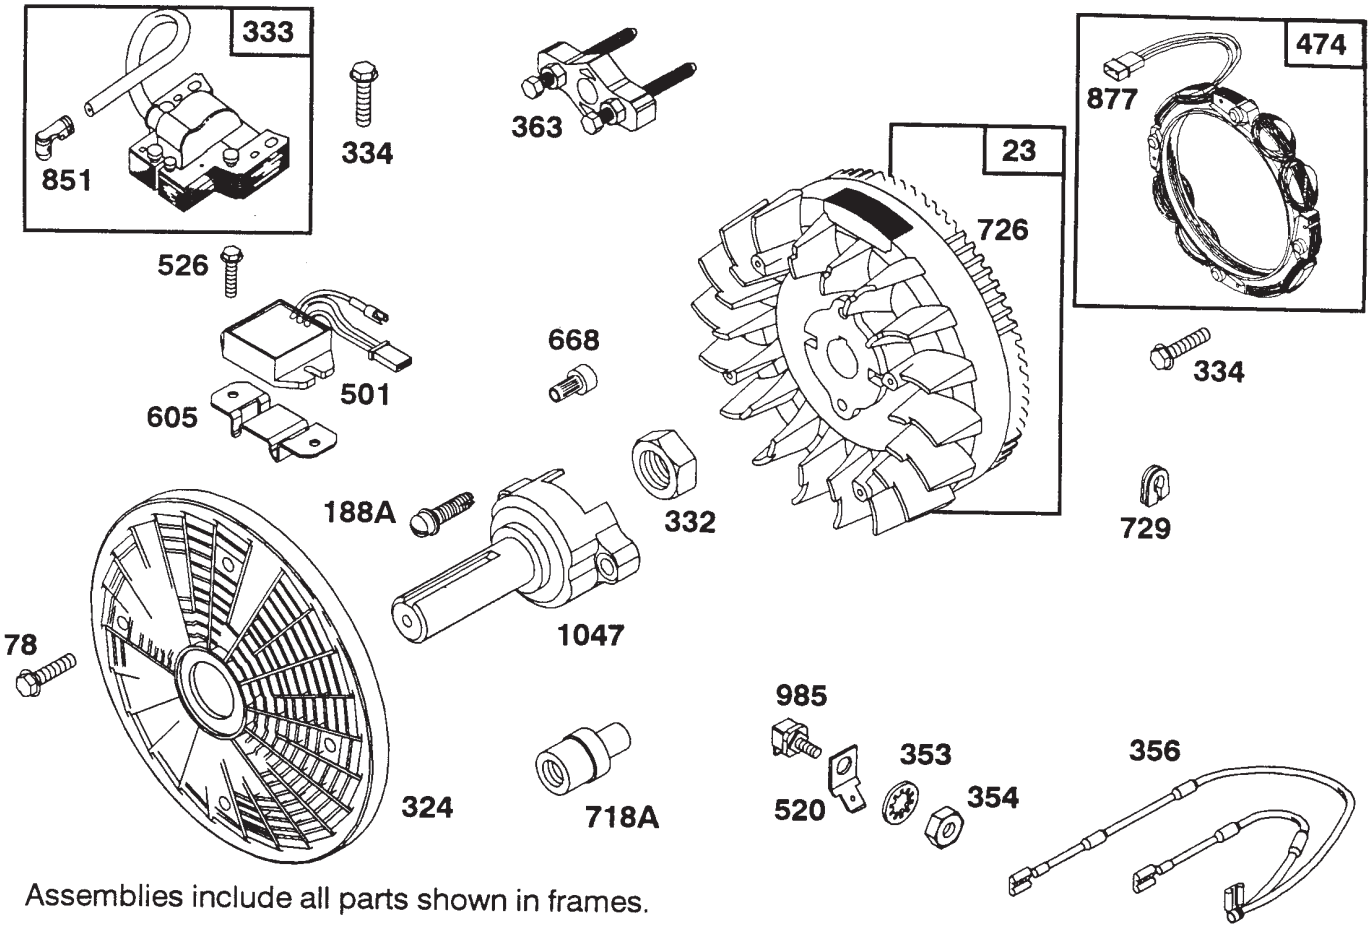

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447—1233—A1

Ref. No.	Part No.	Description	No. Used
23	808128	Flywheel — Magneto	
78	805447	Screw — Hex. Hd.	
188A	93847	Screw — Hex. Hd.	
324	805723	Screen — Rotating	
332	806028	Nut — Hex.	
333	492341	Armature — Magneto	
334	805407	Screw — Hex. Hd.	
353	92791	Washer — Lock (Internal Tooth)	
354	90576	Nut — Hex.	
356	493792	Wire — Assy.	
363	19203	Puller — Flywheel	
474	393295	Stator — Alternator	

Ref. No.	Part No.	Description	No. Used
501	394890	Regulator — Alternator	
520	93722	Terminal — Spade	
526	805448	Screw — Hex. Hd.	
605	222934	Bracket — Starter Solenoid	
668	805402	Spacer	
718A	805613	Pin — Pilot	
726	808162	Gear — Flywheel Ring Includes Mounting Hardware	
729	805641	Grommet	
851	493880	Terminal — Ignition Cable	
877	393537	Wire — Alternator	
985	398525	Insulator	
1047	262949	Shaft — Stub	

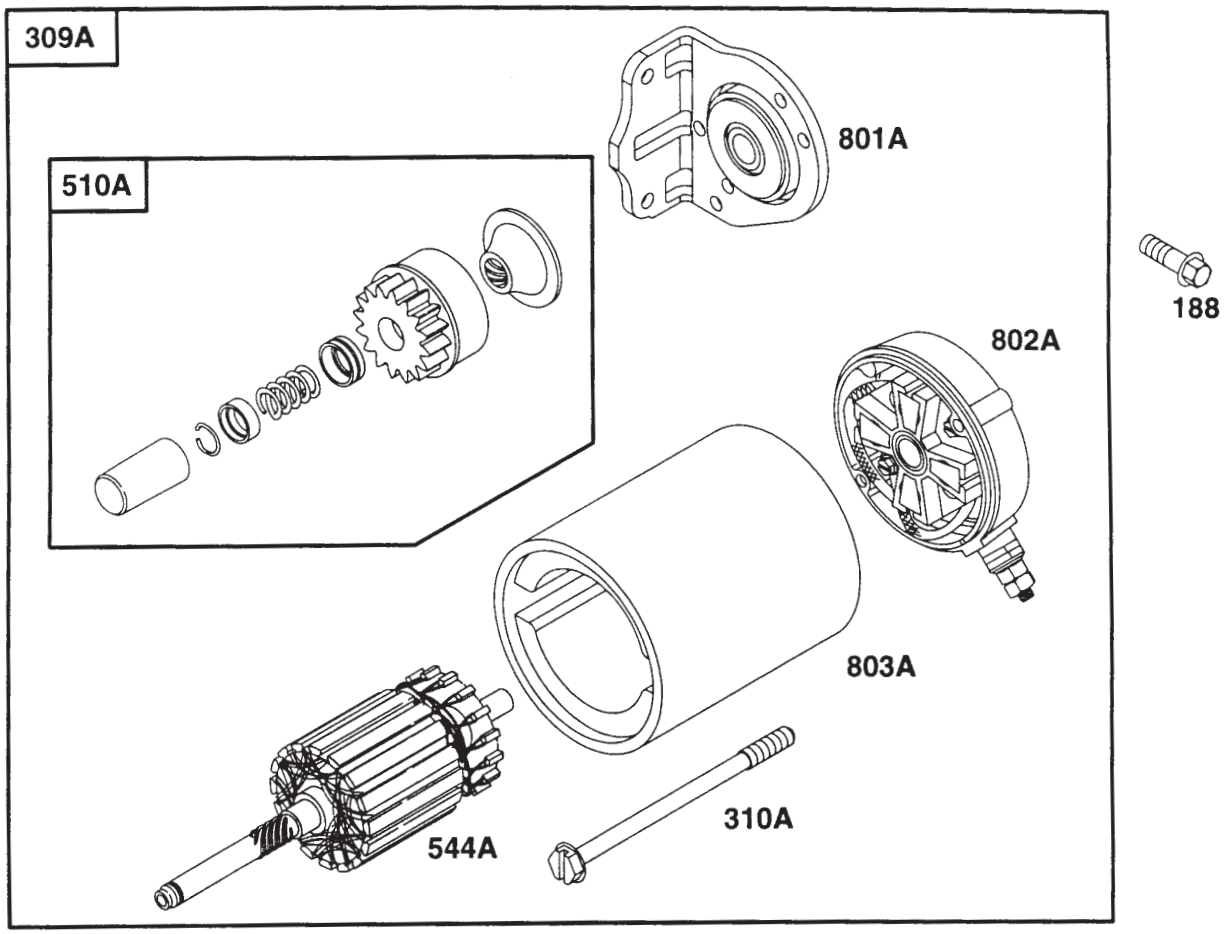

ENGINE BRIGGS & STRATTON MODEL 303447—1233—A1

Ref. No.	Part No.	Description	No. Used
188	805247	Screw — Hex. Head	
309A	808106	Motor — Starter	
310A	496880	Bolt — Thru	
510A	496881	Drive — Starter	
544A	496816	Armature — Starter	

Ref. No.	Part No.	Description	No. Used
801A	496814	Cap — Drive	
802A	496813	Cap — End **NOTE:** Includes 496887 Brush Set.	
803A	496815	Housing — Starter	

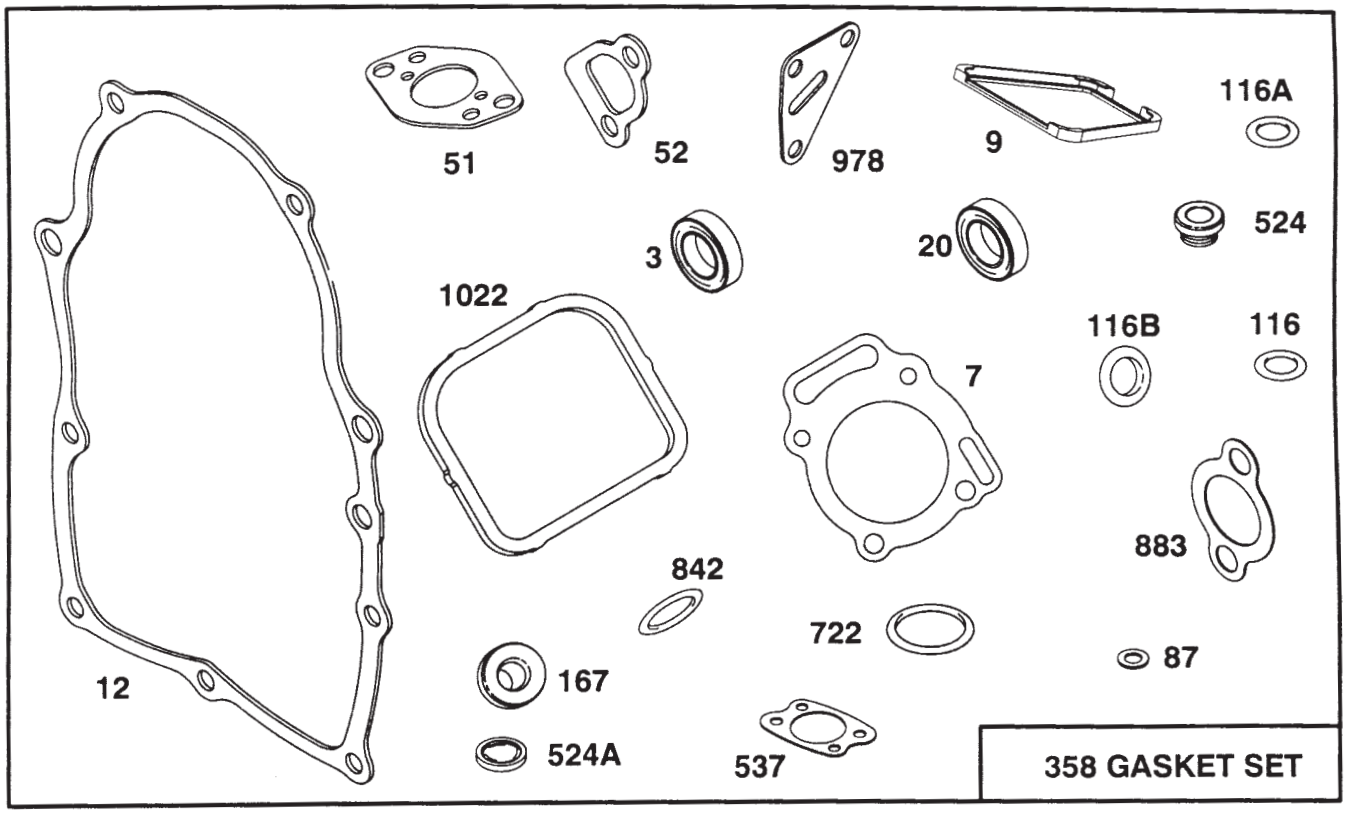

ENGINE BRIGGS & STRATTON MODEL 303447—1233—A1

Ref. No.	Part No.	Description	No. Used
*3	805101	Seal — Oil	
*‡7	807986	Gasket — Cylinder Head	
*9	805379	Gasket — Breather	
*12	805112	Gasket — Crankcase Cover	
*20	805049	Seal — Oil	
*51	805700	Gasket — Carburetor Mtg.	
*‡52	805023	Gasket — Intake Manifold	
*87	805054	Seal — Governor Shaft	
*116	805198	O—Ring (Crankcase Cover)	
*116A	805058	O—Ring (Oil Pump)	
*116B	805316	O—Ring (Pick — Up Tube)	

Ref. No.	Part No.	Description	No. Used
*‡167	805420	Washer — Valve Cover	
358	807989	Gasket Set	
*524	805259	Seal — Filler Tube	
*‡524A	271983	Seal — Filler Plug	
*537	805655	Gasket — Air Cleaner	
*722	805483	Seal — Breather Screw	
*842	805386	O—Ring	
*883	805024	Gasket — Exhaust Manifold	
*978	805250	Gasket — Oil Filter Adapter	
*‡1022	806039	Gasket — Valve Cover	

*Included in Gasket Set — Part No. 807989.
‡Included in Valve Overhaul Kit — Part No. 807990.

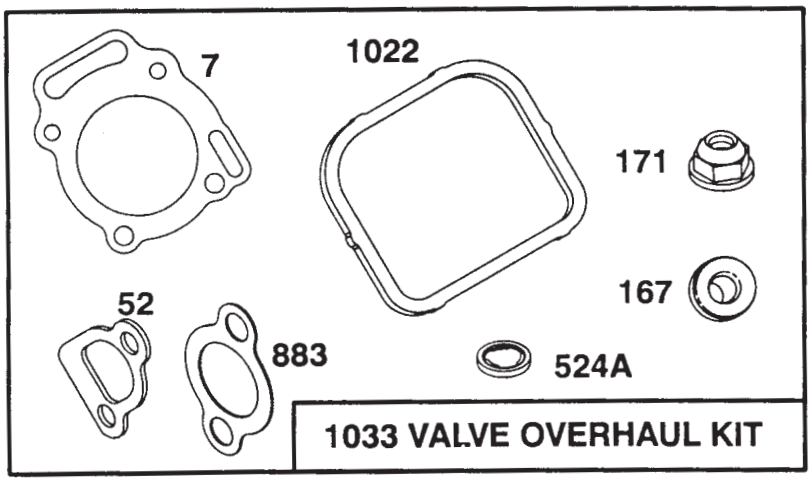

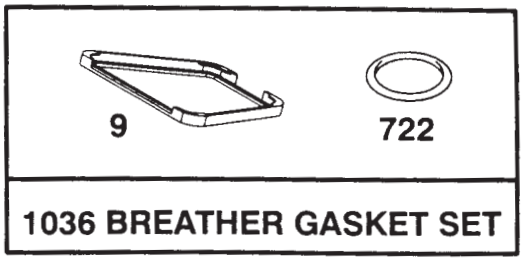

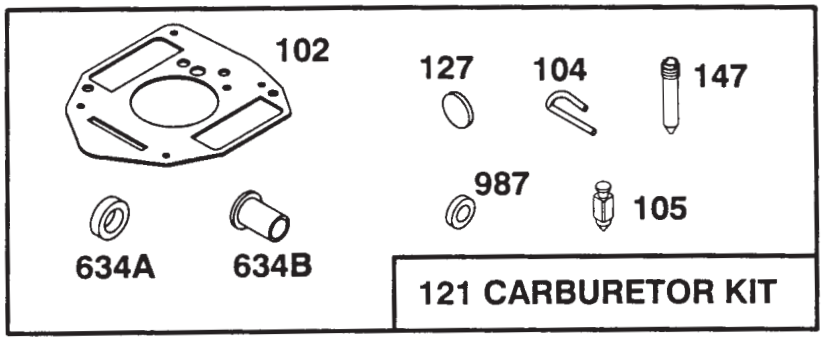

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447—1233—A1

Ref. No.	Part No.	Description	No. Used
*‡7	807986	Gasket — Cylinder Head	
*9	805379	Gasket — Breather	
*‡52	805023	Gasket — Intake Manifold	
†102	805541	Gasket — Carburetor Body	
†104	805545	Pin — Float Hinge	
†105	805547	Valve — Fuel Inlet	
121	807726	Carburetor Kit	
†127	805559	Plug — Welch	
†147	805553	Jet — Slow Speed	
*‡167	805420	Washer — Valve Cover	

Ref. No.	Part No.	Description	No. Used
‡171	805019	Nut — Nylock	
*‡524A	271983	Seal — Filler Plug	
†634A	805557	Collar — Throttle	
†634B	805543	Collar — Choke	
*722	805483	Seal — Breather Screw	
*‡883	805024	Gasket — Exhaust Manifold	
†987	805544	Seal — Shaft	
*‡1022	806039	Gasket — Valve Cover	
1033	807990	Overhaul Kit — Valve	
1036	807688	Gasket Set — Breather	

*Included in Gasket Set — Part No. 807989.
‡Included in Valve Overhaul Kit — Part No. 807990.
† Included in Carburetor Kit — Part No. 807726.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3–3287	Spacer	20	18	6
3–3287	Spacer	10	61	2
3–3287	Spacer – Rubber	25	22	1
3–4685	Washer – Thrust	11	40	2
4–2390	Washer	18	42	1
5–0786	Key	11	39	2
5–0930	Key	18	33	1
5–1686	Rod – Adjusting	23	1	1
5–2490	Bolt – Shoulder	10	60	2
5–7290	Spring	17	16	1
7–3328	Bolt – Battery	17	34	2
10–4850	Spring – Compression	8	5	1
10–6830	Stud – Drive	9	42	8
11–0590	Screw – Cap, Hex. Hd.	23	48	3
11–0590	Screw – HH	19	55	4
11–0590	Screw – Thread Forming	11	13	2
12–3819	Assembly – Damper	3	*	1
13–1509	Arm–Tine	3	4	4
13–2840	Key	18	3	1
13–2840	Key	25	45	1
17–9120	Mount–Wire	25	40	6
18–1720	Ball Joint	24	63	1
19–2530	Switch – Start. Safety N.O.	8	1	2
21–0360	Hex Nut (Metric)	11	45	1
22–6090	Washer – Thrust	9	14	2
22–8330	Plug	26	1	2
22–8340	Spring	26	3	2
22–8350	Ball	26	4	2
22–8360	Pin – Cam	26	6	2
22–8370	Seat–Check Valve	26	5	2
22–8380	Retainer – Spring	26	10	2
22–8410	Spring	26	11	1
22–8420	Spool	26	8	1
22–8480	Snap Ring Spool	26	13	1
22–8490	Snap Ring	26	14	1
22–8500	O–Ring	26	9	2
23–3030	Spacer	26	12	1
27–6390	Gasket	11	22	2
27–7310	Decal – Refueling	20	14	1
28–2480	Washer	9	21	2
28–3860	Battery Cable – Ground	22	5	1
28–4210	Solenoid	19	59	1
28–4250	Switch – Neutral N. C.	8	4	1
28–8080	Boot – Battery	17	24	1
29–6162	Switch	25	7	1
37–5760	Pulley – Idler	7	71	1
37–8300	Pin – Pump, Ring Dowel	13	17	2
37–8340	Seal – Drive Shaft	13	21	1
37–8360	Seal – O–Ring	13	3	1
37–8380	End Plate	13	10	1
37–8400	Pump Reservoir Service Kit	13	16	1
37–8410	Assembly – Valve, Control	13	19	1
37–8420	Assy. – Cap, Reservoir	13	12	1
37–8440	Ring – Retaining	13	11	1
37–8450	Spring – Flow Control	13	20	1
37–8460	Seal Service Kit	13	*	1
38–1830	Pulley	11	50	1
39–7310	O–Ring (Metric)	23	45	1
39–8680	Assembly – Fitting	13	14	1
39–8700	Stud Pump Mounting	13	13	2
39–8710	Seal – O–Ring	13	15	1
40–9690	Interlock Handle & Switch	25	37	2
42–9850	Washer – Lock	18	17	4
43–1950	Valve – Hydraulic Control	23	37	1
44–2680	Shaft – Service Retaining	13	22	1
44–7800	Pump – Steering	11	49	1
44–7810	Ring Service Kit Rotor Vane	13	6	1
44–7820	Spring Pressure Plate	13	9	1
44–7830	Pressure Plate	13	8	1
44–7840	Thrust Plate	13	5	1
44–7850	Ring – Shaft Retaining	13	1	1
44–7860	Retaining Ring Service Kit	13	*	1
46–6560	Bushing	20	8	1
46–8560	Screw – HHST	18	49	4
46–8560	Screw – Hex Hd. Thd. Form	23	30	1
46–8560	Screw – Thread Forming	6	46	2
46–8560	Screw– Cap Hex. Hd.	9	3	17
48–9470	Screw – Cap Hex Hd.	11	14	2
59–2070	Bar – Keeper	6	49	2
59–2080	Chain – Roller	3	12	2
59–2090	Chain – Roller	9	40	2
59–2130	Pulley	6	24	1
59–2140	Pulley	11	36	1
59–2150	Bushing	11	37	1
59–2380	Cap – Dust	9	46	2
59–2390	Sprocket	6	47	2
59–2390	Sprocket – Idler	9	33	2
59–2420	Bushing	9	31	2
59–2430	Nut – Special	9	53	2
59–2500	Block	4	1	8
59–2520	Plate – Wear R.H.	3	34	4
59–2550	Plate – Wear L.H.	3	40	4
59–2570	Spacer – Short	7	74	1
59–2580	Spacer – Long	7	72	1
59–2600	Bushing	6	48	4
59–2610	Shaft	7	55	2
59–2620	Eye Bolt	7	54	4
59–2710	Clip – Retaining	3	6	12
59–2710	Clip – Retaining	6	28	3
59–2770	Rod – Pivot	2	4	2
59–3110	Sprocket	11	38	2
59–3270	Guard – Sprocket L.H.	9	*	1
59–3280	Guard – Sprocket R.H.	9	50	1
59–3410	Head – Bearing	3	23	4
59–3420	Housing	3	42	4
59–3450	Retainer	3	19	4
59–3470	Cushion	3	44	4
59–3480	Cushion	3	16	4
59–3490	Spring – Compression	2	3	4
59–3510	Bushing – Short	3	27	8
59–3520	Bushing – Long	3	25	4
59–3670	Tine – Coring,	4	6	12
59–3690	Tine – Coring,	4	4	12
59–3790	Bushing Assembly	6	26	1
59–4040	Assembly – Hub	9	43	2
59–4100	Brake – Disc	12	58	1
59–4140	Hose – Pressure	23	46	1
59–4150	Hose – Return	23	41	1
59–4160	Hose – Cylinder	11	4	1
59–4200	V–Belt	11	51	1
59–4210	Key	6	27	1
59–4220	Deflector – Kickout	3	39	4
59–4310	Spacer	11	47	1
59–4320	Spacer	17	13	1
59–4320	Spacer	11	16	2
59–4350	Decal – Toro	1	1	1
59–4410	Cable – Brake	25	42	1
59–4440	Decal – Greens Aerator	9	4	2
59–4530	Panel – Handle	25	27	1
59–9460	Guide	9	27	2
59–9470	Pad – Battery	17	35	1
59–9560	Handle – Control	25	34	1
59–9610	Plate – Backup	1	13	2
59–9611	Plate – Backup	1	17	2
59–9620	Cover – Idler	9	35	2
59–9630	Spacer	9	39	2
59–9640	Plate – Handle	7	59	2
59–9650	Retainer – Bearing	9	22	4
59–9730	Bracket – Cable	25	20	1
59–9750	Assembly – Latch	7	60	2
59–9770	Tine – Coring, Long Wear	4	3	12
59–9860	Decal – Brake	25	33	1
59–9870	Decal – Interlock	25	36	2
59–9930	Decal – Danger	1	18	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
60–9760	Nut – Lock	16	2	1
60–9870	Screw – Adjustment	7	64	2
60–9920	Screw (Metric)	11	48	1
60–9930	Frame Gauge	10	67	1
61–9150	Pulley	18	1	1
61–9160	Stud	9	10	2
61–9160	Stud	3	28	8
61–9780	Cap–Hub	9	19	2
62–4600	Tine – Coring,	4	8	12
62–4610	Block	4	7	8
62–4660	Assembly – Cylinder	11	20	1
62–4670	Clevis – Rod	16	16	1
62–4680	Head	16	12	1
62–4690	Piston	16	3	1
62–4700	Rod	16	7	1
62–4720	Seal Repair Kit	16	*	1
62–4740	Timing Rod	3	*	4
63–8360	Key	23	12	2
66–3120	Screw – HH	18	19	4
66–3290	Plate – Guide Shift	11	23	1
66–3360	Arm – Brake Clutch	17	23	1
66–3390	Retainer – Brake Spring	12	61	1
66–3400	Rod – Brake Take–up	12	65	1
66–3420	Bracket – Spring Brake	17	42	1
66–3440	Cross Shaft – Clutch	17	27	1
66–3470	Pulley – Idler	6	3	1
66–3480	Shaft – Idler	6	5	1
66–3560	Guide – Belt	17	12	1
66–3590	Bracket – Drive, Take–up	17	20	1
66–3790	Sprocket	6	18	2
66–3810	Guide – Belt	7	67	1
66–3840	Shaft – Power	6	21	1
66–3920	Bracket – Spring	11	28	1
66–3930	Clevis	11	5	1
66–4030	Assembly – Crank, Long	3	11	2
66–4040	Assembly – Crank ,Short	3	22	2
66–4060	Pin – Idler	1	10	1
66–4070	V–Belt	6	33	1
66–4110	Cover – Controls	1	3	1
66–4130	Cover – Coring Head	1	2	1
66–4150	Spring	12	62	1
66–4160	Spring	18	27	1
66–4160	Spring	24	58	1
66–4180	Spring	17	22	1
66–4210	Pulley – Idler	17	14	1
66–4270	Spring – Extension	6	12	2
66–4280	Bracket – Idler R.H.	6	14	1
66–4320	Bracket – Idler L.H.	6	8	1
66–4340	V–Belt	17	15	1
66–4380	Spacer	6	2	2
66–4400	Guide – Belt	17	8	1
66–4440	Holder – Idler Pin	1	11	1
66–4460	Spring	11	26	1
66–4480	Actuator – Switch	6	41	1
66–4520	Housing – Bearing	17	6	1
66–4530	Bracket – Lockup	10	62	2
66–4590	Transaxle	11	52	1
66–4600	Clevis – Brake	12	71	1
66–4680	Spacer	6	30	1
66–4690	Spacer	6	19	1
66–4710	Decal – Shift Pattern	25	12	1
66–4730	Bearing	17	5	3
66–4750	Plate – Shift	25	13	1
66–4780	Hub & Plate	25	8	1
66–4850	Spring	25	15	1
66–8980	Assy. – Wear Plate, R.H.	3	35	4
66–8990	Assy. – Wear Plate, L.H.	3	36	4
66–9010	Spring – Compression	3	17	4
66–9050	Decal – Shift	18	6	1
66–9070	Guard – Chassis L.H.	9	2	1
66–9080	Keeper – Shift Lever	15	6	1
66–9110	Decal – Start	18	7	1
67–5360	Decal – Danger	10	69	2
67–5360	Decal – Danger	7	88	1
67–7320	Decal – Toro	25	28	1
67–9510	Seal – Dust	24	57	1
68–3110	Tube–Oil	11	31	1
70–1480	Relay	24	60	1
70–9770	Rod–Ram	3	14	4
72–4620	Plunger – Solenoid	24	52	1
72–4640	Turf Guard – L.H.	2	11	1
72–4660	Turf Guard – R.H.	2	9	1
72–4680	Turf Guard – Center	2	10	1
72–4760	O–Ring Seal, Chain	3	15	A/R
72–4860	Bracket – Pump Support	12	56	1
72–8650	Arm – Cross Shaft	17	3	1
72–8690	Shaft – Traction Clutch	23	14	1
72–8710	Handle & Latch	23	10	1
72–8780	Latch – Clutch Solenoid	24	53	1
72–8790	Rod – Solenoid Adjusting	24	67	1
72–8810	Assy. – Handle, Valve	23	32	1
72–8920	Guide – Belt, Traction	17	38	1
72–9030	Cushion – Guard	25	38	2
72–9050	Clip – Control Cover	24	55	1
72–9060	Cushion – Solenoid Stop	23	13	1
72–9070	Pad – Bumper	23	25	1
72–9080	Bracket – Spring	23	51	1
72–9090	Bracket – Spring Latch	24	61	1
72–9100	Frame	7	68	1
72–9110	Brace – Control Panel	23	22	1
72–9130	Pin – Roller Latch	24	70	1
72–9140	Roller – Latch	24	69	2
74–0720	Tube	25	25	1
76–2300	Hose – Cylinder	11	3	1
76–2370	Guard – Chain	7	76	2
76–2590	Brake – Caliper	12	63	1
76–2610	Arm – Brake	17	43	1
76–2620	Bracket	11	8	1
77–5320	Tine – Spiker,	4	2	12
77–5340	Tine – Spiker, 1/4” x 2 1/2”	5	8	28
77–5350	Clamp – Holder, Tine	5	3	8
77–5360	Plate – Holder, Turf	5	1	4
77–5370	Holder – Tine	5	4	4
77–5380	Guard – Turf	5	2	4
80–0180	Lever – Cam	21	12	1
80–0270	Lining	21	8	2
80–0280	Anvil Sub Asm.	21	10	1
80–0290	Kit – Repair, Lining	21	*	1
80–0310	Kit – Service	21	*	1
80–2710	Assembly – Front Axle	9	13	1
80–2830	Housing Switch	8	3	1
80–2840	Plunger – Switch	8	6	1
80–3810	Wire Harness – Coring	22	7	1
80–3820	Bracket – Switch	6	44	1
80–3830	Bolt – Shoulder	3	41	4
80–3890	Arm – Brake	12	64	1
80–3910	Decal – Control	23	21	1
80–3920	Clamp – Boot Solenoid	24	65	1
80–3930	Guard – Switch	7	85	1
80–3960	Solenoid Assembly	24	72	1
80–4020	Bracket – Idler Pulley Pivot	6	53	1
80–4030	Panel – Control	23	16	1
82–8020	Clamp	9	6	2
83–0020	Switch – Starter	23	50	1
84–8480	Sleeve	7	57	2
92–3188	Diode	22	2	1
92–3191	Diode	22	1	1
92–7941	Tine – Open Center,	4	9	12
93–0177	Shaft	9	48	2
93–0307	Nut – Retainer	9	51	2
93–0309	Washer – Tab	9	45	2
93–3101	Cap – Fuel	20	12	1
94–1751	Guard – Pulley	6	9	1
94–3417	Tine – Open Center	4	11	24

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
94–3418	Tine – Open Center,	4	14	12
94–3419	Tine – Coring,	4	5	12
94–3420	Block	4	13	8
94–3421	Block – Outboard	4	10	8
94–3432	Pulley – Engine	18	47	1
94–3433	Wire Harness – Main	22	3	1
94–3435	Tank – Fuel	20	15	1
94–3437	Plate – Mount, Engine	18	51	1
94–3438	Muffler	18	28	1
94–3442	Frame	10	63	1
94–5301	Spark Arrester	19	54	1
94–5310	Decal – Choke/Throttle	18	9	1
94–5313	Asm. – Exhaust Tube	18	18	1
94–5314	Asm. – Exhaust Tube	18	16	1
94–5315	Mount – Muffler	18	24	1
94–5316	Guide – Belt	18	34	1
94–5321	Guard – Muffler	20	4	1
94–5341	Support – Muffler	18	48	1
94–5343	Clamp – Battery	17	30	1
94–5349	Asm. – Wire	17	46	1
94–5349	Battery Cable – Positive	22	6	1
94–6800	Asm. – Wire	18	50	1
94–6800	Asm. – Wire, Positive	22	9	1
94–6802	Rod – Control, Throttle	18	26	1
94–6803	Pipe – Exhaust	18	36	1
94–6804	Nipple – Pipe	18	22	1
94–6805	Asm. – Stand Pipe, Fuel	20	11	1
94–6808	Handle	6	36	1
94–6809	Hose – Fuel	18	8	1
94–6809	Hose – Fuel	20	9	1
94–6810	Bracket – Adjuster, Throttle	18	12	1
94–6812	Shield	19	65	1
94–6813	Guard – Chassis R.H.	9	30	1
94–6814	Kit – 3/8” Open Center Tine	4	*	1
94–6815	Bracket – Front	20	13	1
94–6816	Bracket – Rear	20	21	1
94–6817	Grommet	18	15	1
94–6819	Clamp–R	18	5	1
94–6820	Elbow – Street 45°	18	23	1
94–6821	Clamp – Wire	7	70	1
94–6822	Block – Inboard	4	12	4
94–6823	Kit– 1/4” Open Center Tine	4	*	1
94–6824	Boot – Terminal	19	52	3
94–9108	Wiring Harness – Coring	7	86	1
94–9109	Nut – Hex. Keps	18	20	2
94–9111	Decal – Warning	6	35	1
95–1837	Pin – Groove	21	3	1
95–1841	Bracket – Floating	21	9	1
95–1842	Pin – Adjustment	21	1	1
95–1843	Pin – Actuator	21	6	1
95–1844	Housing – Live Side	21	5	1
95–1845	Plate – Backing	21	7	1
95–1902	Handle	25	19	1
217–60	Wheel	10	64	2
218–461	Nut – Hex	23	9	1
218–462	Screw – Machine	23	28	6
218–573	Fuse – 5 Amp	22	8	1
231–119	Tire	10	65	2
231–126	Tire	9	15	2
232–35	Stem – Valve w/Cap	9	24	4
233–13	Knob	11	27	1
233–13	Knob – With Ring	23	11	2
237–21	O–Ring	11	2	2
237–21	Seal – O–Ring	23	40	2
237–22	O–Ring	23	43	2
237–42	O–Ring	26	2	2
237–42	O–Ring	23	29	2
237–42	O–Ring	12	74	2
237–78	O–Ring	23	38	2
237–143	O–Ring	17	33	2
241–123	Wheel	9	16	2
242–50	Nut – Lug	9	1	8
249–38	Keeper	1	16	2
2412–36	Clamp – Hose	23	42	1
2412–108	Clamp – Hose	20	10	1
2412–108	Clamp – Hose	19	58	1
2412–110	Clamp	19	57	1
2412–131	Clamp–R	17	44	2
2412–133	R–Clamp	25	24	2
251–297	Bearing	6	4	6
251–297	Bearing – Ball	9	34	4
251–312	Bearing	3	5	8
251–312	Bearing	6	20	1
251–313	Bearing	6	31	1
252–105	Bearing – Roller	9	23	4
253–158	Seal – Shaft	9	49	2
253–166	Seal	6	38	1
254–61	Cup – Bearing	9	7	2
254–62	Cone – Bearing	9	9	1
254–70	Cone – Bearing	9	8	1
254–105	Bearing – Roller	9	44	4
256–216	Bushing	17	18	2
256–301	Bushing	25	11	2
256–312	Bushing	24	62	1
256–319	Bushing – Split	7	56	2
2710–16	Chain – Connecting Link	23	34	1
2710–16	Link – Connecting	9	41	2
2710–20	Link – Single Pitch	10	66	2
281–1	Plug – Oil	11	30	1
282–1	Yoke	23	5	1
282–22	Clevis	2	7	4
282–26	Clevis	25	41	1
283–2	Pin – Clevis	23	7	1
283–2	Pin – Clevis	2	8	4
283–2	Pin – Clevis	12	69	1
283–11	Pin – Clevis	25	23	1
283–66	Pin – Clevis	25	14	1
283–66	Pin – Clevis	18	25	1
283–67	Pin – Clevis	12	70	1
283–74	Pin – Clevis	11	9	2
283–89	Pin – Clevis	25	1	1
287–13	Link – Connecting	3	13	2
288–10	Cap – Pipe	18	21	1
2811–10	Elbow – Street	11	32	1
302–5	Fitting – Grease	9	17	3
302–5	Fitting – Grease	18	29	1
302–5	Fitting – Grease	3	43	4
302–10	Grease Fitting	9	47	2
302–18	Fitting – Grease	24	71	1
302–22	Fitting – Grease	8	2	1
321–2	Screw – HH	17	40	1
321–3	Screw – Cap, Hex. Hd.	23	20	1
321–3	Screw – HH	17	36	2
321–4	Screw – Cap, Hex Hd.	9	25	2
321–4	Screw – Cap, Hex. Hd.	11	12	2
321–5	Screw – Cap Hex. Hd.	12	75	2
321–5	Screw – Cap, Hex. Hd.	24	73	1
321–5	Screw – HH	17	37	1
321–13	Screw – Cap, Hex. Hd.	11	34	3
321–14	Screw – Cap Hex. Hd.	23	24	4
321–33	Screw – Cap, Hex. Hd.	7	78	2
321–43	Screw – Cap, Hex. Hd.	6	11	2
322–2	Screw – Cap Hex Hd.	1	4	1
322–4	Screw – Cap Hex. Hd.	25	48	4
322–5	Screw – Cap, Hex. Hd.	11	43	4
322–7	Screw – Cap, Hex. Hd.	6	32	3
322–11	Screw – HH	19	53	4
322–12	Screw – HH	20	16	3
322–26	Screw – Cap, Hex. Hd.	23	19	2
323–4	Screw – Cap, Hex. Hd.	7	66	2
323–4	Screw – HH	5	5	16
323–4	Screw – HH	17	11	4
323–5	Screw – Cap, Hex. Hd.	11	41	2
323–6	Screw – Cap Hex Hd.	3	37	8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
323–6	Screw – Cap, Hex. Hd.	11	6	3
323–6	Screw – Cap, Hex. Hd.	6	6	2
323–6	Screw – HH	20	1	2
323–7	Screw – Cap Hex. Hd.	7	87	1
323–7	Screw – Cap, Hex. Hd.	24	56	1
323–10	Screw – Cap, Hex. Hd.	11	54	4
323–11	Screw – Cap Hex Hd.	3	38	8
323–12	Screw – HH	17	19	1
323–20	Screw – Cap, Hex. Hd.	6	52	2
323–25	Screw – Cap, Hex. Hd.	6	40	1
324–4	Screw – HH	18	32	1
324–10	Screw – HH	18	35	2
325–13	Screw – Cap Hex. Hd.	9	37	2
329–6	Screw – HH	18	14	1
3210–3	Screw – HH	18	38	1
3211–10	Screw – Cap Hex. Hd.	21	4	2
3211–12	Screw – HH	18	43	1
3211–12	Screw – Cap Hex Hd.	2	1	4
3217–5	Nut – Hex	23	36	4
3217–5	Nut – Hex.	17	31	2
3217–7	Nut	11	53	4
3217–9	Nut–Hex	3	32	8
3217–26	Nut – Jam	6	43	1
3218–1	Nut – Jam	6	10	2
3218–2	Nut – Jam	1	5	1
3218–2	Nut – Jam	17	26	1
3218–3	Nut – Jam	11	17	1
3218–5	Nut – Jam	7	63	2
3218–6	Nut – Jam	3	24	4
3218–13	Nut – Jam	19	61	2
3219–1	Nut – Hex.	18	13	1
3219–1	Nut – Hex.	12	60	3
3219–3	Nut	2	6	4
3219–14	Nut – Hex.	19	62	2
3220–1	Nut – Jam	12	59	2
3220–3	Nut – Jam	23	4	1
3220–4	Nut – Jam	21	2	1
3220–7	Nut – Jam	16	15	1
3220–7	Nut – Jam	9	18	2
3242–9	Screw – Set, Sq. Head	17	25	1
3243–9	Screw – Set, Sq. Hd.	11	55	1
3245–2	Screw – Set	18	2	2
3245–2	Screw – Set	6	25	1
3245–33	Screw – Set	12	57	2
3247–2	Screw – Set	11	42	4
3247–2	Screw – Set	25	43	1
3252–3	Screw – Machine	25	35	1
3253–3	Washer – Lock	20	6	1
3253–3	Washer – Lock	11	35	3
3253–3	Washer – Lock	23	35	4
3253–3	Washer – Lock	17	41	1
3253–4	Washer – Lock	6	34	3
3253–6	Washer – Lock	11	15	3
3253–6	Washer – Lock	18	31	2
3253–7	Washer – Lock	5	7	16
3253–7	Washer – Lock	3	31	8
3253–7	Washer – Lock	9	38	2
3253–12	Washer – Lock	7	80	2
3253–15	Washer – Lock	23	27	6
3253–21	Washer – Lock	20	2	2
3253–21	Washer – Lock	5	6	16
3253–21	Washer – Lock	11	7	8
3253–21	Washer – Lock	3	7	52
3253–21	Washer – Lock	6	7	9
3253–21	Washer – Lock	17	10	1
3253–21	Washer – Lock	18	44	2
3253–21	Washer – Lock	23	49	4
3253–33	Washer – Lock	18	39	1
3254–1	Washer – Lock	19	63	2
3254–2	Washer – Lock	19	60	2
3254–5	Washer – Lock, Int. Tooth	23	8	1
3254–8	Washer – Lock, Int. Tooth	17	32	3
3254–8	Washer – Lock, Int. Tooth	24	59	1
3254–9	Washer – Lock, Int. Tooth	18	10	2
3256–2	Washer – Flat	20	19	3
3256–2	Washer – Flat	17	47	2
3256–4	Washer – Flat	20	3	2
3256–4	Washer – Flat	2	2	8
3256–4	Washer – Flat	18	41	1
3256–6	Washer – Flat	18	46	1
3256–14	Washer – Flat	25	32	2
3256–21	Washer – Flat	23	26	8
3256–22	Washer – Flat	20	7	1
3256–22	Washer – Flat	9	26	2
3256–22	Washer – Flat	17	29	3
3256–22	Washer – Flat	12	73	1
3256–23	Washer – Flat	18	40	1
3256–23	Washer – Flat	25	47	4
3256–24	Washer – Flat	17	9	3
3256–24	Washer – Flat	6	39	4
3256–24	Washer – Flat	18	45	1
3256–25	Washer – Flat	11	46	1
3256–26	Washer – Flat	2	12	6
3256–26	Washer – Flat	23	31	1
3256–26	Washer – Flat	9	36	2
3256–26	Washer – Flat	6	51	4
3256–44	Washer – Flat	3	2	8
3256–44	Washer – Flat	6	17	2
3256–53	Washer – Flat	25	10	2
3256–57	Washer – Flat	20	17	4
3256–61	Washer – Flat	25	30	2
3256–69	Washer – Flat	17	4	11
3257–5	Key	11	33	2
3269–3	Rivet – Pop	3	33	24
3269–4	Rivet – Pop	1	15	4
3269–4	Rivet – Pop	7	62	4
3269–8	Rivet – Pop	1	7	4
3272–1	Pin – Cotter	18	30	1
3272–4	Pin – Cotter	12	72	1
3272–6	Pin – Cotter	17	2	1
3272–6	Pin – Cotter	2	5	8
3272–6	Pin – Cotter	23	6	1
3272–6	Pin – Cotter	25	16	1
3272–10	Pin – Cotter	12	68	1
3272–12	Pin – Cotter	11	18	2
3272–13	Pin – Cotter	9	20	4
3274–7	Screw – Cap, Socket Hd.	6	29	3
3274–7	Screw – Hex Socket Hd.	3	10	12
3274–26	Screw – Socket Hd.	15	78	3
3274–26	Screw – Socket Hd.	11	25	3
3274–50	Screw – Cap, Socket Hd.	6	23	4
3274–50	Screw – Hex Socket Hd.	3	8	24
3274–84	Screw – HSH	20	5	1
3289–4	Screw – Flat Hd. Hex. Soc.	7	79	2
3290–93	Screw – Pan Head	18	11	2
3290–126	Screw – Hex Washer Hd.	23	47	1
3290–224	Washer – Lock, Pyramidal	7	73	2
3290–224	Washer – Pyramidal	11	29	1
3290–224	Washer – Pyramidal	3	45	4
3290–238	Washer – Pyramidal	11	44	4
3290–355	Pin – Hair, Cotter	1	12	1
3290–359	Screw – Machine, Hex. Hd.	6	13	2
3290–360	Screw – Hex. Head	6	42	1
3290–378	Tie – Cable	7	84	1
3290–379	Tie – Cable	24	*	2
3290–379	Tie – Cable	25	18	3
3290–379	Tie – Cable	11	19	1
3290–381	Tie – Cable	24	75	2
3290–381	Tie – Cable	25	17	5
3290–418	Nut – Push On	25	21	1
3290–418	Nut – Push On	24	64	1
3296–9	Nut – Lock	25	9	2
3296–12	Nut – Hex.	25	31	1
3296–12	Nut – Lock	23	23	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3296–12	Nut – Lock	6	45	2
3296–13	Nut – Lock	24	66	1
3296–15	Nut – Lock	9	52	2
3296–23	Nut – Lock	6	50	8
3296–29	Nut – Lock	20	20	3
3296–29	Nut – Lock	25	46	4
3296–29	Nut – Lock	19	56	4
3296–39	Nut – Lock	17	17	1
3296–42	Nut – Lock	11	11	3
3296–42	Nut – Lock	17	21	1
3296–42	Nut – Lock	10	54	2
3296–42	Nut – Lock	24	74	1
3296–42	Nut – Lock	7	77	2
3296–45	Nut – Lock	9	5	2
3296–59	Nut – Lock	7	65	2
3296–67	Nut – Hex	3	1	8
3296–67	Nut – Lock	6	16	2
3296–68	Nut – Lock	9	11	1
32103–12	Nut – Wing	17	28	2
32104–17	Screw – HHST	17	39	1
32104–17	Screw – Hex Hd. Self Tap.	25	39	2
32105–8	Screw – Washer Head	7	81	2
32105–17	Screw – Pan Hd. Machine	25	6	2
32111–8	Cap & Locknut	1	6	1
32111–8	Nut – Lock, Cap	23	15	2
32120–11	Ring – Retaining	6	1	6
32120–11	Ring – Retaining	9	32	4
32120–22	Ring – Retaining	3	3	16
32120–65	Ring – Retaining	16	14	1
32121–16	Pin – Roll	17	1	3
32121–20	Pin – Roll	11	21	1
32121–23	Pin – Roll	23	3	1
32121–49	Pin – Roll	25	44	1
32121–90	Pin – Roll	24	68	2
32128–19	Nut – Lock, Flange Hd.	7	69	3
32128–33	Nut – Flange	7	82	2
32128–33	Nut – Lock	23	18	1
32136–5	Nut – Hex. Slotted	10	68	2
32140–29	Screw – Washer Hd.	7	61	4
32144–1	Screw – HHST	17	45	2
32144–4	Screw – HHST	19	64	2
32144–57	Screw – HHST	17	48	2
32144–64	Screw – Hex. Hd. Self Tap	25	29	6
32144–73	Screw – Hex. Washer Head	7	83	1
32144–107	Screw – HHST	18	37	4
32144–112	Screw – Backing Plate	23	2	1
32151–54	Ring – Retaining	8	7	1
32151–75	Ring – Retaining	3	20	4
32151–77	Ring – Retaining	7	58	2
32153–2	Nut – Lock	6	15	2
32153–2	Nut – Lock	24	54	1
32153–2	Nut–Lock	3	26	4
32153–5	Nut – Lock	23	33	1
32153–11	Nut – Lock	21	11	2
340–77	Fitting – 90°	23	44	2
340–82	Fitting	11	1	2
340–92	Fitting – Straight	23	39	2

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Greens Aerator traction unit and coring head each have two identification numbers: a model number and a serial number. The two numbers are stamped on a plate which is riveted to each frame member. In any correspondence concerning the Greens Aerator, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the machine.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

TABLE OF CONTENTS

Description	Page
Cover Assembly	1
Turf Guard Assembly	2
Tine Arm & Crank Assembly	3
Tine Block & Tine Selection	4
Kit – Spiker 1/4" Model No. 09153 (Optional)	5
Coring Head Drive Assembly	6–7
Switch Assembly – Coring Head	8
Chassis Assembly	9–10
Transaxle, Brake & Pump Assembly	11–12
Pump Assembly No. 44–7800	13
Transaxle Assembly Model No. 2361A	14–15
Hydraulic Cylinder Assembly No. 62–4660	16
Battery & Drive Take–up Assembly	17
Engine, Pulley & Muffler Assembly	18–19
Muffler Guard & Fuel Tank Assembly	20
Brake Caliper Assembly No. 76–2590	21
Electrical Schematic	22
Control Panel Assembly	23–24
Handle Assembly	25
Control Valve No. 43–1950	26
Engine Briggs & Stratton Model 303447 Type 1233–A1	27–37
TORO Part Number Index	38–42

3318–128 REV A

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.