FORM NO. 3318–388 REV B

TORO®

MODEL NO. 04060–60001 & UP
MODEL NO. 04060TE–60001 & UP

PARTS CATALOG

GREENSMASTER® 1600
Traction Unit & Cutting Unit

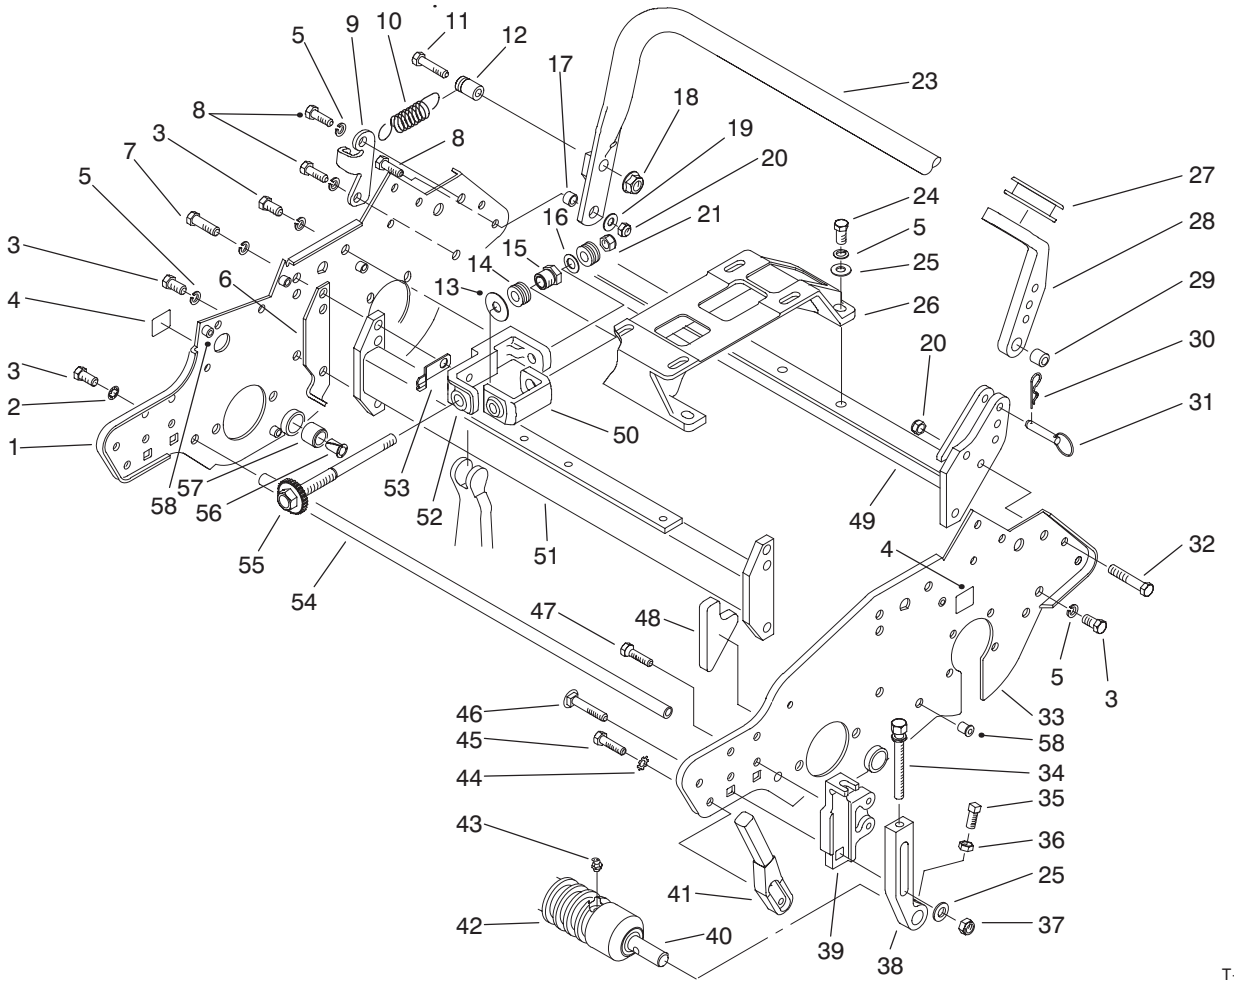

T–2398–2

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94–9004	Plate – Side, RH (Incl. Ref. #4 & 58)	1
2	3254–6	Washer – Lock, Int. Tooth	2
3	323–4	Screw – HH	10
4	88–8950	Decal – Warning, Belt	3
4	93–9356	Decal – Warning, Belt (Europe)	3
4	93–9389	Decal – Warning, Belt (Japan)	3
5	3253–21	Washer – Lock	16
6	88–7100	Spacer – RH	1
*	88–7090	Spacer – LH	1
7	323–6	Screw – HH	2
8	322–5	Screw – HH	2
9	65–7890	Bracket	1
10	65–7880	Spring – Extension	1
11	322–10	Screw – HH	1
12	65–7900	Retainer – Spring	1
13	94–5859	Washer – Hardened	2
14	93–9043	Washer – Belleville	32
15	94–5855	Nut – Spring	2
16	94–5858	Washer	2
17	65–7910	Spacer	2
18	32128–25	Nut – Flange	1
19	3256–2	Washer – Flat	3
20	3296–29	Nut – Lock	4
21	3296–48	Nut – Lock	2
22	93–7252	Decal – CE Mark (Europe)	1
22	93–7842	Decal – Blank (Japan)	1
23	93–9019	Kickstand	1
24	323–5	Screw – HH	6
25	3256–24	Washer – Flat	6
26	88–7670	Base – Engine	1
27	65–7510	Grommet – Handle	2

*Not Illustrated

© The TORO Company – 1996
All Rights Reserved

TPS

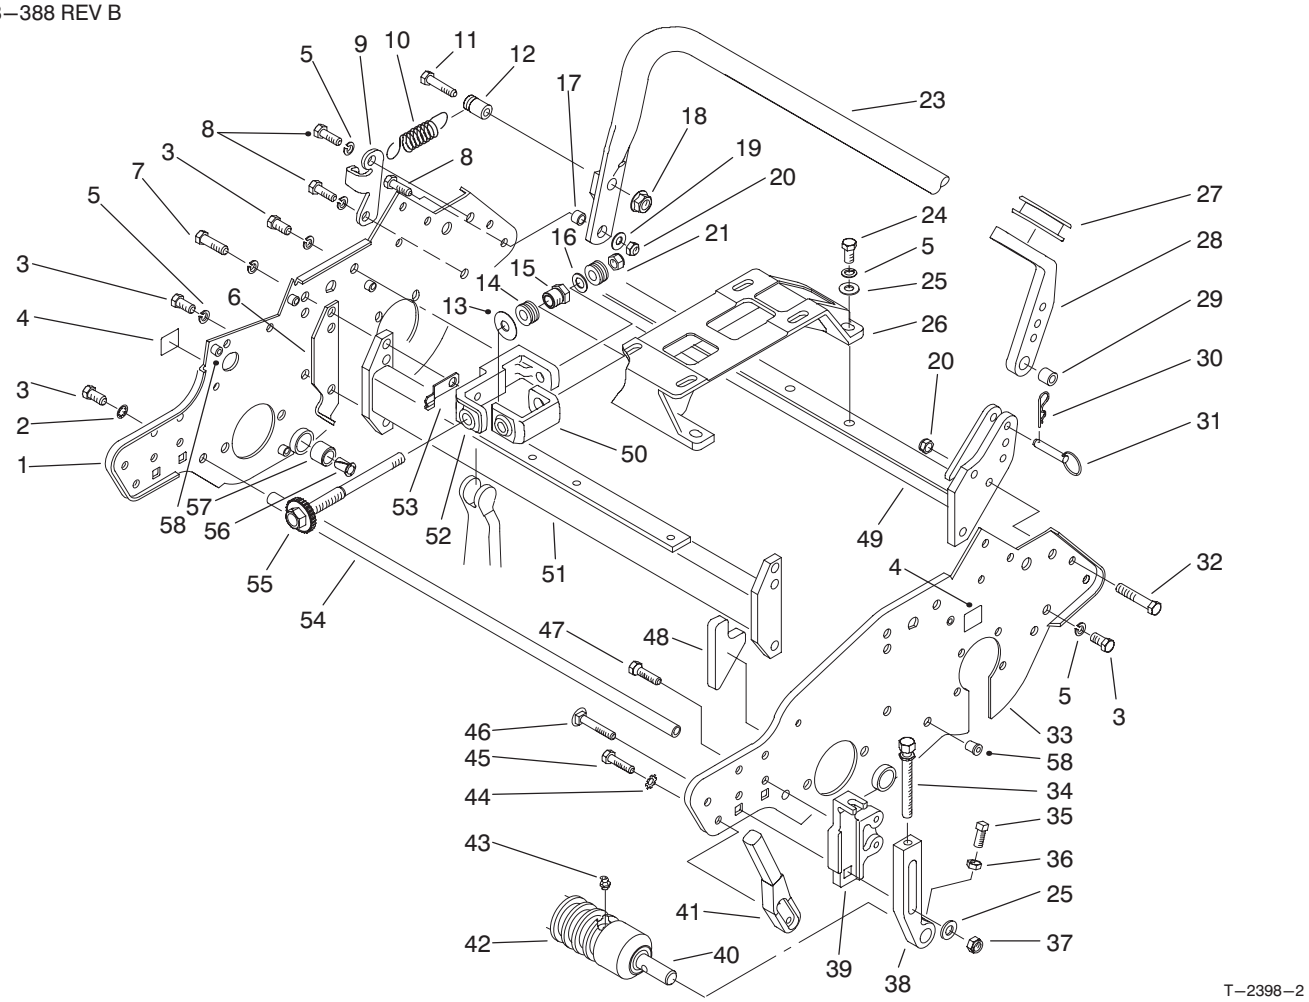

FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
28	93–6038	Arm – Handle, LH	1
*	93–6037	Arm – Handle, RH	1
29	93–6024	Bushing – Handle, Support	2
30	3290–467	Pin – Cotter, Hair	2
31	93–6029	Pin – Ring	2
32	322–9	Screw – HH	2
33	94–9005	Plate – Side, LH (Incl. Ref. #4 & 58))	1
34	93–6051	Screw – Height–of–Cut	2
35	3242–4	Screw – Set	2
36	3218–2	Nut – Hex. Jam	2
37	3296–39	Nut – Lock	2
38	93–6090	Arm – Height–of–Cut	2
39	93–6049	Bracket – HOC, LH	1
*	93–6048	Bracket – HOC, RH	1
40	52–3180	Bearing	2
41	93–9018	Rod – Basket, LH	1
*	93–9017	Rod – Basket, RH	1

Ref. No.	Part No.	Description	No. Used
42	93–9039	Asm. – Roller, Wiehle (Incl. Ref. #40 & 43)	1
43	302–5	Fitting – Grease	2
44	3255–8	Washer – Lock	4
45	322–2	Screw – HH	4
46	3231–5	Screw – Carriage	2
47	92–8914	Bolt – Tapered Face	4
48	93–6064	Seal – Grass Catcher	1
49	93–9026	Frame – Rear	1
50	94–5853	Channel – Adjuster	2
51	93–9032	Frame – Front	1
52	94–5854	Adjuster – Frame, Bedbar	2
53	94–5856	Spring – Detent	2
54	94–5867	Rod – Support, Frame	1
55	94–5873	Asm. – Screw	2
56	52–2890	Bushing – Steering Links	2
57	63–9510	Asm. – Bushing	2
58	32148–6	Insert – Threaded	9

*Not Illustrated

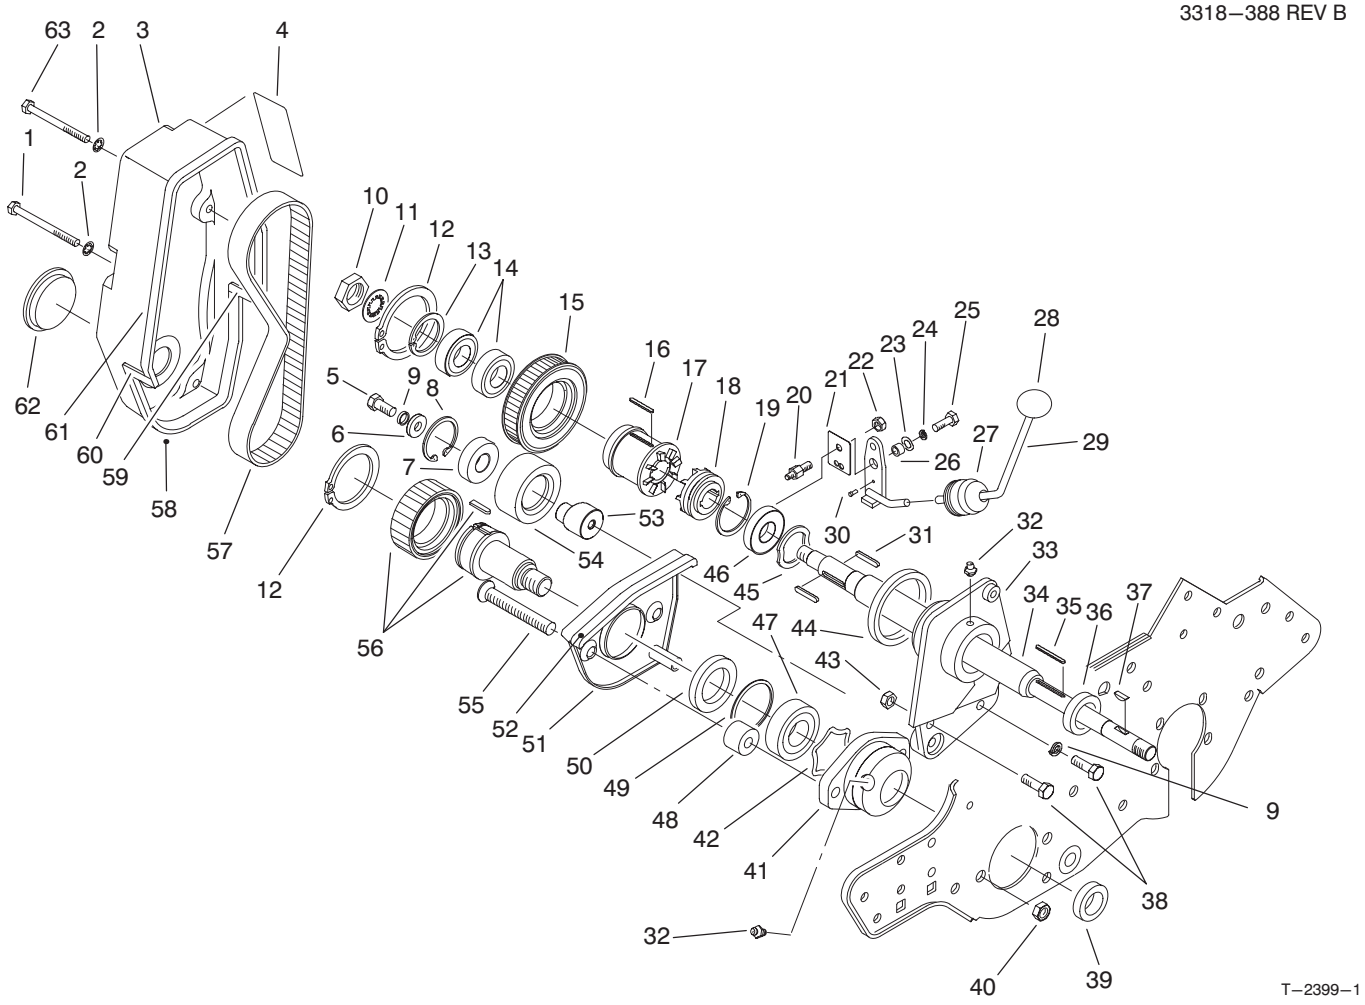

REEL DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321–20	Screw – HH	3
2	3254–8	Washer – Lock, Int. Tooth	4
3	88–7700	Cover – Reel Drive	1
4	65–7660	Decal – Reel Engagement	1
4	93–7346	Decal – Reel Engagement (Europe)	1
4	92–4817	Decal – Reel Engagement (Japan)	1
5	322–3	Screw – HH	1
6	88–7200	Washer – Flat	1
7	38–7820	Bearing – Ball	1
8	32120–42	Ring – Retaining	1
9	3253–4	Washer – Lock	2
10	3220–5	Nut – Hex. Jam	1
11	3254–4	Washer – Lock, Int. Tooth	1
12	32151–95	Ring – Retaining	2
13	32151–89	Ring – Retaining	1
14	251–336	Bearing – Ball	2
15	88–7830	Asm. – Clutch & Pulley (Incl. Ref. #12–14 & 16–17)	1
16	65–6980	Key	1
17	65–6950	Clutch – Jaw Driven	1
18	65–6940	Clutch – Jaw Driver	1
19	32120–11	Ring – Retaining	1
20	93–9014	Pin – Actuator, Clutch	1
21	65–6290	Spring – Detent, Clutch	1

Ref. No.	Part No.	Description	No. Used
22	3296–42	Nut – Lock	1
23	3290–414	Washer – Belleville	1
24	3253–3	Washer – Lock	1
25	321–4	Screw – HH	1
26	88–7860	Spacer	1
27	65–8960	Boot – Clutch	1
28	233–69	Knob	1
29	88–7170	Lever – Clutch	1
30	95–5731	Screw – Drive	1
31	88–7150	Key – Square	2
32	302–5	Fitting – Grease	2
33	92–8013	Housing – Clutch	1
34	94–5872	Shaft – Power	1
35	65–6850	Key	1
36	253–118	Seal	1
37	3257–32	Key – Woodruff	1
38	322–5	Screw – HH	3
39	253–96	Seal	1
40	3296–39	Nut – Lock	2
41	65–8640	Housing – Bearing	1
42	3290–485	Washer – Wave	1
43	3296–29	Nut – Lock	2
44	65–6970	Seal – Felt	1
45	88–7720	Washer – Wave	1
46	251–204	Bearing – Ball	1
47	251–342	Bearing	1

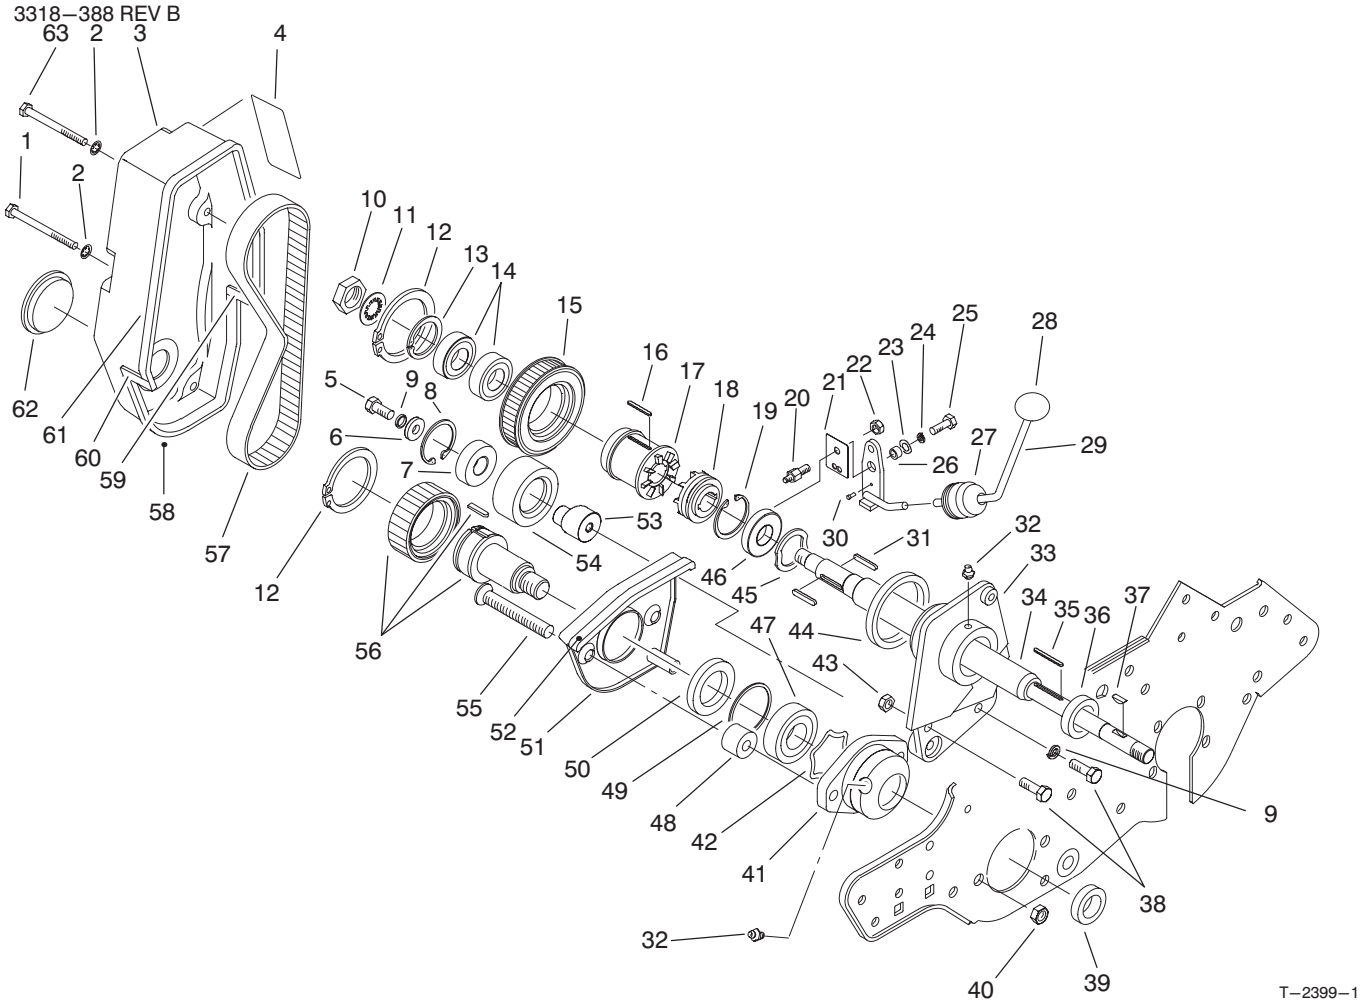

REEL DRIVE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
48	65–8290	Standoff – Cover	2
49	32151–92	Ring – Retaining	1
50	253–163	Seal	1
51	65–7190	Cover – Arm, Groomer	1
52	65–7131	Trim – Cover, Arm	1
53	88–7190	Spacer – Support, Pulley	1
54	88–7850	Asm. – Pulley, Idler (Incl. Ref. #5–9 & 53)	1
55	3289–23	Screw – Flat Head	2

Ref. No.	Part No.	Description	No. Used
56	88–7840	Asm. – Pulley & Drive	1
57	65–6200	Belt – Drive, Reel	1
58	88–7800	Seal – Strip, Lower	1
59	88–7780	Seal – Strip, Rear	1
60	88–7770	Seal – Strip, Front	1
61	88–7790	Seal – Strip, Upper	1
62	237–160	Plug	1
63	321–23	Screw – HH	1

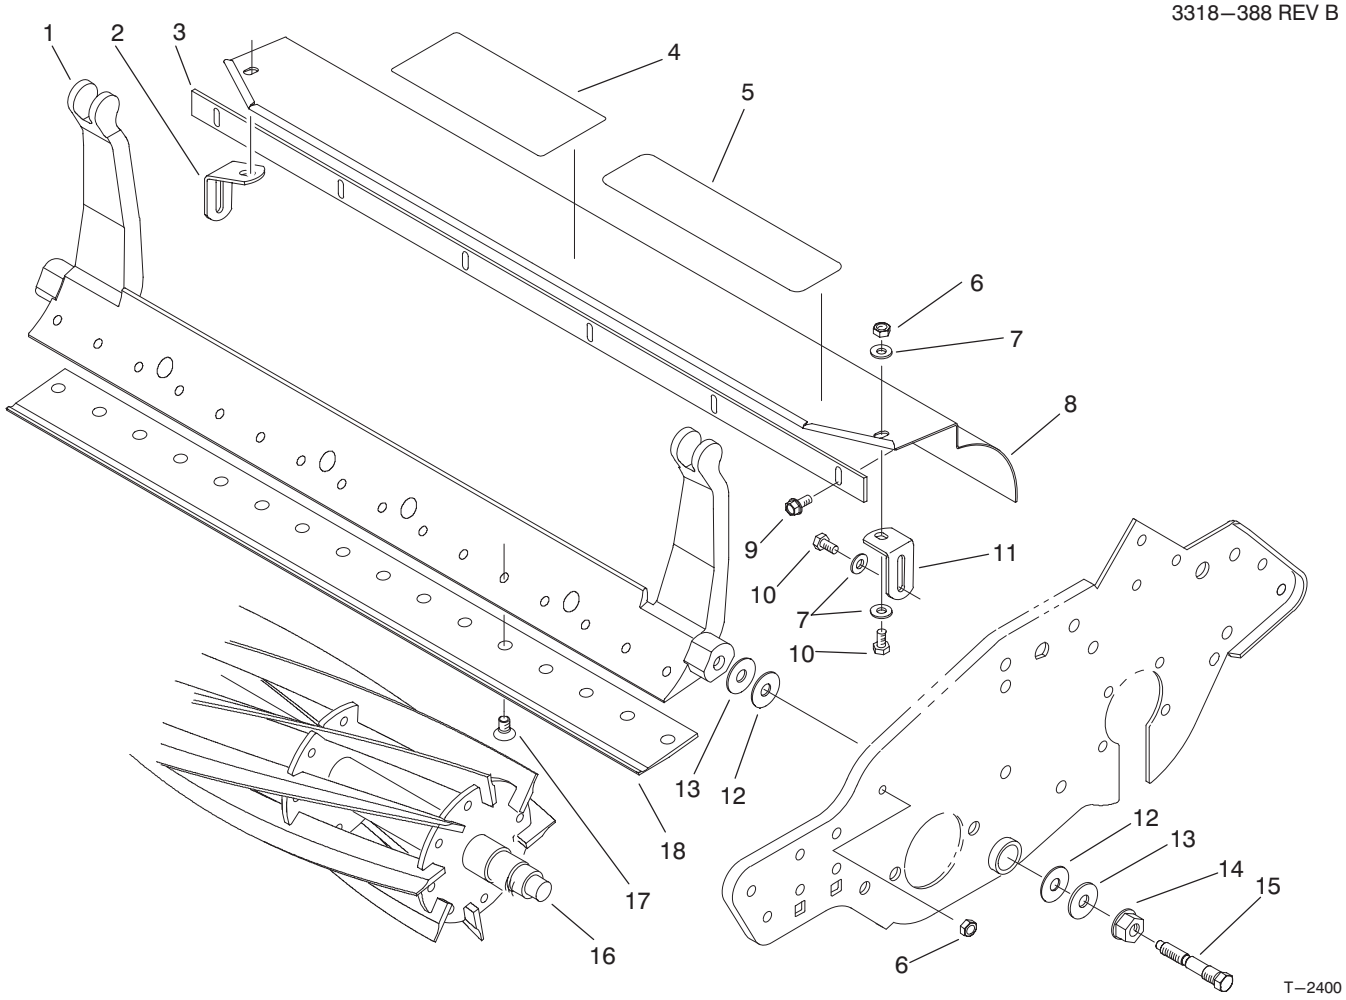

REEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93—9049	Bedbar	1
2	65—6460	Bracket — Shield RH	1
3	94—5879	Bar — Cutoff	1
4	93—6098	Decal — Service	1
4	93—7285	Decal — Service (Danish)	1
4	93—7286	Decal — Service (Dutch)	1
4	93—7287	Decal — Service (Finnish)	1
4	93—7288	Decal — Service (Italian)	1
4	93—7289	Decal — Service (Norwegian)	1
4	93—7290	Decal — Service (Portuguese)	1
4	93—7291	Decal — Service (Swedish)	1
4	93—9391	Decal — Service (French)	1
4	93—9392	Decal — Service (Spanish)	1
4	93—9393	Decal — Service (German)	1
4	93—9394	Decal — Service (Japan)	1
5	62—5070	Decal — Warning	1

Ref. No.	Part No.	Description	No. Used
5	93—8064	Decal — Warning (Europe)	1
5	84—6560	Decal — Warning (Japan)	1
6	3296—42	Nut — Lock	4
7	3256—22	Washer — Flat	6
8	94—9009	Asm. — Grass Shield (Incl. Ref. #4 & 5)	1
9	32144—73	Screw — HWHTF	6
10	321—3	Screw — HH	4
11	65—6450	Bracket — Shield LH	1
12	52—2900	Washer — Poly	4
13	52—2860	Washer	4
14	32128—48	Nut — Flange	2
15	65—6270	Bolt — Bedbar	2
16	93—9029	Reel — 8 Blade	1
17	57—4910	Screw — Special	16
18	93—9015	Bedknife — 1/8”	1
*	94—5885	Bedknife — Tournament	1

*Not Illustrated

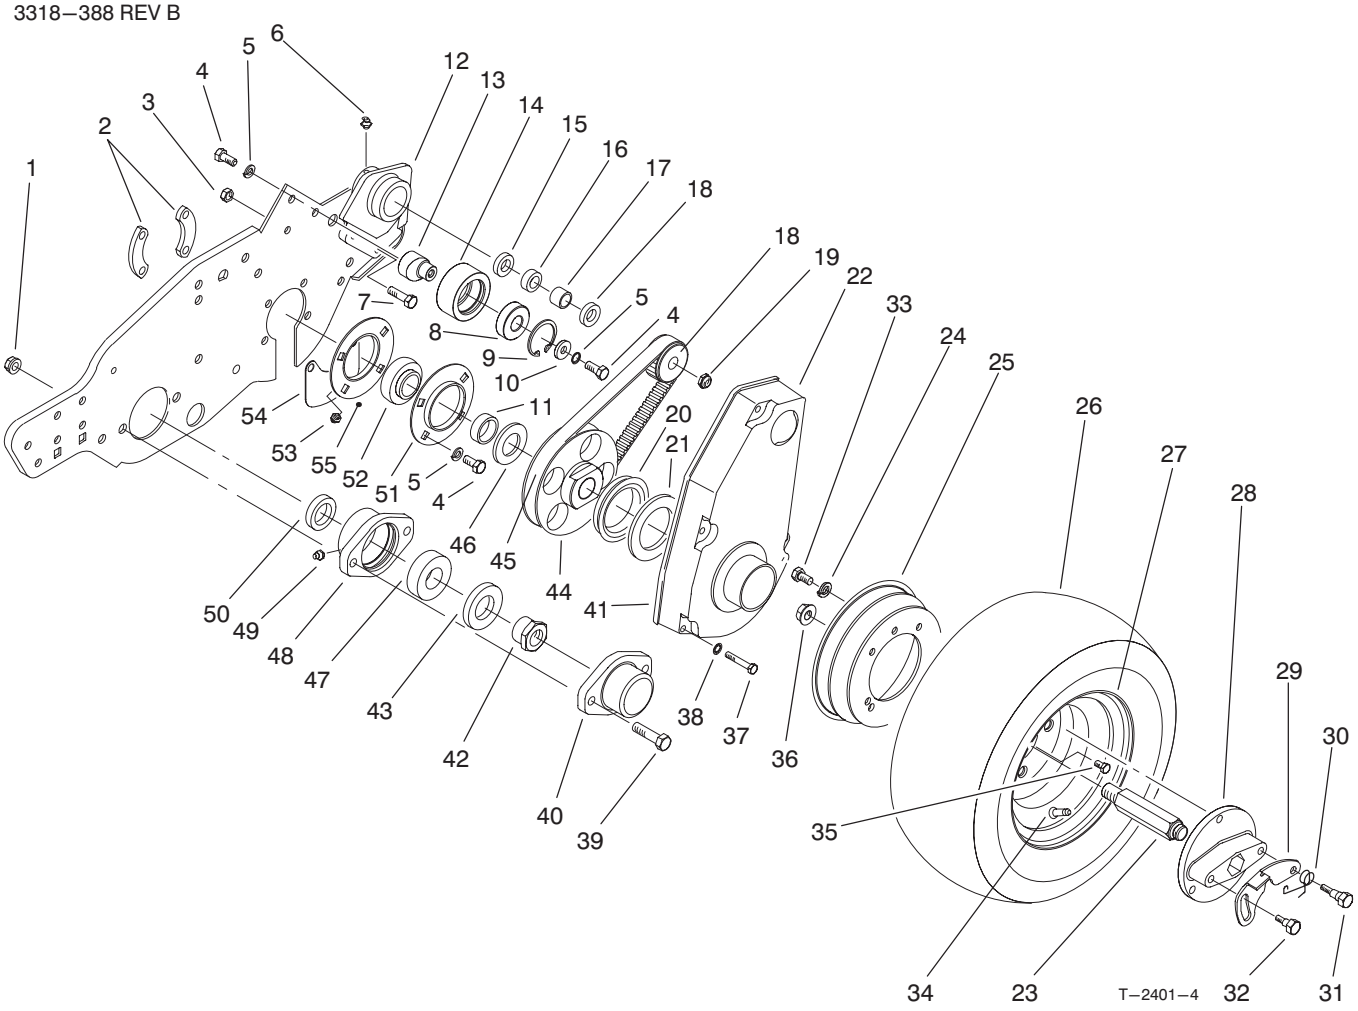

DRUM DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–39	Nut – Lock	2
2	65–8730	Clamp – Bearing	4
3	3296–29	Nut – Lock	4
4	322–3	Screw – HH	8
5	3253–4	Washer – Lock	10
6	302–19	Fitting – Grease	2
7	322–5	Screw – HH	4
8	38–7820	Bearing – Ball	2
9	32120–42	Ring – Retaining	2
10	88–7200	Washer – Flat	2
11	88–7530	Spacer	2
12	88–7470	Housing – LH	1
*	88–7490	Housing – RH	1
13	88–7190	Spacer – Pulley Support	2
14	88–7850	Asm. – Pulley, Idler (Incl. Ref. #4–5 & 8–10	1
15	253–160	Seal	4
16	251–338	Bearing	2
17	86–7130	Spacer	2
18	65–6660	Pulley	2
19	3296–57	Nut – Lock	2
20	253–161	Seal – V–Ring	2
21	94–9018	Washer	2
22	88–7680	Cover – Drum Belt LH	1
*	88–7690	Cover – Drum Belt RH	1
23	88–7580	Shaft – Wheel, LH	1
*	88–7590	Shaft – Wheel, RH	1
24	68–9420	Washer – Lock	6
25	65–7970	Rim – Shallow	2
26	65–7940	Tire	2
27	65–7960	Rim – Deep	2

Ref. No.	Part No.	Description	No. Used
28	88–7610	Hub	2
29	65–8020	Lever – Retaining	2
30	65–8050	Spring	2
31	65–8030	Bolt – Mounting, Long	2
32	65–8040	Bolt – Mounting, Short	2
33	48–7700	Screw – HH	6
34	65–7950	Tube W/Valve Stem	2
35	48–7610	Screw – HH	8
36	65–7980	Nut – Flange	8
37	321–11	Screw – HH	8
38	3254–8	Washer – Lock, Int. Tooth	8
39	323–7	Screw – HH	2
40	65–6220	Cover – Bearing	1
41	88–7810	Seal – Strip, Drum Cover	1
42	92–7302	Nut – Bearing Lock	1
43	253–163	Seal	1
44	94–9017	Pulley – LH	1
*	94–9016	Pulley – RH	1
45	65–5210	Belt	1
46	88–7540	Washer – Backup	2
47	251–342	Bearing	1
48	65–8640	Housing – Bearing	1
49	302–5	Fitting – Grease	1
50	253–96	Seal	1
51	65–6590	Flangette	2
52	88–7880	Bearing	2
53	302–40	Fitting – Grease 90°	2
54	65–8720	Closure	2
55	95–0923	Flangette	2
*	88–7570	Asm. – Wheel, Transport (Incl. Ref. #24–36)	2

*Not Illustrated

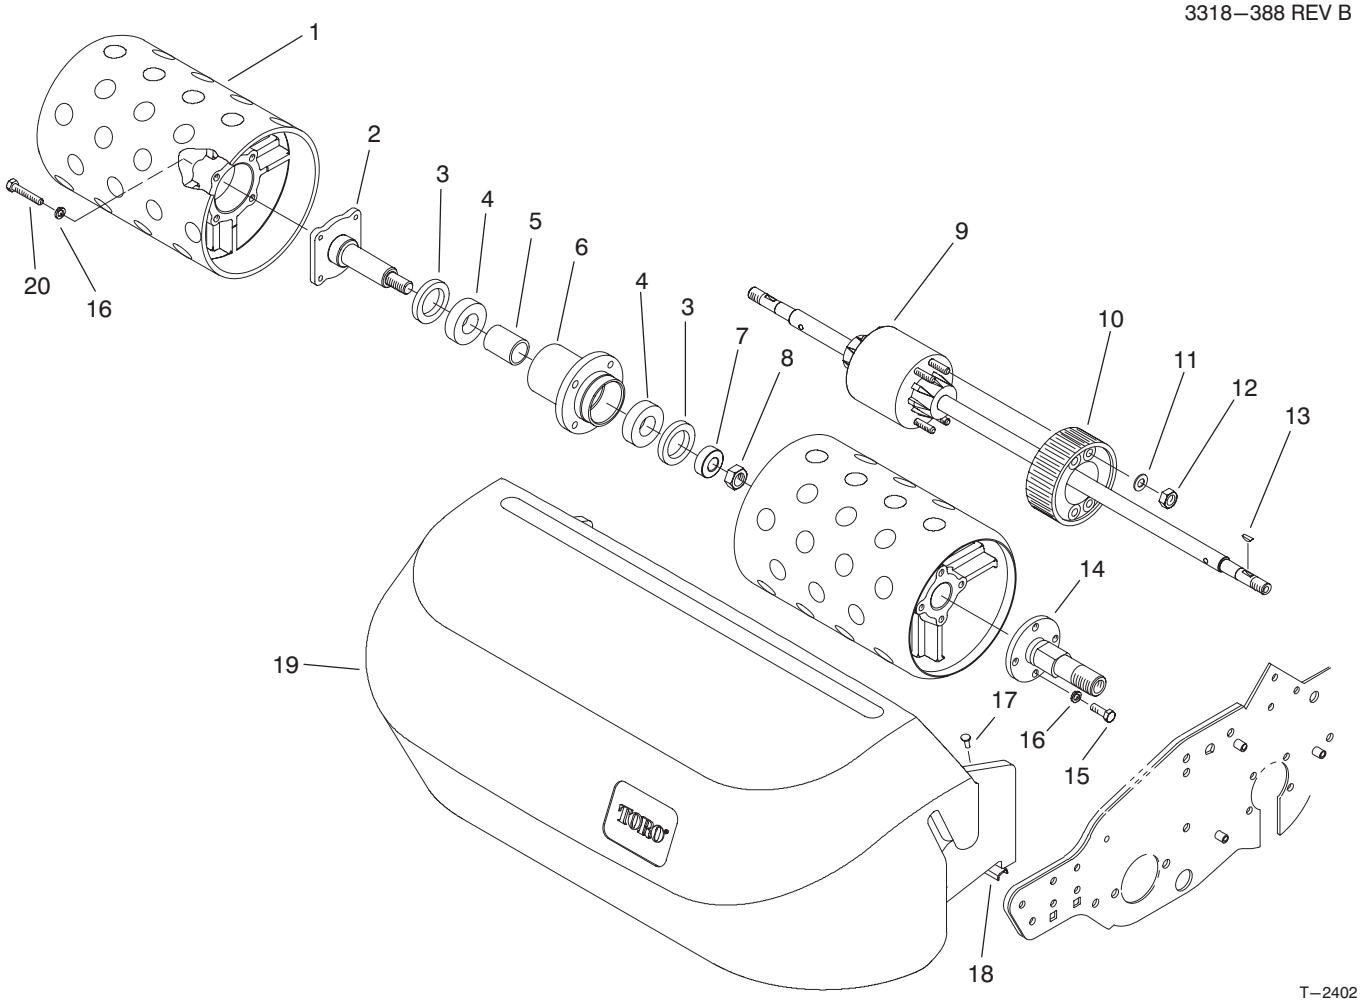

T–2402

DRUM AND BASKET ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–9042	Drum – Long	2
2	94–5850	Spindle – Drum	1
3	253–159	Seal – Spring Lip	2
4	251–257	Bearing	2
5	65–6520	Spacer – Bearing	1
6	94–5852	Hub – Drum	1
7	65–6530	Spacer – Seal	1
8	3296–33	Nut – Lock	1
9	93–9041	Differential	
		Peerless Model 100–116	1
10	65–9120	Pulley – Differential	1
11	3256–23	Washer – Flat	4

Ref. No.	Part No.	Description	No. Used
12	3296–29	Nut – Lock	4
13	3257–32	Key – Woodruff	2
14	88–7520	Shaft – Drum LH	1
*	88–7510	Shaft – Drum RH	1
15	322–5	Screw – HH	8
16	3253–4	Washer – Lock	16
17	3290–409	Rivet	9
18	94–5894	Channel – Basket	1
19	94–5893	Basket – Grass	
		(Incl. Ref. #17 & 18)	1
20	322–9	Screw – HH	8

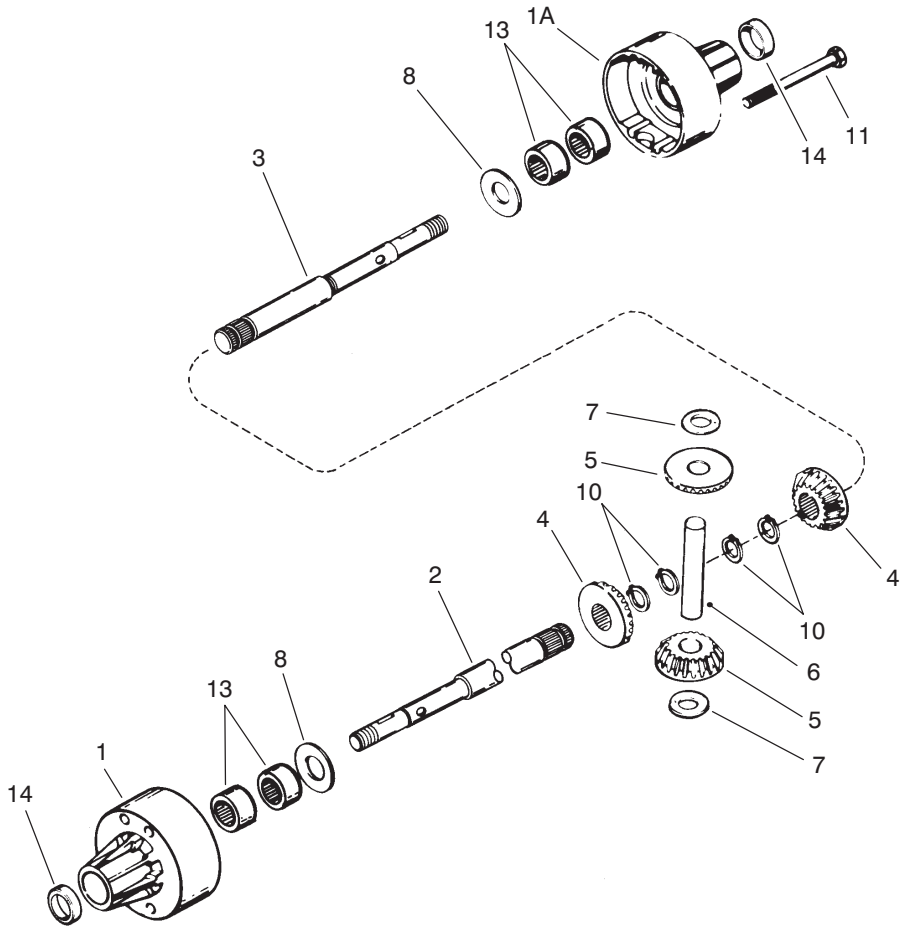

T—1571

DIFFERENTIAL ASSEMBLY
PEERLESS MODEL NO. 100—116

Ref. No.	Part No.	Description	No. Used
1	95—5741	Housing Differential Carrier (Incl. Ref. #13 & 14)	1
1A	95—5740	Housing Differential Carrier (Incl. Ref. #13 & 14)	1
2	95—5743	Axle (Long) 23.097”	1
3	95—5742	Axle (Short) 9.118”	1
4	95—5749	Gear Bevel	2
5	95—5748	Gear Pinion	2
6	95—5747	Pin Drive	1

Ref. No.	Part No.	Description	No. Used
7	95—5744	Washer Thrust	2
8	95—5745	Washer	2
10	95—5746	Ring — Retaining (Pkg. of 2)	4
11	95—5739	Screw Flanged Hex Hd.	4
13	95—5738	Bearing Needle	4
14	95—5737	Seal Oil	2
*	95—5734	Betonite Grease 32 oz. Bottle	1

*Not Illustrated

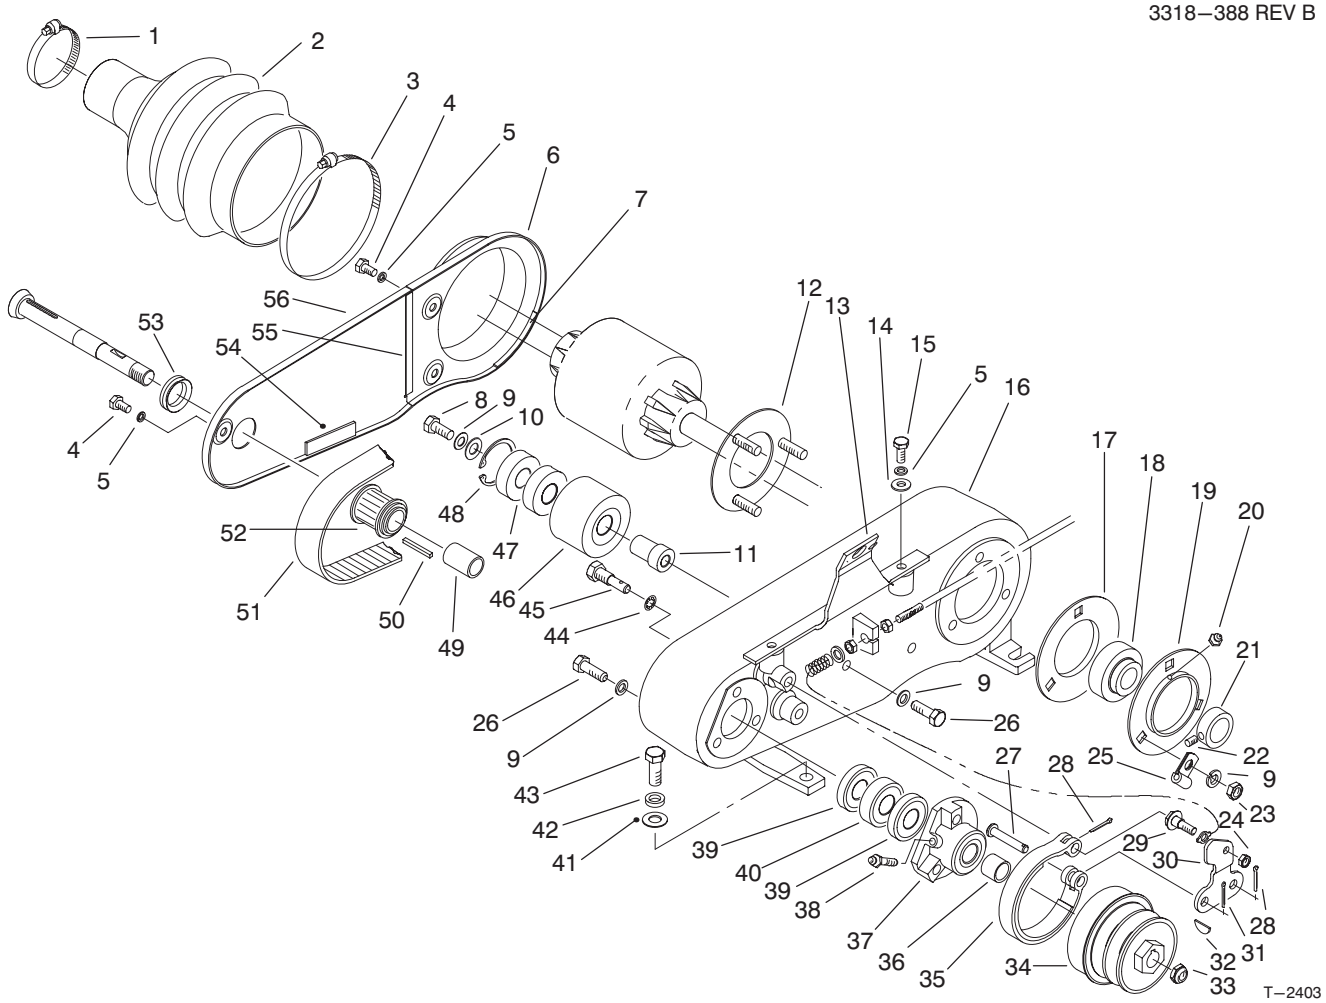

COUNTERSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	2412—139	Clamp — Hose	1
2	94—5866	Boot — Differential	1
3	2412—140	Clamp — Hose	1
4	321—2	Screw — HH	3
5	3253—3	Washer — Lock	5
6	88—7250	Cover — Box Rear	1
7	65—6902	Strip — Cover Seal	1
8	322—3	Screw — HH	1
9	3253—4	Washer — Lock	7
10	88—7200	Washer — Flat	1
11	88—7380	Spacer — Pulley Support	1
12	65—6720	Plate — Screw	1
13	93—1448	Asm. — Cover, Bracket	1
14	3256—22	Washer — Flat	2
15	321—3	Screw — HH	2
16	88—7230	Housing — Countershaft	1
17	65—6710	Flangette	1
18	251—343	Bearing (Incl. Ref. #21 & 22)	1
19	65—6700	Flangette (Incl. Ref. #20)	1
20	302—55	Fitting — Grease	1
21		Collar — Locking	1
22		Screw — Set	2
23	3218—2	Nut — Hex. Jam	3
24	3296—42	Nut — Lock	1

Ref. No.	Part No.	Description	No. Used
25	88—7970	Clip	1
26	322—5	Screw — HH	4
27	283—75	Pin — Clevis	1
28	3272—6	Pin — Cotter	2
29	11—9030	Bolt — Shoulder	1
30	65—8610	Lever — Brake	1
31	3272—8	Pin — Cotter	1
32	3257—32	Key — Woodruff	1
33	3296—57	Nut — Lock	1
34	92—9212	Pulley — Input Shaft	1
35	65—8700	Band — Brake	1
36	86—7130	Spacer — Short	1
37	65—6760	Housing — Bearing	1
38	302—64	Fitting — Grease	1
39	253—160	Seal	2
40	251—338	Bearing	1
41	3256—24	Washer — Flat	4
42	3253—21	Washer — Lock	4
43	323—5	Screw — HH	4
44	3254—6	Washer — Lock, Int. Tooth	2
45	65—6810	Support — Brake	2
46	88—7870	Asm. — Pulley, Idler (Incl. Ref. #9—11 & 47—49)	1
47	38—7820	Bearing — Ball	2
48	32120—42	Ring — Retaining	1
49	86—7140	Spacer — Long	1

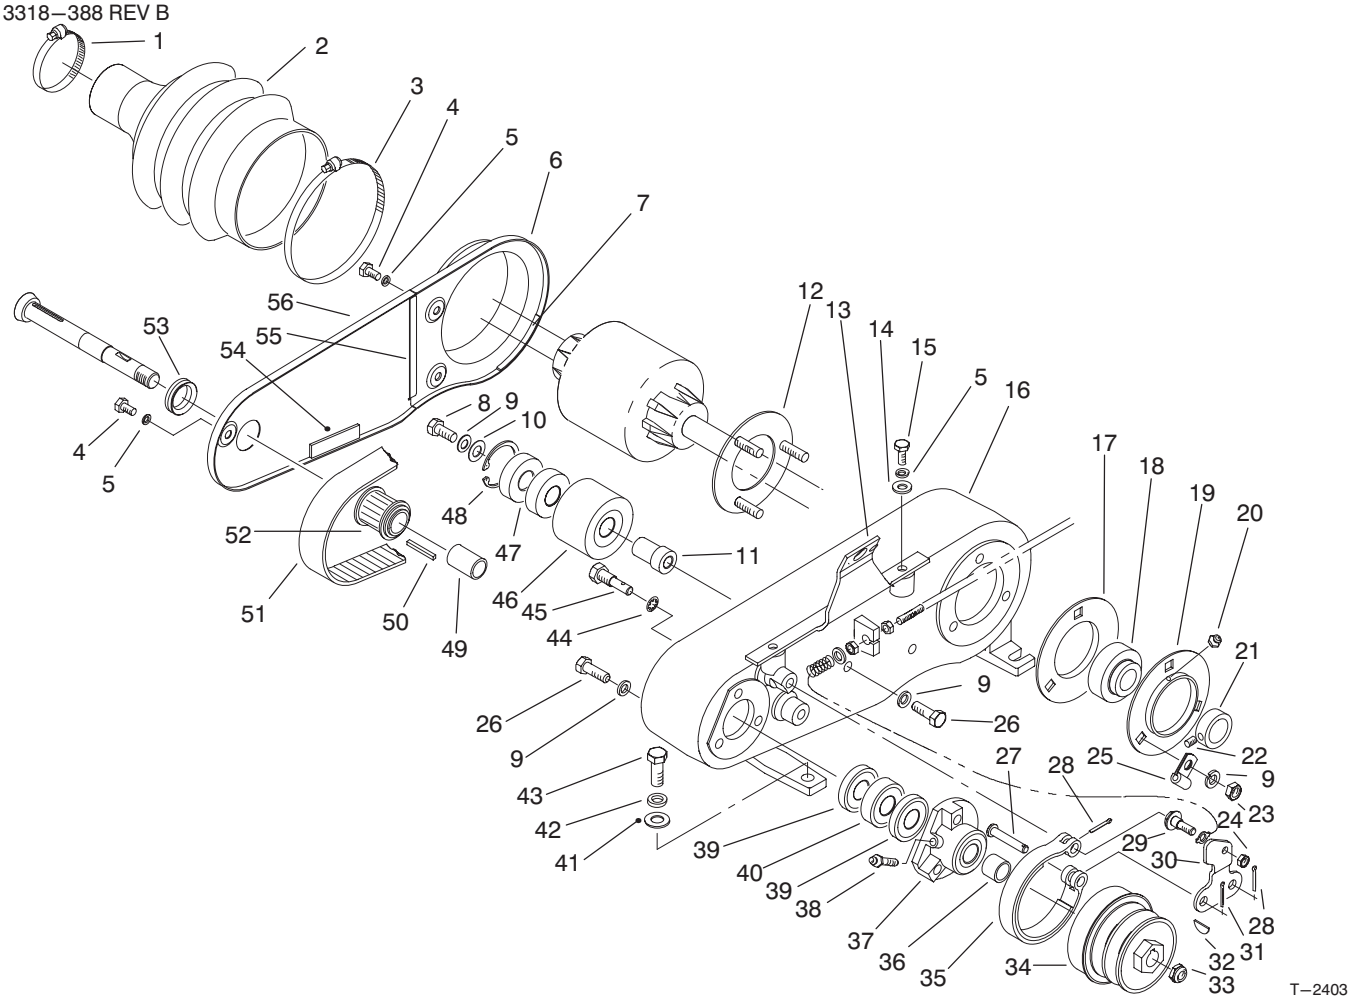

COUNTERSHAFT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
50	65—6850	Key	1
51	65—9080	Belt	1
52	65—8910	Pulley — Countershaft	1
53	88—7710	Seal — Countershaft	1

Ref. No.	Part No.	Description	No. Used
54	65—6901	Strip — Cover Seal	1
55	65—6903	Strip — Cover Seal	1
56	88—7240	Cover — Box Front	1

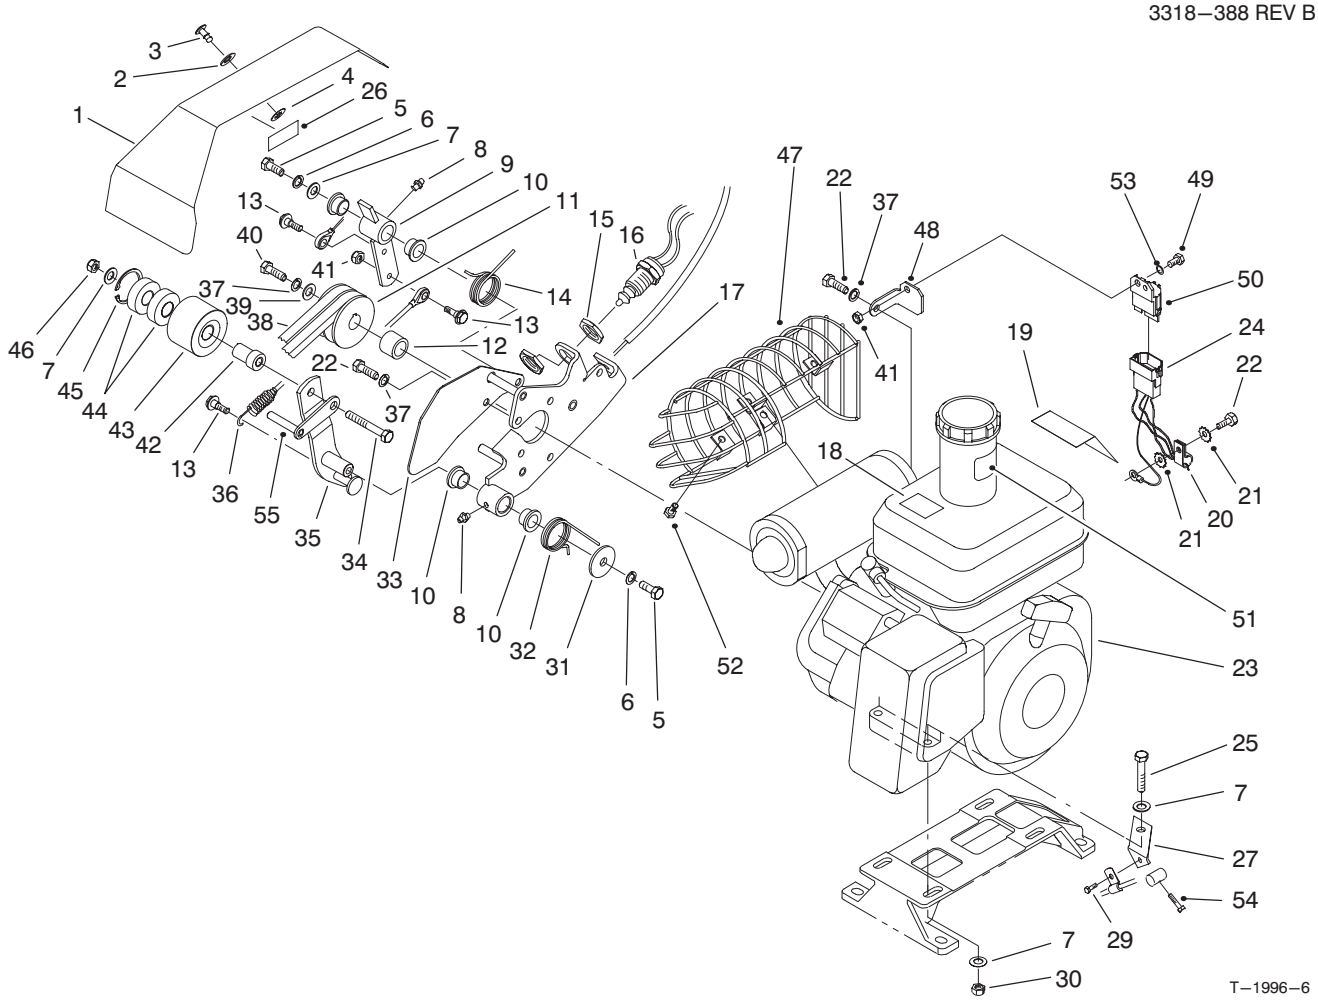

ENGINE AND BELLCRANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94–9007	Cover – Bellcrank (Incl. Ref. #26)	1
2	3256–2	Washer – Flat	1
3	93–6074	Stud	1
4	93–6073	Retainer	1
5	323–4	Screw – Cap Hex. Hd.	2
6	3253–21	Washer – Spring Lock	2
7	3256–56	Washer – Flat	10
8	302–5	Fitting – Grease	2
9	93–6014	Lever	1
10	65–8770	Bushing	4
11	92–9216	Pulley – Input Drive	1
12	65–8260	Spacer – Engine Shaft	1
13	11–9030	Bolt – Shoulder	3
14	93–6011	Spring – Torsion	1
15	3218–20	Nut – Jam	2
16	87–5490	Switch (Incl. Ref. #15)	1
17	93–6015	Bracket – Clutch	1
18	63–8440	Decal – Hot	1
18	93–8069	Decal – Hot (Europe)	1
18	83–2560	Decal – Hot (Japan)	1
19	88–7620	Decal – Danger	1
19	93–7348	Decal – Danger (Europe)	1
19	92–4813	Decal – Danger (Japan)	1
20	2412–93	Clamp – R	1
21	3255–9	Washer – External Lock	2

Ref. No.	Part No.	Description	No. Used
22	48–7700	Screw – Cap Hex. Hd.	7
23	94–9003	Engine Assembly Kawasaki Model FE120G–CS00 (Incl. Ref. #18–19 & 51)	1
24	94–5862	Harness – Wire	1
24	94–5865	Harness – Wire (Europe)	1
25	322–9	Screw – Cap Hex. Hd.	4
26	67–5360	Decal – Danger	1
26	93–7273	Decal – Danger (Europe)	1
26	84–7280	Decal – Danger (Japan)	1
27	88–7960	Bracket – Throttle Cable	1
29	32144–73	Screw – Hex. Washer Hd. Thread Form	1
30	3296–29	Nut – Lock	4
31	93–6099	Washer	1
32	93–6012	Spring – Torsion, Clutch	1
33	93–6013	Shield – Belt	1
34	323–11	Screw – Cap Hex. Hd.	1
35	93–6003	Lever – Clutch	1
36	93–9024	Cable Assembly – Link	1
37	3253–4	Washer – Spring Lock	7
38	92–9218	V–Belt, Matched Set	1
39	65–8270	Washer	1
40	48–9460	Screw – Cap Hex. Hd.	1
41	3296–42	Nut – Lock	4

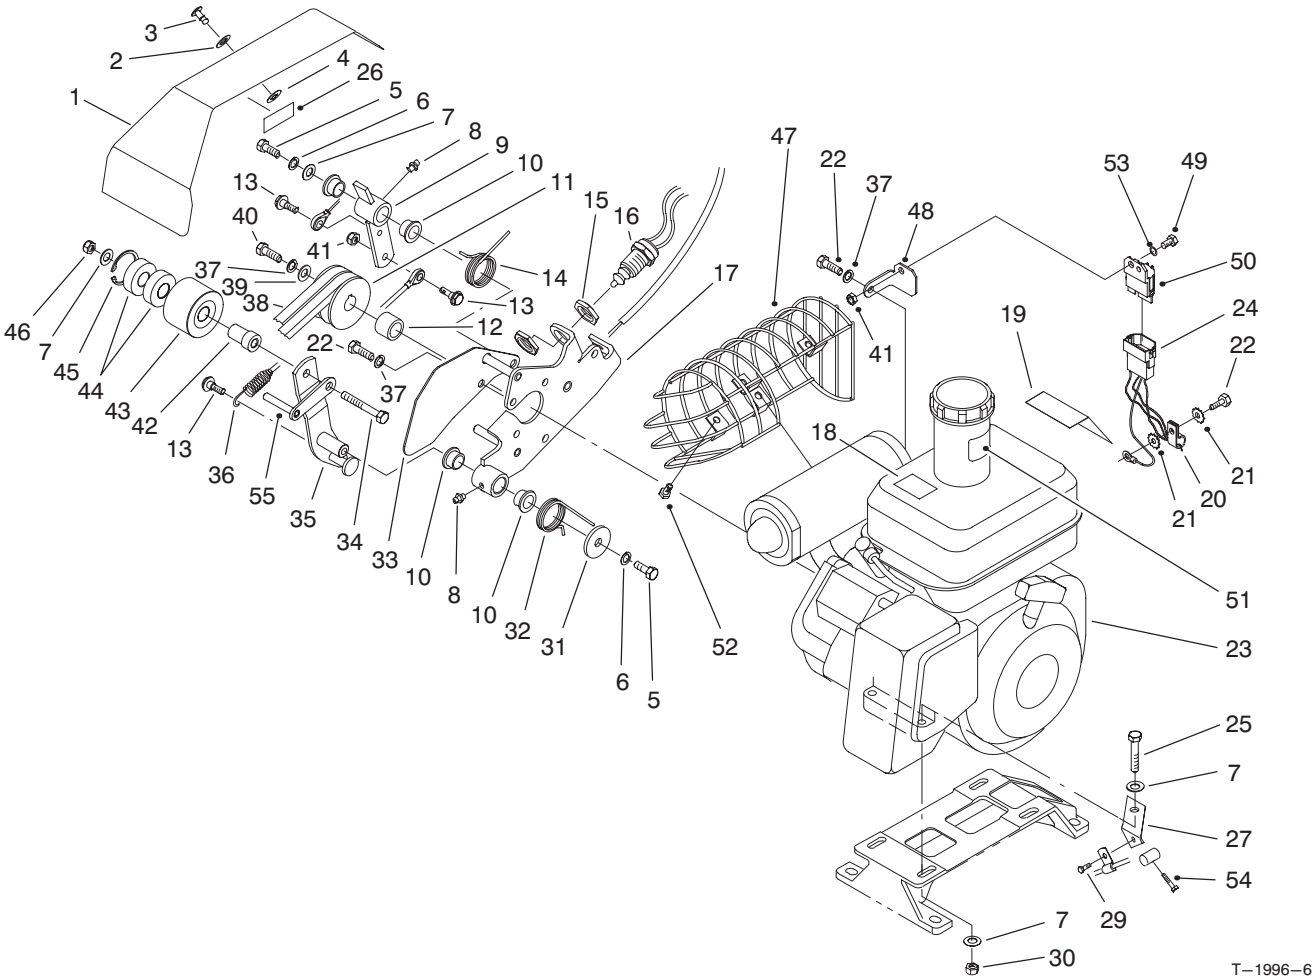

ENGINE AND BELLCRANK ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
42	88–7350	Spacer – Pulley Support	1
43	88–7890	Idler Pulley Assembly (Incl. Ref. #42, 44 & 45)	1
44	38–7820	Bearing – Ball	2
45	32120–42	Ring – Retaining	1
46	3296–39	Nut – Lock	1
47	93–6092	Guard – Muffler (Europe)	1
48	94–5861	Bracket – Module	1
49	321–3	Screw – Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
50	94–5860	Module – Interlock	1
50	94–3431	Module – Interlock (Europe)	1
51	53–4420	Decal – Fuel	1
51	93–9886	Decal – Fuel (Europe)	1
51	93–9886	Decal – Fuel (Japan)	1
52	33113–012	Screw – HH (Europe)	4
53	3256–22	Washer – Flat	1
54	94–9015	Screw – Cap Hex. Hd.	1
55	95–0922	Guide – Belt	1

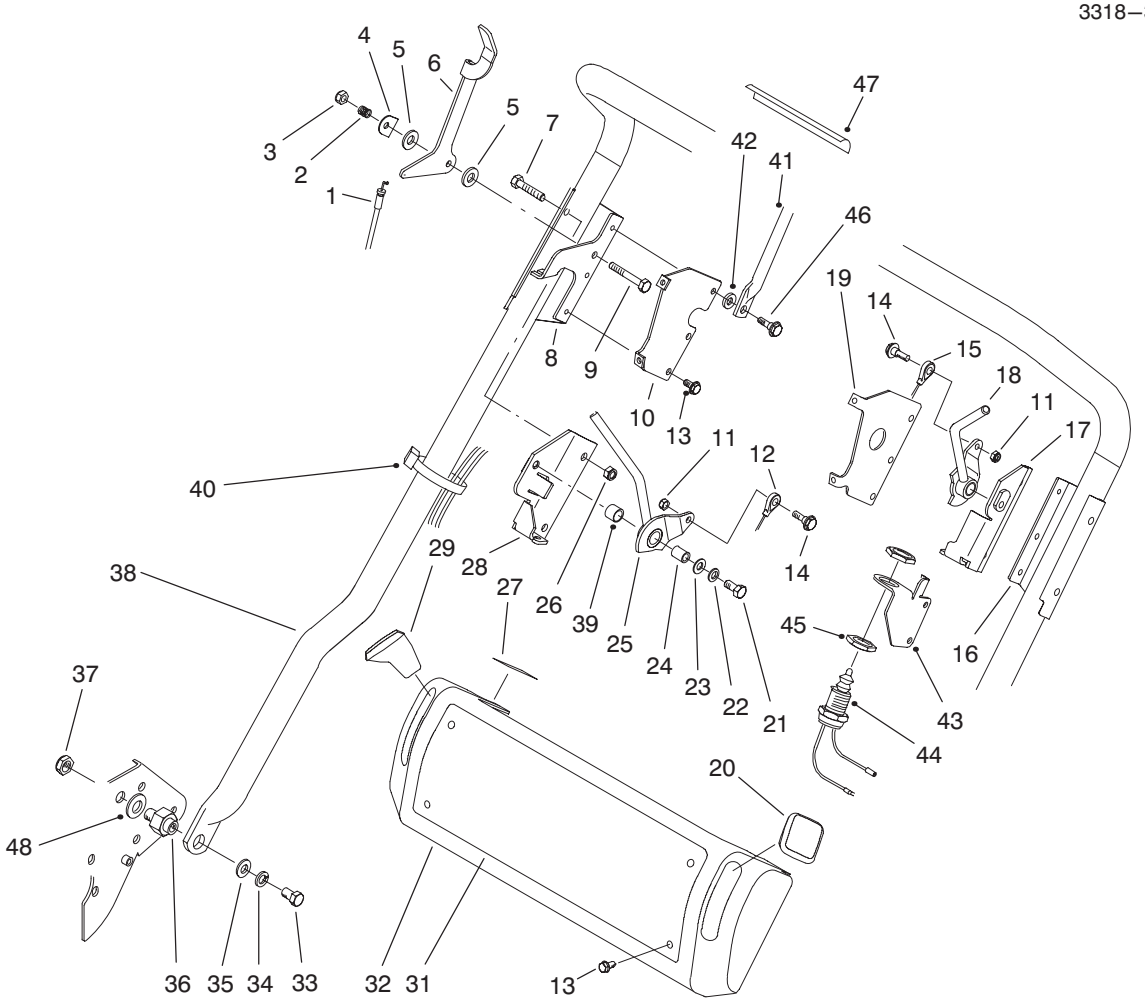

T–2405–4

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94–5869	Cable – Throttle	1
2	3–5787	Spring	1
3	3296–56	Nut – Lock	1
4	93–6016	Washer – Retaining	1
5	66–2921	Washer – Friction	2
6	93–6017	Lever – Throttle	1
7	322–9	Screw – HH	4
8	95–0908	Bracket – Skid, Clutch	1
9	321–8	Screw – HH	1
10	93–6046	Bracket – Console RH	1
11	3296–42	Nut – Lock	2
12	94–5870	Cable – Clutch	1
13	93–6083	Screw	10
13	93–6083	Screw (Europe)	8
14	11–9030	Bolt – Shoulder	2
15	94–5871	Cable – Brake	1
16	95–0907	Bracket – Skid, Brake	1
17	93–6022	Bracket – Brake	1
18	93–6058	Lever – Brake	1
19	93–6047	Bracket – Console LH	1
20	65–8971	Knob – Red	1
21	3210–7	Screw – HH	2
22	3253–4	Washer – Lock	2
23	3256–23	Washer – Flat	2
24	88–7450	Spacer	2
25	93–6057	Lever – Clutch	1

Ref. No.	Part No.	Description	No. Used
26	3296–29	Nut – Lock	4
27	93–6085	Decal – Throttle	1
28	93–6019	Bracket – Clutch	1
29	65–8970	Knob – Black	1
31	93–9012	Decal – Console	1
31	94–6313	Decal – Console (Europe)	1
31	94–6314	Decal – Console (Japan)	1
32	93–6036	Console	1
33	323–34	Screw – HH	2
34	3253–21	Washer – Lock	2
35	3256–24	Washer – Flat	2
36	93–6000	Pin – Handle Pivot	2
37	3296–28	Nut – Lock	2
38	93–9044	Handle	1
39	256–206	Bushing	2
40	3290–378	Tie – Cable	2
41	93–9009	Bail Asm. (Europe) (Incl. Ref. #47)	1
42	93–6079	Spacer (Europe)	2
43	93–6078	Bracket – Switch (Europe)	1
44	87–5490	Switch (Europe) (Incl. Ref. #45)	1
45	3218–20	Nut – Hex. Jam (Europe)	2
46	11–9030	Bolt – Shoulder (Europe)	2
47	93–9008	Decal – Bail (Europe)	1
48	94–5868	Washer	2

3318−388 REV B

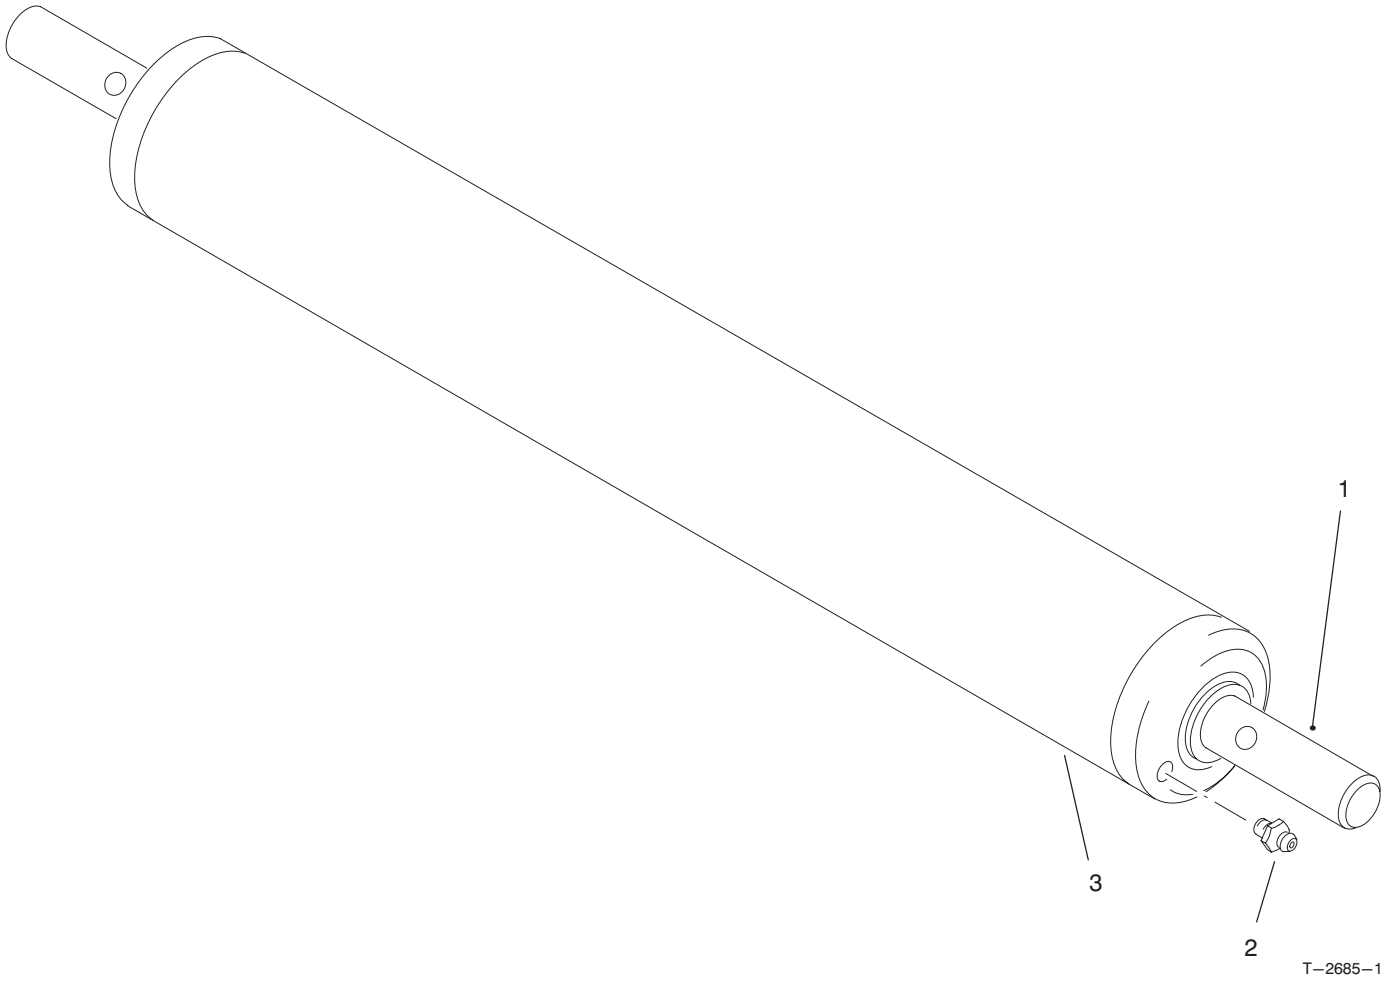

T−2685−1

FULL ROLLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	52−3180	Bearing − Front Roller	2
2	302−5	Fitting − Grease	2

Ref. No.	Part No.	Description	No. Used
3	95−0930	Assembly − Roller Incl. Ref. #1 & 2)	1

SPECIAL TOOLS

BEDKNIFE SCREW TOOL NO. *TOR510880

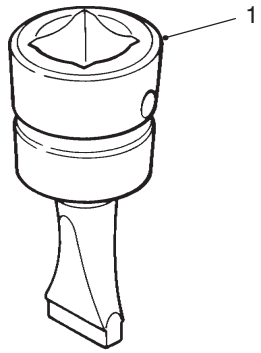

T—0729

Ref. No.	Part No.	Description	No. Used
1		Tool — Bedknife Screw	1

BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

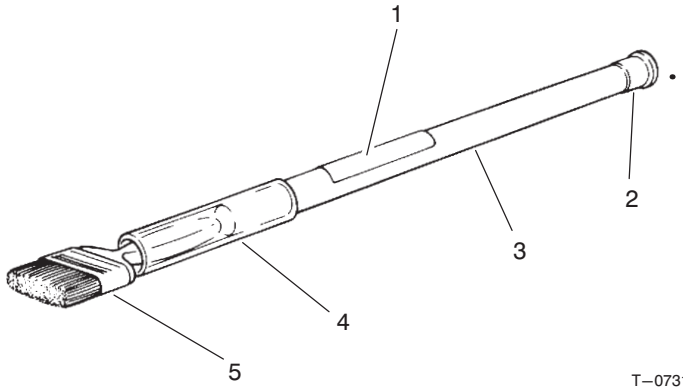

T—0731

Ref. No.	Part No.	Description	No. Used
1	12—9140	Decal	1
2	2410—18	Plug	1
3	29—9080	Handle	1
4	29—9090	Hose — Handle	1
5	36—4310	Brush	1

HEIGHT—OF—CUT BAR ASSEMBLY NO. 94—9010

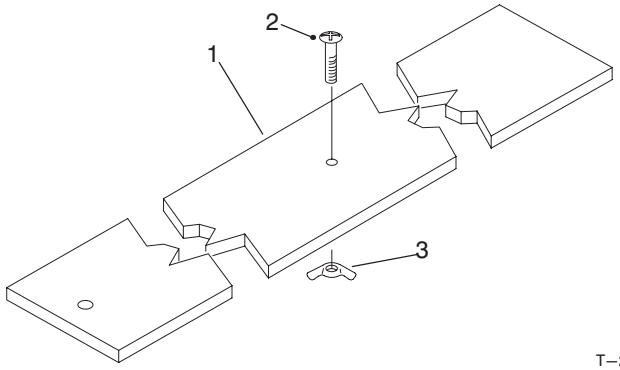

T—2416

Ref. No.	Part No.	Description	No. Used
1	94—9011	Bar	1
2	32122—36	Screw — Truss Hd.	1
3	32103—2	Nut — Wing	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1—800—533—0492 (in Minnesota and Canada 1—507—455—7050) Fax. 507—455—7011.

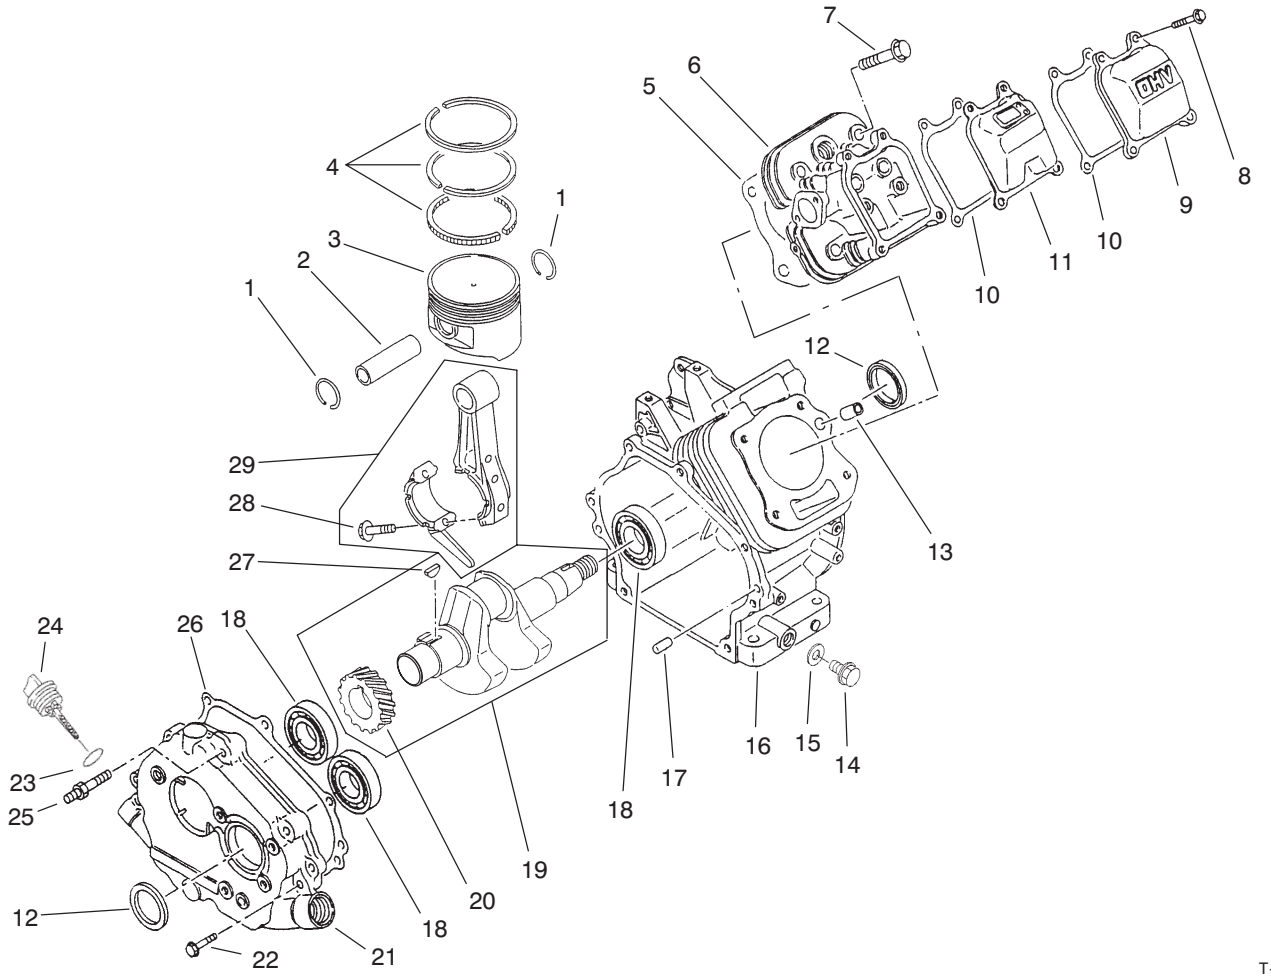

T—1623

ENGINE
CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93—8500	Ring — Retaining	2
2	93—8501	Pin — Piston	1
3	93—8502	Piston	1
*	94—6836	Piston (Oversized)	1
4	93—8503	Piston Ring Set	1
*	94—6837	Piston Ring Set (Oversized)	1
5	93—8504	Gasket — Head	1
6	93—8505	Head — Cylinder	1
7	93—8506	Bolt — Flanged	4
8	94—6838	Bolt — Flanged	4
9	93—8508	Case — Rocker	1
10	93—8509	Gasket — Rocker	2
11	93—8510	Breather	1
12	93—8511	Seal — Oil	2
13	93—8512	Pin	2
14	93—8513	Plug — Drain	2
15	93—8514	Gasket — Drain Plug	2

Ref. No.	Part No.	Description	No. Used
16	93—8515	Crankcase	1
17	93—8516	Pin	2
18	93—8517	Bearing — Ball	3
19	93—8518	Asm. — Crankshaft (Incl. Ref. #20 & 27)	1
20	94—9043	Gear — Helical	1
21	93—8520	Cover — Crankcase	1
22	93—8521	Bolt — Flanged	7
23	94—9041	Seal — O—Ring	2
24	93—8523	Cap — Oil Filler	2
25	93—8524	Stud	1
26	93—8525	Gasket — Crankcase	1
27	93—8526	Key	1
28	93—8527	Bolt — Rod	2
29	93—8528	Asm. — Connecting Rod (Incl. Ref. #28)	1

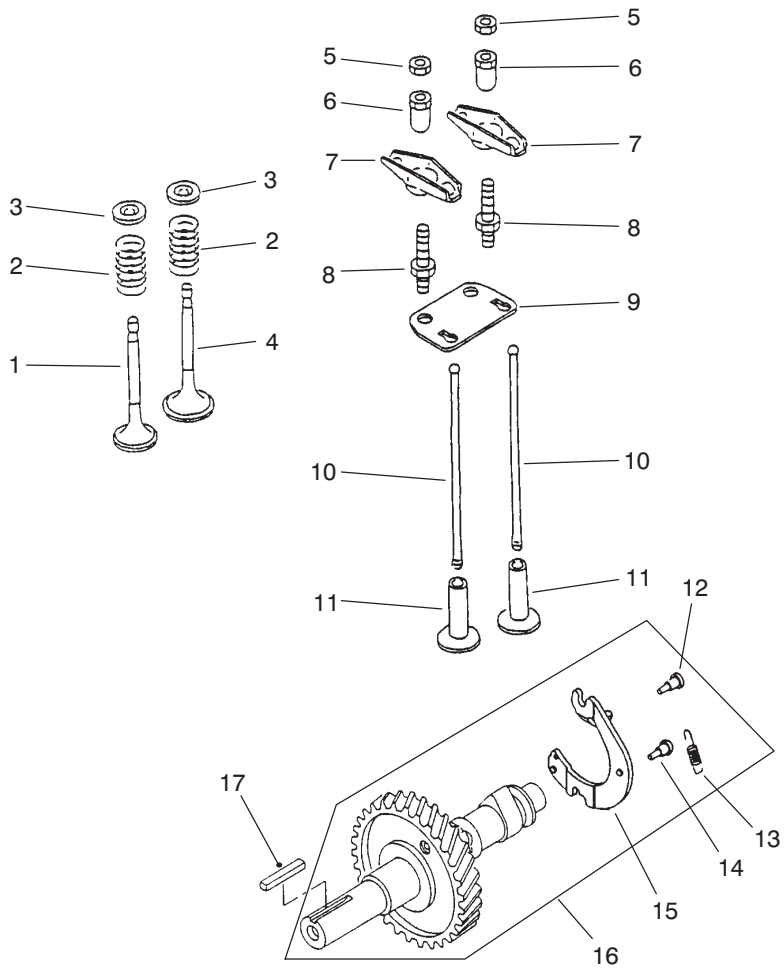

T—1624

ENGINE
CAMSHAFT & VALVES ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93—8529	Valve — Exhaust	1
2	93—8530	Spring — Valve	2
3	93—8531	Retainer — Spring	2
4	93—8532	Valve — Intake	1
5	93—8533	Nut	2
6	93—8534	Nut	2
7	93—8535	Arm — Rocker	2
8	93—8536	Bolt	2
9	93—8537	Guide	1

Ref. No.	Part No.	Description	No. Used
10	93—8538	Rod — Push	2
11	93—8539	Tappet	2
12	93—8540	Pin	2
13	93—8541	Spring	1
14	93—8542	Pin	1
15	93—8543	Decompressor	1
16	93—8544	Asm. — Camshaft (Incl. Ref. #12—15)	1
17	93—8545	Key	1

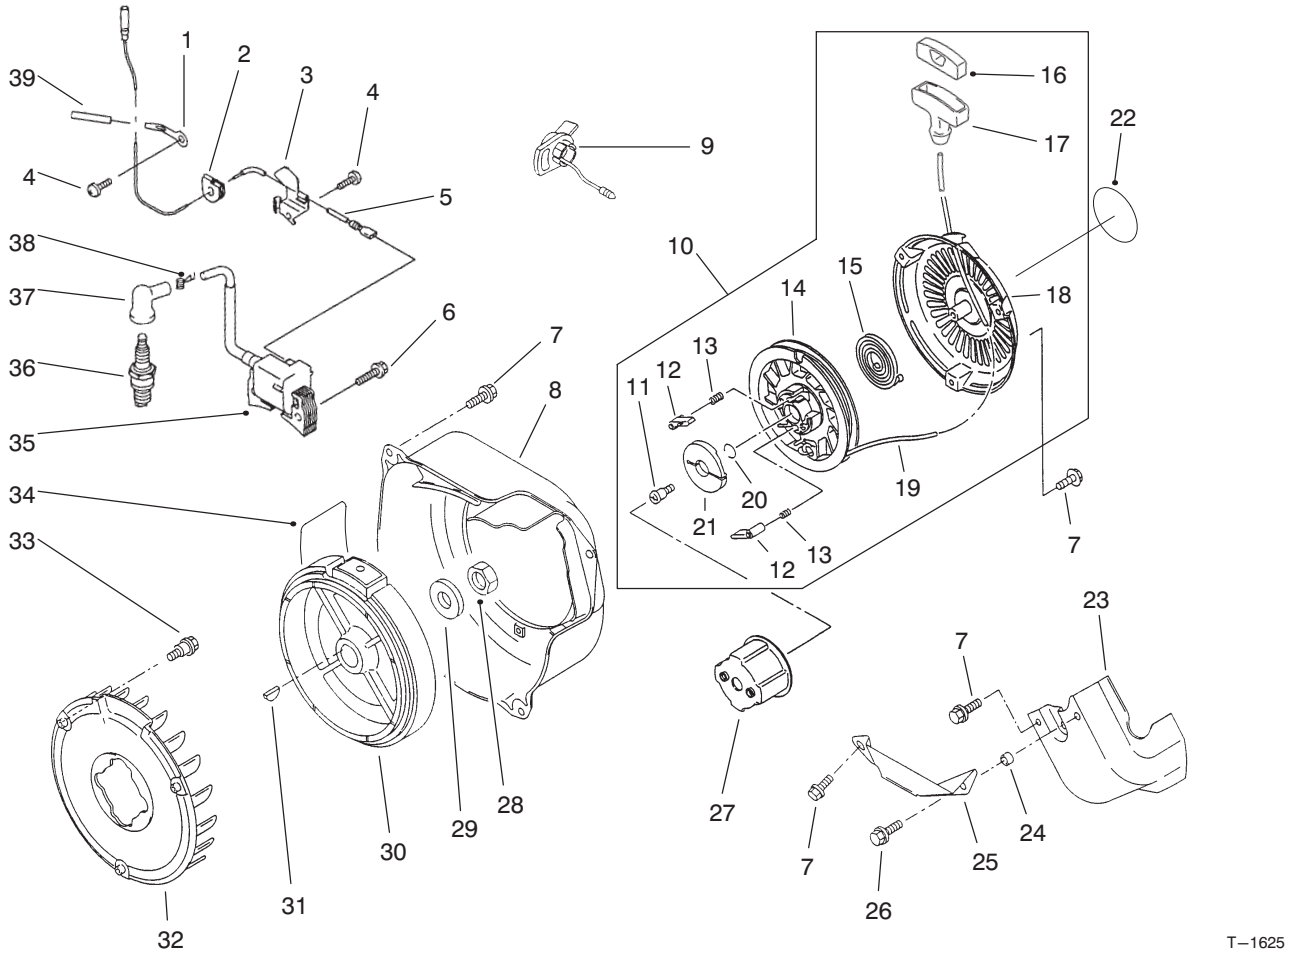

T—1625

ENGINE
IGNITION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94—9039	Clamp	1
2	93—8582	Grommet	1
3	93—8583	Clamp	1
4	93—8549	Screw	2
5	94—9038	Lead — Wire	1
6	93—8548	Bolt — Flanged	2
7	93—8550	Bolt — Flanged	10
8	94—9047	Housing — Fan	1
9	93—8546	Switch	1
10	93—8552	Asm. — Recoil Starter (Incl. Ref. #11—21)	1
11	93—8553	Screw	1
12	93—8554	Pawl — Recoil	2
13	93—8555	Spring — Return	2
14	93—8556	Reel — Recoil	1
15	93—8557	Spring	1
16	94—9044	Cap — Grip	1
17	94—9045	Grip	1
18	94—9046	Case — Recoil	1
19	93—8560	Rope	1
20	93—8561	Ring — Retaining	1

Ref. No.	Part No.	Description	No. Used
21	93—8562	Guide — Pawl	1
22	94—9027	Decal — Recoil	1
23	93—8563	Shroud — Engine	1
24	93—8564	Collar	1
25	93—8565	Shroud — Engine	1
26	93—8566	Bolt — Flanged	1
27	93—8567	Pulley — Recoil	1
28	93—8568	Nut	1
29	93—8569	Washer	1
30	94—9026	Flywheel	1
31	93—8571	Key	1
32	93—8572	Fan	1
33	94—6840	Bolt — Flanged	3
34	93—8689	Decal — Instruction	1
35	94—9031	Coil — Ignition	1
36	93—8584	Plug — Spark (NGK BPR5ES)	1
37	93—8585	Cap — Spark Plug	1
38	94—9049	Terminal	1
39	94—9040	Tube	1

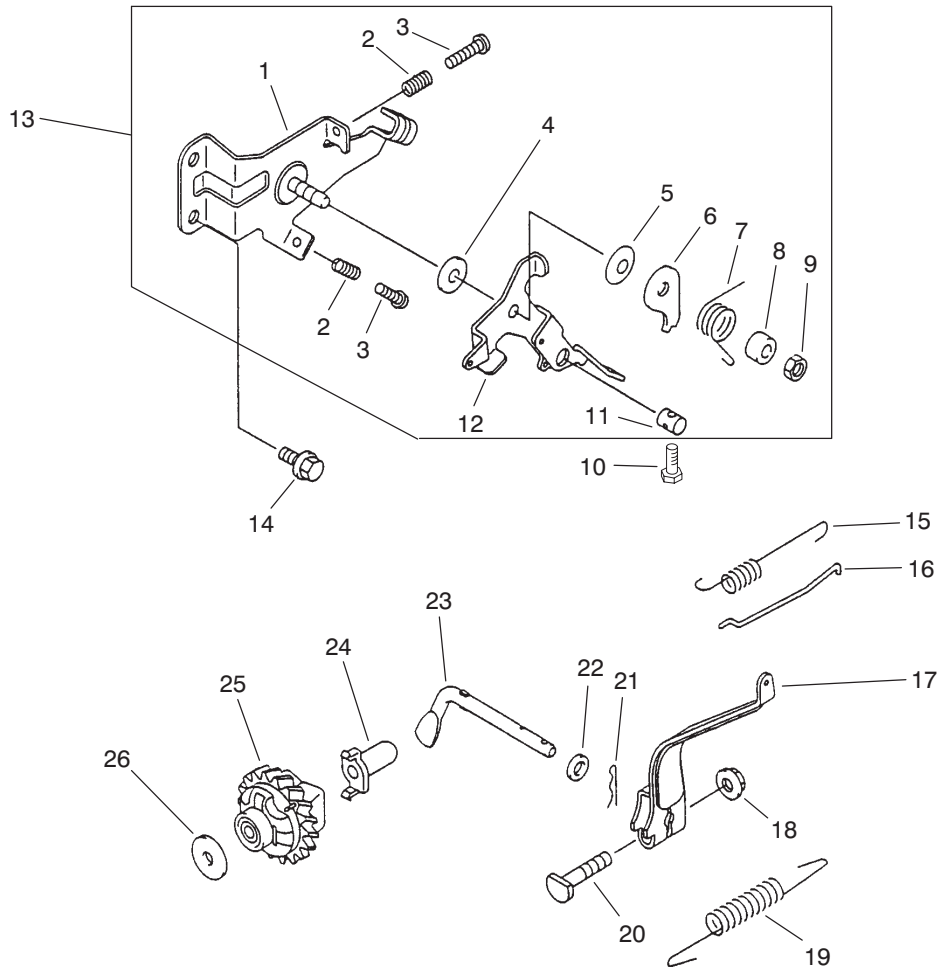

T–1618A

ENGINE
GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–8587	Panel – Control	1
2	93–8588	Spring	2
3	93–8589	Bolt	2
4	93–8590	Washer	1
5	93–8591	Spring	1
6	93–8592	Plate	1
7	93–8593	Spring	1
8	93–8594	Spacer	1
9	93–8595	Nut	1
10	94–9015	Screw – HH	1
11	93–8597	Nut	1
12	93–8598	Lever	1
13	93–8599	Asm. – Control Panel (Incl. Ref. #1–12)	1

Ref. No.	Part No.	Description	No. Used
14	93–8600	Bolt – Flanged	2
15	93–8601	Spring	1
16	93–8602	Rod – Governor	1
17	93–8603	Arm – Governor	1
18	93–8631	Nut	1
19	94–9030	Spring – Governor	1
20	93–8606	Bolt	1
21	93–8607	Pin – Snap	1
22	93–8608	Washer	1
23	93–8609	Arm – Pivot	1
24	93–8610	Sleeve	1
25	94–6841	Asm. – Governor	1
26	94–6842	Washer	1

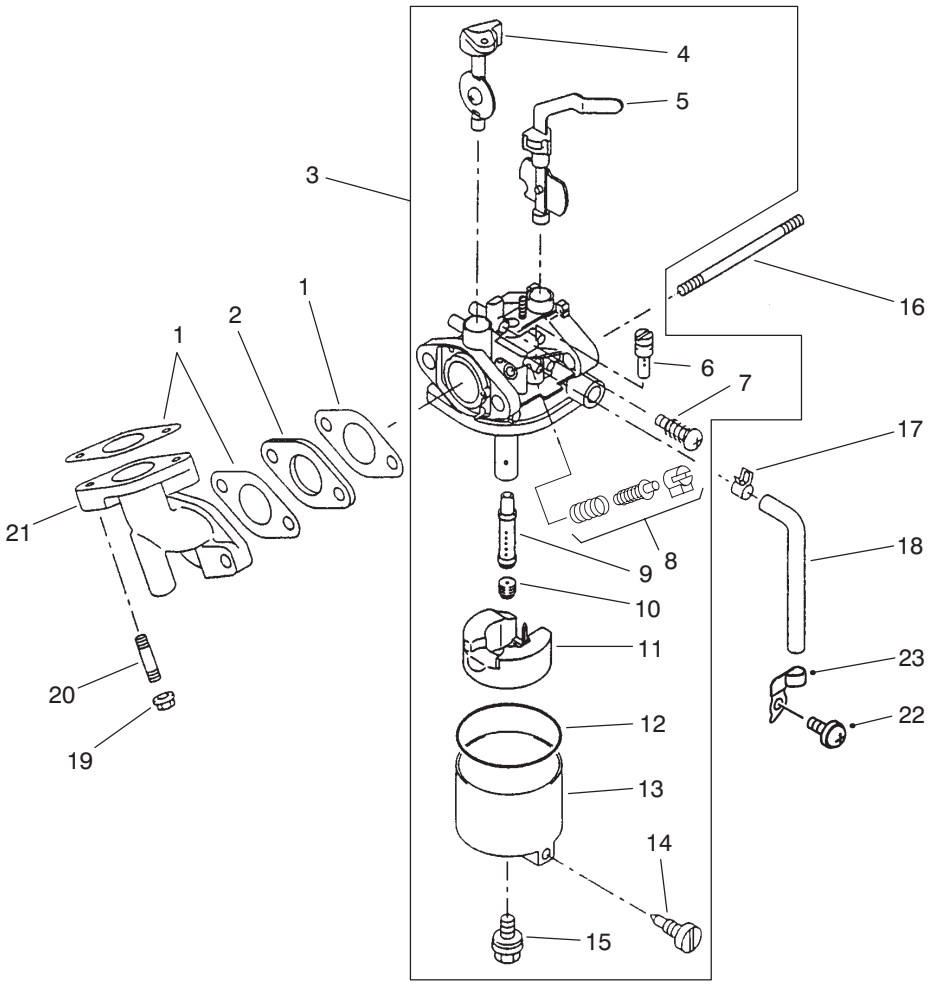

T−1619A

ENGINE
CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93−8613	Gasket − Carburetor	3
2	94−9048	Insulator	1
3	94−9032	Asm. − Carburetor (Incl. Ref. #4−15)	1
4	94−9033	Valve − Throttle	1
5	93−8617	Valve − Choke	1
6	94−9037	Jet − Pilot #40	1
7	93−8619	Asm. − Screw	1
†8		Limiter	1
9	94−9035	Nozzle − Main	1
10	94−9036	Jet − Main #65	1
11	94−6844	Asm. − Float	1
12	93−8624	Gasket	1

Ref. No.	Part No.	Description	No. Used
13	93−8625	Asm. − Float Chamber (Incl. Ref. #14)	1
14	93−8626	Asm. − Screw	1
15	93−8627	Bolt	1
16	93−8628	Bolt − Stud	2
17	93−8629	Clamp	1
18	93−8630	Tube	1
19	93−8631	Nut	2
20	93−8632	Bolt − Stud	2
21	93−8633	Pipe − Intake	1
22	94−6845	Screw	1
23	94−6846	Clamp	1

† Available only thru Authorized Toro or Kawasaki Dealer.

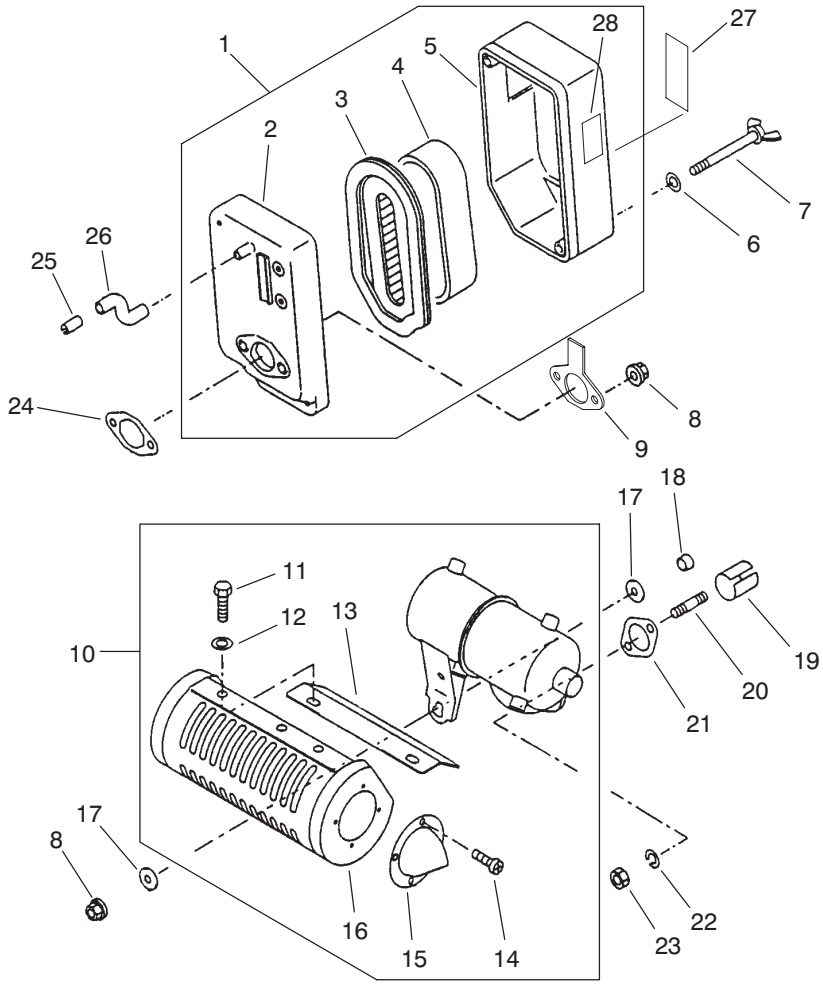

T–1620A

ENGINE
AIR FILTER & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–8634	Asm. – Air Filter (Incl. Ref. #2–5)	1
2	93–8635	Case – Air Filter	1
3	93–8636	Element – Air Filter	1
4	93–8637	Element – Air Filter	1
5	93–8638	Cap – Air Filter	1
6	93–8639	Washer	22
7	93–8640	Bolt	2
8	93–8641	Nut	3
9	93–8642	Plate – Air Filter	1
10	93–8643	Asm.– Muffler (Incl. Ref. #11–16)	1
11	93–8644	Bolt	4
12	93–8645	Washer	4
13	93–8646	Cover – Muffler	1

Ref. No.	Part No.	Description	No. Used
14	93–8647	Screw	4
15	93–8648	Pipe – Tail	1
16	93–8649	Cover – Muffler	1
17	93–8650	Washer	2
18	93–8651	Collar	1
19	93–8652	Pipe – Exhaust	1
20	94–6848	Bolt – Stud	2
21	93–8654	Gasket – Muffler	1
22	93–8655	Washer – Spring	2
23	93–8656	Nut – Hex.	2
24	93–8657	Gasket – Air Filter	1
25	93–8658	Pipe	1
26	93–8659	Tube	1
27	93–8690	Decal – Maintenance	1
28	93–8687	Decal – Choke	1

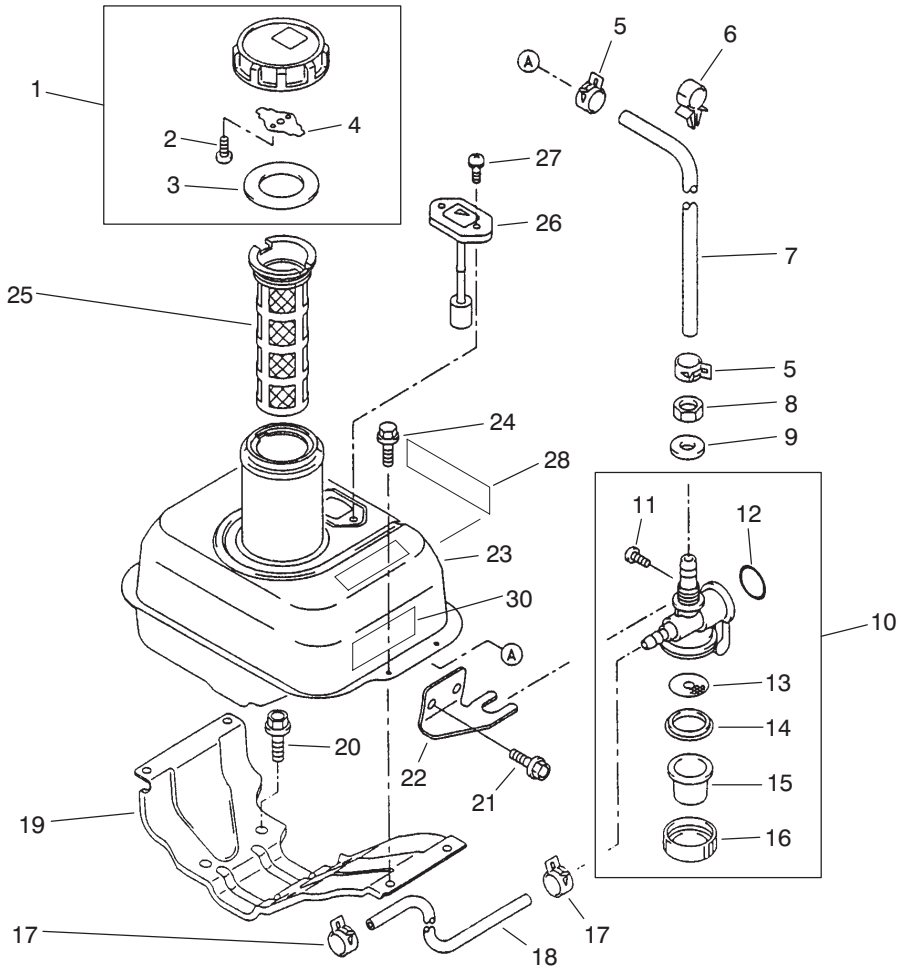

ENGINE
FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93—8660	Asm. — Fuel Cap (Incl. Ref. #2—4)	1
2	93—8661	Screw	2
3	93—8662	Gasket	1
4	93—8663	Spring	1
5	93—8664	Clamp	2
6	93—8665	Clamp	1
7	93—8666	Tube	1
8	94—9042	Nut	1
9	93—8668	Washer	1
10	93—8669	Asm. — Tap (Incl. Ref. #11—16)	1
11	93—8670	Screw	1
12	93—8671	Seal — O—Ring	1
13	94—6849	Filter — Tap	1
14	93—8673	Gasket	1

Ref. No.	Part No.	Description	No. Used
15	93—8674	Cup — Tap	1
16	93—8675	Nut	1
17	93—8676	Clamp	2
18	93—8677	Tube	1
19	93—8678	Bracket — Tank	1
20	94—6825	Bolt — Flanged	4
21	93—8680	Bolt — Flanged	2
22	93—8681	Bracket	1
23	93—8682	Tank — Fuel	1
24	93—8683	Bolt	4
25	94—6826	Filter — Fuel	1
26	93—8685	Gauge — Fuel	1
27	93—8686	Screw	2
28	94—9028	Decal — Model	1
30	93—8692	Decal — Warning	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3—5787	Spring	13	2	1
11—9030	Bolt — Shoulder	11	13	3
11—9030	Bolt — Shoulder	13	14	2
11—9030	Bolt — Shoulder	9	29	1
11—9030	Bolt — Shoulder (Europe)	13	46	2
12—9140	Decal	15	1	1
29—9080	Handle	15	3	1
29—9090	Hose — Handle	15	4	1
36—4310	Brush	15	5	1
38—7820	Bearing — Ball	3	7	1
38—7820	Bearing — Ball	6	8	2
38—7820	Bearing — Ball	12	44	2
38—7820	Bearing — Ball	9	47	2
48—7610	Screw — HH	6	35	8
48—7700	Screw — Cap Hex. Hd.	11	22	7
48—7700	Screw — HH	6	33	6
48—9460	Screw — Cap Hex. Hd.	11	40	1
52—2860	Washer	5	13	4
52—2890	Bushing — Steering Links	2	56	2
52—2900	Washer — Poly	5	12	4
52—3180	Bearing	2	40	2
52—3180	Bearing — Front Roller	14	1	2
53—4420	Decal — Fuel	12	51	1
57—4910	Screw — Special	5	17	16
62—5070	Decal — Warning	5	5	1
63—8440	Decal — Hot	11	18	1
63—9510	Asm. — Bushing	2	57	2
65—5210	Belt	6	45	1
65—6200	Belt — Drive, Reel	4	57	1
65—6220	Cover — Bearing	6	40	1
65—6270	Bolt — Bedbar	5	15	2
65—6290	Spring — Detent, Clutch	3	21	1
65—6450	Bracket — Shield LH	5	11	1
65—6460	Bracket — Shield RH	5	2	1
65—6520	Spacer — Bearing	7	5	1
65—6530	Spacer — Seal	7	7	1
65—6590	Flangette	6	51	2
65—6660	Pulley	6	18	2
65—6700	Flangette	9	19	1
65—6710	Flangette	9	17	1
65—6720	Plate — Screw	9	12	1
65—6760	Housing — Bearing	9	37	1
65—6810	Support — Brake	9	45	2
65—6850	Key	3	35	1
65—6850	Key	10	50	1
65—6901	Strip — Cover Seal	10	54	1
65—6902	Strip — Cover Seal	9	7	1
65—6903	Strip — Cover Seal	10	55	1
65—6940	Clutch — Jaw Driver	3	18	1
65—6950	Clutch — Jaw Driven	3	17	1
65—6970	Seal — Felt	3	44	1
65—6980	Key	3	16	1
65—7131	Trim — Cover, Arm	4	52	1
65—7190	Cover — Arm, Groomer	4	51	1
65—7510	Grommet — Handle	1	27	2
65—7660	Decal — Reel Engagement	3	4	1
65—7880	Spring — Extension	1	10	1
65—7890	Bracket	1	9	1
65—7900	Retainer — Spring	1	12	1
65—7910	Spacer	1	17	2
65—7940	Tire	6	26	2
65—7950	Tube W/Valve Stem	6	34	2
65—7960	Rim — Deep	6	27	2
65—7970	Rim — Shallow	6	25	2
65—7980	Nut — Flange	6	36	8
65—8020	Lever — Retaining	6	29	2
65—8030	Bolt — Mounting, Long	6	31	2
65—8040	Bolt — Mounting, Short	6	32	2
65—8050	Spring	6	30	2
65—8260	Spacer — Engine Shaft	11	12	1
65—8270	Washer	11	39	1
65—8290	Standoff — Cover	4	48	2
65—8610	Lever — Brake	9	30	1
65—8640	Housing — Bearing	3	41	1
65—8640	Housing — Bearing	6	48	1
65—8700	Band — Brake	9	35	1
65—8720	Closure	6	54	2
65—8730	Clamp — Bearing	6	2	4
65—8770	Bushing	11	10	4
65—8910	Pulley — Countershaft	10	52	1
65—8960	Boot — Clutch	3	27	1
65—8970	Knob — Black	13	29	1
65—8971	Knob — Red	13	20	1
65—9080	Belt	10	51	1
65—9120	Pulley — Differential	7	10	1
66—2921	Washer — Friction	13	5	2
67—5360	Decal — Danger	11	26	1
68—9420	Washer — Lock	6	24	6
83—2560	Decal — Hot (Japan)	11	18	1
84—6560	Decal — Warning (Japan)	5	5	1
84—7280	Decal — Danger (Japan)	11	26	1
86—7130	Spacer	6	17	2
86—7130	Spacer — Short	9	36	1
86—7140	Spacer — Long	9	49	1
87—5490	Switch (Europe)	13	44	1
87—5490	Switch	11	16	1
88—7090	Spacer — LH	1	*	1
88—7100	Spacer — RH	1	6	1
88—7150	Key — Square	3	31	2
88—7170	Lever — Clutch	3	29	1
88—7190	Spacer — Pulley Support	6	13	2
88—7190	Spacer — Support, Pulley	4	53	1
88—7200	Washer — Flat	3	6	1
88—7200	Washer — Flat	6	10	2
88—7200	Washer — Flat	9	10	1
88—7230	Housing — Countershaft	9	16	1
88—7240	Cover — Box Front	10	56	1
88—7250	Cover — Box Rear	9	6	1
88—7350	Spacer — Pulley Support	12	42	1
88—7380	Spacer — Pulley Support	9	11	1
88—7450	Spacer	13	24	2
88—7470	Housing — LH	6	12	1
88—7490	Housing — RH	6	*	1
88—7510	Shaft — Drum RH	7	*	1
88—7520	Shaft — Drum LH	7	14	1
88—7530	Spacer	6	11	2
88—7540	Washer — Backup	6	46	2
88—7570	Asm. — Wheel, Transport	6	*	
88—7580	Shaft — Wheel, LH	6	23	1
88—7590	Shaft — Wheel, RH	6	*	1
88—7610	Hub	6	28	2
88—7620	Decal — Danger	11	19	1
88—7670	Base — Engine	1	26	1
88—7680	Cover — Drum Belt LH	6	22	1
88—7690	Cover — Drum Belt RH	6	*	1
88—7700	Cover — Reel Drive	3	3	1
88—7710	Seal — Countershaft	10	53	1
88—7720	Washer — Wave	3	45	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
88–7770	Seal – Strip, Front	4	60	1
88–7780	Seal – Strip, Rear	4	59	1
88–7790	Seal – Strip, Upper	4	61	1
88–7800	Seal – Strip, Lower	4	58	1
88–7810	Seal – Strip, Drum Cover	6	41	1
88–7830	Asm. – Clutch & Pulley	3	15	1
88–7840	Asm. – Pulley & Drive	4	56	1
88–7850	Asm. – Pulley, Idler	6	14	1
88–7850	Asm. – Pulley, Idler	4	54	1
88–7860	Spacer	3	26	1
88–7870	Asm. – Pulley, Idler	9	46	1
88–7880	Bearing	6	52	2
88–7890	Idler Pulley Assembly	12	43	1
88–7960	Bracket – Throttle Cable	11	27	1
88–7970	Clip	9	25	1
88–8950	Decal – Warning, Belt	1	4	3
92–4813	Decal – Danger (Japan)	11	19	1
92–4817	Decal – Reel Engagement	3	4	1
92–7302	Nut – Bearing Lock	6	42	1
92–8013	Housing – Clutch	3	33	1
92–8914	Bolt – Tapered Face	2	47	4
92–9212	Pulley – Input Shaft	9	34	1
92–9216	Pulley – Input Drive	11	11	1
92–9218	V–Belt, Matched Set	11	38	1
93–1448	Asm. – Cover, Bracket	9	13	1
93–6000	Pin – Handle Pivot	13	36	2
93–6003	Lever – Clutch	11	35	1
93–6011	Spring – Torsion	11	14	1
93–6012	Spring – Torsion, Clutch	11	32	1
93–6013	Shield – Belt	11	33	1
93–6014	Lever	11	9	1
93–6015	Bracket – Clutch	11	17	1
93–6016	Washer – Retaining	13	4	1
93–6017	Lever – Throttle	13	6	1
93–6019	Bracket – Clutch	13	28	1
93–6022	Bracket – Brake	13	17	1
93–6024	Bushing – Handle, Support	2	29	2
93–6029	Pin – Ring	2	31	2
93–6036	Console	13	32	1
93–6037	Arm – Handle, RH	2	*	1
93–6038	Arm – Handle, LH	2	28	1
93–6046	Bracket – Console RH	13	10	1
93–6047	Bracket – Console LH	13	19	1
93–6048	Bracket – HOC, RH	2	*	1
93–6049	Bracket – HOC, LH	2	39	1
93–6051	Screw – Height–of–Cut	2	34	2
93–6057	Lever – Clutch	13	25	1
93–6058	Lever – Brake	13	18	1
93–6064	Seal – Grass Catcher	2	48	1
93–6073	Retainer	11	4	1
93–6074	Stud	11	3	1
93–6078	Bracket – Switch (Europe)	13	43	1
93–6079	Spacer (Europe)	13	42	2
93–6083	Screw	13	13	10
93–6083	Screw (Europe)	13	13	8
93–6085	Decal – Throttle	13	27	1
93–6090	Arm – Height–of–Cut	2	38	2
93–6092	Guard – Muffler (Europe)	12	47	1
93–6098	Decal – Service	5	4	1
93–6099	Washer	11	31	1
93–7252	Decal – CE Mark (Europe)	1	22	1
93–7273	Decal – Danger (Europe)	11	26	1
93–7285	Decal – Service (Danish)	5	4	1
93–7286	Decal – Service (Dutch)	5	4	1
93–7287	Decal – Service (Finnish)	5	4	1
93–7288	Decal – Service (Italian)	5	4	1
93–7289	Decal – Service (Norwegian)	5	4	1
93–7290	Decal – Service	5	4	1
93–7291	Decal – Service (Swedish)	5	4	1
93–7346	Decal – Reel Engagement	3	4	1
93–7348	Decal – Danger (Europe)	11	19	1
93–7842	Decal – Blank (Japan)	1	22	1
93–8064	Decal – Warning (Europe)	5	5	1
93–8069	Decal – Hot (Europe)	11	18	1
93–8500	Ring – Retaining	16	1	2
93–8501	Pin – Piston	16	2	1
93–8502	Piston	16	3	1
93–8503	Piston Ring Set	16	4	1
93–8504	Gasket – Head	16	5	1
93–8505	Head – Cylinder	16	6	1
93–8506	Bolt – Flanged	16	7	4
93–8508	Case – Rocker	16	9	1
93–8509	Gasket – Rocker	16	10	2
93–8510	Breather	16	11	1
93–8511	Seal – Oil	16	12	2
93–8512	Pin	16	13	2
93–8513	Plug – Drain	16	14	2
93–8514	Gasket – Drain Plug	16	15	2
93–8515	Crankcase	16	16	1
93–8516	Pin	16	17	2
93–8517	Bearing – Ball	16	18	3
93–8518	Asm. – Crankshaft	16	19	1
93–8520	Cover – Crankcase	16	21	1
93–8521	Bolt – Flanged	16	22	7
93–8523	Cap – Oil Filler	16	24	2
93–8524	Stud	16	25	1
93–8525	Gasket – Crankcase	16	26	1
93–8526	Key	16	27	1
93–8527	Bolt – Rod	16	28	2
93–8528	Asm. – Connecting Rod	16	29	1
93–8529	Valve – Exhaust	17	1	1
93–8530	Spring – Valve	17	2	2
93–8531	Retainer – Spring	17	3	2
93–8532	Valve – Intake	17	4	1
93–8533	Nut	17	5	2
93–8534	Nut	17	6	2
93–8535	Arm – Rocker	17	7	2
93–8536	Bolt	17	8	2
93–8537	Guide	17	9	1
93–8538	Rod – Push	17	10	2
93–8539	Tappet	17	11	2
93–8540	Pin	17	12	2
93–8541	Spring	17	13	1
93–8542	Pin	17	14	1
93–8543	Decompressor	17	15	1
93–8544	Asm. – Camshaft	17	16	1
93–8545	Key	17	17	1
93–8546	Switch	18	9	1
93–8548	Bolt – Flanged	18	6	2
93–8549	Screw	18	4	2
93–8550	Bolt – Flanged	18	7	10
93–8552	Asm. – Recoil Starter	18	10	1
93–8553	Screw	18	11	1
93–8554	Pawl – Recoil	18	12	2
93–8555	Spring – Return	18	13	2
93–8556	Reel – Recoil	18	14	1
93–8557	Spring	18	15	1
93–8560	Rope	18	19	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
93–8561	Ring – Retaining	18	20	1
93–8562	Guide – Pawl	18	21	1
93–8563	Shroud – Engine	18	23	1
93–8564	Collar	18	24	1
93–8565	Shroud – Engine	18	25	1
93–8566	Bolt – Flanged	18	26	1
93–8567	Pulley – Recoil	18	27	1
93–8568	Nut	18	28	1
93–8569	Washer	18	29	1
93–8571	Key	18	31	1
93–8572	Fan	18	32	1
93–8582	Grommet	18	2	1
93–8583	Clamp	18	3	1
93–8584	Plug – Spark	18	36	1
93–8585	Cap – Spark Plug	18	37	1
93–8587	Panel – Control	19	1	1
93–8588	Spring	19	2	2
93–8589	Bolt	19	3	2
93–8590	Washer	19	4	1
93–8591	Spring	19	5	1
93–8592	Plate	19	6	1
93–8593	Spring	19	7	1
93–8594	Spacer	19	8	1
93–8595	Nut	19	9	1
93–8597	Nut	19	11	1
93–8598	Lever	19	12	1
93–8599	Asm. – Control Panel	19	13	1
93–8600	Bolt – Flanged	19	14	2
93–8601	Spring	19	15	1
93–8602	Rod – Governor	19	16	1
93–8603	Arm – Governor	19	17	1
93–8606	Bolt	19	20	1
93–8607	Pin – Snap	19	21	1
93–8608	Washer	19	22	1
93–8609	Arm – Pivot	19	23	1
93–8610	Sleeve	19	24	1
93–8613	Gasket – Carburetor	20	1	3
93–8617	Valve – Choke	20	5	1
93–8619	Asm. – Screw	20	7	1
93–8624	Gasket	20	12	1
93–8625	Asm. – Float Chamber	20	13	1
93–8626	Asm. – Screw	20	14	1
93–8627	Bolt	20	15	1
93–8628	Bolt – Stud	20	16	2
93–8629	Clamp	20	17	1
93–8630	Tube	20	18	1
93–8631	Nut	19	18	1
93–8631	Nut	20	19	2
93–8632	Bolt – Stud	20	20	2
93–8633	Pipe – Intake	20	21	1
93–8634	Asm. – Air Filter	21	1	1
93–8635	Case – Air Filter	21	2	1
93–8636	Element – Air Filter	21	3	1
93–8637	Element – Air Filter	21	4	1
93–8638	Cap – Air Filter	21	5	1
93–8639	Washer	21	6	22
93–8640	Bolt	21	7	2
93–8641	Nut	21	8	3
93–8642	Plate – Air Filter	21	9	1
93–8643	Asm.– Muffler	21	10	1
93–8644	Bolt	21	11	4
93–8645	Washer	21	12	4
93–8646	Cover – Muffler	21	13	1
93–8647	Screw	21	14	4
93–8648	Pipe – Tail	21	15	1
93–8649	Cover – Muffler	21	16	1
93–8650	Washer	21	17	2
93–8651	Collar	21	18	1
93–8652	Pipe – Exhaust	21	19	1
93–8654	Gasket – Muffler	21	21	1
93–8655	Washer – Spring	21	22	2
93–8656	Nut – Hex.	21	23	2
93–8657	Gasket – Air Filter	21	24	1
93–8658	Pipe	21	25	1
93–8659	Tube	21	26	1
93–8660	Asm. – Fuel Cap	22	1	1
93–8661	Screw	22	2	2
93–8662	Gasket	22	3	1
93–8663	Spring	22	4	1
93–8664	Clamp	22	5	2
93–8665	Clamp	22	6	1
93–8666	Tube	22	7	1
93–8668	Washer	22	9	1
93–8669	Asm. – Tap	22	10	1
93–8670	Screw	22	11	1
93–8671	Seal – O–Ring	22	12	1
93–8673	Gasket	22	14	1
93–8674	Cup – Tap	22	15	1
93–8675	Nut	22	16	1
93–8676	Clamp	22	17	2
93–8677	Tube	22	18	1
93–8678	Bracket – Tank	22	19	1
93–8680	Bolt – Flanged	22	21	2
93–8681	Bracket	22	22	1
93–8682	Tank – Fuel	22	23	1
93–8683	Bolt	22	24	4
93–8685	Gauge – Fuel	22	26	1
93–8686	Screw	22	27	2
93–8687	Decal – Choke	21	28	1
93–8689	Decal – Instruction	18	34	1
93–8690	Decal – Maintenance	21	27	1
93–8692	Decal – Warning	22	30	1
93–9008	Decal – Bail (Europe)	13	47	1
93–9009	Bail Asm. (Europe)	13	41	1
93–9012	Decal – Console	13	31	1
93–9014	Pin – Actuator, Clutch	3	20	1
93–9015	Bedknife – 1/8	5	18	1
93–9017	Rod – Basket, RH	2	*	1
93–9018	Rod – Basket, LH	2	41	1
93–9019	Kickstand	1	23	1
93–9024	Cable Assembly – Link	11	36	1
93–9026	Frame – Rear	2	49	1
93–9029	Reel – 8 Blade	5	16	1
93–9032	Frame – Front	2	51	1
93–9039	Asm. – Roller, Wiehle	2	42	1
93–9041	Differential	7	9	1
93–9042	Drum – Long	7	1	2
93–9043	Washer – Belleville	1	14	32
93–9044	Handle	13	38	1
93–9049	Bedbar	5	1	1
93–9356	Decal – Warning, Belt	1	4	3
93–9389	Decal – Warning, Belt	1	4	3
93–9391	Decal – Service (French)	5	4	1
93–9392	Decal – Service (Spanish)	5	4	1
93–9393	Decal – Service (German)	5	4	1
93–9394	Decal – Service (Japan)	5	4	1
93–9886	Decal – Fuel (Europe)	12	51	1
93–9886	Decal – Fuel (Japan)	12	51	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
94–3431	Module – Interlock (Europe)	12	50	1
94–5850	Spindle – Drum	7	2	1
94–5852	Hub – Drum	7	6	1
94–5853	Channel – Adjuster	2	50	2
94–5854	Adjuster – Frame, Bedbar	2	52	2
94–5855	Nut – Spring	1	15	2
94–5856	Spring – Detent	2	53	2
94–5858	Washer	1	16	2
94–5859	Washer – Hardened	1	13	2
94–5860	Module – Interlock	12	50	1
94–5861	Bracket – Module	12	48	1
94–5862	Harness – Wire	11	24	1
94–5865	Harness – Wire (Europe)	11	24	1
94–5866	Boot – Differential	9	2	1
94–5867	Rod – Support, Frame	2	54	1
94–5868	Washer	13	48	2
94–5869	Cable – Throttle	13	1	1
94–5870	Cable – Clutch	13	12	1
94–5871	Cable – Brake	13	15	1
94–5872	Shaft – Power	3	34	1
94–5873	Asm. – Screw	2	55	2
94–5879	Bar – Cutoff	5	3	1
94–5885	Bedknife – Tournament	5	*	1
94–5893	Basket – Grass	7	19	1
94–5894	Channel – Basket	7	18	1
94–6313	Decal – Console (Europe)	13	31	1
94–6314	Decal – Console (Japan)	13	31	1
94–6825	Bolt – Flanged	22	20	4
94–6826	Filter – Fuel	22	25	1
94–6836	Piston (Oversized)	16	*	1
94–6837	Piston Ring Set (Oversized)	16	*	1
94–6838	Bolt – Flanged	16	8	4
94–6840	Bolt – Flanged	18	33	3
94–6841	Asm. – Governor	19	25	1
94–6842	Washer	19	26	1
94–6844	Asm. – Float	20	11	1
94–6845	Screw	20	22	1
94–6846	Clamp	20	23	1
94–6848	Bolt – Stud	21	20	2
94–6849	Filter – Tap	22	13	1
94–9003	Engine Assembly	11	23	1
94–9004	Plate – Side, RH	1	1	1
94–9005	Plate – Side, LH	2	33	1
94–9007	Cover – Bellcrank	11	1	1
94–9009	Asm. – Grass Shield	5	8	1
94–9011	Bar	15	1	1
94–9015	Screw – Cap Hex. Hd.	12	54	1
94–9015	Screw – HH	19	10	1
94–9016	Pulley – RH	6	*	1
94–9017	Pulley – LH	6	44	1
94–9018	Washer	6	21	2
94–9026	Flywheel	18	30	1
94–9027	Decal – Recoil	18	22	1
94–9028	Decal – Model	22	28	1
94–9030	Spring – Governor	19	19	1
94–9031	Coil – Ignition	18	35	1
94–9032	Asm. – Carburetor	20	3	1
94–9033	Valve – Throttle	20	4	1
94–9035	Nozzle – Main	20	9	1
94–9036	Jet – Main #65	20	10	1
94–9037	Jet – Pilot #40	20	6	1
94–9038	Lead – Wire	18	5	1
94–9039	Clamp	18	1	1
94–9040	Tube	18	39	1
94–9041	Seal – O–Ring	16	23	2
94–9042	Nut	22	8	1
94–9043	Gear – Helical	16	20	1
94–9044	Cap – Grip	18	16	1
94–9045	Grip	18	17	1
94–9046	Case – Recoil	18	18	1
94–9047	Housing – Fan	18	8	1
94–9048	Insulator	20	2	1
94–9049	Terminal	18	38	1
95–0907	Bracket – Skid, Brake	13	16	1
95–0908	Bracket – Skid, Clutch	13	8	1
95–0922	Guide – Belt	12	55	1
95–0923	Flangette	6	55	2
95–0930	Assembly – Roller	14	3	1
95–5731	Screw – Drive	3	30	1
95–5734	Betonite Grease	8	*	1
95–5737	Seal Oil	8	14	2
95–5738	Bearing Needle	8	13	4
95–5739	Screw Flanged Hex Hd.	8	11	4
95–5740	Housing Differential Carrier	8	1A	1
95–5741	Housing Differential Carrier	8	1	1
95–5742	Axle (Short) 9.118	8	3	1
95–5743	Axle (Long) 23.097	8	2	1
95–5744	Washer Thrust	8	7	2
95–5745	Washer	8	8	2
95–5746	Ring – Retaining (Pkg. of 2)	8	10	4
95–5747	Pin Drive	8	6	1
95–5748	Gear Pinion	8	5	2
95–5749	Gear Bevel	8	4	2
233–69	Knob	3	28	1
237–160	Plug	4	62	1
2410–18	Plug	15	2	1
2412–93	Clamp – R	11	20	1
2412–139	Clamp – Hose	9	1	1
2412–140	Clamp – Hose	9	3	1
251–204	Bearing – Ball	3	46	1
251–257	Bearing	7	4	2
251–336	Bearing – Ball	3	14	2
251–338	Bearing	6	16	2
251–338	Bearing	9	40	1
251–342	Bearing	3	47	1
251–342	Bearing	6	47	1
251–343	Bearing	9	18	1
253–96	Seal	3	39	1
253–96	Seal	6	50	1
253–118	Seal	3	36	1
253–159	Seal – Spring Lip	7	3	2
253–160	Seal	6	15	4
253–160	Seal	9	39	2
253–161	Seal – V–Ring	6	20	2
253–163	Seal	6	43	1
253–163	Seal	4	50	1
256–206	Bushing	13	39	2
283–75	Pin – Clevis	9	27	1
302–5	Fitting – Grease	2	43	2
302–5	Fitting – Grease	14	2	2
302–5	Fitting – Grease	11	8	2
302–5	Fitting – Grease	3	32	2
302–5	Fitting – Grease	6	49	1
302–19	Fitting – Grease	6	6	2
302–40	Fitting – Grease 90°	6	53	2
302–55	Fitting – Grease	9	20	1
302–64	Fitting – Grease	9	38	1
321–2	Screw – HH	9	4	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
321–3	Screw – Cap Hex. Hd.	12	49	1
321–3	Screw – HH	5	10	4
321–3	Screw – HH	9	15	2
321–4	Screw – HH	3	25	1
321–8	Screw – HH	13	9	1
321–11	Screw – HH	6	37	8
321–20	Screw – HH	3	1	3
321–23	Screw – HH	4	63	1
322–2	Screw – HH	2	45	4
322–3	Screw – HH	6	4	8
322–3	Screw – HH	3	5	1
322–3	Screw – HH	9	8	1
322–5	Screw – HH	6	7	4
322–5	Screw – HH	1	8	2
322–5	Screw – HH	7	15	8
322–5	Screw – HH	9	26	4
322–5	Screw – HH	3	38	3
322–9	Screw – Cap Hex. Hd.	11	25	4
322–9	Screw – HH	13	7	4
322–9	Screw – HH	7	20	8
322–9	Screw – HH	2	32	2
322–10	Screw – HH	1	11	1
323–4	Screw – Cap Hex. Hd.	11	5	2
323–4	Screw – HH	1	3	10
323–5	Screw – HH	1	24	6
323–5	Screw – HH	9	43	4
323–6	Screw – HH	1	7	2
323–7	Screw – HH	6	39	2
323–11	Screw – Cap Hex. Hd.	11	34	1
323–34	Screw – HH	13	33	2
3210–7	Screw – HH	13	21	2
3218–2	Nut – Hex. Jam	9	23	3
3218–2	Nut – Hex. Jam	2	36	2
3218–20	Nut – Hex. Jam (Europe)	13	45	2
3218–20	Nut – Jam	11	15	2
3220–5	Nut – Hex. Jam	3	10	1
3231–5	Screw – Carriage	2	46	2
3242–4	Screw – Set	2	35	2
3253–3	Washer – Lock	9	5	5
3253–3	Washer – Lock	3	24	1
3253–4	Washer – Lock	6	5	10
3253–4	Washer – Lock	3	9	2
3253–4	Washer – Lock	9	9	7
3253–4	Washer – Lock	7	16	16
3253–4	Washer – Lock	13	22	2
3253–4	Washer – Spring Lock	11	37	7
3253–21	Washer – Lock	1	5	16
3253–21	Washer – Lock	13	34	2
3253–21	Washer – Lock	9	42	4
3253–21	Washer – Spring Lock	11	6	2
3254–4	Washer – Lock, Int. Tooth	3	11	1
3254–6	Washer – Lock, Int. Tooth	1	2	2
3254–6	Washer – Lock, Int. Tooth	9	44	2
3254–8	Washer – Lock, Int. Tooth	3	2	4
3254–8	Washer – Lock, Int. Tooth	6	38	8
3255–8	Washer – Lock	2	44	4
3255–9	Washer – External Lock	11	21	2
3256–2	Washer – Flat	1	19	3
3256–2	Washer – Flat	11	2	1
3256–22	Washer – Flat	5	7	6
3256–22	Washer – Flat	9	14	2
3256–22	Washer – Flat	12	53	1
3256–23	Washer – Flat	7	11	4
3256–23	Washer – Flat	13	23	2
3256–24	Washer – Flat	1	25	6
3256–24	Washer – Flat	13	35	2
3256–24	Washer – Flat	9	41	4
3256–56	Washer – Flat	11	7	10
3257–32	Key – Woodruff	7	13	2
3257–32	Key – Woodruff	9	32	1
3257–32	Key – Woodruff	3	37	1
3272–6	Pin – Cotter	9	28	2
3272–8	Pin – Cotter	9	31	1
3289–23	Screw – Flat Head	4	55	2
3290–378	Tie – Cable	13	40	2
3290–409	Rivet	7	17	9
3290–414	Washer – Belleville	3	23	1
3290–467	Pin – Cotter, Hair	2	30	2
3290–485	Washer – Wave	3	42	1
3296–28	Nut – Lock	13	37	2
3296–29	Nut – Lock	6	3	4
3296–29	Nut – Lock	7	12	4
3296–29	Nut – Lock	1	20	4
3296–29	Nut – Lock	13	26	4
3296–29	Nut – Lock	11	30	4
3296–29	Nut – Lock	3	43	2
3296–33	Nut – Lock	7	8	1
3296–39	Nut – Lock	6	1	2
3296–39	Nut – Lock	2	37	2
3296–39	Nut – Lock	3	40	2
3296–39	Nut – Lock	12	46	1
3296–42	Nut – Lock	5	6	4
3296–42	Nut – Lock	13	11	2
3296–42	Nut – Lock	3	22	1
3296–42	Nut – Lock	9	24	1
3296–42	Nut – Lock	11	41	4
3296–48	Nut – Lock	1	21	2
3296–56	Nut – Lock	13	3	1
3296–57	Nut – Lock	6	19	2
3296–57	Nut – Lock	9	33	1
32103–2	Nut – Wing	15	3	1
32120–11	Ring – Retaining	3	19	1
32120–42	Ring – Retaining	3	8	1
32120–42	Ring – Retaining	6	9	2
32120–42	Ring – Retaining	12	45	1
32120–42	Ring – Retaining	9	48	1
32122–36	Screw – Truss Hd.	15	2	1
32128–25	Nut – Flange	1	18	1
32128–48	Nut – Flange	5	14	2
32144–73	Screw – HWHTF	5	9	6
32144–73	Screw – Hex. Washer Hd.	11	29	1
32148–6	Insert – Threaded	2	58	9
32151–89	Ring – Retaining	3	13	1
32151–92	Ring – Retaining	4	49	1
32151–95	Ring – Retaining	3	12	2
33113–012	Screw – HH (Europe)	12	52	4

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Greensmaster 1600 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the rear frame cross channel. In any correspondence concerning the Greensmaster 1600, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Greensmaster 1600.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Frame Assembly	1—2	Full Roller Assembly	14
Reel Drive Assembly	3—4	Special Tools	15
Reel Assembly	5	Engine Crankcase Assembly	16
Drum Drive Assembly	6	Engine Camshaft & Valves Assembly	17
Drum & Basket Assembly	7	Engine Ignition Assembly	18
Differential Assembly		Engine Governor Assembly	19
Peerless Model No. 100—116	8	Engine Carburetor Assembly	20
Countershaft Assembly	9—10	Engine Air Filter & Muffler Assembly	21
Engine & Bellcrank Assembly	11—12	Engine Fuel Tank Assembly	22
Handle Assembly	13	TORO Part Number Index	23—27

Japanese parts kit number 94—5895 contains all of the individual parts on the preceding pages designated as (Japan).

European parts kit number 93—6901 contains all of the individual parts on the preceding pages designated as (Europe).

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.