Form No. 3375-779 Rev C

TORO®

Count on it.

Parts Catalog

# TITAN® MX5480 Zero-Turn-Radius Riding Mower

**Model No. 74872—Serial No. 313000001 and Up**

Register at www.Toro.com.
Original Instructions (EN)

*3375-779* C

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquefied Petroleum Gas

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head

# Contents

Frame, Front Axle and Caster Wheel Assembly . . . . . 4
Wheel and Tire Assembly No. 121-0712 . . . . . 5
Control Panel and Body Styling Pod Assembly . . . . . 6
Deck Lift Assembly . . . . . 7
Traction Drive Assembly . . . . . 8
RH Hydro Transmission Assembly No. 119-8893 . . . . . 10
LH Hydro Transmission Assembly No. 119-8892 . . . . . 12
Motion Control Assembly . . . . . 14
Brake Link Assembly . . . . . 16
Engine, Muffler and Clutch Assembly . . . . . 17
Fuel Delivery Assembly . . . . . 18
Multi Layer Fuel Tank Assembly No. 117-7352 . . . . . 19
Roll-Over Protection System Assembly . . . . . 20
Electrical Assembly . . . . . 21
Seat Assembly . . . . . 22
Seat Assembly No. 121-5659 . . . . . 23
Armrest Kit Assembly No. 110-5719 . . . . . 24
54 Inch Deck Assembly . . . . . 25
54 Inch Deck and Decal Assembly No. 120-7117 . . . . . 26
54 Inch Deck, Belt and Mulch Blade Asseembly . . . . . 27
Attachments and Accessories . . . . . 28

**© 2013—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**



**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

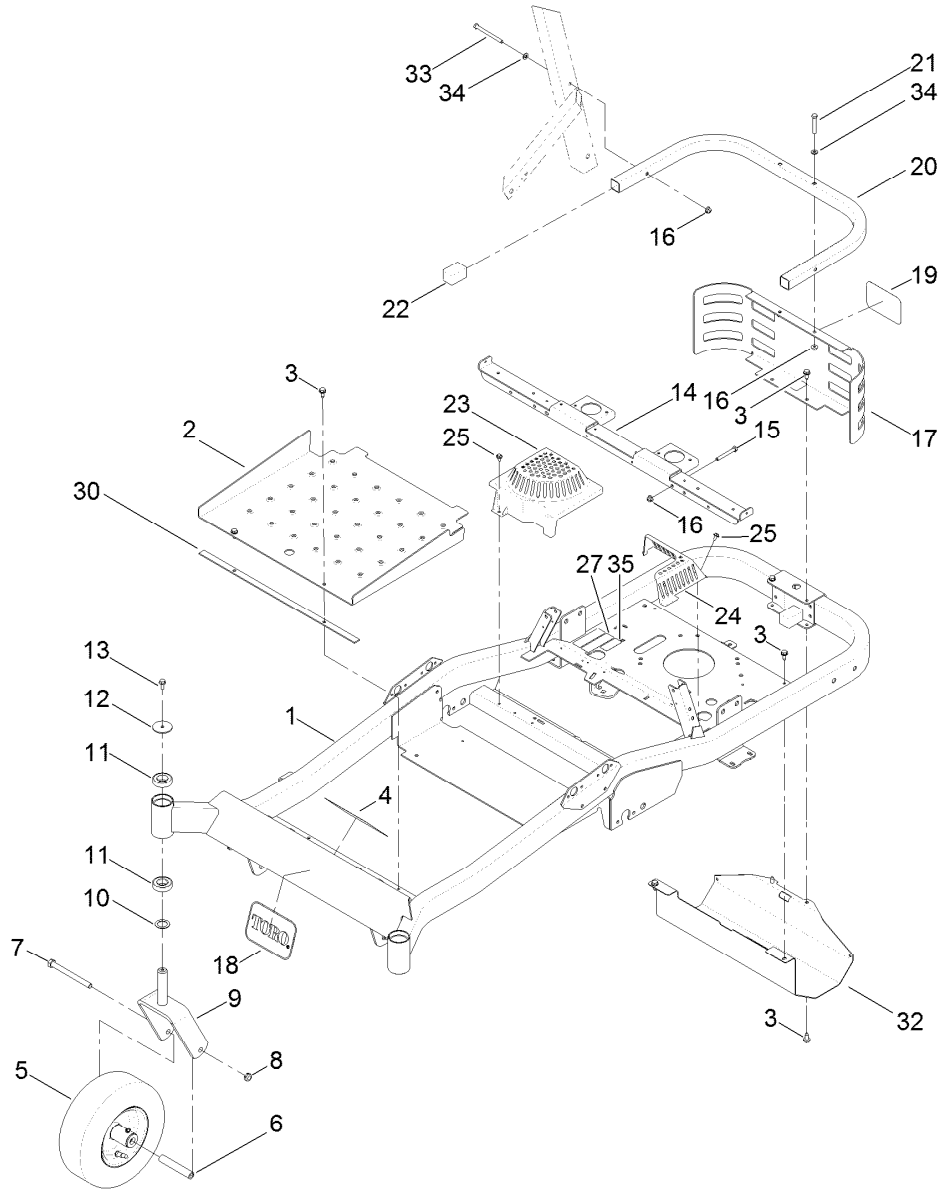


# Frame, Front Axle and Caster Wheel Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 117-7356-01 | 1 | Frame |
| 2 | 115-2531-05 | 1 | Pan-Floor |
| 3 | 32144-70 | 8 | Screw-HWHTF |
| 4 | 120-5466 | 1 | Decal-Safety |
| 5 | 121-0712 | 2 | Wheel And Tire ASM |
| 6 | 120-2228 | 2 | Spacer-Spanner |
| 7 | 325-36 | 2 | Screw-HH |
| 8 | 3296-45 | 2 | Nut-Lock, NI |
| 9 | 119-8923-01 | 2 | Fork-Caster |
| 10 | 10-8110 | 2 | Washer-Thrust |
| 11 | 109-3678 | 4 | Bearing-Ball |
| 12 | 109-3724 | 2 | Washer |
| 13 | 3234-47 | 2 | Screw-HHF |
| 14 | 117-7451-03 | 1 | Support-Seat |
| 15 | 322-12 | 2 | Screw-HH |
| 16 | 104-8300 | 6 | Nut-Flange, NI |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 17 | 120-2248-03 | 1 | Guard-Rear |
| 18 | 62-5550 | 1 | Decal |
| 19 | 105-8278 | 1 | Decal |
| 20 | 121-0704-01 | 1 | Tube-Guard |
| 21 | 322-10 | 2 | Screw-HH |
| 22 | 121-2980 | 2 | Cap |
| 23 | 117-1241 | 1 | Cover-Fan, RH |
| 24 | 117-1242 | 1 | Cover-Fan, LH |
| 25 | 46-8560 | 2 | Screw-HHFTF |
| 27 | 121-3279 | 1 | Decal-Emissions, E P A |
| 30 | 117-7238 | 1 | Strip-Vibration, Anti |
| 32 | 120-2247-03 | 1 | Guard-Muffler |
| 33 | 322-23 | 2 | Screw-HH |
| 34 | 3256-23 | 4 | Washer-Flat |
| 35 | 121-5684 | 1 | Decal-Location, Service Dealer |

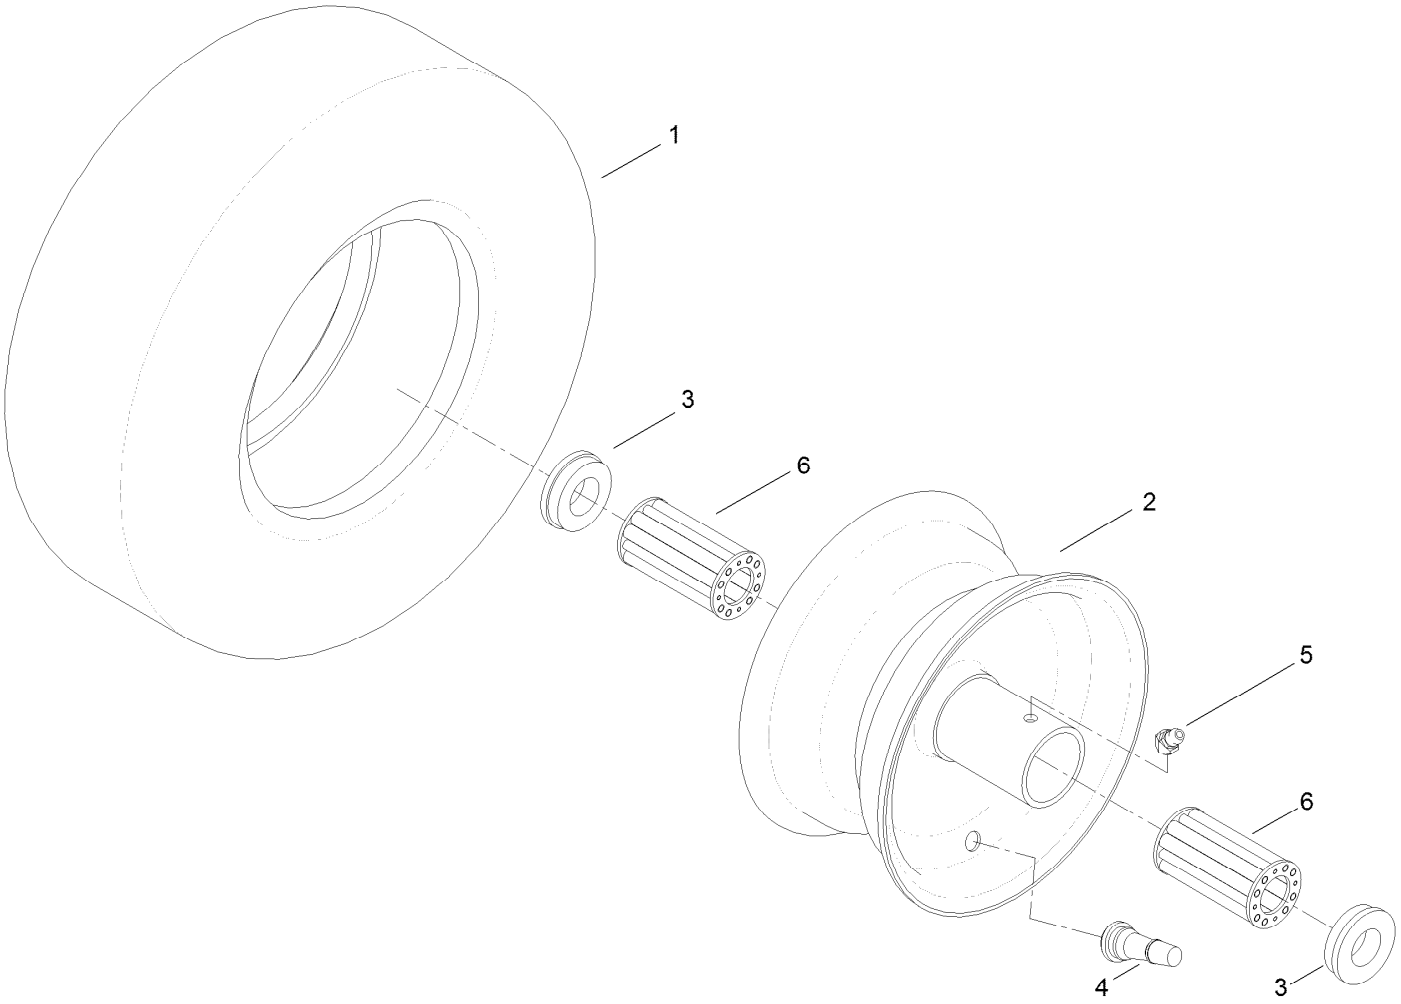


# Wheel and Tire Assembly No. 121-0712

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 121-0713 | 1 | Tire |
| 2 | 125-5511 | 1 | Rim-6 Inch |
| 3 | 120-7124 | 2 | Bushing-Flange |
| 4 | 5108 | 1 | Valve |
| 5 | 120-7125 | 1 | Fitting-Zerk |
| 6 | 83-4740 | 2 | Bearing |

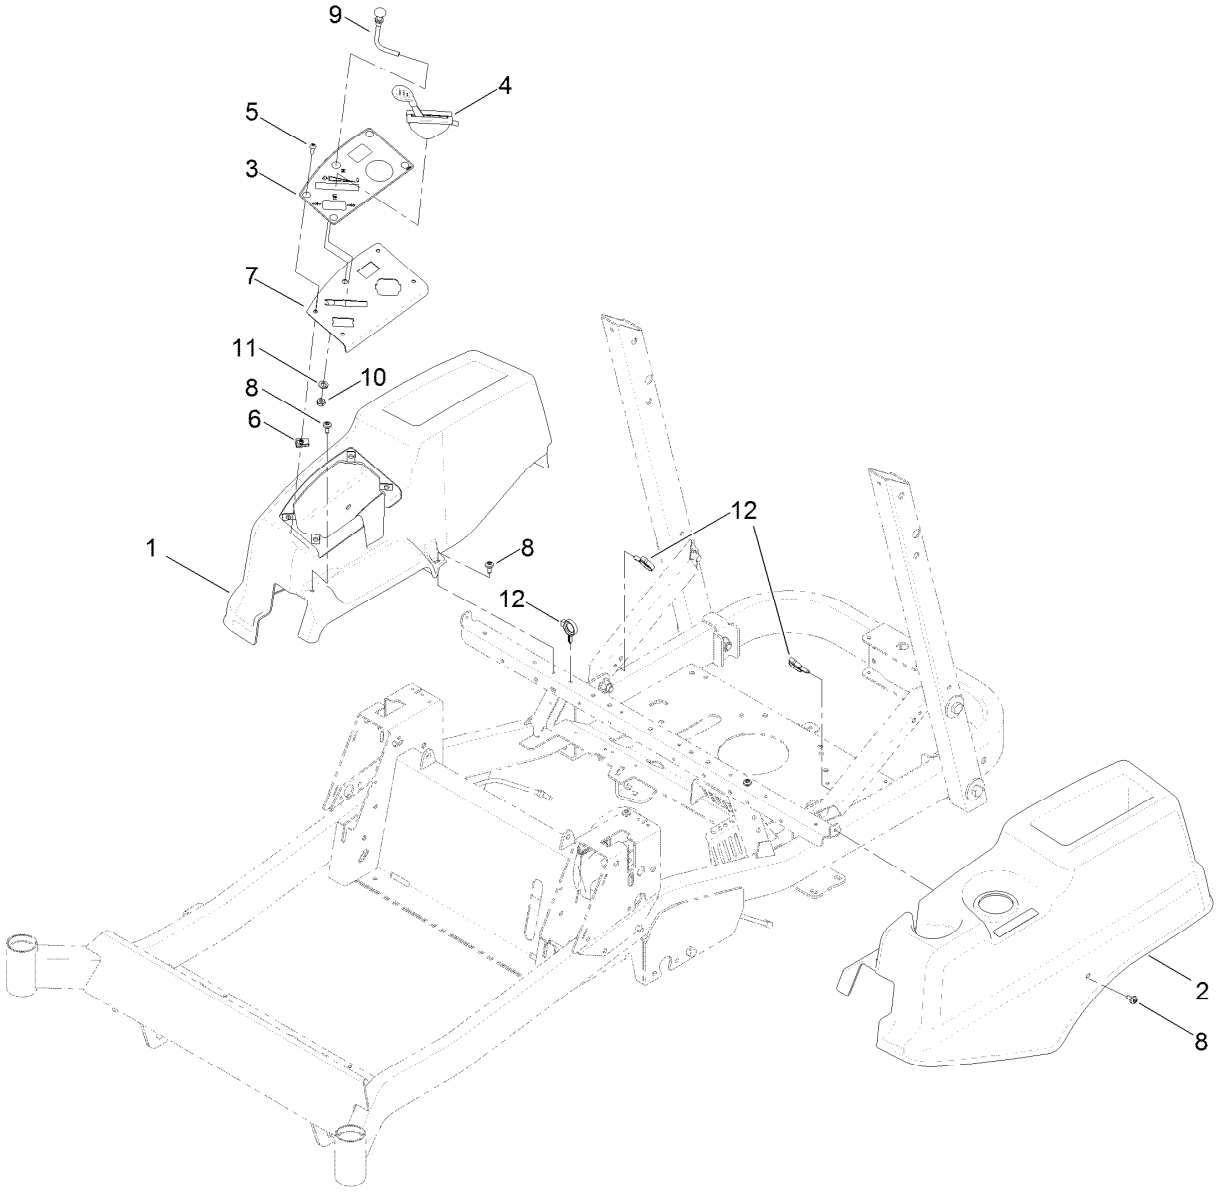


# Control Panel and Body Styling Pod Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 120-5488 | 1 | Pod-RH |
| 2 | 120-5489 | 1 | Pod-LH |
| 3 | 115-9632 | 1 | Decal-Panel, Control |
| 4 | 121-0770 | 1 | Cable-Throttle |
| 5 | 3258-166 | 4 | Screw-PRH |
| 6 | 107069 | 4 | Clip |
| 7 | 115-2591-03 | 1 | Panel-Control |
| 8 | 120-7950 | 6 | Screw-Shoulder |
| 9 | 120-2291 | 1 | Cable-Choke |
| 10 | 3253-21 | 1 | Washer-Lock |
| 11 | 3220-3 | 1 | Nut-HJ |
| 12 | 105-1853 | 2 | Clamp-Hose |

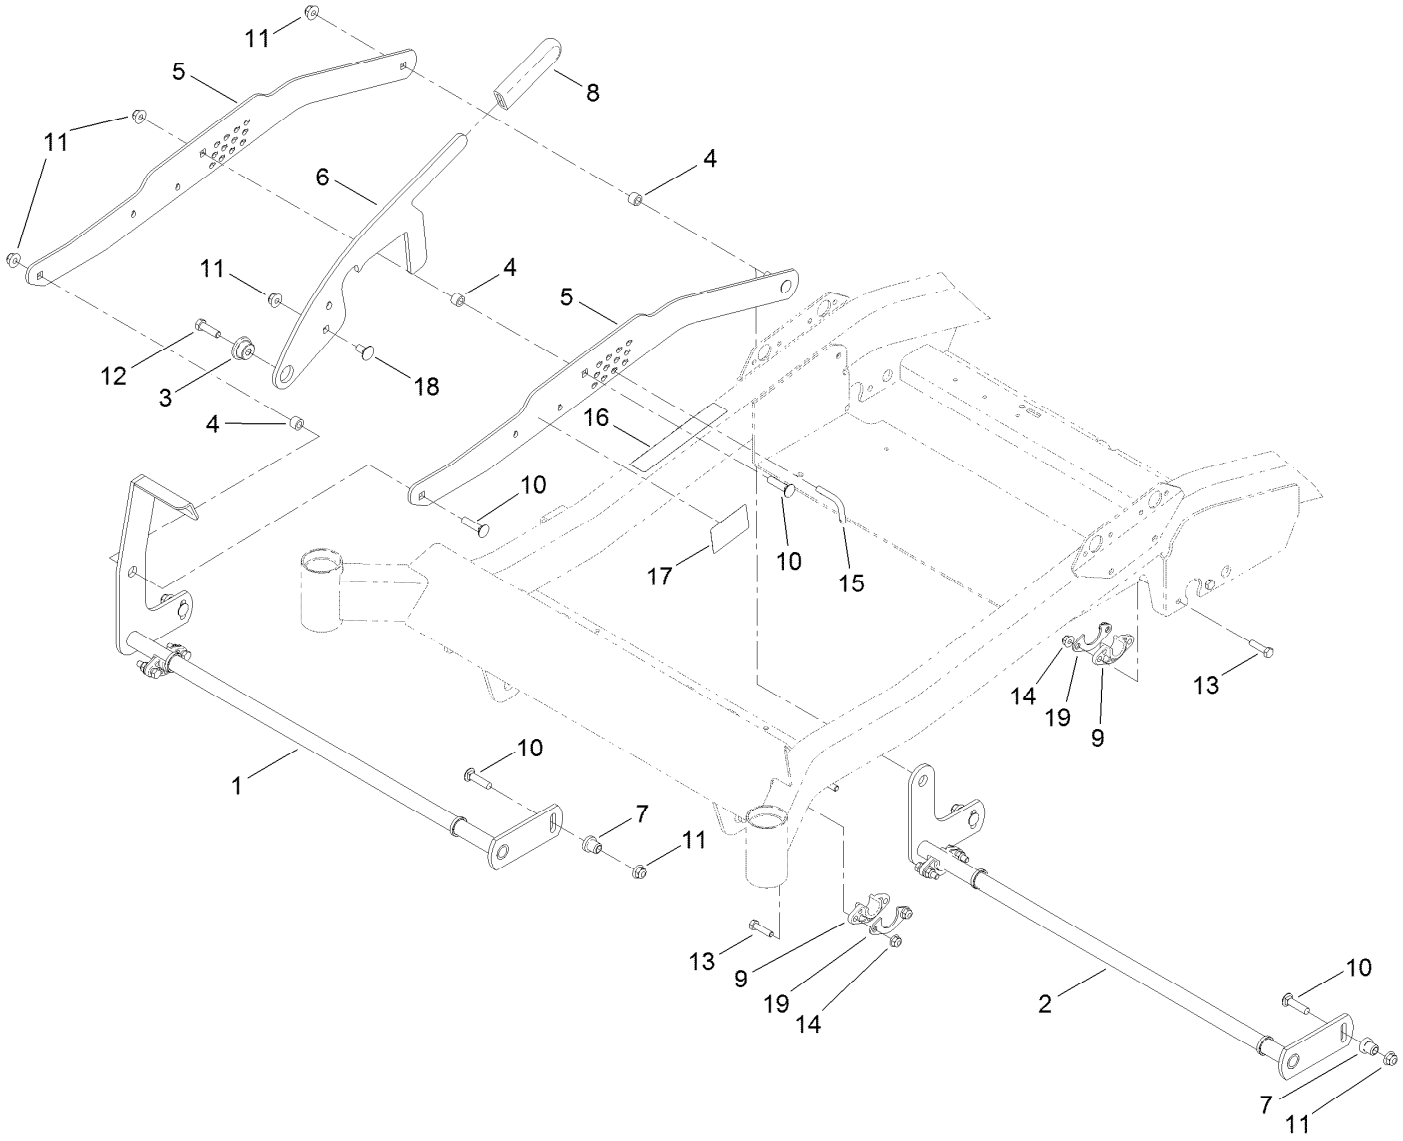


# Deck Lift Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 115-2495-03 | 1 | Pivot-Front |
| 2 | 115-2498-03 | 1 | Pivot-Rear |
| 3 | 117-1281 | 1 | Bushing-Mount, HOC |
| 4 | 115-4986 | 3 | Spacer |
| 5 | 115-2503-03 | 2 | Plate-Lift, Foot |
| 6 | 115-2504 | 1 | Plate-Stop, HOC |
| 7 | 65-5950 | 4 | Bushing-Pulley |
| 8 | 1-633268 | 1 | Grip-Lever |
| 9 | 115-5065 | 4 | Bushing-Flange |
| 10 | 3231-4 | 7 | Screw-CARR |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 11 | 104-8301 | 8 | Nut-Flange, NI |
| 12 | 323-7 | 1 | Screw-HH |
| 13 | 322-6 | 8 | Screw-HH |
| 14 | 104-8300 | 8 | Nut-Flange, NI |
| 15 | 117-1280 | 1 | Pin-Keyed |
| 16 | 115-9644 | 1 | Decal-HOC |
| 17 | 117-5344 | 1 | Decal-Lock, Deck |
| 18 | 3231-1 | 1 | Screw-CARR |
| 19 | 116-2887 | 4 | Gusset-Deck Lift |

# Traction Drive Assembly

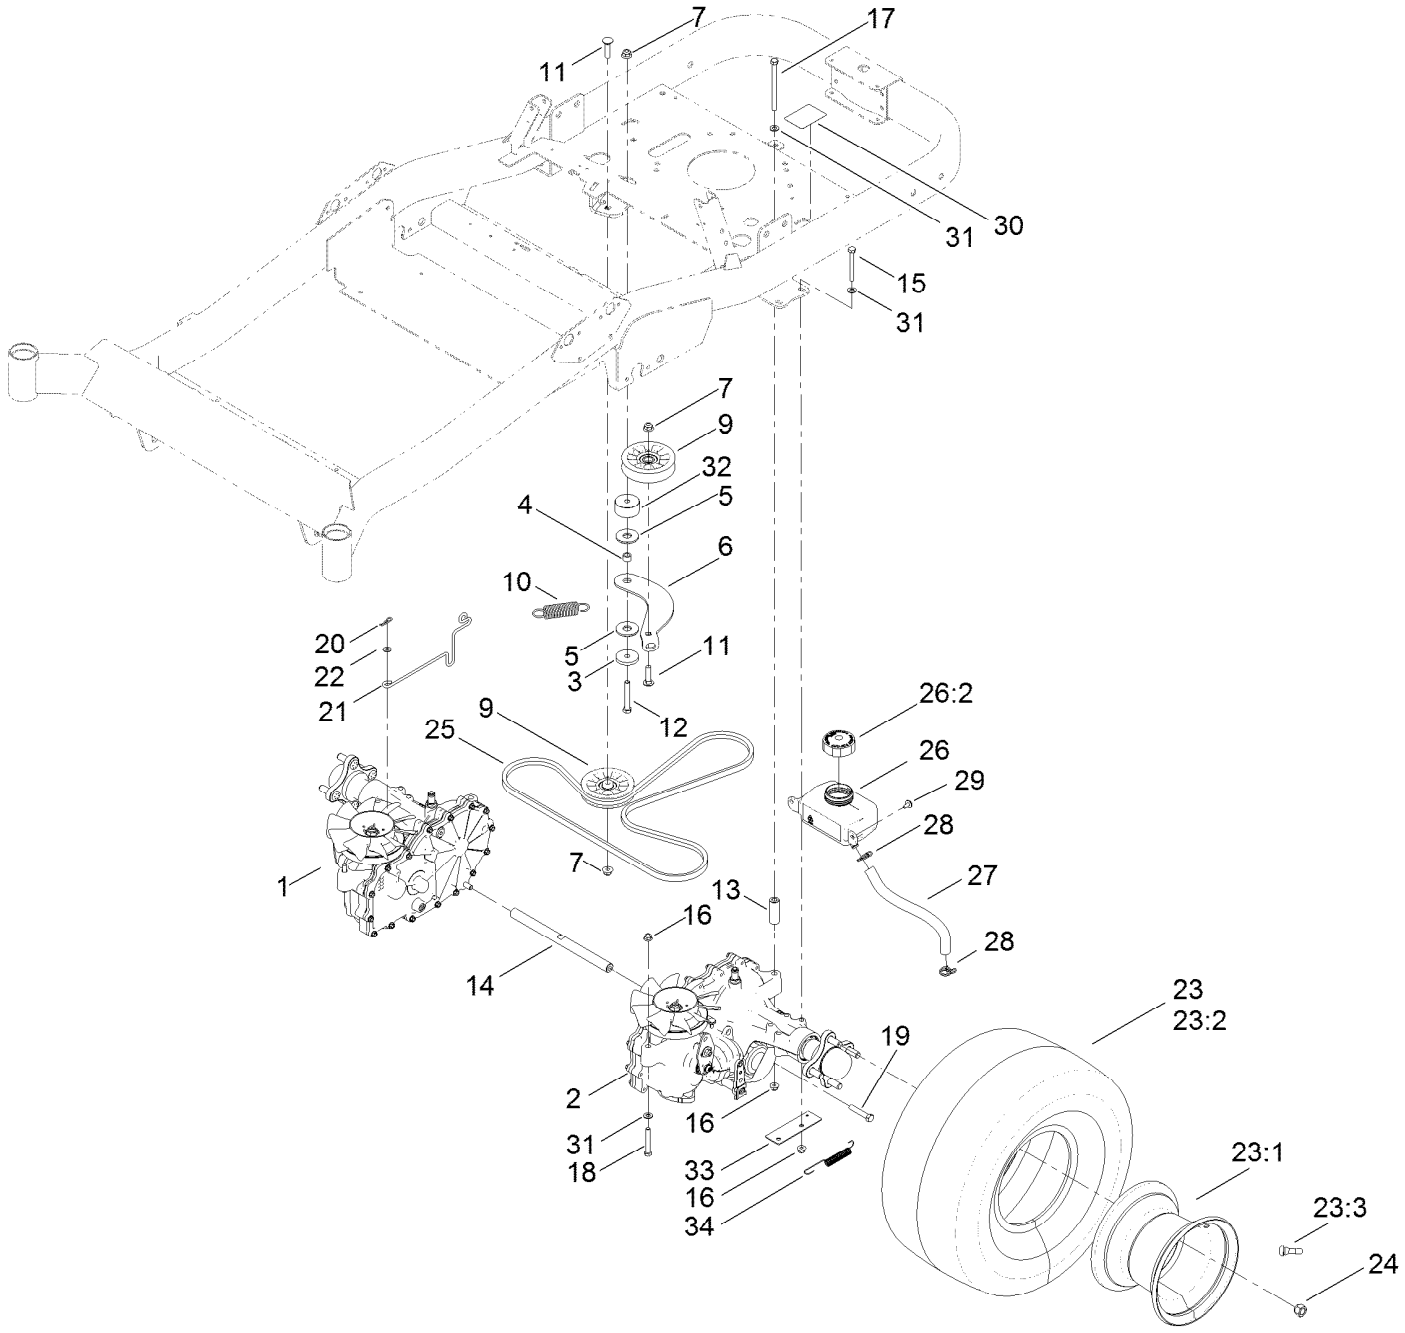

# Traction Drive Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 119-8893 | 1 | RH Hydro Transmission ASM |
| 2 | 119-8892 | 1 | LH Hydro Transmission ASM |
| 3 | 110-9981 | 1 | Washer-Plain |
| 4 | 115-4986 | 1 | Spacer |
| 5 | 114-0463 | 2 | Washer-Friction, Composite |
| 6 | 117-5350 | 1 | Arm-Idler |
| 7 | 104-8301 | 3 | Nut-Flange, NI |
| 9 | 109-3397 | 2 | Pulley-Idler, Flat |
| 10 | 1-603402 | 1 | Spring-Extension |
| 11 | 3231-4 | 2 | Screw-CARR |
| 12 | 323-12 | 1 | Screw-HH |
| 13 | 109-3652 | 2 | Spacer-Hydro |
| 14 | 115-2559 | 1 | Shaft-Cross, Hydro |
| 15 | 322-13 | 4 | Screw-HH |
| 16 | 104-8300 | 8 | Nut-Flange, NI |
| 17 | 322-38 | 2 | Screw-HH |
| 18 | 322-11 | 2 | Screw-HH |
| 19 | 323-10 | 2 | Screw-HH |
| 20 | 1-806003 | 2 | Pin-Cotter, Hair |
| 21 | 115-4990 | 2 | Rod-Bypass |
| 22 | 3256-22 | 2 | Washer-Flat |
| 23 | 125-1820 | 2 | ASM-Tire And Wheel |
| 23:1 | 125-1824 | 1 | Rim |
| 23:2 | 125-1821 | 1 | Tire |
| 23:3 | 232-27 | 1 | Stem-Valve |
| 23:99 | 105-4070 | 1 | Tube-Inner ● |
| 24 | 242-50 | 8 | Nut-Lug |
| 25 | 115-9613 | 1 | V-Belt |
| 26 | 115-9618 | 1 | HYD Reservior ASM |
| 26:2 | 109-3320 | 1 | Cap-Reservoir, HYD |
| 27 | 115-4969 | 2 | Hose-Overflow |
| 28 | 117-1193 | 4 | Clamp-Hose |
| 29 | 46-8560 | 2 | Screw-HHFTF |
| 30 | 117-1158 | 2 | Decal-Bypass |
| 31 | 3256-23 | 8 | Washer-Flat |
| 32 | 117-5351 | 1 | Spacer |
| 33 | 117-7248-03 | 2 | Plate-Spring |
| 34 | 110769 | 2 | Spring-Extension |

● Not illustrated

# RH Hydro Transmission Assembly No. 119-8893

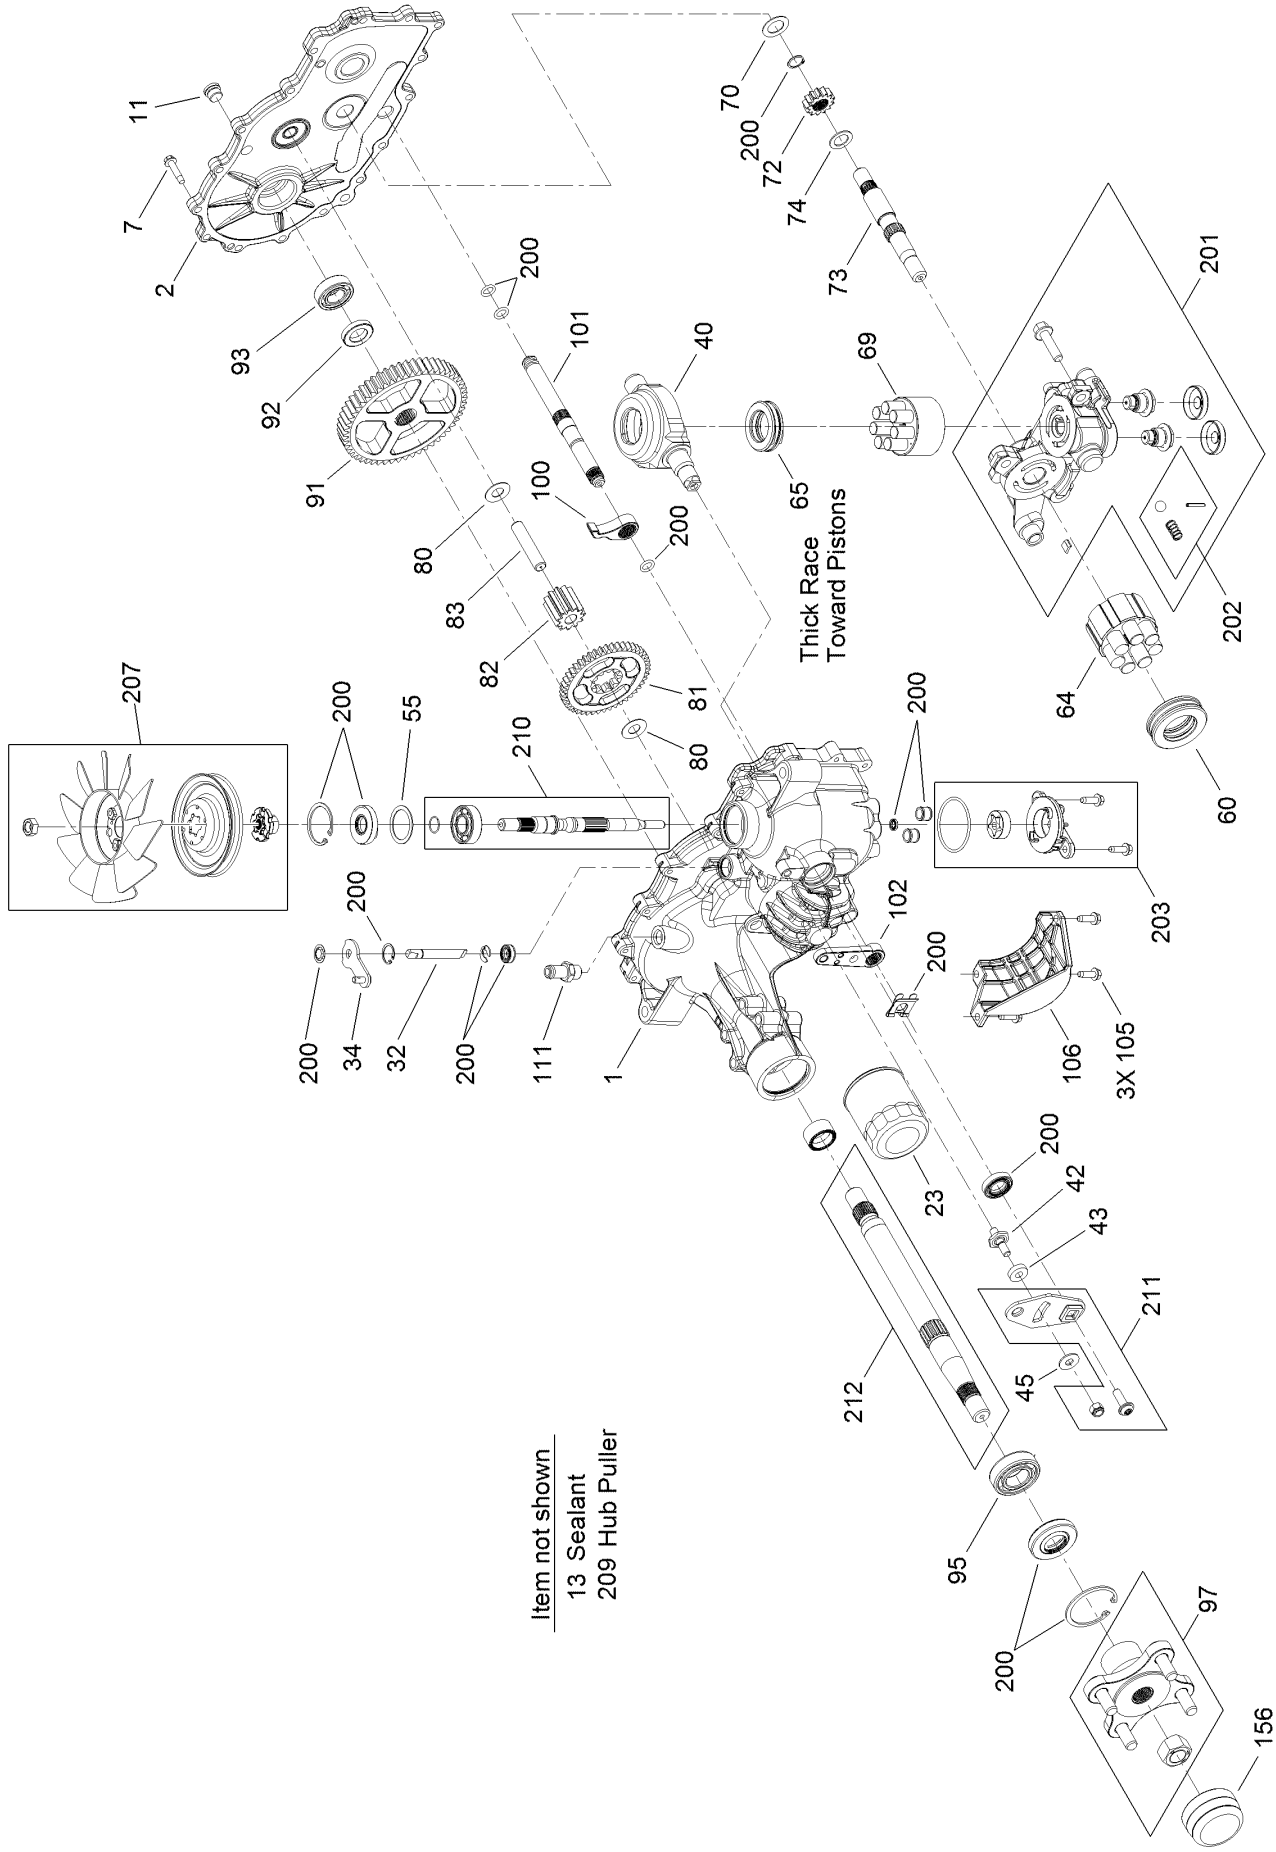

# RH Hydro Transmission Assembly No. 119-8893 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 114-1676 | 1 | Main Housing Kit |
| 2 | 117-5358 | 1 | Housing Side Kit |
| 7 | 117-5359 | 16 | Screw-HHF |
| 11 | 104-2189 | 1 | Plug-Thread, Straight |
| 13 | 104-2147 | 1 | Sealant ● |
| 23 | 109-3321 | 1 | Element-Oil Filter, HYD |
| 32 | 114-1685 | 1 | Rod-Bypass |
| 34 | 107-2490 | 1 | Arm-Bypass |
| 40 | 104-5304 | 1 | Swashplate-Trunnion |
| 42 | 104-2116 | 1 | Stud |
| 43 | 112-9853 | 1 | Puck-Friction |
| 45 | 114-8491 | 1 | Washer |
| 55 | 104-5308 | 1 | Spacer |
| 60 | 109-2865 | 1 | Bearing, Thrust Pr |
| 64 | 114-1689 | 1 | Motor Cylinder Block Kit |
| 65 | 94-6922 | 1 | Bearing-Thrust |
| 69 | 110-8561 | 1 | Pump Block ASM |
| 70 | 104-5339 | 1 | Washer-Flat |
| 72 | 120-7972 | 1 | Gear-13T |
| 73 | 114-1691 | 1 | Shaft-Motor |
| 74 | 104-5360 | 1 | Washer |
| 80 | 94-1933 | 2 | Washer |
| 81 | 120-7973 | 1 | Gear-46T |
| 82 | 120-7974 | 1 | Gear-11T |
| 83 | 104-5329 | 1 | Pin-Jackshaft |
| 91 | 114-1694 | 1 | Gear-54T |
| 92 | 120-7975 | 1 | Spacer |
| 93 | 114-1696 | 1 | Bearing-Ball |
| 95 | 120-7976 | 1 | Bearing-Ball |
| 97 | 109-5939 | 1 | Hub Kit |
| 100 | 114-1697 | 1 | Pawl-Brake |
| 101 | 120-7977 | 1 | Brake Shaft Kit |
| 102 | 125-0021 | 1 | Handle-Brake |
| 105 | 104-2120 | 3 | Screw |
| 106 | 120-7981 | 1 | Guard-Filter, RH |
| 111 | 109-3278 | 1 | Adapter-Straight |
| 156 | 115-5057 | 1 | Cover-Nut, Axle |
| 200 | 109-3537 | 1 | Complete Seal Kit ● |
| 201 | 120-7982 | 1 | RH Center Section Charge Kit |
| 202 | 114-8464 | 1 | Charge Relief Kit |
| 203 | 114-8465 | 1 | Charge Kit |
| 207 | 125-0059 | 1 | Fan And Pulley Kit |
| 209 | 114-8467 | 1 | Hub-Puller, 4 Bolt ● |
| 210 | 117-5361 | 1 | Shaft Input Kit |
| 211 | 117-5362 | 1 | Arm Control Kit |
| 212 | 114-8470 | 1 | Axle Shaft Kit |

● Not illustrated

# LH Hydro Transmission Assembly No. 119-8892

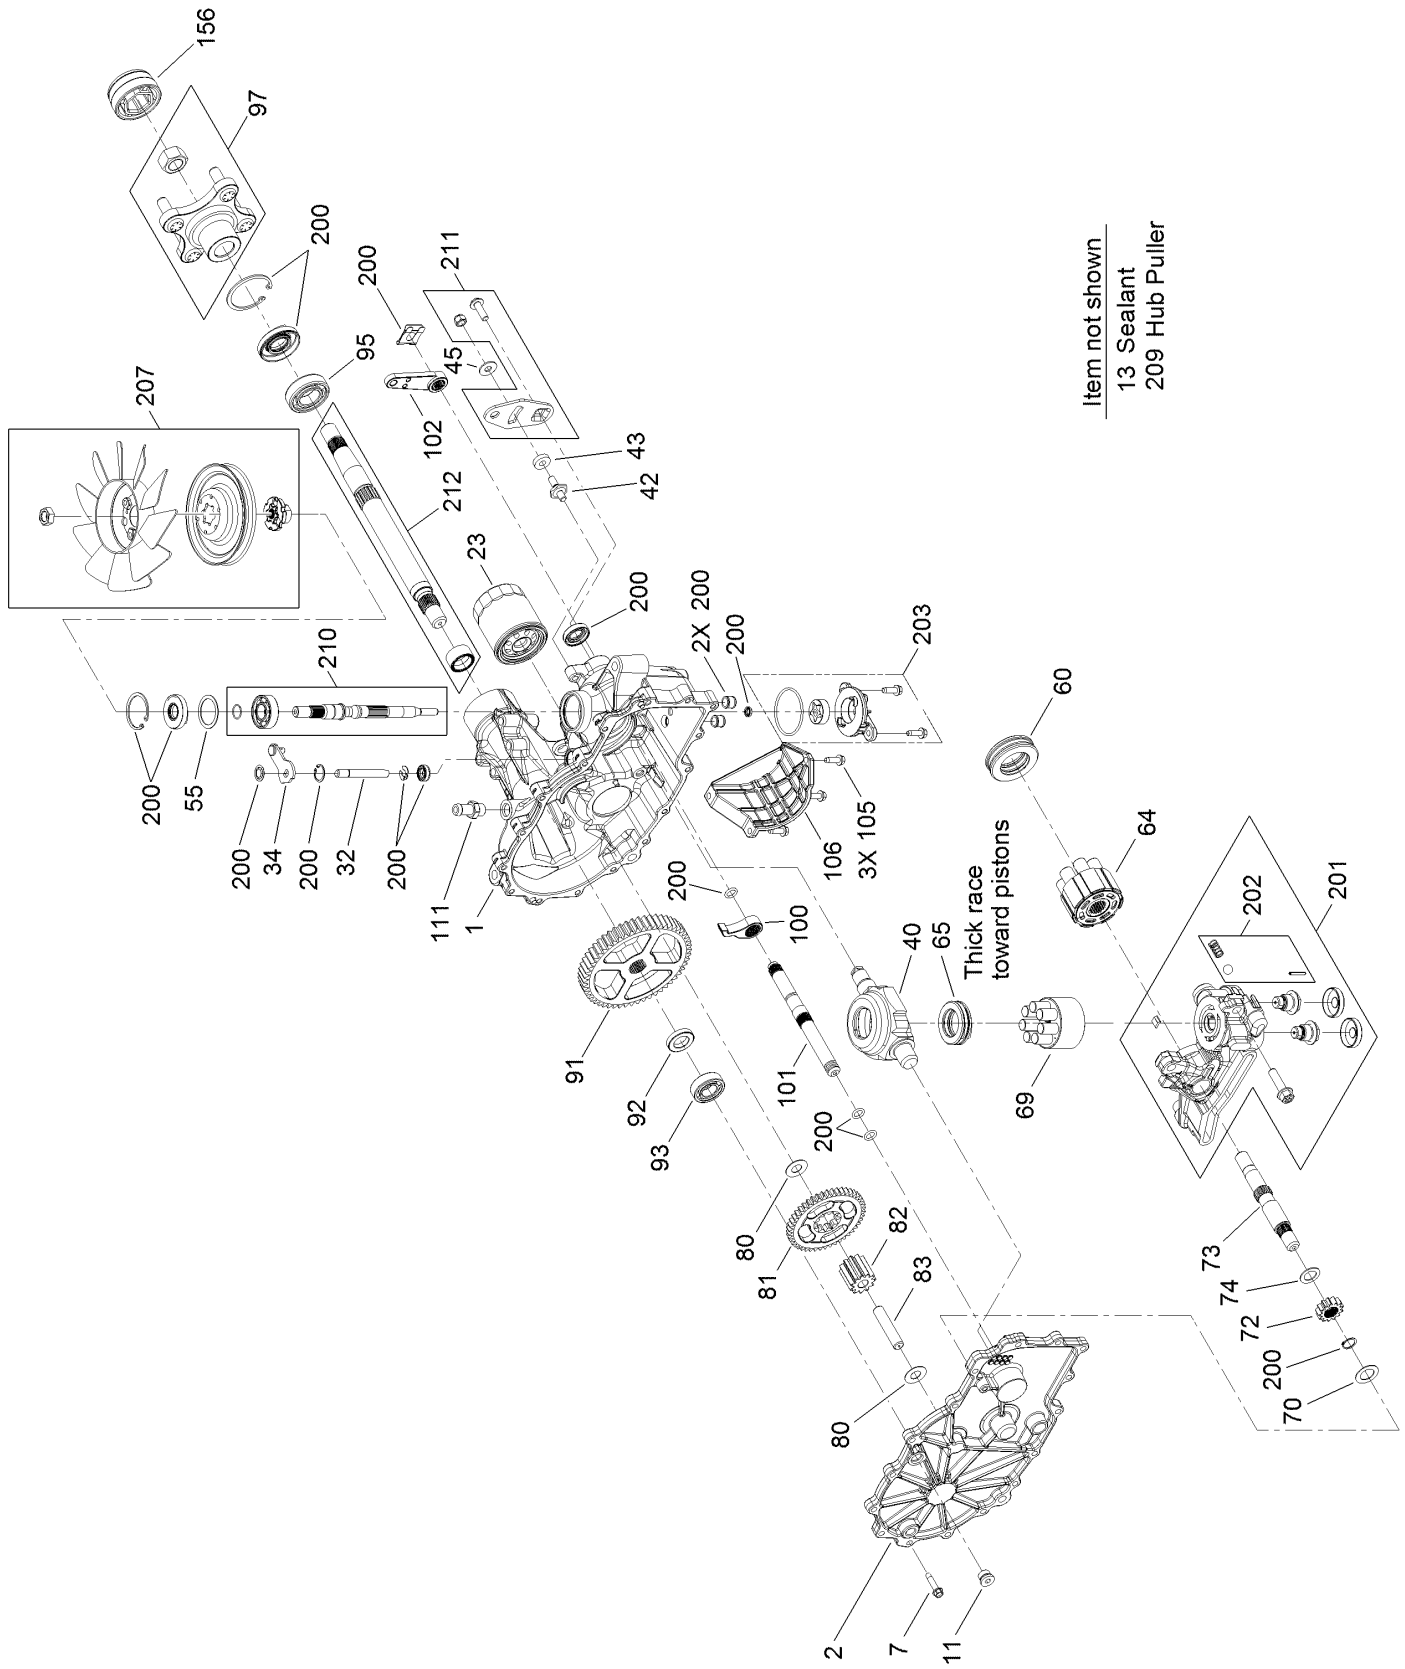

# LH Hydro Transmission Assembly No. 119-8892 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 114-8471 | 1 | Main Housing Kit |
| 2 | 114-8472 | 1 | Side Cover Kit |
| 7 | 117-5359 | 16 | Screw-HHF |
| 11 | 104-2189 | 1 | Plug-Thread, Straight |
| 13 | 104-2147 | 1 | Sealant ● |
| 23 | 109-3321 | 1 | Element-Oil Filter, HYD |
| 32 | 114-1685 | 1 | Rod-Bypass |
| 34 | 107-2490 | 1 | Arm-Bypass |
| 40 | 104-5304 | 1 | Swashplate-Trunnion |
| 42 | 104-2116 | 1 | Stud |
| 43 | 112-9853 | 1 | Puck-Friction |
| 45 | 114-8491 | 1 | Washer |
| 55 | 104-5308 | 1 | Spacer |
| 60 | 109-2865 | 1 | Bearing, Thrust Pr |
| 64 | 114-1689 | 1 | Motor Cylinder Block Kit |
| 65 | 94-6922 | 1 | Bearing-Thrust |
| 69 | 110-8561 | 1 | Pump Block ASM |
| 70 | 104-5339 | 1 | Washer-Flat |
| 72 | 120-7972 | 1 | Gear-13T |
| 73 | 114-1691 | 1 | Shaft-Motor |
| 74 | 104-5360 | 1 | Washer |
| 80 | 94-1933 | 2 | Washer |
| 81 | 120-7973 | 1 | Gear-46T |
| 82 | 120-7974 | 1 | Gear-11T |
| 83 | 104-5329 | 1 | Pin-Jackshaft |
| 91 | 114-1694 | 1 | Gear-54T |
| 92 | 120-7975 | 1 | Spacer |
| 93 | 114-1696 | 1 | Bearing-Ball |
| 95 | 120-7976 | 1 | Bearing-Ball |
| 97 | 109-5939 | 1 | Hub Kit |
| 100 | 114-1697 | 1 | Pawl-Brake |
| 101 | 120-7977 | 1 | Brake Shaft Kit |
| 102 | 125-0021 | 1 | Handle-Brake |
| 105 | 104-2120 | 3 | Screw |
| 106 | 120-7979 | 1 | Guard-Filter, LH |
| 111 | 109-3278 | 1 | Adapter-Straight |
| 156 | 115-5057 | 1 | Cover-Nut, Axle |
| 200 | 109-3537 | 1 | Complete Seal Kit ● |
| 201 | 120-7980 | 1 | LH Center Section Charge Kit |
| 202 | 114-8464 | 1 | Charge Relief Kit |
| 203 | 114-8465 | 1 | Charge Kit |
| 207 | 109-5938 | 1 | Fan And Pulley Kit |
| 209 | 114-8467 | 1 | Hub-Puller, 4 Bolt ● |
| 210 | 117-5361 | 1 | Shaft Input Kit |
| 211 | 117-5362 | 1 | Arm Control Kit |
| 212 | 114-8470 | 1 | Axle Shaft Kit |

● Not illustrated

# Motion Control Assembly

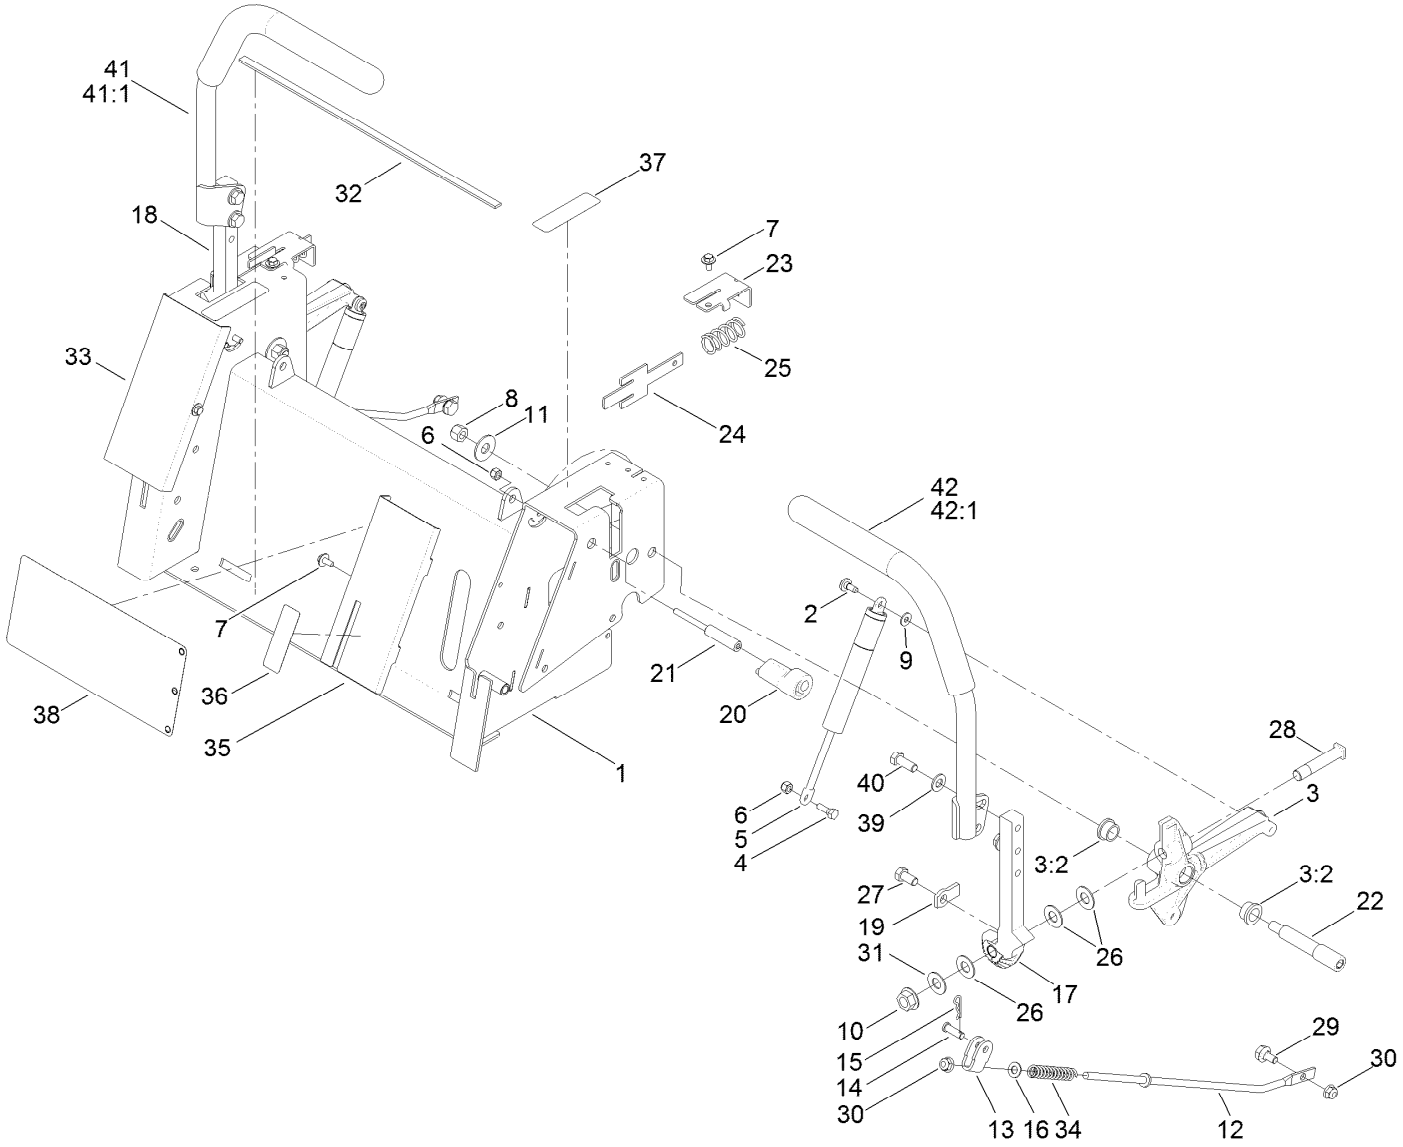

# Motion Control Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 117-7452-03 | 1 | Box-Control |
| 2 | 120-7950 | 2 | Screw-Shoulder |
| 3 | 110-6828 | 2 | Activator Arm ASM |
| 3:2 | 105-3455 | 2 | Bushing |
| 4 | 106-2214 | 2 | Bolt-Shoulder |
| 5 | 109-2339 | 2 | Damper-Control, Motion |
| 6 | 3296-42 | 4 | Nut-Lock, NI |
| 7 | 46-8560 | 4 | Screw-HHFTF |
| 8 | 3296-48 | 2 | Nut-Lock, NI |
| 9 | 119-8952 | 2 | Washer |
| 10 | 32128-23 | 2 | Nut-HF |
| 11 | 3256-5 | 2 | Washer-Flat |
| 12 | 117-7422 | 2 | Rod-Control |
| 13 | 117-7423 | 2 | Bracket-Control |
| 14 | 1-808280 | 2 | Pin-Clevis |
| 15 | 1-806003 | 2 | Pin-Cotter, Hair |
| 16 | 3256-23 | 2 | Washer-Flat |
| 17 | 110-6783-05 | 1 | Arm-Actuator, LH |
| 18 | 110-6782-05 | 1 | Arm-Actuator, RH |
| 19 | 115-5023 | 2 | Tab-Stop |
| 20 | 110-6873 | 2 | Eccentric |
| 21 | 110-6874 | 2 | Screw-Eccentric |
| 22 | 110-6875 | 2 | Bolt-Shoulder |
| 23 | 110-6751 | 2 | Bracket-Return |
| 24 | 110-6750 | 2 | Plate-Return |
| 25 | 110-6752 | 2 | Spring-Compression |
| 26 | 110-6894 | 6 | Washer-Pivot |
| 27 | 323-4 | 2 | Screw-HH |
| 28 | 110-6784 | 2 | Bolt-Shoulder |
| 29 | 37-8771 | 2 | Bolt-Shoulder |
| 30 | 104-8300 | 4 | Nut-Flange, NI |
| 31 | 112-9771 | 2 | Washer-Teflon |
| 32 | 117-7237 | 1 | Strip-Vibration, Anti |
| 33 | 117-1255-03 | 1 | Cover-Control, RH |
| 34 | 1-603807 | 2 | Spring-Return, Neutral |
| 35 | 115-2561-03 | 1 | Cover-Control, LH |
| 36 | 115-9625 | 1 | Decal |
| 37 | 99-8936 | 2 | Decal-Control, Motion |
| 38 | 120-7113 | 1 | Decal |
| 39 | 3256-24 | 4 | Washer-Flat |
| 40 | 323-6 | 4 | Screw-HH |
| 41 | 120-2207 | 1 | RH Lever/Grip ASM |
| 41:1 | 106-9987 | 1 | Grip-Control, Motion |
| 42 | 120-2208 | 1 | LH Lever/Grip ASM |
| 42:1 | 106-9987 | 1 | Grip-Control, Motion |

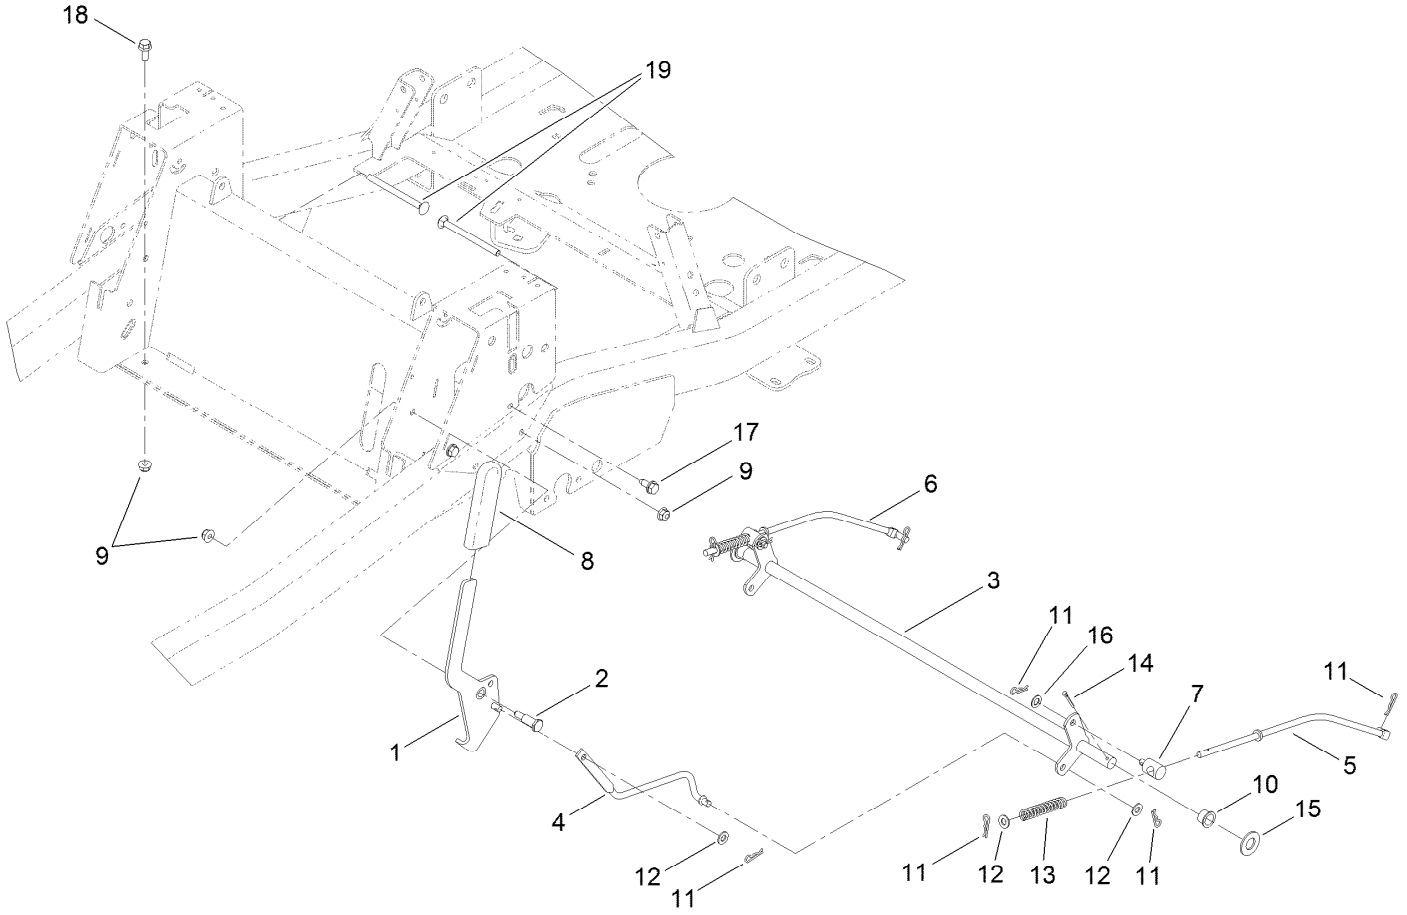


# Brake Link Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 119-3460 | 1 | Handle-Brake |
| 2 | 63-2650 | 1 | Screw-Shoulder |
| 3 | 115-5071-03 | 1 | Brake-Bellcrank |
| 4 | 115-5074 | 1 | Link-Brake |
| 5 | 117-7322 | 1 | Rod-Brake, LH |
| 6 | 117-7323 | 1 | Rod-Brake, RH |
| 7 | 115-9681 | 2 | Fitting-Rod |
| 8 | 1-633268 | 1 | Grip-Lever |
| 9 | 104-8300 | 5 | Nut-Flange, NI |
| 10 | 256-292 | 2 | Bushing-Flange, NI |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 11 | 1-806003 | 8 | Pin-Cotter, Hair |
| 12 | 3256-23 | 4 | Washer-Flat |
| 13 | 1-603807 | 2 | Spring-Return, Neutral |
| 14 | 3272-11 | 2 | Pin-Cotter |
| 15 | 3256-27 | 2 | Washer-Flat |
| 16 | 40-1940 | 2 | Washer |
| 17 | 32144-70 | 4 | Screw-HWHTF |
| 18 | 3234-47 | 2 | Screw-HHF |
| 19 | 106-9758 | 2 | Screw-CARR |

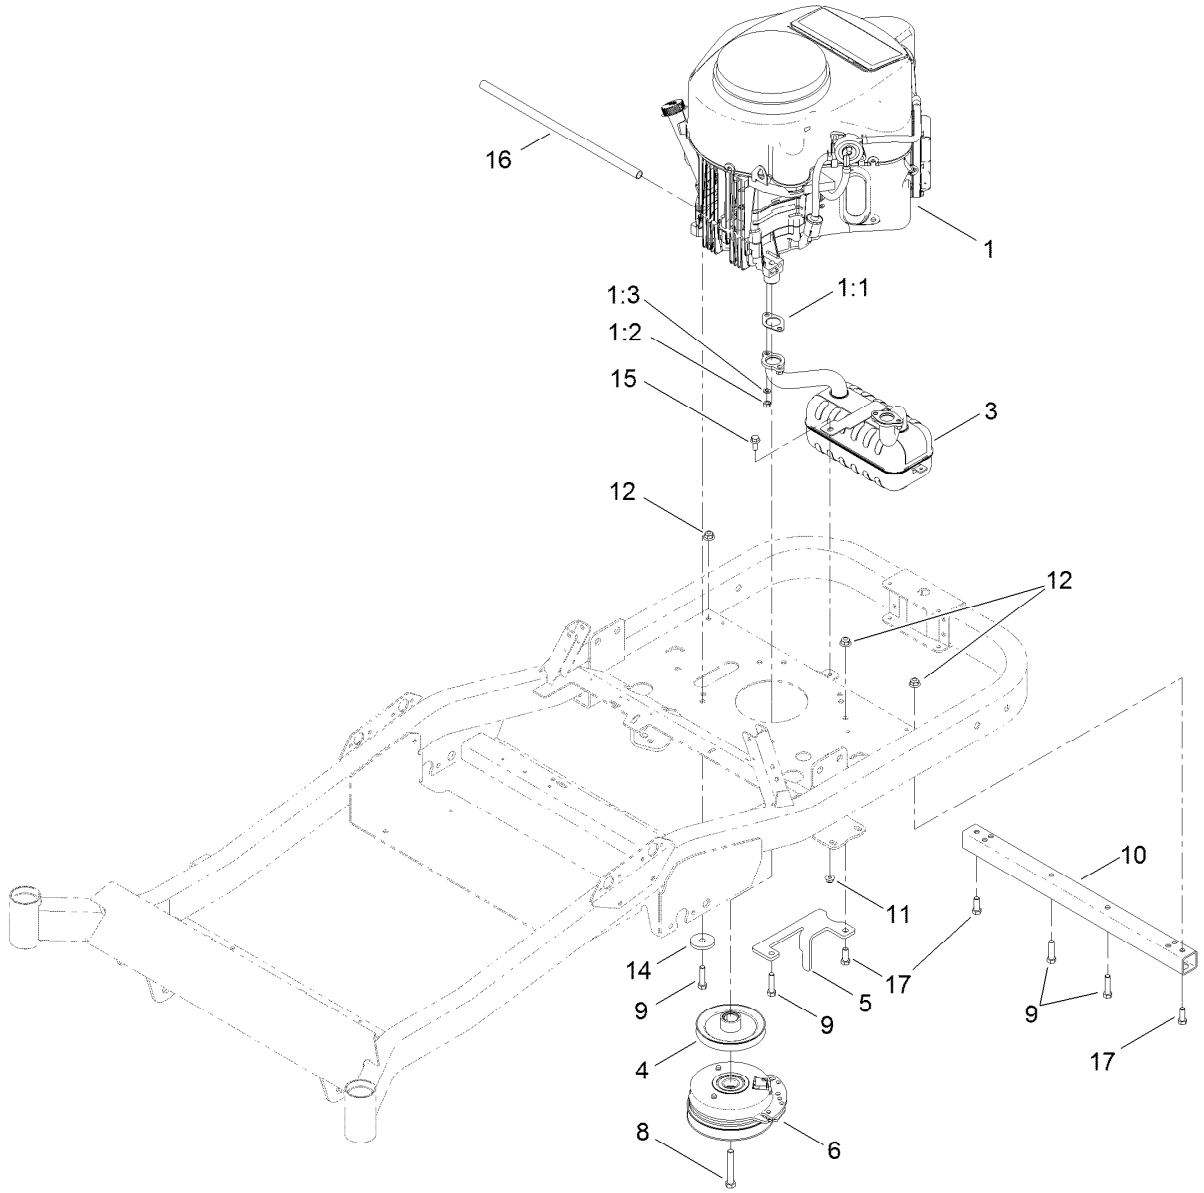


# Engine, Muffler and Clutch Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Engine-Kawasaki, Fr691V-S12-R ●■ |
| 1:1 | 1-653313 | 2 | Gasket-Exhaust |
| 1:2 | 114-3549 | 4 | Nut |
| 1:3 | 114-3550 | 4 | Washer-Lock, Spring |
| 3 | 117-7465 | 1 | Muffler-Kawasaki Twin |
| 4 | 115-2568 | 1 | Pulley-Engine |
| 5 | 117-7344-03 | 1 | Bracket-Stop, PTO |
| 6 | 119-8941 | 1 | Clutch-PTO |
| 8 | 3212-13 | 1 | Screw-HH |
| 9 | 323-50 | 4 | Bolt-HH |
| 10 | 117-7335-03 | 1 | Tube-Stiffener |
| 11 | 104-8300 | 1 | Nut-Flange, NI |
| 12 | 104-8301 | 3 | Nut-Flange, NI |
| 14 | 110-9981 | 1 | Washer-Plain |
| 15 | 3234-47 | 1 | Screw-HHF |
| 16 | 106-7022 | 1 | Tube-Drain, Oil |
| 17 | 323-6 | 3 | Screw-HH |

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

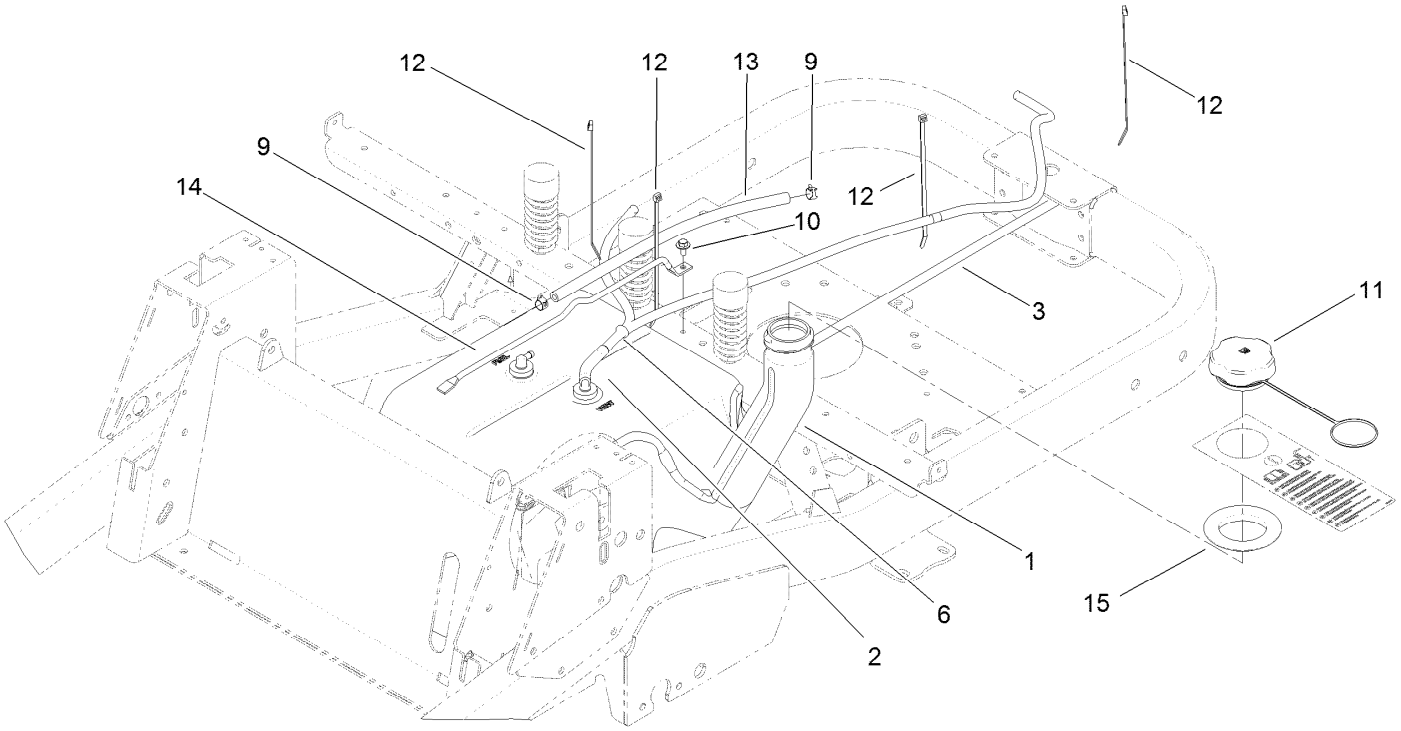


# Fuel Delivery Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 117-7352 | 1 | Multi Layer Fuel Tank ASM |
| 2 | 114-3765 | 1 | Hose-Fuel |
| 3 | 51-3212 | 1 | Hose-Fuel |
| 6 | 121-0743 | 1 | Adapter-Orifice |
| 9 | 2412-98 | 2 | Clamp-Hose |
| 10 | 46-8560 | 1 | Screw-HHFTF |
| 11 | 125-1847 | 1 | Cap-Fuel |
| 12 | 614249 | 2 | Tie-Cable |
| 13 | 107-0589 | 1 | Hose-Fuel |
| 14 | 115-2620 | 1 | Rod-Tank, Gas |
| 15 | 117-1298 | 1 | Seal-Tank |

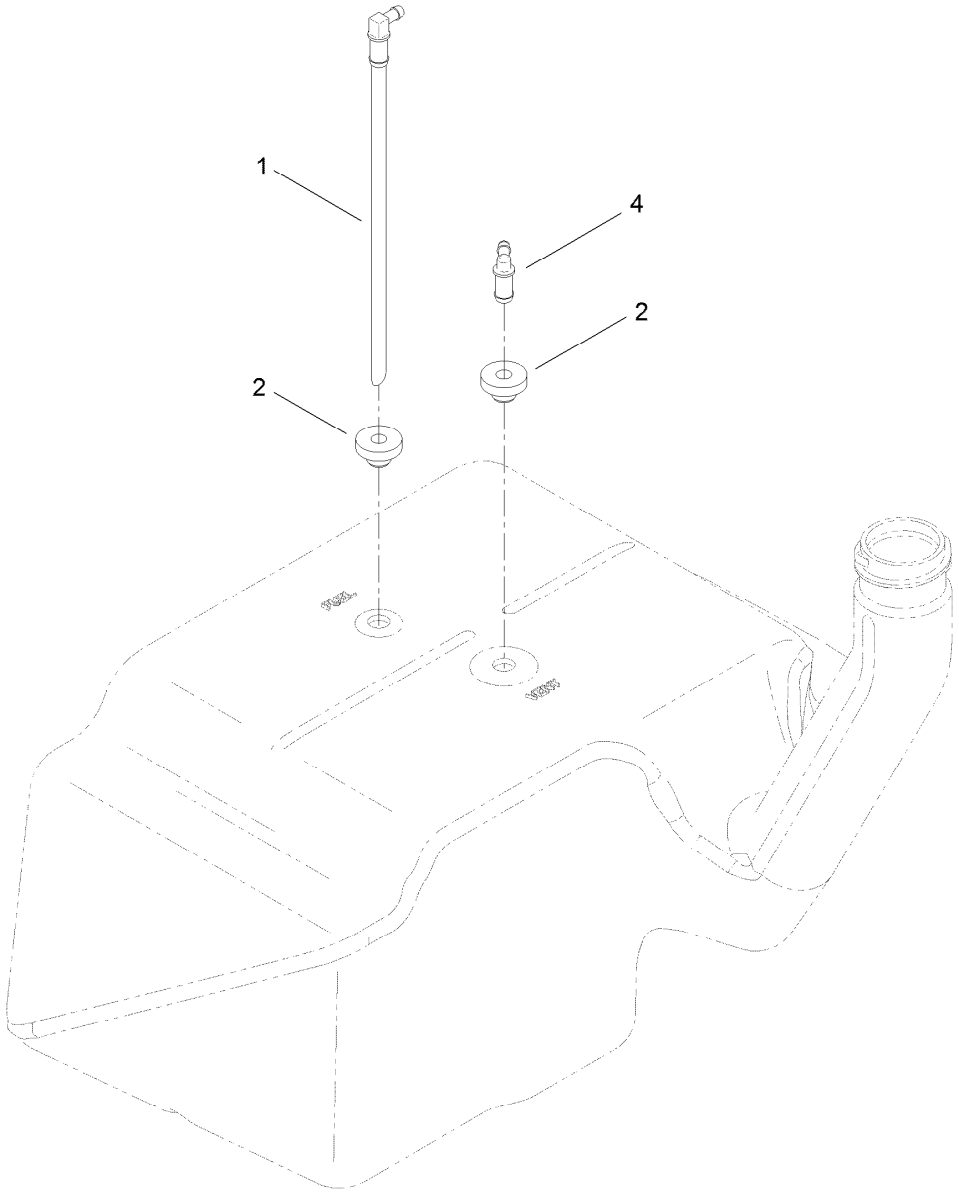


# Multi Layer Fuel Tank Assembly No. 117-7352

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 121-0793 | 1 | Connector-Elbow, 90 DEG |
| 2 | 46-6560 | 2 | Bushing |
| 4 | 117-7400 | 1 | Fitting-Plastic |

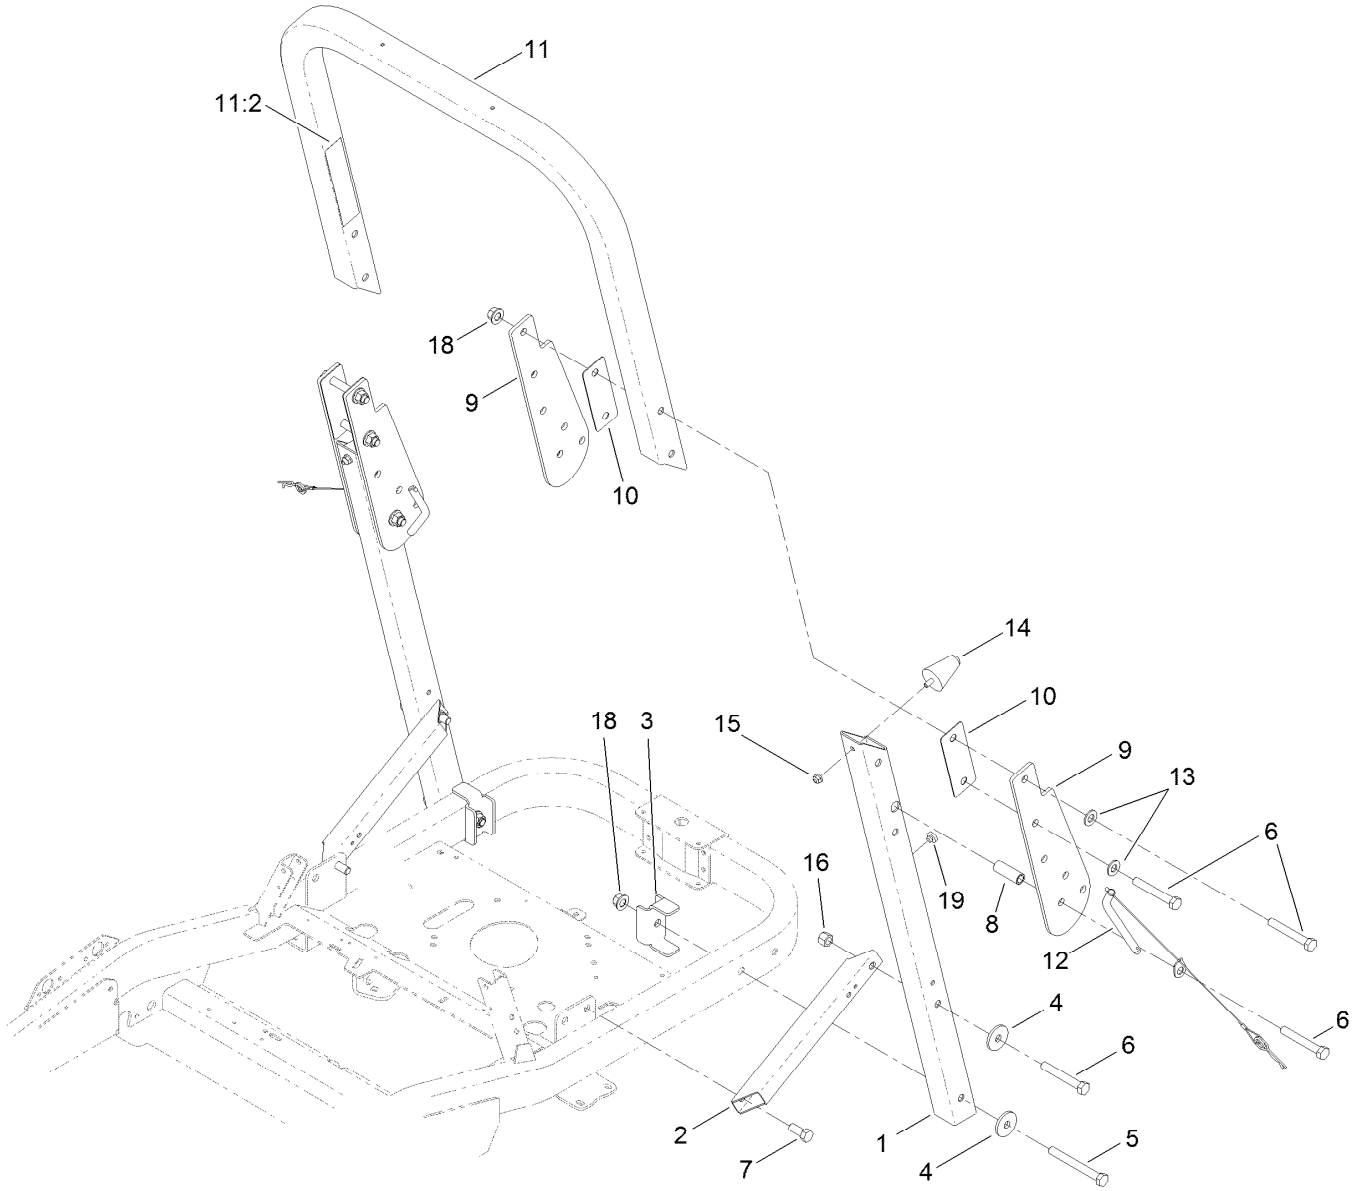


# Roll-Over Protection System Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 121-2986-03 | 2 | Tube-ROPS, Lower |
| 2 | 115-4962-03 | 2 | Tube-Support, ROPS |
| 3 | 115-4963-03 | 2 | Bracket-Reinforcing |
| 4 | 84-1560 | 4 | Washer-Thrust |
| 5 | 325-18 | 2 | Screw-HH |
| 6 | 325-14 | 8 | Screw-HH |
| 7 | 325-5 | 2 | Screw-HH |
| 8 | 109-6653 | 2 | Spacer |
| 9 | 119-8911-03 | 4 | Bracket-Pivot, ROPS |
| 10 | 119-8926-03 | 4 | Spacer-ROPS |

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 11 | 119-8991 | 1 | Upper ROPS ASM |
| 11:2 | 107-3069 | 1 | Decal-Warning, Folding ROPS |
| 12 | 119-8970 | 2 | Pin-ROPS |
| 13 | 3256-26 | 4 | Washer-Flat |
| 14 | 114-1925 | 2 | Bumper-Rubber |
| 15 | 104-8300 | 2 | Nut-Flange, NI |
| 16 | 119-8969 | 2 | Nut-Hex |
| 18 | 99-5107 | 10 | Nut-Lock |
| 19 | 1-513658 | 2 | Bumper |

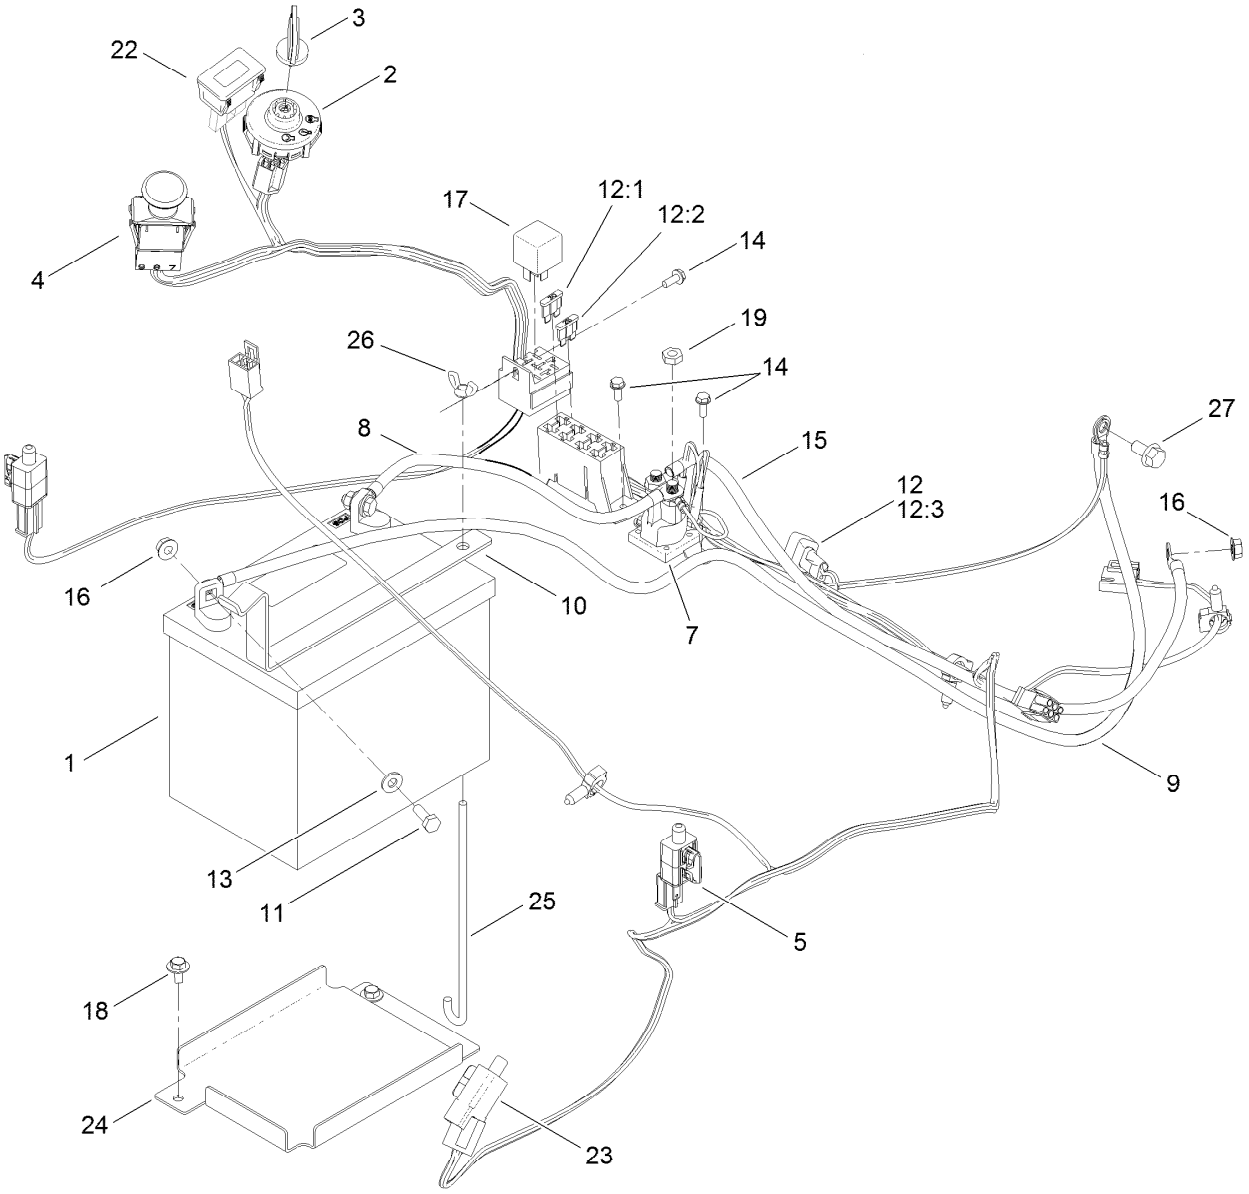


# Electrical Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 105-1692 | 1 | Battery |
| 2 | 117-2221 | 1 | Switch-Ignition |
| 3 | 63-8360 | 1 | Key-Ignition (W/Shield) |
| 4 | 103-5221 | 1 | Switch-PTO |
| 5 | 110-6765 | 2 | Switch-Single Pole No |
| 7 | 117-1197 | 1 | Solenoid |
| 8 | 117-5342 | 1 | Cable-Battery, Positive |
| 9 | 117-7240 | 1 | Cable-Battery, Negative |
| 10 | 117-7313-01 | 1 | Strap-Battery |
| 11 | 321-4 | 2 | Screw-HH |
| 12 | 121-3015 | 1 | Harness-Wire |
| 12:1 | 109103 | 1 | Fuse-Blade, 30 Amp |
| 12:2 | 109102 | 1 | Fuse-Blade, 25 Amp |
| 12:3 | 100-4918 | 1 | Diode-Over Molded |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13 | 3256-22 | 2 | Washer-Flat |
| 14 | 32144-1 | 5 | Screw-Taptite |
| 15 | 92-6989 | 1 | Wire-21 Inch |
| 16 | 32128-33 | 3 | Nut-HF |
| 17 | 98-7249 | 1 | Relay |
| 18 | 46-8560 | 2 | Screw-HHFTF |
| 19 | 3220-2 | 2 | Nut-Jam |
| 22 | 120-2244 | 1 | Hourmeter |
| 23 | 99-7408 | 1 | Switch-Reverse |
| 24 | 117-1283-03 | 1 | Tray-Battery |
| 25 | 1-633651 | 1 | Bolt-Holddown |
| 26 | 1-543792 | 1 | Wingnut |
| 27 | 33104-016 | 1 | Screw-HHF |

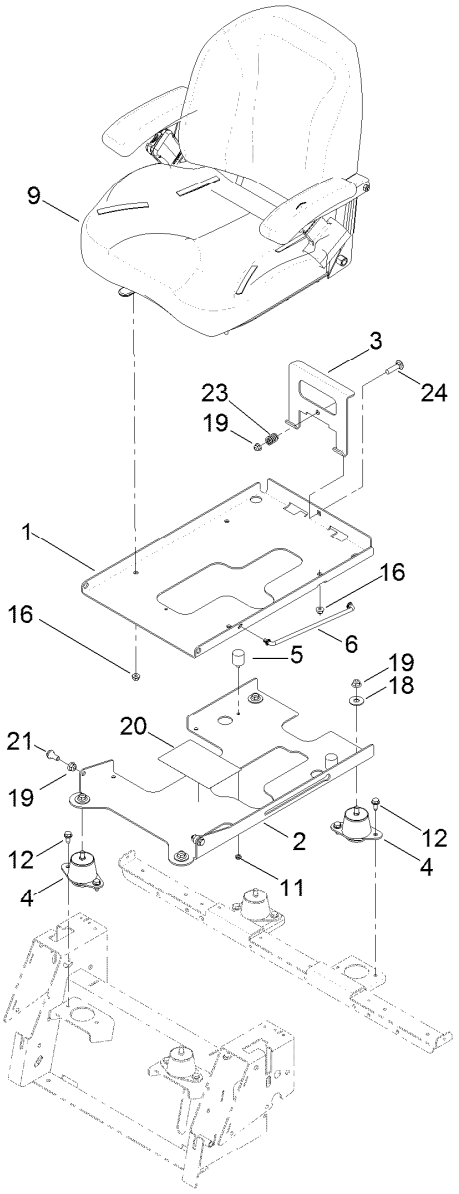


# Seat Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 125-1702-03 | 1 | Plate-Pan, Seat |
| 2 | 125-1703-03 | 1 | Plate-Base |
| 3 | 125-1747-03 | 1 | Latch Seat |
| 4 | 109-9034 | 4 | Isolator-Seat |
| 5 | 106-5891 | 2 | Bumper |
| 6 | 125-1796 | 1 | Rod-Prop |
| 9 | 121-5659 | 1 | Seat ASM |
| 11 | 3296-56 | 2 | Nut-Lock, NI |
| 12 | 32144-70 | 8 | Screw-HWHTF |
| 16 | 104-8300 | 4 | Nut-Flange, NI |
| 18 | 3256-5 | 4 | Washer-Flat |
| 19 | 104-8301 | 7 | Nut-Flange, NI |
| 20 | 115-9630 | 1 | Decal-Maintenance |
| 21 | 94-7582 | 2 | Bolt-Shoulder |
| 23 | 107-3017 | 1 | Spring-Compression |
| 24 | 3231-26 | 1 | Screw-CARR |

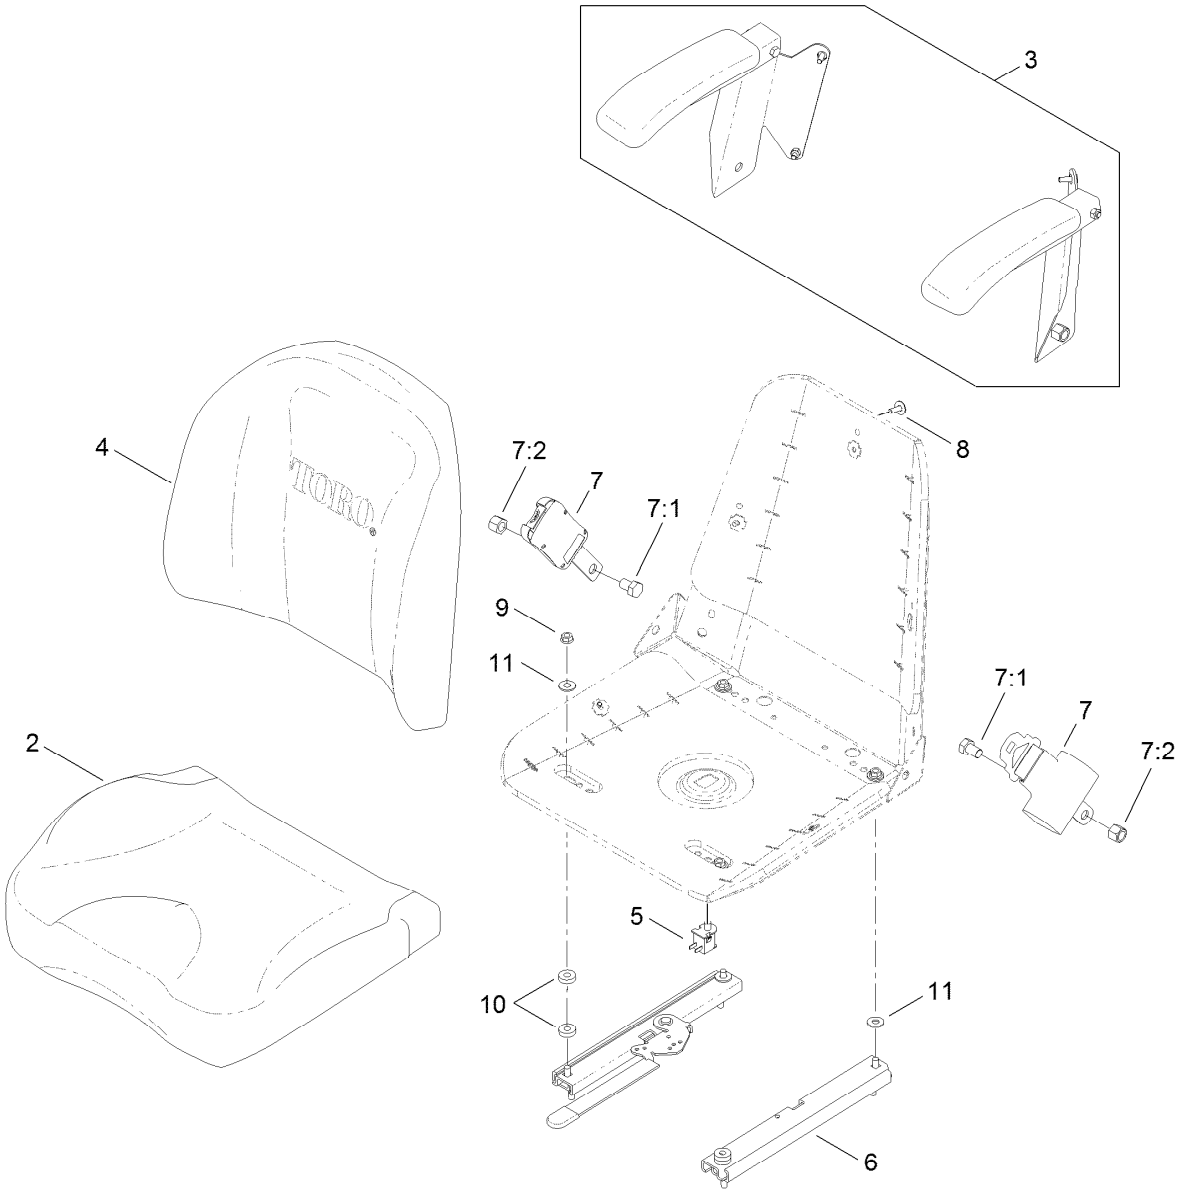


# Seat Assembly No. 121-5659

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 2 | 121-4751 | 1 | Cushion-Seat, Bottom |
| 3 | 110-5719 | 1 | Armrest Kit |
| 4 | 121-4752 | 1 | Cushion-Seat, Back |
| 5 | 82-2190 | 1 | Switch-Bail |
| 6 | 121-5711 | 1 | Track ASM |
| 7 | 116-2981 | 1 | Seat Belt Kit |
| 7:1 | 325-2 | 2 | Screw-HH |
| 7:2 | 3296-23 | 2 | Nut-Lock, NI |
| 8 | 103-8383 | 7 | Bolt-Seat |
| 9 | 32128-20 | 4 | Nut-HF |
| 10 | 26-4840 | 4 | Spacer-Pin, Mounting |
| 11 | 3256-3 | 6 | Washer-Flat |

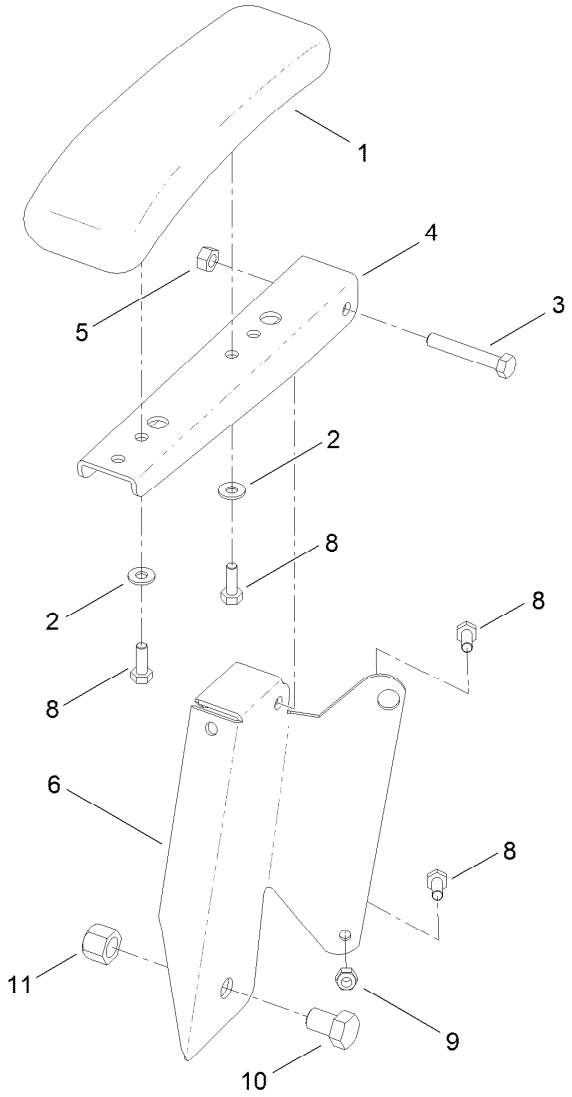


RH ARMREST ASSEMBLY

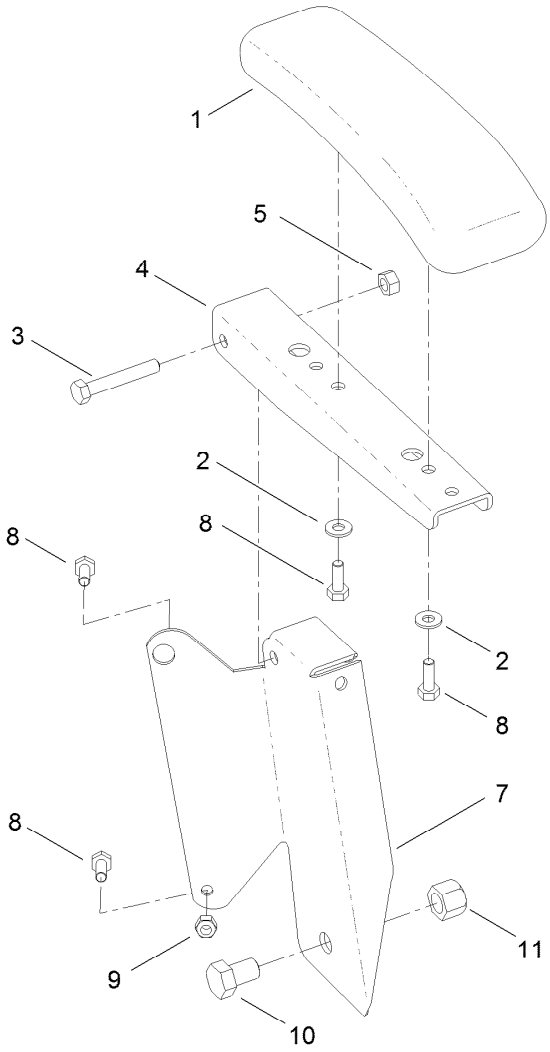


LH ARMREST ASSEMBLY

# Armrest Kit Assembly No. 110-5719

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 110-4163 | 2 | Cushion-Rest, Arm |
| 2 | 3256-22 | 4 | Washer-Flat |
| 3 | 322-10 | 2 | Screw-HH |
| 4 | 105-3623 | 2 | Channel-Armrest |
| 5 | 32153-3 | 2 | Nut-Hex, Side Deform |
| 6 | 105-3621 | 1 | Bracket-Armrest, RH |
| 7 | 105-3622 | 1 | Bracket-Armrest, LH |
| 8 | 321-30 | 8 | Screw-HH |
| 9 | 3296-42 | 4 | Nut-Lock, NI |
| 10 | 325-2 | 2 | Screw-HH |
| 11 | 3296-23 | 2 | Nut-Lock, NI |

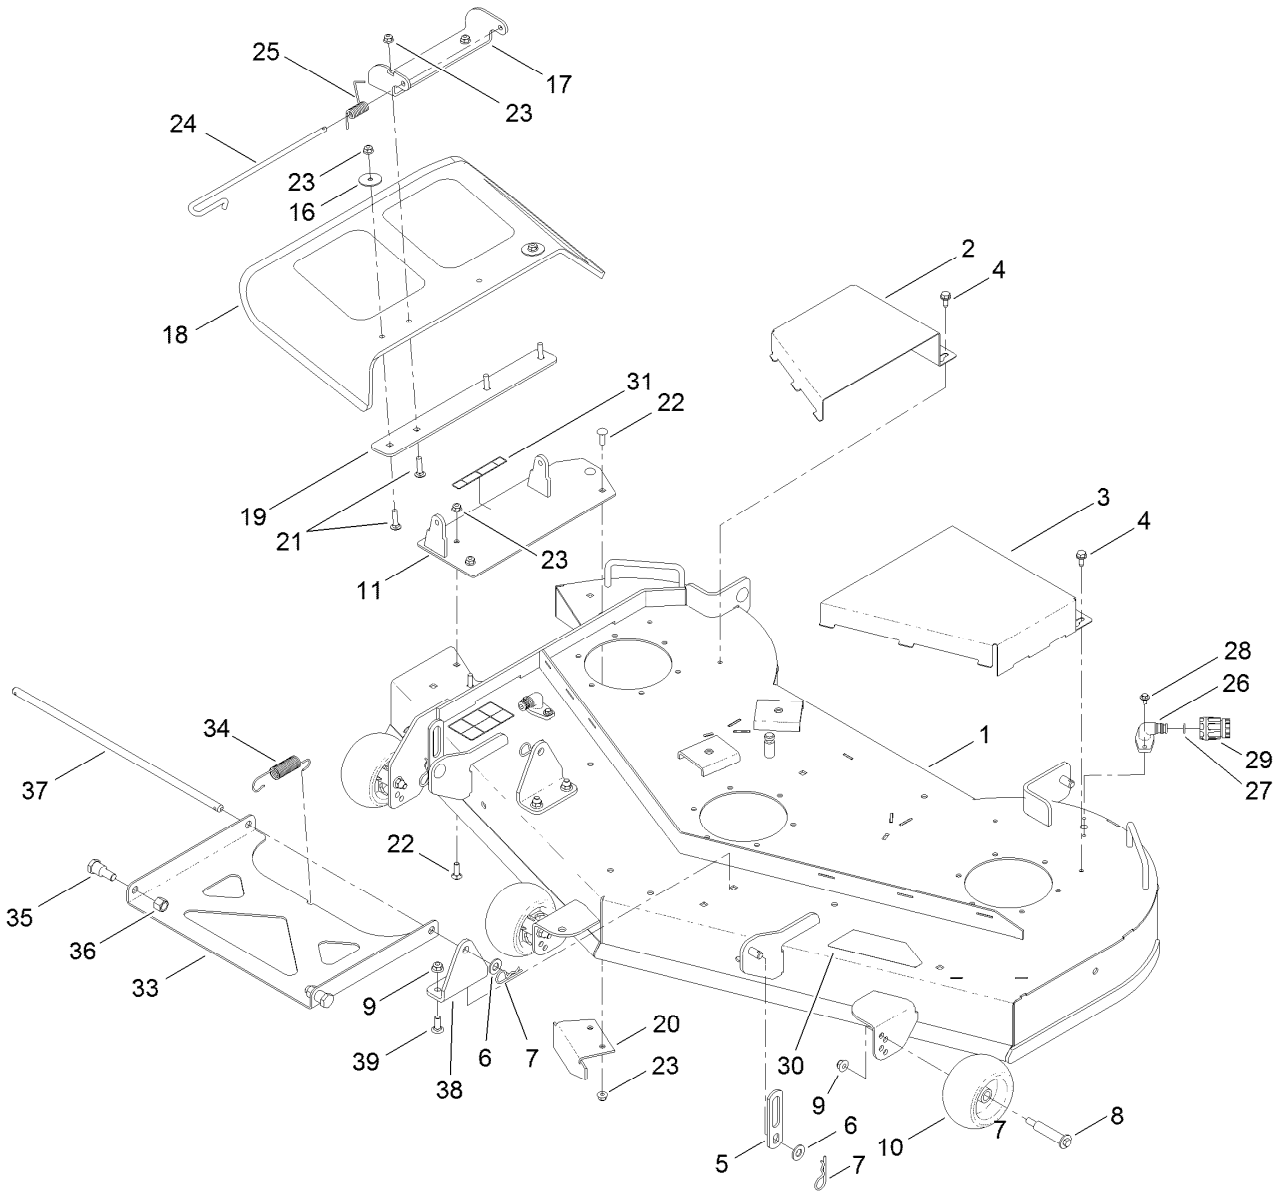


# 54 Inch Deck Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 120-7117 | 1 | 54 Inch Deck And Decal ASM |
| 2 | 117-7404-03 | 1 | Cover-Belt, RH |
| 3 | 117-7405-03 | 1 | Cover-Belt, LH |
| 4 | 32144-70 | 4 | Screw-HWHTF |
| 5 | 119-8949 | 4 | Link-Lift |
| 6 | 3256-26 | 6 | Washer-Flat |
| 7 | 1-806005 | 6 | Pin-Hair |
| 8 | 112-3977 | 3 | Bolt-Shoulder |
| 9 | 104-8301 | 7 | Nut-Flange, NI |
| 10 | 1-603299 | 3 | Roller-Scalp, Anti |
| 11 | 117-1282-03 | 1 | Plate-Cover |
| 16 | 3256-68 | 2 | Washer-Flat |
| 17 | 114-1648-03 | 1 | Bracket-Deflector, Upper |
| 18 | 117-1270 | 1 | Deflector-Molded |
| 19 | 115-5048-03 | 1 | Plate-Deflector |
| 20 | 115-9653-03 | 1 | Baffle-Cutoff |
| 21 | 3230-3 | 4 | Screw-CARR |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 22 | 3230-22 | 4 | Screw-CARR |
| 23 | 104-8300 | 8 | Nut-Flange, NI |
| 24 | 109-8854 | 1 | Pin-Chute |
| 25 | 121-2983 | 1 | Spring-Torsion |
| 26 | 95-2747 | 2 | Fitting-Washout |
| 27 | 46-6290 | 2 | O-Ring, Seal |
| 28 | 46-8560 | 4 | Screw-HHFTF |
| 29 | 95-3270 | 1 | Connector-Hose |
| 30 | 117-5302 | 1 | Decal |
| 31 | 93-7009 | 1 | Decal-Danger, Deflector |
| 33 | 115-5027-01 | 1 | Pan-Pivot, Deck |
| 34 | 115-9652 | 1 | Spring-Extension |
| 35 | 94-5823 | 2 | Bolt-Shoulder, HH |
| 36 | 3296-23 | 2 | Nut-Lock, NI |
| 37 | 115-5030 | 1 | Rod-Deck, Pivot |
| 38 | 119-8946-01 | 2 | Bracket-Pivot, Front |
| 39 | 3231-22 | 4 | Screw-CARR |

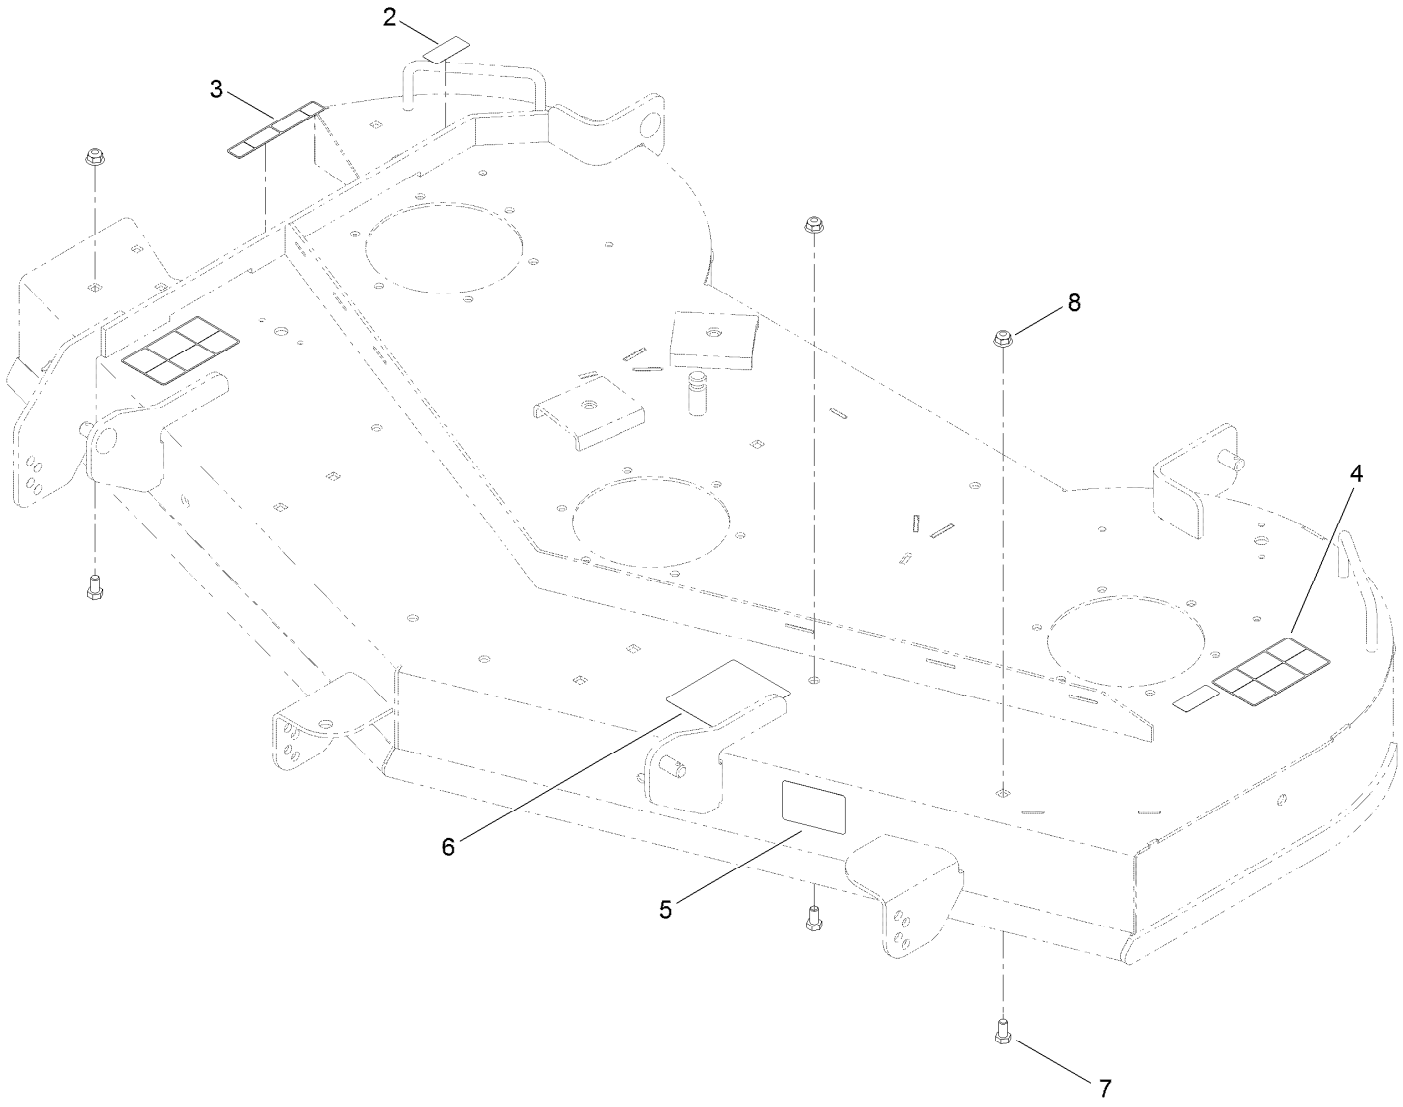


# 54 Inch Deck and Decal Assembly No. 120-7117

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 2 | 114-1606 | 2 | Decal-Danger |
| 3 | 93-7009 | 1 | Decal-Danger, Deflector |
| 4 | 110-6691 | 2 | Decal-Danger |
| 5 | 112-9840 | 1 | Decal-Scalp, Anti |
| 6 | 117-1194 | 1 | Decal-Routing, Belt |
| 7 | 322-2 | 3 | Screw-HH |
| 8 | 104-8300 | 3 | Nut-Flange, NI |

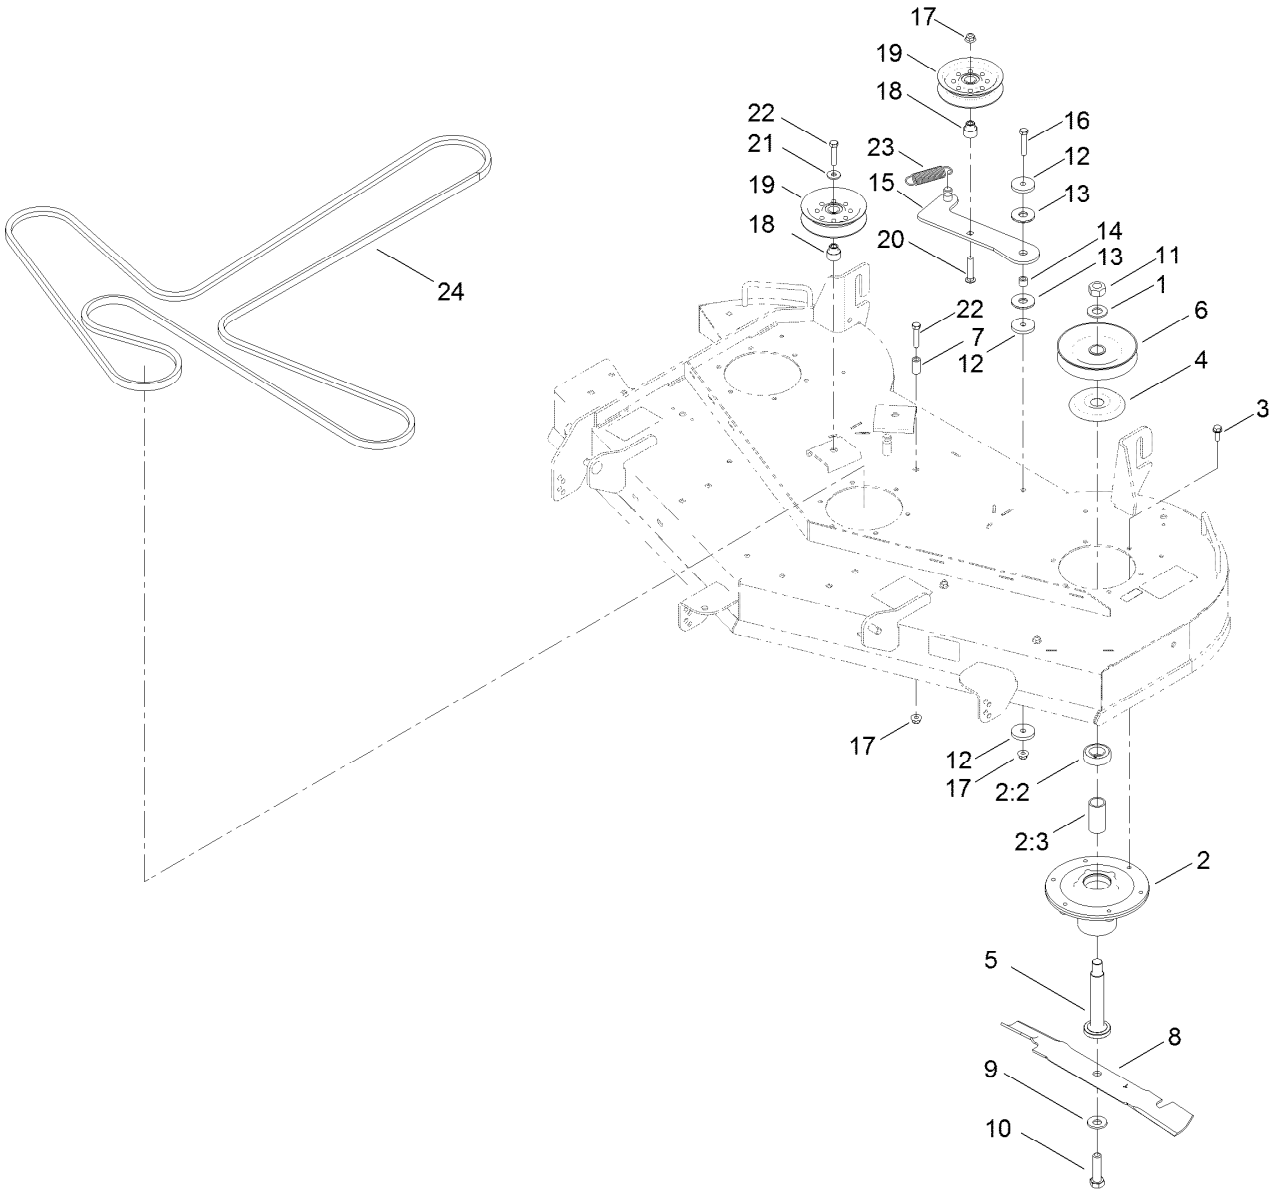


# 54 Inch Deck, Belt and Mulch Blade Asseembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 7-4150 | 3 | Washer |
| 2 | 120-5477 | 3 | Spindle ASM |
| 2:2 | 116-0720 | 2 | Bearing-Ball |
| 2:3 | 115-2641 | 1 | Spacer-Bearing |
| 3 | 32144-41 | 18 | Screw-Taptite |
| 4 | 117-7210 | 3 | Shield-Bearing |
| 5 | 115-2642 | 3 | Shaft-Spindle |
| 6 | 115-5018 | 3 | Pulley |
| 7 | 1-603401 | 1 | Spacer-Fender |
| 8 | 115-9650-03 | 3 | Blade-Hi Flo, 18.75 Inch |
| 9 | 125-1736 | 3 | Washer-Belleville |
| 10 | 51-4060 | 3 | Screw-Blade |
| 11 | 3219-7 | 3 | Nut-Hex |

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 12 | 110-9981 | 3 | Washer-Plain |
| 13 | 114-0463 | 2 | Washer-Friction, Composite |
| 14 | 1-413088 | 1 | Bushing-Lever, Lift |
| 15 | 115-5054 | 1 | Arm-Idler |
| 16 | 323-10 | 1 | Screw-HH |
| 17 | 104-8301 | 3 | Nut-Flange, NI |
| 18 | 115-2577 | 3 | Bushing-Idler |
| 19 | 116-3626 | 3 | Pulley-Idler |
| 20 | 3231-6 | 1 | Screw-CARR |
| 21 | 80-6990 | 2 | Washer-Hardened |
| 22 | 323-9 | 3 | Screw-HH |
| 23 | 108-4056 | 1 | Spring-Extension |
| 24 | 115-4971 | 1 | V-Belt |

# Attachments and Accessories

## For 74872 TITAN MX5480 Zero-Turn-Radius Riding Mower

| Product Name | Model/Part |
|---|---|
| 54in Recycler Kit | 117-5313 |
| Step Kit | 117-5316 |
| Light Kit | 117-5317 |
| 54in/60in Striping Kit | 117-5319 |
| Leaf Bagging Enhancement Kit | 117-7202 |
| 54in Bagger Finishing Kit (Used with 79328 Bagger) | 121-5663 |
| Hitch Kit | 79014 |
| Cargo Carrier | 79032 |
| Front Weight Kit | 79033 |
| Bagger Kit | 79328 |
| E-Z Vac Twin Bagger | 79330 |
| 54in Blower and Drive Kit | 79341 |
| 10 cu. ft. Poly Dump Cart | 79991 |

## Notes:

## Notes:

## Notes:

**Count on it.**