Form No. 3388-229 Rev A

TORO®

Count on it.

Parts Catalog

TimeCutter® SS 5425

Riding Mower

Model No. 74740—Serial No. 315000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3388-229 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Frame, Front Axle and Caster Wheel Assembly 4
13 Inch Wheel and Tire Assembly No. 119-3473 6
Deck Lift Assembly 8
Motion Control Assembly 10
Brake Box Assembly 12
Seat Assembly 14
Belt and Idler Assembly 16
Hydro Transaxle Assembly 18
4 Ply Wheel and Tire Assembly No. 109-5268 20
2 Ply Wheel and Tire Assembly No. 131-3673 22
LH Transaxle Assembly No. 131-3640 24
RH Transaxle Assembly No. 131-3641 26
Clutch Assembly 28
Engine and Muffler Assembly 30
Body Styling and Fuel Pod Assembly 32
Fuel Delivery Assembly 34
Battery and Electrical Assembly 36
Fuse and Wire Harness Assembly 38
54 Inch Deck Assembly 40
54 Inch Deck Decal Assembly No. 130-7004 42
54 Inch Deck, Belt and Blade Assembly 44
Attachments and Accessories 46

© 2015—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Frame, Front Axle and Caster Wheel Assembly

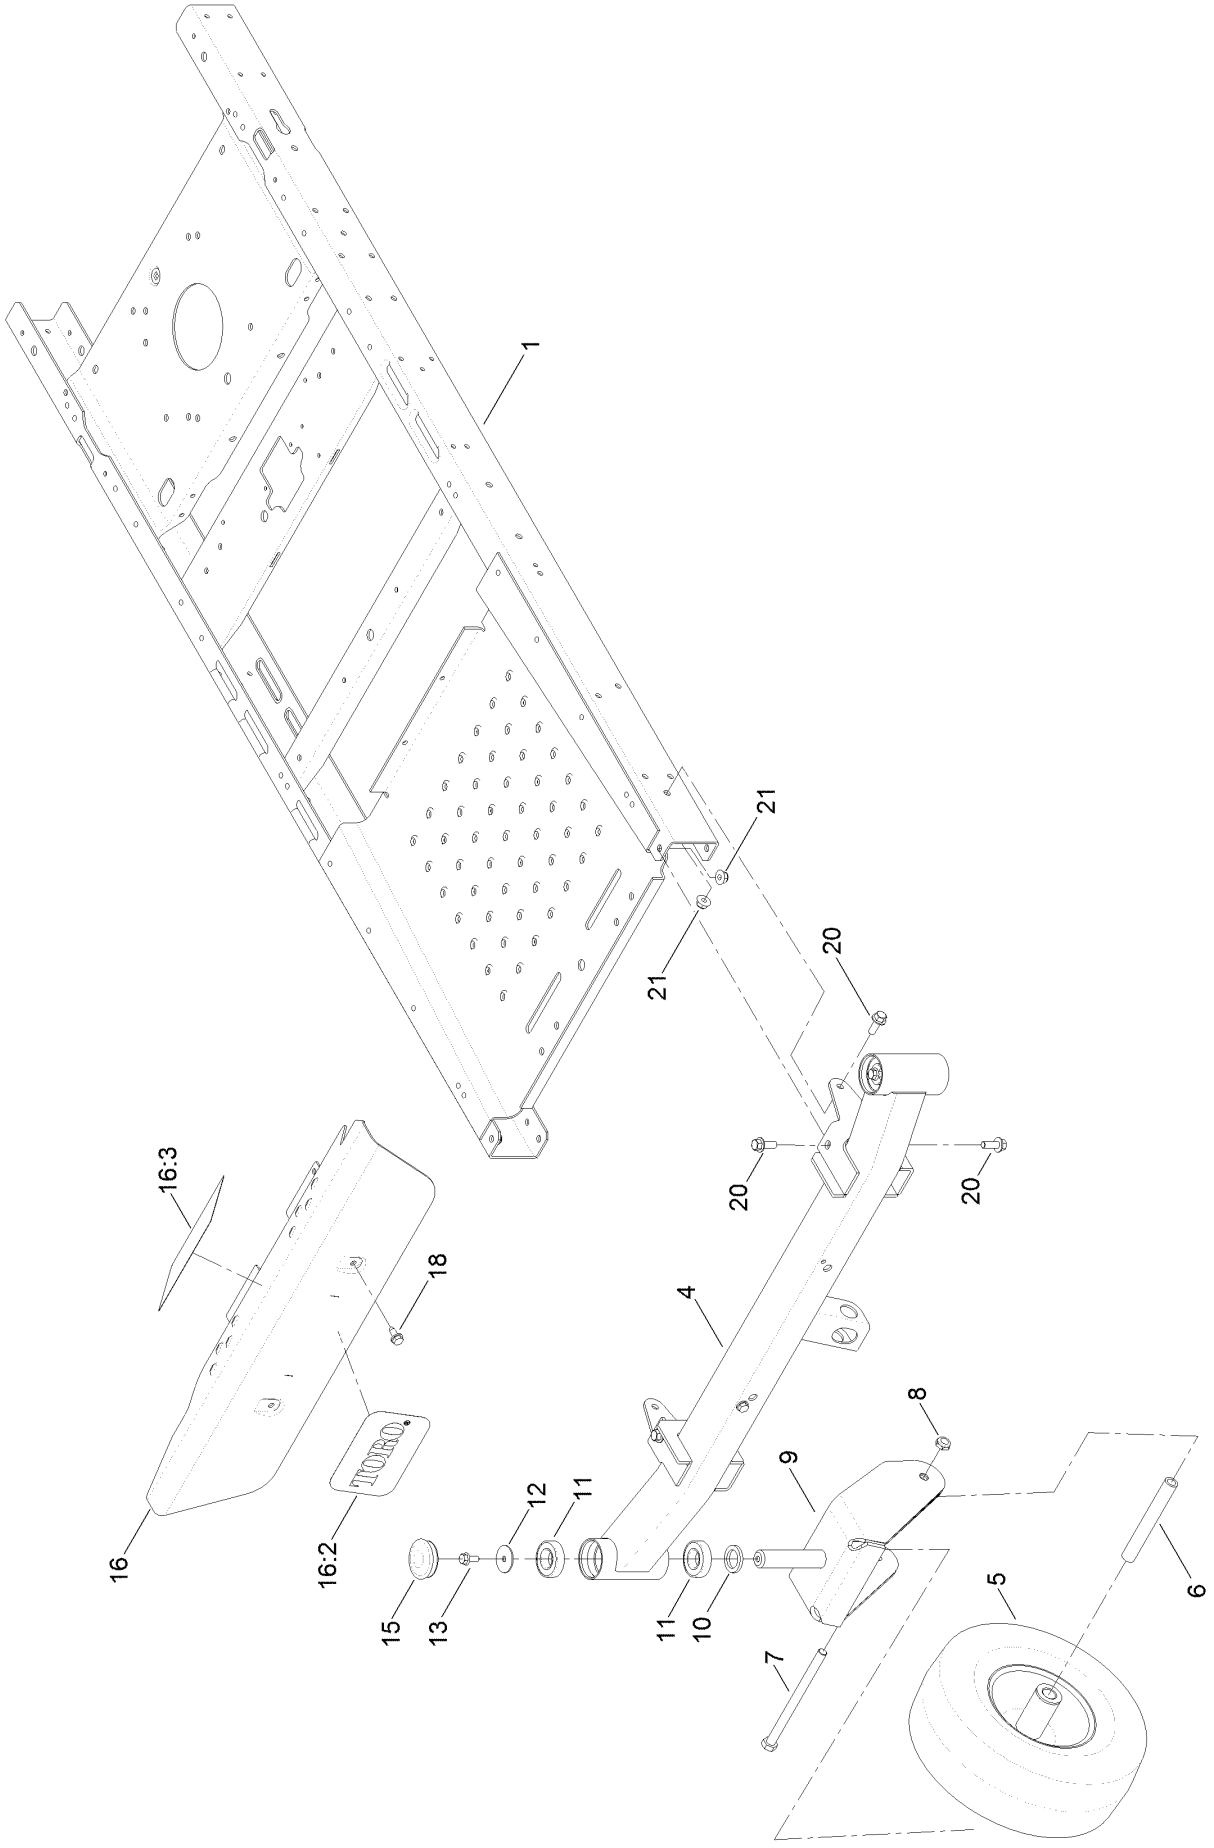

Frame, Front Axle and Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-0699-01	1	Frame ASM
4	125-1726-01	1	Axle ASM
5	119-3473	2	13 Inch Wheel And Tire ASM
6	119-3475	2	Spanner
7	325-37	2	Screw-HH
8	3296-45	2	Nut-Lock, NI
9	119-3349-01	2	Fork-Caster
10	117-7394	2	Washer-Thrust
11	109-3678	4	Bearing-Ball
12	3256-68	2	Washer-Flat
13	3234-47	2	Screw-HHF
15	116-4348	2	Cap-Grease
16	132-0892	1	Footrest ASM
16:2	99-4693	1	Decal
16:3	132-0869	1	Decal-Danger
18	32144-70	2	Screw-HWHTF
20	3234-42	6	Screw-HHF
21	104-8301	6	Nut-Flange, NI

13 Inch Wheel and Tire Assembly No. 119-3473

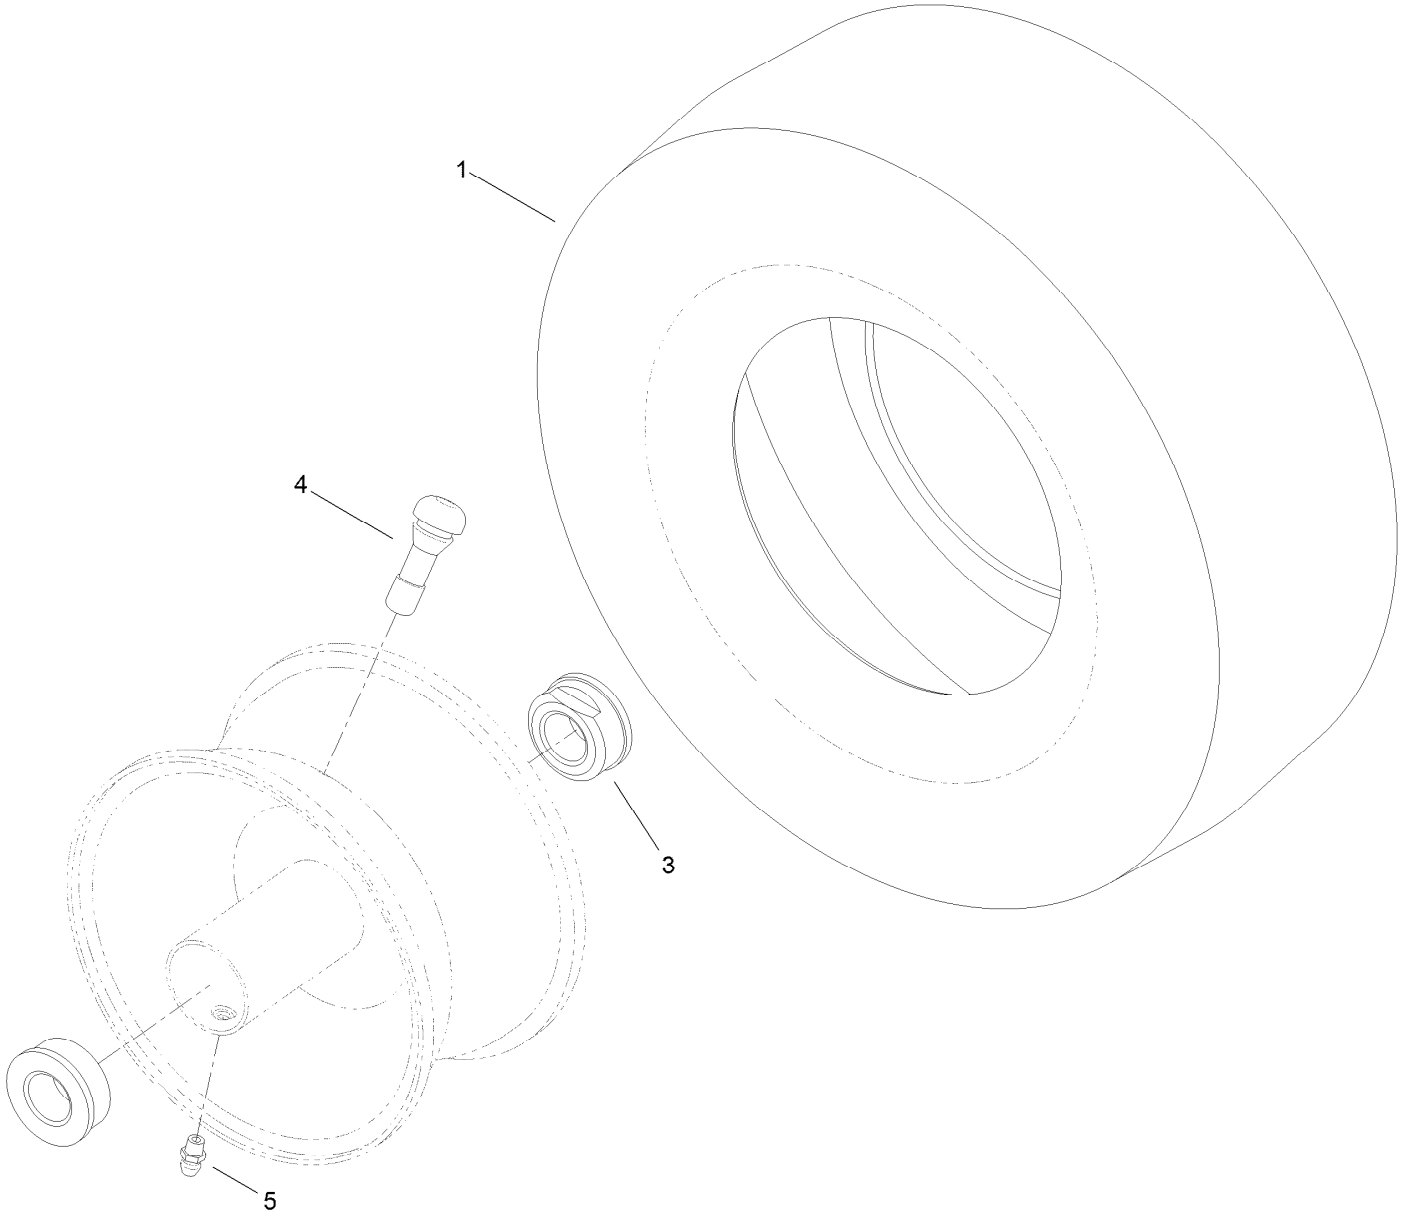

13 Inch Wheel and Tire Assembly No. 119-3473 (continued)

Ref.	Part Number	Qty.	Description
1	119-3471	1	Tire-13 Inch
3	114-1640	2	Bushing-Flange
4	232-27	1	Stem-Valve
5	302-5	1	Fitting-Grease
99	232-46	1	Tube ●

● Not illustrated

Deck Lift Assembly

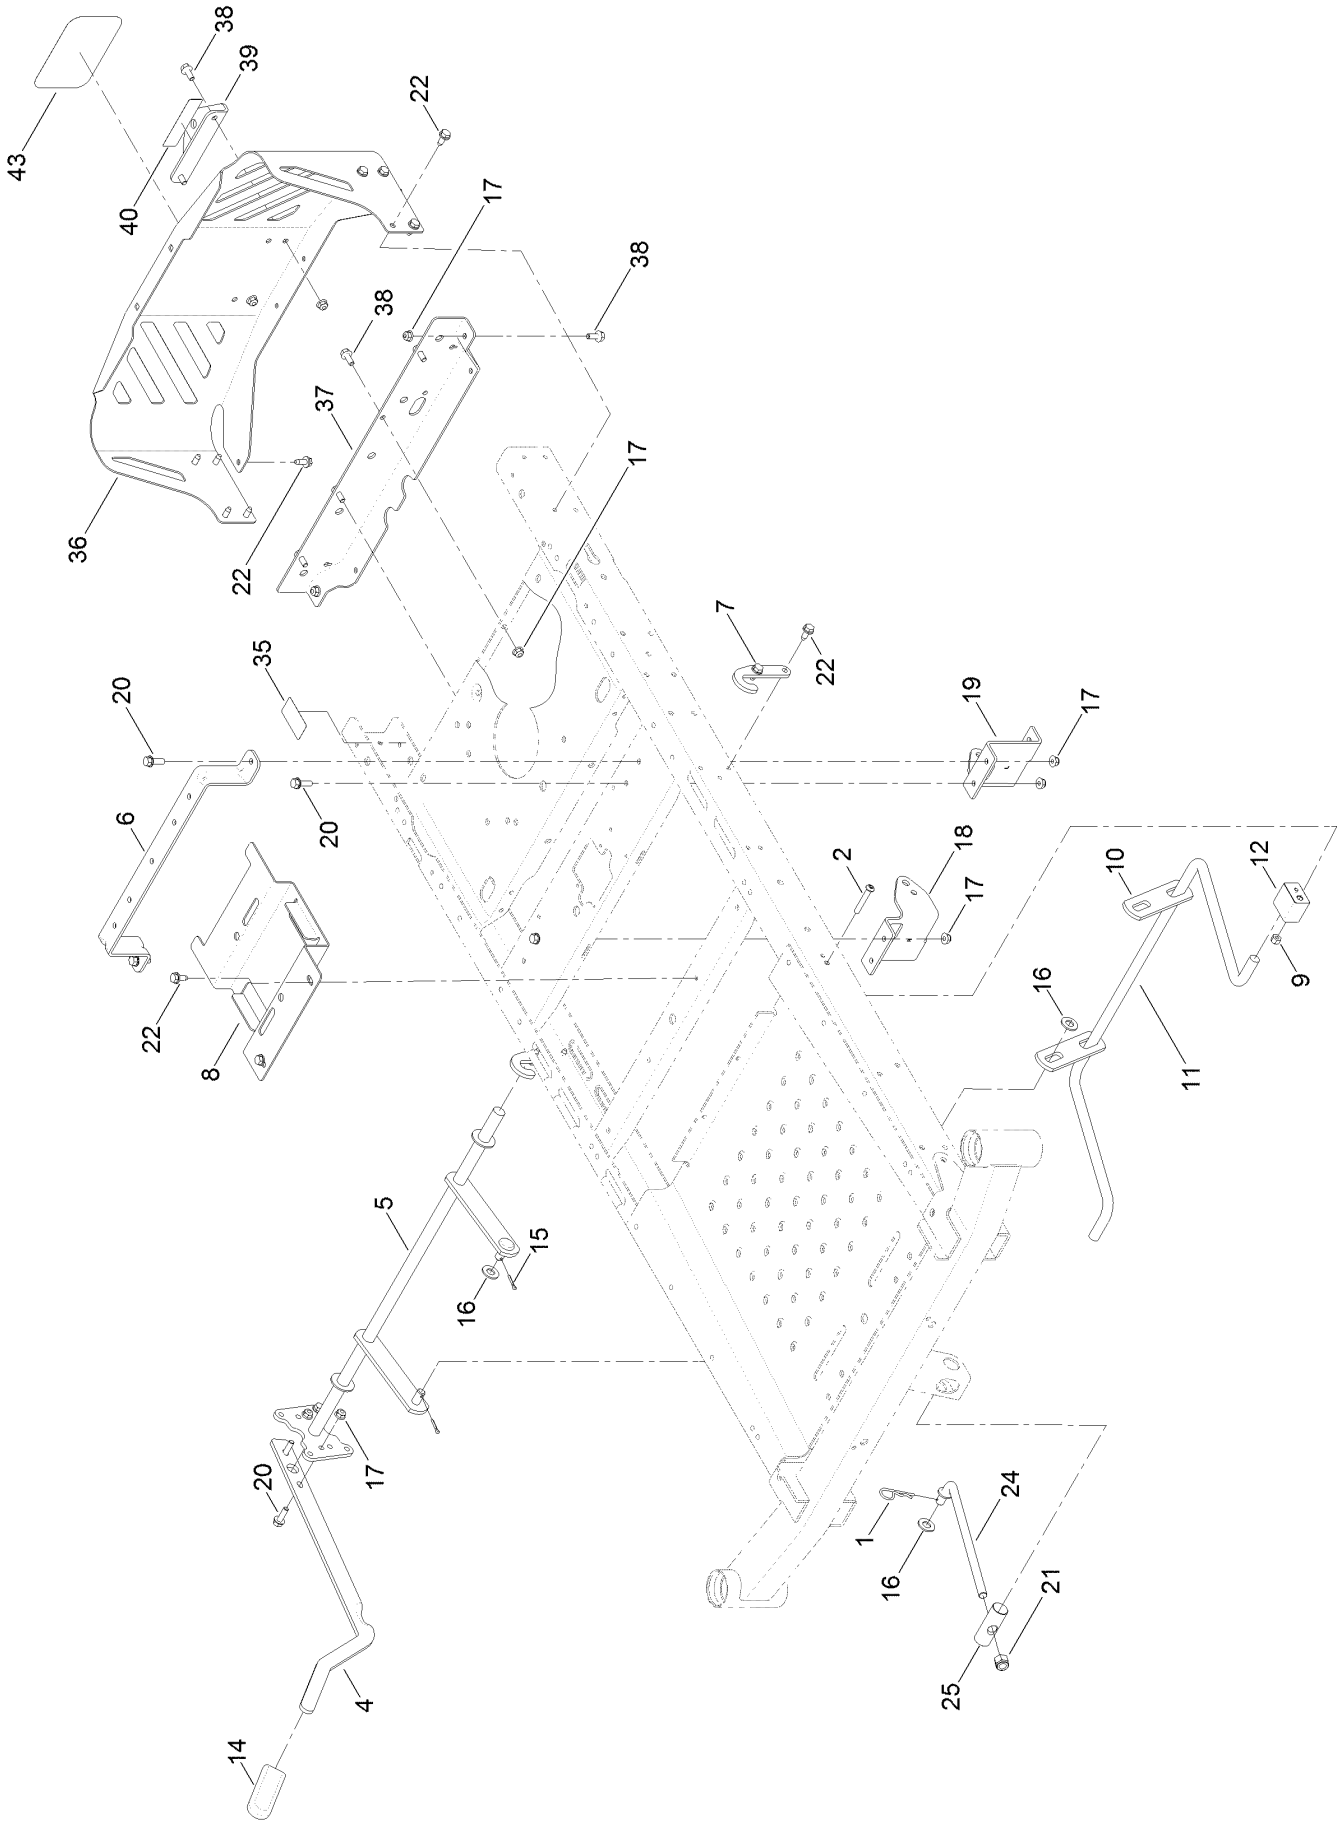

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-806005	1	Pin-Cotter
2	120-5499	2	Screw-HSBH
4	119-3427-03	1	Lever-Lift
5	119-3424-03	1	Lift-Deck
6	117-7337-03	1	Brace-Seat, Rear
7	119-8875	2	Bracket-Lift
8	131-0914-03	1	Bracket-Battery
9	3296-29	2	Nut-Lock, NI
10	108-7840	2	Link-Lift
11	119-3347	1	Arm-Lift, Rear
12	108-7845	2	Block-Pivot
14	1-633268	1	Grip-Lever
15	3272-11	2	Pin-Cotter
16	3256-26	3	Washer-Flat
17	104-8300	14	Nut-Flange, NI
18	131-0901-01	1	Mount-Hydro, Front Right
19	131-0902-01	1	Mount-Hydro, Front Left
20	3234-29	6	Screw-HHF
21	3296-19	1	Nut-Hex
22	32144-70	16	Screw-HWHTF
24	131-3945	1	Rod-Mount, Deck
25	119-8810	1	Pin-Pivot
35	121-2989	2	Decal-Bypass
36	130-0701-03	1	Guard-Engine, Wide
37	130-6946-01	1	Crossmember-Rear, Wide
38	3234-47	8	Screw-HHF
39	117-1232-03	1	Bracket-Hitch
40	131-4036	1	Decal
43	99-4693	1	Decal

Motion Control Assembly

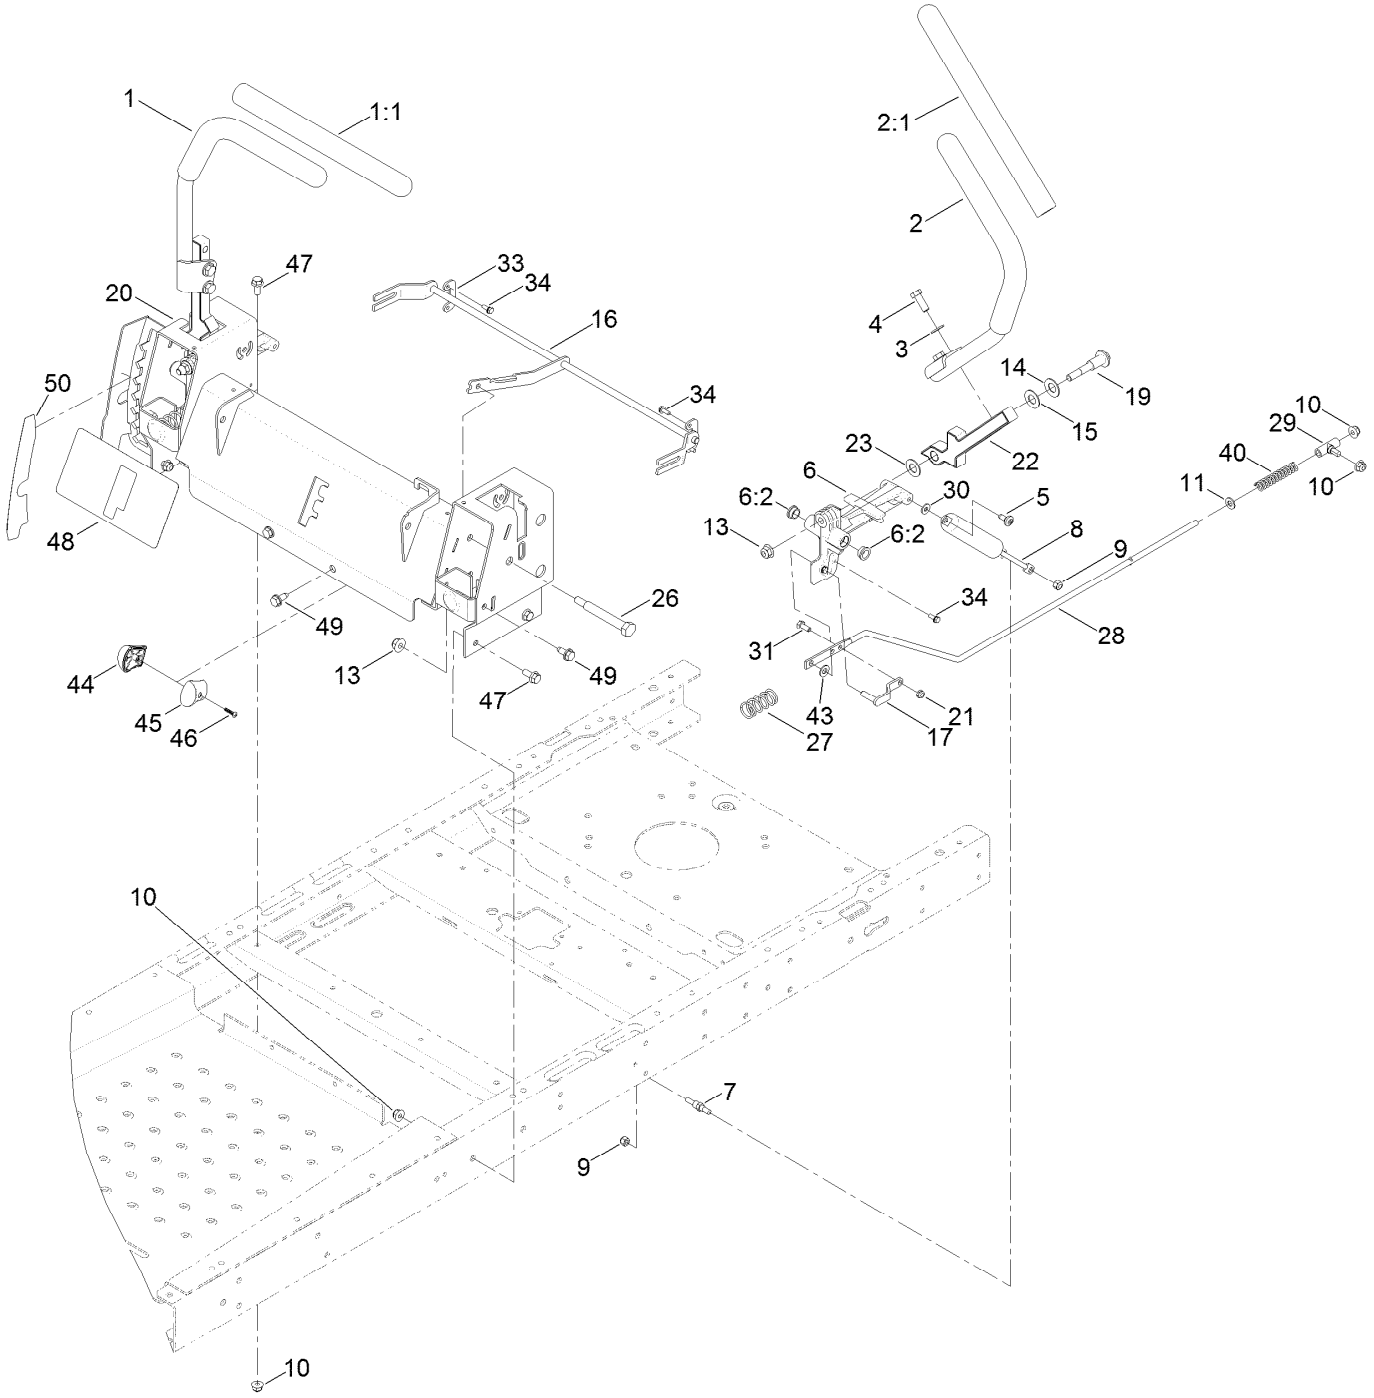

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-0731	1	Handle-Control, RH
1:1	121-0726	1	Grip
2	121-0730	1	Handle-Control, LH
2:1	121-0726	1	Grip
3	3256-24	4	Washer-Flat
4	323-6	4	Screw-HH
5	120-7950	2	Screw-Shoulder
6	119-3470	2	Actuator Arm ASM
6:2	256-156	2	Bushing-Flange
7	110-6810	2	Stud-Damper
8	131-4132	2	Damper
9	3296-42	4	Nut-Lock, NI
10	104-8300	10	Nut-Flange, NI
11	3256-23	2	Washer-Flat
13	104-8301	4	Nut-Flange, NI
14	119-8925	2	Washer-Belleville
15	117-1240	2	Washer
16	131-1062	1	Speed Control ASM
17	119-3303	2	Pin-Rod, Hydro
19	117-1198	2	Bolt-Pivot
20	131-1060-03	1	Control Box ASM
21	3296-56	2	Nut-Lock, NI
22	115-5098-05	2	Lever-Control
23	120-2273	2	Washer-Nylon
26	115-5099	2	Bolt-Pivot
27	119-8876	2	Spring-Return
28	117-5388	2	Rod-Hydro
29	119-8842	2	Mount-Rod, Hydro
30	119-8952	2	Washer
31	321-3	2	Screw-HH
33	117-5385	2	Retainer
34	32144-1	4	Screw-Taptite
40	1-603807	2	Spring-Return, Neutral
43	93-6079	2	Spacer-Nylon
44	119-8935	1	Knob-RH
45	119-8936	1	Knob-LH
46	94-4496	1	Screw-PPH
47	3234-47	6	Screw-HHF
48	131-3947	1	Decal-Speed Control
49	32144-70	4	Screw-HWHTF
50	119-8870	1	Decal-HOC

Brake Box Assembly

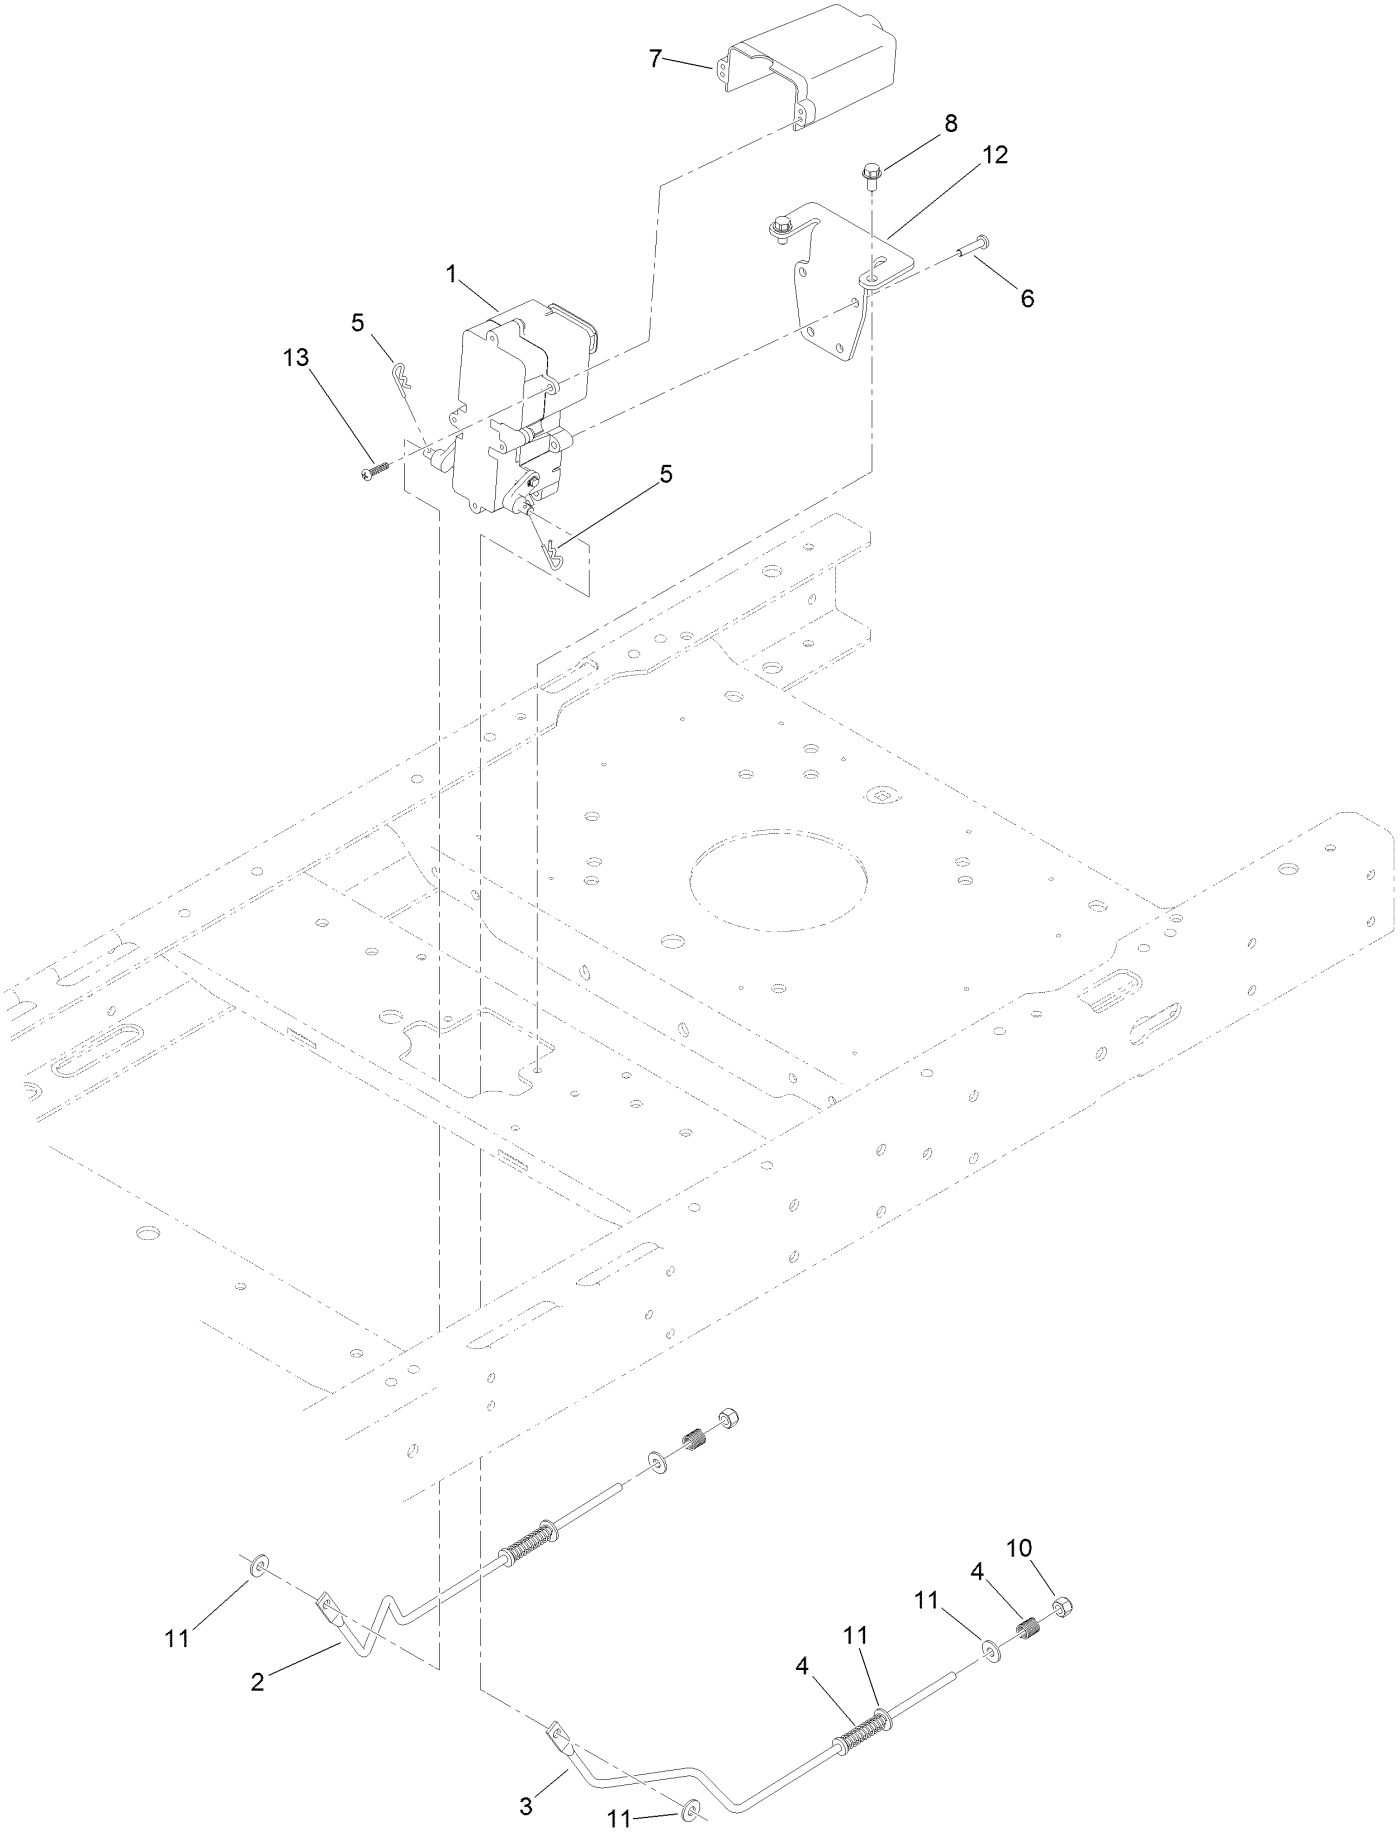

Brake Box Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-6892	1	Brake Box ASM
2	121-2976	1	Rod-Brake, Wide (RH)
3	121-2977	1	Rod-Brake, Wide (LH)
4	117-1169	4	Spring-Compression
5	3290-307	2	Pin-Cotter
6	32144-36	4	Screw-PPH
7	130-6974	1	Cover-Connector
8	32144-4	2	Screw-HWH
10	3296-42	2	Nut-Lock, NI
11	119-8952	6	Washer
12	130-0790-03	1	Bracket-Mount, Brake
13	94-4496	2	Screw-PPH

Seat Assembly

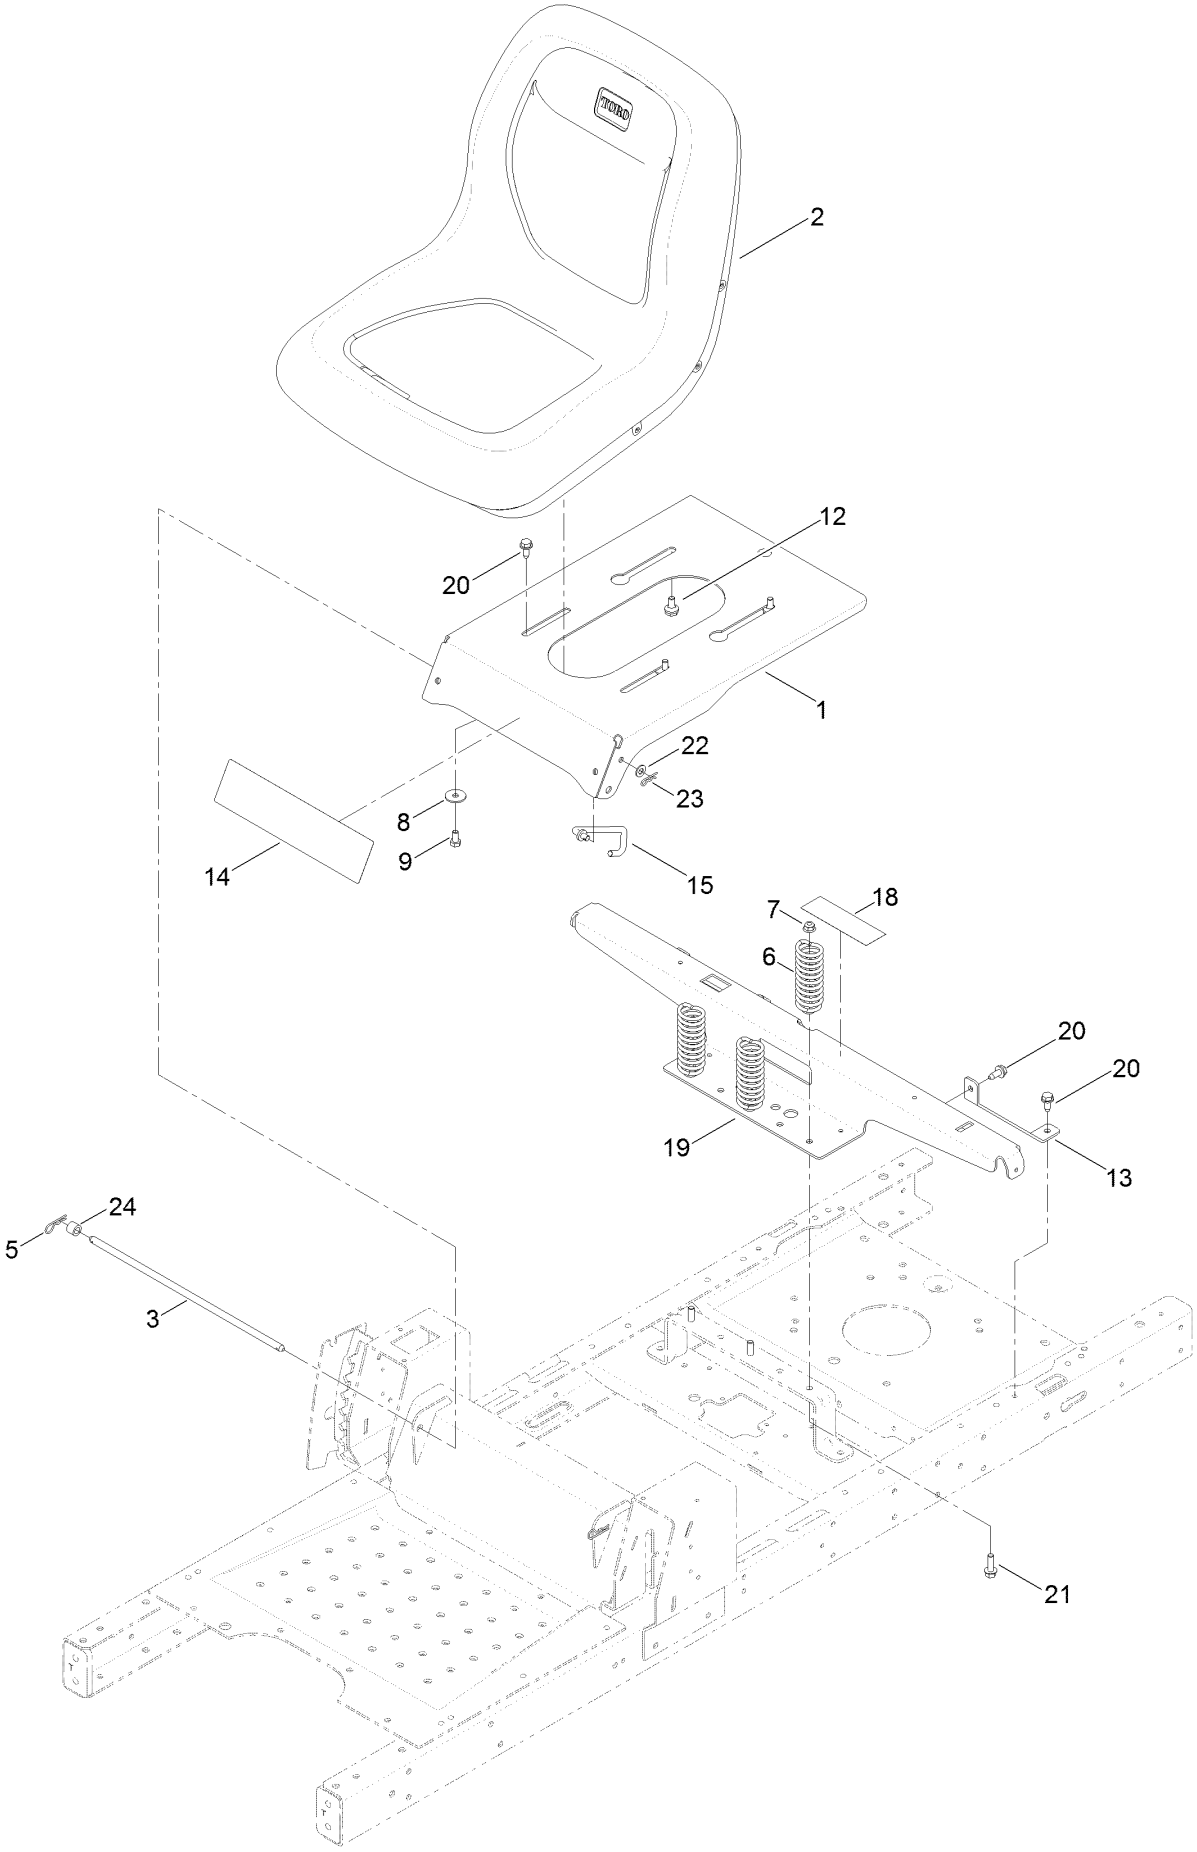

Seat Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-3391-01	1	Pan-Seat
2	119-8829	1	Seat-18 Inch
3	115-4966	1	Rod-Stop
5	3290-250	2	Pin-Cotter
6	92-7054	3	Spring-Compression
7	104-8300	3	Nut-Flange, NI
8	5-4460	2	Washer-Pivot
9	322-2	2	Screw-HH
12	37-8771	2	Bolt-Shoulder
13	119-3431-03	2	Support-Tank, Rear
14	131-3652	1	Decal-Timecutter
15	119-8972	1	Stop-Seat
18	106-8717	1	Decal-Service
19	131-1039-03	1	Support-Pod, Wide
20	32144-70	4	Screw-HWHTF
21	3234-29	3	Screw-HHF
22	3256-23	1	Washer-Flat
23	3290-307	1	Pin-Cotter
24	1-413088	2	Bushing-Lever, Lift

Belt and Idler Assembly

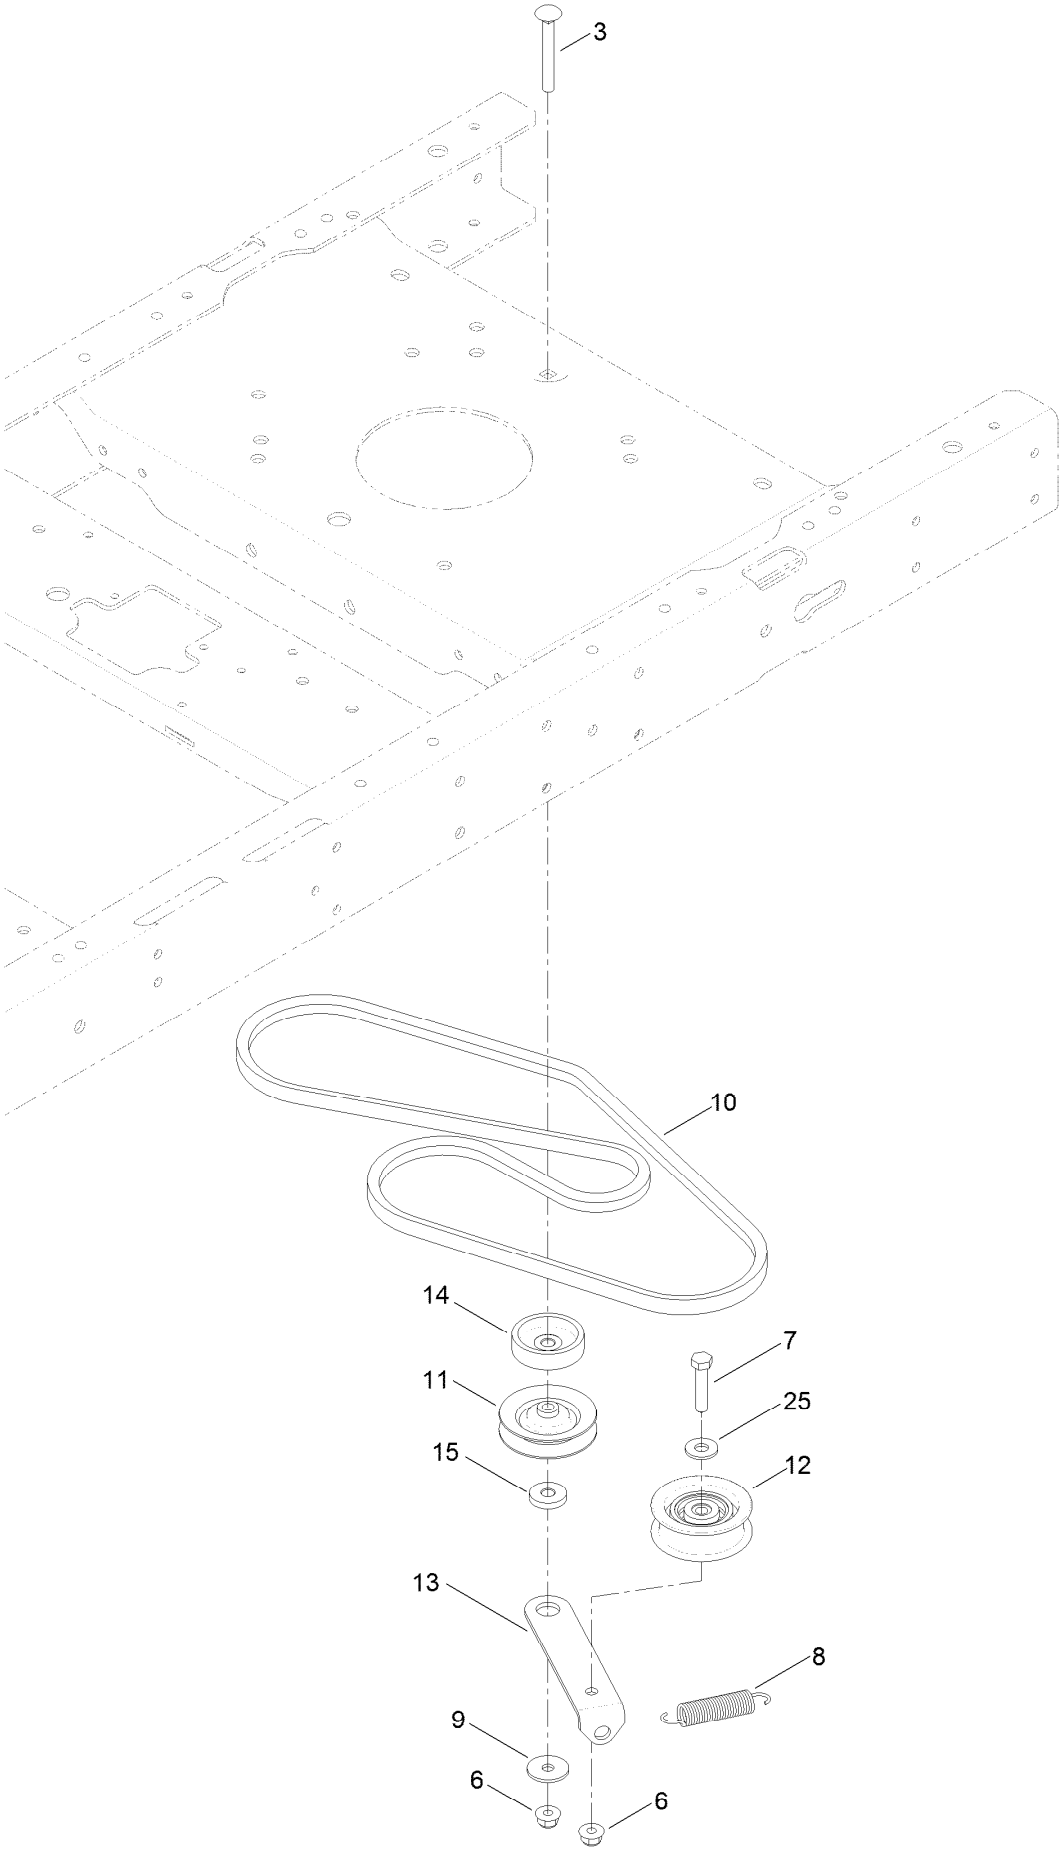

Belt and Idler Assembly (continued)

Ref.	Part Number	Qty.	Description
3	3230-8	1	Screw-CARR
6	104-8300	2	Nut-Flange, NI
7	322-7	1	Screw-HH
8	104-6415	1	Spring-Return, Pedal
9	5-4460	1	Washer-Pivot
10	130-6976	1	V-Belt
11	119-8822	1	Pulley-Idler
12	106-2176	1	Pulley-Idler
13	119-3326	1	Arm-Idler
14	119-3353	1	Spacer
15	119-3327	1	Spacer-Arm, Idler
25	3256-3	1	Washer-Flat

Hydro Transaxle Assembly

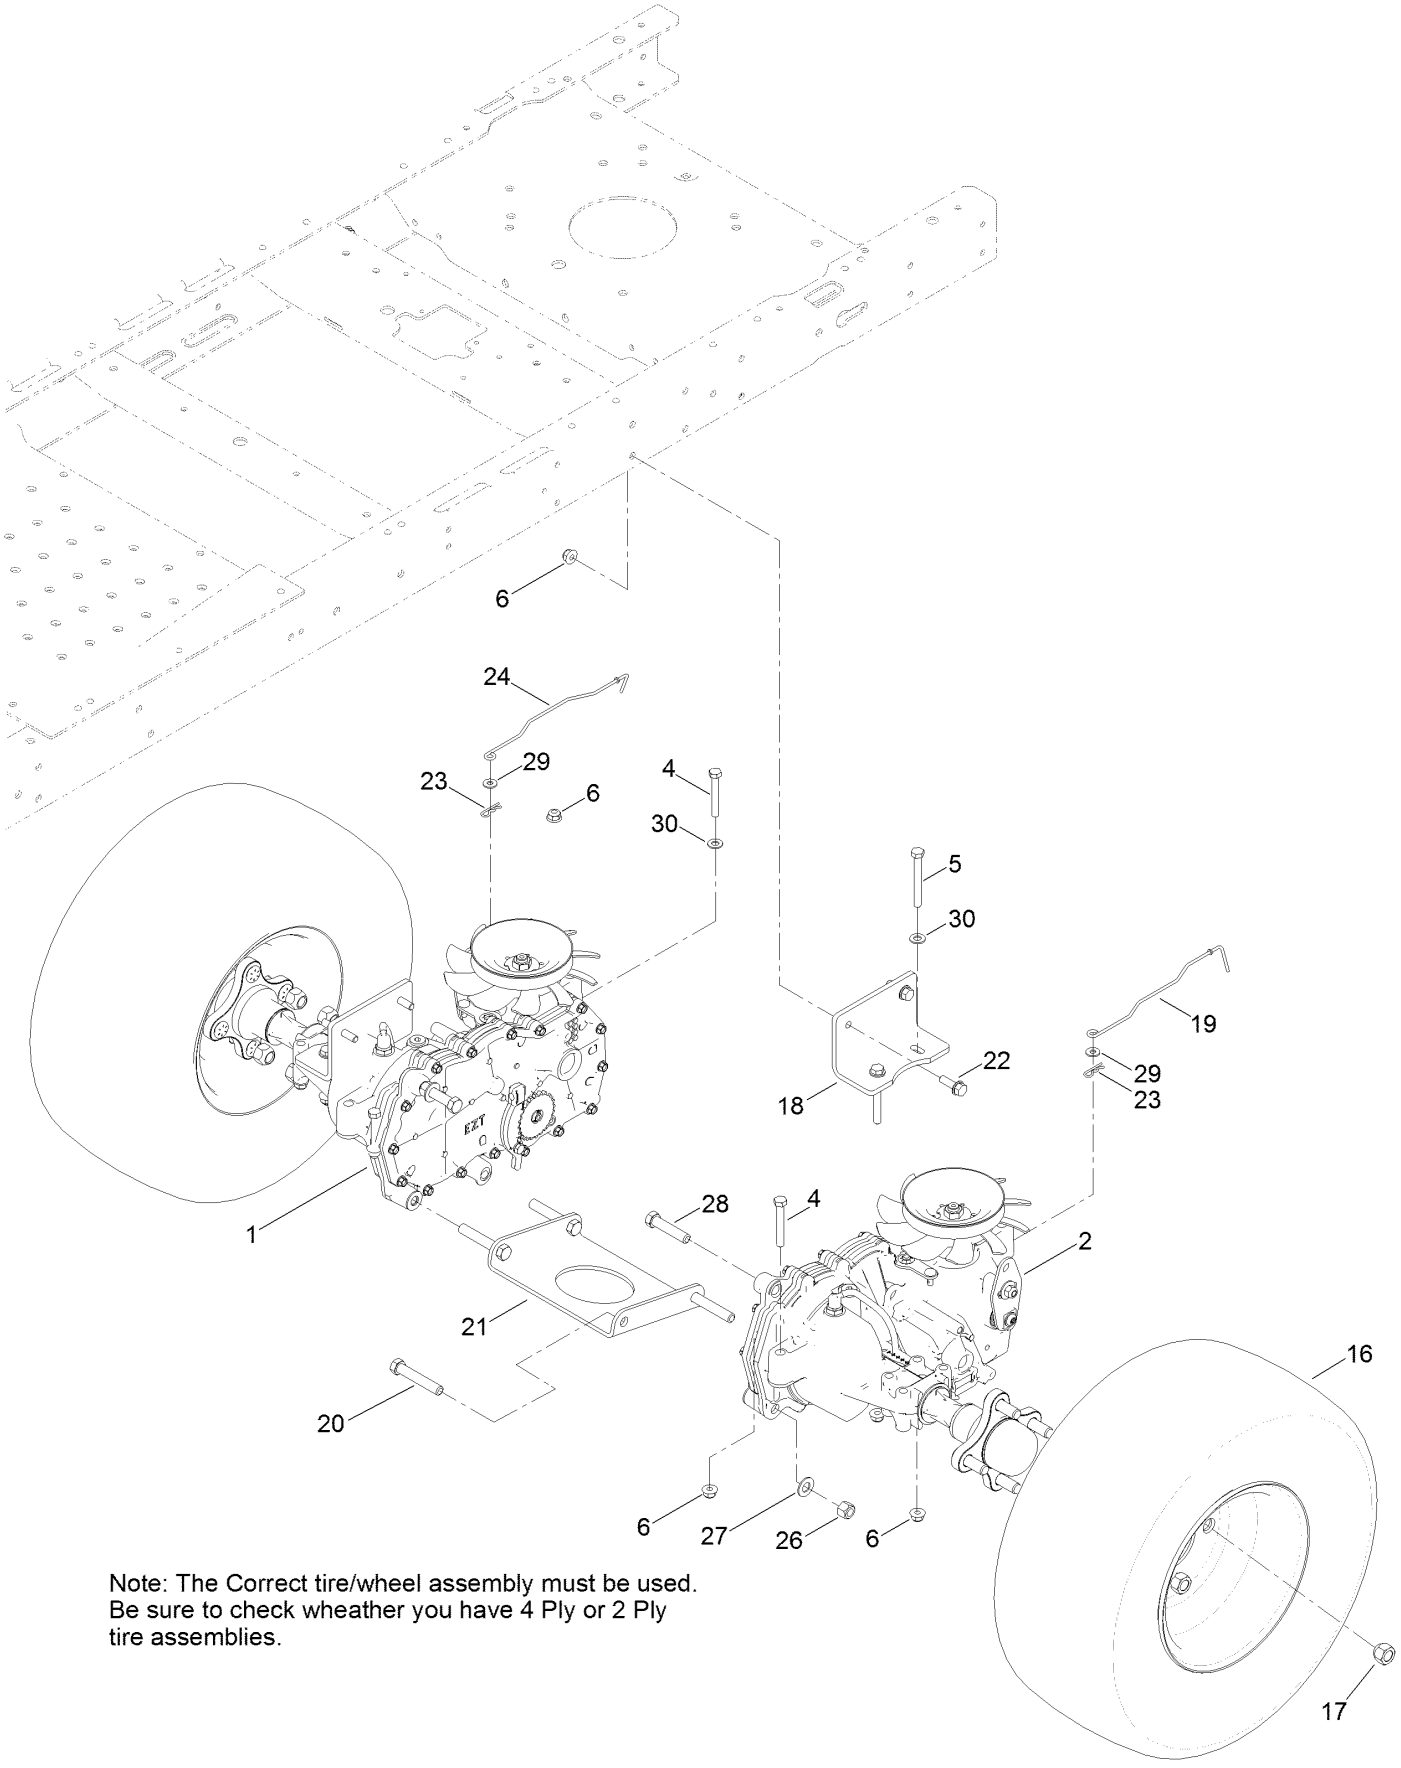

Note: The Correct tire/wheel assembly must be used.
Be sure to check wheather you have 4 Ply or 2 Ply
tire assemblies.

Hydro Transaxle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	131-3641	1	RH Hydro Transmission ASM
2	131-3640	1	LH Hydro Transmission ASM
4	322-11	4	Screw-HH
5	322-13	4	Screw-HH
6	104-8300	12	Nut-Flange, NI
16	109-5268	2	4 Ply Wheel And Tire ASM
16	131-3673	2	2 Ply Wheel And Tire ASM
17	242-50	8	Nut-Lug
18	117-7264-03	2	Mount-Hydro
19	131-0900	1	Rod-Bypass, LH
20	324-10	4	Screw-HH
21	119-3342-03	1	Cross Plate-Hydro
22	3234-29	4	Screw-HHF
23	3290-307	2	Pin-Cotter
24	130-7049	1	Rod-Bypass, RH
26	3296-48	6	Nut-Lock, NI
27	3256-25	6	Washer-Flat
28	324-8	2	Screw-HH
29	119-8952	2	Washer
30	3256-23	6	Washer-Flat

4 Ply Wheel and Tire Assembly No. 109-5268

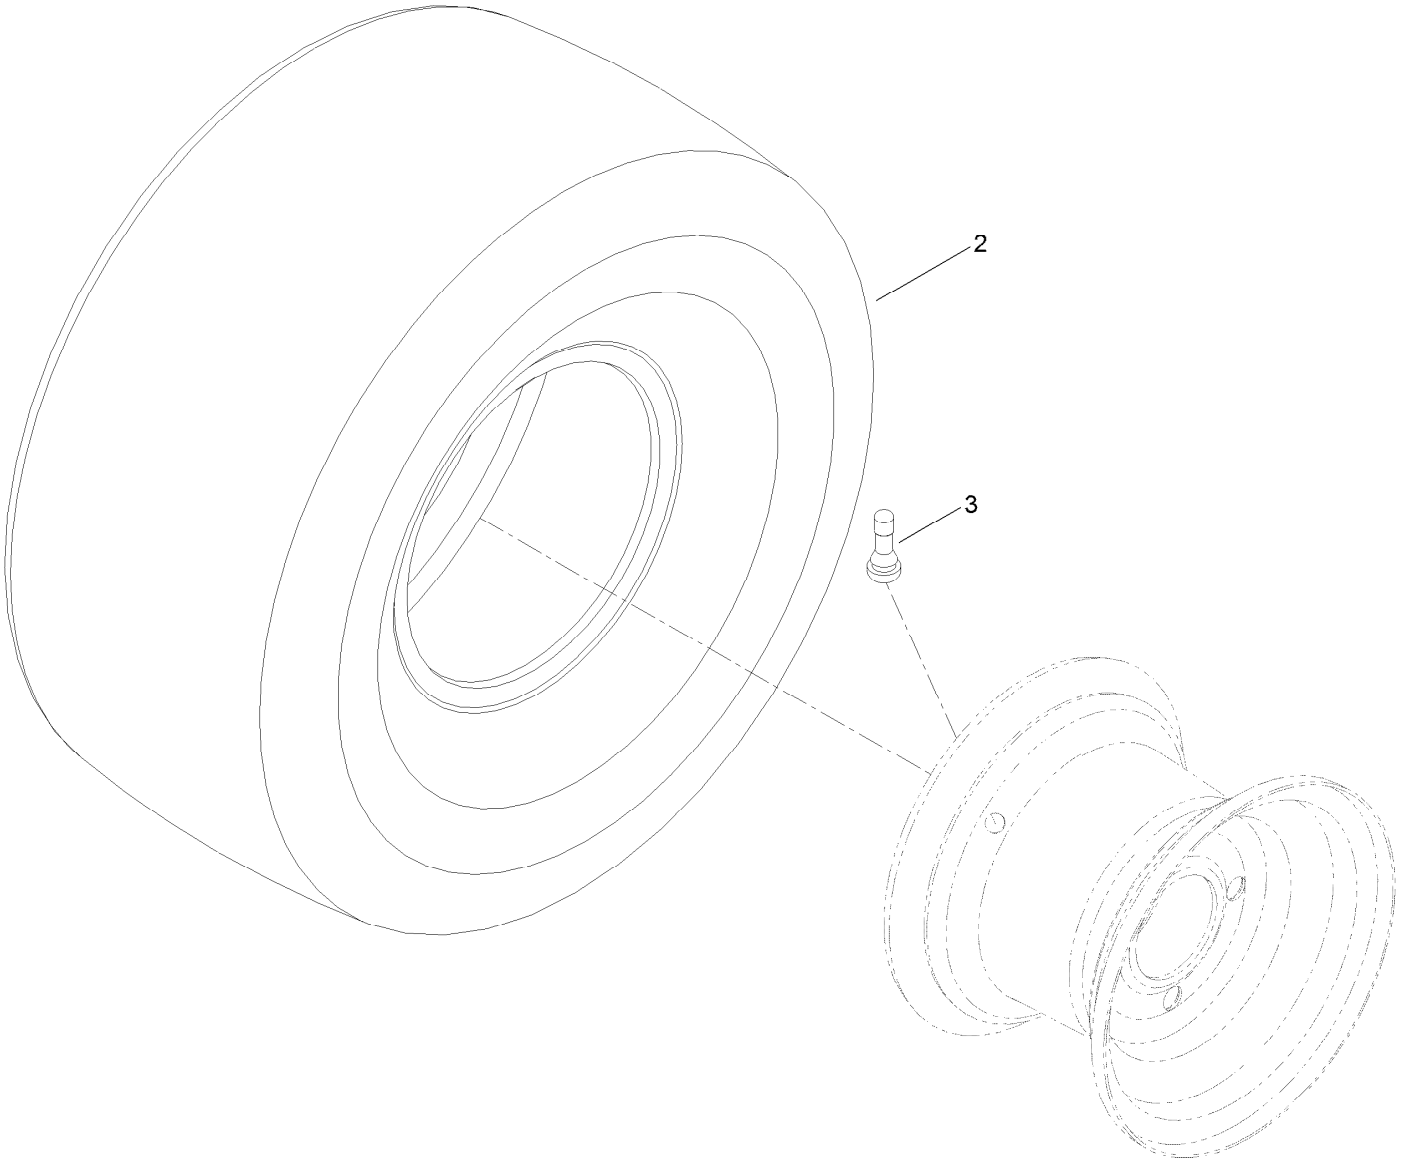

4 Ply Wheel and Tire Assembly No. 109-5268 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
2	109-5269	1	Tire-4 Ply
3	232-27	1	Stem-Valve
4	93-3893	1	Tube-Inner ●

● Not illustrated

2 Ply Wheel and Tire Assembly No. 131-3673

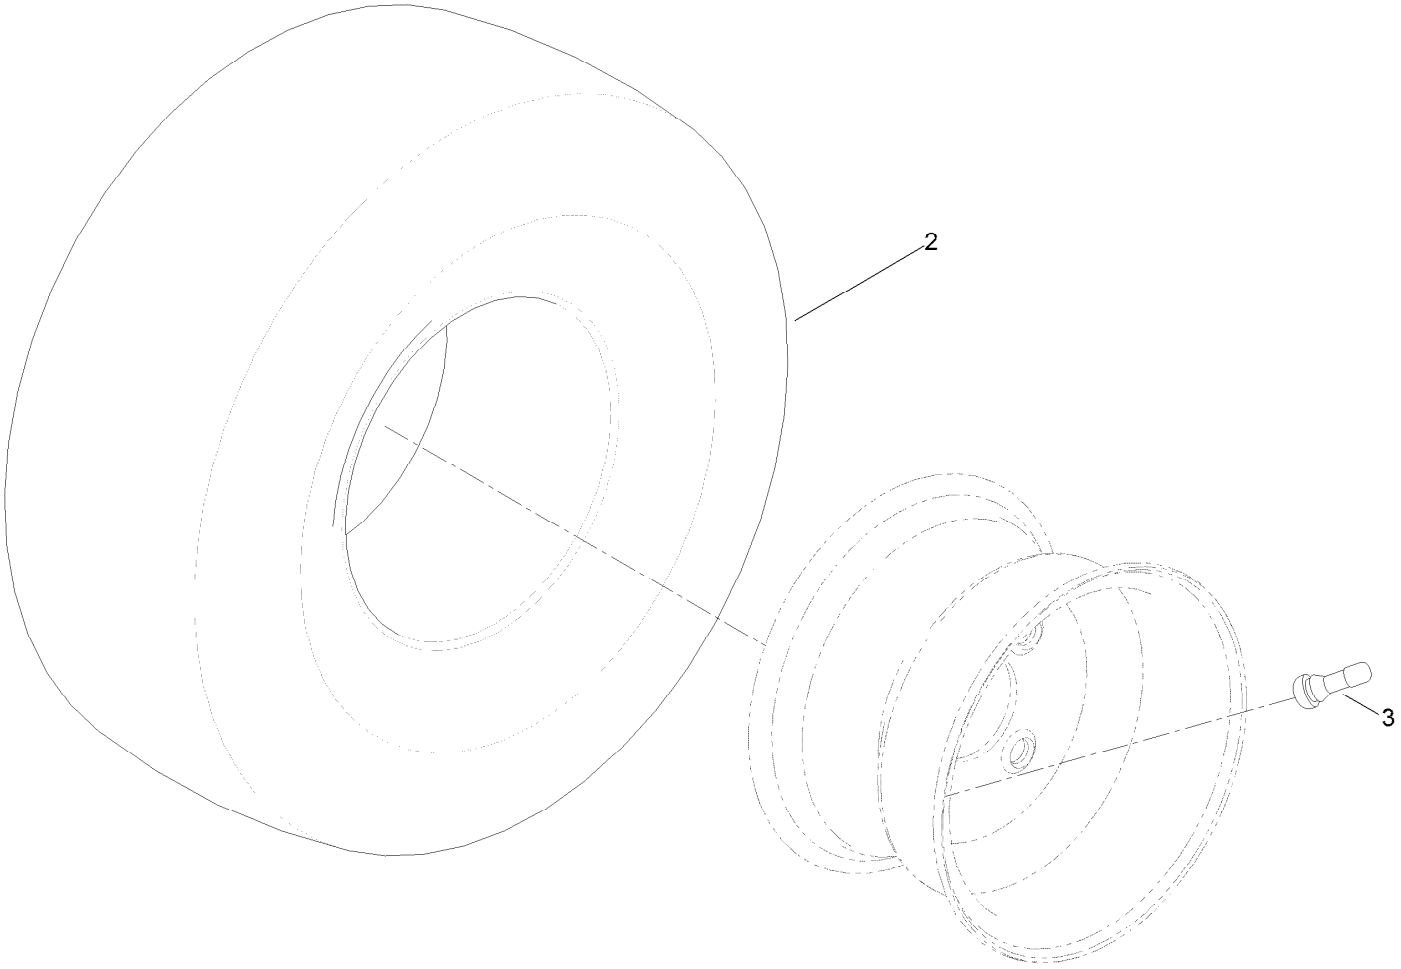

2 Ply Wheel and Tire Assembly No. 131-3673 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
2	131-3680	1	Tire-2 Ply
3	232-27	1	Stem-Valve
4	93-3893	1	Tube-Inner ●

● Not illustrated

LH Transaxle Assembly No. 131-3640

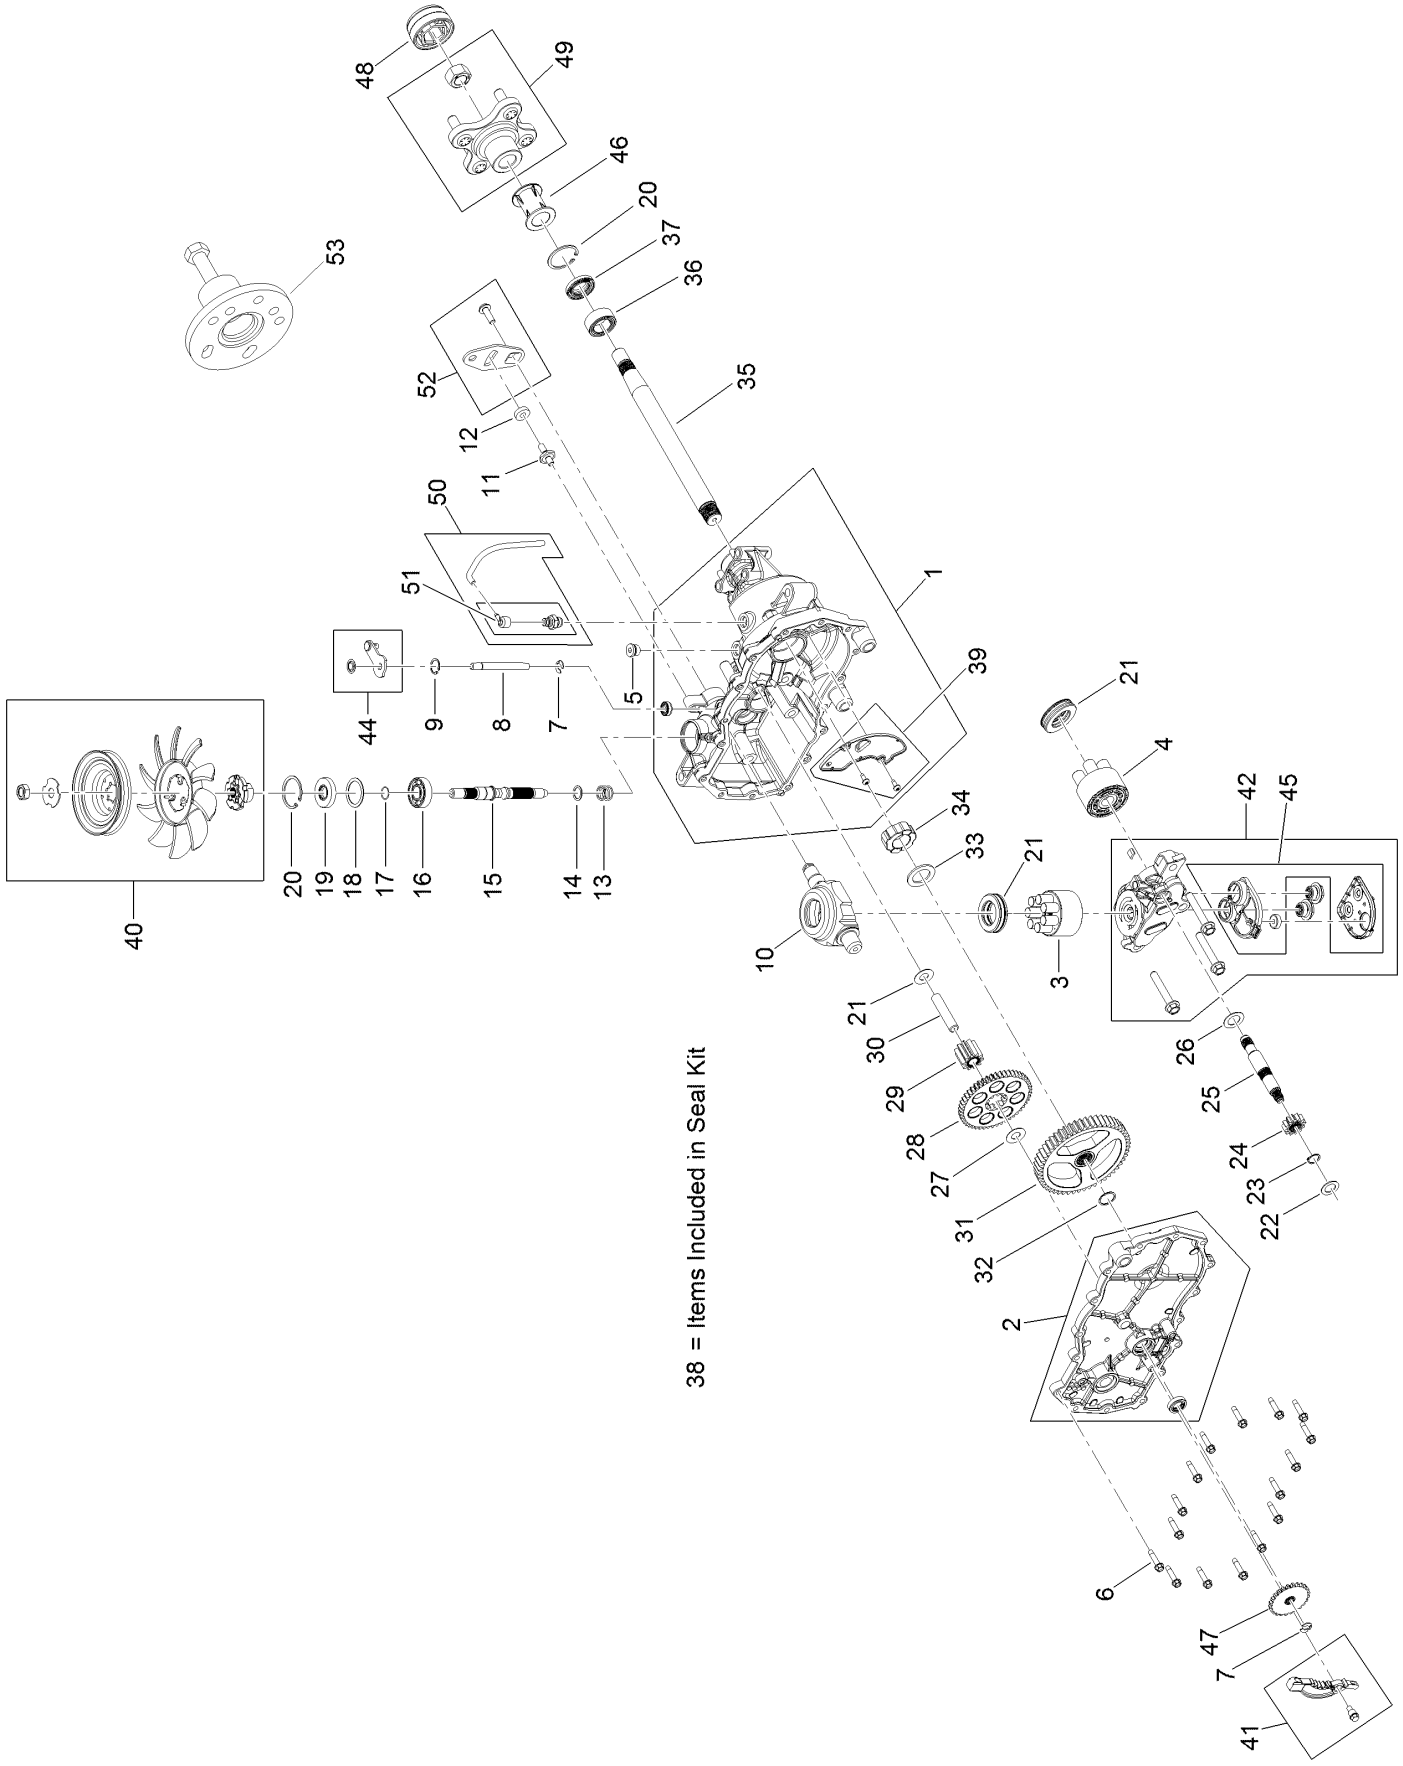

LH Transaxle Assembly No. 131-3640 (continued)

Ref.	Part Number	Qty.	Description
1	106-8695	1	Main Housing ASM
2	106-8696	1	Side ASM
3	110-8561	1	Pump Block ASM
4	103-2666	1	Cylinder Block Kit
5	104-2189	1	Plug-Thread, Straight
6	117-5359	16	Screw-HHF
7	106-8677	2	Ring-Retaining, EXT
8	106-8678	1	Rod-Bypass
9	106-8679	1	Ring-Retaining, Int
10	104-5304	1	Swashplate-Trunnion
11	104-2116	1	Stud
12	112-9853	1	Puck-Friction
13	94-1936	1	Spring-Block
14	94-1937	1	Washer-Thrust
15	104-5306	1	Shaft-Input
16	104-5311	1	Bearing-Ball
17	104-5307	1	Ring-Retaining
18	104-5308	1	Spacer
19	104-5310	1	Seal-Lip
20	104-5309	2	Ring-Retaining
21	94-6922	2	Bearing-Thrust
22	104-5339	1	Washer-Flat
23	104-5340	1	Ring-Retaining
24	132-0912	1	Gear-12T
25	106-8683	1	Shaft-Motor
26	104-5360	1	Washer
27	94-1933	2	Washer
28	132-0911	1	Gear-49T
29	104-5318	1	Gear-Jackshaft, 10T
30	104-5329	1	Pin-Jackshaft
31	112-9854	1	Ring-Spiral, Retaining
32	112-9855	1	Gear-52T, Bull
33	112-9856	1	Washer
34	112-9857	1	Bearing-Sleeve
35	120-7104	1	Shaft-Axle
36	112-9859	1	Bushing-Axle
37	112-9860	1	Seal-Lip
38	106-8686	1	Seal Kit
39	106-8697	1	Expansion Plate Kit
40	121-5746	1	Fan Pulley Kit
41	106-8688	1	Brake Arm Kit
42	112-9861	1	Center Section Filter Kit
44	120-5549	1	Bypass Kit
45	114-1634	1	Filter Kit
46	120-7109	1	Tube-Axle
47	106-8694	1	Disc-Brake, Cog
48	115-5057	1	Cover-Nut, Axle
49	109-5939	1	Hub Kit
50	112-9866	1	Breather Kit
51	114-1635	1	Breather ASM
52	117-5362	1	Arm Control Kit
53	114-8467	1	Hub-Puller, 4 Bolt

RH Transaxle Assembly No. 131-3641

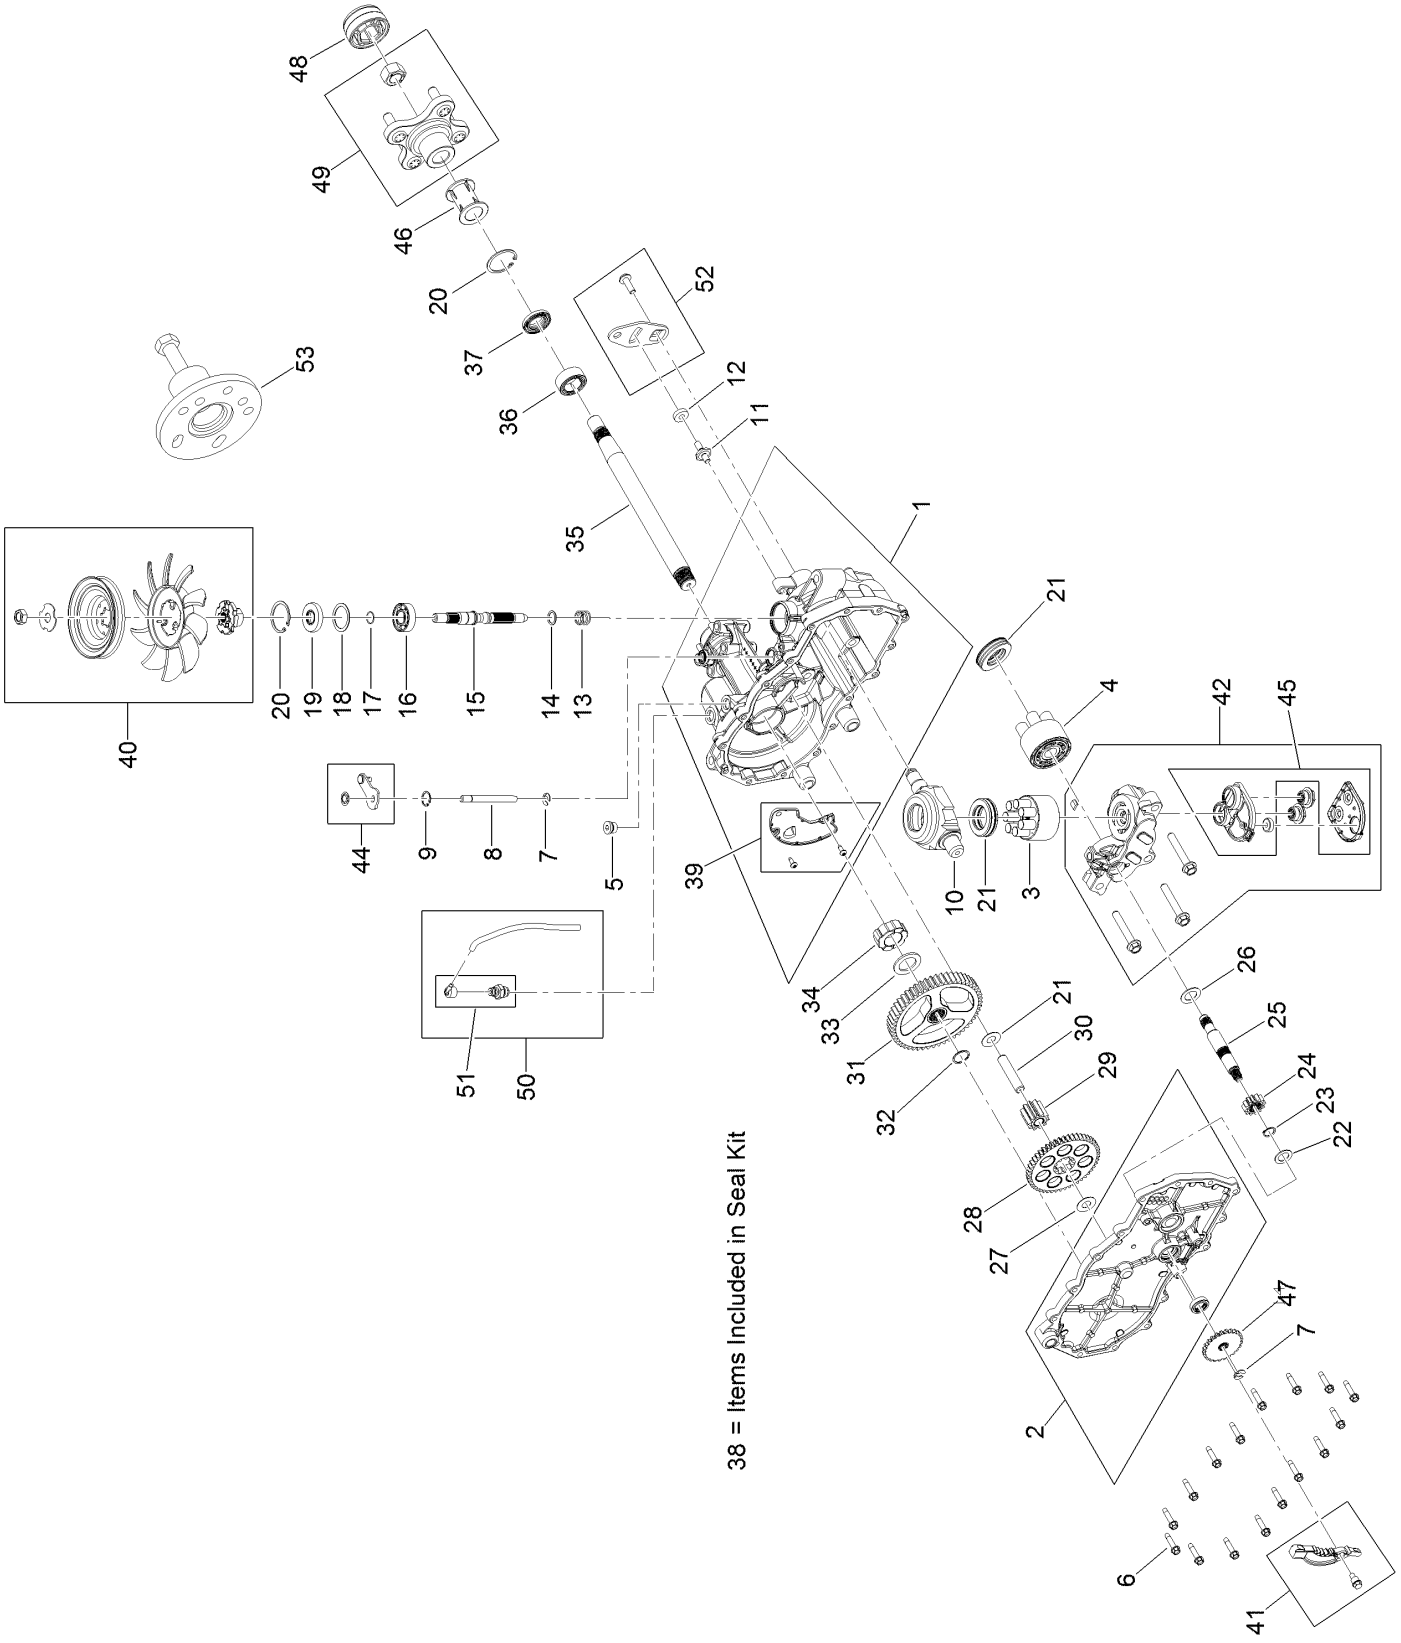

RH Transaxle Assembly No. 131-3641 (continued)

Ref.	Part Number	Qty.	Description
1	106-8674	1	Main Housing ASM
2	106-8675	1	Side ASM
3	110-8561	1	Pump Block ASM
4	103-2666	1	Cylinder Block Kit
5	104-2189	1	Plug-Thread, Straight
6	117-5359	16	Screw-HHF
7	106-8677	2	Ring-Retaining, EXT
8	106-8678	1	Rod-Bypass
9	106-8679	1	Ring-Retaining, Int
10	104-5304	1	Swashplate-Trunnion
11	104-2116	1	Stud
12	112-9853	1	Puck-Friction
13	94-1936	1	Spring-Block
14	94-1937	1	Washer-Thrust
15	104-5306	1	Shaft-Input
16	104-5311	1	Bearing-Ball
17	104-5307	1	Ring-Retaining
18	104-5308	1	Spacer
19	104-5310	1	Seal-Lip
20	104-5309	2	Ring-Retaining
21	94-6922	2	Bearing-Thrust
22	104-5339	1	Washer-Flat
23	104-5340	1	Ring-Retaining
24	132-0912	1	Gear-12T
25	106-8683	1	Shaft-Motor
26	104-5360	1	Washer
27	94-1933	2	Washer
28	132-0911	1	Gear-49T
29	104-5318	1	Gear-Jackshaft, 10T
30	104-5329	1	Pin-Jackshaft
31	112-9854	1	Ring-Spiral, Retaining
32	112-9855	1	Gear-52T, Bull
33	112-9856	1	Washer
34	112-9857	1	Bearing-Sleeve
35	120-7104	1	Shaft-Axle
36	112-9859	1	Bushing-Axle
37	112-9860	1	Seal-Lip
38	106-8686	1	Seal Kit
39	106-8687	1	Expansion Plate Kit
40	121-5746	1	Fan Pulley Kit
41	106-8688	1	Brake Arm Kit
42	112-9862	1	Center Section Filter Kit
44	107-2489	1	Bypass Arm Kit
45	114-1634	1	Filter Kit
46	120-7109	1	Tube-Axle
47	106-8694	1	Disc-Brake, Cog
48	115-5057	1	Cover-Nut, Axle
49	109-5939	1	Hub Kit
50	112-9866	1	Breather Kit
51	114-1635	1	Breather ASM
52	117-5362	1	Arm Control Kit
53	114-8467	1	Hub-Puller, 4 Bolt

Clutch Assembly

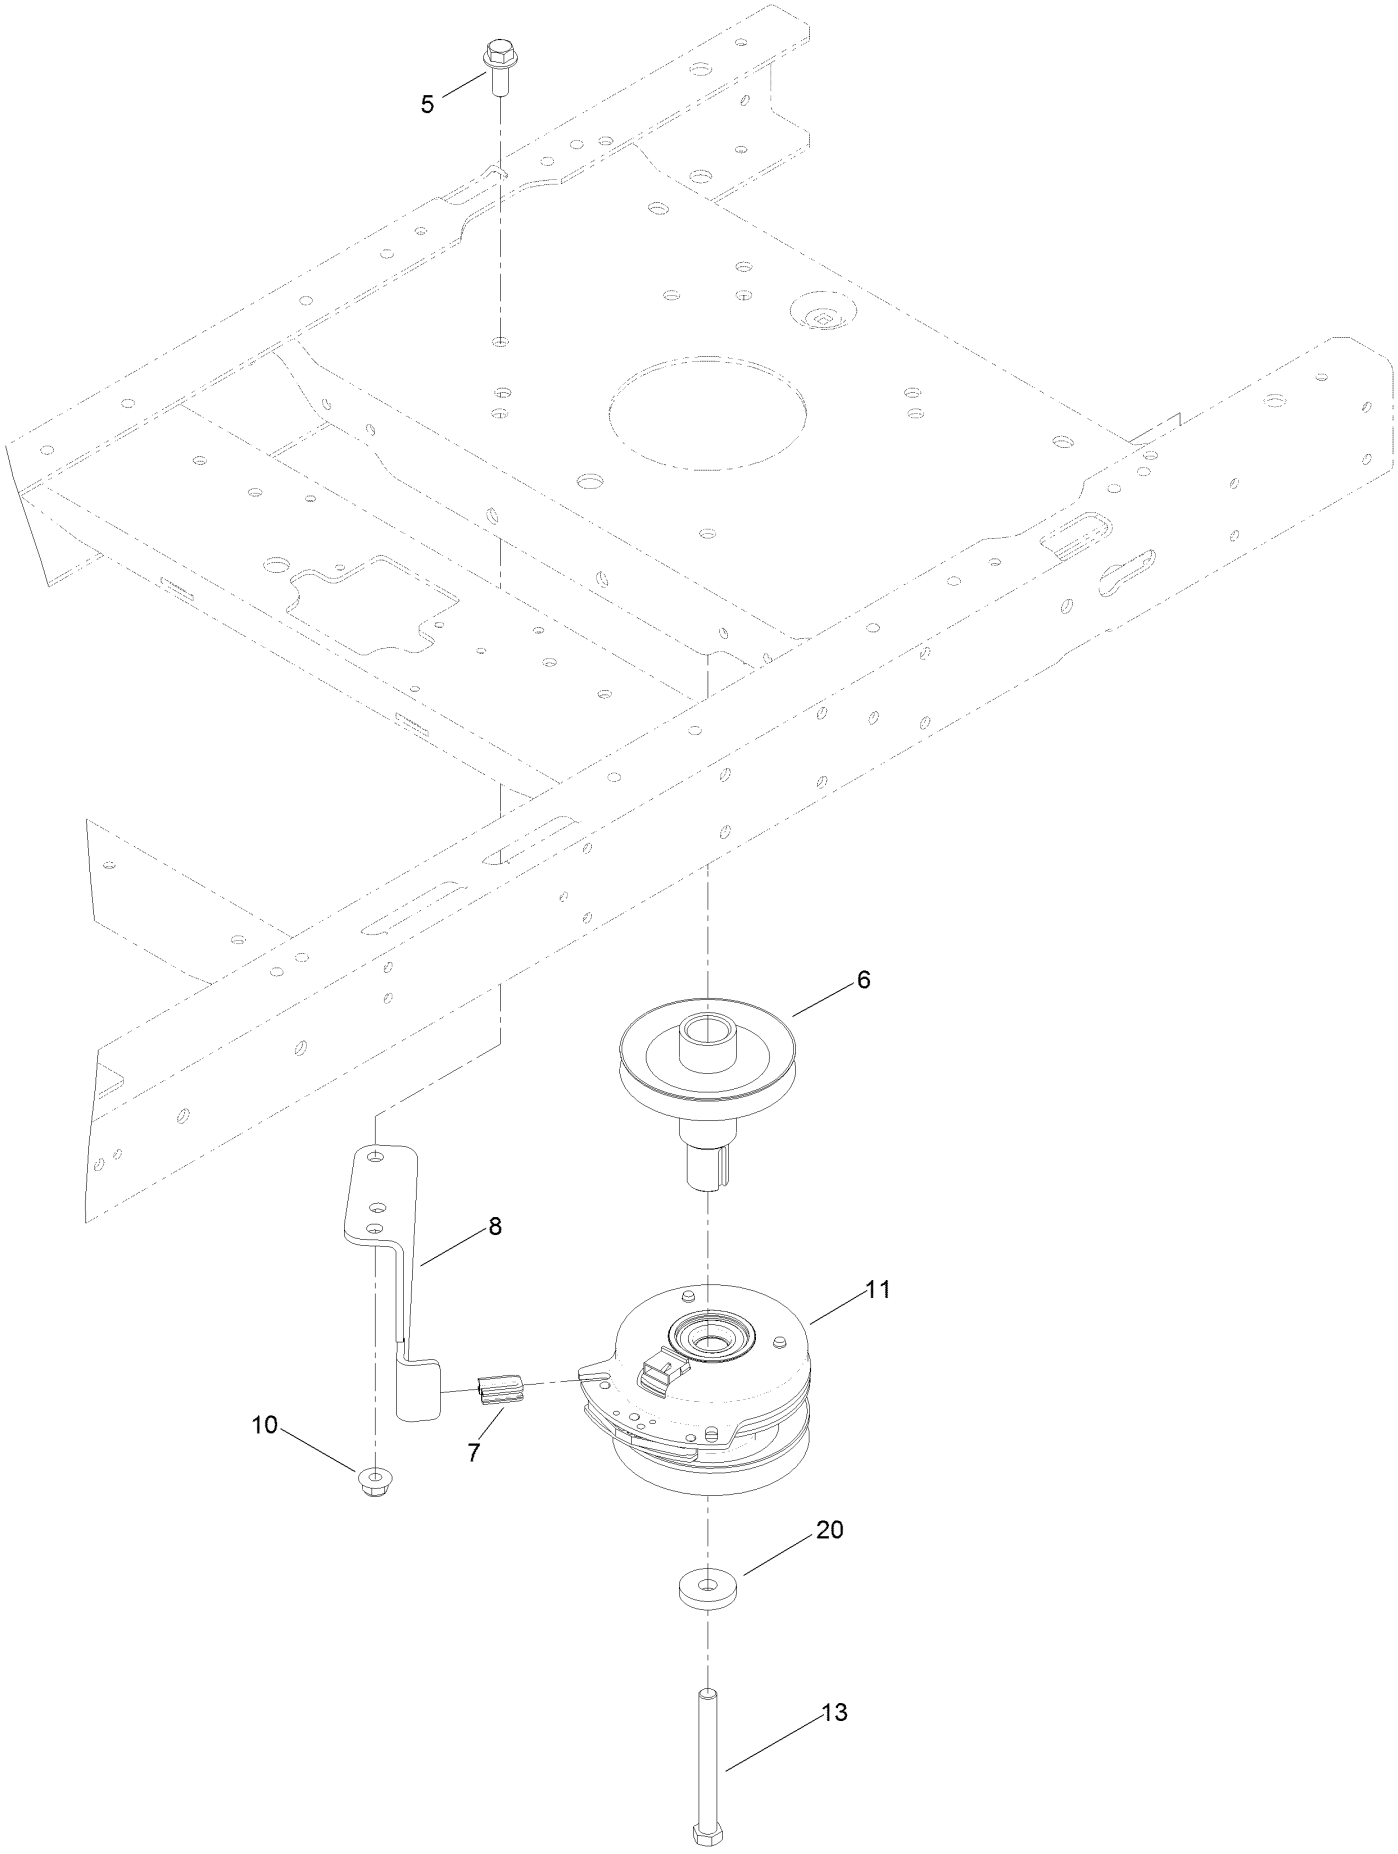

Clutch Assembly (continued)

Ref.	Part Number	Qty.	Description
5	3234-42	1	Screw-HHF
6	130-6854	1	Pulley-Engine
7	120-2217	1	Isolator-Clutch
8	119-8885	1	Stop-Clutch
10	104-8301	1	Nut-Flange, NI
11	127-3410	1	Clutch-PTO
13	3212-19	1	Screw-HH
20	112843	1	Washer

Engine and Muffler Assembly

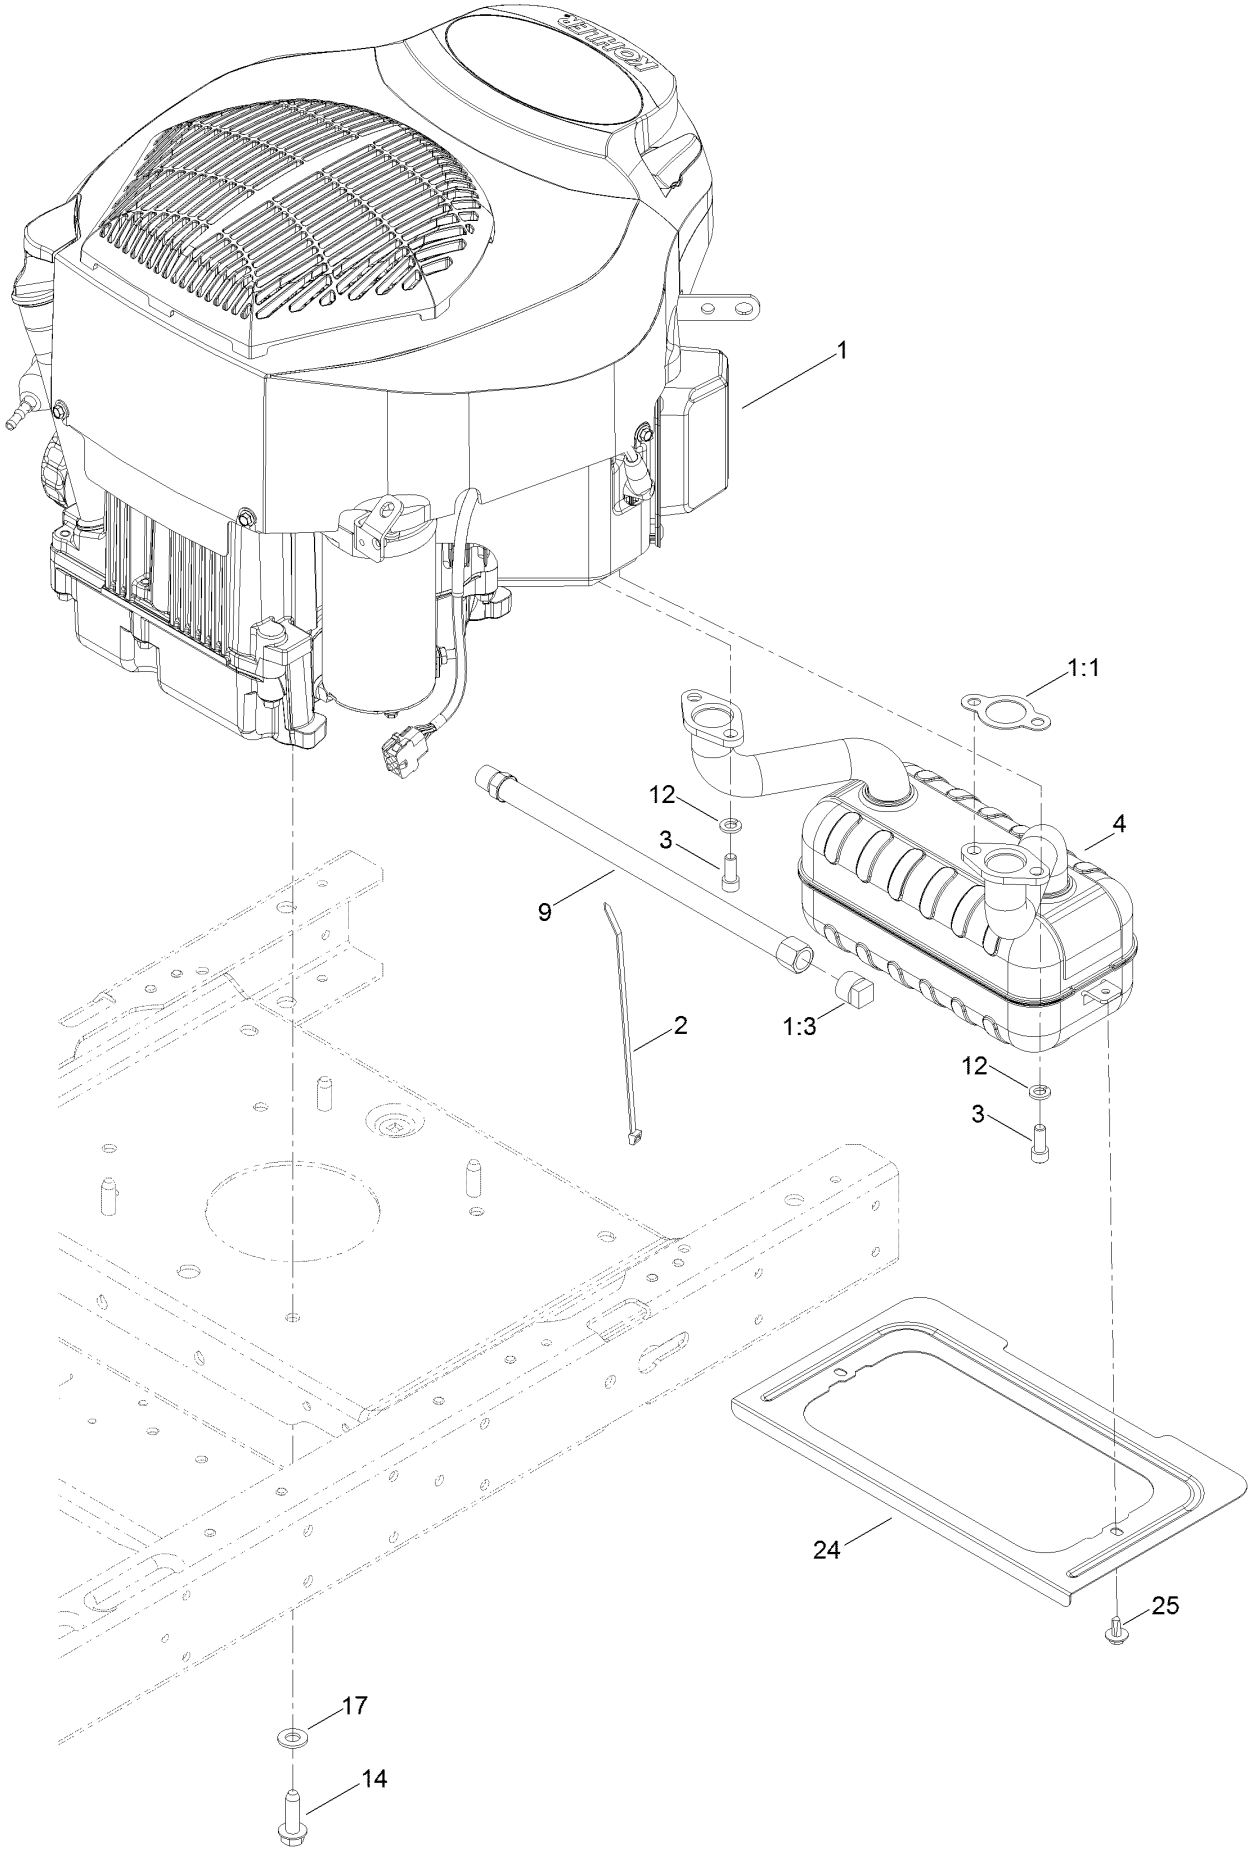

Engine and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Kohler 24HP 7000 Series Autochoke ●■
1:1	110-6697	2	Gasket-Exhaust
1:3	281-2	1	Plug-Pipe, SQH
2	614249	1	Tie-Cable
3	3274-10	4	Screw-HSH
4	117-7462	1	Muffler-Kohler
9	117-1261	1	Hose-Drain, Oil
12	3253-4	4	Washer-Lock
14	32144-109	4	Screw-Taptite
17	3256-24	3	Washer-Flat
24	131-1071-03	1	Shield-Heat
25	46-8560	2	Screw-HHFTF

● Not serviced separately

■ Obtain parts from www.kohlerplus.com

Body Styling and Fuel Pod Assembly

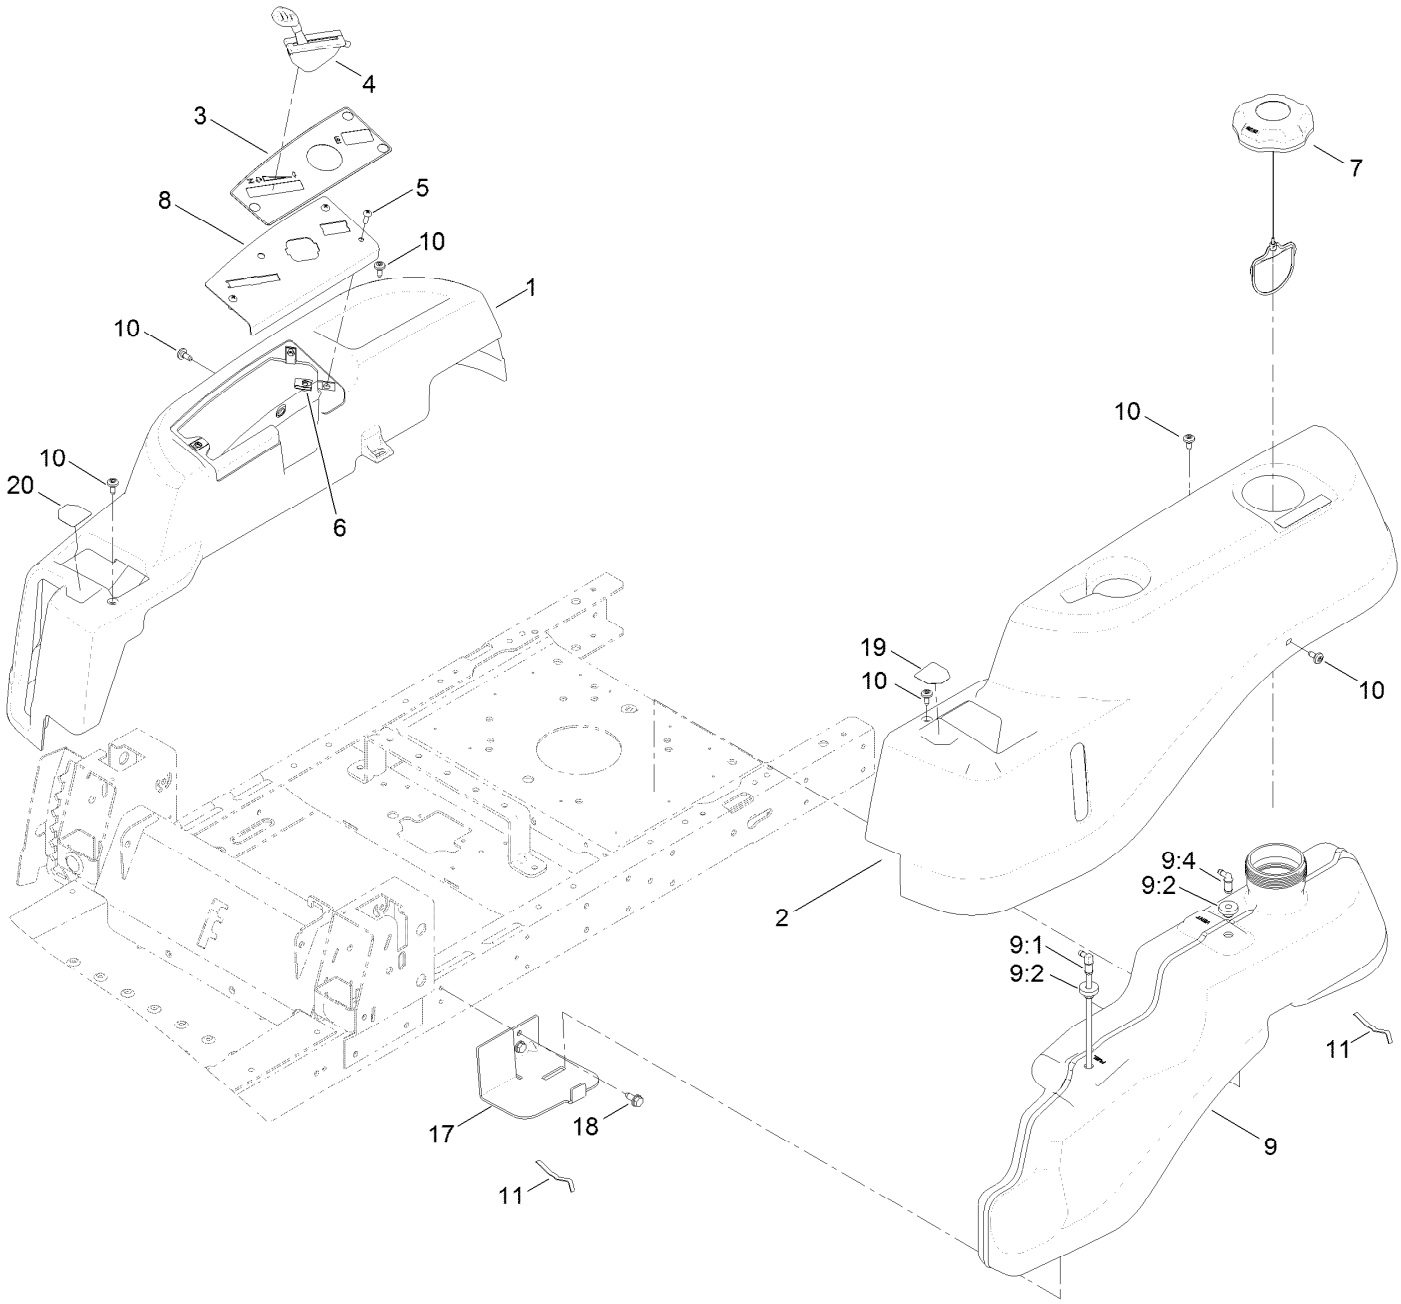

Body Styling and Fuel Pod Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-3338	1	Pod-RH
2	119-3337	1	Pod-LH
3	131-4162	1	Decal-Panel, Control
4	131-1006	1	Cable-Throttle
5	3258-166	3	Screw-PRH
6	107069	3	Clip
7	120-5461	1	Cap-Fuel, Ratcheting
8	119-3377-03	1	Plate-Control
9	119-3324	1	Fuel Tank ASM
9:1	121-0793	1	Connector-Elbow, 90 DEG
9:2	46-6560	2	Bushing
9:4	117-7400	1	Fitting-Plastic
10	120-7950	6	Screw-Shoulder
11	609830	2	Spring
17	119-3395-03	1	Support-Tank, Front
18	32144-70	2	Screw-HWHTF
19	119-8814	1	Decal-Control Lever, LH
20	119-8815	1	Decal-Control Lever, RH

Fuel Delivery Assembly

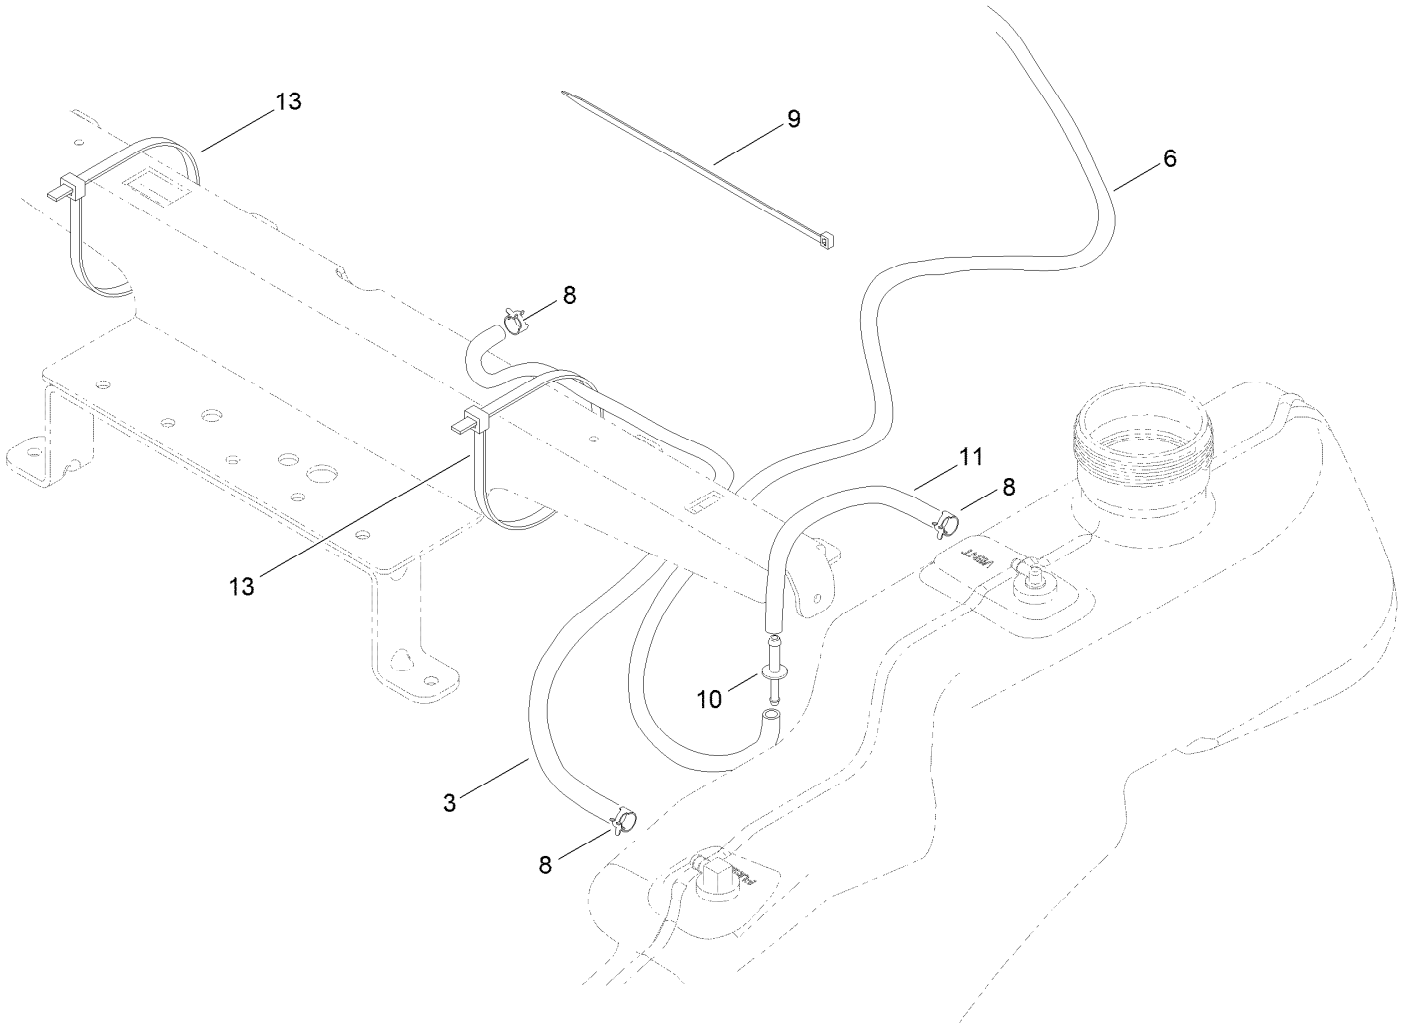

Fuel Delivery Assembly (continued)

Ref.	Part Number	Qty.	Description
3	109-0273	1	Hose-Fuel
6	108-9698	1	Hose-Fuel
8	2412-98	3	Clamp-Hose
9	614249	3	Tie-Cable
10	117-5399	1	Adaptor-Orifice
11	110-1876	1	Hose-Fuel
13	3334-945	2	Tie-Cable

Battery and Electrical Assembly

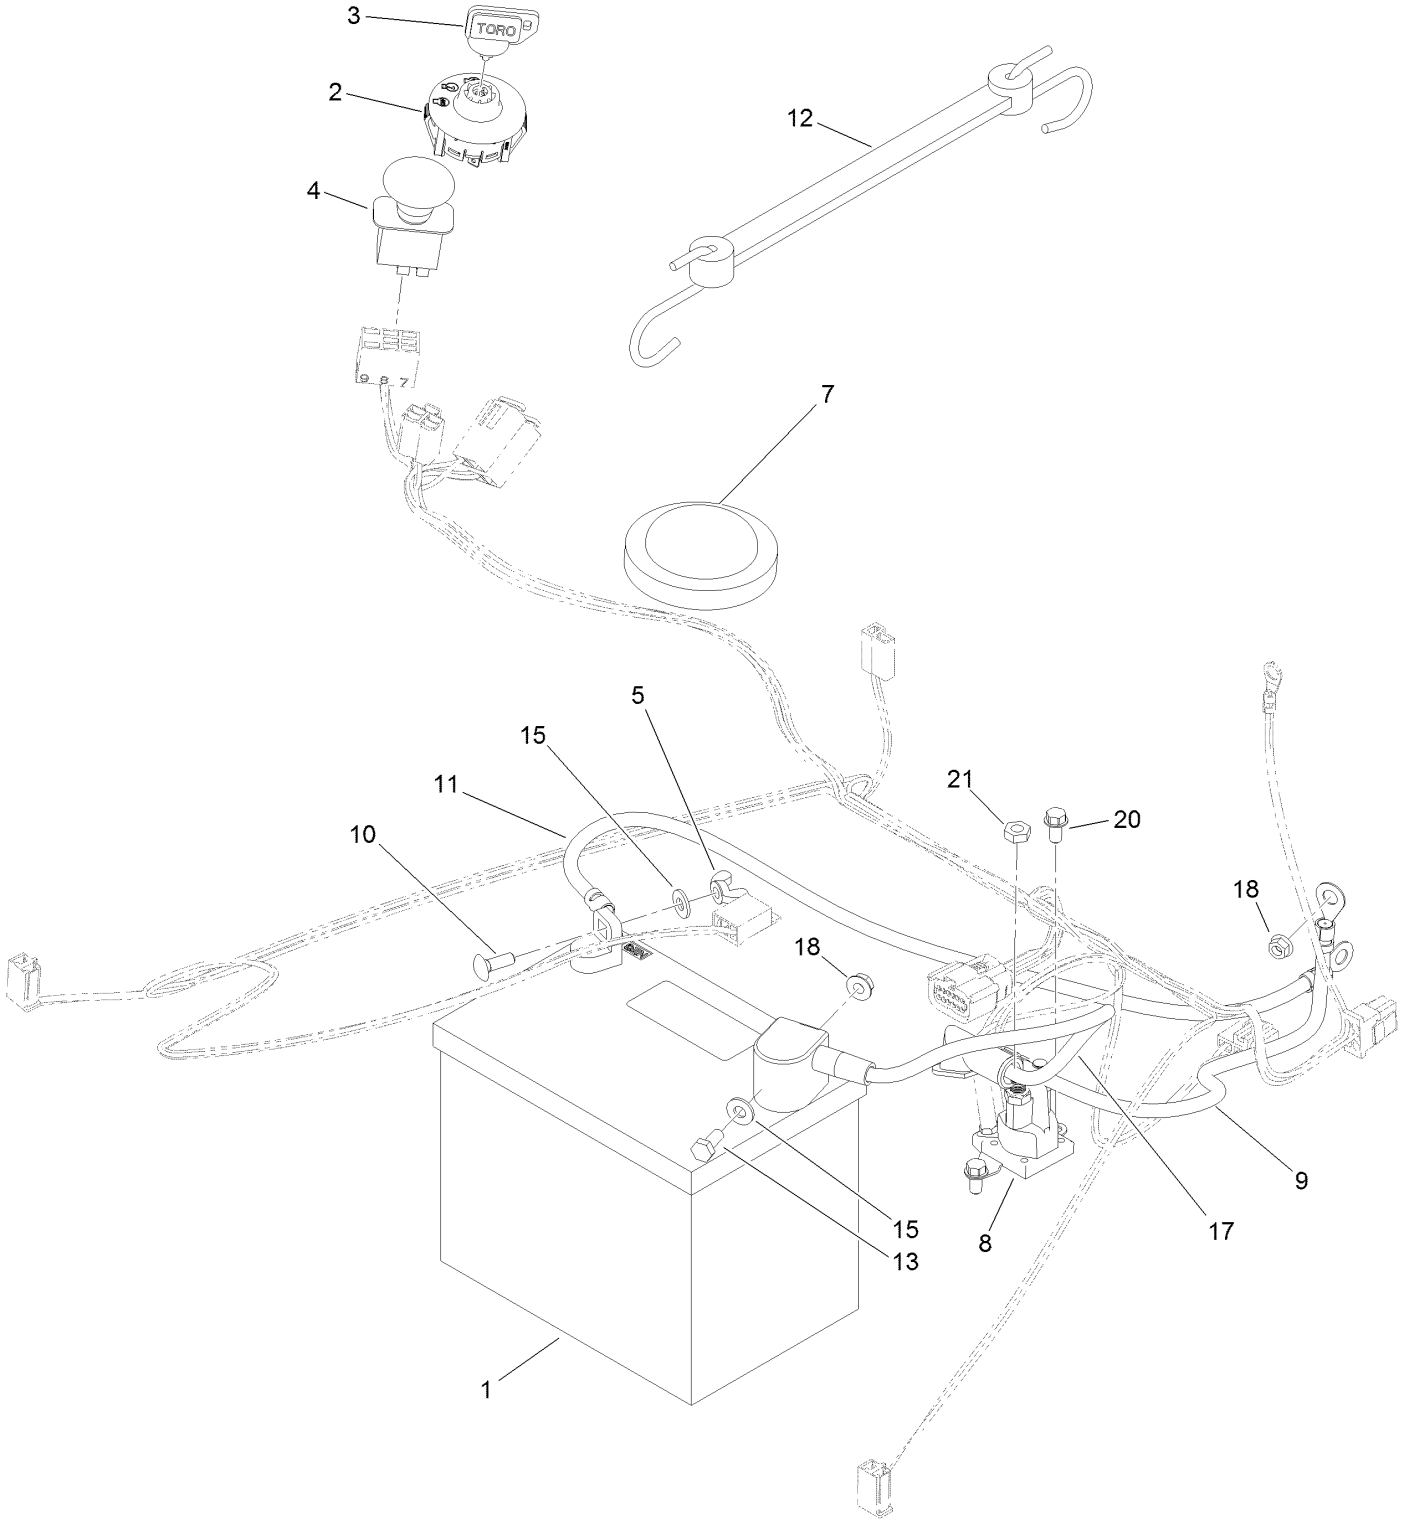

Battery and Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	105-1692	1	Battery-Dry
2	117-2221	1	Switch-Ignition
3	63-8360	1	Key-Ignition
4	103-5221	1	Switch-PTO
5	32103-22	1	Nut-Wing
7	100-3524	1	Switch-Seat
8	117-1197	1	Solenoid
9	121-0711	1	Cable-Battery, Positive
10	3229-1	1	Bolt-CARR
11	121-5726	1	Cable-Battery, Black
12	104-2466	1	Holddown-Battery
13	321-3	1	Screw-HH
15	3256-22	2	Washer-Flat
17	119-8897	1	Cable-Battery, Red
18	32128-33	2	Nut-HF
20	32144-4	2	Screw-HWH
21	3220-2	2	Nut-Jam

Fuse and Wire Harness Assembly

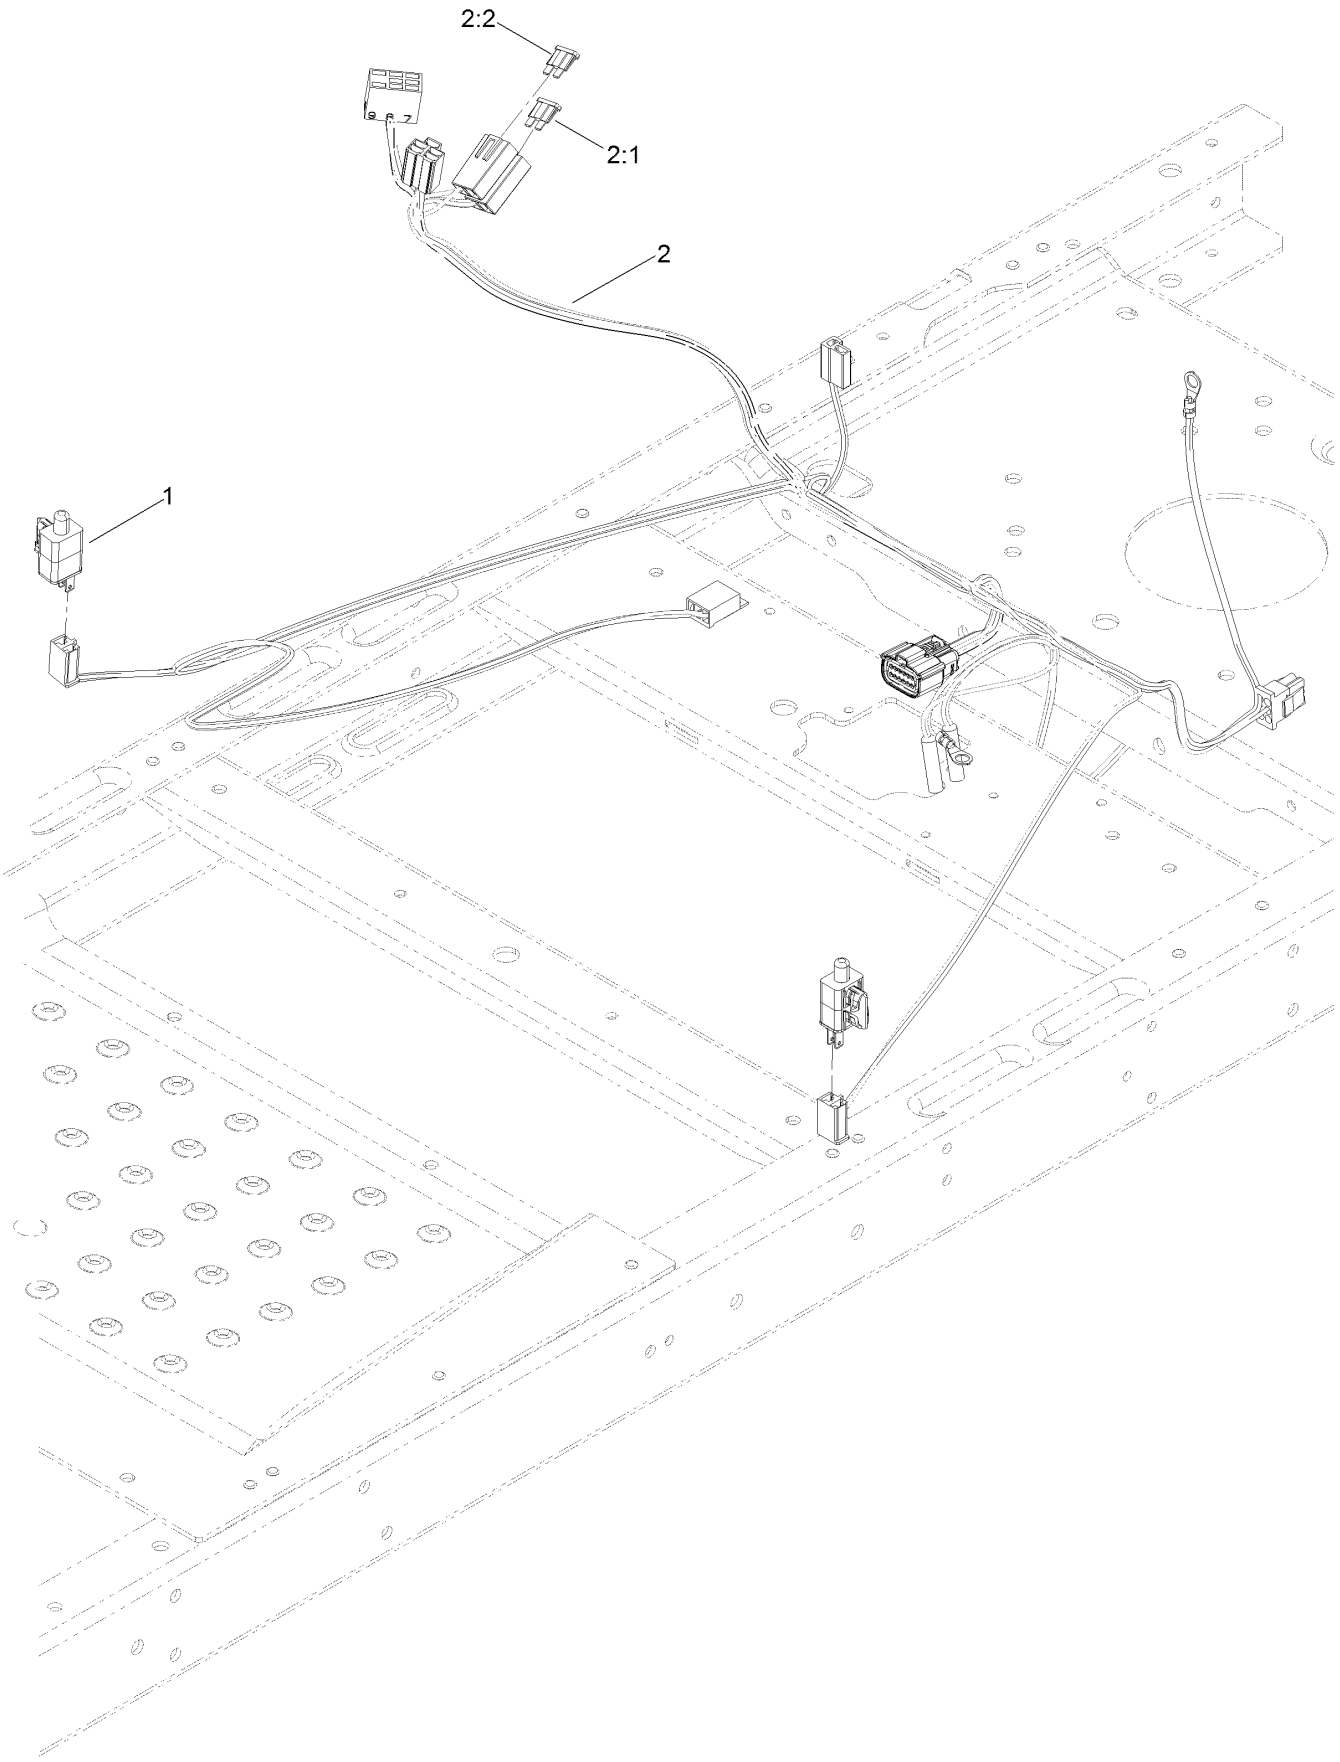

Fuse and Wire Harness Assembly (continued)

Ref.	Part Number	Qty.	Description
1	110-6765	2	Switch
2	130-7013	1	Harness-Wire
2:1	109103	1	Fuse-Blade, 30 Amp
2:2	109102	1	Fuse-Blade, 25 Amp

54 Inch Deck Assembly

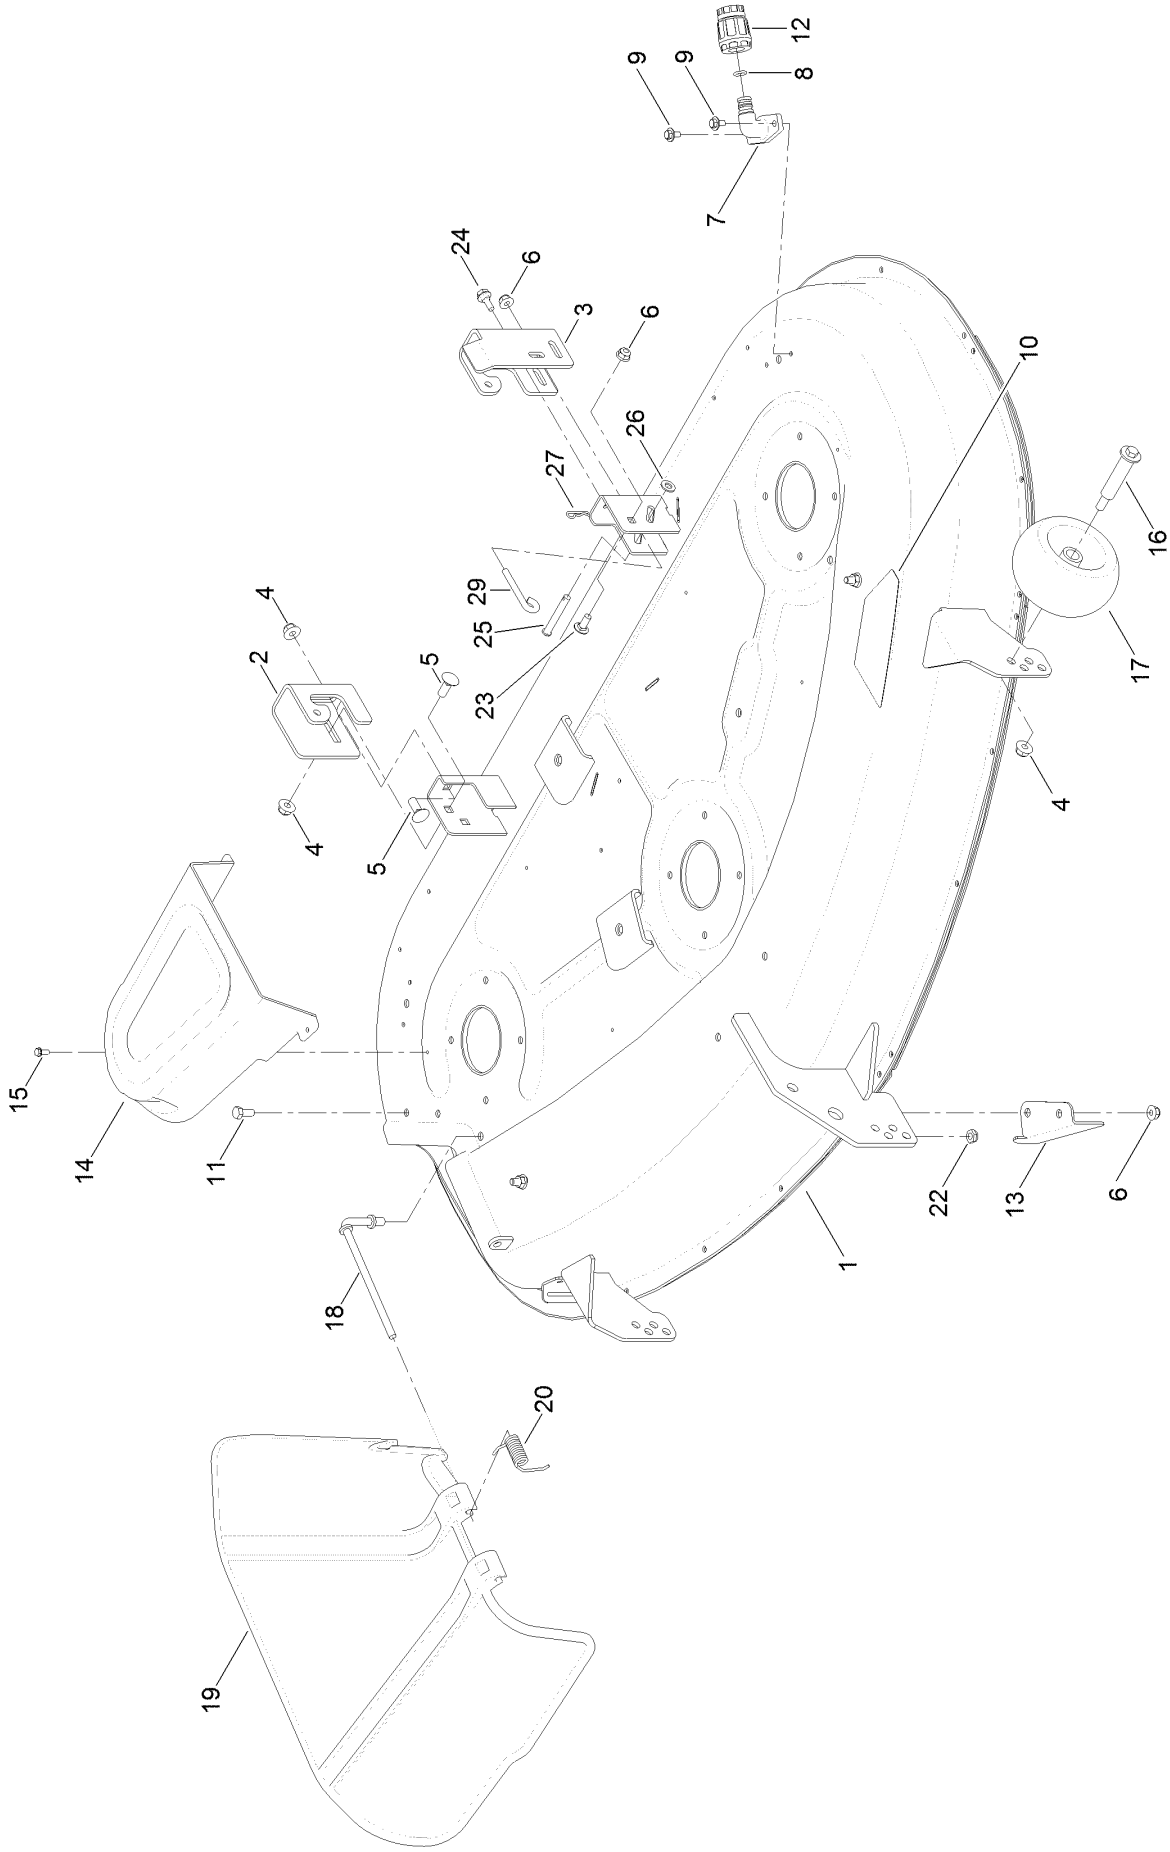

54 Inch Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-7004	1	54 Inch Deck ASM
2	131-4138	1	Bracket-Hanger, RH
3	131-3935	1	Bracket-Hanger, LH
4	104-8301	5	Nut-Flange, NI
5	3231-2	2	Bolt-CARR
6	104-8300	4	Nut-Flange, NI
7	95-2747	2	Fitting-Washout
8	46-6290	2	O-Ring
9	46-8560	4	Screw-HHFTF
10	131-0961	1	Decal-Deck
11	322-3	2	Screw-HH
12	95-3270	1	Connector-Hose
13	112-3983-03	1	Baffle-Cutoff
14	108-7890	2	Cover-Belt
15	32144-1	6	Screw-Taptite
16	112-3977	3	Bolt-Shoulder
17	1-603299	3	Roller-Scalp, Anti
18	112-3950	1	Rod-Pivot
19	108-7895	1	Deflector
20	110-6694	1	Spring-Torsion
22	3296-59	1	Nut-Lock, NI
23	3230-23	1	Screw-CARR
24	120-7024	1	Screw-Shoulder, HHF
25	110-0618	1	Pin-Clevis
26	3256-23	1	Washer-Flat
27	1-806003	1	Pin-Cotter
29	131-0955	1	Rod-Deck Level

54 Inch Deck Decal Assembly No. 130-7004

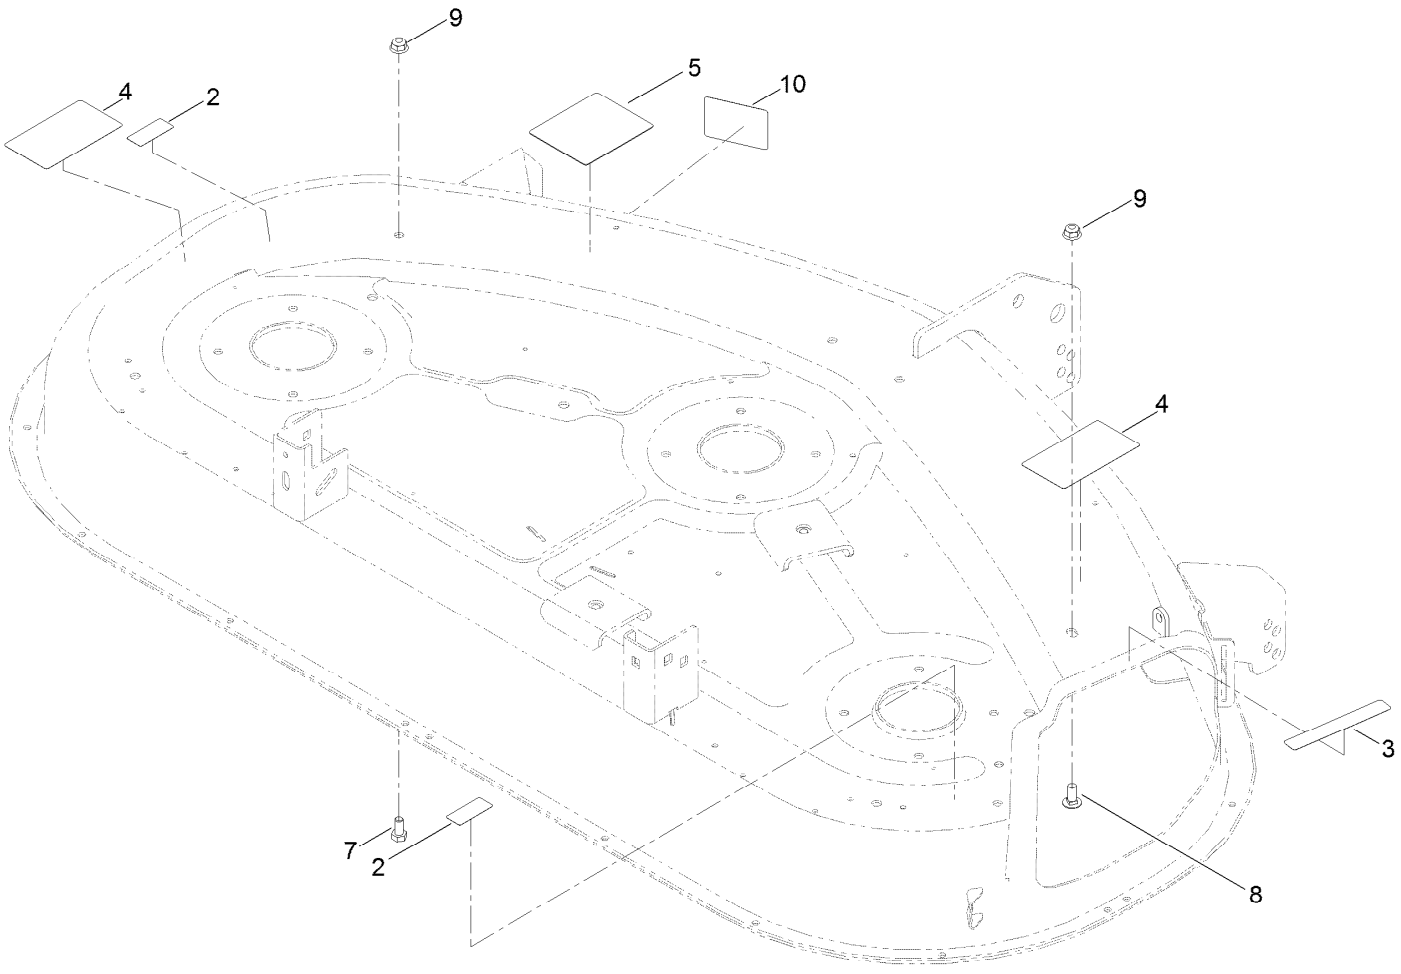

54 Inch Deck Decal Assembly No. 130-7004 (continued)

Ref.	Part Number	Qty.	Description
2	114-1606	2	Decal-Danger
3	93-7009	1	Decal-Danger
4	110-6691	2	Decal-Danger
5	99-3943	1	Decal-Routing, Belt
7	322-2	1	Screw-HH
8	3230-23	1	Screw-CARR
9	104-8300	2	Nut-Flange, NI
10	112-9840	1	Decal-Scalp, Anti

54 Inch Deck, Belt and Blade Assembly

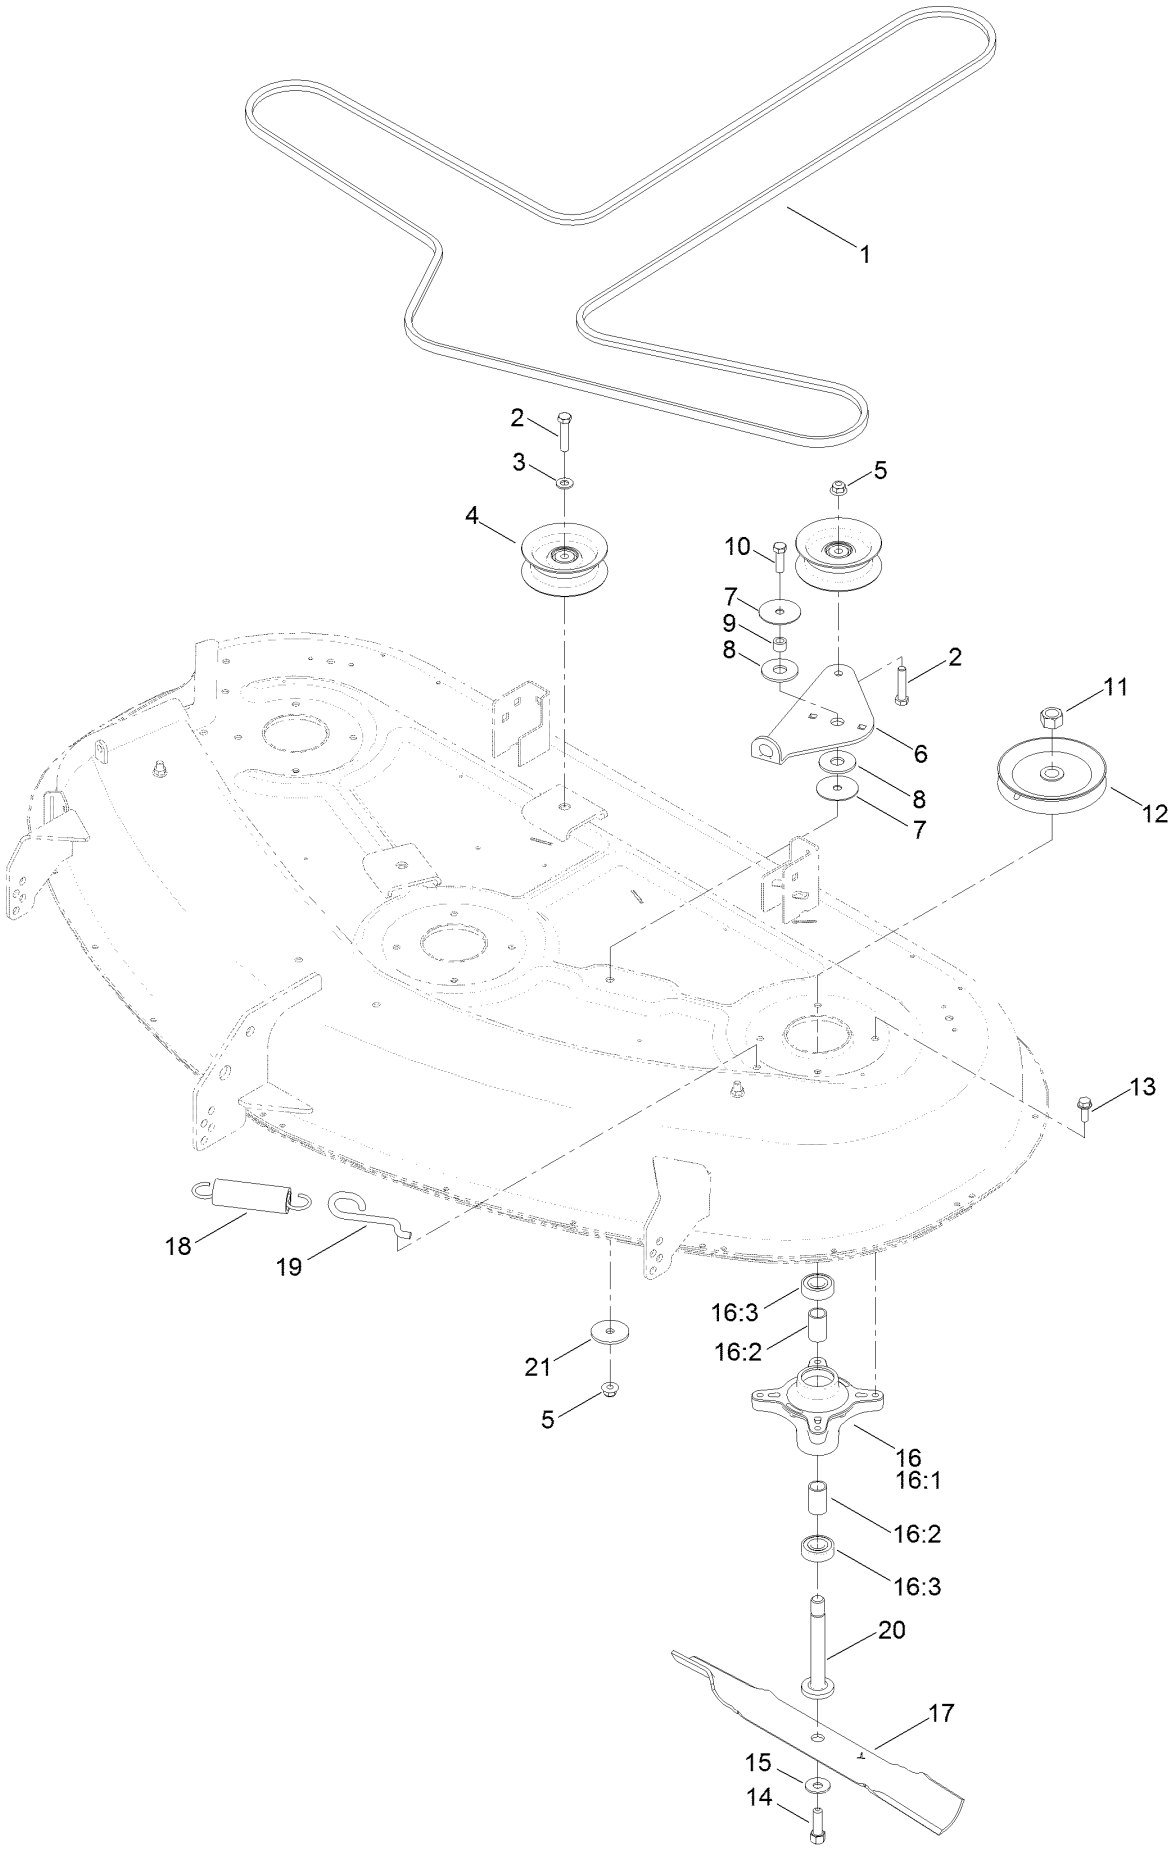

54 Inch Deck, Belt and Blade Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-0843	1	Belt-V
2	323-9	3	Screw-HH
3	3256-24	2	Washer-Flat
4	106-2175	3	Pulley-Idler, Flat
5	104-8301	2	Nut-Flange, NI
6	114-8540	1	Arm-Idler
7	120-2229	2	Washer
8	114-0463	2	Washer-Friction, Composite
9	115-4986	1	Spacer
10	323-7	1	Screw-HH
11	3219-6	3	Nut-Hex
12	130-0656	3	Pulley ASM-Welded
13	32144-41	12	Screw-Taptite
14	26-0671	3	Screw-HH
15	3290-465	3	Washer-Belleville
16	121-0751	3	Spindle ASM
16:1	117-7267	1	Spindle
16:2	120-7935	2	Spacer
16:3	100-1048	2	Bearing-Ball
17	115-2454-03	3	Blade-Hi Lift, 18.75 Inch
18	1-603414	1	Spring-Extension
19	112-3973	1	Hook-Return, Spring
20	117-7268	3	Shaft-Spindle
21	63-7400	1	Washer-Rebound

Attachments and Accessories

For 74740 TimeCutter SS 5425 Riding Mower

Product Name	Model/Part
Armrest Kit	105-6978
Hourmeter Kit	116-5461
Oil-Synthetic, All Season	117-0066
Fuel Stabilizer (4oz)	117-0089
Fuel Stabilizer (16oz)	117-0090
Seat Cover W/o Arm Rest - TC 18in	117-0096
Jack Mount Kit	126-5251
Jack Kit	127-6666
Attachment Mount Kit	131-3966
54in Striping Kit	131-4165
54in Bagging Enhancement Kit	131-4166
54in Recycler Kit, Riding Mower	131-4185
Weight Kit	131-7658
Deluxe Seat Kit	131-7699
10w30 4-cycle Engine Oil (32oz Bottle)	38280
Toro 4-cycle Sae 30 Oil (32oz Bottle)	38903
Storage Cover	490-7516
Foot Assist Deck Lift Kit, 2011 and After Zero-Turn-Radius Riding Mower	79010
Sunshade Kit	79011
Floor Mat Kit, 2011 and After Zero-Turn-Radius Riding Mower	79021
Cargo Carrier	79040
Assist Handle and Step Kit	79339
54in Bagger	79383

Notes:

Count on it.