Form No. 3390-782 Rev A

Road Lights with Brake Lights Kit

Groundsmaster® 3400 Traction Unit

Model No. 02917—Serial No. 315000001 and Up

Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	No parts required	–	Initial preparation
2	Left, rear light bracket Right, rear light bracket Bolt, M16 x 110mm Nut, M16 Fuse, 15 amp	1 1 2 2 2	Install the rear lights
3	Dowty seal, 1/4 inch Pressure switch adapter Pressure switch Pressure switch cable	1 1 1 1	Install the pressure switch
4	Number plate bracket 2-way tab housing connector Flasher relay Standard shorter relay	1 1 1 1	Install the number plate bracket
5	Center headlight mount Right headlight mount Left headlight mount Bolt (M6 x 20mm) Locknut (M6) Bolt (M10 x 25mm) Locknut (M10) Washer (3/8 inch) Mounting bracket 4-way tab housing connector	1 1 1 8 8 4 4 8 2 2	Install the front lights
6	Instrument panel connector lead Hazard warning switch Lights switch Indicator switch Horn button Horn decal Cable tie	1 1 1 1 1 1 24	Install the control panel switches
7	Reflector	2	Install the reflectors
8	Serial label	1	Install the serial label

© 2014—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Register at www.Toro.com.

CE

Original Instructions (EN)
Printed in the UK.
All Rights Reserved

3390-782 A

Media and Additional Parts

Description	Qty.	Use
Installation Instructions	1	Read before installing and operating kit
Parts Catalog	1	Use to reference part numbers

1

Preparing the Machine

No Parts Required

Procedure

1. Park the machine on a level surface, lower the cutting unit, stop the engine, engage the parking brake and remove the key from the ignition switch.
2. Disconnect the negative (–) battery cable from the battery.

⚠ WARNING

Wear safety goggles and rubber gloves when working with batteries. Since the gases are explosive, keep open flames and electrical spark away from batteries. Do not smoke.

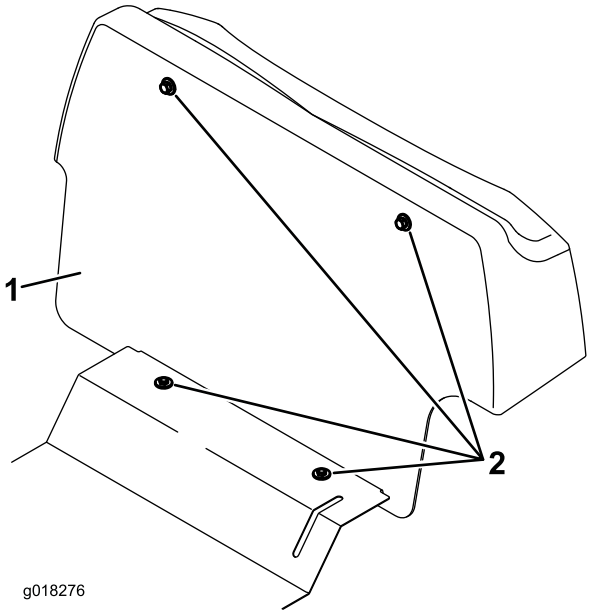


Figure 1

1. Bulkhead
2. Screws (4)

2

Installing the Rear Lights

Parts needed for this procedure:

1	Left, rear light bracket
1	Right, rear light bracket
2	Bolt, M16 x 110mm
2	Nut, M16
2	Fuse, 15 amp

Procedure

The rear lights attach to the outside of the ROPS post on the left and right sides and use the existing bolt holes in the ROPS.

1. Open the engine cover.
2. Lift the operator platform.
3. Remove the bulkhead by unscrewing the 4 bolts (Figure 1). This is to enable access to the main wiring harness.
4. Ensure that ROPS pivot bolts and clamp bolts are in place and are tight.
5. Remove the ROPS pivot bolt on the left side of the mower.
6. Align the upper hole in the left, rear light bracket with the hole in the ROPS and insert the new M16 x 110mm bolt, using the existing washers (Figure 2).

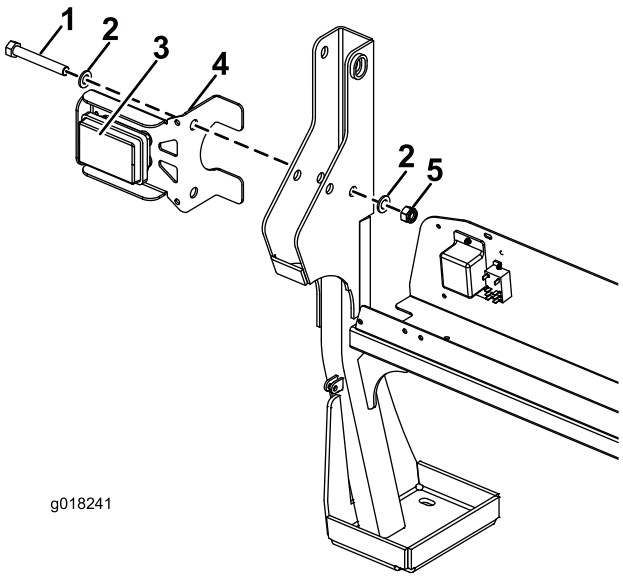


Figure 2

1. Bolt, M16 x 110mm
2. Existing washers
3. Orange indicator side up
4. Left, rear light bracket
5. Nut, M16

7. Install the new M16 nut onto the bolt and torque it to 15 N-m (11 ft-lb).

   Note: Do not overtighten it as this will make the ROPS difficult to fold.

8. Remove the ROPS pivot bolt on the right side of the mower.
9. Align the upper hole in the right, rear light bracket with the hole in the ROPS and insert the new M16 x 110mm bolt, using the existing washers (Figure 3).

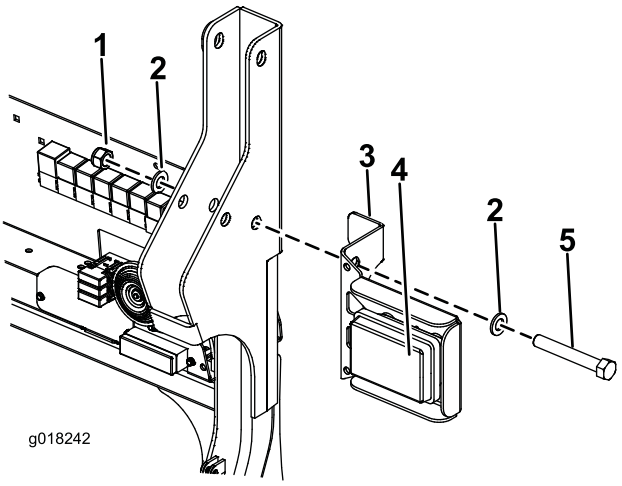


Figure 3

1. Nut, M16
2. Existing washers
3. R.H. rear light bracket
4. Orange indicator side up
5. Bolt, M16 x 110mm

10. Install the new M16 nut onto the bolt and torque it to 15 N-m (11 ft-lb).

    Note: Do not overtighten it as this will make the ROPS difficult to fold.

    Note: If there is already a beacon kit fitted to the right side or a waste bin kit fitted to left side, use the existing bolt and the new M16 nyloc nuts provided with this kit.

11. Feed all electrical cables down the front of the ROPS frame and onto the electrical mount panel.
12. Connect the cables to the main wiring harness of the machine which is located on the electrical bulkhead (Figure 4), as follows:

    A. Connect the 4-pin, left, rear, light-assembly, wiring connector to the corresponding 4-pin, electrical connector on the left side of the main wiring harness.

    B. Connect the 4-pin, right, rear, light-assembly, wiring connector to the corresponding 4-pin electrical connector on the right side of the main wiring harness.

    Note: The 2-pin electrical connectors on the left and right, rear, light assembly is required for the number-plate light. Only one of the 2-Pin electrical connectors is used.

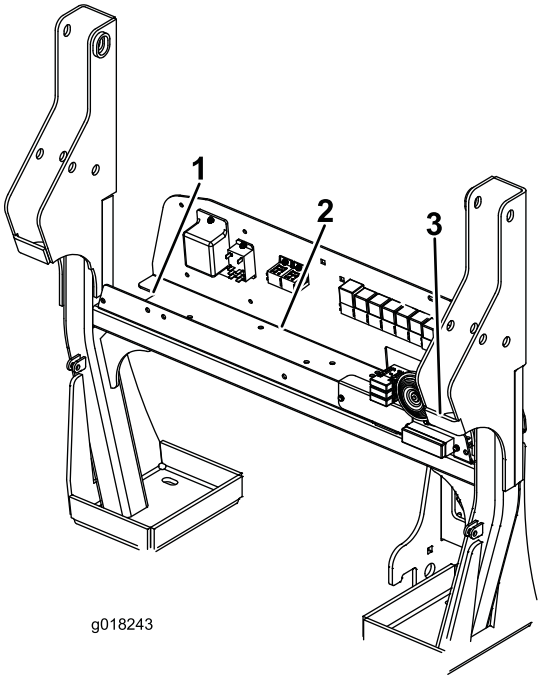


Figure 4

1. 4-pin, left, rear, light-assembly connector on the main wiring harness
2. 3-pin, electrical-pressure-switch, cable connector on the main wiring harness
3. 4-pin, left, rear, light-assembly connector on the main wiring harness

13. Install 2 fuses (15 amp) into the fuse block. Use the first and third receptacles from the left end of the fuse block (Figure 5).

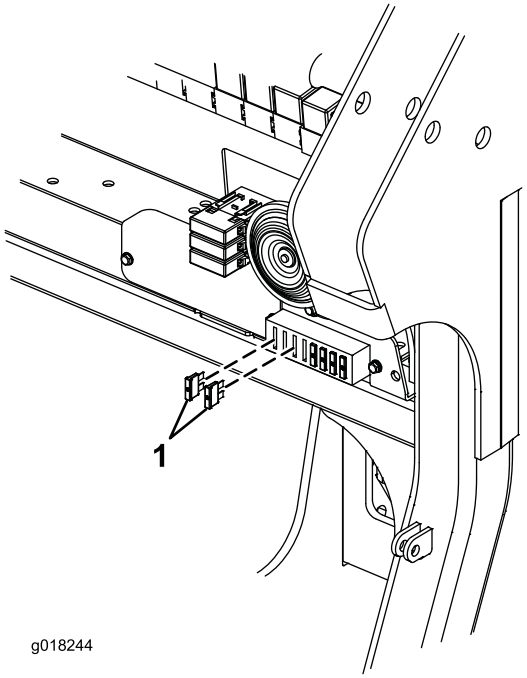


Figure 5

1. Fuse, 15 amp (2)

3

Installing the Pressure Switch

Parts needed for this procedure:

1	Dowty seal, 1/4 inch
1	Pressure switch adapter
1	Pressure switch
1	Pressure switch cable

Procedure

The pressure switch controls the brake lights. The switch is screwed into the main transmission line.

1. Locate the three hose connections on the right side of the transmission pump. The lower front connection to the pump has a tee fitting with a blanking cap.
2. Remove this blanking cap from the tee fitting.
3. Screw the pressure switch adapter into the tee fitting using a 1/4 inch dowty seal (Figure 6).

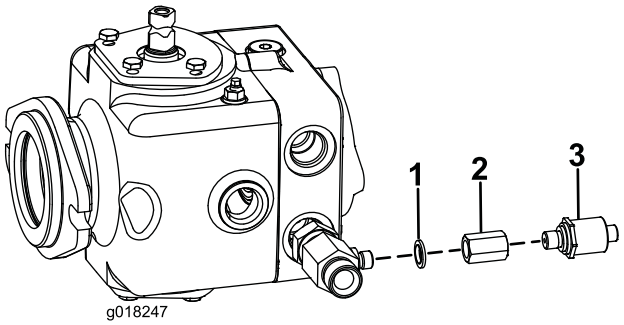


Figure 6

1. Dowty seal, 1/4 inch
2. Pressure switch adapter
3. Pressure switch

4. Screw the pressure switch into this adapter (Figure 6). Torque the switch to 34 N-m (25 ft-lbs).
5. Working on the electrical bulkhead, plug the 3-pin connector of the electrical pressure switch cable to the corresponding connector located on the main wiring harness of the machine (Figure 4 and Figure 7).

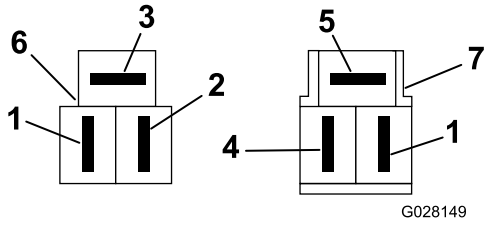


Figure 7

Connectors as Viewed from the Cable Entry Side

1. Green/Yellow
2. Yellow
3. Black
4. Brown
5. Blue
6. Pressure switch connector, main wiring harness
7. Pressure switch cable connector

6. Run the electrical pressure switch cable from the electrical bulkhead, down the right ROPS post forward along the chassis rail to the pressure switch.
7. Plug the connector into the pressure switch and secure it.

4

Installing the Number Plate Bracket

Parts needed for this procedure:

1	Number plate bracket
1	2-way tab housing connector
1	Flasher relay
1	Standard shorter relay

Procedure

The number plate with light attaches to the bulkhead.

1. In the center of the plastic bulkhead cover, approximately 40 mm (1-1/2 inches) from the front, drill an 8 mm diameter hole (Figure 8).

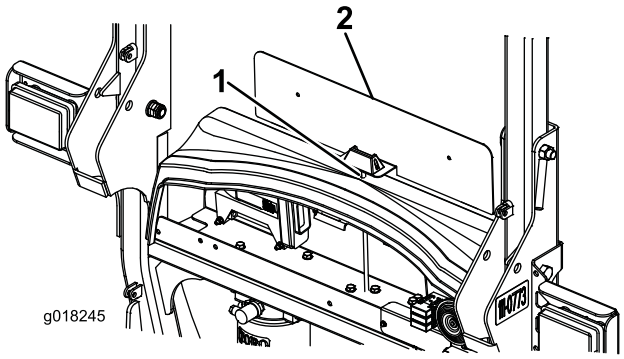


Figure 8

1. Drill 8 mm hole here
2. Number plate bracket

⚠ WARNING

When drilling or carrying out other operations, always wear eye protection.

2. Feed the number plate cable through the 8 mm hole in the plastic bulkhead cover. Install the number plate bracket and the bulkhead with the bulkhead fasteners previously removed.
3. Push the 2–way tab housing connector onto the terminals of the number plate cable (Figure 9).

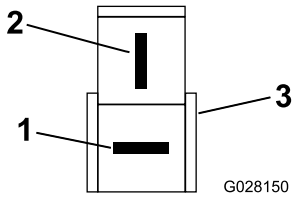


Figure 9

1. Red wire
2. Black wire
3. 2-way tab housing connector

4. Connect the number plate light wiring to either the left or right, rear-light-assembly-wiring, 2-Pin electrical connector.
5. Plug the flasher relay into the left vacant relay socket and the standard shorter relay into the right vacant relay socket (Figure 10).

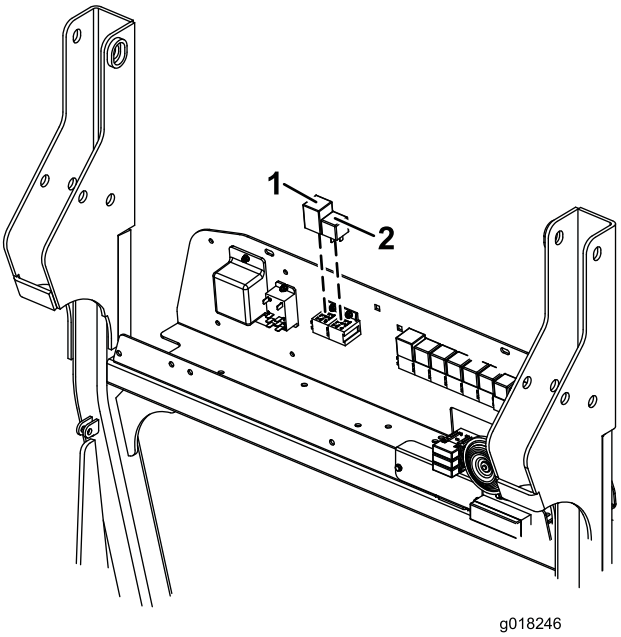


Figure 10

1. Flasher relay
2. Standard shorter relay

5

Installing the Front Lights

Parts needed for this procedure:

1	Center headlight mount
1	Right headlight mount
1	Left headlight mount
8	Bolt (M6 x 20mm)
8	Locknut (M6)
4	Bolt (M10 x 25mm)
4	Locknut (M10)
8	Washer (3/8 inch)
2	Mounting bracket
2	4-way tab housing connector

Procedure

The front light assemblies attach to the center headlight mount which attaches to the machine using two mounting brackets, as follows(Figure 11):

1. Install the 2 mounting brackets to the front of the machine using 2 bolts (M10 x 25mm), 4 washers (3/8 inch), and 2 locknuts (M10) (Figure 11).
2. Install the center headlight mount to the mounting brackets using 2 bolts (M10 x 25mm), 4 washers (3/8 inch), and 2 locknuts (M10) (Figure 11).
3. Apply anti-seize grease to fully coat the inside wall of the tube ends and all the surfaces of the springs and tube end profiles (Figure 11).
4. While holding the right headlight mount, thread the wiring cable down through the end tubes and out the center cut out of the center headlight mount (Figure 11).
5. Secure the right headlight mount to the center headlight mount using the 4 bolts (M6 x 20mm) and 4 locknuts (M6) (Figure 11).

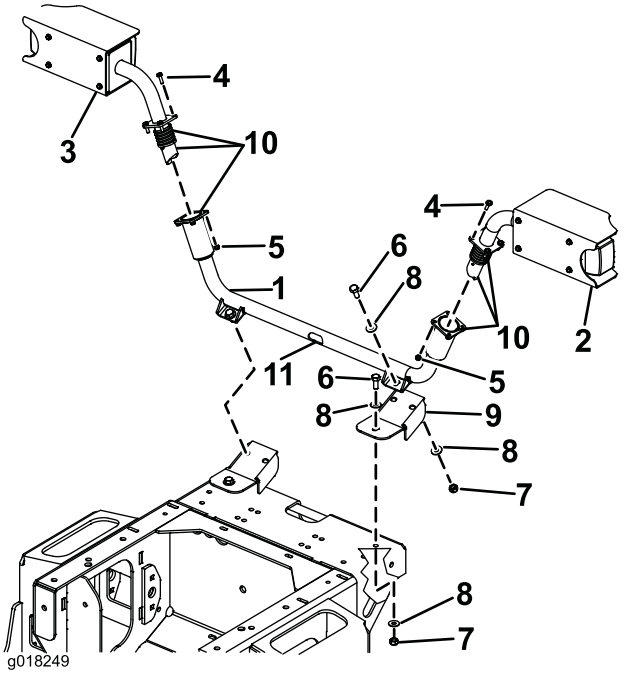


Figure 11

1. Center headlight mount
2. R.H. Headlight mount
3. L.H. Headlight mount
4. Screw, M6 x 20mm
5. Nut, nyloc M6
6. Screw, M10 x 25mm
7. Nut, nyloc M10
8. Washer, 3/8 inch
9. Mounting bracket
10. Apply anti-seize here
11. Center cut of headlight mount

6. Install the 4-way tab housing connector onto the wiring cable by pushing the pins into the back of the connector. (Figure 12). Identify and mark this connector as R to help with cable identification when making the connections to the machine main wiring harness.

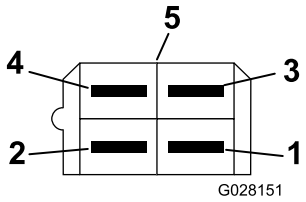


Figure 12

Connector as Viewed from the Cable Entry Side

1. Blue
2. Green
3. Red/White
4. Black
5. 4-way tab housing connector

7. Repeat steps 4 through 6 marking the connector with an L in step 6.
8. Pass the cables down through the cutout for the towing point and though the holes in the front chassis to the cutting unit manifold located under the operator's platform.

9. Locate the two 4-pin connectors on the main wiring harness located near to the cutter manifold.
10. Connect the connector on the machine wiring harness with the Green/White wire to the identified left light assembly connector. (Figure 13).

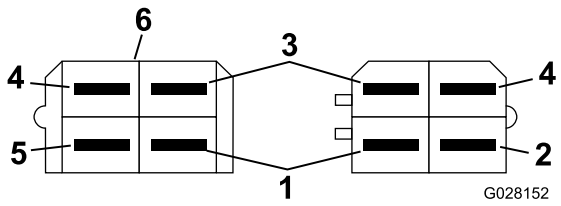


Figure 13

1. Blue
2. Green/White
3. Red/White
4. Black
5. Green
6. 4-way tab housing connector

11. Connect the connector on the machine wiring harness with the Green/White wire to the identified right light assembly connector (Figure 14).

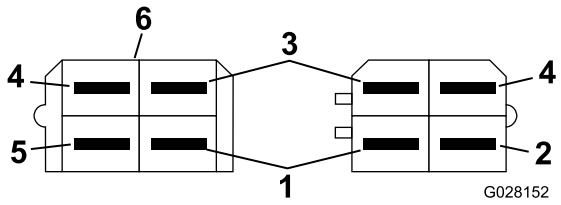


Figure 14

1. Blue
2. Green/Red
3. Red/White
4. Black
5. Green
6. 4-way tab housing connector

6

Installing the Control Panel Switches

Parts needed for this procedure:

1	Instrument panel connector lead
1	Hazard warning switch
1	Lights switch
1	Indicator switch
1	Horn button
1	Horn decal
24	Cable tie

Procedure

1. Remove the 6 screws securing the control panel to the control pod.
2. Carefully lift off the panel ensuring that the connectors to the existing switches are not disturbed.
3. Install the instrument panel connector lead into the control arm.
4. Feed the connector lead instrument panel up through the opening in the bottom of the control pod, so that the end with the three connectors are inside the control pod and the end with the single large connector is feed down the control arm.
5. In the rear face of the control pod, just above the key switch, are switch blank panels, remove them (Figure 15).

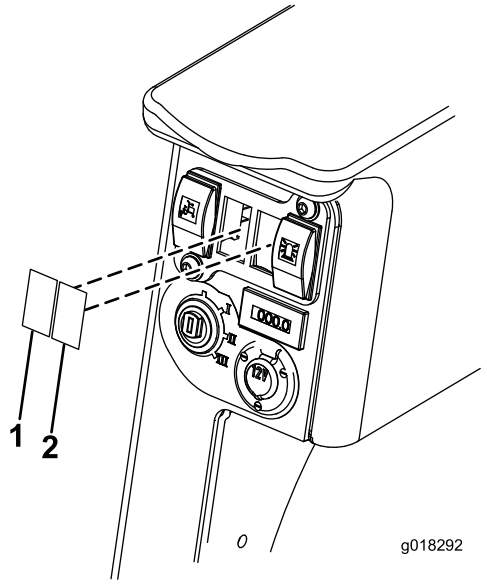


Figure 15

1. Switch blank–light switch
2. Switch blank–hazard switch

6. Pass the connectors and wires for the hazard and light switch though the switch hole . The hazard and hights connectors are on the shorter leads, the hazard connector is red and the light connector is black. The indicator connector is black and on the longer lead.
7. Connect the light and hazard switch to the correct connector and push the switch into the hole (Figure 16).

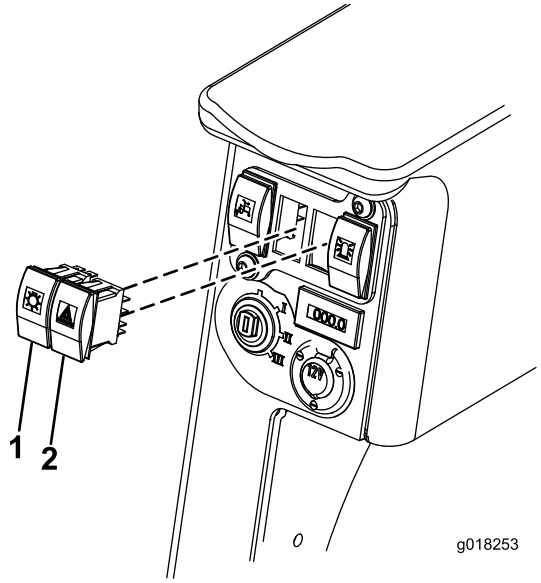


Figure 16

1. Light switch
2. Hazard switch

8. On the control panel, remove the round plug and the rectangular plug next to it (Figure 17).

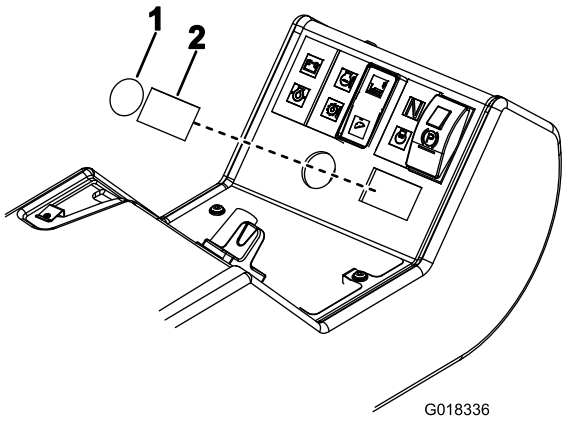


Figure 17

1. Round plug—horn button
2. Rectangular plug—indicator switch

9. Install the horn decal lining up the edges of the round and rectangular holes (Figure 18).

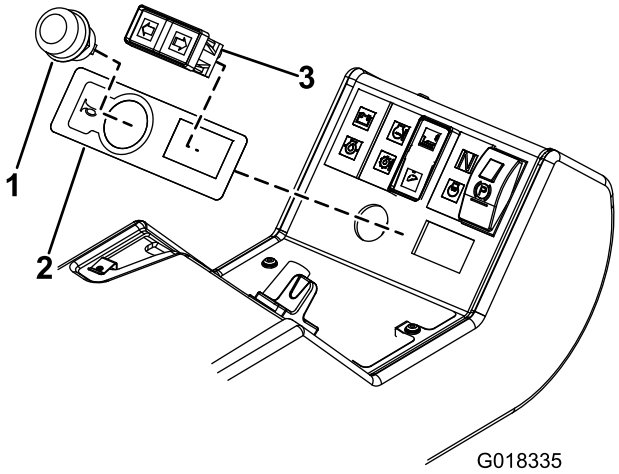


Figure 18

1. Horn button
2. Horn decal
3. Direction indicator switch

10. Install the horn button and the direction indicator switch into the control panel (Figure 18). Install the direction indicator switch with the Green/Red wires to the left and the Green/White wires to the right, as shown in Figure 19.

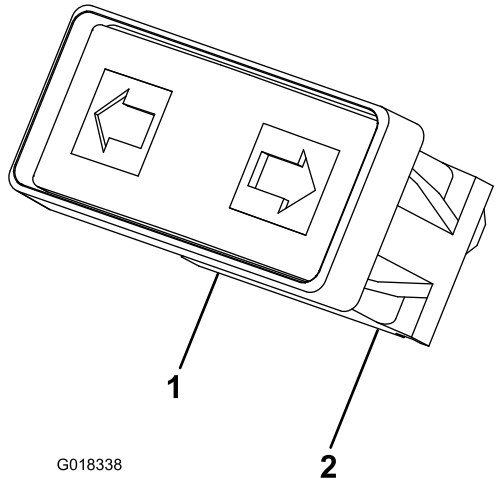


Figure 19

1. Green/Red
2. Green/White

11. Connect the direction indicator switch to the connector lead instrument panel. The indicator connector is black and on the longer lead.
12. In the control panel, there will be a pink and black/purple wire for the Horn button,. connect them to the horn button.
13. Working under the operator platform, connect the connector lead instrument panel to the multi pin connector on the machine main electrical wiring harness. This is located in the chassis rail to the right of the transmission pump.
14. Cable tie all cables for the front lights, rear lights and the pressure switch so that they are secure and to prevent them from becoming trapped or chafed.
15. Reconnect the negative battery cable.
16. Test the switches on the control panel to ensure that they are operating correctly.
17. Refit the control panel ensuring that no connectors have become detached and that no cables are nipped.
18. Lower and latch the engine cover and operators platform.

7

Installing the Reflectors

Parts needed for this procedure:

2	Reflector

Procedure

Affix a reflector to each side of the engine cover. Ensure that the outside edge of each reflector is adhered 100 mm (4 inches) from each edge of the engine cover (Figure 20). Make sure the surface is clean before mounting the reflectors.

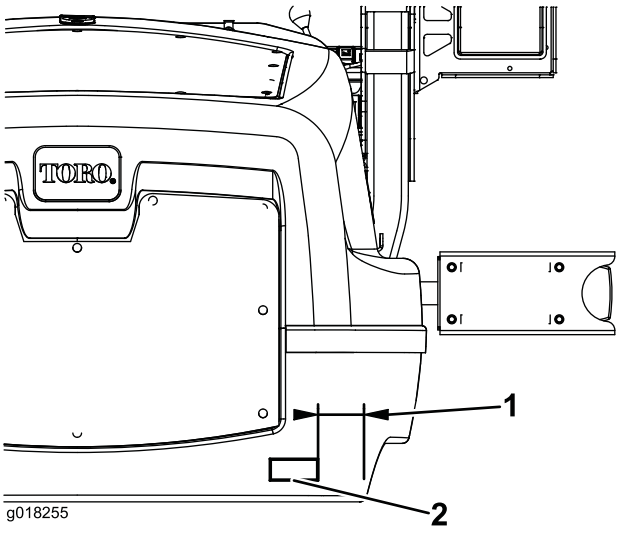


Figure 20

1. 100 mm (4 inches)
2. Reflector

8

Installing the Serial Label

Parts needed for this procedure:

1	Serial label

Procedure

Affix the serial label adjacent to the machine serial label. Make sure the surface is clean before mounting the serial label.

Operation

Specifications

Voltage: 12 V

Adjusting the Headlights

Using the top screws shown in Figure 21, adjust the headlights per local standards.

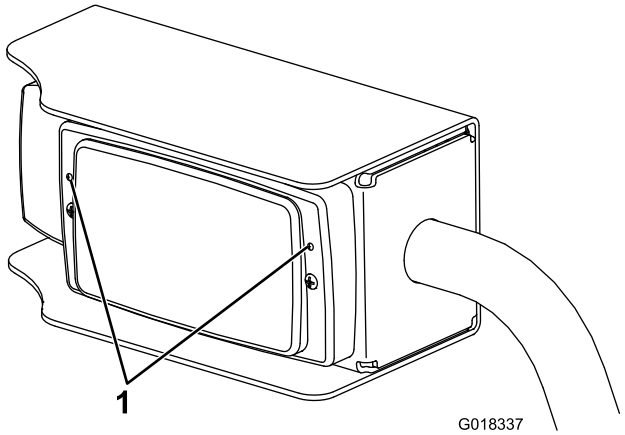


Figure 21

1. Headlight adjusting screws

Operating the Lights

Lights Symbols

The lights controls are marked with the symbols shown in .

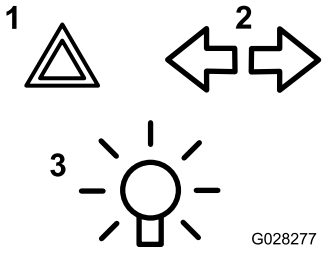


Figure 22

1. Hazard warning
2. Direction indicators
3. Lights—On/Off

Position Marker Lights (Front and Rear)

Press the top of the switch, the switch will be illuminated and the red (rear) and white (front) marker lights will come on.

Headlights

Rotate the ignition switch to position I to illuminate the headlights.

Hazard Lights

Depress the top of the hazard light switch, all 4 indicator lamps will flash. The ignition switch does not need to be on for these to operate.

Direction Indicators

With the ignition switch at position I, press the relevant side of the direction indicator switch, the 2 indicator lamps on that side of the machine will flash.

Brake Lights

The brake lights will automatically come on when the machine is decelerating, i.e, when the control pedal is returning to neutral, when travelling in a forward direction only.

Maintenance

General Maintenance

Important: Replace all worn or damaged parts with genuine Toro parts.

1. Check that all lights are working on a regular basis.
2. Ensure that the headlights are adjusted correctly.
3. Clean the lights daily—avoid using solvent based products.

Replacing a Bulb

1. Remove the lens cover.
2. Replace the bulb.
3. Replace the lens cover.
4. Adjust the lights; refer to Adjusting the Headlights (page 10).

Notes:

Notes:

Notes:

Declaration of Incorporation

The Toro Company, 8111 Lyndale Ave. South, Bloomington, MN, USA declares that the following unit(s) conform(s) to the directives listed, when installed in accordance with the accompanying instructions onto certain Toro models as indicated on the relevant Declarations of Conformity.

Model No.	Serial No.	Product Description	Invoice Description	General Description	Directive
02917	315000001 and Up	Road Lights with Brake Lights Kit	KIT - ROAD LIGHTS W/BRAKE LIGHTS GM3400	Road and Brake Lights	2004/108/EC

Relevant technical documentation has been compiled as required per Part B of Annex VII of 2006/42/EC.

We will undertake to transmit, in response to requests by national authorities, relevant information on this partly completed machinery. The method of transmission shall be electronic transmittal.

This machinery shall not be put into service until incorporated into approved Toro models as indicated on the associated Declaration of Conformity and in accordance with all instructions, whereby it can be declared in conformity with all relevant Directives.

Certified:



David Klis
Sr. Engineering Manager
8111 Lyndale Ave. South
Bloomington, MN 55420, USA
November 24, 2014

EU Technical Contact:

Peter Tetteroo
Toro Europe NV
B-2260 Oevel-Westerloo
Belgium

Tel. 0032 14 562960
Fax 0032 14 581911

International Distributor List

Distributor:	Country:	Phone Number:	Distributor:	Country:	Phone Number:
Agrolanc Kft	Hungary	36 27 539 640	Maquiver S.A.	Colombia	57 1 236 4079
Balama Prima Engineering Equip.	Hong Kong	852 2155 2163	Maruyama Mfg. Co. Inc.	Japan	81 3 3252 2285
B-Ray Corporation	Korea	82 32 551 2076	Mountfield a.s.	Czech Republic	420 255 704 220
Casco Sales Company	Puerto Rico	787 788 8383	Mountfield a.s.	Slovakia	420 255 704 220
Ceres S.A.	Costa Rica	506 239 1138	Munditol S.A.	Argentina	54 11 4 821 9999
CSSC Turf Equipment (pvt) Ltd.	Sri Lanka	94 11 2746100	Norma Garden	Russia	7 495 411 61 20
Cyril Johnston & Co.	Northern Ireland	44 2890 813 121	Oslinger Turf Equipment SA	Ecuador	593 4 239 6970
Cyril Johnston & Co.	Republic of Ireland	44 2890 813 121	Oy Hako Ground and Garden Ab	Finland	358 987 00733
Equiver	Mexico	52 55 539 95444	Parkland Products Ltd.	New Zealand	64 3 34 93760
Femco S.A.	Guatemala	502 442 3277	Perfetto	Poland	48 61 8 208 416
ForGarder OU	Estonia	372 384 6060	Pratoverde SRL.	Italy	39 049 9128 128
G.Y.K. Company Ltd.	Japan	81 726 325 861	Prochaska & Cie	Austria	43 1 278 5100
Geomechaniki of Athens	Greece	30 10 935 0054	RT Cohen 2004 Ltd.	Israel	972 986 17979
Golf international Turizm	Turkey	90 216 336 5993	Riversa	Spain	34 9 52 83 7500
Guandong Golden Star	China	86 20 876 51338	Lely Turfcare	Denmark	45 66 109 200
Hako Ground and Garden	Sweden	46 35 10 0000	Solvert S.A.S.	France	33 1 30 81 77 00
Hako Ground and Garden	Norway	47 22 90 7760	Spypros Stavrinides Limited	Cyprus	357 22 434131
Hayter Limited (U.K.)	United Kingdom	44 1279 723 444	Surge Systems India Limited	India	91 1 292299901
Hydroturf Int. Co Dubai	United Arab Emirates	97 14 347 9479	T-Markt Logistics Ltd.	Hungary	36 26 525 500
Hydroturf Egypt LLC	Egypt	202 519 4308	Toro Australia	Australia	61 3 9580 7355
Irrimac	Portugal	351 21 238 8260	Toro Europe NV	Belgium	32 14 562 960
Irrigation Products Int'l Pvt Ltd.	India	0091 44 2449 4387	Valtech	Morocco	212 5 3766 3636
Jean Heybroek b.v.	Netherlands	31 30 639 4611	Victus Emak	Poland	48 61 823 8369

European Privacy Notice

The Information Toro Collects
Toro Warranty Company (Toro) respects your privacy. In order to process your warranty claim and contact you in the event of a product recall, we ask you to share certain personal information with us, either directly or through your local Toro company or dealer.

The Toro warranty system is hosted on servers located within the United States where privacy law may not provide the same protection as applies in your country.

BY SHARING YOUR PERSONAL INFORMATION WITH US, YOU ARE CONSENTING TO THE PROCESSING OF YOUR PERSONAL INFORMATION AS DESCRIBED IN THIS PRIVACY NOTICE.

The Way Toro Uses Information
Toro may use your personal information to process warranty claims, to contact you in the event of a product recall and for any other purpose which we tell you about. Toro may share your information with Toro's affiliates, dealers or other business partners in connection with any of these activities. We will not sell your personal information to any other company. We reserve the right to disclose personal information in order to comply with applicable laws and with requests by the appropriate authorities, to operate our systems properly or for our own protection or that of other users.

Retention of your Personal Information
We will keep your personal information as long as we need it for the purposes for which it was originally collected or for other legitimate purposes (such as regulatory compliance), or as required by applicable law.

Toro's Commitment to Security of Your Personal Information
We take reasonable precautions in order to protect the security of your personal information. We also take steps to maintain the accuracy and current status of personal information.

Access and Correction of your Personal Information
If you would like to review or correct your personal information, please contact us by email at legal@toro.com.

Australian Consumer Law

Australian customers will find details relating to the Australian Consumer Law either inside the box or at your local Toro Dealer.

Toro General Commercial Product Warranty

A Two-Year Limited Warranty

Conditions and Products Covered

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your Toro Commercial product ("Product") to be free from defects in materials or workmanship for two years or 1500 operational hours*, whichever occurs first. This warranty is applicable to all products with the exception of Aerators (refer to separate warranty statements for these products). Where a warrantable condition exists, we will repair the Product at no cost to you including diagnostics, labor, parts, and transportation. This warranty begins on the date the Product is delivered to the original retail purchaser.
* Product equipped with an hour meter.

Instructions for Obtaining Warranty Service

You are responsible for notifying the Commercial Products Distributor or Authorized Commercial Products Dealer from whom you purchased the Product as soon as you believe a warrantable condition exists. If you need help locating a Commercial Products Distributor or Authorized Dealer, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Toro Commercial Products Service Department
Toro Warranty Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196

952–888–8801 or 800–952–2740
E-mail: commercial.warranty@toro.com

Owner Responsibilities

As the Product owner, you are responsible for required maintenance and adjustments stated in your *Operator's Manual*. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim.

Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This warranty does not cover the following:

- Product failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, or modified non-Toro branded accessories and products. A separate warranty may be provided by the manufacturer of these items.
- Product failures which result from failure to perform recommended maintenance and/or adjustments. Failure to properly maintain your Toro product per the Recommended Maintenance listed in the *Operator's Manual* can result in claims for warranty being denied.
- Product failures which result from operating the Product in an abusive, negligent, or reckless manner.
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to, brake pads and linings, clutch linings, blades, reels, rollers and bearings (sealed or greasable), bed knives, spark plugs, castor wheels and bearings, tires, filters, belts, and certain sprayer components such as diaphragms, nozzles, and check valves, etc.
- Failures caused by outside influence. Conditions considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved fuels, coolants, lubricants, additives, fertilizers, water, or chemicals, etc.
- Failure or performance issues due to the use of fuels (e.g. gasoline, diesel, or biodiesel) that do not conform to their respective industry standards.
- Normal noise, vibration, wear and tear, and deterioration.
- Normal "wear and tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.

Parts

Parts scheduled for replacement as required maintenance are warranted for the period of time up to the scheduled replacement time for that part. Parts replaced under this warranty are covered for the duration of the original product warranty and become the property of Toro. Toro will make the final decision whether to repair any existing part or assembly or replace it. Toro may use remanufactured parts for warranty repairs.

Deep Cycle and Lithium-Ion Battery Warranty:

Deep cycle and Lithium-Ion batteries have a specified total number of kilowatt-hours they can deliver during their lifetime. Operating, recharging, and maintenance techniques can extend or reduce total battery life. As the batteries in this product are consumed, the amount of useful work between charging intervals will slowly decrease until the battery is completely worn out. Replacement of worn out batteries, due to normal consumption, is the responsibility of the product owner. Battery replacement may be required during the normal product warranty period at owner's expense. Note: (Lithium-Ion battery only): A Lithium-Ion battery has a part only prorated warranty beginning year 3 through year 5 based on the time in service and kilowatt hours used. Refer to the *Operator's Manual* for additional information.

Maintenance is at Owner's Expense

Engine tune-up, lubrication, cleaning and polishing, replacement of filters, coolant, and completing recommended maintenance are some of the normal services Toro products require that are at the owner's expense.

General Conditions

Repair by an Authorized Toro Distributor or Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Except for the Emissions warranty referenced below, if applicable, there is no other express warranty. All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty.

Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Note regarding engine warranty:

The Emissions Control System on your Product may be covered by a separate warranty meeting requirements established by the U.S. Environmental Protection Agency (EPA) and/or the California Air Resources Board (CARB). The hour limitations set forth above do not apply to the Emissions Control System Warranty. Refer to the Engine Emission Control Warranty Statement supplied with your product or contained in the engine manufacturer's documentation for details

Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer.

374-0253 Rev C