Form No. 3392-279 Rev A

TORO®

Count on it.

Parts Catalog

# DH 210 Lawn Tractor

**Model No. 74585—Serial No. 315000001 and Up**

Register at www.Toro.com.
Original Instructions (EN)

CE

*3392-279* A

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HP:** high pressure

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** low pressure

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head

# Contents


Engine and Muffler Assembly . . . . . 4
Front Axle Assembly . . . . . 6
Steering Assembly . . . . . 8
Transmission Drive Assembly . . . . . 10
Control Shaft Assembly Transmission Assembly No. 114-3155 . . . . . 12
Differential Gear Assembly Transmission Assembly No. 114-3155 . . . . . 14
Final Pinion Assembly Transmission Assembly No. 114-3155 . . . . . 16
Axle Shaft Assembly Transmission Assembly No. 114-3155 . . . . . 18
Brake Assembly Transmission Assembly No. 114-3155 . . . . . 20
Fan Pulley Assembly Transmission Assembly No. 114-3155 . . . . . 22
Range Shift Assembly Transmission Assembly No. 114-3155 . . . . . 24
Center Case Assembly Transmission Assembly No. 114-3155 . . . . . 26
Pump Shaft Assembly Transmission Assembly No. 114-3155 . . . . . 28
Motor Shaft Assembly Transmission Assembly No. 114-3155 . . . . . 30
Transaxle Case Assembly Transmission Assembly No. 114-3155 . . . . . 32
Mower Lift Assembly . . . . . 34
Cutting Drive System Assembly . . . . . 36
Mower Housing Assembly . . . . . 38
Travel Pedals and Brake Assembly . . . . . 40
Battery and Electrical Assembly . . . . . 42
Body and Hood Assembly . . . . . 44
Grass Collector Assembly No. 125-2325 . . . . . 46
Tunnel and Collector Plate Assembly . . . . . 48
Decal Assembly . . . . . 50
Frame Assembly . . . . . 52
Attachments and Accessories . . . . . 54

**© 2015—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**



**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

# Engine and Muffler Assembly

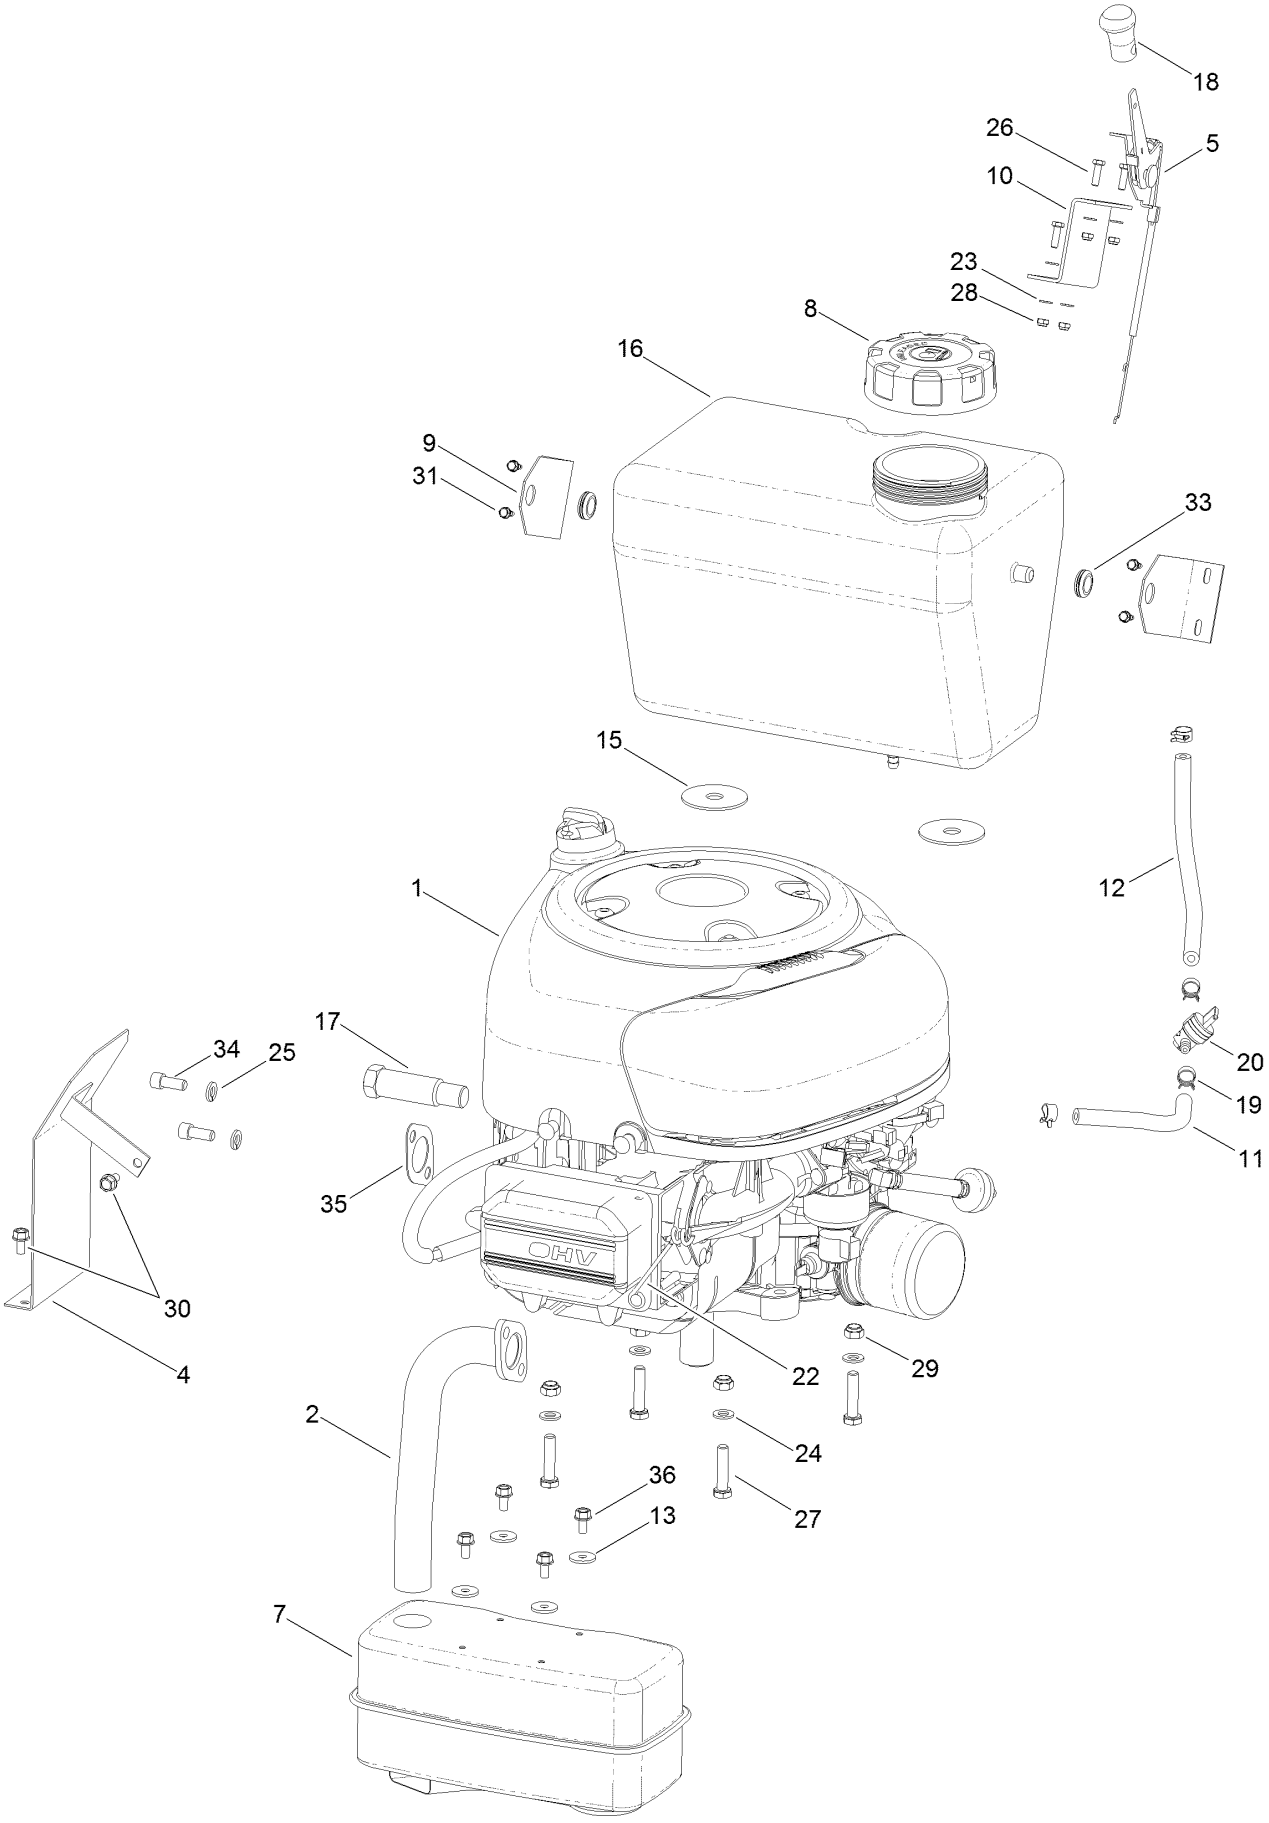


# Engine and Muffler Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Engine-Briggs, 31G777-4130-B1 ●■ |
| 2 | 125-2208 | 1 | Tube-Exhaust |
| 4 | 125-2207 | 1 | Cover-Exhaust |
| 5 | 119-5453 | 1 | Cable-Throttle/Choke |
| 7 | 104-3225 | 1 | Muffler |
| 8 | 119-5354 | 1 | Cap-Fuel |
| 9 | 125-2202 | 2 | Bracket-Fuel, Tank |
| 10 | 125-2206 | 1 | Holder |
| 11 | 125-2204 | 1 | Line-Fuel |
| 12 | 125-2203 | 1 | Line-Fuel |
| 13 | 111-7601 | 4 | Washer-Flat |
| 15 | 119-5500 | 2 | Washer-Rubber |
| 16 | 119-5358 | 1 | Tank-Fuel |
| 17 | 120-8755 | 1 | Coupler-Drain, Oil |
| 18 | 119-5448 | 1 | Knob-Throttle/Choke |
| 19 | 104-3212 | 4 | Clamp-Line, Fuel |
| 20 | 104-3224 | 1 | Valve-Tank, Fuel |
| 22 | 104-3156 | 1 | Holder-Harness, Wiring |
| 23 | 52-6430 | 6 | Washer |
| 24 | 106-4756 | 4 | Washer-Plain |
| 25 | 104-2927 | 2 | Washer-Spring |
| 26 | 107-8918 | 4 | Screw |
| 27 | 33114-035 | 4 | Screw-HH |
| 28 | 87-5140 | 4 | Nut-Lock |
| 29 | 33024-00 | 4 | Nut-Lock, NI |
| 30 | 110-7170 | 3 | Screw-HH |
| 31 | 104-2977 | 4 | Screw-TAP |
| 33 | 119-5364 | 2 | Bushing |
| 34 | 322-3 | 2 | Screw-HH |
| 35 | 119-5362 | 1 | Gasket |
| 36 | 111-7602 | 4 | Screw-Hhtf |

● Not serviced separately

■ Obtain parts from www.briggsandstratton.com


# Front Axle Assembly

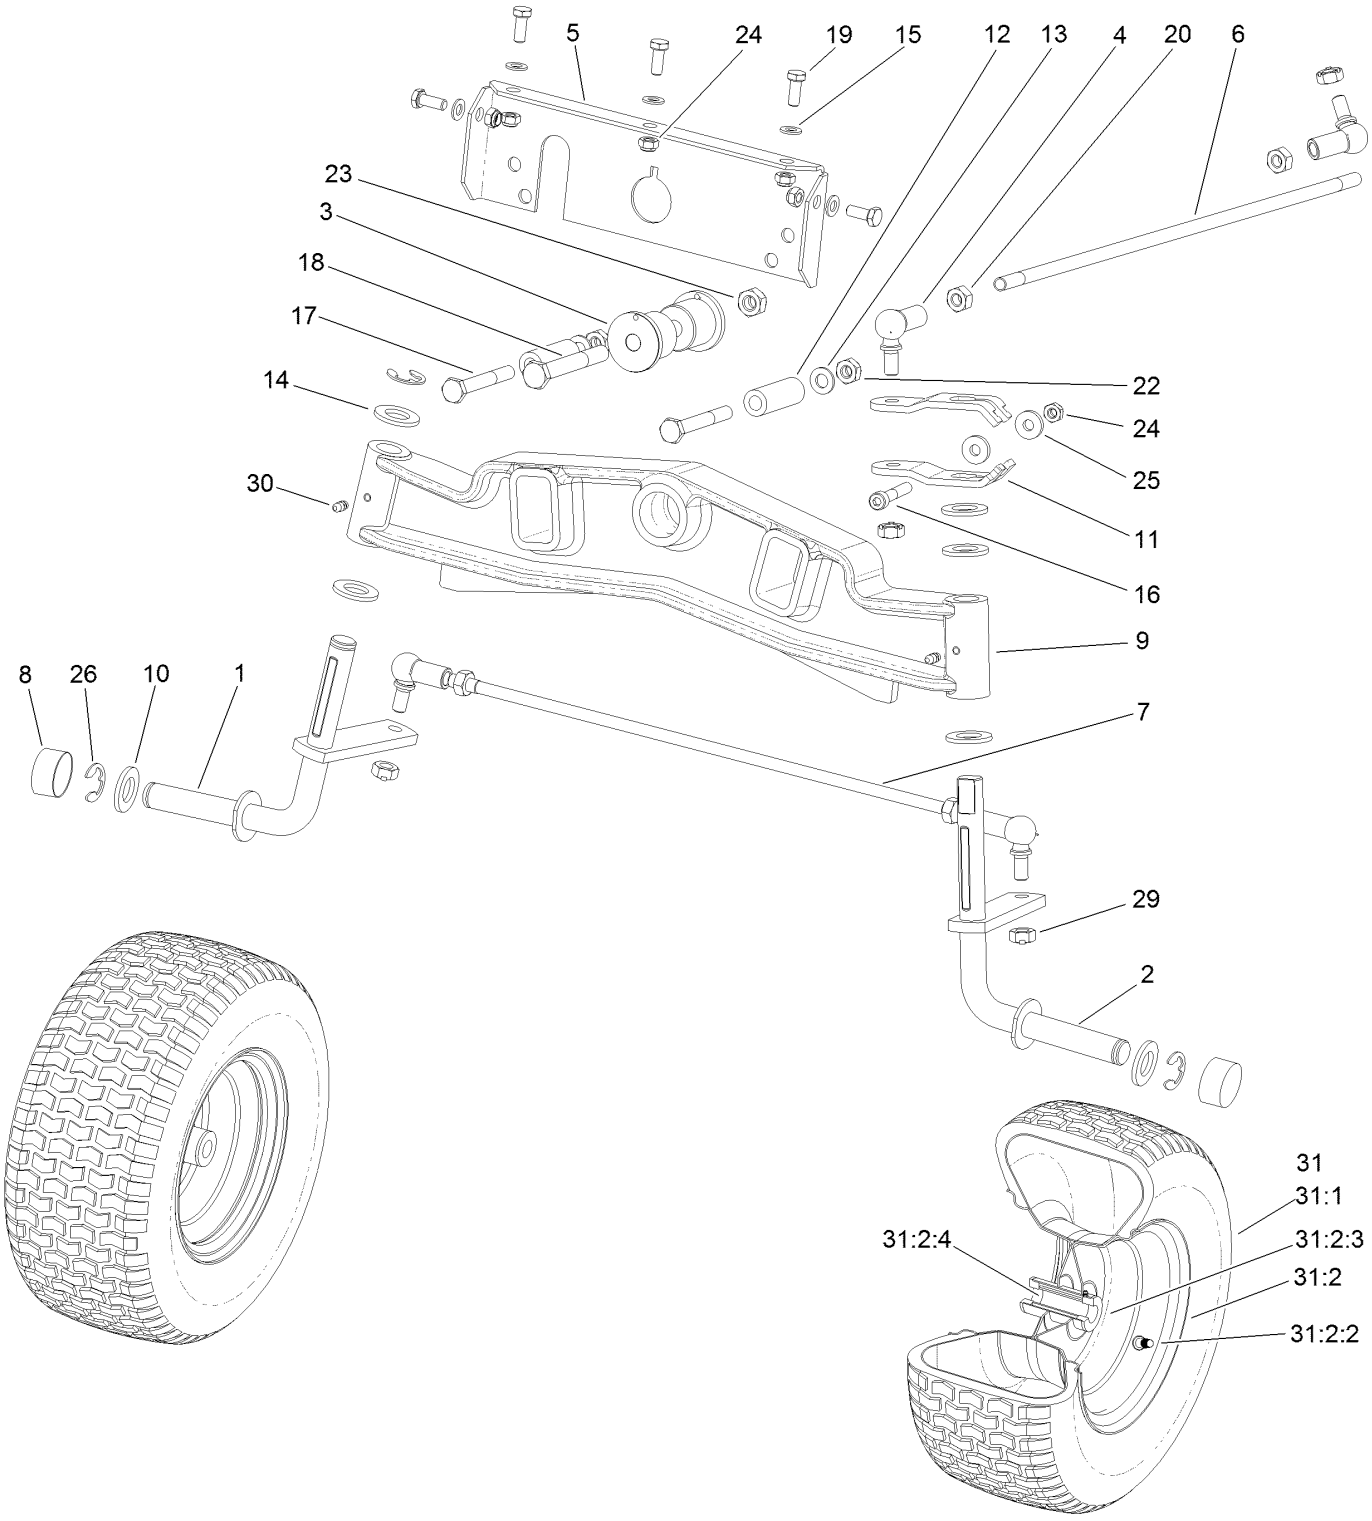

# Front Axle Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 110-9084 | 1 | Spindle-Front, RH |
| 2 | 120-8705 | 1 | Spindle-Front, LH |
| 3 | 104-2890 | 2 | Bushing-Axle, Front |
| 4 | 104-2876 | 4 | Joint-Ball, Angle |
| 5 | 125-2219 | 1 | Plate-Axle |
| 6 | 125-2223 | 1 | Link-Drag |
| 7 | 125-2222 | 1 | Rod-Tie, Front Axle |
| 8 | 104-2857 | 2 | Cap-Hub |
| 9 | 104-2852 | 1 | Axle-Front |
| 10 | 120-8739 | 2 | Washer |
| 11 | 120-8713 | 2 | Lever-Spindle, Steering |
| 12 | 104-2851 | 2 | Spacer |
| 13 | 33095-00 | 2 | Washer-Flat |
| 14 | 104-2905 | 5 | Washer-Flat |
| 15 | 106-4756 | 5 | Washer-Plain |
| 16 | 120-8774 | 1 | Screw |
| 17 | 33115-080 | 2 | Screw-HH |
| 18 | 33116-090 | 1 | Screw-HH |
| 19 | 33114-020 | 5 | Screw-HH |
| 20 | 33015-00 | 4 | Nut-Hex |
| 22 | 33025-00 | 2 | Nut-Lock, NI |
| 23 | 48-9540 | 1 | Nut-Lock, Hex NI |
| 24 | 33024-00 | 6 | Nut-Lock, NI |
| 25 | 106-8588 | 2 | Washer-Flat |
| 26 | 104-2891 | 3 | Clip-Spring |
| 29 | 106-4668 | 4 | Nut-Lock |
| 30 | 104-2904 | 3 | Fitting-Grease |
| 31 | 114-3240 | 2 | Wheel ASM |
| 31:1 | 99-2336 | 1 | Tire |
| 31:2 | 110-9086 | 1 | Wheel ASM |
| 31:2:2 | 106-8596 | 1 | Valve-Tire |
| 31:2:3 | 110513 | 2 | Bearing-Wheel |
| 31:2:4 | 127-6232 | 1 | Spacer-Wheel |


# Steering Assembly

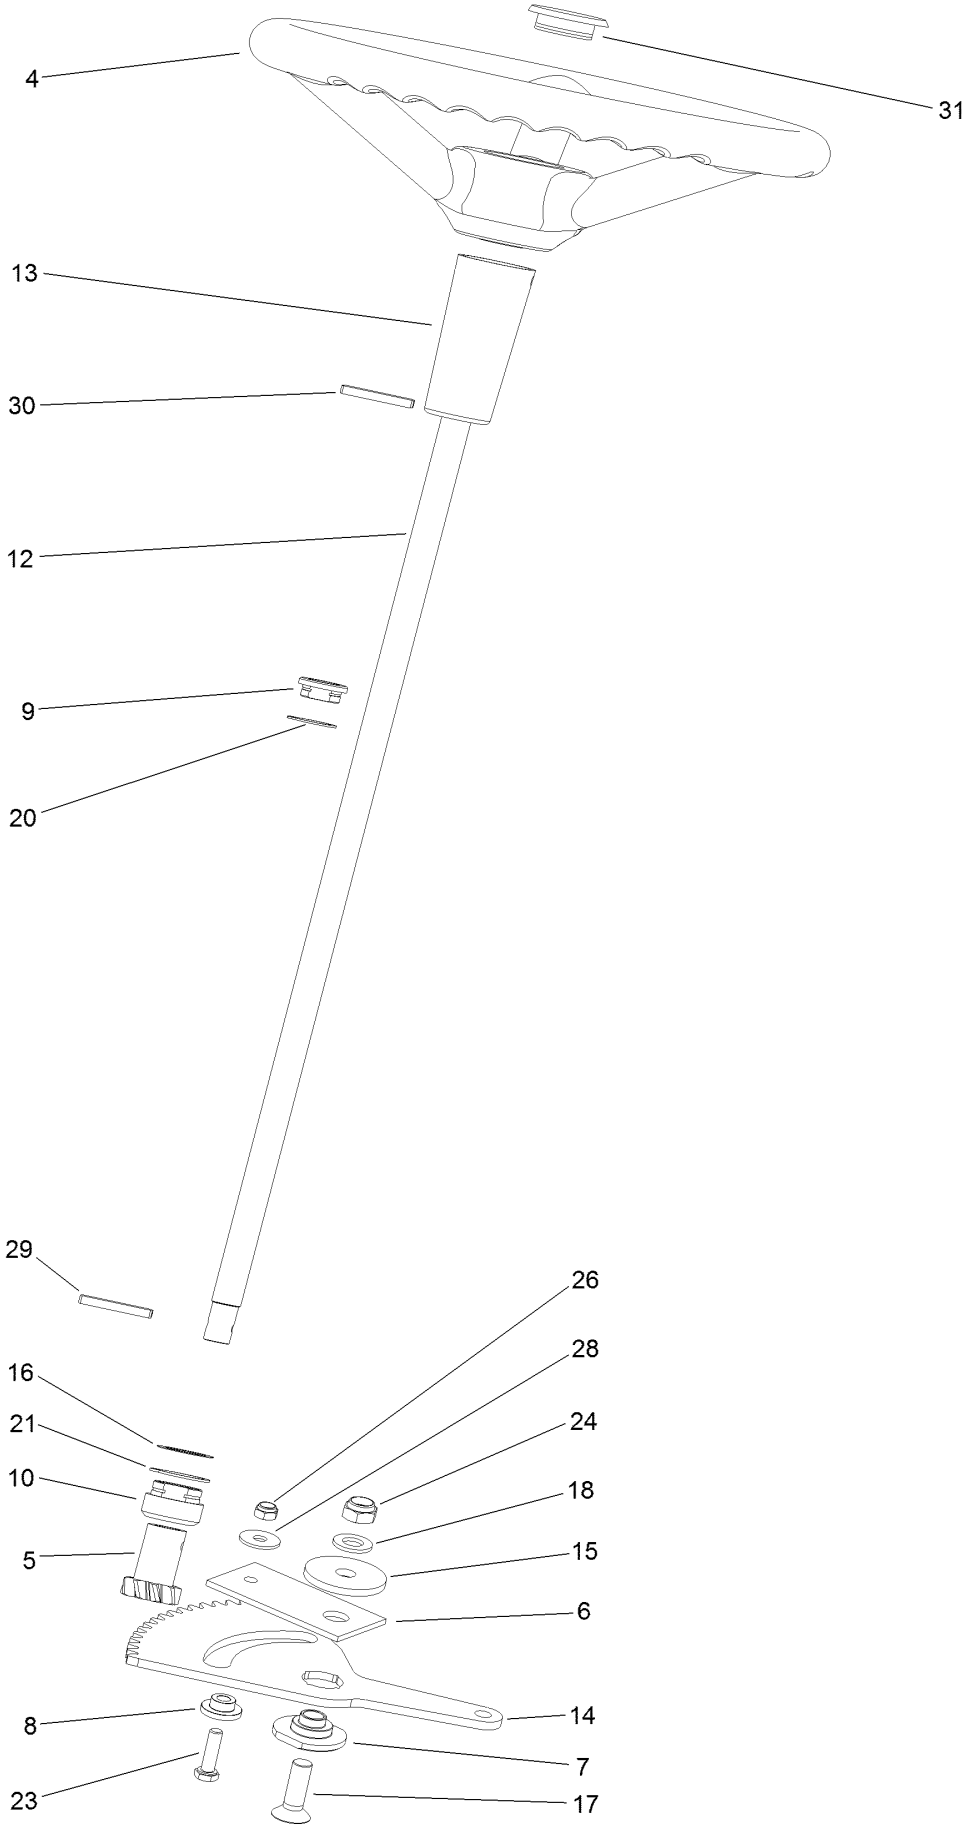

# Steering Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 4 | 125-2237 | 1 | Wheel-Steering |
| 5 | 125-2231 | 1 | Pinion-Steering |
| 6 | 125-2225 | 1 | Plate-Steering |
| 7 | 125-2230 | 1 | Pivot-Steering |
| 8 | 125-2226 | 1 | Bushing-Sector |
| 9 | 125-2224 | 2 | Bearing |
| 10 | 125-2227 | 1 | Bushing-Pinion |
| 12 | 125-2228 | 1 | Shaft-Steering |
| 13 | 125-2238 | 1 | Cover |
| 14 | 119-5374 | 1 | Gear-Sector |
| 15 | 108-8892 | 1 | Washer |
| 16 | 125-2235 | 1 | Washer |
| 17 | 125-2232 | 1 | Screw |
| 18 | 104-3124 | 1 | Washer-Flat |
| 20 | 125-2236 | 1 | Ring-Locking |
| 21 | 125-2234 | 1 | Ring-Locking |
| 23 | 33114-030 | 1 | Screw-HH |
| 24 | 33016-00 | 1 | Nut-Hex |
| 26 | 33024-00 | 1 | Nut-Lock, NI |
| 28 | 104-2946 | 1 | Washer-Plain |
| 29 | 125-2233 | 1 | Pin-Spiral |
| 30 | 119-5377 | 1 | Pin-Spirol |
| 31 | 111-8266 | 1 | Cap-Wheel, Steering |

# Transmission Drive Assembly

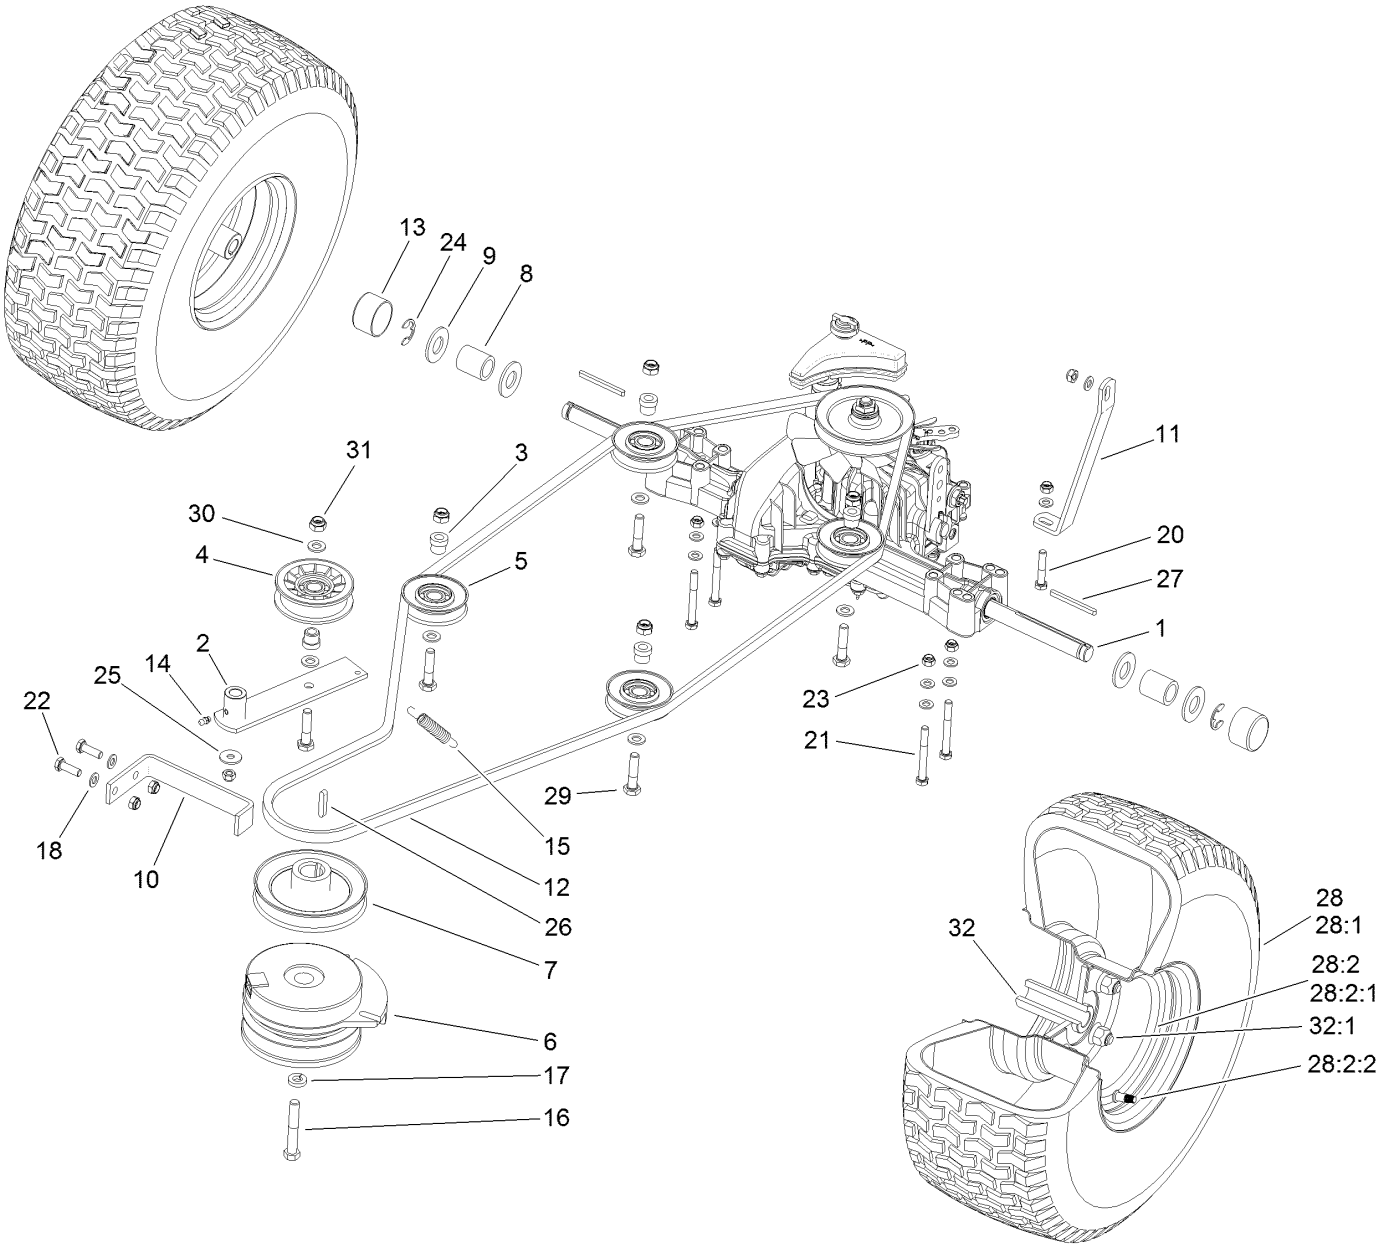


# Transmission Drive Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 114-3155 | 1 | Transmission |
| 2 | 125-2239 | 1 | Arm-Idler |
| 3 | 104-2896 | 5 | Bushing-Idler |
| 4 | 104-2913 | 1 | Pulley-Idler |
| 5 | 104-2887 | 4 | Pulley-Idler |
| 6 | 119-5501 | 1 | Clutch-Electric |
| 7 | 104-2911 | 1 | Pulley-Engine |
| 8 | 104-2895 | 2 | Spacer-Axle |
| 9 | 120-8739 | 4 | Washer |
| 10 | 125-2240 | 1 | Retainer |
| 11 | 125-2241 | 1 | Stabilizer |
| 12 | 125-2243 | 1 | V-Belt, Traction |
| 13 | 104-2857 | 2 | Cap-Hub |
| 14 | 104-2904 | 1 | Fitting-Grease |
| 15 | 104-2897 | 1 | Spring |
| 16 | 3212-10 | 1 | Screw-HH |
| 17 | 93-9043 | 1 | Washer-Spring, Belleville |
| 18 | 106-4756 | 12 | Washer-Plain |
| 20 | 33114-040 | 1 | Screw-HH |
| 21 | 125-2242 | 4 | Screw |
| 22 | 33114-025 | 2 | Screw-HH |
| 23 | 33024-00 | 9 | Nut-Lock, NI |
| 24 | 104-2891 | 2 | Clip-Spring |
| 25 | 104-2946 | 1 | Washer-Plain |
| 26 | 104-2899 | 1 | Key-Square |
| 27 | 104-2892 | 2 | Key-Square |
| 28 | 107-8929 | 2 | Tire And Wheel ASM |
| 28:1 | 99-2994 | 1 | Tire |
| 28:2 | 107-8932 | 1 | Wheel ASM |
| 28:2:1 | | 1 | Rim ● |
| 28:2:2 | 106-8596 | 1 | Valve-Tire |
| 29 | 33115-040 | 5 | Screw-HH |
| 30 | 33095-00 | 6 | Washer-Flat |
| 31 | 33023-00 | 5 | Nut-Lock |
| 32 | 108-8718 | 2 | Hub-Wheel |
| 32:1 | 108-8717 | 4 | Nut-Lug |

● Not serviced separately


# Control Shaft Assembly
# Transmission Assembly No. 114-3155

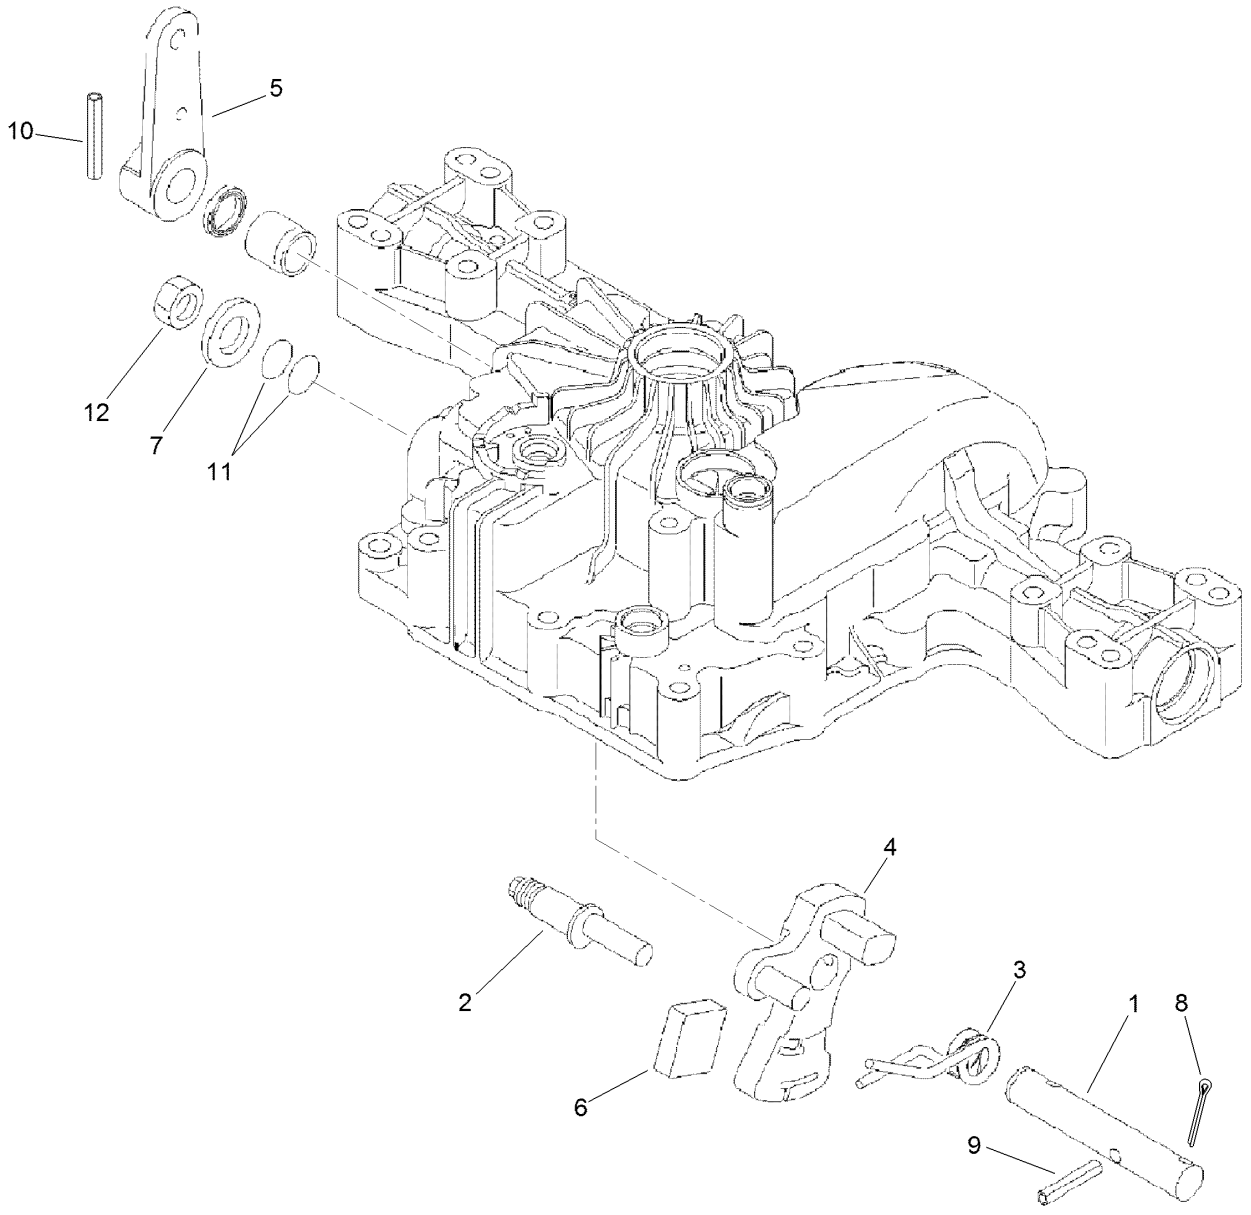

# Control Shaft Assembly
# Transmission Assembly No. 114-3155 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 114-3181 | 1 | Shaft-Control |
| 2 | 104-3292 | 1 | Fulcrum-Eccentricity |
| 3 | 114-3217 | 1 | Spring-Torsion |
| 4 | 114-3180 | 1 | Arm-Control |
| 5 | 104-3342 | 1 | Arm-Transaxle |
| 6 | 104-3296 | 1 | Plate-Jerky |
| 7 | 93-0417 | 1 | Washer |
| 8 | 114-3182 | 1 | Pin-Cotter |
| 9 | 104-3297 | 1 | Pin |
| 10 | 93-0411 | 1 | Pin-Roll |
| 11 | 104-3298 | 2 | Packing |
| 12 | 93-0420 | 1 | Nut |


# Differential Gear Assembly
# Transmission Assembly No. 114-3155

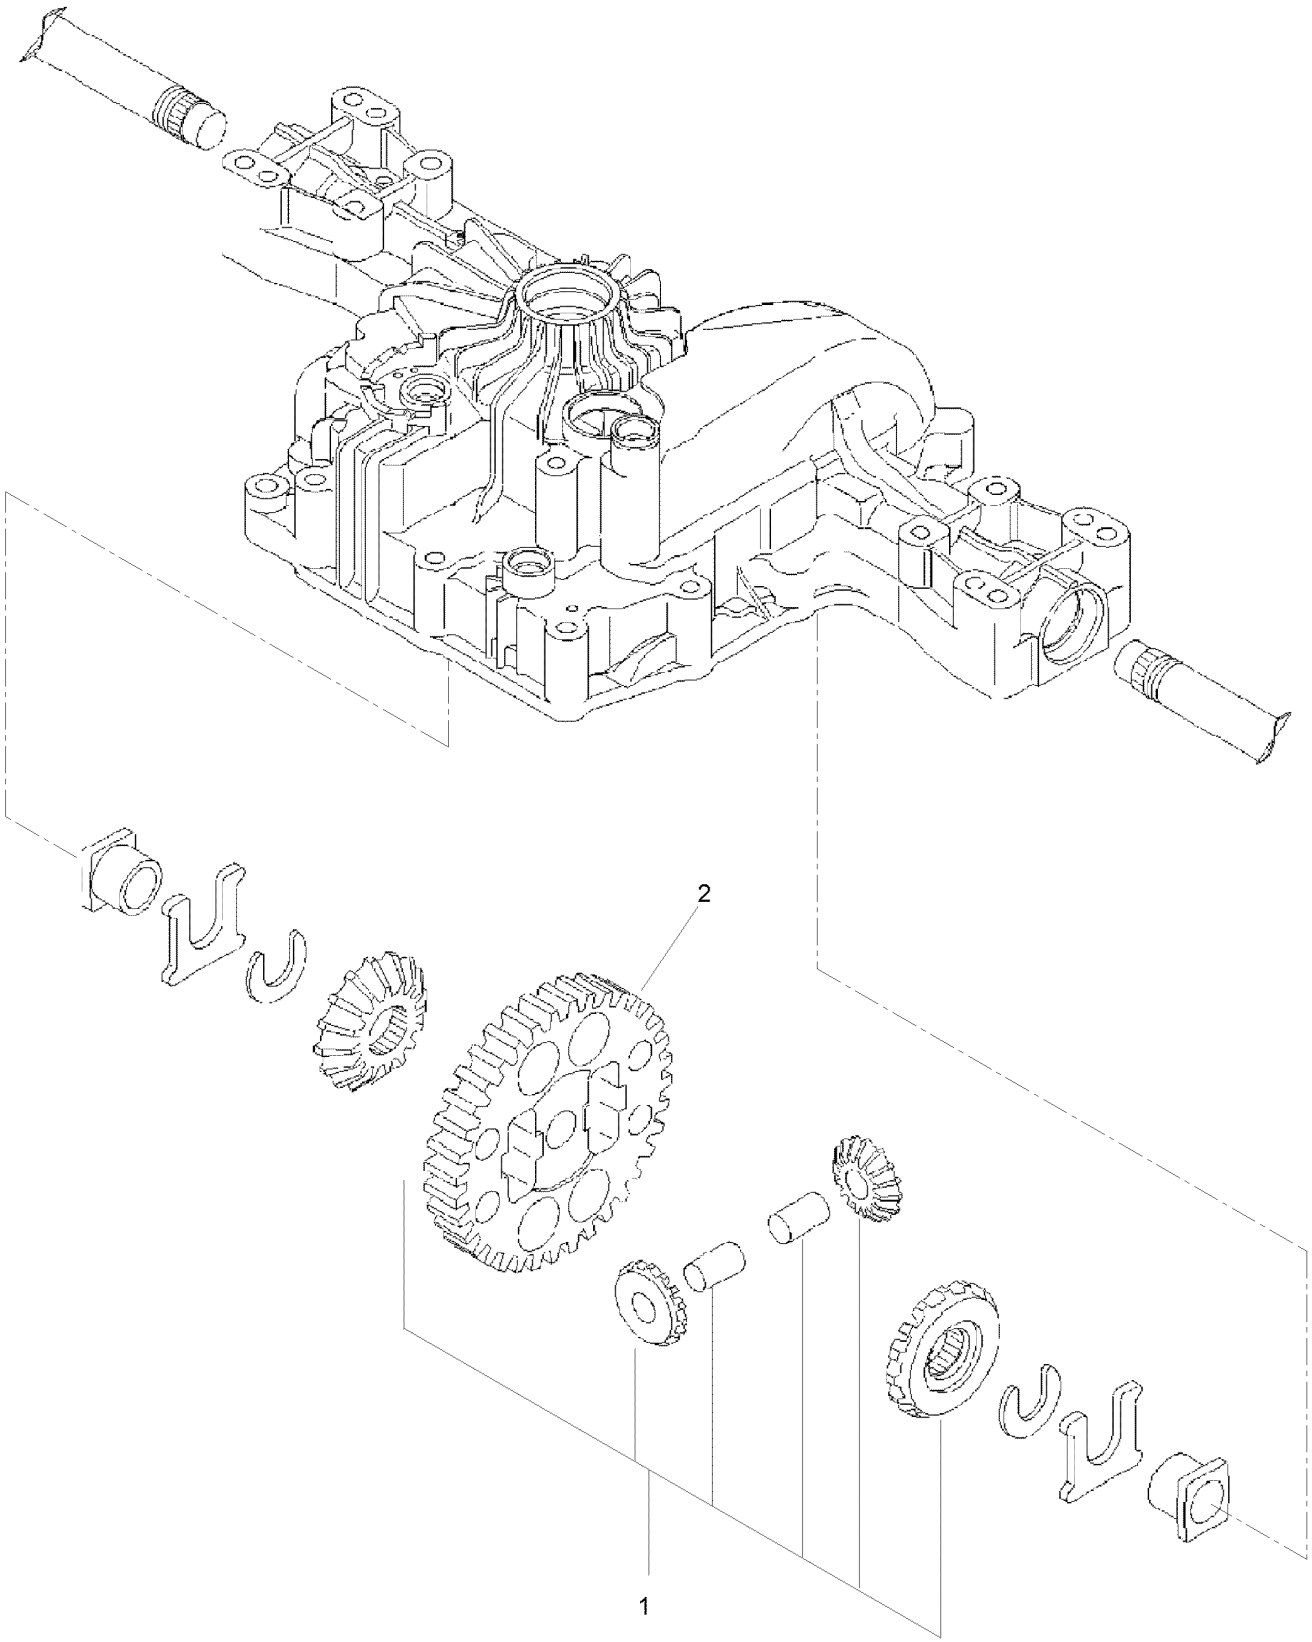

# Differential Gear Assembly
# Transmission Assembly No. 114-3155 (continued)

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 104-3299 | 1 | Differential Gear Kit |
| 2 | 104-3301 | 1 | Gear-Final |


# Final Pinion Assembly
# Transmission Assembly No. 114-3155

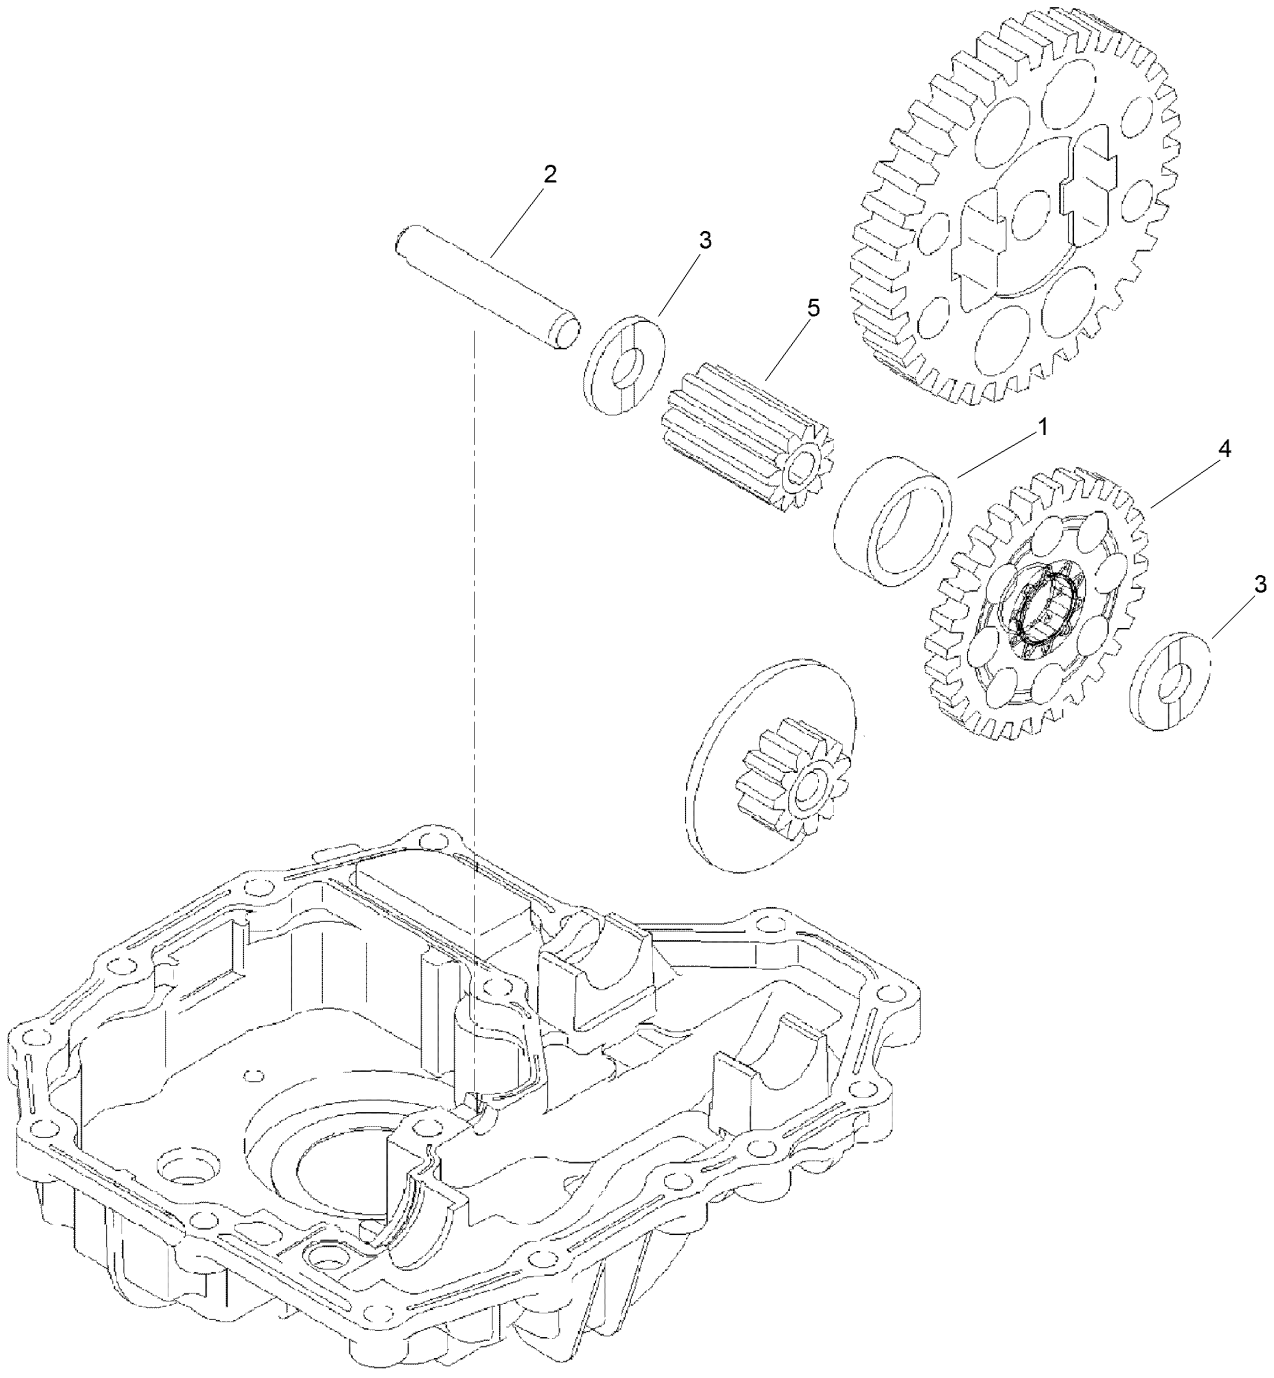

# Final Pinion Assembly
# Transmission Assembly No. 114-3155 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-3302 | 1 | Collar-Pinion, Final |
| 2 | 104-3303 | 1 | Shaft-Reduction |
| 3 | 104-3304 | 2 | Washer |
| 4 | 104-3305 | 1 | Gear-Reduction |
| 5 | 104-3306 | 1 | Pinion-Final |


# Axle Shaft Assembly
# Transmission Assembly No. 114-3155

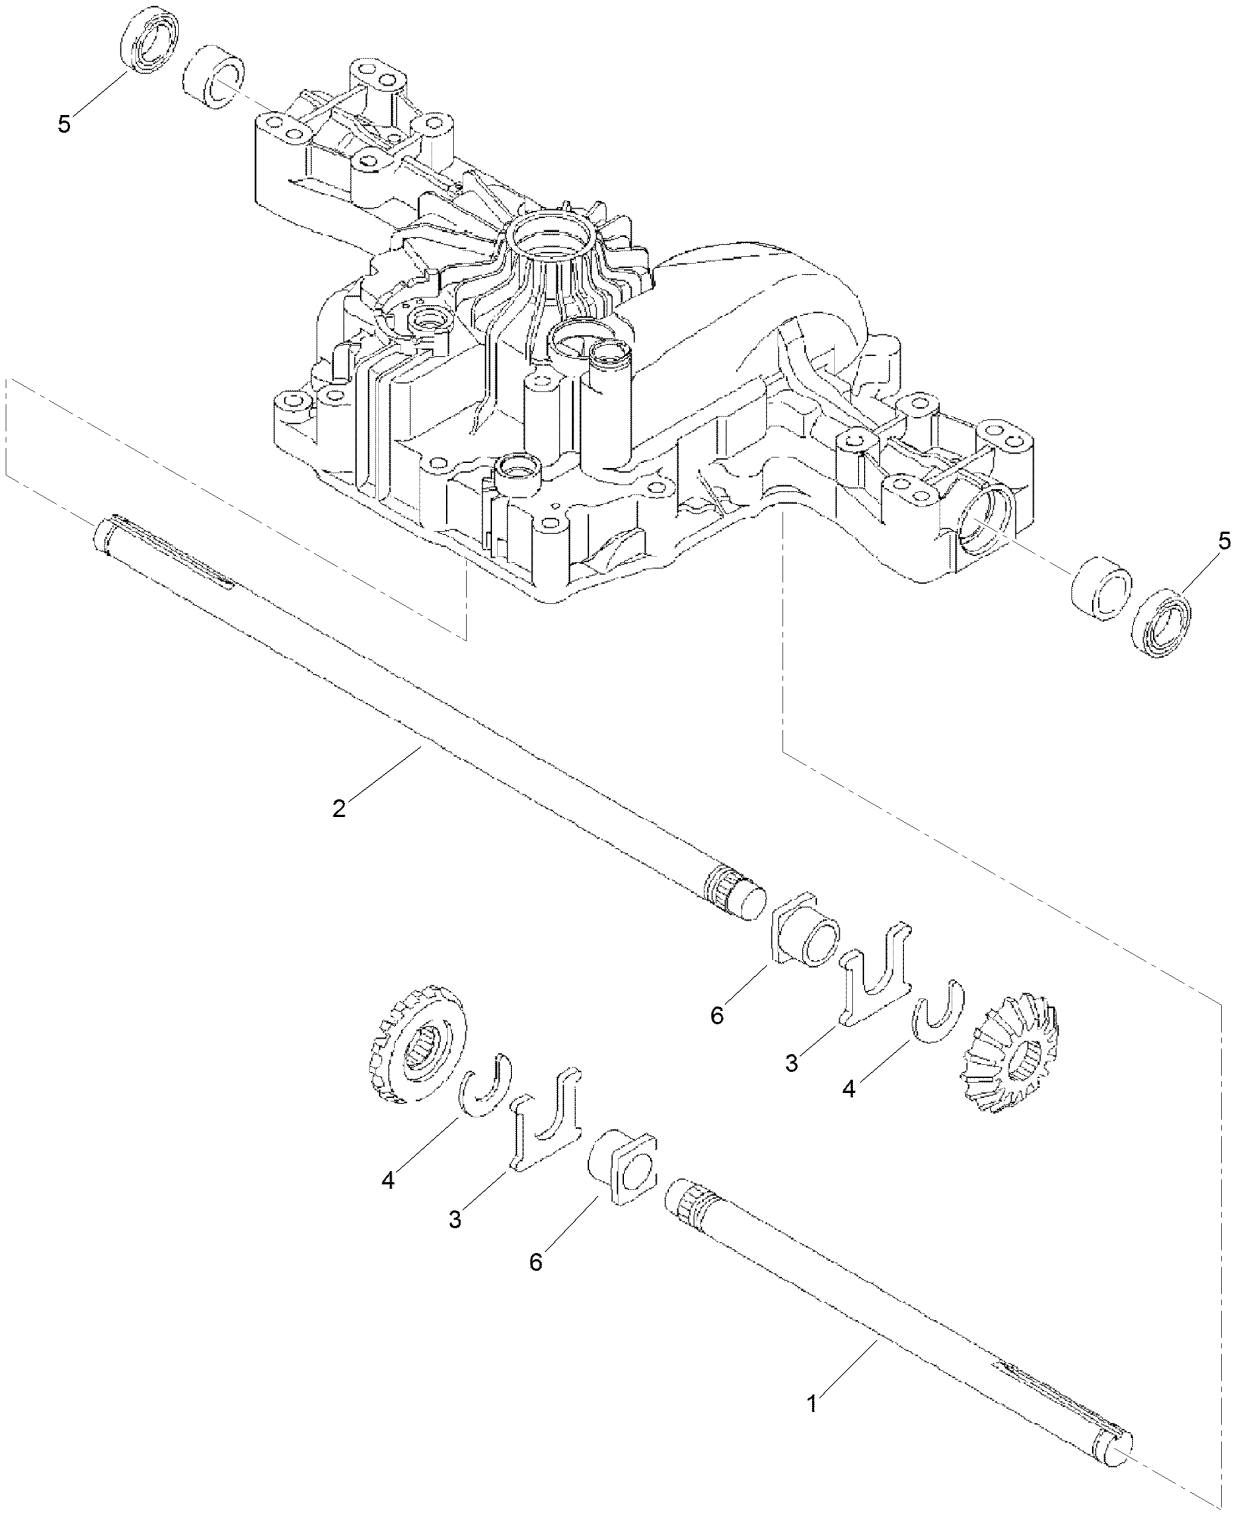

# Axle Shaft Assembly
# Transmission Assembly No. 114-3155 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-3307 | 1 | Shaft-Axle, RH |
| 2 | 104-3308 | 1 | Shaft-Axle, LH |
| 3 | 104-3309 | 2 | Washer-Thrust |
| 4 | 104-3310 | 2 | Ring |
| 5 | 104-3311 | 2 | Seal |
| 6 | 104-3312 | 2 | Bushing |


# Brake Assembly
# Transmission Assembly No. 114-3155

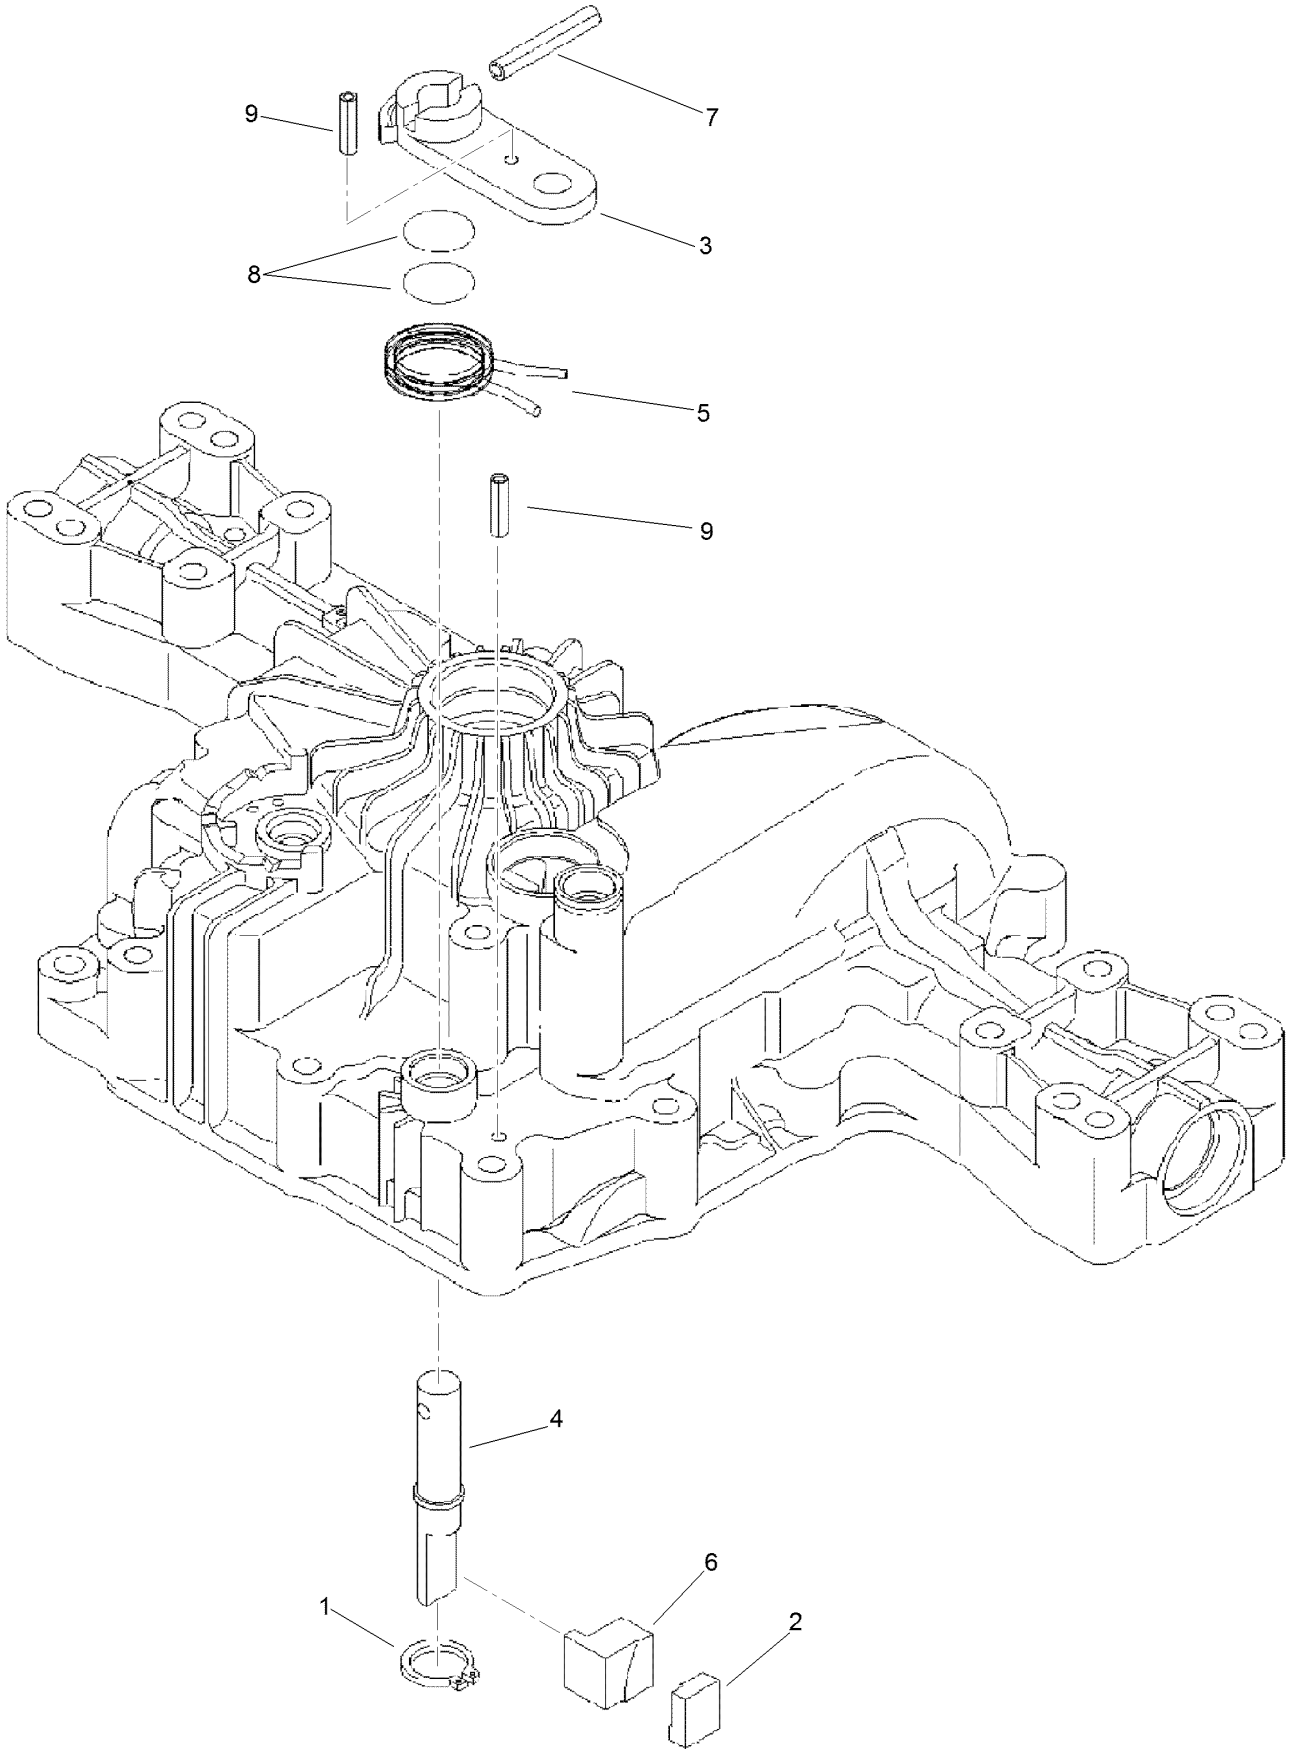

# Brake Assembly
# Transmission Assembly No. 114-3155 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-3313 | 1 | Ring |
| 2 | 104-3314 | 1 | Shoe-Brake |
| 3 | 104-3315 | 1 | Arm-Brake |
| 4 | 104-3316 | 1 | Shaft-Brake |
| 5 | 104-3317 | 1 | Spring-Return, Brake |
| 6 | 104-3318 | 1 | Actuator-Brake |
| 7 | 92-0767 | 1 | Pin |
| 8 | 93-0418 | 2 | O-Ring |
| 9 | 104-3319 | 2 | Pin |


# Fan Pulley Assembly
# Transmission Assembly No. 114-3155

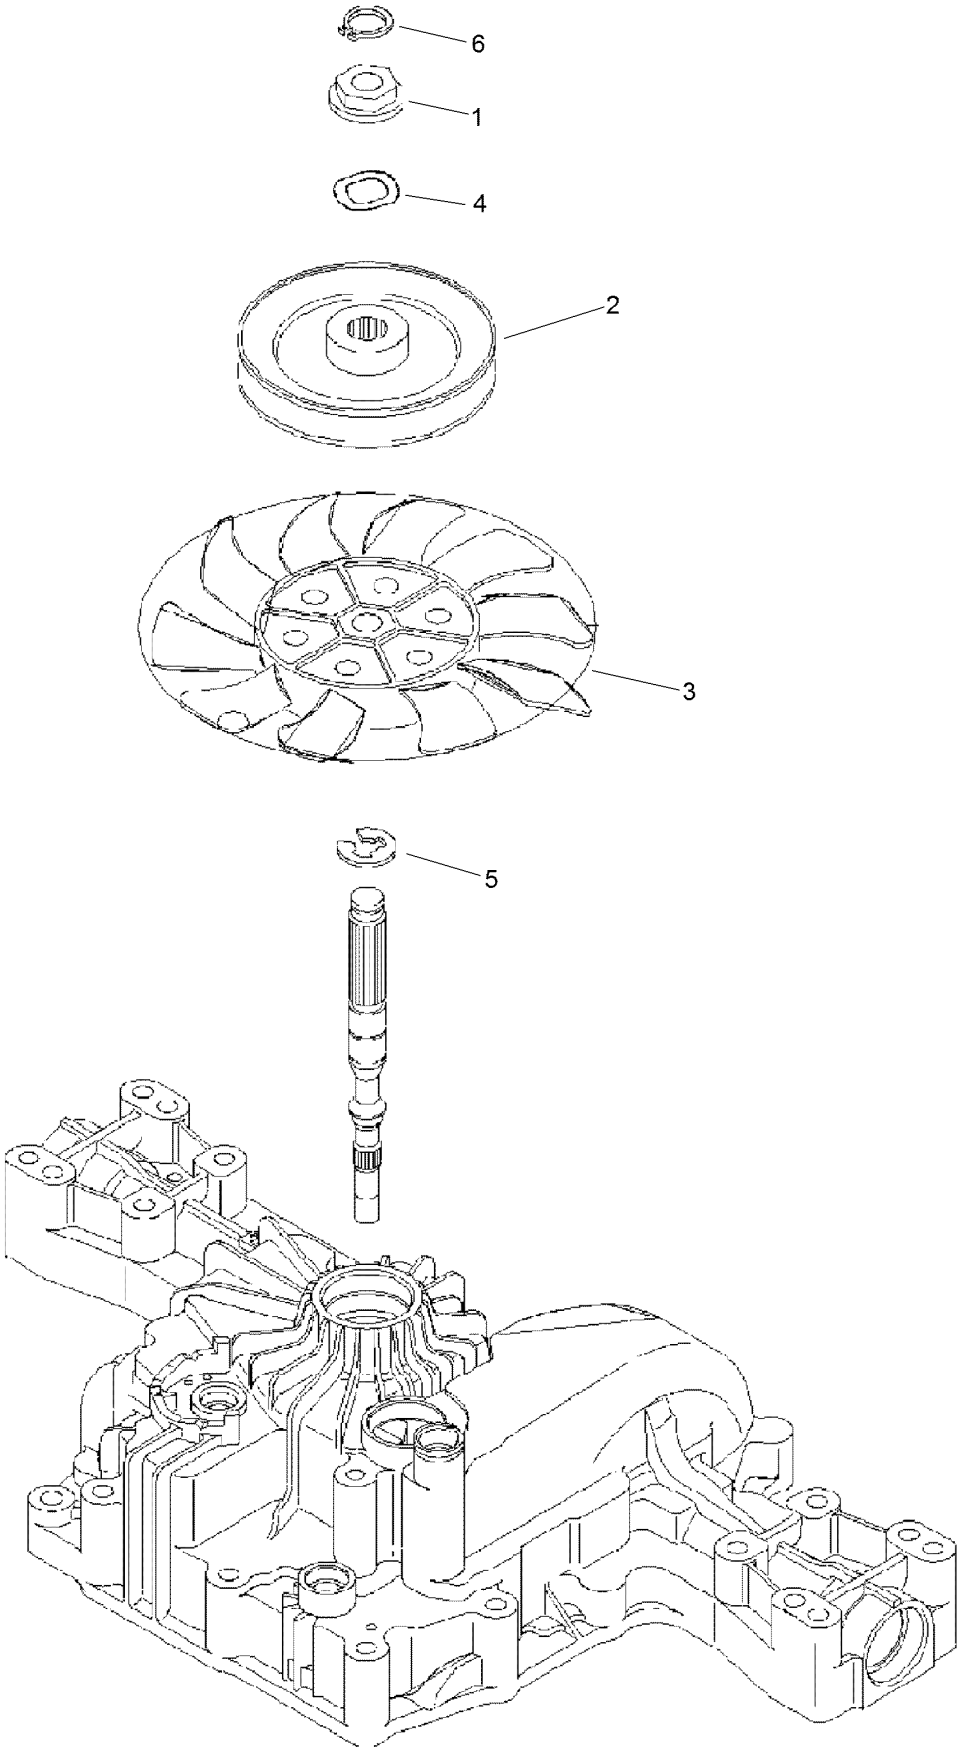

# Fan Pulley Assembly
# Transmission Assembly No. 114-3155 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-3320 | 1 | Collar-Spline |
| 2 | 104-3197 | 1 | Pulley-Transmission |
| 3 | 104-3199 | 1 | Fan-Transmission |
| 4 | 104-3321 | 1 | Washer-Lock |
| 5 | 93-0387 | 1 | E-Ring |
| 6 | 104-3198 | 1 | E-Ring |


# Range Shift Assembly
# Transmission Assembly No. 114-3155

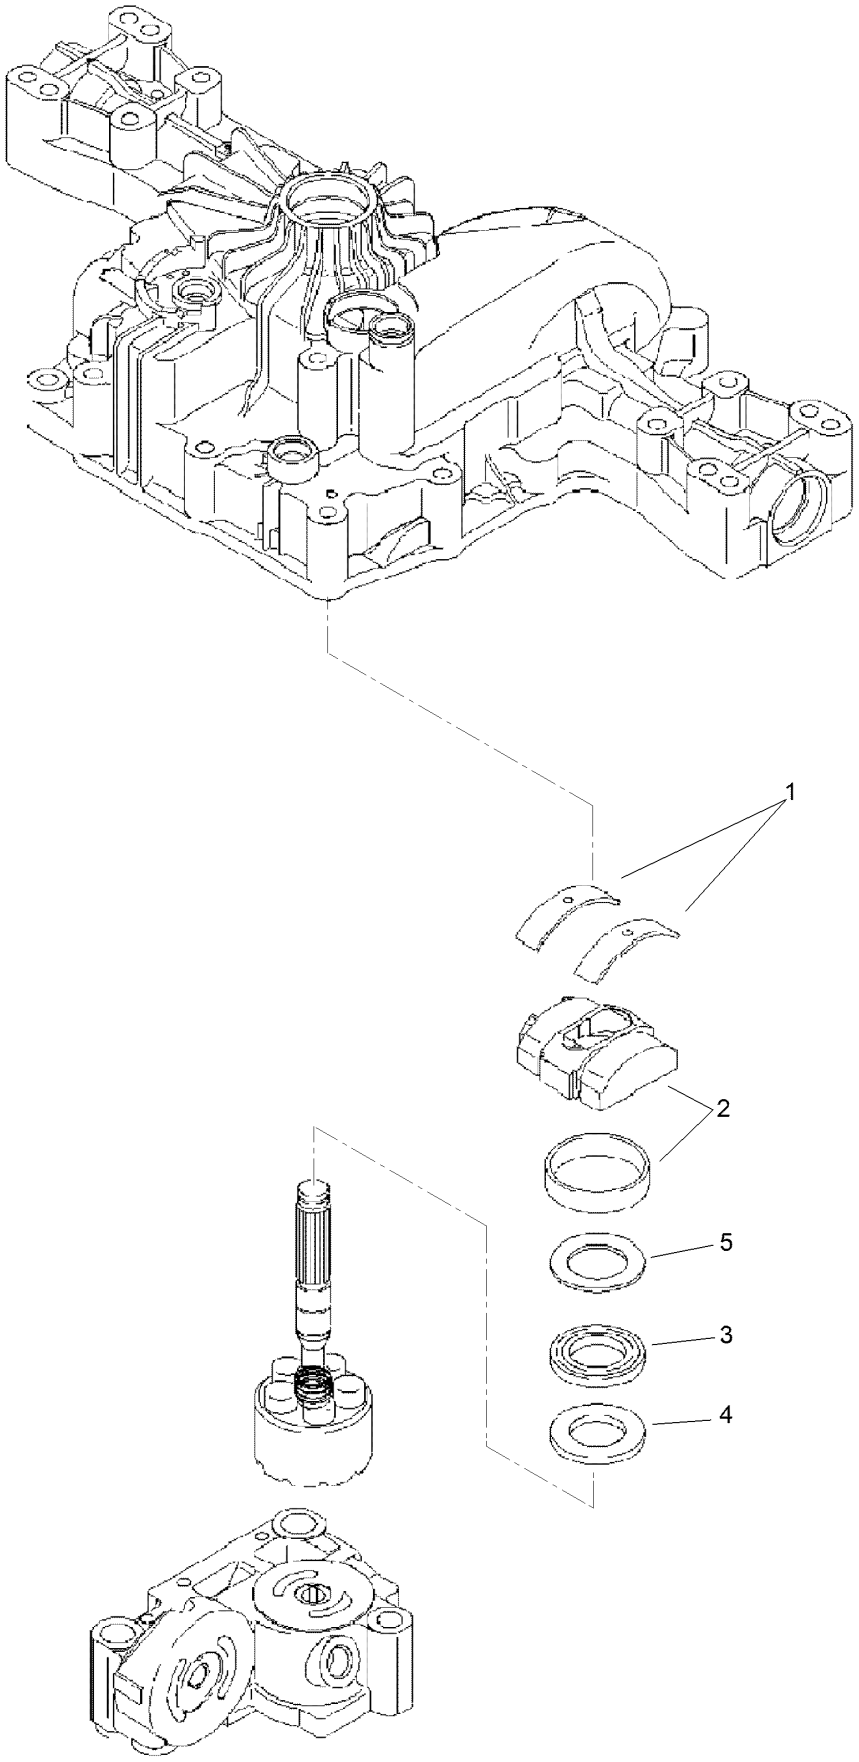

# Range Shift Assembly
# Transmission Assembly No. 114-3155 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-3286 | 2 | Metal-Thrust |
| 2 | 104-3287 | 1 | Plate-Swash |
| 3 | 104-3288 | 1 | Bearing |
| 4 | 104-3289 | 1 | Plate-Thrust, A |
| 5 | 104-3290 | 1 | Plate-Thrust, B |


# Center Case Assembly
# Transmission Assembly No. 114-3155

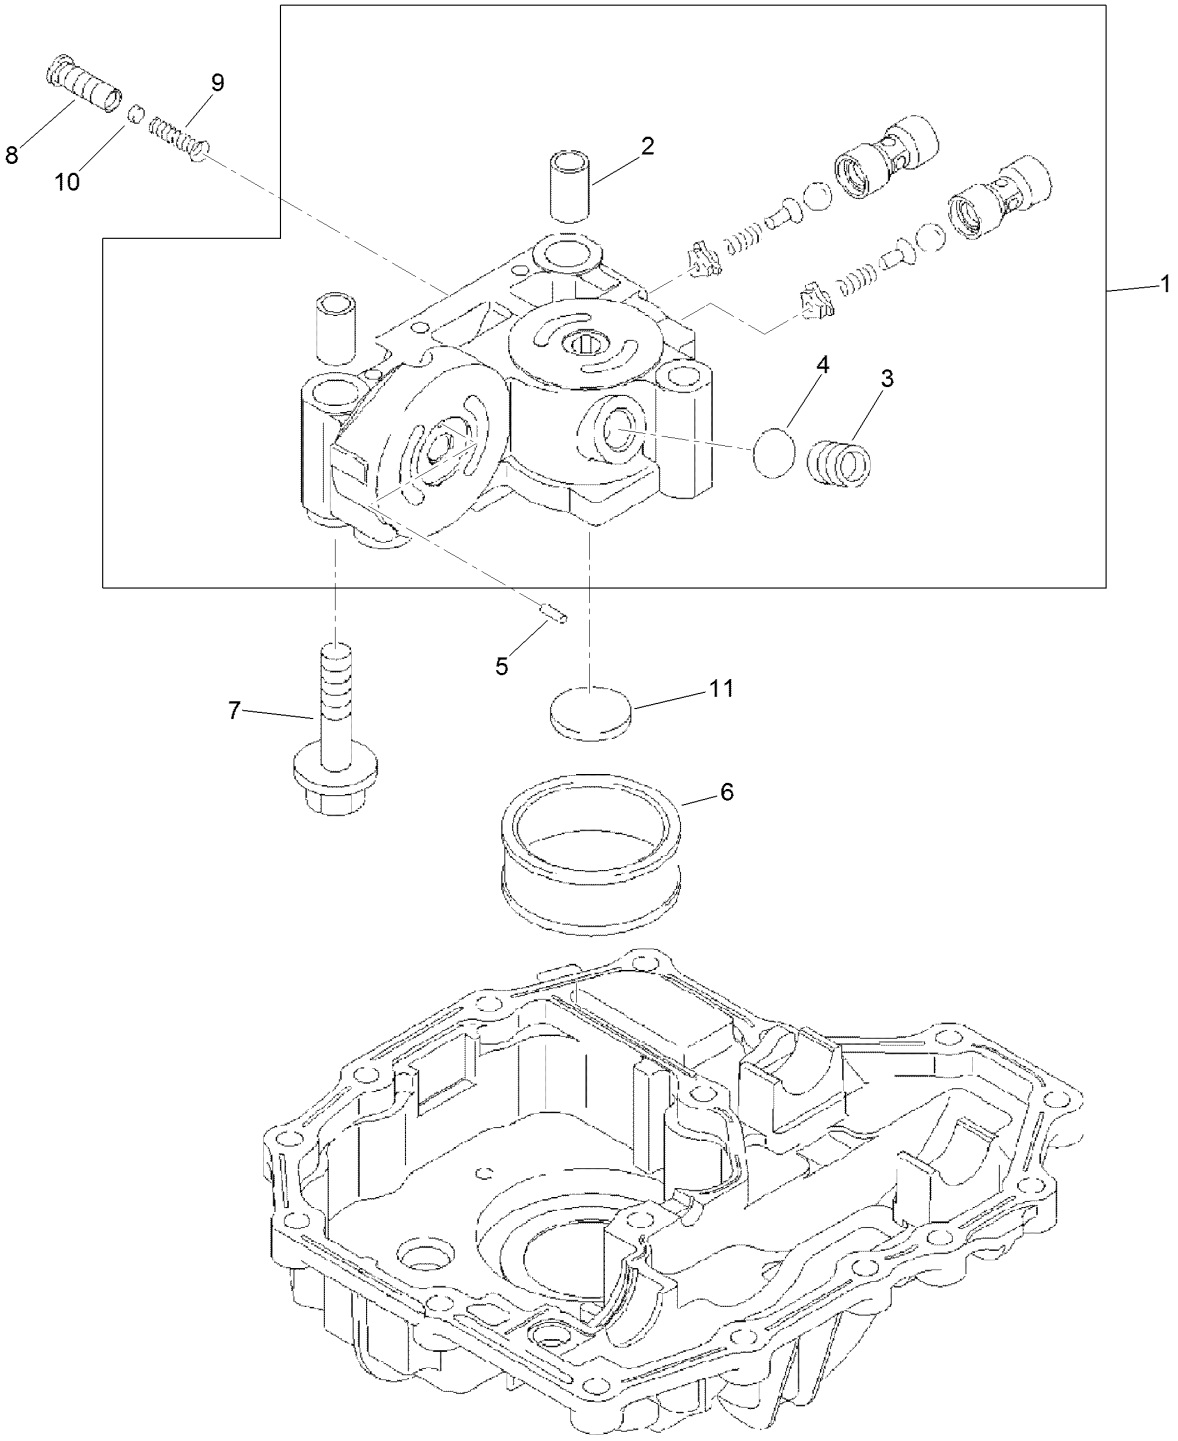

# Center Case Assembly
# Transmission Assembly No. 114-3155 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-3267 | 1 | Case-Center |
| 2 | 104-3268 | 2 | Pin-Knock |
| 3 | 104-3269 | 1 | Plug |
| 4 | 93-0419 | 1 | Packing |
| 5 | 104-3270 | 1 | Pin |
| 6 | 104-3271 | 1 | Filter |
| 7 | 104-3272 | 3 | Bolt |
| 8 | 104-3273 | 2 | Valve |
| 9 | 104-3274 | 2 | Spring |
| 10 | 104-3275 | 2 | Filter |
| 11 | 104-3257 | 1 | Magnet |


# Pump Shaft Assembly
# Transmission Assembly No. 114-3155

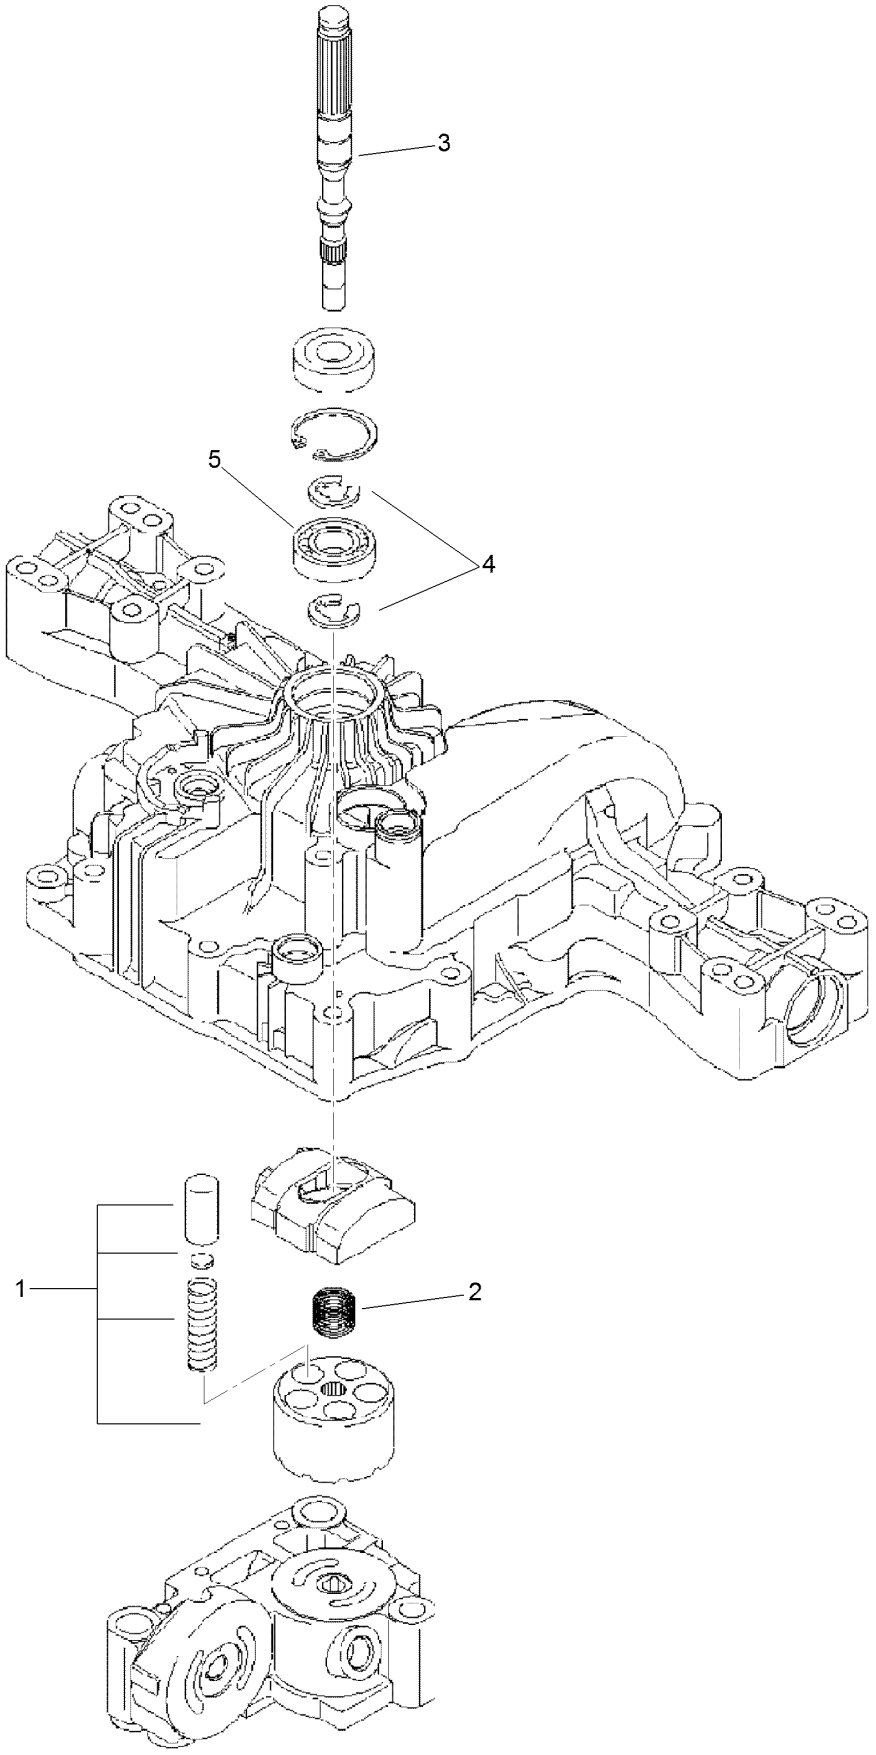

# Pump Shaft Assembly
# Transmission Assembly No. 114-3155 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-3276 | 1 | Block-Cylinder |
| 2 | 104-3277 | 1 | Spring-Pump |
| 3 | 104-3278 | 1 | Shaft-Pump |
| 4 | 93-0387 | 2 | E-Ring |
| 5 | 93-0374 | 1 | Bearing-Ball |


# Motor Shaft Assembly
# Transmission Assembly No. 114-3155

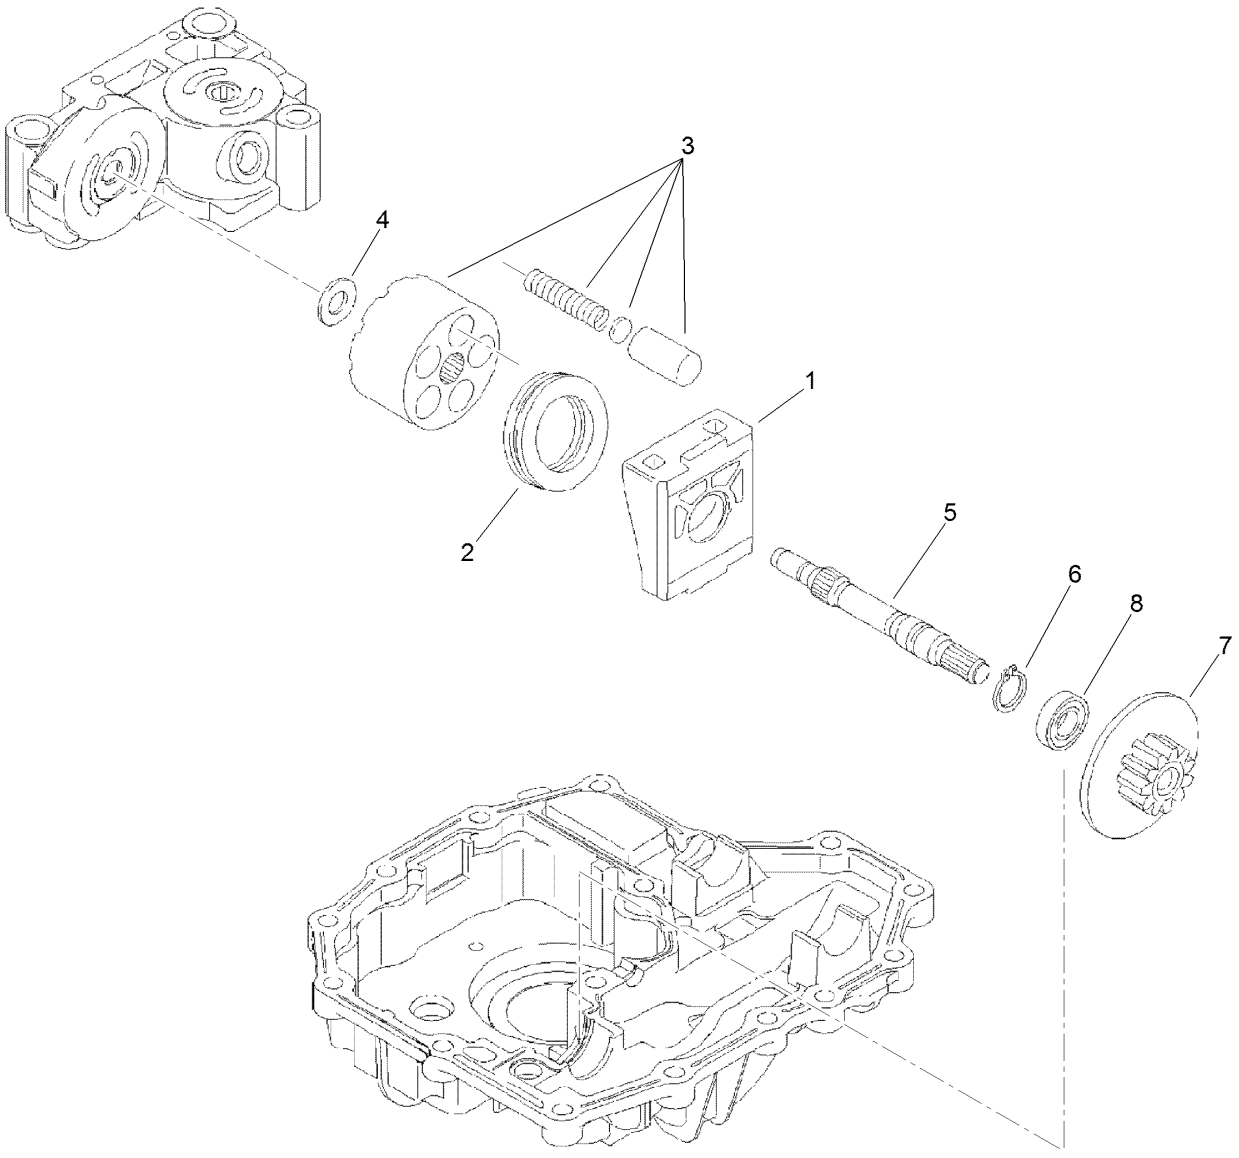

# Motor Shaft Assembly
# Transmission Assembly No. 114-3155 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-3279 | 1 | Housing |
| 2 | 104-3280 | 1 | Bearing |
| 3 | 104-3281 | 1 | Block-Cylinder |
| 4 | 104-3282 | 1 | Washer |
| 5 | 104-3283 | 1 | Shaft-Motor |
| 6 | 93-0373 | 1 | Ring-Snap |
| 7 | 104-3284 | 1 | Motor-Gear |
| 8 | 104-3285 | 1 | Bearing |


# Transaxle Case Assembly
# Transmission Assembly No. 114-3155

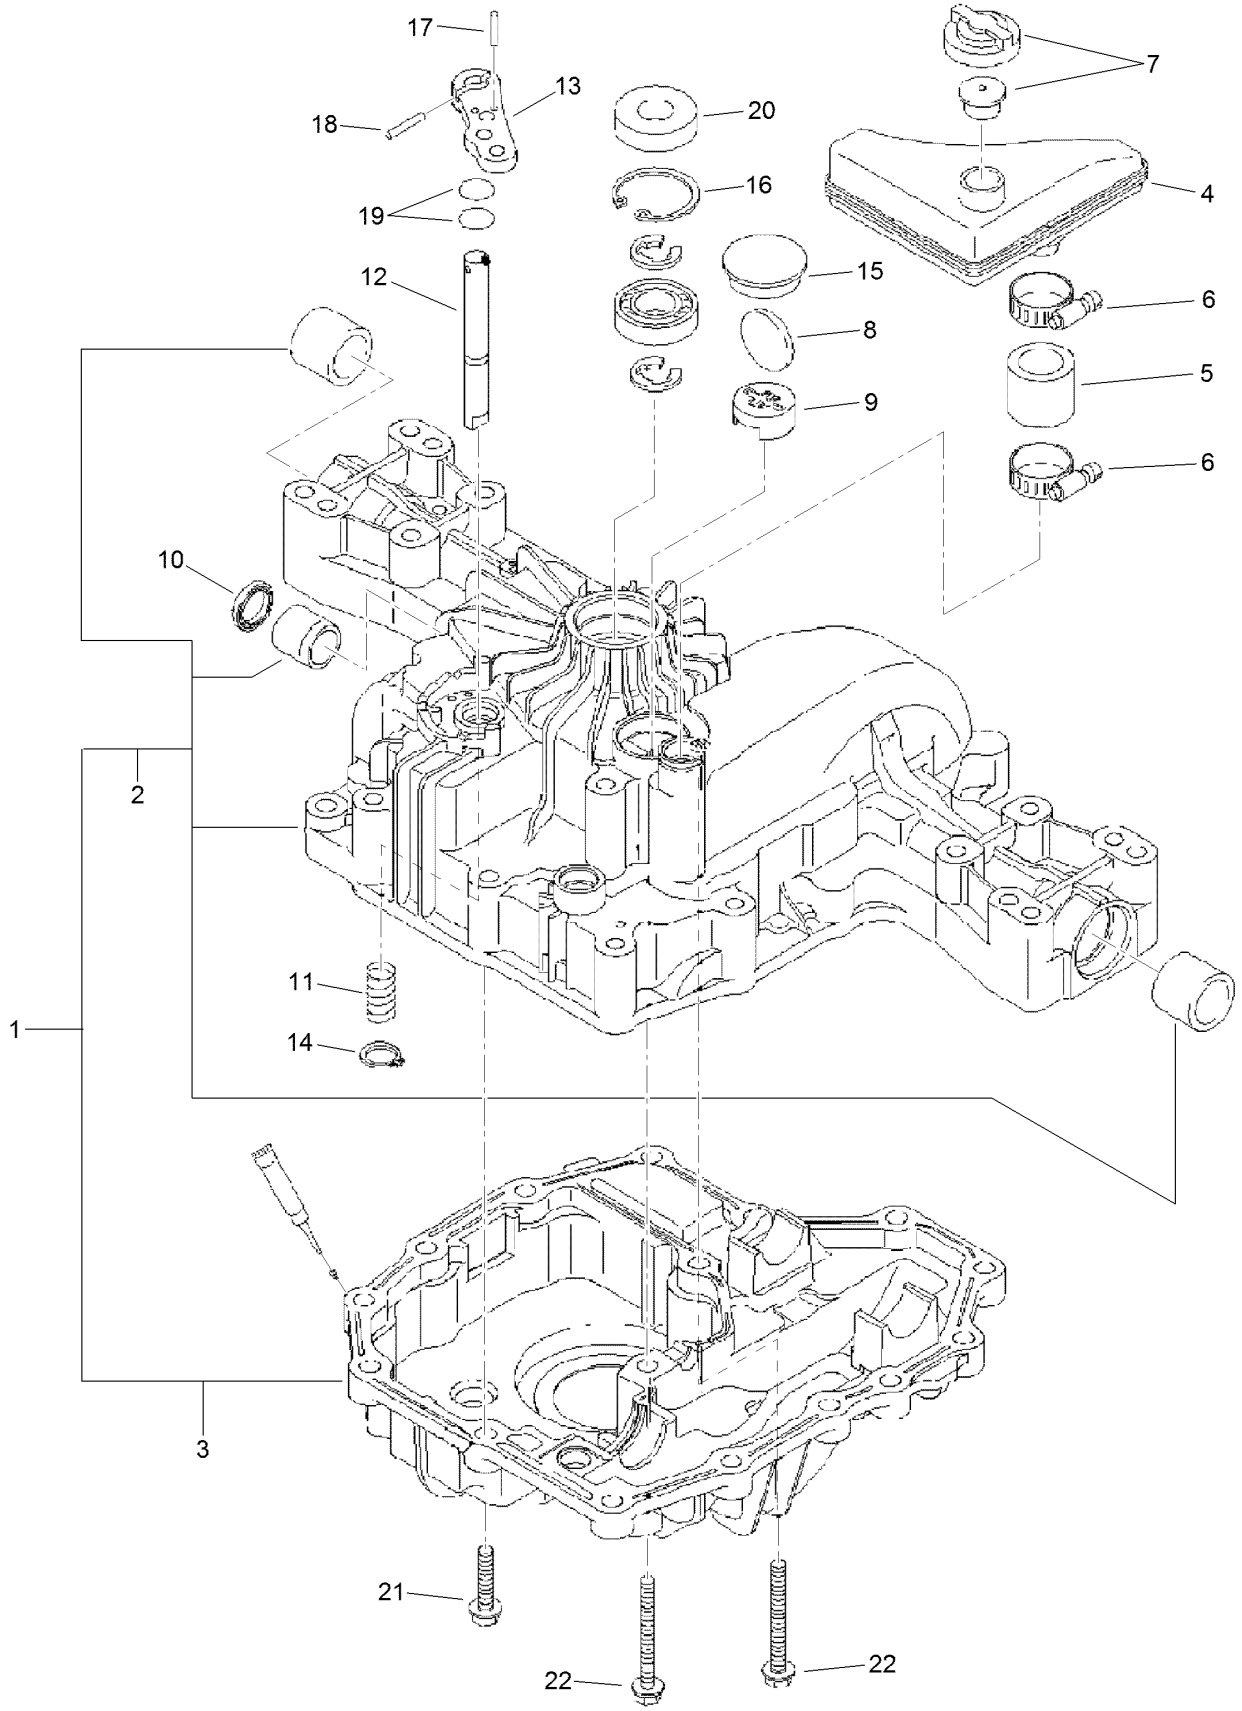

# Transaxle Case Assembly
# Transmission Assembly No. 114-3155 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-3251 | 1 | Transaxle Case Set |
| 2 | 104-3252 | 1 | Housing-Upper |
| 3 | 104-3253 | 1 | Housing-Lower |
| 4 | 104-2914 | 1 | Reservoir Tank ASM With Cap |
| 5 | 104-3254 | 1 | Tube |
| 6 | 104-3255 | 2 | Clamp-Miniature |
| 7 | 104-3256 | 1 | Valve-Vent, 15 |
| 8 | 104-3257 | 1 | Magnet |
| 9 | 104-3258 | 1 | Holder-Magnet |
| 10 | 104-3259 | 1 | Seal-Oil |
| 11 | 93-0396 | 1 | Spring |
| 12 | 104-3260 | 1 | Shaft-Bypass |
| 13 | 104-3261 | 1 | Lever-Bypass |
| 14 | 104-3262 | 1 | Ring |
| 15 | 104-3263 | 1 | Plug-Bore |
| 16 | 93-0360 | 1 | Ring |
| 17 | 104-3264 | 1 | Pin |
| 18 | 104-3265 | 1 | Pin |
| 19 | 93-0419 | 2 | Packing |
| 20 | 93-0361 | 1 | Seal |
| 21 | 93-0363 | 14 | Screw-TAP |
| 22 | 104-3266 | 2 | Screw-Tap |


# Mower Lift Assembly

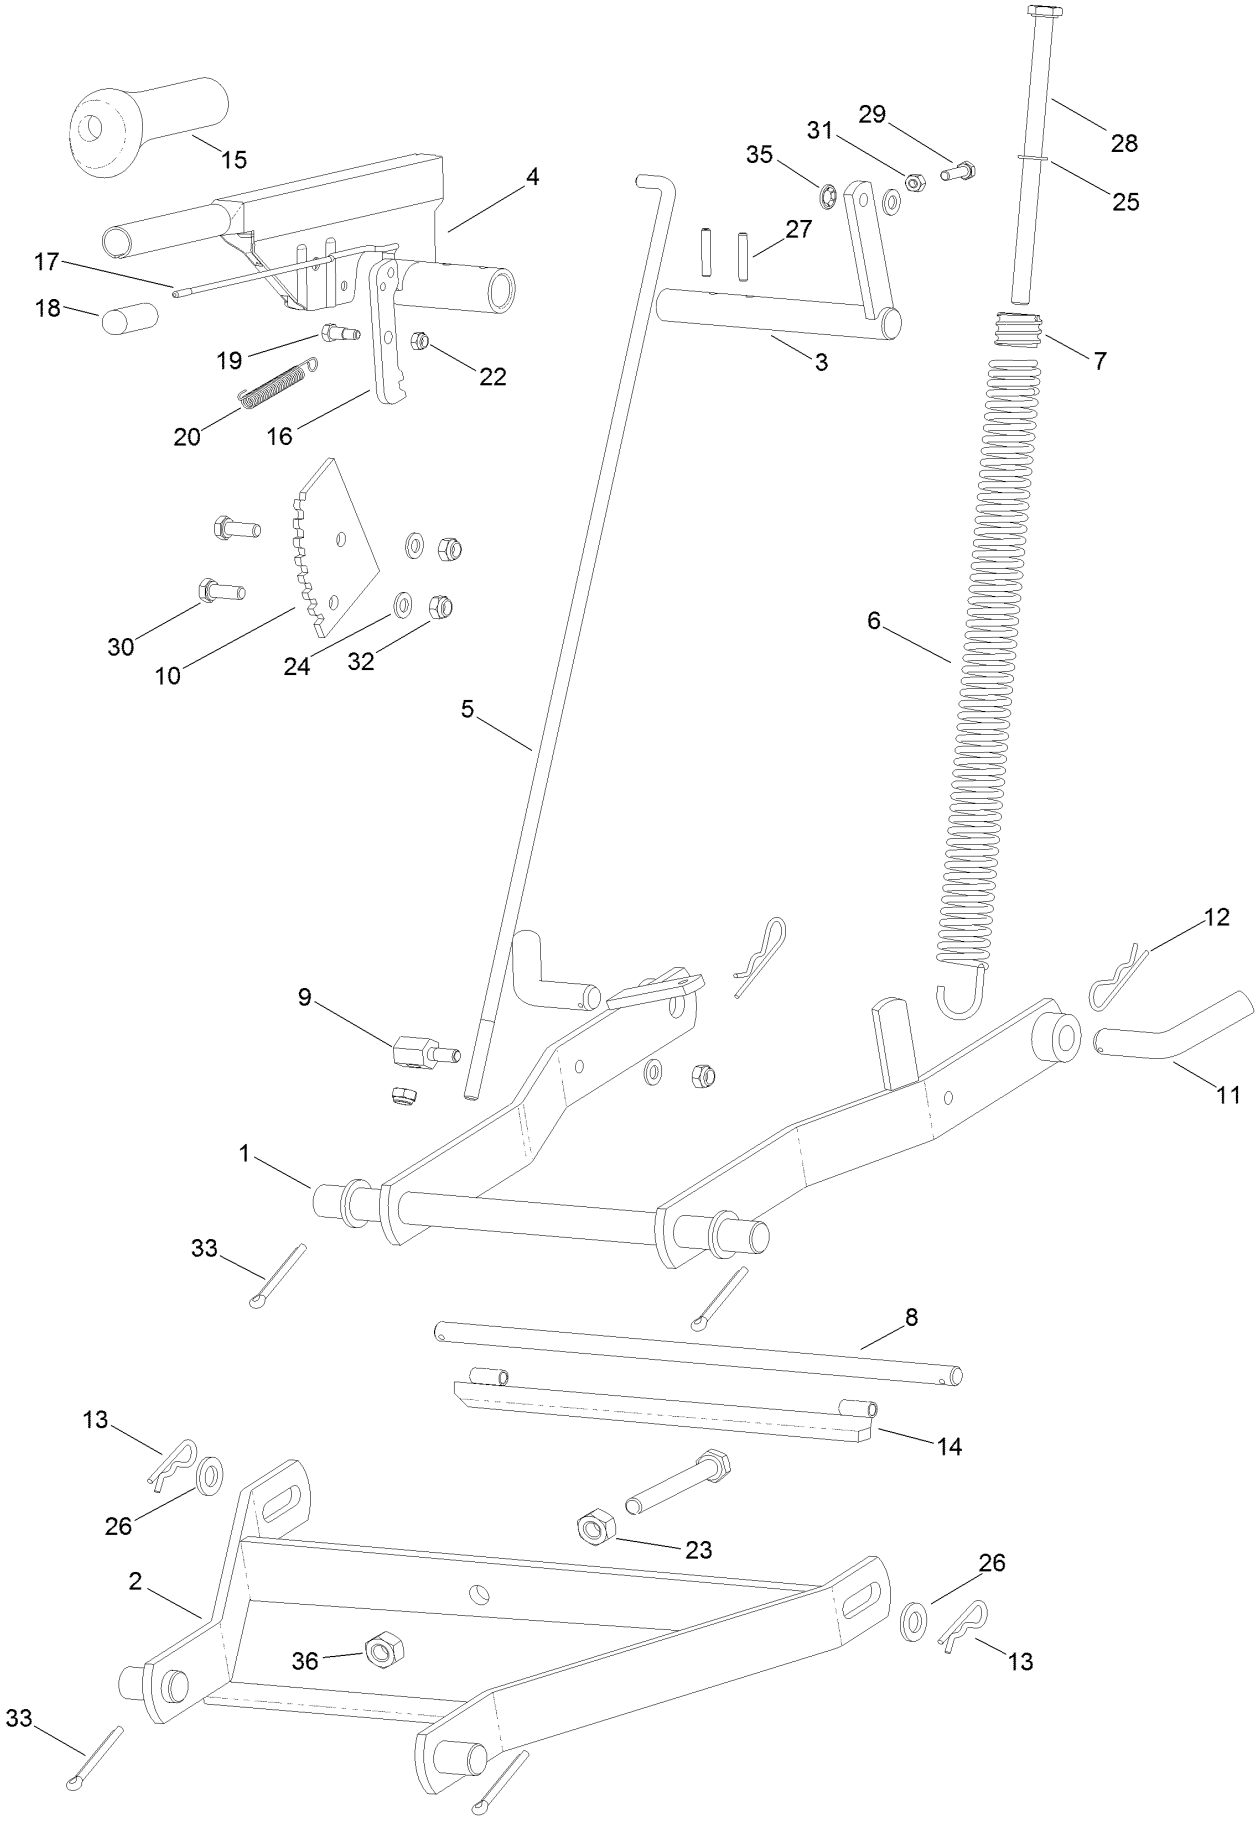

# Mower Lift Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 111-6846 | 1 | Suspension-Deck, Mower |
| 2 | 111-6847 | 1 | Suspension-Mower Deck, Front |
| 3 | 125-2251 | 1 | Shaft-Adjustment, Height |
| 4 | 125-2249 | 1 | Lever-Arm, Height Adjust |
| 5 | 125-2252 | 1 | Rod-Adjustment, Height |
| 6 | 125-2254 | 1 | Spring |
| 7 | 125-2255 | 1 | Nut-Spring |
| 8 | 111-6849 | 1 | Shaft |
| 9 | 119-5407 | 1 | Trunnion |
| 10 | 104-3133 | 1 | Segment-Gear |
| 11 | 120-8757 | 2 | Pin-Bent |
| 12 | 104-3144 | 2 | Pin-Hair |
| 13 | 104-3148 | 2 | Pin-Hair |
| 14 | 111-6848 | 1 | Holder-Front |
| 15 | 104-3129 | 1 | Grip-Handle |
| 16 | 104-3130 | 1 | Ratchet-Plate, Pivot |
| 17 | 104-3132 | 1 | Rod-Connection |
| 18 | 104-3131 | 1 | Button-Plunger |
| 19 | 125-2250 | 1 | Screw-Lever |
| 20 | 104-3134 | 1 | Spring |
| 22 | 33023-00 | 1 | Nut-Lock |
| 23 | 33016-00 | 1 | Nut-Hex |
| 24 | 106-4756 | 3 | Washer-Plain |
| 25 | 108-8709 | 1 | Washer-Flat |
| 26 | 104-3124 | 2 | Washer-Flat |
| 27 | 104-2994 | 2 | Pin-Spring |
| 28 | 125-2253 | 1 | Screw M10X180 |
| 29 | 33113-016 | 1 | Screw-HH |
| 30 | 33114-020 | 2 | Screw-HH |
| 31 | 104-2991 | 1 | Nut-Hex |
| 32 | 33024-00 | 4 | Nut-Lock, NI |
| 33 | 125-2256 | 4 | Pin-Cotter |
| 35 | 121-0963 | 1 | Washer |
| 36 | 48-9540 | 1 | Nut-Lock, Hex NI |

# Cutting Drive System Assembly

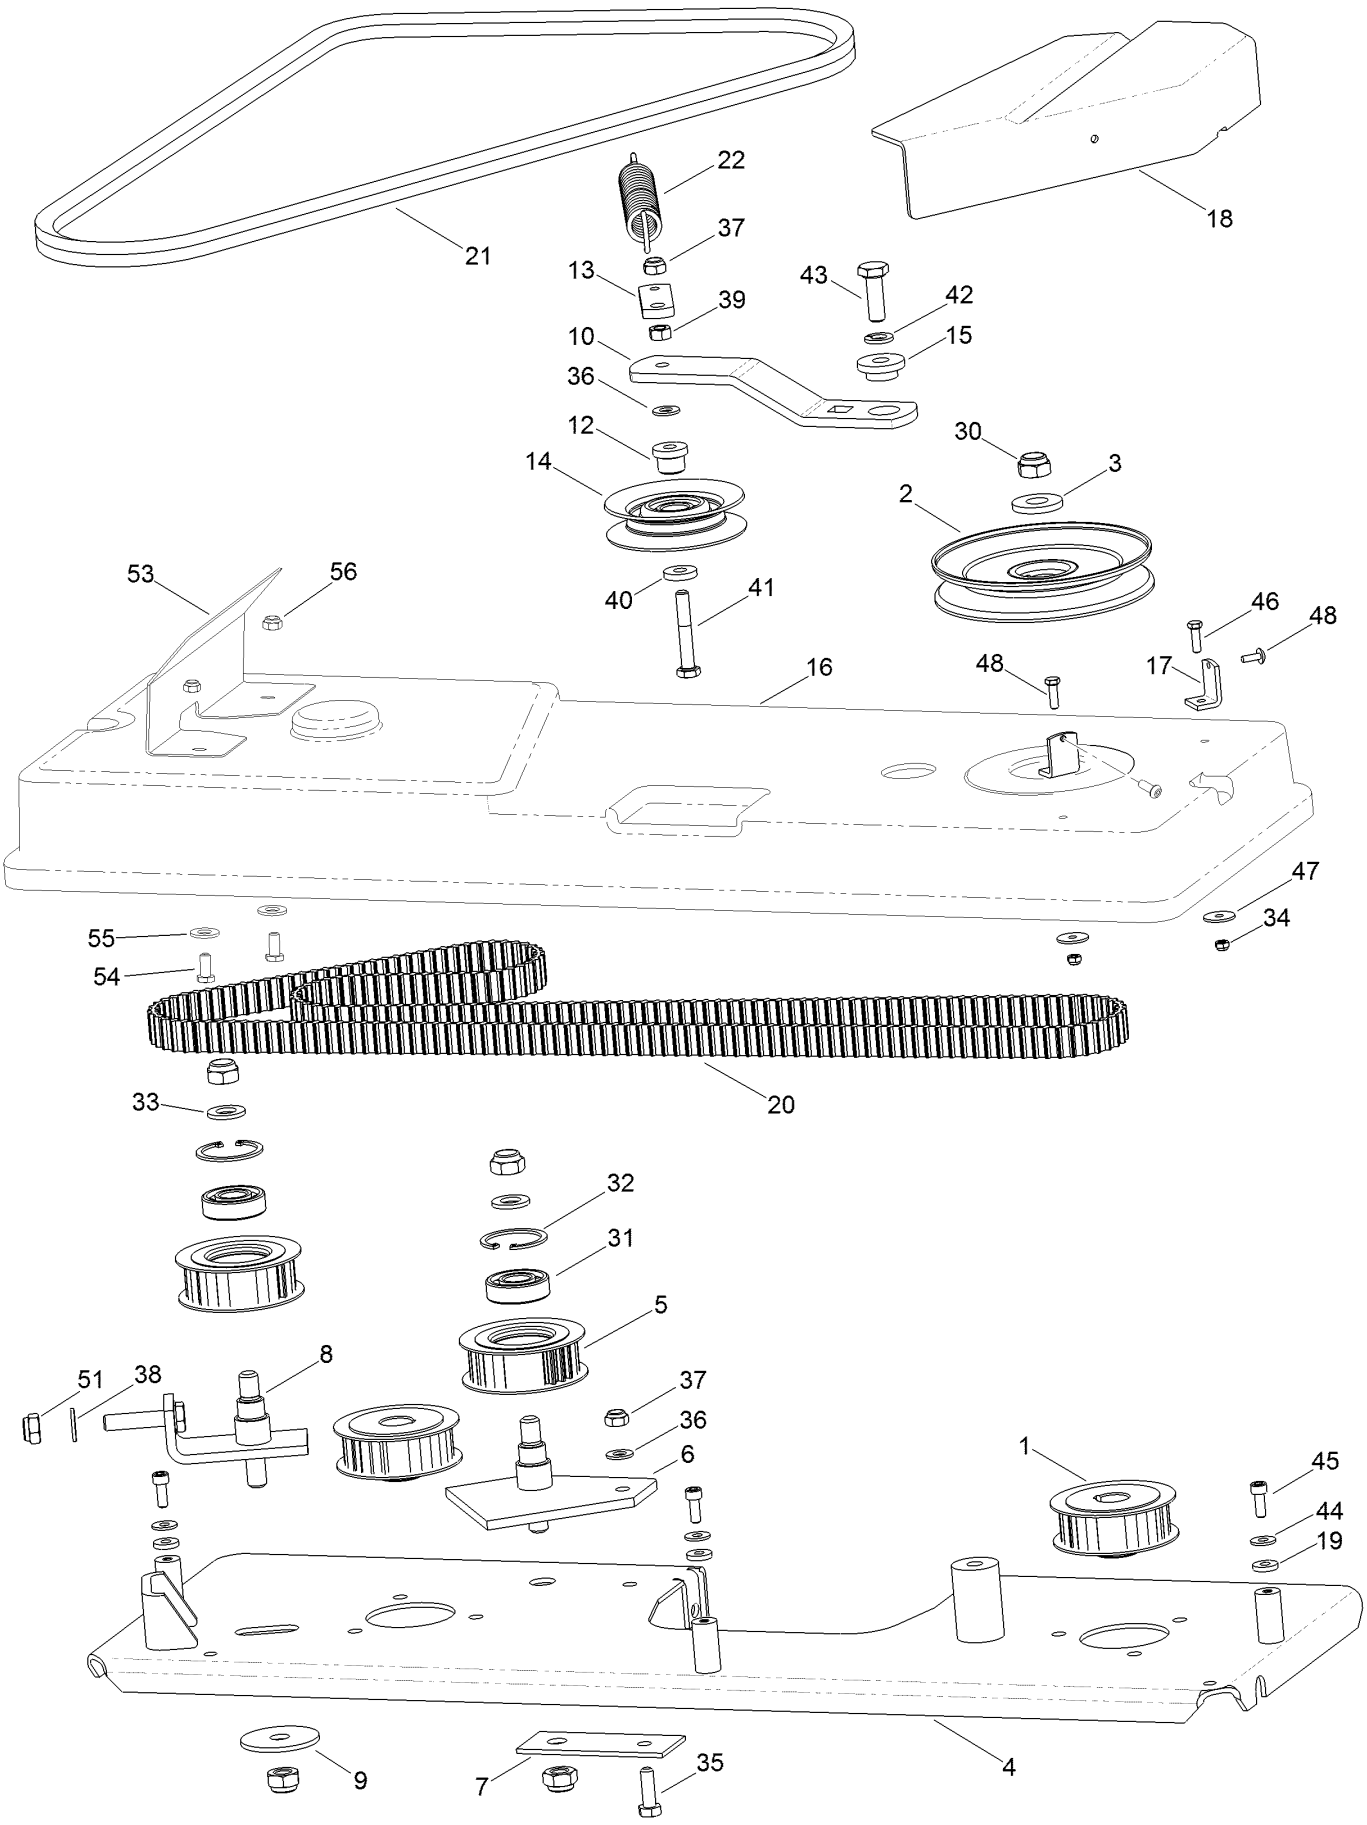


# Cutting Drive System Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-3116 | 2 | Pulley-Cog, Drive |
| 2 | 125-2263 | 1 | Pulley-Drive |
| 3 | 33099-00 | 2 | Washer-Flat |
| 4 | 107-8996 | 1 | Plate-Drive, Blade |
| 5 | 104-3121 | 2 | Pulley-Cog |
| 6 | 125-2264 | 1 | Bracket-Idler |
| 7 | 104-3117 | 1 | Plate-Anchor |
| 8 | 125-2265 | 1 | Bracket-Idler |
| 9 | 103-8892 | 1 | Washer |
| 10 | 125-2266 | 1 | Arm-Idler |
| 12 | 104-3104 | 1 | Bushing |
| 13 | 125-2185 | 1 | Lever-Engagement |
| 14 | 104-3103 | 1 | Pulley-Idler |
| 15 | 125-2268 | 1 | Shim-Arm, Idler |
| 16 | 106-8589 | 1 | Belt-Cover |
| 17 | 107-8940 | 2 | Bracket |
| 18 | 107-8941 | 1 | Guard-Belt |
| 19 | 83-7420 | 3 | Washer-Rubber |
| 20 | 106-8591 | 1 | Belt-Cog |
| 21 | 125-2182 | 1 | Belt |
| 22 | 104-3101 | 1 | Spring |
| 30 | 48-9540 | 6 | Nut-Lock, Hex NI |
| 31 | 100-1048 | 2 | Bearing-Ball |
| 32 | 104-3123 | 2 | Ring-Locking |
| 33 | 104-3124 | 2 | Washer-Flat |
| 34 | 87-5140 | 2 | Nut-Lock |
| 35 | 33114-025 | 1 | Screw-HH |
| 36 | 106-4756 | 2 | Washer-Plain |
| 37 | 33024-00 | 2 | Nut-Lock, NI |
| 38 | 33095-00 | 1 | Washer-Flat |
| 39 | 33014-00 | 1 | Nut-Hex |
| 40 | 106-8588 | 1 | Washer-Flat |
| 41 | 33114-050 | 1 | Screw-HH |
| 42 | 125-2269 | 1 | Washer |
| 43 | 125-2270 | 1 | Screw |
| 44 | 106-8568 | 3 | Washer-Flat |
| 45 | 33113-016 | 3 | Screw-HH |
| 46 | 107-8918 | 2 | Screw |
| 47 | 125-2277 | 2 | Washer |
| 48 | 111-6851 | 2 | Screw |
| 51 | 33023-00 | 1 | Nut-Lock |
| 52 | 111-6850 | 1 | Cutting Unit ASM ● |
| 53 | 111-8303 | 1 | Guard, Belt |
| 54 | 119-5477 | 2 | Screw |
| 55 | 104-2943 | 2 | Washer-Flat |
| 56 | 87-5140 | 2 | Nut-Lock |

● Not illustrated


# Mower Housing Assembly

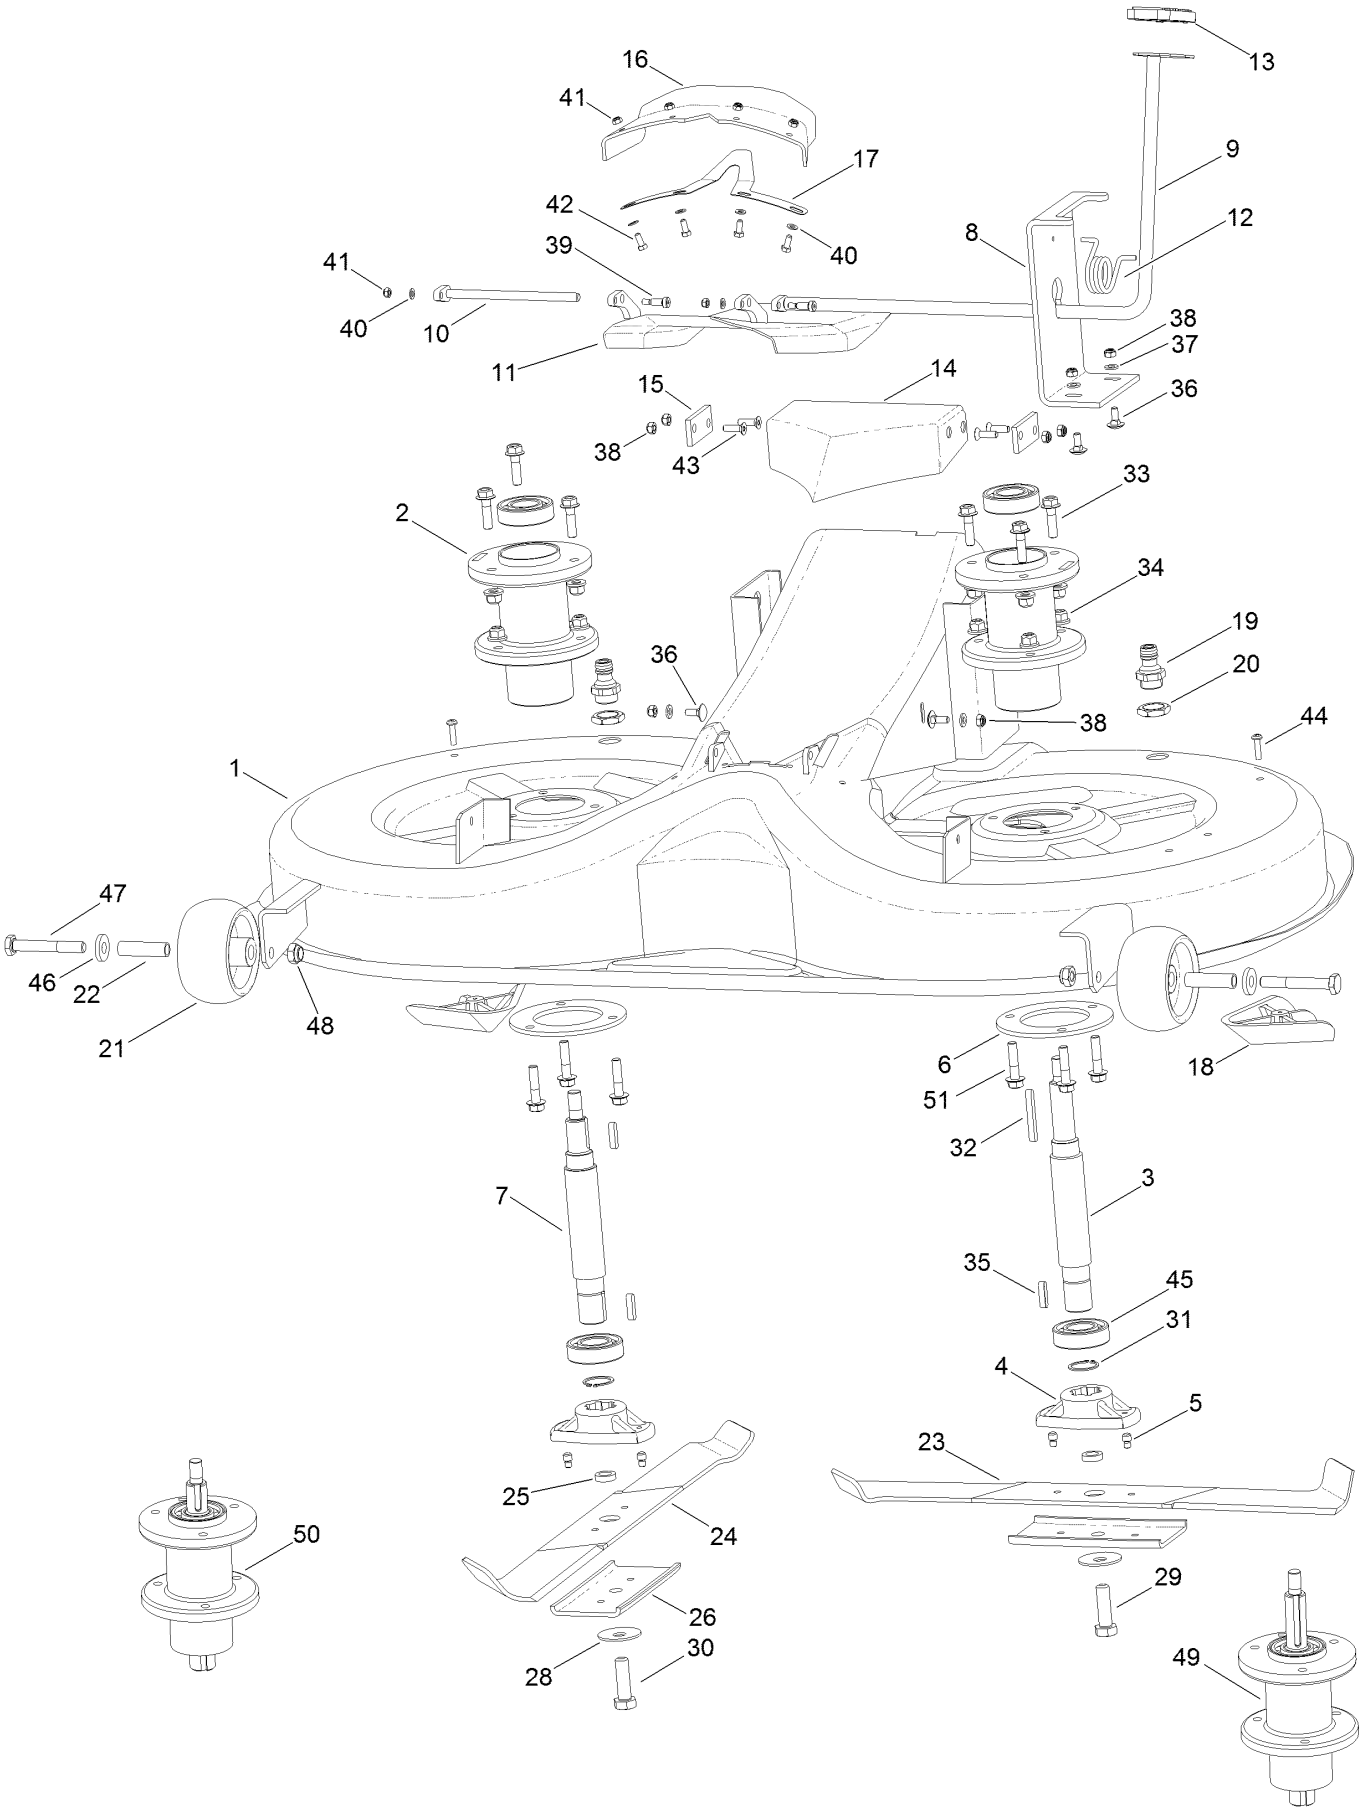

# Mower Housing Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 111-6852 | 1 | Deck ASM With Decals |
| 2 | 107-8992 | 2 | Housing-Spindle |
| 3 | 125-2261 | 1 | Shaft-Blade, Left |
| 4 | 106-4185 | 2 | Adapter-Blade |
| 5 | 104-3093 | 4 | Pin-Shear, Grooved |
| 6 | 104-3084 | 2 | Support-Ring |
| 7 | 106-8566 | 1 | Shaft-Blade, Right |
| 8 | 125-2271 | 1 | Holder |
| 9 | 125-2272 | 1 | Lever-Foot |
| 10 | 106-8585 | 1 | Rod-Door, Mulch |
| 11 | 107-8968 | 1 | Door-Mulch |
| 12 | 125-2273 | 1 | Spring |
| 13 | 104-3018 | 1 | Pad-Pedal |
| 14 | 106-8573 | 1 | Baffle-Center |
| 15 | 106-8572 | 2 | Plate-Baffle, Center |
| 16 | 106-8586 | 1 | Gasket-Door, Mulch |
| 17 | 106-8567 | 1 | Guide |
| 18 | 106-8587 | 2 | Kicker |
| 19 | 125-2274 | 2 | Connection |
| 20 | 125-2275 | 2 | Nut |
| 21 | 125-2186 | 2 | Wheel-Gauge |
| 22 | 131-2703 | 2 | Spacer |
| 23 | 106-8558 | 1 | Blade-LH |
| 24 | 106-8557 | 1 | Blade-RH |
| 25 | 106-6530 | 2 | Spacer |
| 26 | 106-6533 | 2 | Stiffener-Blade |
| 28 | 106-6532 | 2 | Washer-Blade |
| 29 | 106-5797 | 1 | Bolt-HH |
| 30 | 106-5798 | 1 | Bolt-Blade, HH |
| 31 | 104-3095 | 2 | Ring-Locking |
| 32 | 125-2262 | 1 | Key |
| 33 | 33104-030 | 6 | Screw-HHF |
| 34 | 104-3082 | 12 | Nut-Lock, HHF |
| 35 | 104-3097 | 3 | Key-Square |
| 36 | 33123-016 | 4 | Screw-CARR |
| 37 | 104-3193 | 4 | Washer |
| 38 | 33023-00 | 8 | Nut-Lock |
| 39 | 87-5150 | 2 | Bolt |
| 40 | 52-6430 | 6 | Washer |
| 41 | 87-5140 | 6 | Nut-Lock |
| 42 | 119-5477 | 4 | Screw |
| 43 | 106-8574 | 4 | Screw |
| 44 | 104-1451 | 2 | Screw-TAP, PPH |
| 45 | 116-0720 | 4 | Bearing-Ball |
| 46 | 108-8709 | 2 | Washer-Flat |
| 47 | 33115-070 | 2 | Screw-HH |
| 48 | 33025-00 | 2 | Nut-Lock, NI |
| 49 | 125-2259 | 1 | LH Spindle Housing ASM |
| 50 | 125-2260 | 1 | RH Spindle Housing ASM |
| 51 | 104-3085 | 6 | Bolt-HHF |


# Travel Pedals and Brake Assembly

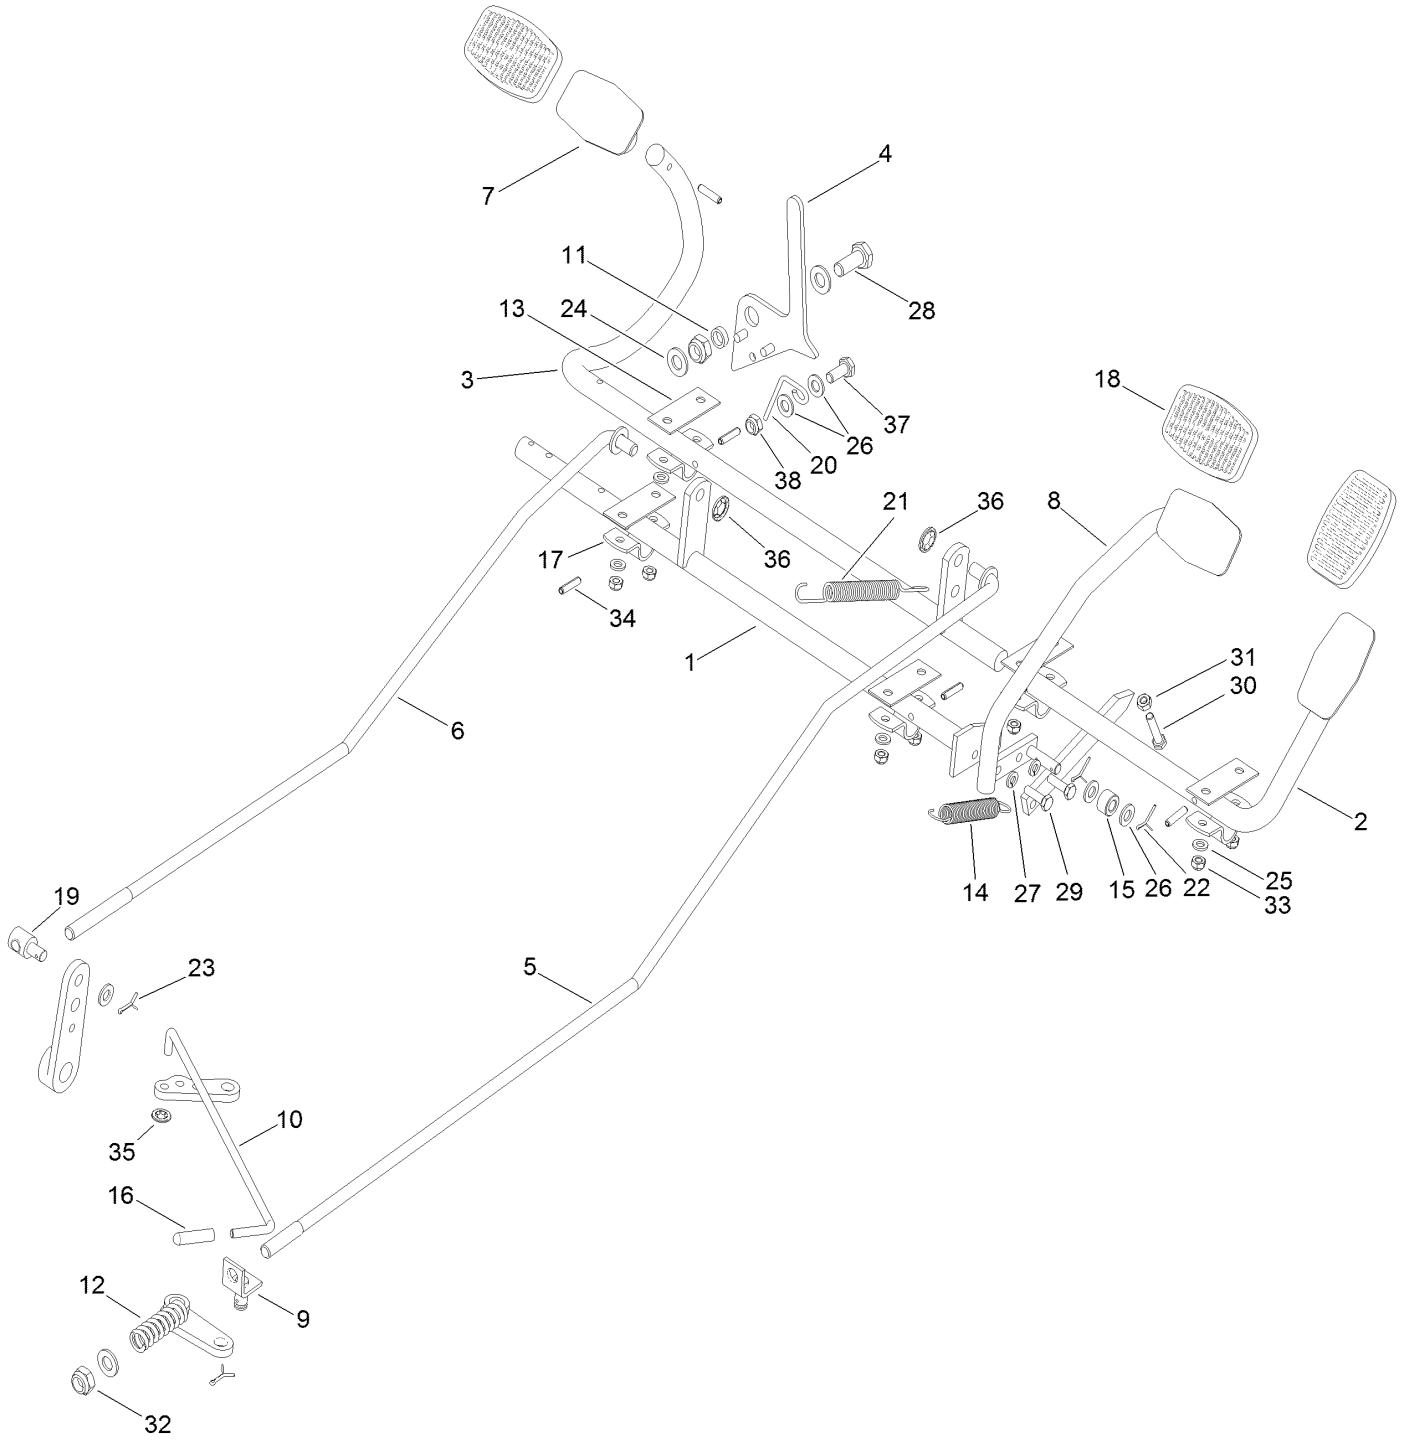

# Travel Pedals and Brake Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 125-2278 | 1 | Shaft-Diagonal |
| 2 | 125-2279 | 1 | Pedal-Travel, Rear |
| 3 | 125-2280 | 1 | Pedal-Brake |
| 4 | 125-2282 | 1 | Lever-Brake, Hand |
| 5 | 125-2287 | 1 | Rod-Connecting, Brake |
| 6 | 125-2286 | 1 | Rod-Tie |
| 7 | 120-8763 | 1 | Pedal |
| 8 | 120-8723 | 1 | Pedal-Travel, Forward |
| 9 | 104-3011 | 1 | Bracket-Rod, Brake |
| 10 | 125-2284 | 1 | Rod-Lever, Bypass |
| 11 | 125-2283 | 1 | Spacer |
| 12 | 125-2288 | 1 | Spring-Brake |
| 13 | 119-2434 | 5 | Spacer |
| 14 | 119-2436 | 1 | Spring |
| 15 | 106-8581 | 1 | Roller |
| 16 | 108-8708 | 1 | Cap-Bypass Lever, Hydro |
| 17 | 119-2433 | 5 | Clamp |
| 18 | 104-3018 | 3 | Pad-Pedal |
| 19 | 104-3029 | 1 | Pin |
| 20 | 111-8243 | 1 | Spring-Lever |
| 21 | 104-3001 | 1 | Spring |
| 22 | 104-3151 | 2 | Pin-Cotter |
| 23 | 104-3027 | 2 | Pin-Cotter |
| 24 | 33095-00 | 4 | Washer-Flat |
| 25 | 104-3193 | 10 | Washer |
| 26 | 106-4756 | 4 | Washer-Plain |
| 27 | 104-3186 | 2 | Washer-Spring |
| 28 | 104-3041 | 1 | Screw-Hex |
| 29 | 33113-016 | 2 | Screw-HH |
| 30 | 33113-030 | 1 | Screw-HH |
| 31 | 104-2991 | 1 | Nut-Hex |
| 32 | 33025-00 | 1 | Nut-Lock, NI |
| 33 | 33023-00 | 10 | Nut-Lock |
| 34 | 104-3008 | 5 | Pin-Spring |
| 35 | 125-2285 | 1 | Ring-Locking |
| 36 | 125-2281 | 2 | Ring-Locking |
| 37 | 33114-020 | 1 | Screw-HH |
| 38 | 33024-00 | 1 | Nut-Lock, NI |


# Battery and Electrical Assembly

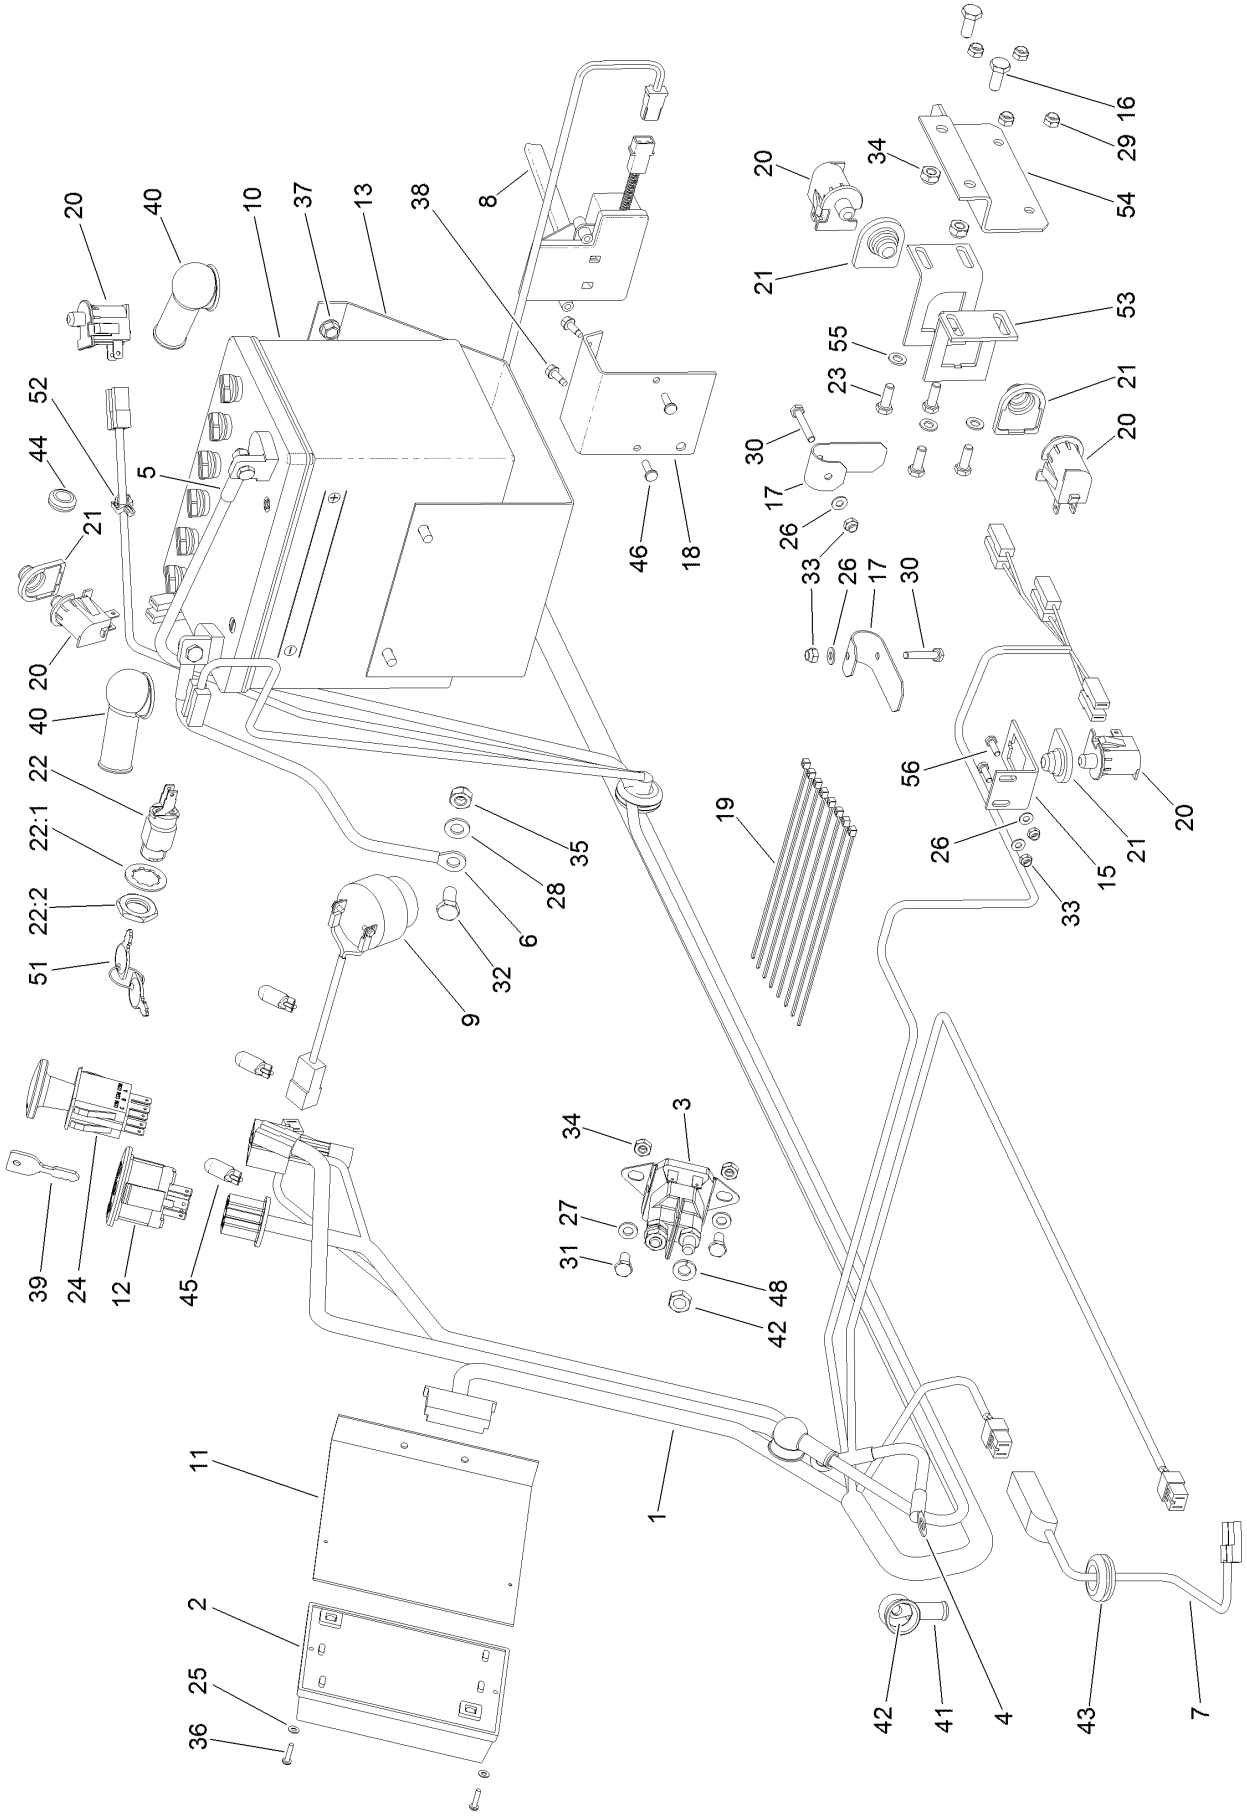

# Battery and Electrical Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 111-8251 | 1 | Harness-Wiring |
| 2 | 111-8248 | 1 | Control Module |
| 3 | 740207 | 1 | Solenoid |
| 4 | 125-2300 | 1 | Cable-Starter |
| 5 | 120-8729 | 1 | Cable-Battery, Positive |
| 6 | 119-5417 | 1 | Cable-Battery, Negative |
| 7 | 119-5430 | 1 | Harness-Clutch |
| 8 | 104-3074 | 1 | Overload Switch ASM |
| 9 | 119-5511 | 1 | Buzzer |
| 10 | 104-3152 | 1 | Battery-12V |
| 11 | 125-2293 | 1 | Holder-Module |
| 12 | 125-2295 | 1 | Switch-Ignition |
| 13 | 125-2290 | 1 | Holder-Battery |
| 15 | 125-2291 | 1 | Holder |
| 16 | 111-8254 | 2 | Screw |
| 17 | 125-2305 | 2 | Lever-Spring |
| 18 | 119-5431 | 1 | Bracket-Switch |
| 19 | 3334-945 | 8 | Tie-Cable |
| 20 | 104-3179 | 5 | Switch-Delta |
| 21 | 104-3178 | 4 | Cover-Protective |
| 22 | 46-5780 | 1 | Starter Switch ASM |
| 22:1 | 3254-5 | 1 | Washer-Tooth, Internal |
| 22:2 | 218-461 | 1 | Nut-HH |
| 23 | 111-8253 | 4 | Screw |
| 24 | 103-5221 | 1 | Switch-PTO |
| 25 | 119-5437 | 2 | Washer |
| 26 | 104-2984 | 4 | Washer |
| 27 | 104-3193 | 2 | Washer |
| 28 | 33094-00 | 1 | Washer-Plain |
| 29 | 87-5140 | 4 | Nut-Lock |
| 30 | 104-3009 | 2 | Screw-Hex |
| 31 | 33113-012 | 2 | Screw-HH |
| 32 | 33114-016 | 1 | Screw-HH |
| 33 | 104-2985 | 4 | Nut-Hex |
| 34 | 33023-00 | 4 | Nut-Lock |
| 35 | 33024-00 | 1 | Nut-Lock, NI |
| 36 | 119-5436 | 2 | Screw |
| 37 | 106-5763 | 4 | Screw |
| 38 | 104-2977 | 2 | Screw-TAP |
| 39 | 119-5510 | 2 | Key-Ignition |
| 40 | 104-3154 | 2 | Boot-Rubber |
| 41 | 104-3187 | 2 | Boot-Rubber |
| 42 | 32128-32 | 5 | Nut-HHF |
| 43 | 125-2302 | 3 | Bushing |
| 44 | 125-2303 | 1 | Bushing |
| 45 | 104-3176 | 4 | Bulb |
| 46 | 104-3349 | 2 | Screw |
| 48 | 104-2927 | 2 | Washer-Spring |
| 51 | 62-7770 | 2 | Key-Ignition |
| 52 | 104-3157 | 1 | Clip-Snap |
| 53 | 111-8247 | 2 | Holder-Switch |
| 54 | 111-8252 | 1 | Holder-Switch |
| 55 | 52-6430 | 4 | Washer |
| 56 | 125-2304 | 2 | Screw |


# Body and Hood Assembly

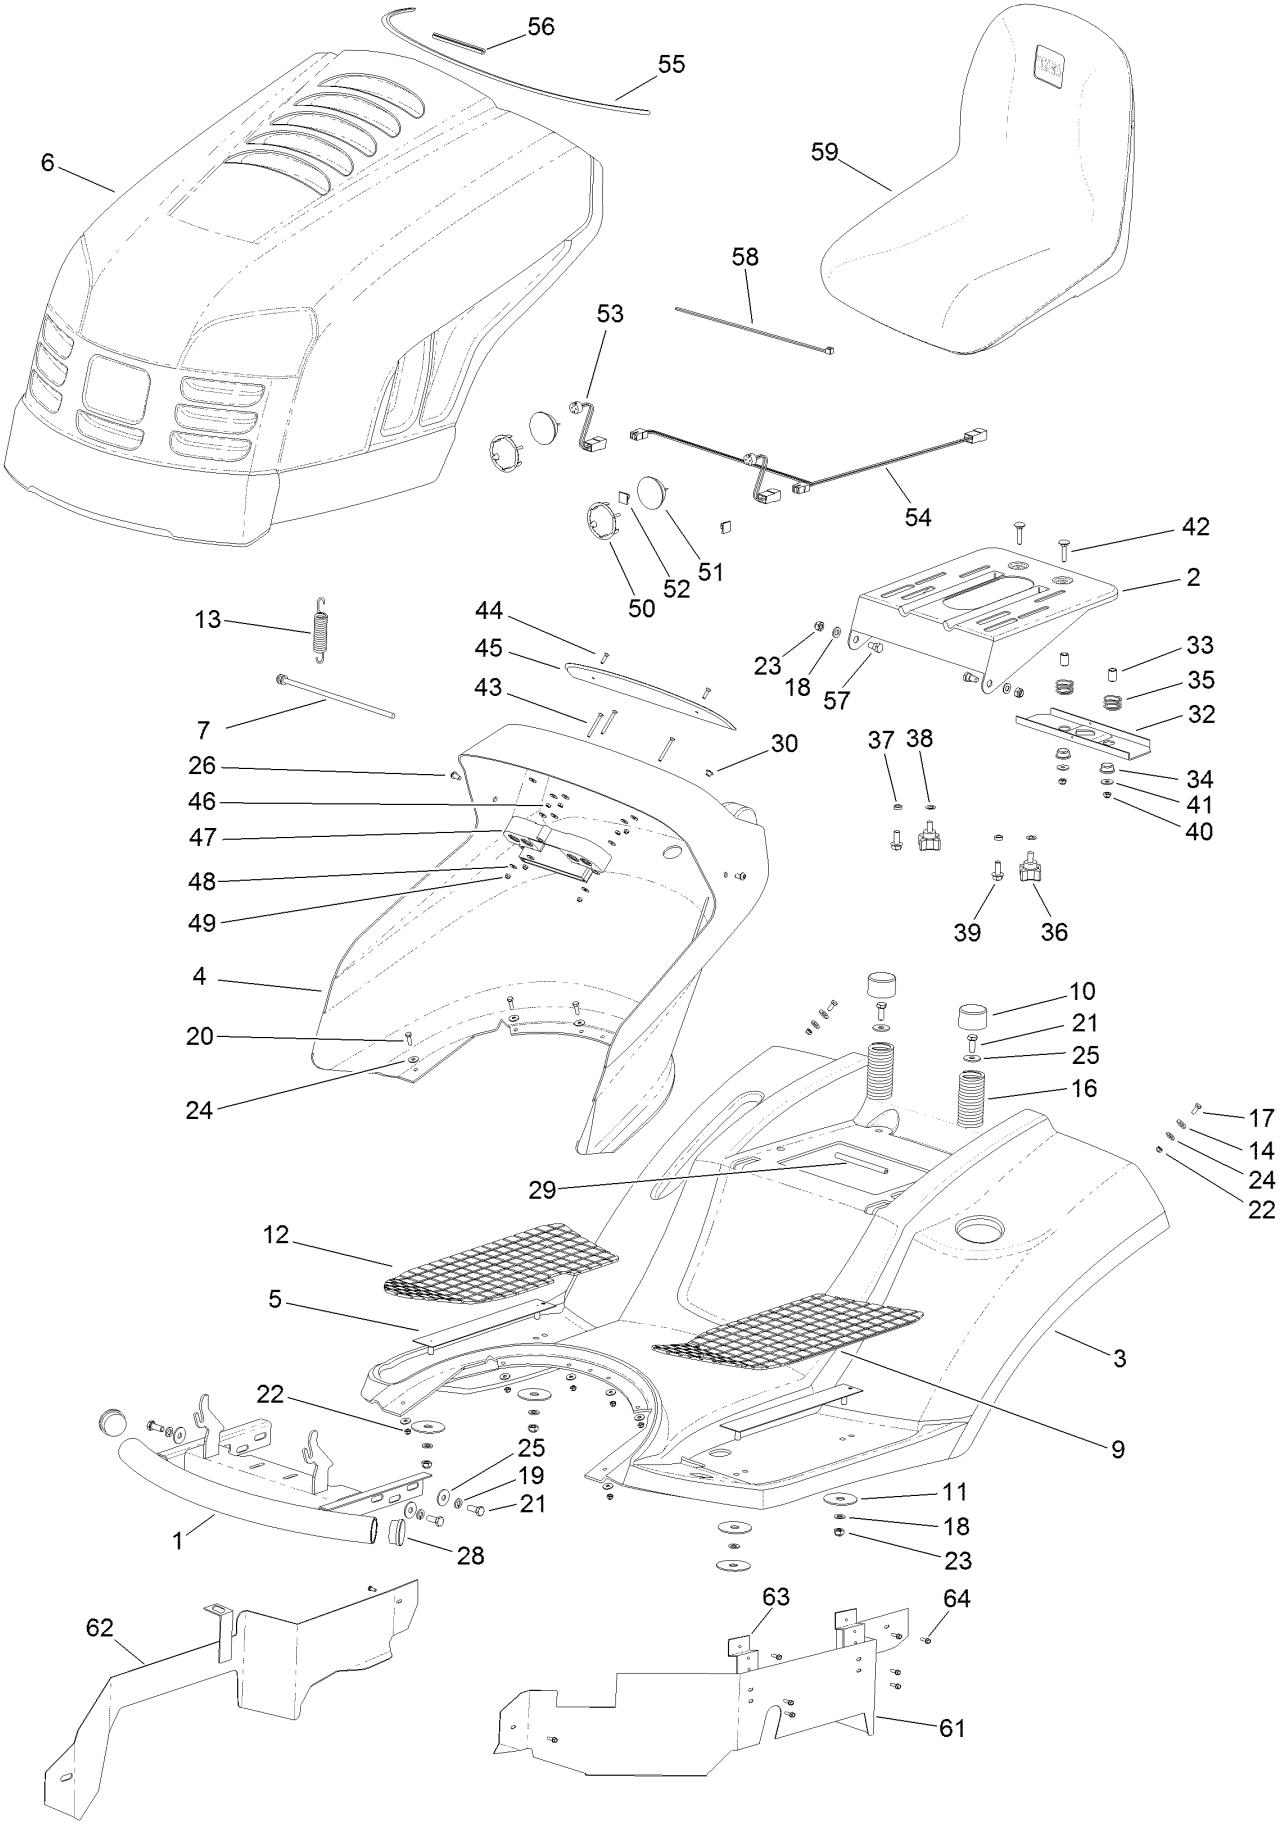

# Body and Hood Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 125-2320 | 1 | Bumper |
| 2 | 119-5513 | 1 | Bracket-Support, Seat |
| 3 | 125-2306 | 1 | Fender-Rear |
| 4 | 125-2307 | 1 | Panel-Dash |
| 5 | 125-2321 | 2 | Holder |
| 6 | 125-2316 | 1 | Hood ASM |
| 7 | 125-2324 | 1 | Holder-Spring |
| 9 | 125-2322 | 1 | Mat-Foot, LH |
| 10 | 104-2857 | 2 | Cap-Hub |
| 11 | 119-5500 | 4 | Washer-Rubber |
| 12 | 120-8745 | 1 | Mat-Foot, RH |
| 13 | 104-2975 | 1 | Spring-Hood |
| 14 | 104-2952 | 2 | Washer-Rubber |
| 16 | 104-2945 | 2 | Spring-Seat |
| 17 | 104-2980 | 2 | Screw |
| 18 | 33094-00 | 6 | Washer-Plain |
| 19 | 104-2927 | 4 | Washer-Spring |
| 20 | 107-8918 | 6 | Screw |
| 21 | 33114-020 | 6 | Screw-HH |
| 22 | 87-5140 | 8 | Nut-Lock |
| 23 | 33024-00 | 6 | Nut-Lock, NI |
| 24 | 104-2943 | 14 | Washer-Flat |
| 25 | 104-2946 | 6 | Washer-Plain |
| 26 | 33113-012 | 2 | Screw-HH |
| 28 | 125-2323 | 2 | Cover |
| 29 | 125-2313 | 1 | Trim-Rubber |
| 30 | 125-2187 | 1 | Cover |
| 32 | 104-2934 | 1 | Bracket |
| 33 | 104-2933 | 2 | Spacer-Split |
| 34 | 104-2935 | 2 | Bushing |
| 35 | 119-5514 | 2 | Seat-Spring |
| 36 | 119-5456 | 2 | Knob-Adjust |
| 37 | 119-5457 | 2 | Spacer |
| 38 | 104-2936 | 2 | Washer-Spring |
| 39 | 104-2939 | 2 | Screw-Support, Seat |
| 40 | 33023-00 | 2 | Nut-Lock |
| 41 | 104-2931 | 2 | Washer-Flat |
| 42 | 33123-030 | 2 | Screw-CARR |
| 43 | 104-3191 | 3 | Screw |
| 44 | 125-2310 | 2 | Screw |
| 45 | 125-2308 | 1 | Lens-Dash |
| 46 | 125-2309 | 3 | Nut |
| 47 | 92-6732 | 1 | Housing-Light, Indicator |
| 48 | 104-3175 | 11 | Washer |
| 49 | 104-2985 | 5 | Nut-Hex |
| 50 | 125-2319 | 2 | Socket-Lamp |
| 51 | 125-2318 | 2 | Bulb-Light |
| 52 | 104-3167 | 2 | Clip-Nylon |
| 53 | 125-2314 | 2 | Harness-Wiring, Light Bulb |
| 54 | 125-2315 | 1 | Harness-Wiring, Light |
| 55 | 125-2194 | 1 | Trim-Rubber, Hood |
| 56 | 125-2311 | 1 | Gasket-Foam |
| 57 | 104-2939 | 2 | Screw-Support, Seat |
| 58 | 3334-945 | 1 | Tie-Cable |
| 59 | 107-2214 | 1 | Seat ASM |
| 61 | 111-8297 | 1 | Cover,-Left |
| 62 | 111-8298 | 1 | Cover-Right |
| 63 | 111-8299 | 2 | Holder |
| 64 | 104-2977 | 9 | Screw-TAP |


# Grass Collector Assembly No. 125-2325

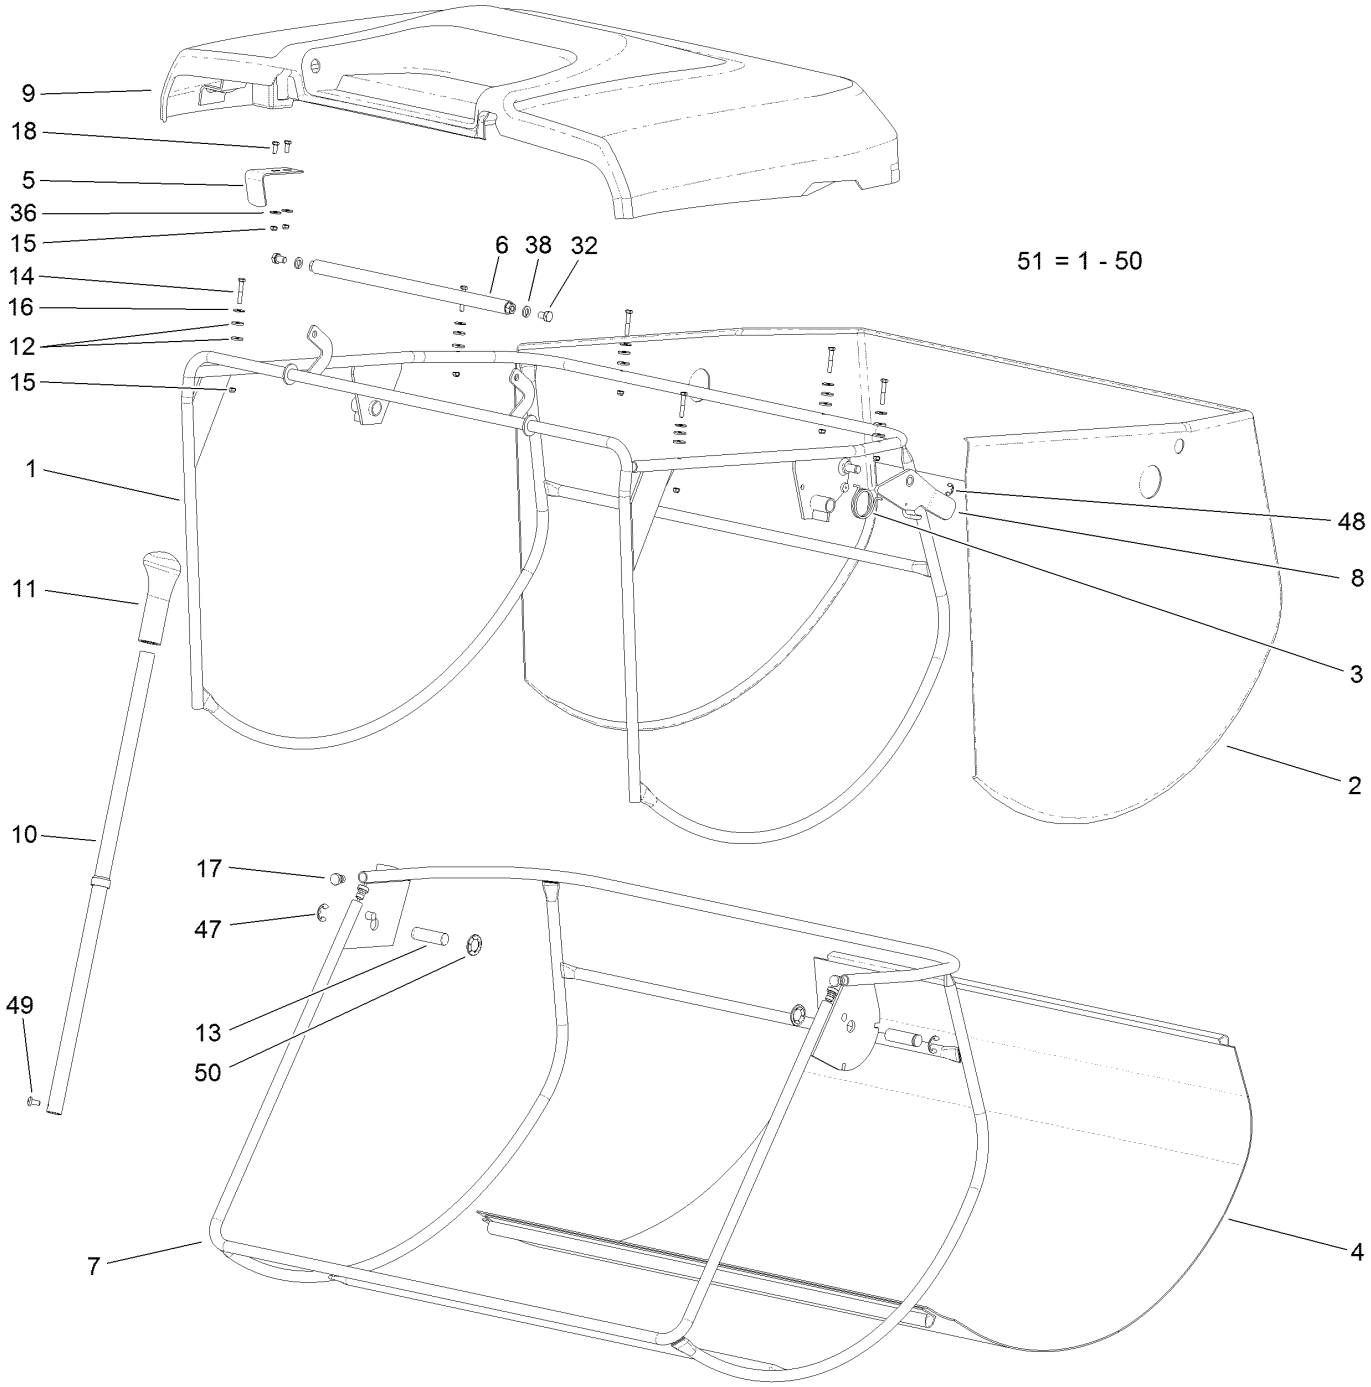

# Grass Collector Assembly No. 125-2325 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 125-2326 | 1 | Frame ASM |
| 2 | 125-2328 | 1 | Bag-Grass, Upper |
| 3 | 125-2331 | 1 | Spring |
| 4 | 125-2332 | 1 | Bag-Grass, Lower |
| 5 | 125-2334 | 1 | Spring-Coil, Interlock Switch |
| 6 | 125-2327 | 1 | Handle-Lift |
| 7 | 125-2329 | 1 | Lower Frame ASM |
| 8 | 125-2330 | 1 | Lever-Arrestment |
| 9 | 125-2333 | 1 | Cover-Collector |
| 10 | 125-2335 | 1 | Lever-Dump |
| 11 | 120-8737 | 1 | Handle-Mulching |
| 12 | 104-2943 | 6 | Washer-Flat |
| 13 | 119-5469 | 1 | Pin |
| 14 | 106-5759 | 6 | Screw |
| 15 | 87-5140 | 8 | Nut-Lock |
| 16 | 104-2952 | 12 | Washer-Rubber |
| 17 | 119-5475 | 4 | Cap |
| 18 | 107-8918 | 2 | Screw |
| 32 | 68-9410 | 2 | Screw-HHF |
| 36 | 52-6430 | 2 | Washer |
| 38 | 104-2927 | 2 | Washer-Spring |
| 47 | 104-3015 | 2 | E-Clip |
| 48 | 106-8592 | 1 | Ring-Locking |
| 49 | 106-5763 | 1 | Screw |
| 50 | 119-5478 | 1 | Ring-Lock |
| 51 | 125-2325 | 1 | Grass Collector ASM |


# Tunnel and Collector Plate Assembly

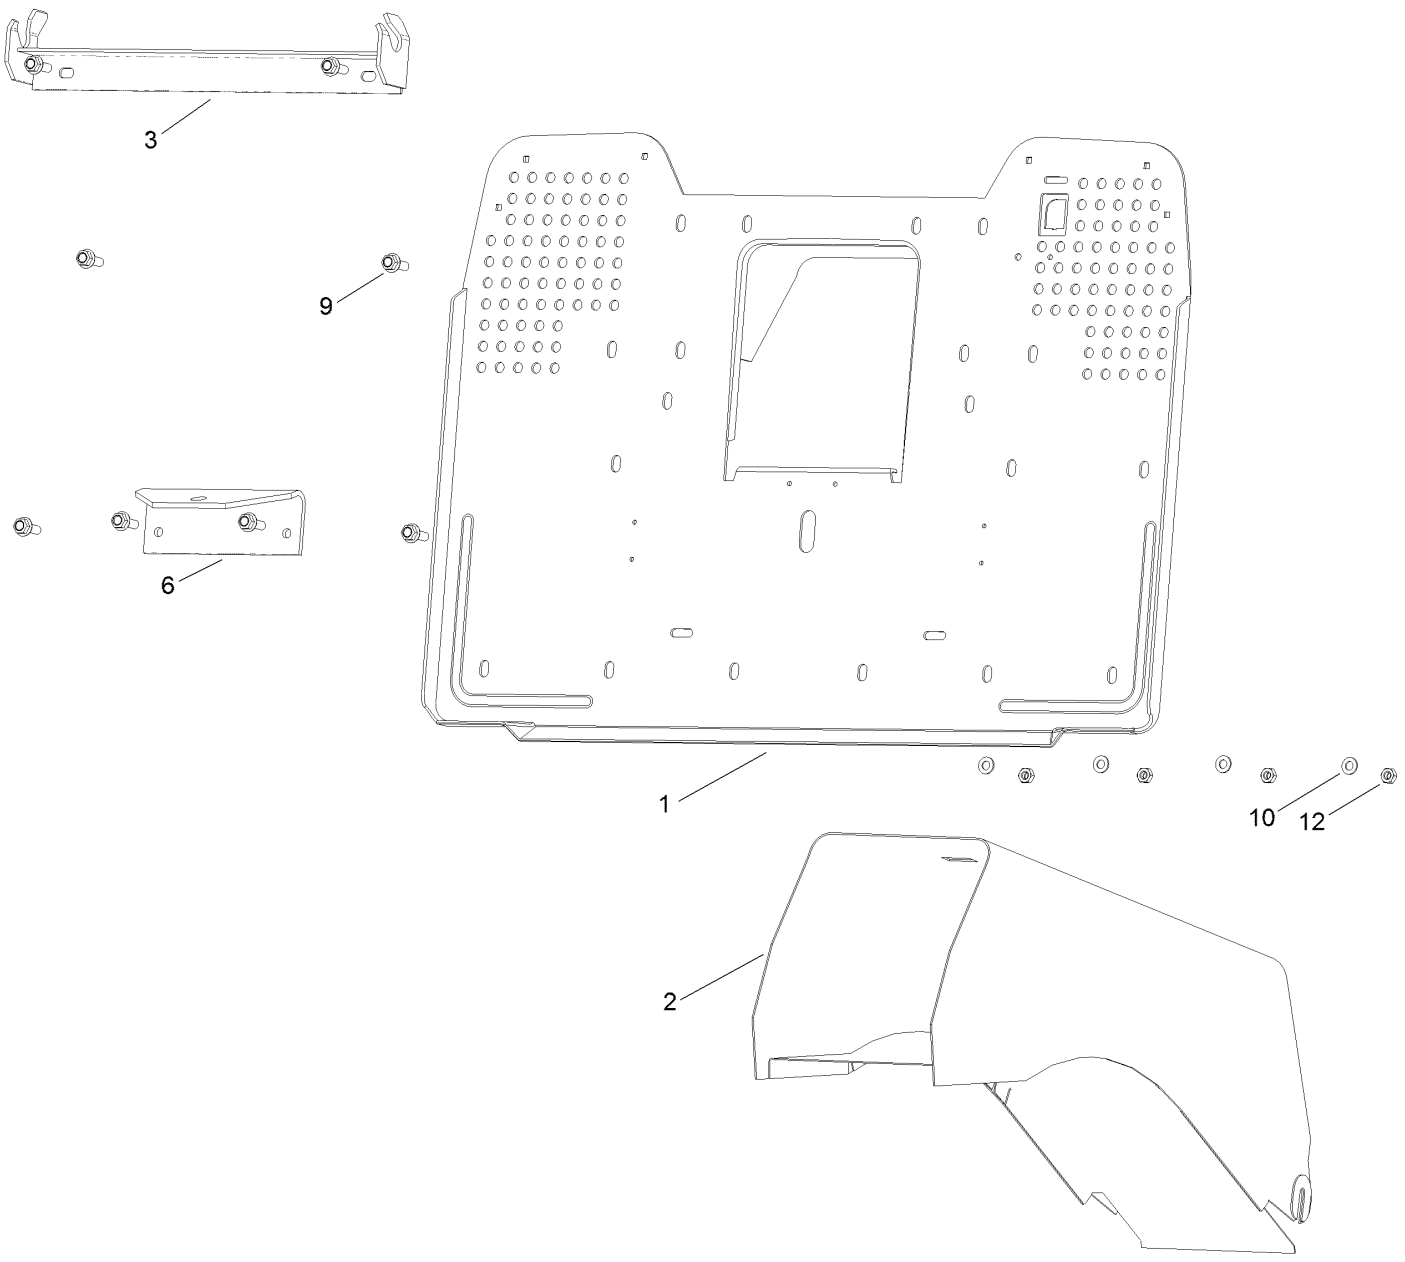


# Tunnel and Collector Plate Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 125-2336 | 1 | Collector Plate ASM |
| 2 | 120-8767 | 1 | Tunnel |
| 3 | 125-2337 | 1 | Support-Collector |
| 6 | 119-5516 | 1 | Hitch-Tow |
| 9 | 119-5483 | 8 | Screw |
| 10 | 33094-00 | 4 | Washer-Plain |
| 12 | 33024-00 | 4 | Nut-Lock, NI |

# Decal Assembly



1



2




3




4


5



7



8



9

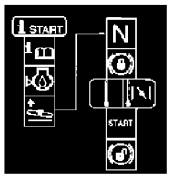



11


12



13

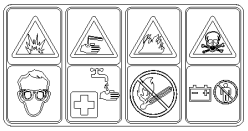
16


19



25


26



28



35




36


39

# Decal Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 111-5606 | 1 | Decal-Hood, Left |
| 2 | 111-5607 | 1 | Decal-Hood, Right |
| 3 | 117-0871 | 1 | Decal |
| 4 | 111-5942 | 1 | Decal-HOC |
| 5 | 111-5953 | 1 | Decal-HOC |
| 7 | 111-5631 | 1 | Decal-Dash, Dh210 |
| 8 | 107-4906 | 1 | Decal-Engine |
| 9 | 111-8217 | 1 | Decal-Warning, Hood |
| 11 | 119-5517 | 1 | Decal-Instructions, Operating |
| 12 | 119-2725 | 1 | Decal-Danger |
| 13 | 104-3237 | 1 | Decal-Brake, Parking |
| 16 | 93-7276 | 2 | Decal-Danger |
| 19 | 125-2345 | 1 | Decal-Bypass |
| 25 | 99-5340 | 1 | Decal-Switch |
| 26 | 119-2730 | 1 | Decal-Danger |
| 28 | 119-2726 | 2 | Decal-Danger |
| 35 | 119-2727 | 1 | Decal-Recycler |
| 36 | 106-8552 | 2 | Decal-Operation |
| 39 | 111-5941 | 2 | Decal-Warning |

# Frame Assembly

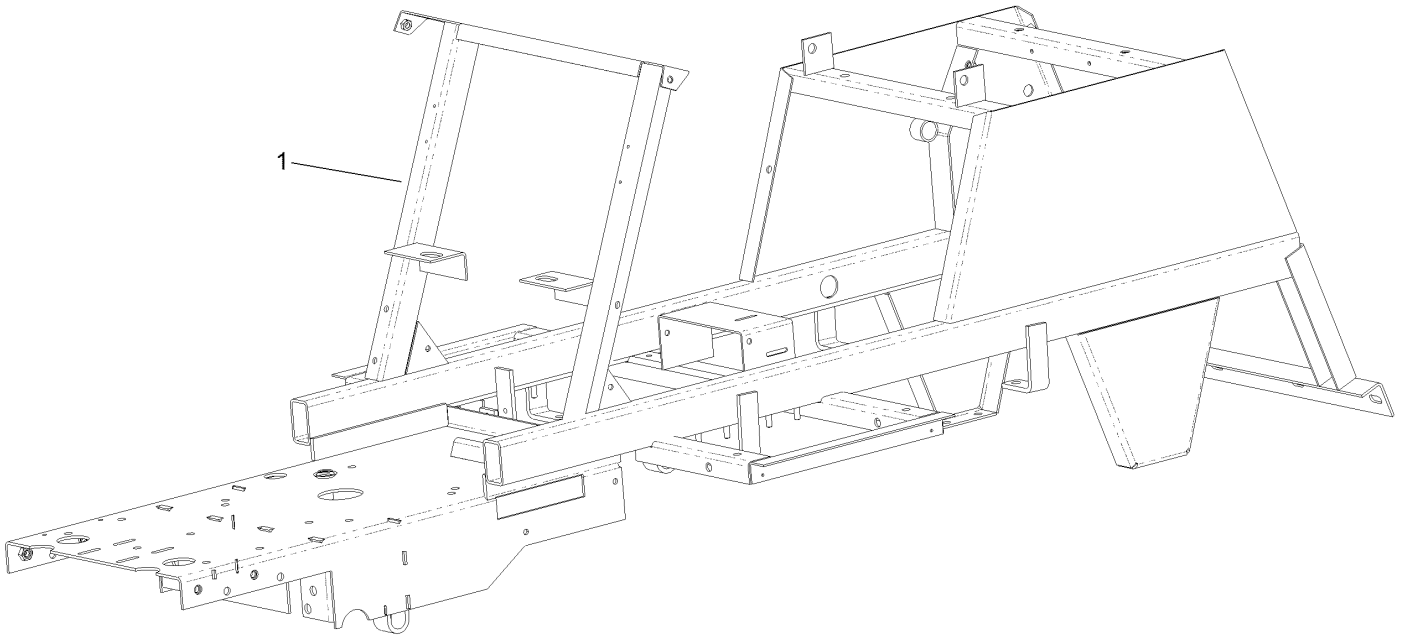

# Frame Assembly (continued)

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 125-2200 | 1 | Chassis-Frame |

# Attachments and Accessories

## For 74585 DH 210 Lawn Tractor

| Product Name | Model/Part |
|---|---|
| Rear Discharge Chute Kit | 117-0054 |
| Hourmeter Kit | 125-2346 |

## Notes:




**Count on it.**