Form No. 3393-332 Rev A

TORO®

Count on it.

Operator's Manual

5, 8, and 11-Blade 27-inch and 8-Blade 32-inch DPA Cutting Unit

Reelmaster® 3100-D Series Traction Unit

Model No. 03180—Serial No. 315000001 and Up
Model No. 03181—Serial No. 315000001 and Up
Model No. 03182—Serial No. 315000001 and Up
Model No. 03183—Serial No. 315000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3393-332 A

This reel-blade lawnmower is mounted to a ride-on machine and is intended to be used by professional, hired operators in commercial applications. It is primarily designed for cutting grass on well-maintained lawns in parks, golf courses, sports fields, and on commercial grounds. It is not designed for cutting brush, mowing grass and other growth alongside highways, or for agricultural uses.

⚠ WARNING

CALIFORNIA
Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

This product complies with all relevant European directives. For details, please see the Declaration of Incorporation (DOI) at the back of this publication.

Introduction

Read this information carefully to learn how to operate and maintain your product properly and to avoid injury and product damage. You are responsible for operating the product properly and safely.

You may contact Toro directly at www.Toro.com for product safety and operation training materials, accessory information, help finding a dealer, or to register your product.

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. Figure 1 identifies the location of the model and serial numbers on the product. Write the numbers in the space provided.

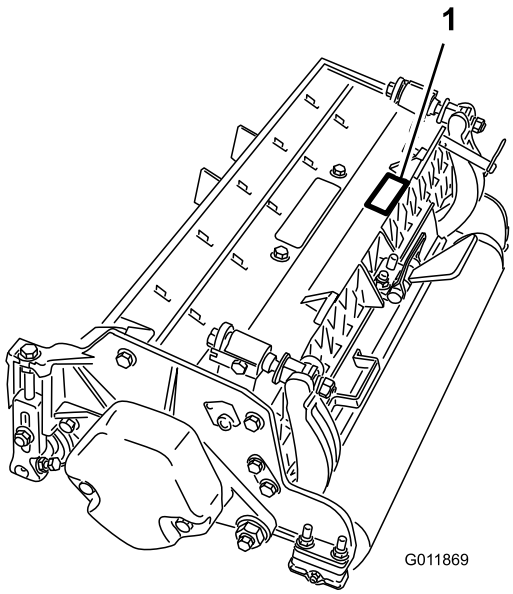


Figure 1

1. Location of the model and serial numbers

Model No. _____

Serial No. _____

This manual identifies potential hazards and has safety messages identified by the safety alert symbol (Figure 2), which signals a hazard that may cause serious injury or death if you do not follow the recommended precautions.



Figure 2

1. Safety alert symbol

This manual uses 2 other words to highlight information. **Important** calls attention to special mechanical information and **Note** emphasizes general information worthy of special attention.

Contents

Safety 3
Safety and Instructional Decals 4
Setup 5
1 Inspecting the Cutting Unit 5
2 Using the Cutting Unit Kickstand 5
3 Adjusting the Rear Shield 6
4 Mounting the Counter Weights 6
5 Installing the Fixed Plate Kit (Optional) 7
Product Overview 9
Specifications 9

© 2015—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Cutting Unit Accessories and Kits (see parts catalog for part numbers) 9
Operation 10
Adjustments 10
Height-of-Cut Chart Terms 11
Height-of-Cut Chart 12
Servicing the Bedknife 16
Maintenance 17
Lubrication 17
Adjusting the Reel Bearings 17
Servicing the Bedbar 18
Servicing the HD Dual Point Adjusters (DPA) 19
Servicing the Roller 20

Safety

This machine has been designed in accordance with EN ISO 5395:2013.


Hazard control and accident prevention are dependent upon the awareness, concern, and proper training of the personnel involved in the operation, transport, maintenance, and storage of the machine. Improper use or maintenance of the machine can result in injury or death. To reduce the potential for injury or death, comply with the following safety instructions.

- Read, understand, and follow all instructions in the traction unit and cutting unit operators manual's before operating the cutting unit.
- Never allow children to operate the traction unit or cutting units. Do not allow adults to operate traction unit or cutting units without proper instruction. Only trained operators who have read this manual should operate the traction unit or cutting units.
- Never operate the cutting units when under the influence of drugs or alcohol.
- Lightning can cause severe injury or death. If lightning is seen or thunder is heard in the area, do not operate the machine; seek shelter.
- Keep all shields and safety devices in place. If a shield, safety device or decal is illegible or damaged, repair or replace it before operation is commenced. Also tighten any loose nuts, bolts, and screws to ensure cutting unit is in safe operating condition.
- Always wear substantial shoes. Do not operate cutting units while wearing sandals, tennis shoes or shorts. Also, do not wear loose fitting clothing which could get caught in moving parts. Always wear long pants and substantial shoes. Wearing safety glasses, safety shoes and a helmet is advisable and required by some local ordinances and insurance regulations.
- Remove all debris or other objects that might be picked up and thrown by the cutting unit reel blades. Keep all bystanders away from the working area.
- If the cutting blades strike a solid object or the unit vibrates abnormally, stop and shut the engine off. Check cutting unit for damaged parts. Repair any damage before restarting and operating the cutting unit.
- Lower the cutting units to the ground and remove key from ignition switch whenever machine is left unattended.
- Be sure cutting units are in safe operating condition by keeping nuts, bolts and screws tight.
- Remove key from ignition switch to prevent accidental starting of the engine when servicing, adjusting or storing the machine.

- Perform only those maintenance instructions described in this manual. If major repairs are ever needed or assistance is desired, contact an Authorized Toro Distributor.
- To ensure optimum performance and safety, always purchase genuine Toro replacement parts and accessories to keep the Toro all Toro. **Never use "will-fit" replacement parts and accessories made by other manufacturers**. Look for the Toro logo to assure genuineness. Using unapproved replacement parts and accessories could void the warranty of The Toro Company.

Safety and Instructional Decals

Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.

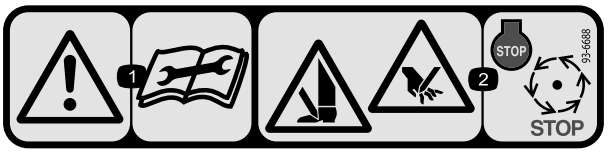

93-6688

1. Warning—read the instructions before servicing or performing maintenance.
2. Cutting hazard of hand or foot—stop the engine and wait for moving parts to stop.

Setup

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	Cutting unit	1	Inspect the cutting unit.
2	No parts required	–	Use the cutting unit kickstand.
3	No parts required	–	Adjust the rear shield.
4	No parts required	–	Mounting the counter weights.
5	Fixed plate kit (not included)	1	Install the Fixed Plate Kit (Optional).

Media and Additional Parts

Description	Qty.	Use
Parts Catalog	1	Use to reference part numbers
Operator's Manual	1	Review the manual and save in an appropriate place
O-ring	1	Use when mounting reel motor to cutting unit
Screws	2	Use to mount reel motor to cutting unit

Note: Determine the left and right sides of the machine from the normal operating position.

1

Inspecting the Cutting Unit

Parts needed for this procedure:

1	Cutting unit

Procedure

After the cutting unit is removed from the box, inspect the following:

1. Check each end of the reel for grease. Grease should be visibly evident in the reel bearings and internal splines of the reel shaft.
2. Ensure that all nuts and bolts are securely tightened.
3. Make sure the carrier frame suspension operates freely and does not bind when moved back and forth.

2

Using the Cutting Unit Kickstand

No Parts Required

Procedure

When the cutting unit is tipped to expose the bedknife/reel, prop up the rear of the cutting unit with the kickstand (supplied with the traction unit). Make sure the nuts on the back end of the bedbar adjusting screws are not resting on the work surface (Figure 3).

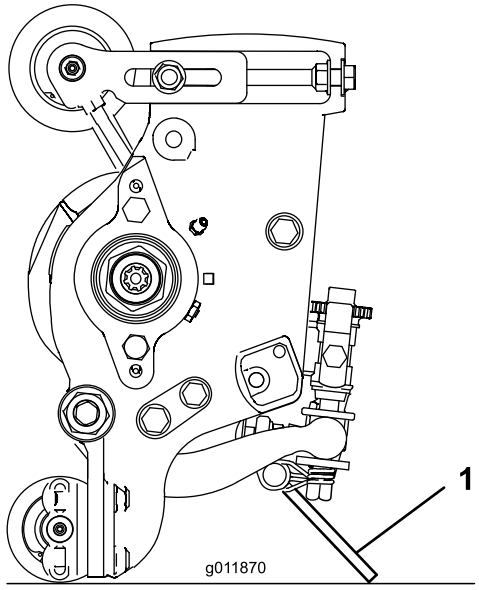


Figure 3

1. Cutting unit kickstand

3

Adjusting the Rear Shield

No Parts Required

Procedure

Under most conditions, the best dispersion is attained when the rear shield is closed (front discharge). When conditions are heavy or wet, the rear shield may be opened.

To open the rear shield (Figure 4), loosen the cap screw securing the shield to the left side plate, rotate the shield to the open position and tighten the cap screw.

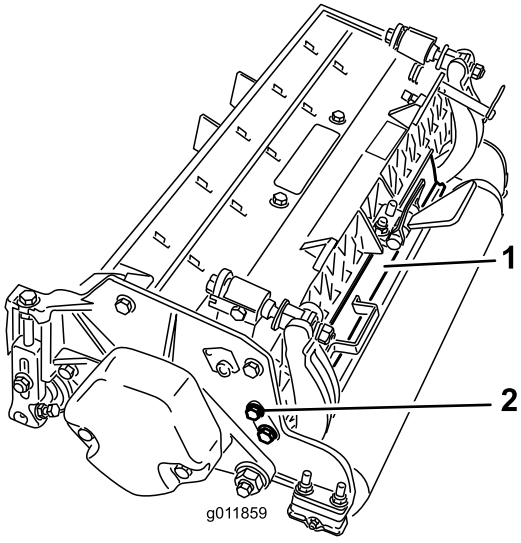


Figure 4

1. Rear shield
2. Cap screw

4

Mounting the Counter Weights

No Parts Required

Procedure

All cutting units are shipped with the counter weight mounted to the left end of the cutting unit. Use the following diagram to determine the position of the counter weights and reel motors.

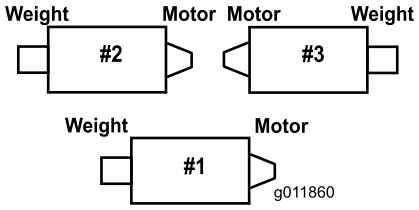


Figure 5

1. On the #3 cutting unit, remove the 2 cap screws securing the counter weight to the left end of the cutting unit. Remove the counter weight (Figure 6).

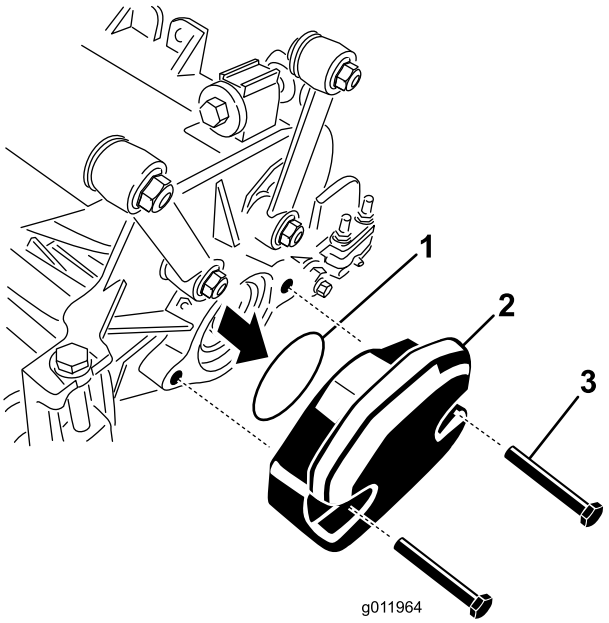


Figure 6

1. O-ring
2. Counter weight
3. Mounting bolts

2. On right end of cutting unit, remove the plastic plug from the bearing housing (Figure 7).
3. Remove the 2 bolts from the right side plate (Figure 7).

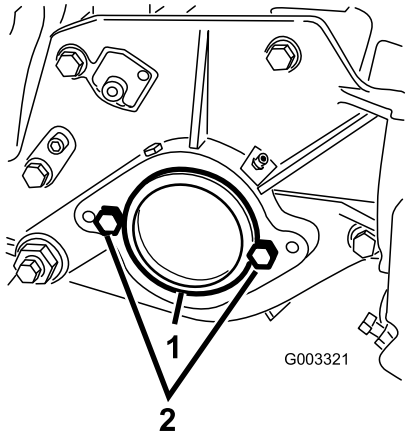


Figure 7

1. Plastic plug
2. Bolts (2)

4. Install the counter weight to the right end of the cutting unit with the 2 bolts previously removed.
5. Loosely install the 2 reel-motor mounting bolts to the left plate of the cutting unit (Figure 7).

5

Installing the Fixed Plate Kit (Optional)

Parts needed for this procedure:

1	Fixed plate kit (not included)

Procedure

1. Remove the nuts and washers securing the lift links to the cutting unit side plate and carrier frame (Figure 9).

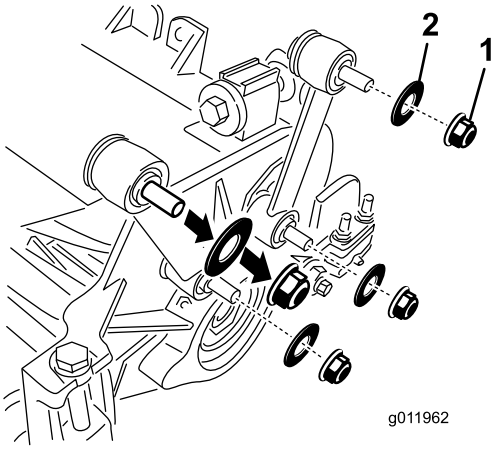


Figure 8

1. Nuts
2. Washers

2. Using the number 2 holes, insert a fixed plate onto the bolts and secure with the nuts removed. The number 1 holes are to be positioned toward the front. Do not reuse the washers.

   Note: The number 1 hole is a less aggressive setting and the number 3 hole is a more aggressive setting.

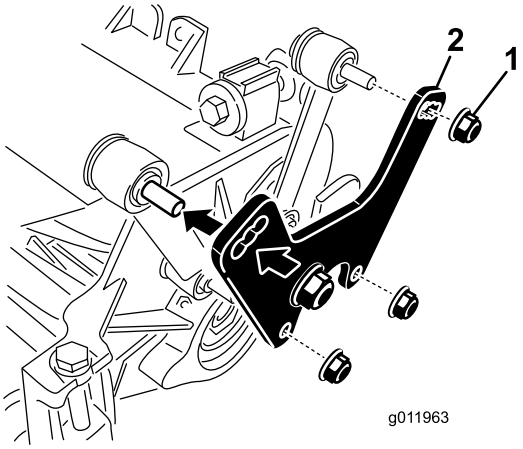


Figure 9

1. Nuts
2. Fixed plate

3. Loosen the locknuts securing the height-of-cut brackets to the cutting unit side plates (Figure 10).

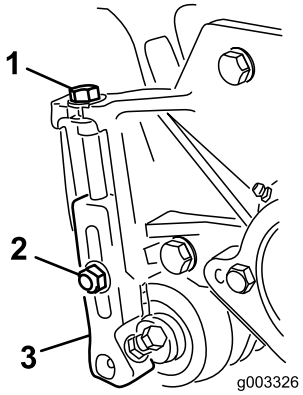


Figure 10

1. Height-of-cut bracket
2. Locknut
3. Adjusting screw

4. Remove the height-of-cut brackets and the roller from the cutting unit.
5. Repeat the procedure on the remaining cutting units.

Product Overview

Specifications

Weight	27 inch 5 Blade – 67 kg (148 lb.) 27 inch 8 Blade – 69 kg (153 lb.) 27 inch 11 Blade – 72 kg (158 lb.) 32 inch 8 Blade – 76 kg (167 lb.)

Cutting Unit Accessories and Kits (see parts catalog for part numbers)

Note: All accessories and kits are 1 per cutting unit unless otherwise specified.

Grass Basket Kit: A series of clipping collection baskets attached to the cutting units to collect grass clippings.

Tipper Roller Kit: An adjustable bracket installed on the traction unit frame, which when the cutting units are raised, the center cutting unit front roller contacts the bracket and causes the rear roller to rise for increased ground clearance. Recommended for higher heights of cut.

Rear Roller Brush Kit: A high speed, high contact brush that keeps the rear roller free of grass and debris, which maintains a consistent height of cut and prevents clumping. This leads to a better after-cut appearance.

Comb/Scraper Kit: A fixed comb installed behind the front roller which helps reduce grain and spongy turf by standing up the grass before cutting. A scraper for the front Wiehle roller is included in the kit.

Fixed Plate Kit: Bolting on fixed plates over the suspension mounting links removes the pitch movement of the cutting unit. Recommended for use on level surfaces and for higher heights of cut (greater than 38 mm [1.50 inches]). Because the front roller is removed when using the fixed plates, the quality of cut (efficiency of cut) is increased.

Shoulder Roller: Helps reduce over-lap marks for warm season grasses (Bermuda, Zoysia, Paspalum). The shoulder roller should only be used as the front roller on the center (rear) cutting unit.

Collar Kit (6 needed per roller): Helps reduce over lap marks for warm season grasses (Bermuda, Zoysia, Paspalum). This kit is installed on the outer three grooves of the existing Wiehle roller, but is not as aggressive as the Shoulder roller.

Short Rear Roller: Helps reduce double roller marks for cool season grasses (Bent, Blue grass, Rye). The short roller is only to be used as the rear roller on the center (rear) cutting unit.

Full Front Roller: Helps produce more pronounced striping (repeated cutting in the same direction/path), however, effective height of cut is raised and quality of cut is reduced.

Scrapers (Wiehle, Shoulder, Rear roller, Full Front Roller): Fixed scrapers for all optional rollers are available for reducing grass build up on rollers which can affect height of cut settings.

Roller Rebuild Kit: Includes all the bearings, bearing nuts, inner seals and outer seals required to rebuild a roller.

Roller Rebuild Tool Kit: Includes all the tools and the installation instructions required to rebuild a roller with the roller rebuild kit.

Operation

Note: Determine the left and right sides of the machine from the normal operating position.

Adjustments

Adjusting the Bedknife to the Reel

Use this procedure to set the bedknife to the reel and to check the condition of the reel and bedknife and their interaction. After completing this procedure, always test the cutting unit performance under your field conditions. You may need to make further adjustments to obtain optimal cutting performance.

Important: Do not overtighten the bedknife to the reel or you will damage it.

- After backlapping the cutting unit or grinding the reel, you may need to mow with the cutting unit for a few minutes and then perform this procedure to adjust the bedknife to the reel as the reel and bedknife adjust to each other.
- You may need additional adjustments if the turf is extremely dense or your cutting height is very low.

You will need the following tools to complete this procedure:

- Shim (0.002 inch) — Toro part number 125-5611
- Cutting performance paper—Toro part number 125-5610

1. Position the cutting unit on a flat, level work surface. Turn the bedbar adjusting screws counterclockwise to ensure that the bedbar does not contact the reel (Figure 11).

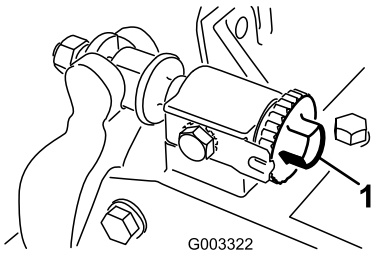


Figure 11

1. Bedbar adjusting screw

2. Tip the mower, to expose the bedknife and reel.

   Important: Make sure nuts on back end of bedbar adjusting screws are not resting on the work surface (Figure 11).

3. Rotate the reel so that a blade crosses the bedknife approximately 25 mm (1 inch) in from the end of the bedknife on the right hand side of the cutting unit. Putting an identifying mark on this blade will make subsequent adjustments easier. Insert the 0.05 mm (0.002 inch) shim between the marked reel blade and the bedknife at the point where the blade crosses the bedknife.
4. Turn the right bedbar adjuster clockwise until you feel **light** pressure (i.e. drag) on the shim, then back off the bedbar adjuster two clicks and remove the shim. (Since adjusting one side of the cutting unit affects the other side, the two clicks will provide clearance for when the other side is adjusted)

   Note: If starting with a large gap, both sides should initially be drawn closer by alternately tightening the right and left hand sides.
5. **Slowly** rotate the reel so that the same blade that you checked on the right side is crossing the bedknife approximately 25 mm (1 inch) in from the end of the bedknife on the left hand side of the cutting unit.
6. Turn the left bedbar adjuster clockwise until the shim can be slid through the reel to bedknife gap with light drag.
7. Return to the right side and adjust as necessary to get light drag on the shim between the same blade and bedknife.
8. Repeat steps 6 and 7 until the shim can be slid through both gaps with slight drag, but one click in on both sides prevents the shim from passing through on both sides. The bedknife is now parallel to the reel.

   Note: This procedure should not be needed on daily adjustments, but should be done after grinding or disassembly.
9. From this position (i.e. one click in and shim not passing through) turn the bedbar adjusters clockwise one click each.

   Note: Each click turned moves the bedknife 0.022 mm (0.0009 inches). **Do not over tighten the adjusting screws.**
10. Test the cutting performance by inserting a long strip of cutting performance paper (Toro part number 125-5610) between reel and bedknife, perpendicular to the bedknife (Figure 12). Slowly rotate the reel forward; it should cut the paper.

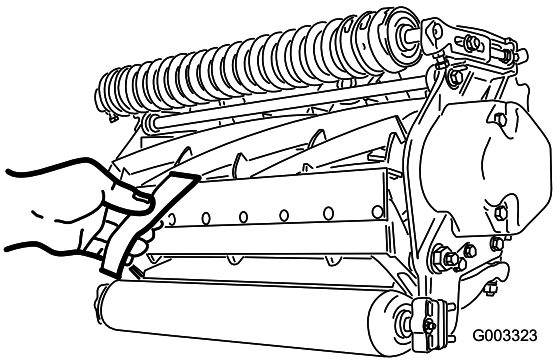


Figure 12

Note: Should excessive reel drag be evident, it will be either necessary to backlap or regrind the cutting unit to achieve the sharp edges needed for precision cutting.

Adjusting the Rear Roller

1. Adjust the rear roller brackets (Figure 13) to the desired height of cut range by positioning the required amount of spacers below the side plate mounting flange (Figure 13) per the HOC Chart.

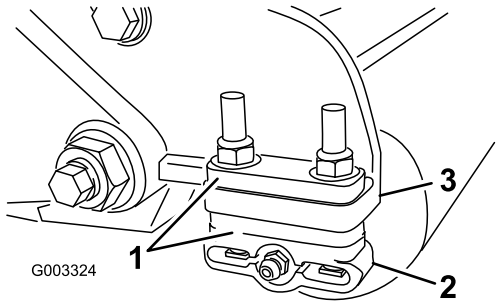


Figure 13

1. Spacer
2. Roller bracket
3. Side plate mounting flange

2. Raise rear of cutting unit and place a block under bedknife.
3. Remove (2) nuts securing each roller bracket and spacer to each side plate mounting flange.
4. Lower roller and screws from side plate mounting flanges and spacers.
5. Place spacers onto screws on roller brackets.
6. Re-secure roller bracket and spacers to underside of side plate mounting flanges with nuts previously removed.
7. Verify that bedknife to reel contact is correct. Tip mower to expose front and rear rollers and bedknife.

   Note: The position of the rear roller to the reel is controlled by the machining tolerances of the assembled components and paralleling is not required. A limited amount of adjustment is possible by setting the cutting unit on a surface plate and loosening the side plate mounting cap screws (Figure 14). Adjust and retighten cap screws. Torque the cap screws to 37-45 N-m (27-33 ft-lb).

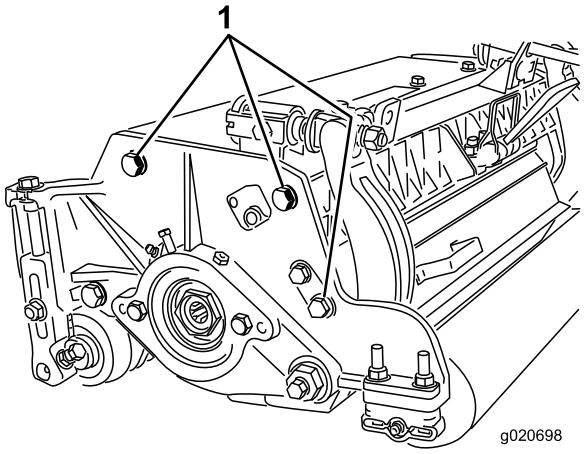


Figure 14

1. Side plate mounting cap screws

Height-of-Cut Chart Terms

Height-of-Cut Setting (HOC)

The desired Height of Cut.

Bench Set Height-of-Cut

The height at which the top edge of the bedknife is set above a flat level surface that contacts the bottom of both the front and rear roller.

Effective Height-of-Cut

This is the actual height the grass has been cut. For a given bench set height of cut, the actual height of cut will vary depending on the type of grass, time of year, turf and soil conditions. The cutting unit set up (aggressiveness of cut, rollers, bedknives, attachments installed, turf compensation settings, etc.) will also affect the effective height of cut. Check the effective height of cut using the Turf Evaluator, Model 04399 regularly to determine the desired bench set height of cut.

Aggressiveness of Cut

Cutting unit Aggressiveness of Cut has a significant impact on the performance of the cutting unit. Aggressiveness of Cut refers to the angle of the bedknife relative to the ground (Figure 15).

The best cutting unit setup is dependent on your turf conditions and desired results. Experience with the cutting unit on your turf will determine the best setting to use. Aggressiveness of cut may be adjusted throughout the cutting season to allow for various turf conditions.

In general, less to normal aggressive settings are more appropriate for warm season grasses (Bermuda, Paspalum, Zoysia) while cool season grasses (Bent, Bluegrass, Rye) may require normal to more aggressive setups. More aggressive

setups cut more grass off by allowing the spinning reel to pull more grass up into the bedknife.

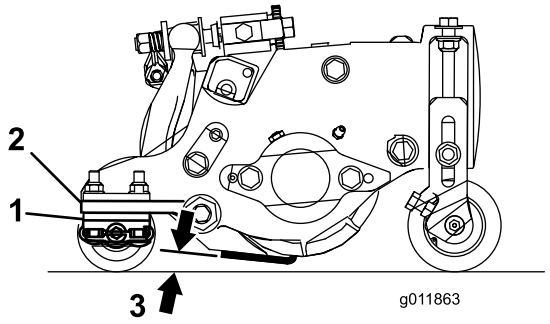


Figure 15

1. Rear spacers
2. Side plate mounting flange
3. Aggressiveness of cut

Rear Spacers

The number of rear spacers determines the aggressiveness of cut for the cutting unit. For a given height of cut, adding spacers, below the side plate mounting flange, increases the aggressiveness of the cutting unit. All cutting units on a given machine must be set to the same aggressiveness of cut (Number of rear spacers, part no. 119–0626), otherwise the after-cut appearance could be negatively affected (Figure 15).

Height-of-Cut Chart

HOC Setting	Aggressiveness of Cut	No. of Rear Spacers
6 mm (.250 inch)	Less Normal More	0 0 1
9 mm (.375 inch)	Less Normal More	0 1 2
13 mm (.500 inch)	Less Normal More	0 1 2
16 mm (.625 inch)	Less Normal More	1 2 3
19 mm (.750 inch)	Less Normal More	2 3 4
22 mm (.875 inch)	Less Normal More	2 3 4
25 mm (1.000 inch)	Less Normal More	3 4 5
29 mm (1.125 inches)	Less Normal More	4 5 6
32 mm (1.250 inches)	Less Normal More	4 5 6
35 mm (1.375 inches)	Less Normal More	4 5 6
38 mm (1.500 inches)	Less Normal More	5 6 7
41 mm (1.625 inches)	Less Normal More	6 7 8
44 mm (1.750 inches)	Less Normal More	6 7 8
48 mm (1.875 inches)	Less Normal More	7 8 9
51 mm (2.000 inches)	Less Normal More	7 8 9
54 mm (2.125 inches)*	Less Normal More	8 9 10
57 mm (2.250 inches)*	Less Normal More	8 9 10
60 mm (2.375 inches)*	Less Normal More	9 10 11
64 mm (2.50 inches)*	Less Normal More	9 10 11

* Fixed Plate Kits (Part No. 119–0646–03) are recommended for 51 to 64 mm (2.00 to 2.5 inch) heights of cut.

Adjusting the Height of Cut

1. Loosen locknuts securing height-of-cut brackets to cutting unit side plates (Figure 16).

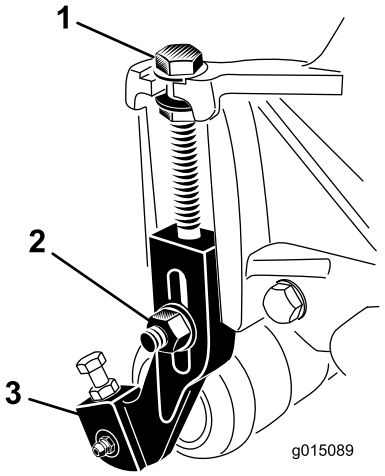


Figure 16

1. Adjusting screw
2. Locknut
3. Height-of-cut bracket

2. Loosen nut on gauge bar (Figure 17) and set adjusting screw to desired height-of-cut. Distance between bottom of screw head and face of bar is height-of-cut.

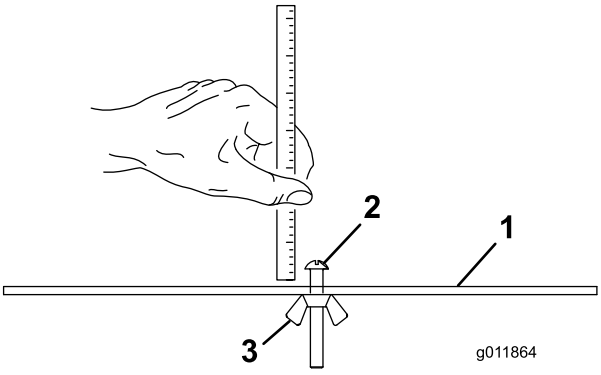


Figure 17

1. Gauge bar
2. Height adjusting screw
3. Nut

3. Hook the screw head on cutting edge of bedknife and rest rear end of bar on rear roller (Figure 18).

4. Rotate the adjusting screw until the front roller contacts the gauge bar (Figure 18). Adjust both ends of roller until entire roller is parallel to the bedknife.

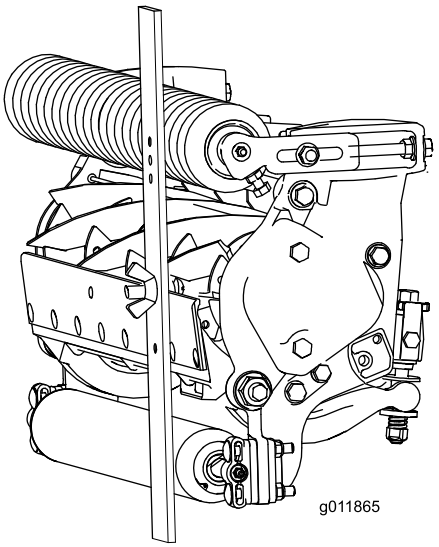


Figure 18

Important: When set properly, the rear and front rollers will contact the gauge bar and the screw will be snug against the bedknife. This ensures that the height-of-cut is identical at both ends of the bedknife.

5. Tighten nuts to secure adjustment. Do not overtighten nut. Tighten enough to remove play from washer.

Use the following chart to determine which bedknife is best suited for the desired height of cut.

Bedknife/Height of Cut Chart

Bedknife	Part No.	Bedknife Lip Height *	Height of Cut
Low HOC (Optional)	120–1641 (27 inch) 120–1642 (32 inch)	5.6 mm (.220 inch)	6.4–12.7 mm (.250-.500 inch)
EdgeMax® (Optional)	112-8910 (27 inch) 112–8956 (32 inch)	6.9 mm (.270 inch)	9.5–63.5 mm (.375-2.50 inches) *
Standard (Production)	114–9388 (27 inch) 114–9389 (32 inch)	6.9 mm (.270 inch)	9.5–63.5 mm (.375-2.50 inches)*
Heavy Duty (Optional)	114–9390 (27 inch) 114–9391 (32 inch)	9.3 mm (.370 inch)	12.7-63.5 mm (.500-2.50 inches)

* Warm season grasses may require the Low HOC bedknife for 12.7 mm (.500 inches) and below.

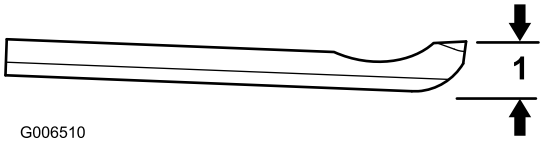


Figure 19

1. Bedknife Lip Height *

6. To adjust the height of cut when fixed plate kits are installed on the cutting units, proceed as follows:
   - Remove the height of cut brackets and front roller as described in Procedure 6 in the Set-Up section.
   - Install the cutting unit onto the traction unit as described in the Traction Unit Operator's Manual.
   - Lower the cutting unit to the floor and measure the distance from the floor to the top of the bedknife, as shown in Figure 20

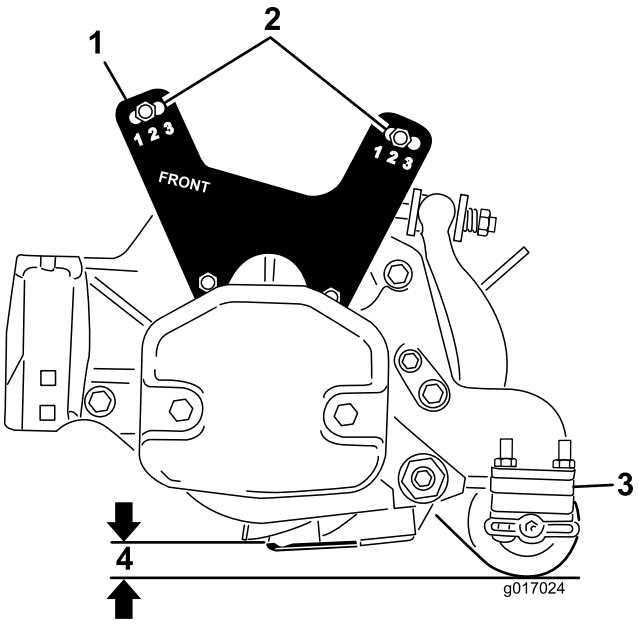


Figure 20

1. Fixed plate
2. Upper mounting holes
3. Rear height of cut spacers
4. Height of cut

   - To attain the desired height of cut, adjust the rear roller brackets to the desired height of cut range by positioning the required amount of spacers below the side plate mounting flange per the HOC Chart. Refer to Adjusting the Rear Roller.

     Note: To achieve a **less** aggressive cut, mount the cutting unit links in the number 1 position or mount the links to the number 3 position for a **more** aggressive cut.

Cutting Unit Characteristics

The dual knob bedknife-to-reel adjustment system incorporated in this cutting unit simplifies the adjustment procedure needed to deliver optimum mowing performance. The precise adjustment possible with the dual knob/bedbar design gives the necessary control to provide a continual self-sharpening action-thus maintaining sharp cutting edges, ensuring good quality-of-cut, and greatly reducing the need for routine back lapping.

Daily Adjustments of Cutting Unit

Prior to mowing each day, or as required, each cutting unit must be checked to verify proper bedknife-to-reel contact. **This must be performed even though quality of cut is acceptable.**

1. Lower the cutting units onto a hard surface, shut off the engine, and remove the ignition key.
2. Slowly rotate the reel in a reverse direction, listening for reel-to-bedknife contact. If no contact is evident, turn the bedknife adjusting knobs clockwise, one click at a time, until light contact is felt and heard.

   Note: The reel must cut one sheet of paper, when inserted at a right angle to the bedknife, at both ends and the center of the reel.

   Note: The adjustment knobs have detents corresponding to 0.022 mm (0.0009 inch) bedknife movement for each indexed position.
3. If excessive contact/reel drag is evident it will be either necessary to backlap, reface the front of the bedknife, or regrind the cutting unit to achieve the sharp edges needed for precision cutting (Refer to the Toro Manual for Sharpening Reel and Rotary Mowers, Form No. 09168SL).

   Important: Light contact is preferred at all times. If light contact is not maintained, the bedknife/reel edges will not sufficiently self-sharpen and dull cutting edges will result after a period of operation. If excessive contact is maintained, bedknife/reel wear will be accelerated, uneven wear can result, and quality of cut may be adversely affected.

   Note: As the reel blades continue to run against the bedknife, a slight burr will appear on the front cutting edge surface along the full length of the bedknife. If a file is occasionally run across the front edge to remove this burr, improved cutting can be obtained.

   After extended running, a ridge will eventually develop at both ends of the bedknife. These notches must be rounded off or filed flush with the cutting edge of the bedknife to ensure smooth operation.

   Note: Over time, the chamfer (Figure 21) will need to be reground as it is only designed to last 40% of the bedknife life.

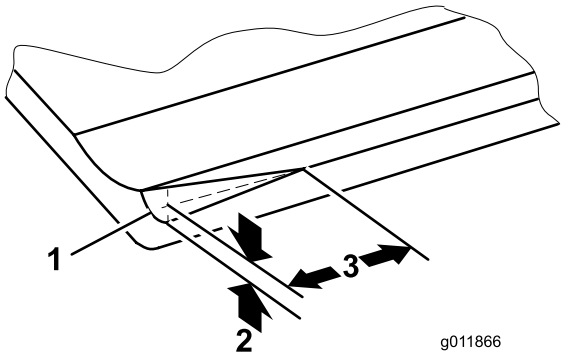


Figure 21

1. Lead-in chamfer on right end of bedknife
2. 1.5 mm (.060 inch)
3. 8.6 mm (.340 inch)

Note: Do not make lead-in chamfer too large as it may cause turf tufting.

Servicing the Bedknife

The bedknife service limits are listed in the following charts.

Important: Operating the cutting unit with the bedknife below the "service limit" may result in poor after-cut appearance and reduce the structural integrity of the bedknife for impacts.

Bedknife Service Limit Chart				
Bedknife	**Part No.**	**Bedknife Lip Height ***	**Service Limit***	**Grind Angles** Top/Front Angles
Low HOC (Optional)	120–1641 (27 inch) 120–1642 (32 inch)	5.6 mm (.220 inch)	.190 inch (4.8 mm)	10/5 Degrees
EdgeMax® (Optional)	112-8910 (27 inch) 112–8956 (32 inch)	6.9 mm (.270 inch)	.190 inch (4.8 mm)	10/5 Degrees
Standard (Production)	114–9388 (27 inch) 114–9389 (32 inch)	6.9 mm (.270 inch)	.190 inch (4.8 mm)	10/5 Degrees
Heavy Duty (Optional)	114–9390 (27 inch) 114–9391 (32 inch)	9.3 mm (.370 inch)	.190 inch (4.8 mm)	10/5 Degrees

Recommended Top and Front Bedknife Grind Angles
(Figure 22)

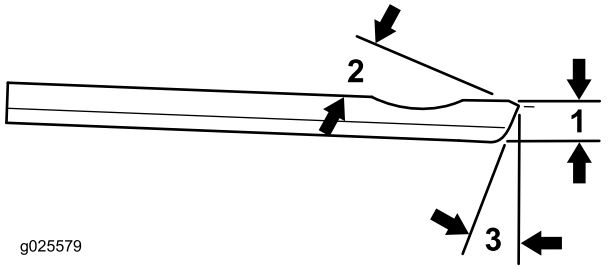


Figure 22

1. Bedknife service limit *
2. Top grind angle
3. Front grind angle

Note: All bedknife service limit measurements reference the bottom of the bedknife (Figure 23)

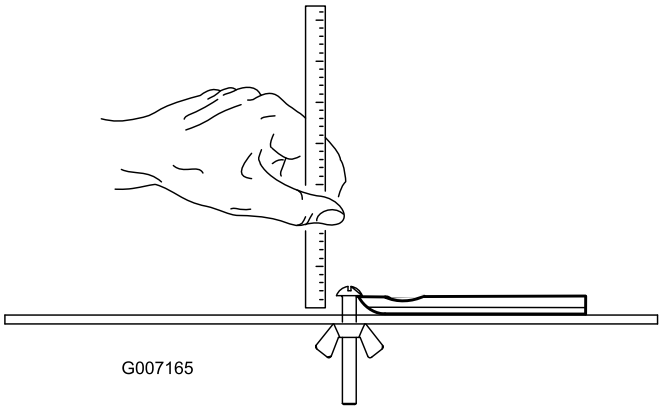


Figure 23

Maintenance

Lubrication

Each cutting unit has (6) grease fittings (Figure 24) that must be lubricated regularly with No. 2 General Purpose Lithium Base Grease.

The lubrication points are front roller (2), rear roller (2) and reel bearing (2).

Note: Lubricating cutting units immediately after washing helps purge water out of bearings and increases bearing life.

1. Wipe each grease fitting with a clean rag.
2. Apply grease until clean grease is seen coming out of roller seals and bearing relief valve.
3. Wipe excess grease away.

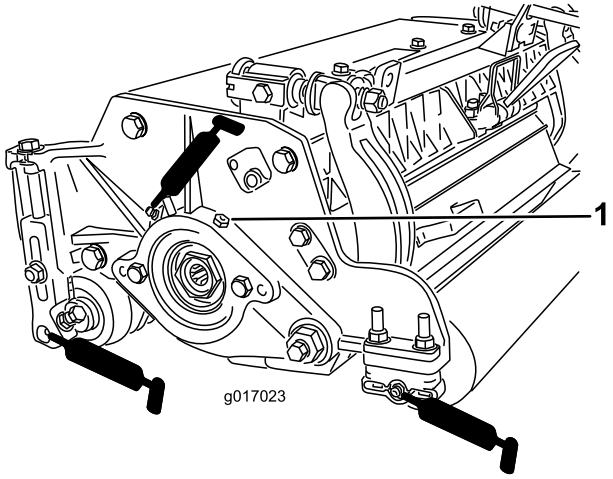


Figure 24

1. Relief valve

Adjusting the Reel Bearings

To ensure long life of the reel bearings, periodically check if reel end play exists. The reel bearings can be checked and adjusted as follows:

1. Loosen reel to bedknife contact by turning the bedknife adjusting knobs (Figure 25) counterclockwise until no contact exists.

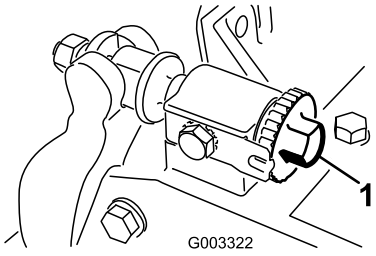


Figure 25

1. Bedknife adjusting knob

2. Using a rag or thickly padded glove, hold on to the reel blade and try to move the reel assembly side to side (Figure 26).

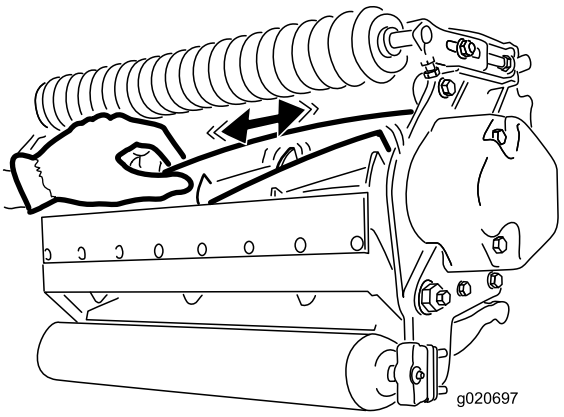


Figure 26

3. If end play exists, proceeded as follows:
   A. Loosen external set screw securing bearing adjusting nut to bearing housing located on the left side of the cutting unit (Figure 27).

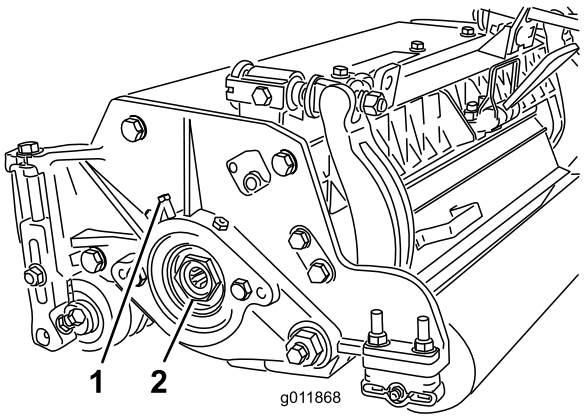


Figure 27

1. Set screw
2. Nut

   B. Using a 1-3/8inch socket wrench, slowly tighten the reel bearing adjustment nut until no end play of the reel exists. If adjusting nut does not eliminate reel end play, replace reel bearings.

   Note: Reel bearings do not require preload. Over tightening reel bearing adjuster nut will damage reel bearings.

4. Retighten set screw securing bearing adjusting nut to bearing housing. Torque to 1.4-1.7 N-m (12-15 in-lb).

Servicing the Bedbar

Removing the Bedbar

1. Turn bedbar adjuster screws, counterclockwise, to back bedknife away from reel (Figure 28).

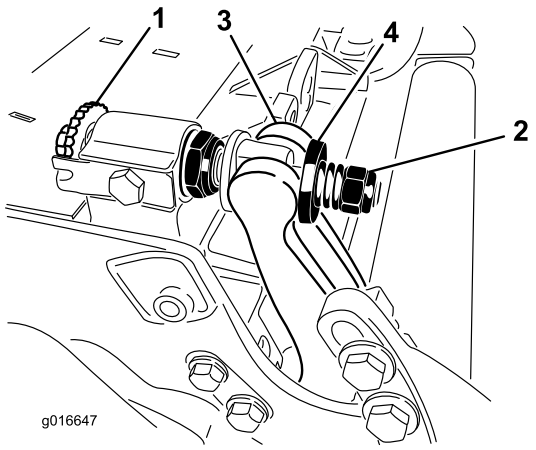


Figure 28

1. Bedbar adjusting screw
2. Spring tension nut
3. Bedbar
4. Washer

2. Back out the spring tension nut, until the washer is no longer tensioned against the bedbar (Figure 28).
3. On each side of the machine, loosen the lock nut securing the bedbar bolt (Figure 29).

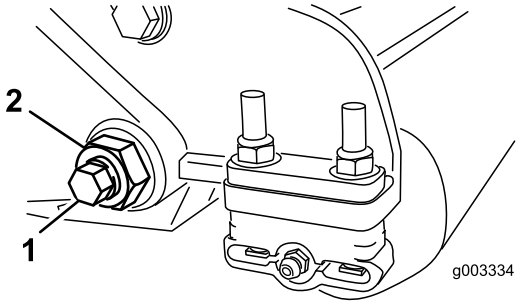


Figure 29

1. Bedbar bolt
2. Lock nut

4. Remove each bedbar bolt allowing bedbar to be pulled downward and removed from machine bolt (Figure 29). Account for 2 nylon and 1 stamped steel washers on each end of bedbar (Figure 30).

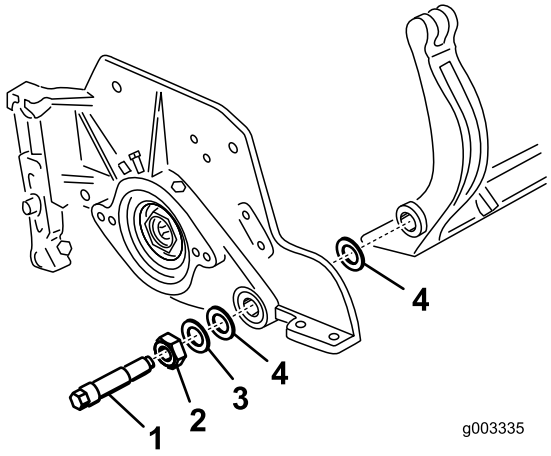


Figure 30

1. Bedbar bolt
2. Nut
3. Steel washer
4. Nylon washer

Assembling the Bedbar

1. Install bedbar, positioning mounting ears between washer and bedbar adjuster.
2. Secure bedbar to each side plate with bedbar bolts (nuts on bolts) and 6 washers. A nylon washer is to be positioned on each side of side plate boss. Place a steel washer outside each of the nylon washers (Figure 30). Torque bedbar bolts to 27-36 N-m (240-320 inch-lb).
3. Tighten locknuts equally on each side until the outer steel washers cannot be rotated by hand. Then loosen the locknuts until the outer steel washers just rotate by hand, yet bedbar end play is removed (Figure 30).

   Note: Over tightening locknuts can deflect side plates and bedbar, which can affect reel/bedknife contact.

   Note: Washers on inside may have a gap.
4. Tighten spring tension nut until spring is collapsed, then back off 1/2 turn (Figure 31).

   Note: Do not overtighten as damage to the spring may occur.

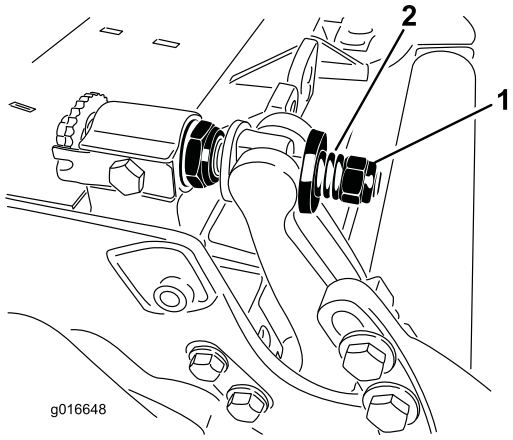


Figure 31

1. Spring tension nut
2. Spring

Servicing the HD Dual Point Adjusters (DPA)

1. Remove all parts (refer to *Installation Instructions* for HD DPA Kit Model No. 120–7230 and to Figure 32).
2. Apply Never Seize to the inside of the bushing area on cutting unit center frame (Figure 32).
3. Align the keys on flange bushings to the slots in the frame and install the bushings (Figure 32).
4. Install a wave washer onto the adjuster shaft and slide the adjuster shaft into the flange bushings in the cutting unit frame (Figure 32).
5. Secure the adjuster shaft with a flat washer and lock nut (Figure 32). Torque the lock nut to 20 to 27 N-m (15 to 20 ft-lb).

   Note: The bedbar adjuster shaft has left-hand threads.

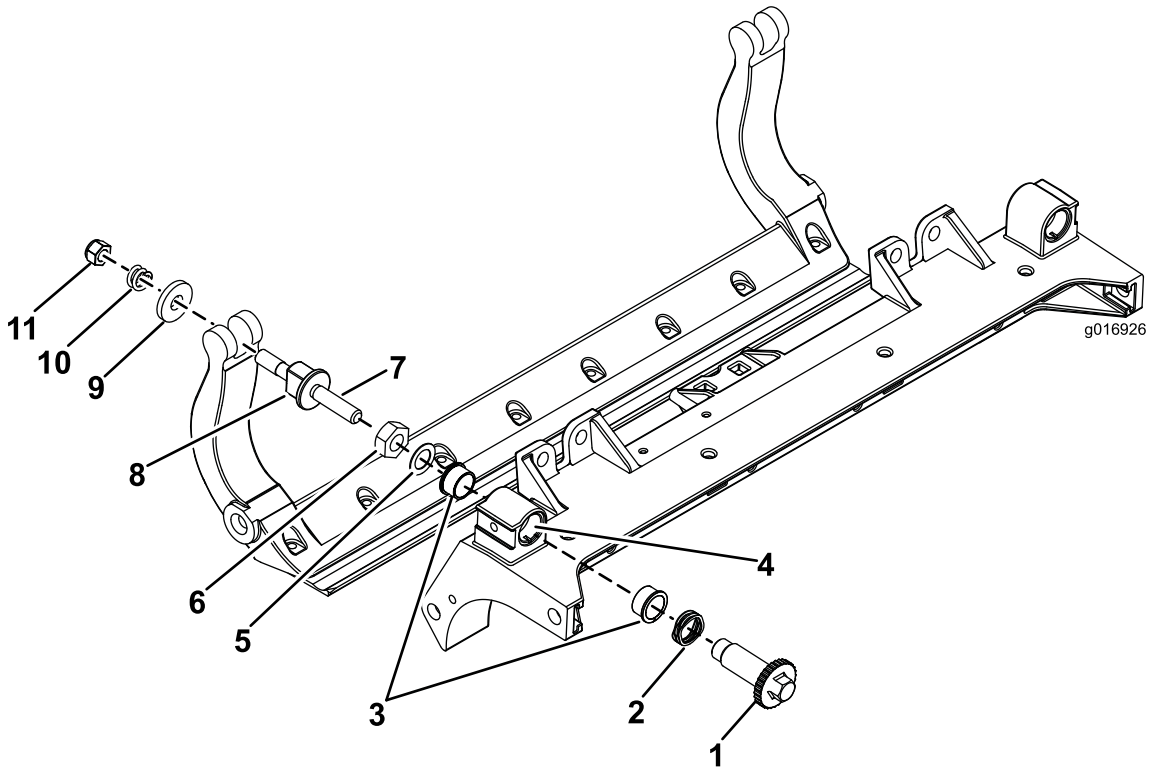


Figure 32

1. Shaft adjuster
2. Wave washer
3. Flange bushing
4. Apply Never Seize here
5. Flat washer
6. Lock nut
7. Apply Never Seize here
8. Bedbar adjuster screw
9. Hardened washer
10. Compression spring
11. Spring tension nut

6. Apply Never Seize lubricant to the threads of the bedbar adjuster screw that fit into the adjuster shaft. Thread bedbar adjuster screw into the adjuster shaft.
7. Loosely install the hardened washer, spring and spring tension nut onto adjuster screw.
8. Install the bedbar, positioning the mounting ears between washer and bedbar adjuster.
9. Secure the bedbar to each side plate with the bedbar bolts (nuts on bolts) and 6 washers. A nylon washer is to be positioned on each side of side plate boss. Place a steel washer outside each of the nylon washers (Figure 32). Torque bedbar bolts to 27-36 N-m (240–320 in-lb). Tighten locknuts until the outside steel washer stops rotating and end play is removed but do not overtighten or deflect side plates. Washers on inside may have a gap (Figure 30).
10. Tighten the nut on each bedbar adjuster assembly until the compression spring is fully compressed, then loosen nut 1/2 turn (Figure 31).
11. Repeat the procedure on the other end of the cutting unit.
12. Adjust the bedknife to the reel.

Servicing the Roller

A Roller Rebuild Kit, Part No. 114–5430 and a Roller Rebuild Tool Kit, Part No. 115–0803 (Figure 33) are available for servicing the roller. The Roller Rebuild Kit includes all the bearings, bearing nuts, inner seals and outer seals to rebuild a roller. The Roller Rebuild Tool Kit includes all the tools and the installation instructions required to rebuild a roller with the roller rebuild kit. Refer to your parts catalog or contact your distributor for assistance.

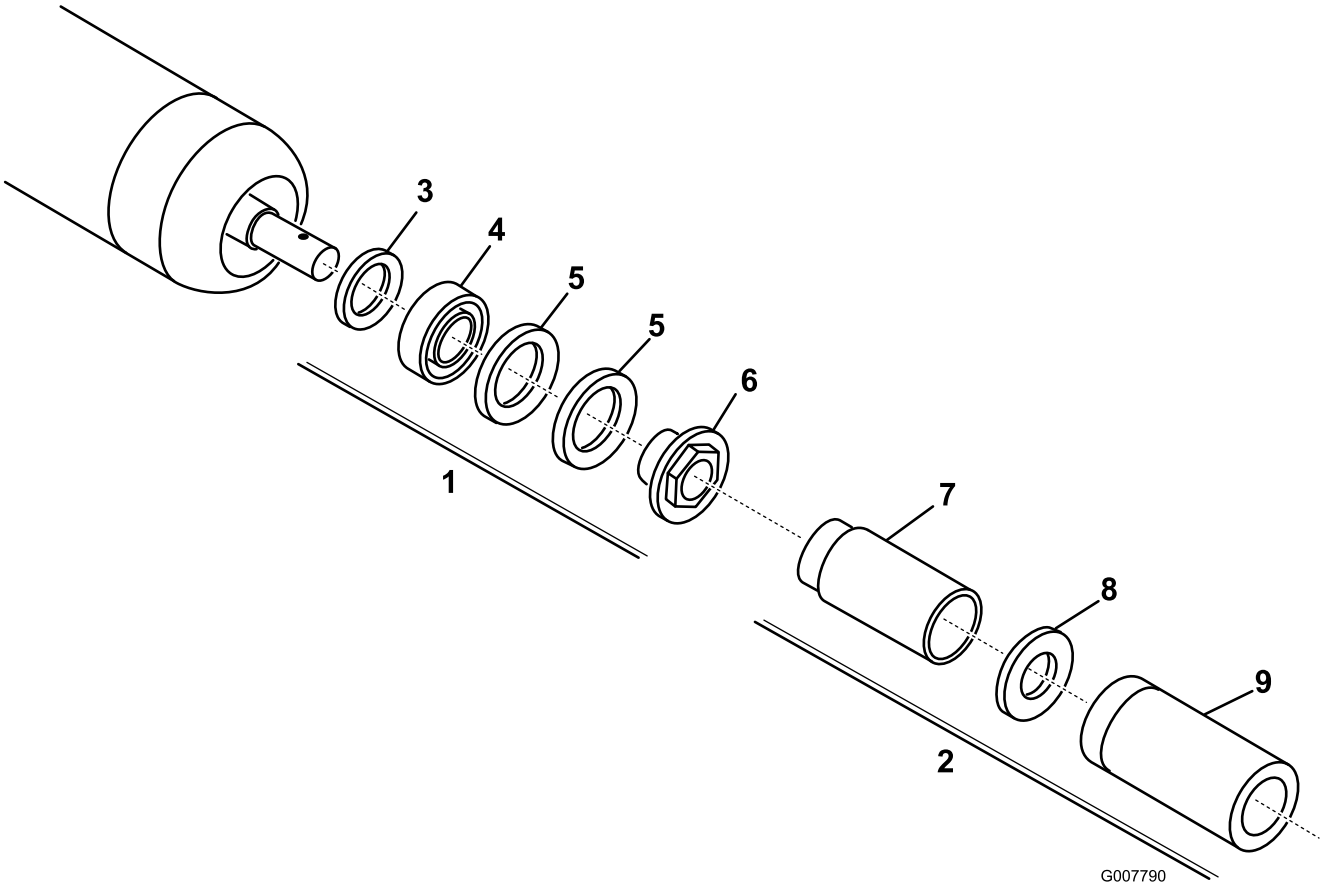


Figure 33

1. Rebuild kit (Part No. 114–5430)
2. Rebuild tool kit (Part No. 115–0803)
3. Inner seal
4. Bearing
5. Outer seal
6. Bearing nut
7. Inner seal tool
8. Washer
9. Bearing/outer seal tool

Notes:

Declaration of Incorporation

The Toro Company, 8111 Lyndale Ave. South, Bloomington, MN, USA declares that the following unit(s) conform(s) to the directives listed, when installed in accordance with the accompanying instructions onto certain Toro models as indicated on the relevant Declarations of Conformity.

Model No.	Serial No.	Product Description	Invoice Description	General Description	Directive
03180	315000001 and Up	5-Blade 27-inch DPA Cutting Unit, Reelmaster 3100-D Series Traction Unit	RM3100 27" 5 BLD CU-DPA	Cutting Unit	2006/42/EC
03181	315000001 and Up	8-Blade 27-inch DPA Cutting Unit, Reelmaster 3100-D Series Traction Unit	RM3100 27" 8 BLD CU-DPA	Cutting Unit	2006/42/EC
03182	315000001 and Up	8-Blade 32-inch DPA Cutting Unit, Reelmaster 3100-D Series Traction Unit	RM3100 32" 8 BLD CU-DPA	Cutting Unit	2006/42/EC
03183	315000001 and Up	11-Blade 27-inch DPA Cutting Unit, Reelmaster 3100-D Series Traction Unit	RM3100 27" 11 BLD CU-DPA	Cutting Unit	2006/42/EC

Relevant technical documentation has been compiled as required per Part B of Annex VII of 2006/42/EC.

We will undertake to transmit, in response to requests by national authorities, relevant information on this partly completed machinery. The method of transmission shall be electronic transmittal.

This machinery shall not be put into service until incorporated into approved Toro models as indicated on the associated Declaration of Conformity and in accordance with all instructions, whereby it can be declared in conformity with all relevant Directives.

Certified:



David Klis
Sr. Engineering Manager
8111 Lyndale Ave. South
Bloomington, MN 55420, USA
May 29, 2012

EU Technical Contact:

Peter Tetteroo
Toro Europe NV
B-2260 Oevel-Westerloo
Belgium

Tel. 0032 14 562960
Fax 0032 14 581911

International Distributor List

Distributor:	Country:	Phone Number:	Distributor:	Country:	Phone Number:
Agrolanc Kft	Hungary	36 27 539 640	Maquiver S.A.	Colombia	57 1 236 4079
Balama Prima Engineering Equip.	Hong Kong	852 2155 2163	Maruyama Mfg. Co. Inc.	Japan	81 3 3252 2285
B-Ray Corporation	Korea	82 32 551 2076	Mountfield a.s.	Czech Republic	420 255 704 220
Casco Sales Company	Puerto Rico	787 788 8383	Mountfield a.s.	Slovakia	420 255 704 220
Ceres S.A.	Costa Rica	506 239 1138	Munditol S.A.	Argentina	54 11 4 821 9999
CSSC Turf Equipment (pvt) Ltd.	Sri Lanka	94 11 2746100	Norma Garden	Russia	7 495 411 61 20
Cyril Johnston & Co.	Northern Ireland	44 2890 813 121	Oslinger Turf Equipment SA	Ecuador	593 4 239 6970
Cyril Johnston & Co.	Republic of Ireland	44 2890 813 121	Oy Hako Ground and Garden Ab	Finland	358 987 00733
Equiver	Mexico	52 55 539 95444	Parkland Products Ltd.	New Zealand	64 3 34 93760
Femco S.A.	Guatemala	502 442 3277	Perfetto	Poland	48 61 8 208 416
ForGarder OU	Estonia	372 384 6060	Pratoverde SRL.	Italy	39 049 9128 128
G.Y.K. Company Ltd.	Japan	81 726 325 861	Prochaska & Cie	Austria	43 1 278 5100
Geomechaniki of Athens	Greece	30 10 935 0054	RT Cohen 2004 Ltd.	Israel	972 986 17979
Golf international Turizm	Turkey	90 216 336 5993	Riversa	Spain	34 9 52 83 7500
Guandong Golden Star	China	86 20 876 51338	Lely Turfcare	Denmark	45 66 109 200
Hako Ground and Garden	Sweden	46 35 10 0000	Solvert S.A.S.	France	33 1 30 81 77 00
Hako Ground and Garden	Norway	47 22 90 7760	Spypros Stavrinides Limited	Cyprus	357 22 434131
Hayter Limited (U.K.)	United Kingdom	44 1279 723 444	Surge Systems India Limited	India	91 1 292299901
Hydroturf Int. Co Dubai	United Arab Emirates	97 14 347 9479	T-Markt Logistics Ltd.	Hungary	36 26 525 500
Hydroturf Egypt LLC	Egypt	202 519 4308	Toro Australia	Australia	61 3 9580 7355
Irrimac	Portugal	351 21 238 8260	Toro Europe NV	Belgium	32 14 562 960
Irrigation Products Int'l Pvt Ltd.	India	0091 44 2449 4387	Valtech	Morocco	212 5 3766 3636
Jean Heybroek b.v.	Netherlands	31 30 639 4611	Victus Emak	Poland	48 61 823 8369

European Privacy Notice

The Information Toro Collects
Toro Warranty Company (Toro) respects your privacy. In order to process your warranty claim and contact you in the event of a product recall, we ask you to share certain personal information with us, either directly or through your local Toro company or dealer.

The Toro warranty system is hosted on servers located within the United States where privacy law may not provide the same protection as applies in your country.

BY SHARING YOUR PERSONAL INFORMATION WITH US, YOU ARE CONSENTING TO THE PROCESSING OF YOUR PERSONAL INFORMATION AS DESCRIBED IN THIS PRIVACY NOTICE.

The Way Toro Uses Information
Toro may use your personal information to process warranty claims, to contact you in the event of a product recall and for any other purpose which we tell you about. Toro may share your information with Toro's affiliates, dealers or other business partners in connection with any of these activities. We will not sell your personal information to any other company. We reserve the right to disclose personal information in order to comply with applicable laws and with requests by the appropriate authorities, to operate our systems properly or for our own protection or that of other users.

Retention of your Personal Information
We will keep your personal information as long as we need it for the purposes for which it was originally collected or for other legitimate purposes (such as regulatory compliance), or as required by applicable law.

Toro's Commitment to Security of Your Personal Information
We take reasonable precautions in order to protect the security of your personal information. We also take steps to maintain the accuracy and current status of personal information.

Access and Correction of your Personal Information
If you would like to review or correct your personal information, please contact us by email at legal@toro.com.

Australian Consumer Law

Australian customers will find details relating to the Australian Consumer Law either inside the box or at your local Toro Dealer.

Toro General Commercial Product Warranty

A Two-Year Limited Warranty

Conditions and Products Covered

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your Toro Commercial product ("Product") to be free from defects in materials or workmanship for two years or 1500 operational hours*, whichever occurs first. This warranty is applicable to all products with the exception of Aerators (refer to separate warranty statements for these products). Where a warrantable condition exists, we will repair the Product at no cost to you including diagnostics, labor, parts, and transportation. This warranty begins on the date the Product is delivered to the original retail purchaser.
* Product equipped with an hour meter.

Instructions for Obtaining Warranty Service

You are responsible for notifying the Commercial Products Distributor or Authorized Commercial Products Dealer from whom you purchased the Product as soon as you believe a warrantable condition exists. If you need help locating a Commercial Products Distributor or Authorized Dealer, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Toro Commercial Products Service Department
Toro Warranty Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196

952–888–8801 or 800–952–2740
E-mail: commercial.warranty@toro.com

Owner Responsibilities

As the Product owner, you are responsible for required maintenance and adjustments stated in your *Operator's Manual*. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim.

Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This warranty does not cover the following:

- Product failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, or modified non-Toro branded accessories and products. A separate warranty may be provided by the manufacturer of these items.
- Product failures which result from failure to perform recommended maintenance and/or adjustments. Failure to properly maintain your Toro product per the Recommended Maintenance listed in the *Operator's Manual* can result in claims for warranty being denied.
- Product failures which result from operating the Product in an abusive, negligent, or reckless manner.
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to, brake pads and linings, clutch linings, blades, reels, rollers and bearings (sealed or greasable), bed knives, spark plugs, castor wheels and bearings, tires, filters, belts, and certain sprayer components such as diaphragms, nozzles, and check valves, etc.
- Failures caused by outside influence. Conditions considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved fuels, coolants, lubricants, additives, fertilizers, water, or chemicals, etc.
- Failure or performance issues due to the use of fuels (e.g. gasoline, diesel, or biodiesel) that do not conform to their respective industry standards.
- Normal noise, vibration, wear and tear, and deterioration.
- Normal "wear and tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.

Parts

Parts scheduled for replacement as required maintenance are warranted for the period of time up to the scheduled replacement time for that part. Parts replaced under this warranty are covered for the duration of the original product warranty and become the property of Toro. Toro will make the final decision whether to repair any existing part or assembly or replace it. Toro may use remanufactured parts for warranty repairs.

Deep Cycle and Lithium-Ion Battery Warranty:

Deep cycle and Lithium-Ion batteries have a specified total number of kilowatt-hours they can deliver during their lifetime. Operating, recharging, and maintenance techniques can extend or reduce total battery life. As the batteries in this product are consumed, the amount of useful work between charging intervals will slowly decrease until the battery is completely worn out. Replacement of worn out batteries, due to normal consumption, is the responsibility of the product owner. Battery replacement may be required during the normal product warranty period at owner's expense. Note: (Lithium-Ion battery only): A Lithium-Ion battery has a part only prorated warranty beginning year 3 through year 5 based on the time in service and kilowatt hours used. Refer to the *Operator's Manual* for additional information.

Maintenance is at Owner's Expense

Engine tune-up, lubrication, cleaning and polishing, replacement of filters, coolant, and completing recommended maintenance are some of the normal services Toro products require that are at the owner's expense.

General Conditions

Repair by an Authorized Toro Distributor or Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Except for the Emissions warranty referenced below, if applicable, there is no other express warranty. All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty.

Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Note regarding engine warranty:

The Emissions Control System on your Product may be covered by a separate warranty meeting requirements established by the U.S. Environmental Protection Agency (EPA) and/or the California Air Resources Board (CARB). The hour limitations set forth above do not apply to the Emissions Control System Warranty. Refer to the Engine Emission Control Warranty Statement supplied with your product or contained in the engine manufacturer's documentation for details

Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer.

374-0253 Rev C