FORM NO. 3317-497

TORO®

CE UPDATE KIT

44" ProLine Mowers Model No. 30144 & 30544

PART NO. 93-9465

INSTALLATION INSTRUCTIONS

Loose Parts

Note: Use the chart below to identify parts used for assembly.

DESCRIPTION	QTY.	USE
Discharge deflector	1	Install discharge chute extension
Bolt 5/16–18 x 3/4" (19 mm)	2	
Lock nut (thin)	2	
Baffle	1	Install front baffle
Bolt 5/16–18 x 3/4" (19 mm)	7	
Lock nut (thin)	7	
1/4 turn fastener	4	Secure belt cover (Model 30544 only)
Grommet	4	
Bolt 3/8–16 x 3/4" (19 mm)	2	Secure belt cover (Model 30144 only)
Washer	2	

Installing Discharge Chute Extension

1. Position discharge deflector over end of discharge chute (Fig. 1). Overlap end of chute 1 inch.
2. Using discharge deflector as a template drill (2) 9 mm holes in discharge chute
3. Secure discharge chute extension to discharge chute with (2) 5/16 x 19 mm bolts, through from the bottom and thin lock nuts (Fig. 1).

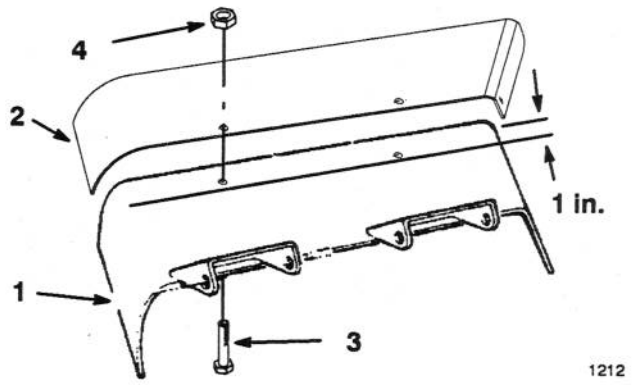


Figure 1

1. Discharge chute
2. Discharge deflector
3. Bolt 5/16–18 x 3/4" (19 mm)
4. Lock nut (thin)

Installing Front Baffle

1. Position front baffle inside mower deck level with left edge of mower (Fig. 2).
2. Using front baffle as a template drill 9 mm holes in mower.
3. Secure front baffle to mower with (7) 5/16 x 19 mm bolts, through from the inside and thin lock nuts (Fig. 2).

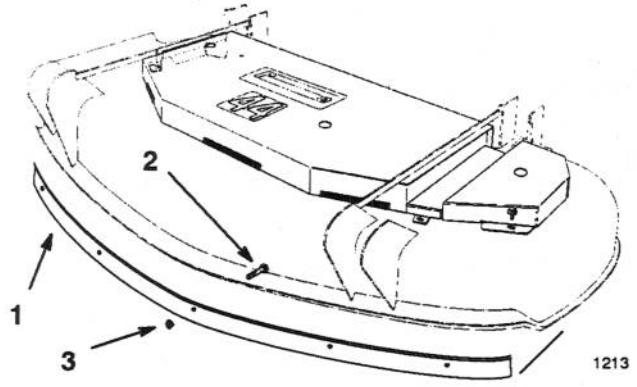


Figure 2

1. Front baffle
2. Bolt 5/16–18 x 3/4" (19 mm)
3. Lock nut (thin)

Replace Cover Knobs – Model 30144 only

1. Remove knobs on belt cover.
2. Secure belt cover to mower with (2) 3/8 x 19 mm bolts and washers (Fig. 2).

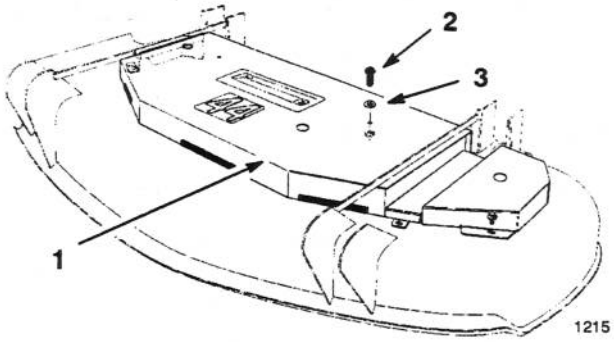


Figure 3

1. Belt cover
2. Bolt 3/8–16 x 3/4" (19 mm)
3. Washer

Replace Cover Knobs – Model 30544 only

1. Remove wing stud fasteners on belt covers.
2. Place grommets below belt cover and insert new slot headed 1/4 turn fastener. Secure belt covers to mower with (4) 1/4 turn fasteners (Fig. 2).

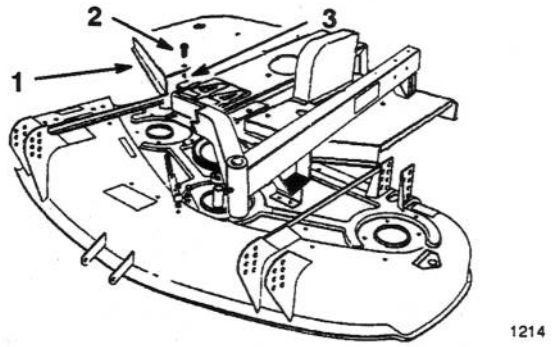


Figure 4

1. Belt cover
2. 1/4 turn fastener
3. Grommet

FORM NO. 3317-497

TORO®

CE UPDATE KIT

44" ProLine Mowers Model No. 30144 & 30544

PART NO. 93-9465

INSTALLATION INSTRUCTIONS

Loose Parts

Note: Use the chart below to identify parts used for assembly.

DESCRIPTION	QTY.	USE
Discharge deflector	1	Install discharge chute extension
Bolt 5/16–18 x 3/4" (19 mm)	2	
Lock nut (thin)	2	
Baffle	1	Install front baffle
Bolt 5/16–18 x 3/4" (19 mm)	7	
Lock nut (thin)	7	
1/4 turn fastener	4	Secure belt cover (Model 30544 only)
Grommet	4	
Bolt 3/8–16 x 3/4" (19 mm)	2	Secure belt cover (Model 30144 only)
Washer	2	

Installing Discharge Chute Extension

1. Position discharge deflector over end of discharge chute (Fig. 1). Overlap end of chute 1 inch.
2. Using discharge deflector as a template drill (2) 9 mm holes in discharge chute
3. Secure discharge chute extension to discharge chute with (2) 5/16 x 19 mm bolts, through from the bottom and thin lock nuts (Fig. 1).

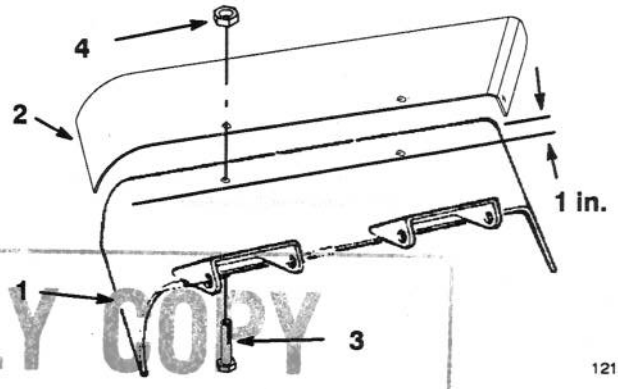


Figure 1

1. Discharge chute
2. Discharge deflector
3. Bolt 5/16–18 x 3/4" (19 mm)
4. Lock nut (thin)

ONLY COPY
DO NOT REMOVE
Tech. Publications

Installing Front Baffle

1. Position front baffle inside mower deck level with left edge of mower (Fig. 2).
2. Using front baffle as a template drill 9 mm holes in mower.
3. Secure front baffle to mower with (7) 5/16 x 19 mm bolts, through from the inside and thin lock nuts (Fig. 2).

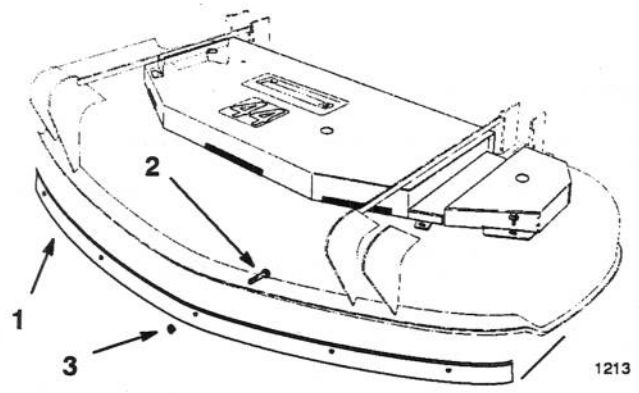


Figure 2

1. Front baffle
2. Bolt 5/16–18 x 3/4" (19 mm)
3. Lock nut (thin)

Replace Cover Knobs – Model 30144 only

1. Remove knobs on belt cover.
2. Secure belt cover to mower with (2) 3/8 x 19 mm bolts and washers (Fig. 2).

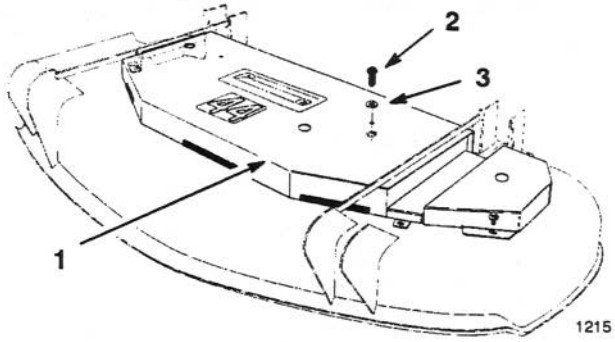


Figure 3

1. Belt cover
2. Bolt 3/8–16 x 3/4" (19 mm)
3. Washer

Replace Cover Knobs – Model 30544 only

1. Remove wing stud fasteners on belt covers.
2. Place grommets below belt cover and insert new slot headed 1/4 turn fastener. Secure belt covers to mower with (4) 1/4 turn fasteners (Fig. 2).

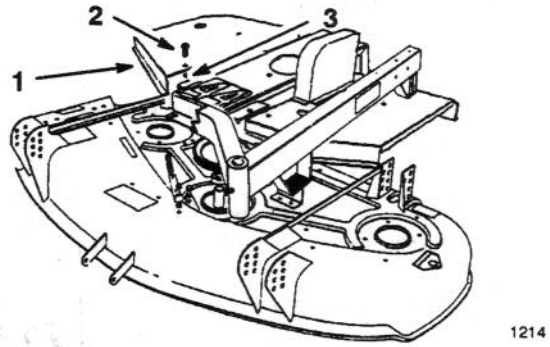


Figure 4

1. Belt cover
2. 1/4 turn fastener
3. Grommet