



Door Kit

Workman® GTX Utility Vehicle with Cab

Model No. 07150


Installation Instructions

⚠ WARNING


CALIFORNIA Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.


Parts

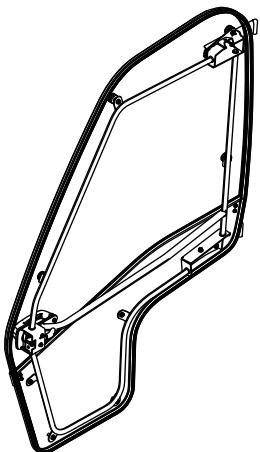


1x

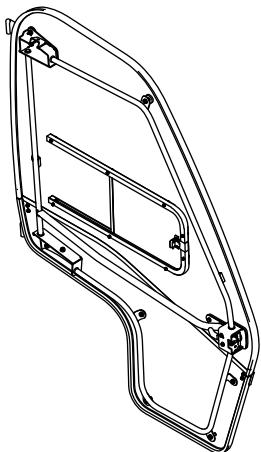


1x

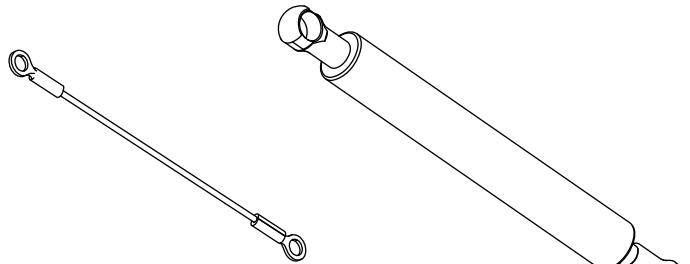


2x

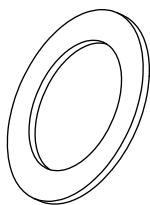


8x

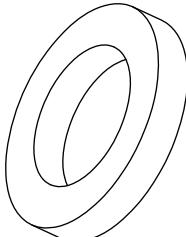


4x

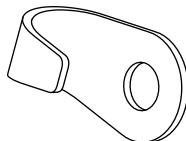


2x

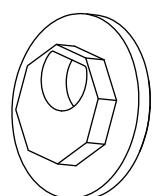

2x

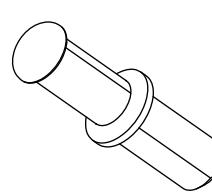


2x

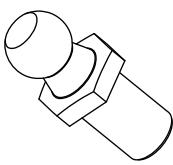

2x



6x

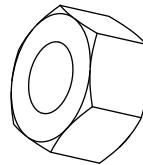

2x



4x



Preparing the Machine

1. Park the machine on a level surface.
2. Engage the parking brake.
3. Shut off the engine.
4. Remove the key from the ignition.

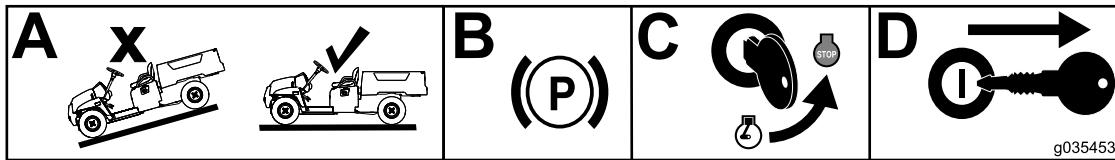


Figure 1

Installing the Door Kit

1. Secure the door straps and springs to the doors as shown in [Figure 2](#).

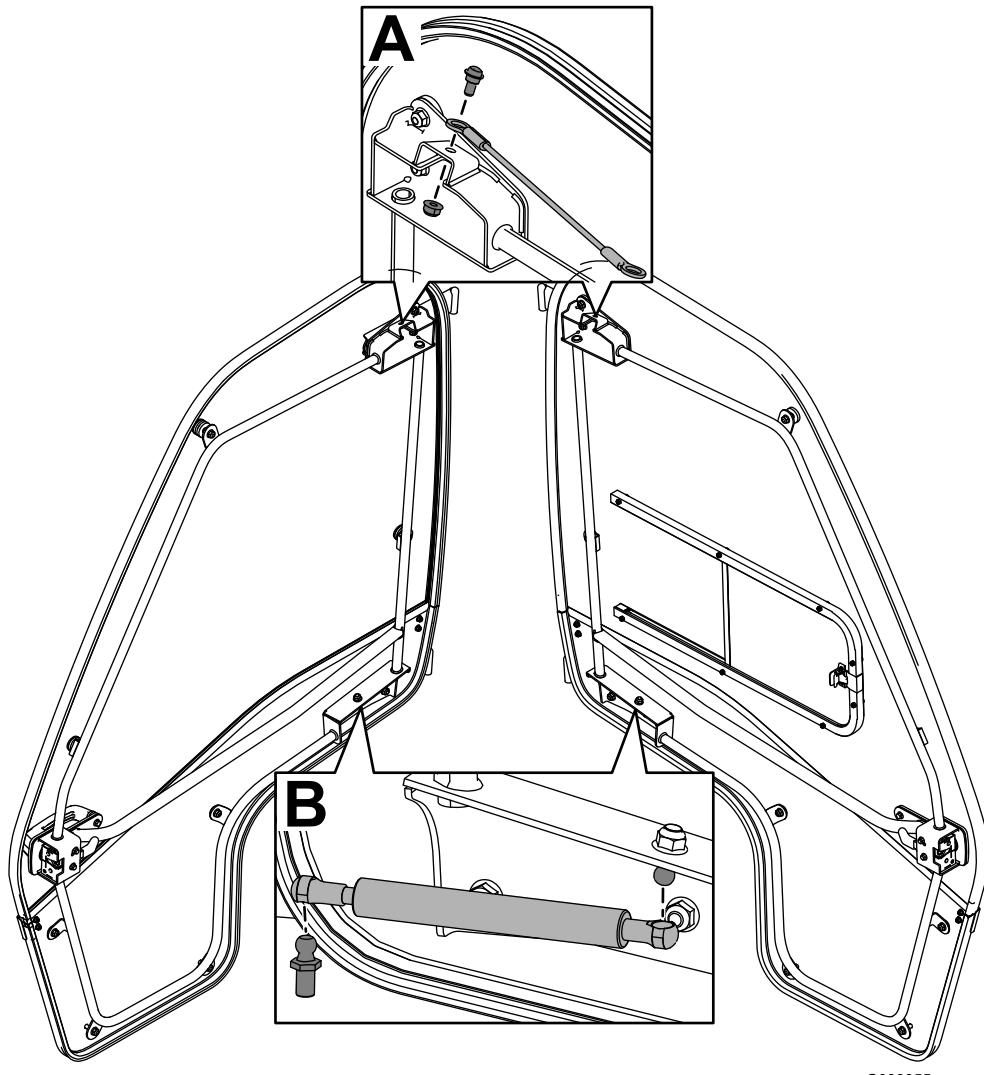


Figure 2

2. Place a brass washer on each of the 4 hinge posts and then carefully drop the doors into place as shown in [Figure 3](#).

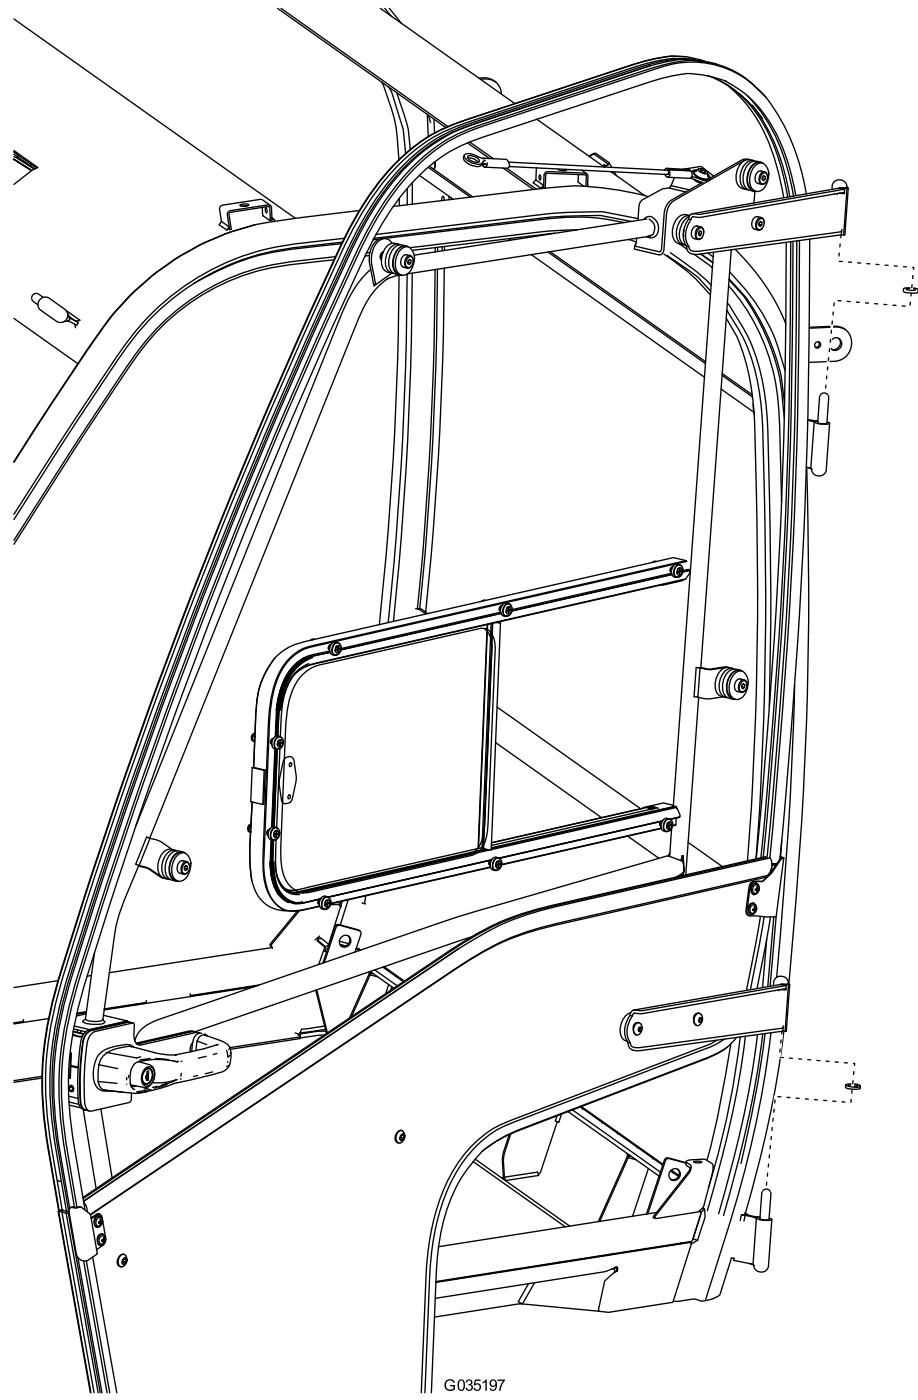


Figure 3

3. Secure the door straps and springs to the frame as shown in [Figure 4](#).

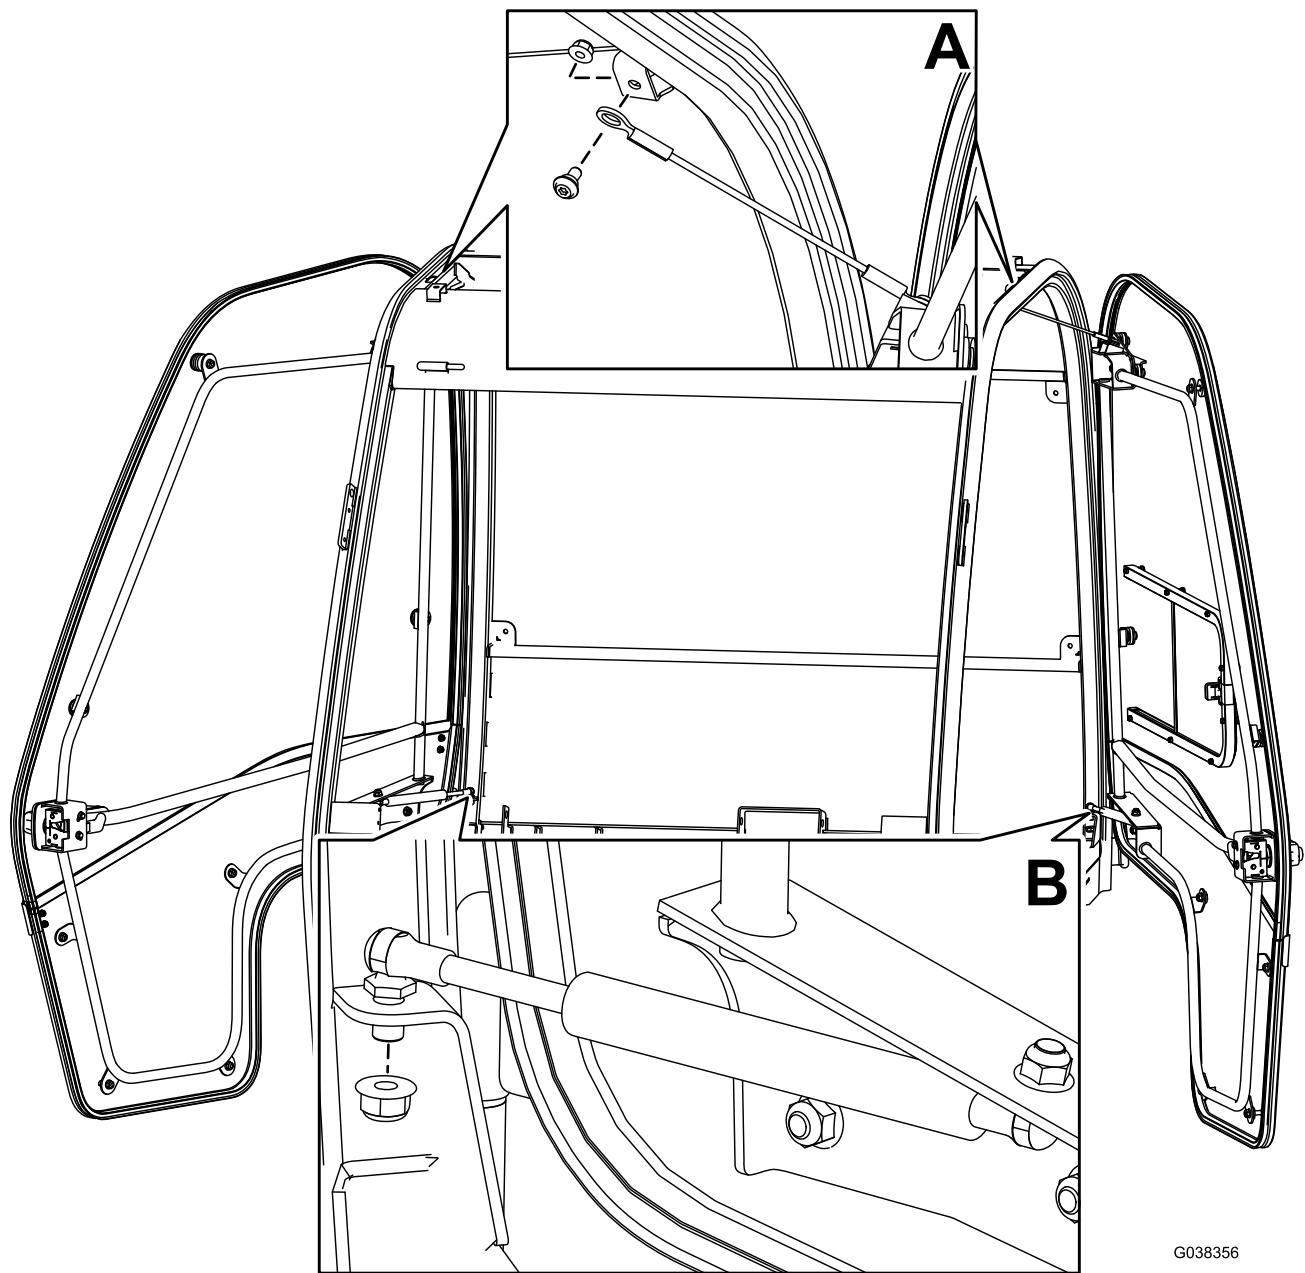


Figure 4

G038356

4. Install the door latches as shown in [Figure 5](#).

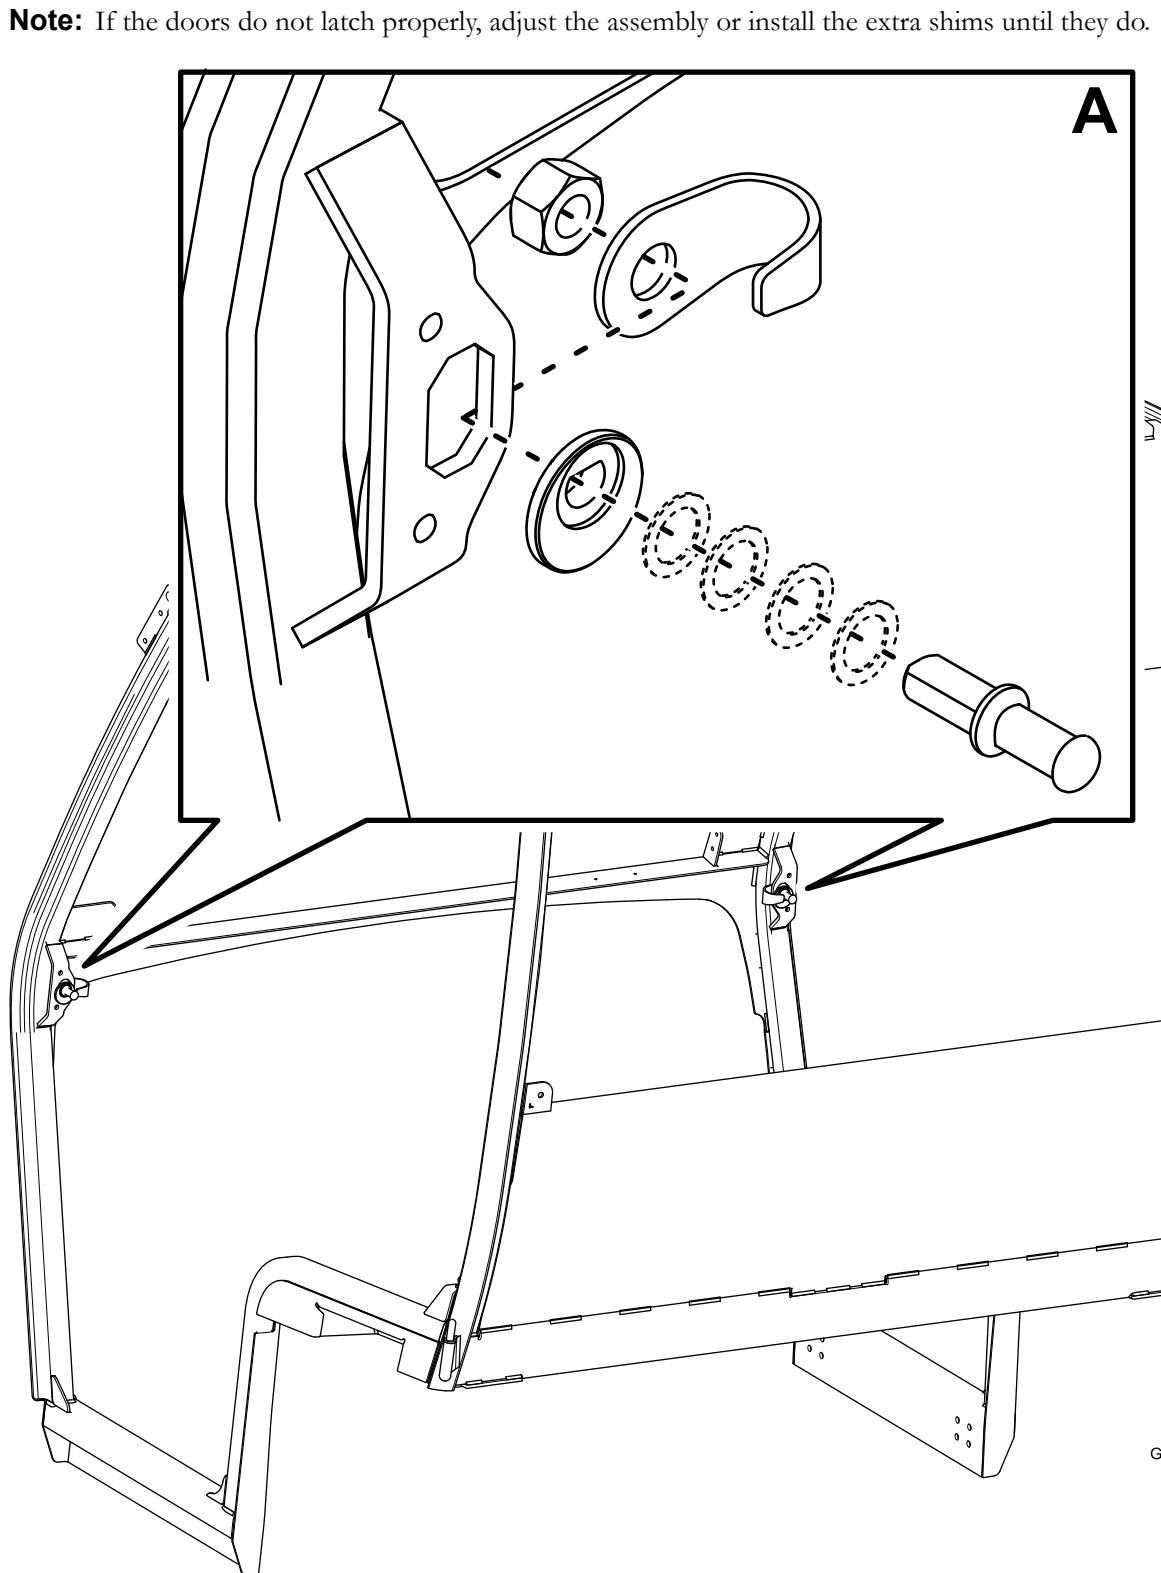


Figure 5

Notes:

Notes:



Count on it.